





KAPA HyperPlus Library Preparation Kit

KR1145 - v2.15

This Technical Data Sheet provides product information and a detailed protocol for the KAPA HyperPlus Library Preparation Kit.

Contents

Product Description
Product Applications2
Product Specifications
Shipping and Storage2
Handling2
Quality Control
Important Parameters
Automated Library Construction
Safe Stopping Points
Input DNA4
Fragmentation Parameters5
Adapter Design and Concentration 5
Post-ligation Cleanup6
Paramagnetic SPRI® Beads and Reaction Cleanups 6
Size Selection6
Library Amplification7
Evaluating the Success of Library Construction 8
Process Workflow
Library Construction Protocol
Appendix 1: Size Selection
Appendix 2: Optimization of Fragmentation Parameters
Restrictions and Liabilities
Note to Purchaser: Limited Product Warranty 18
Note to Purchaser: Limited License
Note to Fulchaser. Littlice License

Kit Codes and Components				
	KAPA Frag Enzyme	100 μL		
	KAPA Frag Buffer (10X)	50 μL		
	KAPA Frag Conditioning Solution	580 μL		
KK8510	End Repair & A-Tailing Buffer	70 μL		
KK8511*	End Repair & A-Tailing Enzyme	30 µL		
8 libraries	Ligation Buffer	300 μL		
	DNA Ligase	100 μL		
	KAPA HiFi HotStart ReadyMix (2X)*	250 µL		
	Library Amplification Primer Mix (10X)*	50 μL		
	KAPA Frag Enzyme	270 µL		
	KAPA Frag Buffer (10X)	140 µL		
	KAPA Frag Conditioning Solution	580 μL		
KK8512	End Repair & A-Tailing Buffer	210 µL		
KK8513*	End Repair & A-Tailing Enzyme	90 µL		
24 libraries	Ligation Buffer	900 μL		
	DNA Ligase	300 μL		
	KAPA HiFi HotStart ReadyMix (2X)*	690 µL		
	Library Amplification Primer Mix (10X)*	138 µL		
	KAPA Frag Enzyme	1.27 mL		
	KAPA Frag Buffer (10X)	640 µL		
	KAPA Frag Conditioning Solution	580 μL		
KK8514	End Repair & A-Tailing Buffer	930 µL		
KK8515*	End Repair & A-Tailing Enzyme	400 μL		
96 libraries	Ligation Buffer	3.8 mL		
	DNA Ligase	1.26 mL		
	KAPA HiFi HotStart ReadyMix (2X)*	3.0 mL		
	Library Amplification Primer Mix (10X)*	600 µL		

*KK8511, KK8513 and KK8515 are available for PCR-free workflows, and do not contain library amplification reagents.

Quick Notes

- This kit provides a versatile, streamlined DNA fragmentation and library construction protocol. Libraries for Illumina[®] sequencing may be prepared from a wide range of DNA samples and inputs (1 ng 1 μg) in 1.5 3 hours.
- The novel one-tube DNA fragmentation and library construction chemistry improves library yield and quality, particuarly for FFPE and low-input libraries.
- The protocol is easy to automate. Generous reagent excesses are supplied in 96-reaction kits to accommodate automated liquid handling.
- Kits contain all the reagents for DNA fragmentation, library construction and high-efficiency, low-bias library amplification, except for adapters and SPRI beads. Kits without an amplification module are available for PCR-free workflows.
- The Process Workflow (p. 11) provides an overview of the DNA fragmentation and library construction process. Appendix 1 provides a protocol for dual-SPRI size selection. Appendix 2 contains guidelines for the optimization of fragmentation parameters.
- If your input DNA contains EDTA, please consult the Important Parameters: Input DNA section, and additional guidelines in Appendix 2.

Product Description

The KAPA HyperPlus Library Preparation Kit provides a versatile, streamlined DNA fragmentation and library construction protocol for the rapid preparation of libraries for Illumina® sequencing. The novel one-tube chemistry and protocol improves the efficiency and consistency of library construction, and yields libraries of similar or better quality than those produced with the KAPA Hyper Prep Kit from Covaris-sheared DNA. It outperforms tagmentation-based workflows in terms of robustness, flexibility and sequence coverage and uniformity.

The workflow combines enzymatic steps and employs minimal SPRI® bead cleanups, thereby reducing sample handling and overall library preparation time to 1.5 – 3 hours. The kit contains all of the enzymes and reaction buffers required for:

- enzymatic fragmentation, which produces dsDNA fragments;
- 2. end repair and A-tailing, which produces end-repaired, 5'-phosphorylated, 3'-dA-tailed dsDNA fragments;
- 3. adapter ligation, during which dsDNA adapters with 3'-dTMP overhangs are ligated to 3'-dA-tailed molecules;
- 4. **library amplification (optional)**, which employs high-fidelity, low-bias PCR to amplify library fragments carrying appropriate adapter sequences on both ends.

The kit provides a single concentrated buffer and a single enzyme mixture for enzymatic fragmentation, as well as for each of the two library construction steps—but does not include adapters or SPRI beads required for cleanups after adapter ligation and library amplification.

In order to maximize sequence coverage uniformity, it is critical to minimize library amplification bias. KAPA HiFi DNA Polymerase is designed for low-bias, highfidelity PCR, and is the reagent of choice for NGS library amplification. 1,2,3,4 KAPA HyperPlus Kits include KAPA HiFi HotStart ReadyMix (2X), a ready-to-use PCR mix comprising all the components for library amplificationexcept primers and template. Kits also include KAPA Library Amplification Primer Mix (10X), designed for the high-efficiency amplification of Illumina libraries flanked by adapters containing the P5 and P7 flow cell sequences. Kits without the amplification module (KK8511, KK8513 and KK8515) are available for PCR-free workflows. They may also be combined with KAPA HiFi Real-Time Library Amplification Kits (KK2701 and KK2702) for more precise control over library amplification.

- 1. Oyola, S.O. et al. BMC Genomics 13, 1 (2012).
- 2. Quail, M.A. et al. Nature Methods 9, 10 (2012).
- 3. Quail, M.A. et al. BMC Genomics 13, 341 (2012).
- 4. Ross, M.G. et al. Genome Biology 14, R51 (2013).

Product Applications

KAPA HyperPlus Library Preparation Kits are ideally suited for low- and high-throughput NGS library construction workflows that require DNA fragmentation, end repair, A-tailing, adapter ligation and library amplification (optional). Kits are designed for library construction from a wide range of sample types and inputs (1 ng – 1 μ g), and are compatible with complex, genomic DNA; low-complexity samples such as small viral genomes, plasmids, cDNA and long amplicons; and low-quality DNA such as FFPE samples.

The entire workflow is automation-friendly and may be incorporated into workflows for a wide range of NGS applications, including:

- Whole-genome shotgun sequencing
- Whole exome or targeted sequencing, using Roche Nimblegen[™] SeqCap EZ, Agilent SureSelect, Illumina TruSeq[™], or IDT xGen[™] Lockdown[™] Probes, or other hybridization capture systems
- RNA-seq (starting with cDNA)

Product Specifications

Shipping and Storage

The enzymes provided in this kit are temperature sensitive, and appropriate care should be taken during shipping and storage. KAPA HyperPlus Library Preparation Kits are shipped on dry ice or ice packs, depending on the destination country. Upon receipt, immediately store enzymes and reaction buffers at -15°C to -25°C in a constant-temperature freezer. When stored under these conditions and handled correctly, the kit components will retain full activity until the expiry date indicated on the kit label.

Handling

Always ensure that KAPA HyperPlus Library Preparation Kit components have been fully thawed and thoroughly mixed before use. The KAPA Hyper Prep End Repair & A-Tailing Buffer and Ligation Buffer may contain precipitates when thawed at 4°C. These buffers must be thawed at room temperature and vortexed thoroughly before use. KAPA HiFi HotStart ReadyMix (2X) contains isostabilizers and may not freeze completely, even when stored at -15°C to -25°C. Nevertheless, always ensure that the ReadyMix is fully thawed and thoroughly mixed before use. Reaction master mixes prepared from the enzymes and buffers for fragmentation, end repair and A-tailing, as well as for ligation, are very viscous and require special attention during pipetting. Keep all enzyme components and master mixes on ice as long as possible during handling and preparation.

Quality Control

All kit components are subjected to stringent functional quality control, are free of detectable contaminating exoand endonuclease activities, and meet strict requirements with respect to DNA contamination. Please contact support@kapabiosystems.com for more information.

Important Parameters

Library construction workflows must be tailored and optimized to accommodate specific experimental designs, sample characteristics, sequencing applications and equipment. The protocol provided in this document is generic, and reaction parameters may be adjusted as required to optimize performance, efficiency and cost-effectiveness.

In addition to the information in this section, please consult the KAPA NGS Library Preparation Technical Guide and/or contact support@kapabiosystems.com for further guidelines when designing or optimizing your library construction workflow.

Automated Library Construction

The KAPA HyperPlus workflow described in this document is designed to be "automation-friendly", and can be performed manually, or in a semi- or fully automated fashion using a suitable automated liquid handling platform. In addition to increased sample throughput, automation may be expected to provide additional advantages such as improved reproducibility and process control. However, automation may result in slightly lower yields and/or different size distributions when compared with manual library construction performed by a skilled, experienced and attentive technician. Most often, these discrepancies can be minimized through careful selection of hardware and plasticware, and optimization of liquid handling parameters.

Kapa Biosystems does not supply automated liquid handling equipment, but collaborates with automation solution providers and customers to develop and qualify optimized automated methods for our kits, for liquid handling platforms routinely used in NGS library construction. Please contact your instrument vendor or support@kapabiosystems.com if you are interested in using the KAPA HyperPlus Library Preparation Kit with your particular automated liquid handling system.

When attempting to develop an automated KAPA HyperPlus method, please keep the following in mind:

- Reaction components for enzymatic reactions should be combined into master mixes, rather than dispensed separately. The enzymatic fragmentation master mix must be made fresh, and actively cooled at 4°C. In contrast, the master mixes for end repair and A-tailing, as well as for adapter ligation, are stable for ≤24 hours at room temperature, and do not have to be actively cooled during automated library construction.
- Master mixes for fragmentation, the end repair and A-tailing reaction, as well as for adapter ligation, are highly viscous, and require careful optimization of pipetting parameters.
- Due to the strong 3'→5' exonuclease activity of KAPA HiFi HotStart DNA Polymerase, PCR master mixes with primers should preferably not be left on-deck for long periods of time, particulary if they are not actively

cooled. Prepare library amplification master mixes freshly before use, or dispense primer mixes separately from the KAPA HiFi HotStart ReadyMix.

- Since an excess (5 20%) of each reagent master mix will be required, generous reagent overages are included in 96-reaction kits. The appropriate excess for other reagents (adapters, AMPure® XP reagent, 80% ethanol and elution buffer) varies from one liquid handling system to another.
- Enzymatic fragmentation reactions must be set up in a plate that is actively cooled to 4°C, and moved to a second, pre-equilibrated Peltier device or on-deck thermocycler for the fragmentation incubation (typically performed at 37°C). After fragmentation, immediately cool the plate to 4°C, add end repair and A-tailing reagents at 4°C, and move the plate to an on- or off-deck cycler for the 65°C incubation without delay.
- Incubations at temperatures above 50°C must be performed in a thermocycler with a heated lid.
- This protocol employs 96-well PCR plates with a maximum working volume of ~200 µL. Plates with larger working volumes or deep-well plates may be used to accommodate larger reaction volumes if needed.
- Always use plastics that are certified to be nucleasefree. Low DNA-binding plastics are recommended.
 When selecting the most appropriate plasticware for your workflow, consider compatibility with:
 - the plate gripper and other components of your liquid handling system,
 - the magnet used during SPRI® bead manipulations,
 - Peltier devices or thermocyclers used for reaction incubations and/or library amplification.
- Design automated methods in a manner that ensures the highest consistency across all 12 columns of 96-well working plates, and eliminates all possible sources of sample-to-sample and environmental contamination. Consider performing pre- and post-PCR steps on dedicated instruments, if available.

Safe Stopping Points

The library construction process, from enzymatic fragmentation to final library, can be performed in 1.5 to 3 hours—depending on experience, the number of samples being processed, and whether or not library amplification is performed. If necessary, the protocol may be paused safely after completion of the Post-ligation Cleanup (step 4.17; the end of the protocol for PCR-free workflows), or prior to the Post-amplification Cleanup (Section 6).

Purified, adapter-ligated library DNA may be stored at 4° C for 1-2 weeks, or at -20° C for at least one month before amplification, target capture and/or sequencing. Library amplification products may be stored in a similar way, but

Safe Stopping Points (continued)

the post-amplification cleanup should be performed as soon as possible. To avoid degradation, always store DNA in a buffered solution (10 mM Tris-HCl, pH 8.0-8.5) when possible, and minimize the number of freeze-thaw cycles.

Input DNA

 This protocol is suitable for fragmentation and library construction from 1 ng – 1 μg of double-stranded DNA. Please refer to Table 1 for recommended inputs of different types of DNA, for different sequencing applications.

Table 1. Recommended inputs into library construction.

Application	Sample type	Recommended input
WGS	Complex gDNA (high quality)	50 ng – 1 μg
Target capture (WES, custom panels)	Complex gDNA (high quality)	10 ng – 1 μg
WGS, target capture	FFPE DNA	≥50 ng (quality dependent)
WGS	Microbial DNA	1 ng – 1 μg
WGS (PCR-free)	High-quality DNA	≥50 ng (no SS)* ≥500 ng (w/SS)*
Targeted sequencing	Long amplicons	≥1 ng
RNA-seq	Full-length/ unfragmented cDNA	≥1 ng

^{*}SS = size selection; results in the loss of 60 - 95% of DNA, irrespective of whether a bead- or gel-based technique is used.

- The proportion of fragmented DNA that is successfully converted to adapter-ligated molecules decreases as input is reduced. When starting library construction with ≥100 ng fragmented DNA, 50 100% of input DNA is typically converted to adapter-ligated molecules, whereas conversion rates range between 10% and 50% for libraries constructed from ≥10 ng 100 ng DNA, and 5 20% for inputs from 1 10 ng. These figures apply to high-quality DNA, and may be lower for DNA of lower quality, e.g., FFPE samples. Workflows with additional SPRI® cleanups or size selection prior to adapter ligation are likely to result in a lower yield of adapter-ligated molecules.
- The enzymatic fragmentation reaction is very sensitive to the presence of EDTA, which must be removed or neutralized prior to fragmentation.
- EDTA present in DNA preparations (which is usually introduced via elution buffers used in the final stages of the DNA extraction or purification process) may be removed by performing a column- or bead-based purification or buffer exchange prior to enzymatic fragmentation. This is the recommended strategy, particularly for high-throughput workflows, as it

- significantly simplifies setup of the fragmentation reaction. For optimal fragmentation results, DNA should be suspended in 10 mM Tris-HCl, pH 8.0 8.5 after pre-fragmentation treatment.
- Alternatively, the inhibitory effect of the EDTA can be mitigated by the inclusion of KAPA Frag Conditioning Solution at the appropriate final concentration in the fragmentation reaction.
- To facilitate reaction setup, the KAPA Frag Conditioning Solution is pre-diluted to the appropriate working concentration as outlined in Table 2, and a fixed volume (5 μL) is included in the fragmentation reaction. Please note that dilution of the KAPA Frag Conditioning Solution is based on the final concentration of EDTA in the fragmentation reaction (once input DNA has been diluted in a volume of 50 μL), and not on the EDTA concentration in the DNA preparation.

Table 2. KAPA Frag Conditioning Solution dilutions for DNA samples containing EDTA.

Final EDTA concentration in 50 µL rxn	Dilution factor	Volume of Conditioning Solution (per 100 µL)	Volume of PCR-grade water (per 100 µL)
0.02 - 0.05 mM	32.0	3.1 µL	96.9 μL
0.1 mM	15.4	6.5 µL	93.5 μL
0.2 mM	7.4	13.5 µL	86.5 μL
0.3 mM	4.8	21.0 µL	79.0 μL
0.4 mM	3.3	30.0 μL	70.0 μL
0.5 mM	2.6	38.8 µL	61.2 μL
0.6 mM	2.2	46.5 µL	53.5 μL
0.7 mM	1.8	56.0 μL	44.0 µL
0.8 mM	1.6	64.0 µL	36.0 μL
0.9 mM	1.4	72.0 µL	28.0 μL
1.0 mM	1.3	80.0 µL	20.0 μL

 Prepare a minimum of 100 µL of diluted KAPA Frag Conditioning Solution (as indicated in Table 2), or calculate the volume needed using the following formula:

(number of reactions x 5 µL) + 10% excess

- The addition of KAPA Frag Conditioning Solution to fragmentation reactions will lead to suboptimal results if your DNA does not contain EDTA, or if the final concentration of the Conditioning Solution is not matched to the final EDTA concentration in the reaction.
- Please refer to Appendix 2: Optimization of Fragmentation Parameters for more guidelines regarding the processing of EDTA-containing DNA samples.

Fragmentation Parameters

- The fragmentation parameters provided in Section 1 of the Library Construction Protocol apply to the fragmentation of high-quality genomic DNA.
- The degree of fragmentation (mode size and size distribution of DNA fragments) is controlled by fragmentation time and temperature, and both factors may be modulated to achieve the desired results.
- DNA quality impacts the fragmentation of FFPE DNA. The guidelines in Section 1 of the Library Construction Protocol are a good starting point for FFPE samples with a Q129/Q41 ratio of ~0.4 or higher (as determined with the KAPA hgDNA Quantification and QC Kit). However, longer fragmentation times may improve results for lower-quality FFPE samples. Longer fragmentation times typically increase the proportion of input DNA converted to fragments in the 150 250 bp range, reduce residual high-molecular weight DNA, and correlate with higher yields during library construction.
- Standard fragmentation parameters may result in over-fragmentation of low-complexity samples, such as small viral genomes, plasmids, long amplicons and cDNA. For these sample types, the fragmentation time may have to be reduced to 5 min or less to achieve the desired mode fragment length. This makes control over the reaction difficult, particularly when a large number of samples are processed manually. To enable more robust and reproducible results, the fragmentation temperature may be decreased (to 30°C or 25°C) to reduce enzymatic activity, thus increasing the time needed to achieve the desired fragment length.
- Please refer to Appendix 2: Optimization of Fragmentation Parameters for guidelines on how to systematically optimize fragmentation parameters for your specific samples.
- Different devices (e.g., a thermocycler vs. heating block, or different Peltier devices integrated into automated liquid handling systems) may not yield identical fragmentation profiles for the same sample and input, and fragmentation times may have to be modified slightly when switching between devices. The relative impact of the device used for the

fragmentation incubation is likely to be less significant as fragmentation time increases.

Adapter Design and Concentration

- The KAPA HyperPlus Library Preparation Kit may be used with non-indexed, single-indexed and dual-indexed adapters that are routinely used in Illumina® TruSeq™, Roche Nimblegen™ SeqCap EZ, Agilent SureSelect and other, similar library construction and target capture workflows. Custom adapters that are of similar design, and are compatible with "TA-ligation" of dsDNA, may also be used.
- Adapters may be sourced from any reputable oligonucleotide vendor. Please contact support@ kapabiosystems.com if you need assistance with ordering adapters.
- Adapter concentration affects ligation efficiency, as well as adapter and adapter-dimer carry-over during the post-ligation cleanup. The optimal adapter concentration for your workflow represents a compromise between the above factors and cost.
- Ligation efficiency is robust for adapter:insert molar ratios ranging from 10:1 to >200:1, making it unnecessary to adjust adapter stock concentrations to accommmodate moderate variations in DNA input or fragment length. Please refer to Table 3 for the recommended adapter concentrations for different DNA inputs.
- High adapter:insert molar ratios (>200:1) are beneficial for low-input applications. When optimizing workflows for DNA inputs ≤25 ng, two or three adapter concentrations should be evaluated: try the recommended adapter concentration (Table 3), as well as one or two additional concentrations in a range that is 2 10 times higher than the recommended concentration.
- Adapter quality has an impact on the effective concentration of adapter available for ligation. Always source the highest quality adapters from a reliable supplier, dilute and store adapters in a buffered solution with the requisite ionic strength, and avoid excessive freezing and thawing of adapter stock solutions.

Table 3. Recommended adapter concentrations for libraries constructed from 1 ng – 1 μg input DNA.*

Input DNA	Adapter stock concentration	Adapter:insert molar ratio	Input DNA	Adapter stock concentration	Adapter:insert molar ratio
1 µg	15 µM	10:1	25 ng	7.5 µM	200:1
500 ng	15 µM	20:1	10 ng	3 μΜ	200:1
250 ng	15 μM	40:1	5 ng	1.5 µM	200:1
100 ng	15 μM	100:1	2.5 ng	750 nM	200:1
50 ng	15 µM	200:1	1 ng	300 nM	200:1

^{*}Adapter:insert molar ratio calculations are based on a mode DNA fragment length of 200 bp, and will be higher for longer DNA fragments, or slightly lower for DNA fragmented to a mode size <200 bp. The lower adapter:insert molar ratios recommended for inputs >100 ng represent a fair compromise between library construction efficiency and cost; higher library yields will be achieved if a higher adapter concentration is used.

Adapter Design and Concentration (continued)

 To accommodate different adapter concentrations within a batch of samples processed together, it is best to vary the concentrations of adapter stock solutions, and dispense a fixed volume (5 µL) of each adapter. The alternative (using a single stock solution, and dispensing variable volumes of adapter into ligation reactions) is not recommended.

Post-ligation Cleanup

- It is important to remove unligated adapter and/or adapter-dimer molecules from the library prior to library amplification or cluster generation.
- The KAPA HyperPlus chemistry reduces adapter-dimer formation, and enables efficient elimination of unused adapter and adapter-dimer with a single post-ligation cleanup. The optimal SPRI® ratio for libraries prepared from fragmented dsDNA with a mode fragment length in the range of 150 350 bp is 0.8X. This ratio may be modified to accommodate libraries prepared from longer DNA fragments, or to shift the mode fragment length of the population of adapter-ligated molecules.
- The volume in which washed beads are resuspended after the post-ligation cleanup should be adjusted to suit your chosen workflow:
 - If proceeding directly to library amplification, determine the appropriate final volume in which to elute the library DNA, keeping in mind that you may wish to divert and/or reserve some of this library material for archiving and/or QC purposes. Since a 50 μL library amplification reaction can accommodate 20 24 μL template DNA, an elution volume of ~25 μL is recommended.
 - If proceeding with size selection (see below), elute the library DNA in a volume appropriate for the size selection method of choice. For the dual-SPRI size selection protocol described in Appendix 1, beads must be resuspended in 55 μL of elution buffer.
- A second post-ligation cleanup (using a 1X or different SPRI ratio) may be performed if post-ligation or post-amplification analysis reveals unacceptable levels of adapter and/or adapter-dimer carry-over after the first cleanup. The sample volume should be adjusted (with elution buffer) to at least 50 µL for a second post-ligation cleanup. The adapter concentration may also be optimized to eliminate carry-over of adapter and/or adapter-dimer (and the eliminate the need for a second post-ligation cleanup). However, keep in mind that library construction is most efficient when high adapter:insert molar ratios are used.

Paramagnetic SPRI® Beads and Reaction Cleanups

 This protocol has been validated using Agencourt® AMPure® XP reagent (Beckman Coulter, part number A63880, A63881 or A63882). Solutions and conditions

- for DNA binding and size selection may differ if other beads are used.
- Observe all the manufacturer's storage and handling recommendations for AMPure XP reagent.
- Beads will settle gradually; always ensure that they are fully resuspended before use.
- Bead incubation times are guidelines only, and may be modified/optimized according to current protocols, previous experience, specific equipment and samples in order to maximize library construction efficiency and throughput.
- The time required for complete capture of magnetic beads varies according to the reaction vessel and magnet used. It is important not to discard or transfer any beads with the removal or transfer of supernatant. Capture times should be optimized accordingly.
- The volumes of 80% ethanol used for bead washes may be adjusted to accommodate smaller reaction vessels and/or limited pipetting capacity, but it is important that the beads are entirely submerged during the wash steps. Always use freshly prepared 80% ethanol.
- It is important to remove all ethanol before proceeding with subsequent reactions. However, over-drying of beads may make them difficult to resuspend, resulting in a dramatic loss of DNA. With optimized aspiration of ethanol, drying of beads for 3 5 min at room temperature should be sufficient. Drying of beads at 37°C is not recommended.
- Where appropriate, DNA should be eluted from beads in elution buffer (10 mM Tris-HCl, pH 8.0 8.5). Elution of DNA in PCR-grade water is not recommended, as DNA is unstable in unbuffered solutions. However, libraries constructed for target capture must be eluted and stored in PCR-grade water to facilitate drying of DNA prior to probe hybridization. Purified DNA in elution buffer should be stable at 4°C for 1 2 weeks, or for at least 1 month at -20°C. The long-term stability of library DNA at -20°C depends on a number of factors, including library concentration. Always use low DNA-binding tubes for long-term storage, and avoid excessive freezing and thawing.

Size Selection

- Size selection requirements vary widely for different sequencing applications. If required, any commonly used bead- or gel-based size selection technique may be integrated in the KAPA HyperPlus workflow.
- Size selection may be carried out at different points in the overall workflow, for example after the post-ligation cleanup, or after library amplification.
- The standard KAPA HyperPlus protocol (pp. 12 14) does not include size selection. Please refer to Appendix 1: Size Selection for a detailed dual-SPRI size selection protocol.

Size Selection (continued)

- Size selection inevitably leads to a loss of sample material. These losses can be dramatic (60 95%), and may significantly increase the number of amplification cycles required to generate sufficient material for the next step in the process (capture or sequencing). The potential advantages of one or more size selection steps in a library construction workflow should be weighed against the potential loss of library complexity, especially when input DNA is limited. A well-optimized fragmentation protocol, especially for shorter insert libraries and/or read lengths, may eliminate the need for size selection, thereby simplifying the library construction process and limiting sample losses.
- KAPA Hyper Prep Ligation Buffer contains high concentrations of PEG 6000, which will interfere with efficient dual-SPRI size selection and can affect the efficiency of other size selection techniques if not removed. If size selection is performed after ligation, it is important to perform at least one SPRI® bead cleanup prior to performing bead- or electrophoresisbased size selection.
- Over-amplification typically results in the observation of secondary, higher molecular weight peaks in electrophoretic profiles of amplified libraries. These higher molecular weight peaks are artifacts of the analysis, and typically contain authentic library molecules of the appropriate length. To eliminate these artifacts, optimization of library amplification reaction parameters (cycle number and primer concentration), rather than post-amplification size selection, is recommended. Please refer to Important Parameters: Library Amplification for more information.

Library Amplification

- KAPA HiFi HotStart, the enzyme provided in the KAPA HiFi HotStart ReadyMix, is an antibody-based hot start formulation of KAPA HiFi DNA Polymerase—a novel B-family DNA polymerase engineered for extremely high processivity and fidelity. KAPA HiFi HotStart has 5'→3' polymerase and 3'→5' exonuclease (proofreading) activity, but no 5'→3' exonuclease activity. The strong 3'→5' exonuclease activity results in superior accuracy during DNA amplification. The error rate of KAPA HiFi HotStart is 2.8 x 10⁻⁷ errors/base, equivalent to 1 error in 3.5 x 10⁶ nucleotides incorporated.
- KAPA Library Amplification Primer Mix (10X) is designed to eliminate or delay primer depletion during library amplification reactions performed with KAPA HiFi HotStart ReadyMix. The Primer Mix is suitable for the amplification of all Illumina[®] libraries flanked by the P5 and P7 flow cell sequences. Primers are supplied at a 10X concentration of 20 μM each, and have been formulated as described below. User-supplied primer mixes may be used in combination with incomplete or custom adapters. Please contact support@kapabiosystems.com for guidelines on the formulation

of user-supplied library amplification primers.

- To achieve optimal amplification efficiency and avoid primer depletion, it is critical to use an optimal concentration of high quality primers. Primers should be used at a final concentration of 0.5 4 µM each. For libraries constructed from ≥100 ng input DNA, a final concentration of at least 2 µM of each primer is recommended.
- Library amplification primers should be HPLC-purified and modified to include a phosphorothioate bond at the 3'-terminal of each primer (to prevent degradation by the strong proofreading activity of KAPA HiFi HotStart). Always store and dilute primers in a buffered solution (e.g., 10 mM Tris-HCl, pH 8.0 – 8.5), and limit the number of freeze-thaw cycles. To achieve the latter, store primers at 4°C for short-term use, or as singleuse aliquots at -20°C.
- In library amplification reactions (set up according to the recommended protocol), primers are typically depleted before dNTPs. When DNA synthesis can no longer take place due to substrate depletion, subsequent rounds of DNA denaturation and annealing result in the separation of complementary DNA strands, followed by imperfect annealing to non-complementary partners. This presumably results in the formation of so-called "daisy-chains" or "tangled knots", comprising large assemblies of improperly annealed, partially doublestranded, heteroduplex DNA. These species migrate slower and are observed as secondary, higher molecular weight peaks during the electrophoretic analysis of amplified libraries. However, they typically comprise library molecules of the desired length, which are individualized during denaturation prior to cluster amplification or probe hybridization. Since these heteroduplexes contain significant portions of single-stranded DNA, over-amplification leads to the under-quantification of library molecules with assays employing dsDNA-binding dyes. qPCR-based library quantifications methods, such as the KAPA Library . Quantification assay, quantify DNA by denaturation and amplification, thereby providing an accurate measure of the amount of adapter-ligated molecules in a library, even if the library was over-amplified.

Please refer to the KAPA NGS Library Preparation Technical Guide for a more detailed discussion of factors that can affect the efficiency of library amplification, and the impact of over-amplification on library quantification.

 Excessive library amplification can result in other unwanted artifacts such as amplification bias, PCR duplicates, chimeric library inserts and nucleotide substitutions. The extent of library amplification should therefore be limited as much as possible, while ensuring that sufficient material is generated for QC and downstream processing (e.g., target capture or sequencing).

Library Amplification (continued)

If cycled to completion (not recommended), one 50 μL library amplification PCR, performed as described in Section 5 of the Library Construction Protocol, can produce 8 – 10 μg of amplified library. To minimize overamplification and its associated, undesired artifacts, the number of amplification cycles should be tailored to produce the optimal amount of final library required for downstream processes. This is typically in the range of 250 ng – 1.5 μg. Table 4 provides recommended cycle numbers for libraries prepared from high-quality input DNA, to obtain approximately 100 ng or 1 μg of amplified library.

Table 4. Recommended cycle numbers to generate 100 ng or 1 μ g of amplified DNA from 1 ng – 1 μ g of input DNA.

Input into library	Number of cycles required to generate		
construction	100 ng library	1 μg library	
1 μg	0*	0 – 1*	
500 ng	0*	2 – 3	
250 ng	0 – 1*	3 – 5	
100 ng	0 – 2*	5 – 6	
50 ng	3 – 5	7 – 8	
25 ng	5 – 6	8 – 10	
10 ng	7 – 9	11 – 13	
5 ng	9 – 11	13 – 14	
2.5 ng	11 – 13	14 – 16	
1 ng	13 – 15	17 – 19	

*When using incomplete adapters, a minimum number of amplification cycles (1 – 3) may be required to complete adapter sequences for the next step in the process (target capture or sequencing), irrespective of whether a sufficent amount of library is available after ligation. The number of cycles needed depends on the specific adapter and amplification primer design.

- The quantification of adapter-ligated libraries (prior to library amplification) can greatly facilitate the optimization of library amplification parameters, particularly when a library construction workflow is first established. With the KAPA Library Quantification Kit, the amount of template DNA (adapter-ligated molecules) available for library amplification can be determined accurately. From there, the number of amplification cycles needed to achieve a specific yield of amplified library can be predicted theoretically. Please refer to Table 5 for the number of cycles recommended to obtain approximately 1 µg of DNA from 0.5 – 500 ng of adapter-ligated DNA, or contact support@kapabiosystems.com regarding a calculator designed to assist with these calculations. Please note that the actual optimal number of amplification cycles may be 1 – 3 cycles higher or lower, depending on the sample type and size distribution of the input DNA.
- Depending on the amount of library material required for your application, it may be possible to omit library amplification. In such cases, it is important to ensure that your adapters are designed to support sample indexing (where required), cluster amplification and

Table 5. Theoretical number of cycles required to obtain approximately 1 μ g of amplified library DNA from 0.5 – 500 ng of adapter-ligated library DNA.*

Amount of adapter-ligated DNA in amplification rxn	Number of cycles required to generate 1 µg of library DNA
500 ng	1 – 2
100 ng	3 – 4
50 ng	5 – 6
10 ng	7 – 8
5 ng	8 – 9
1 ng	11 – 12
500 pg	12 – 13

^{*}Guidelines are based on amplification with KAPA HiFi HotStart ReadyMix and the KAPA Library Amplification Primer Mix, and library quantification with the qPCR-based KAPA Library Quantification Kit.

sequencing. Omitting library amplification further streamlines the workflow and reduces overall library preparation time to ≤1.5 hours. The high conversion efficiency achievable with the KAPA HyperPlus Library Preparation Kit enables PCR-free workflows from as little as 50 ng of input DNA. KAPA HyperPlus Library Preparation Kits without amplification reagents (KK8511, KK8513 and KK8515) are available for PCR-free workflows.

Evaluating the Success of Library Construction

- Your specific library construction workflow should be tailored and optimized to yield a sufficient amount of adapter-ligated molecules of the desired size distribution for the next step in the process (e.g., target capture or sequencing), as well as for library QC and archiving purposes.
- While it is possible to remove aliquots of the fragmentation reaction product for analysis in the integrated fragmentation/library construction workflow, it is most productive to assess the outcome of fragmentation once the entire KAPA HyperPlus workflow has been completed—for the following reasons:
 - It is difficult and disruptive to process low-volume aliquots in a way that is fully representative of the final library.
 - Fragmentation profiles for low-input samples (1 – 10 ng into fragmentation) may not be informative, even when high-sensitivity assays are used.
 - The final size distribution of libraries prepared from FFPE samples is typically smaller than expected based on the size distribution after fragmentation and adapter length. This is a common phenomenon, attributable to the inability of high-fidelity DNA polymerases used in library amplification to efficiently amplify damaged DNA, particularly templates that contain deaminated or oxidized bases.

Evaluating the Success of Library Construction (continued)

Please refer to Appendix 2: Optimization of Fragmentation Parameters for guidelines on how to systematically optimize fragmentation parameters for your specific samples.

- The size distribution of pre-capture or final libraries should be confirmed with an electrophoretic method. A LabChip® GX, GXII or GX Touch (PerkinElmer), Bioanalyzer or Tapestation (Agilent Technologies), Fragment Analyzer™ (Advanced Analytical) or similar instrument is recommended over conventional gels. Typical electrophoretic profiles for libraries prepared with the KAPA HyperPlus Library Preparation Kit are given in Figure 1 on the next page.
- Please note that libraries prepared with "forked" adapters in PCR-free workflows will appear to have a longer than expected mode fragment length, and/ or may display a broad or bimodal size distribution when analyzed electrophoretically (see Figure 1). The difference in overall appearance and fragment size distribution of an unamplified vs. the corresponding amplified library varies, and depends on the adapter design and electrophoretic system used. To accurately determine the size distribution of an unamplified library, an aliquot of the library may be subjected to a few cycles of amplification prior to electrophoretic analysis, to ensure that all adapter-ligated molecules are fully double-stranded. Alternatively, size information may be obtained by electrophoretic analysis of library quantification products generated with the KAPA Library Quantification Kit (see below).
- KAPA Library Quantification Kits for Illumina® platforms are recommended for qPCR-based quantification of libraries generated using the KAPA HyperPlus workflow. These kits employ primers based on the Illumina flow cell oligos, and can be used to quantify libraries that:
 - are ready for flow-cell amplification, and/or
 - were constructed with full-length adapters, once ligation has been completed, i.e., after the postligation cleanup, after the (pre-capture) amplification cleanup, or before/after post-ligation or postamplification size selection).

The KAPA Library Quantification Kit provides the only reliable means for quantifying libraries at different stages of the workflow, and libraries produced in PCR-free workflows, as:

- it only quantifies those molecules with two adapters in the correct configuation for cluster amplification and sequencing, and
- measurements are not affected by library overamplification (see Important Parameters: Library Amplification).
- Once a library construction workflow has been optimized, and consistently yields the desired amount of amplified library of the requisite size distribution, it is typically not necessary to perform in-process quality control. However, qPCR-based quantification of libraries after the post-ligation cleanup (prior to library amplification) can provide useful data for optimization or troubleshooting. Quantification at this stage allows you to assess the efficiency of:
 - the core library construction process (fragmentation to ligation), by determining the percentage of input DNA converted to adapter-ligated molecules.
 - library amplification with the selected number of cycles, based on the actual amount of template DNA used in the PCR.

The availability of quantification data before and after library amplification allows the two major phases of the library construction process to be evaluated and optimized independently to achieve the desired yield of amplified library.

- If size selection is performed at any stage, qPCR quantification before and after size selection may also be helpful to define the relative benefit of size selection, and to determine the loss of material associated with the process.
- Electrophoretic evaluation of libraries after the postligation cleanup/before library amplification may be informative, but remember that the apparent mode fragment length and size distribution will be inaccurate due to the retardation of non-complementary adapter regions, as outlined above and illustrated in Figure 1.

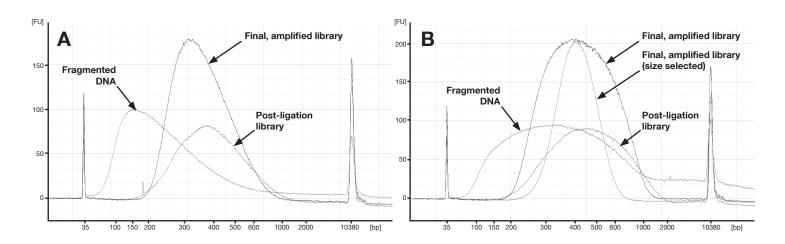


Figure 1. Examples of libraries prepared with the KAPA HyperPlus Library Preparation Kit. Input DNA (100 ng high-quality human genomic DNA) was fragmented at 37°C for 30 min (A) or 10 min (B), to achieve a mode fragment length of ~150 bp or ~350 bp, respectively. Libraries were prepared as described in the Library Construction Protocol (pp. 12 – 14), using the recommended adapter:insert molar ratio. Larger-insert libraries (B) were prepared in duplicate. One library was subjected to dual-SPRI® size selection after the post-ligation cleanup, as described in Appendix 1: Size Selection, whereas the other was not. Electropherograms were generated with a Bioanalyzer 2100 High Sensitivity DNA Kit. DNA concentrations were normalized prior to analysis and are not reflective of the actual DNA concentrations at different stages of the process. Electrophoretic profiles for fragmented DNA were generated in a "standalone" workflow, whereby the protocol was terminated after fragmentation, and reaction products purified using a 2X SPRI cleanup.

After ligation, the non-complementary ends of full-length, "forked" adapters retard the migration of library fragments in gel matrices, leading to a larger than expected size distribution. The difference between the actual and apparent mode fragment length of unamplified, adapter-ligated libraries depends on the adapter design and electrophoretic system used, and can be much more pronounced than observed here. Size selection results in a much narrower final library size distribution, but at the cost of a significant amount of library material.

Process Workflow

See Table 1 on p. 4 for recommended inputs of different types of DNA for different sequencing applications.

For samples containing EDTA: include the appropriate concentration of KAPA Frag Conditioning Solution (see Table 2 on p. 4)


Recommended QC Metrics

See **Table 3** on p. 5 for recommended adapter stock concentrations.

Size selection, employing SPRI® beads or an electrophoretic method, may be incorporated at this point, if appropriate.

PCR-free workflows end here.

Size selection, employing SPRI beads or an electrophoretic method, may be incorporated at this point, if appropriate.

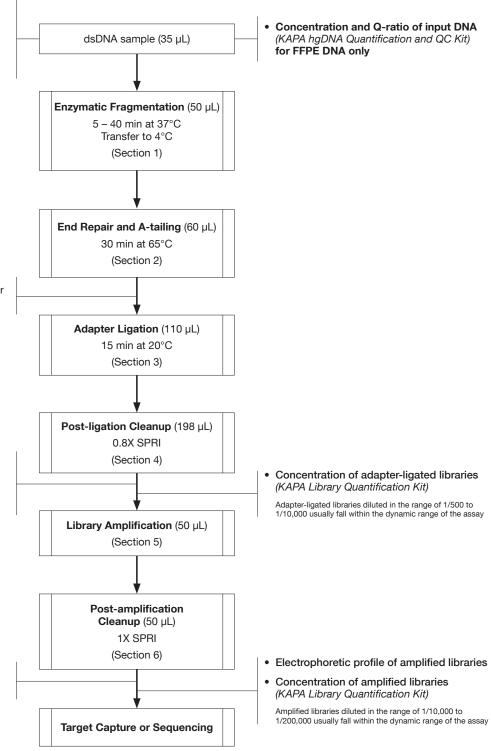

Library Construction Protocol

Notes:

- First time users, please refer to Appendix 2: Optimization of Fragmentation Parameters before trying this kit for the first time, as standard fragmentation parameters may not result in the optimal size distribution for libraries prepared from your specific DNA samples. Precious samples should not be used when evaluating this kit. Instead, parameters should be optimized with a non-precious, bulk DNA sample that is representative of the actual samples to be processed.
- If your DNA samples contain EDTA, please consult the Handling of DNA Samples Containing EDTA section of Appendix 2, as well as Important Parameters: Input DNA on p. 4 before starting this protocol.
- This protocol does not include size selection. Please refer to Appendix 1: Size Selection for a detailed dual-SPRI® size selection protocol that may be included after ligation or after amplification.

1. Enzymatic Fragmentation

- 1.1 Dilute the amount of dsDNA to be used for library construction as follows:
 - In 10 mM Tris-HCI (pH 8.0 8.5), in a total of 35 μL if the DNA preparation does not contain
 - In the EDTA-containing buffer in which samples are currently suspended, in a total of 30 µL if the DNA preparation does contain EDTA.
- 1.2 If the DNA samples contain EDTA: prepare a sufficient volume of appropriately diluted KAPA Frag Conditioning Solution (5 µL per DNA sample plus excess). Refer to Table 2 (p. 4) for guidelines on the dilution of the KAPA Frag Conditioning Solution.
 - To each reaction tube/well of a PCR plate with 30 μ L of EDTA-containing DNA, add 5 μ L of diluted KAPA Frag Conditioning Solution Mix by gentle vortexing or pipetting up and down.
- 1.3 Assemble each fragmentation reaction **on ice** by adding the rest of the components in the order shown below:

Component	Volume
Double-stranded DNA (with KAPA Frag Conditioning Solution, if needed)	35 µL
KAPA Frag Buffer (10X)*	5 μL
KAPA Frag Enzyme*	10 μL
Total volume	50 μL

^{*}The KAPA Frag Buffer and Enzyme may be pre-mixed and kept on ice prior to reaction setup, and dispensed as a single solution.

1.4 Vortex gently and spin down briefly. Return the plate/tube(s) to ice. Proceed immediately to the next step.

1.5 Incubate in a thermocycler, pre-cooled to 4°C and programmed as outlined below. A heated lid is not required for this step. If used, set the temperature of the heated lid to ≤50°C.

Step	Temp	Time
Pre-cool block	4°C	N/A
Fragmentation	37°C	See table below
HOLD	4°C	∞

Mode fragment length	Incubation time at 37°C*	Optimization range
600 bp	5 min	3 – 10 min
350 bp	10 min	5 – 20 min
200 bp	20 min	10 – 25 min
150 bp	30 min	20 – 40 min

^{*}These parameters are a good starting point for high-quality genomic DNA. Please refer to Appendix 2: Optimization of Fragmentation Parameters for guidelines on how to optimize fragmentation time and temperature, if needed.

1.6 Transfer reactions to ice, and proceed immediately to Section 2.

2. End Repair and A-tailing

2.1 In the same tube(s)/plate in which enzymatic fragmentation was performed, assemble each end repair and A-tailing reaction as follows:

Component	Volume
Fragmented, double-stranded DNA	50 μL
End Repair & A-Tailing Buffer*	7 μL
End Repair & A-Tailing Enzyme Mix*	3 µL
Total volume	60 µL

^{*}The buffer and enzyme mix should preferably be pre-mixed and added in a single pipetting step. Premixes are stable for \leq 24 hours at room temperature, for \leq 3 days at 4 °C, and for \leq 4 weeks at -20 °C.

- 2.2 Vortex gently and spin down briefly. Return the reaction tube(s)/plate to ice. Proceed immediately to the next step.
- 2.3 Incubate in a thermocycler programmed as outlined below. A heated lid is required for this step. If possible, set the temperature of the heated lid to ~85°C (instead of the usual 105°C).

Step	Temp	Time
End repair and A-tailing	65°C*	30 min
HOLD	4°C**	∞

^{*}Both the fragmentation and end repair enzymes are inactivated at 65°C. When reactions are set up according to recommendations, additional fragmentation should be negligible. The brief period of end repair is sufficient for enzymatically fragmented DNA.

2.4 Proceed immediately to the next step.

^{**}If proceeding to the adapter ligation reaction setup without any delay, the reaction may be cooled to 20°C instead of 4°C.

3. Adapter Ligation

- 3.1 Dilute adapter stocks to the appropriate concentration, as outlined in **Table 3** on p. 5.
- 3.2 In the same plate/tube(s) in which end repair and A-tailing was performed, assemble each adapter ligation reaction as follows:

Component	Volume
End repair and A-tailing reaction product	60 µL
Adapter stock (diluted as per Table 3 on p. 5)	5 µL
PCR-grade water*	5 μL
Ligation Buffer*	30 μL
DNA Ligase*	10 μL
Total volume	110 µL

^{*}The water, buffer and ligase enzyme should preferably be premixed and added in a single pipetting step. Premixes are stable for ≤24 hours at room temperature, for ≤3 days at 4°C, and for ≤4 weeks at -20°C.

- 3.3 Mix thoroughly and centrifuge briefly.
- 3.4 Incubate at 20°C for 15 min.

Note: to achieve higher conversion rates and library yields, particularly for low-input samples, consider increasing the ligation time, to a maximum of 4 h at 20°C, or overnight at 4°C. Please note that longer ligation times may lead to increased levels of adapter-dimer. Adapter concentrations may have to be optimized if ligation times are extended significantly.

3.5 Proceed immediately to the next step.

4. Post-ligation Cleanup

4.1 In the same plate/tube(s), perform a 0.8X SPRI® cleanup by combining the following:

Component	Volume
Adapter ligation reaction product	110 µL
Agencourt® AMPure® XP reagent	88 µL
Total volume	198 µL

- 4.2 Mix thoroughly by vortexing and/or pipetting up and down multiple times.
- 4.3 Incubate the plate/tube(s) at room temperature for5 15 min to bind DNA to the beads.
- 4.4 Place the plate/tube(s) on a magnet to capture the beads. Incubate until the liquid is clear.
- 4.5 Carefully remove and discard the supernatant.
- 4.6 Keeping the plate/tube(s) on the magnet, add 200 μL of 80% ethanol.
- 4.7 Incubate the plate/tube(s) on the magnet at room temperature for ≥30 sec.

- 4.8 Carefully remove and discard the ethanol.
- 4.9 Keeping the plate/tube(s) on the magnet, add 200 µL of 80% ethanol.
- 4.10 Incubate the plate/tube(s) on the magnet at room temperature for ≥30 sec.
- 4.11 Carefully remove and discard the ethanol. Try to remove all residual ethanol without disturbing the beads.
- 4.12 Dry the beads at room temperature for 3 5 min, or until all of the ethanol has evaporated. Caution: over-drying the beads may result in dramatic yield loss.
- 4.13 Remove the plate/tube(s) from the magnet.
- 4.14 Resuspend the beads:
 - in 25 μL of elution buffer (10 mM Tris-HCl, pH 8.0 – 8.5) to proceed with library amplification (Section 5), or
 - in 55 μL of elution buffer (10 mM Tris-HCl, pH 8.0 – 8.5) to proceed with dual-SPRI size selection (Appendix 1).
- 4.15 Incubate the plate/tube(s) at room temperature for 2 min to elute DNA off the beads.
- 4.16 Place the plate/tube(s) on a magnet to capture the beads. Incubate until the liquid is clear.
- 4.17 Transfer the clear supernatant to a new plate/ tube(s) and proceed with library amplification or size selection, as appropriate. Store purified, adapter-ligated libraries at 4°C for 1 2 weeks, or at -20°C.

5. Library Amplification

Note: Please refer to Important Parameters: Library Amplification and Section 7 of the KAPA NGS Library Preparation Technical Guide for more information on optimizing library amplification.

5.1 Assemble each library amplification reaction as follows:

Component	Volume
2X KAPA HiFi HotStart ReadyMix	25 μL
10X KAPA Library Amplification Primer Mix*	5 µL
Adapter-ligated library	20 μL
Total volume	50 μL

 * Or other, suitable 10X library amplification primer mix. The recommended final concentration of each primer in the library amplification reaction is 0.5 – 4 μ M. Also refer to Important Parameters: Library Amplification.

- 5.2 Mix thoroughly and centrifuge briefly.
- 5.3 Amplify using the cycling protocol outlined on the next page:

5. Library Amplification (continued)

Step	Temp	Duration	Cycles
Initial denaturation	98°C	45 sec	1
Denaturation	98°C	15 sec	Minimum number
Annealing*	60°C	30 sec	required for optimal
Extension	72°C	30 sec	amplification (Table 4 or 5)
Final extension	72°C	1 min	1
HOLD	4°C	∞	1

^{*}Optimization of the annealing temperature may be required for non-standard (i.e., other than Illumina® TruSeq™) adapter/primer combinations.

5.4 Store the plate/tube(s) at 4°C or -20°C for up to 72 hours, or proceed directly to Step 6: Postamplification Cleanup.

6. Post-amplification Cleanup

6.1 In the library amplification plate/tube(s), perform a 1X SPRI® cleanup by combining the following:

Component	Volume
Library amplification reaction product	50 μL
Agencourt® AMPure® XP reagent	50 μL
Total volume	100 μL

- 6.2 Mix thoroughly by vortexing and/or pipetting up and down multiple times.
- 6.3 Incubate the plate/tube(s) at room temperature for 5 15 min to bind DNA to the beads.
- 6.4 Place the plate/tube(s) on a magnet to capture the beads. Incubate until the liquid is clear.
- 6.5 Carefully remove and discard the supernatant.

- 6.6 Keeping the plate/tube(s) on the magnet, add 200 μ L of 80% ethanol.
- 6.7 Incubate the plate/tube(s) on the magnet at room temperature for ≥30 sec.
- 6.8 Carefully remove and discard the ethanol.
- 6.9 Keeping the plate/tube(s) on the magnet, add 200 μ L of 80% ethanol.
- 6.10 Incubate the plate/tube(s) on the magnet at room temperature for ≥30 sec.
- 6.11 Carefully remove and discard the ethanol. Try to remove all residual ethanol without disturbing the beads.
- 6.12 Dry the beads at room temperature for 3 5 min, or until all of the ethanol has evaporated. Caution: over-drying the beads may result in dramatic yield loss.
- 6.13 Remove the plate/tube(s) from the magnet.
- 6.14 Thoroughly resuspend the beads in an appropriate volume of elution buffer (10 mM Tris-HCl, pH 8.0 8.5) or PCR-grade water. *Always use PCR-grade water if proceeding to target capture*.
 - Note: If proceeding with a second post-ligation cleanup, or dual-SPRI size selection (Appendix 1), resuspend the beads in 55 μ L of elution buffer.
- 6.15 Incubate the plate/tube(s) at room temperature for 2 min to elute DNA off the beads.
- 6.16 Place the plate/tube(s) on a magnet to capture the beads. Incubate until the liquid is clear.
- 6.17 Transfer the clear supernatant to a new plate/ tube(s) and proceed with size selection (refer to Appendix 1), library QC, target capture or sequencing, as appropriate. Store purified, amplified libraries at 4°C for 1 2 weeks, or at -20°C.

Appendix 1:

Size Selection

Any commonly used size selection technique (e.g., the "double-sided SPRI®" described here, or an electrophoretic method) may be integrated into the KAPA HyperPlus library construction workflow. Size selection should preferably be carried out after the post-ligation cleanup, or after library amplification. Whether or not size selection is performed, which technique is used, and at what stage of the library construction process it is performed, depends on the nature of the sample, input into library construction, and the sequencing application and read length. For more information on size selection, refer to Important Parameters: Size Selection.

The dual-SPRI size selection protocols outlined in this **Appendix** are designed for the selection of library molecules (inclusive of adapter) in the range of 250 – 450 bp. To obtain a population of shorter or longer molecules, the protocol may be modified as follows:

Upper size limit	Modification	Lower size limit	Modification
Increase	Decrease the ratio of the first cut	Increase	Decrease the ratio of the second cut*
Decrease	Increase the ratio of the first cut	Decrease	Increase the ratio of the second cut*

^{*}The second size cut should be performed with at least 0.2 volumes of Agencourt® AMPure® XP reagent. Please note that the volume of AMPure XP reagent needed for the second cut is calculated relative to the volume of the DNA at the start of the size selection procedure, not the volume of the DNA-containing supernatant transferred after the first cut. DNA recovery is dramatically reduced if the difference between first and second cuts is less than ~0.2 volumes. To increase the amount of DNA recovered, >0.2 volumes of AMPure XP reagent may be used for the second cut, but note that this may result in the recovery of smaller library fragments and/or a broader size distribution. For more information on dual-SPRI size selection, please refer to the KAPA NGS Library Preparation Technical Guide, or contact support@kapabiosystems.com.

A1.1 Perform the first (0.6X) size cut (to exclude library molecules larger than ~450 bp) by combining the following:

Component	Volume
DNA to be size selected	50 μL
Agencourt AMPure XP reagent	30 μL
Total volume per well/tube	80 μL

- A1.2 Mix thoroughly by vortexing and/or pipetting up and down multiple times.
- A1.3 Incubate the plate/tube(s) at room temperature for 5 15 min to bind library molecules larger than ~450 bp to the beads.
- A1.4 Place the plate/tube(s) on a magnet to capture the beads. Incubate until the liquid is clear.
- A1.5 Carefully transfer ~75 μL of supernatant containing library molecules smaller than ~450 bp to a new plate/tube(s). It is critical that no beads are transferred with the supernatant. Discard the plate/tube(s) with the beads to which library molecules larger than ~450 bp were bound.
- A1.6 Perform the second size cut (0.8X, to retain library molecules >250 bp) by combining the following:

Component	Volume
Supernatant from first size cut	75 μL
Agencourt AMPure XP reagent	10 μL
Total volume per well/tube	85 µL

- A1.7 Mix thoroughly by vortexing and/or pipetting up and down multiple times.
- A1.8 Incubate the plate/tube(s) at room temperature for 5 15 min to bind library molecules larger than ~250 bp to the beads.

- A1.9 Place the plate/tube(s) on a magnet to capture the beads. Incubate until the liquid is clear.
- A1.10 Carefully remove and discard the supernatant, which contains library molecules smaller than ~250 bp.
- A1.11 Keeping the plate/tube(s) on the magnet, add 200 μL of 80% ethanol.
- A1.12 Incubate the plate/tube(s) on the magnet at room temperature for ≥30 sec.
- A1.13 Carefully remove and discard the ethanol.
- A1.14 Keeping the plate/tube(s) on the magnet, add 200 µL of 80% ethanol.
- A1.15 Incubate the plate/tube(s) on the magnet at room temperature for ≥30 sec.
- A1.16 Carefully remove and discard the ethanol. Try to remove all residual ethanol without disturbing the beads. Dry the beads for 3 5 min at room temperature, or until all of the ethanol has evaporated. Caution: over-drying the beads may result in dramatic yield loss.
- A1.17 Remove the plate/tube(s) from the magnet.
- A1.18 Thoroughly resuspend the beads in the required volume of elution buffer (10 mM Tris-HCl, pH 8.0 8.5).
- A1.19 Incubate the plate/tube(s) at room temperature for 2 min to elute DNA off the beads.
- A1.20 Place the plate/tube(s) on a magnet to capture the beads. Incubate until the liquid is clear.
- A1.21 Transfer the clear supernatant with size-selected DNA to a new plate/tube(s) and store DNA at 4°C for 1 2 weeks, or at -20°C.

Appendix 2:

Optimization of Fragmentation Parameters

Fragmentation guidelines provided in Section 1 of the Library Construction Protocol may not result in the optimal library size distribution for your specific DNA samples. For this reason, precious samples should not be used when evaluating the KAPA HyperPlus Library Preparation Kit for the first time. Instead, fragmentation parameters should be optimized in the context of the KAPA HyperPlus workflow, using a non-precious, bulk DNA sample that is representative of the actual samples to be processed.

The information in this **Appendix** should be considered during the experimental design for your evaluation of the KAPA HyperPlus Library Preparation Kit.

Quantification of Input DNA

Although the KAPA Frag enzymatic fragmentation system is less sensitive to DNA input than tagmentation-based library construction methods, it is recommended that input DNA be quantified. PicoGreen®/Qubit® is recommended for the quantification of high-quality DNA, whereas the KAPA Human gDNA Quantification and QC Kit provides both concentration and quality information for FFPE DNA.

Handling of DNA Samples Containing EDTA

EDTA in DNA preparations is usually introduced via elution buffers used in the final stages of the DNA extraction or purification process. The concentration of EDTA is typically known (e.g., 1 mM for standard TE buffer and 0.1 mM for "low-EDTA" TE buffer). If this is the case, and your samples are of similar concentration (i.e., a constant volume of DNA is used for library construction), simply refer to Table 2 on p. 4 for the appropriate dilution of KAPA Frag Conditioning Solution, and follow the Library Construction Protocol from step 1.1.

If you know the composition of the EDTA-containing buffer used for DNA purification, but your samples span a wide concentration range (i.e., variable volumes will be used to achieve the desired input into library construction), samples should be normalized in the same EDTA-containing buffer used for DNA purification.

For example:

- If your DNA samples are in TE Buffer, and your input into library construction is 100 ng, dilute 100 ng of each sample into a final volume of 30 μL (i.e., to 3.33 ng/μL) using TE Buffer.
- All samples will now contain the same final EDTA concentration once diluted to 50 μL for fragmentation. This concentration is:

EDTA concentration in TE Buffer x (30 μ L/50 μ L) = 1 mM x (30 μ L/50 μ L) = 0.6 mM

 Make a 2.2-fold dilution of the KAPA Frag Conditioning Solution (as per Table 2 on p. 4), and follow the Library Construction Protocol from the second half of step 1.2. If you are unsure about the presence or concentration of EDTA in your DNA samples, remove the EDTA by performing a column- or bead-based purification or buffer exchange prior to enzymatic fragmentation, or follow the procedure outlined below:

- Set up a series of test reactions with the appropriate amount of input DNA, and different final concentrations of KAPA Frag Conditioning Solution.
- Include at least one reaction with the same input of control DNA known to be EDTA-free. The control DNA should preferably be of the same type and quality as the test samples.
- Fragment the DNA using the appropriate parameters, as outlined in Section 1 of the Library Construction Protocol. Complete the library construction process, and compare library size distributions for the test and control samples using an electrophoretic system (see Important Parameters: Evaluating the Success of Library Construction).
- Titrate the final concentration of KAPA Frag Conditioning Solution in the reaction until the test samples yield similar fragmentation profiles as the EDTA-free control sample, or until the desired library size distribution has been achieved.
- A two-step strategy may be the best. Start with 3 – 4 test samples covering a broad range of final KAPA Frag Conditioning Solution concentrations, then perform a finer titration over a narrower concentration range.

Optimization of Fragmentation Time

The fragmentation guidelines in Section 1 of the Library Construction Protocol are a good starting point for high-quality genomic DNA. When evaluating the KAPA HyperPlus Kit for the first time, it is recommended that you proceed as follows:

- Set up at least three replicate reactions with the desired input of a non-precious, bulk sample that is representative of the actual samples to be processed.
- Select the most appropriate fragmentation time (for the desired mode fragment length) from the third table in Section 1 of the Library Construction Protocol (p. 12). Perform one reaction with that time, and one reaction each with either a slightly shorter or slightly longer fragmentation time within the optimization range. Increments of 3 5 min are recommended.
- Complete the library construction process, and evaluate the size distribution of the final libraries electrophoretically.
 - If the mode fragment length is too long, increase the fragmentation time in increments of 2 5 min until the optimal final library distribution is achieved.
 - If the mode fragment length is too short, reduce the fragmentation time in increments of 2 – 5 min until the optimal final library distribution is achieved.

Optimization of Fragmentation Time (continued)

• Further fine-tuning (plus or minus 1 – 2 min) may be necessary if the fragmentation time is relatively short (10 min or less). If this is the case, consider optimizing the fragmentation temperature (see below).

A similar strategy may be employed to optimize the fragmentation time for FFPE samples, remembering that lower quality samples may benefit from slightly longer fragmentation times. For FFPE samples:

- Set up 4 5 replicate reactions with the desired input of a non-precious, bulk sample that is representative of the actual samples to be processed. This sample may have to be generated by pooling a few individual samples.
- Select the fragmentation time corresponding to the desired mode fragment length from the third table in Section 1 of the Library Construction Protocol (p. 12).
 Use that as the minimum fragmentation time, and increase the incubation time at 37°C by 5 min for each additional replicate.
- Complete the library construction process, evaluate the size distribution of the final libraries, and fine-tune fragmentation time if needed, as described above.

With respect to FFPE samples, please note the following:

- Electrophoretic profiles of FFPE samples, generated during sample QC prior to fragmentation, are not always good predictors of library and sequence quality. Samples that appear to consist of high-molecular weight DNA may not yield libraries of significantly better quality than samples that appear to be degraded. The KAPA hgDNA Quantification and QC Kit provides a qPCR-based assay for assessment of FFPE DNA quality. Quality scores (Q-ratios) determined with this assay have been shown to correlate with the success of library construction.
- The mode fragment length of an amplified FFPE library is typically shorter than than expected based on the size distribution after fragmentation and adapter length. This is a common phenomenon, attributable to the inability of high-fidelity DNA polymerases used in library amplification to efficiently amplify damaged DNA, particularly templates that contain deaminated or oxidized bases. For this reason, it is not productive to try and optimize fragmentation parameters independently of the rest of the library construction process when using the KAPA HyperPlus workflow.

Optimization of Fragmentation Temperature

The standard fragmentation temperature is 37°C. If you are fragmenting high-quality genomic DNA, any other high-complexity DNA sample, or FFPE DNA to a mode fragment length <500 bp, it is unlikely that you will have to change or optimize the fragmentation temperature.

Low-complexity samples (e.g., small viral genomes, plasmids, long amplicons and cDNA) may, however, be over-fragmented at 37°C, even with short incubation times. The likelihood of over-fragmentation depends on the nature, molecular weight/length of the input DNA, the desired size distribution after fragmentation and, to a lesser degree, the input into fragmentation. For example, 100 ng of a 1.8 kb PCR product will yield a similar mode fragment length (~300 bp) as 100 ng *E. coli* or human genomic DNA when fragmented at 37°C for 10 min, whereas 1 ng of a 1 kb PCR product will be fragmented to a mode size <250 bp using the same parameters.

To determine the optimal fragmentation parameters for low-complexity samples, or high-complexity samples when the desired mode fragment length is >500 bp:

- Set up four replicate reactions with a non-precious, bulk sample that is representative of the actual samples to be processed.
- Fragment two of the samples at 37°C, for 5 min and 10 min, respectively. Repeat these fragmentations with the other two samples, but at 30°C.
- Complete the library construction process, and evaluate the size distribution of the final libraries electrophoretically.
 - If the mode fragment length obtained with a 10 min incubation at 37°C is too long, continue optimizing (increasing) the fragmentation time at 37°C.
 - If the mode fragment length obtained with a 10 min incubation at 30°C is too long, but 5 min at 37°C resulted in over-fragmentation, continue optimizing (increasing) the fragmentation time at 30°C.
 - If a 5 min incubation at 30°C resulted in over-fragmentation, perform a second set of reactions (e.g., for 5 min, 10 min, 15 min and 20 min) at 25°C, and fine-tune the fragmentation time if needed.

Restrictions and Liabilities

This technical data sheet is provided "as is" and Kapa Biosystems assumes no responsibility for any typographical, technical, or other inaccuracies. The document is subject to change, without notice, in future editions.

To the maximum extent permitted by applicable law, Kapa Biosystems disclaims all warranties, either express or implied, with regard to this technical data sheet and any information contained herein, including but not limited to the implied warranties of merchantability and fitness for a particular purpose. Kapa Biosystems shall not be liable for errors or for incidental or consequential damages in connection with the furnishing, use, or performance of this document or of any information contained herein.

This document might contain references to third party sources of information, hardware or software, products, or services and/or third party web sites (collectively the "Third-Party Information"). Kapa Biosystems does not control, and is not responsible for, any Third-Party Information. The inclusion of Third-Party Information in this document does not imply endorsement by Kapa Biosystems of the Third-Party Information or the third party in any way.

Kapa Biosystems is not responsible nor will be liable in any way for your use of any software or equipment that is not supplied by Kapa Biosystems in connection with your use of Kapa Biosystems products.

Kapa Biosystems does not in any way guarantee or represent that you will obtain satisfactory results from using Kapa Biosystems products as described herein. The only warranties provided to you are included in the Limited Warranty enclosed with this document. You assume all risk in connection with your use of Kapa Biosystems products.

Note to Purchaser: Limited Product Warranty

Any product that does not meet the performance standards stated in the product specification sheet will be replaced at no charge. This warranty limits our liability to the replacement of the product. No other warranties of any kind, express or implied, including without limitation, implied warranties of merchantability or fitness for a particular purpose, are provided by Kapa Biosystems. Kapa Biosystems shall have no liability for any direct, indirect, consequential or incidental damages arising out of the use, the results of use or the inability to use any product.

Note to Purchaser: Limited License

KAPA HyperPlus Kits are developed, designed and sold exclusively for research purposes and *in vitro* use. Neither the product, nor any individual component, has been tested for use in diagnostics or for drug development, nor is it suitable for administration to humans or animals. Please refer to the MSDS, which is available on request.

Certain applications of this product are covered by patents issued to parties other than Kapa Biosystems and applicable in certain countries. Purchase of this product does not include a license to perform any such applications. Users of this product may therefore be required to obtain a patent license depending upon the particular application and country in which the product is used.

Licensed under U.S. Patent nos. 5,338,671 and 5,587,287 and corresponding patents in other countries.

Fragment Analyzer is a trademark of Advanced Analytical Technologies, Inc. Agencourt, AMPure and SPRI are registered trademarks of Beckman Coulter, Inc. Illumina and TruSeq are trademarks or registered trademarks of Illumina, Inc. xGen and Lockdown are trademarks of Integrated DNA Technologies. Qubit and PicoGreen are registered trademarks of Life Technologies. LabChip is a registered trademark of PerkinElmer, Inc. Nimblegen is a trademark of Roche.



Headquarters, United States Wilmington, Massachusetts Tel: 781.497.2933 Fax: 781.497.2934 sales@kapabiosystems.com Manufacturing, R&D Cape Town, South Africa Tel: +27.21.448.8200 Fax: +27.21.448.6503 sales@kapabiosystems.com

For technical support, please contact support@kapabiosystems.com

UK Sales London, England Tel: +44.845.512.0641 Fax: +44.203.745.5862 uksales@kapabiosystems.com