

## **RTL8019AS**

# Realtek Full-Duplex Ethernet Controller with Plug and Play Function (RealPNP)

## **SPECIFICATION**

## REALTEK SEMI-CONDUCTOR CO., LTD.

#### **HEAD OFFICE**

NO. 2, INDUSTRY E. RD. IX, SCIENCE-BASED INDUSTRIAL PARK, HSINCHU 30077, TAIWAN, R.O.C. TEL:886-3-5780211 FAX:886-3-5776598

#### **OFFICE**

3F, NO. 56, WU-KUNG 6 RD., TAIPEI HSIEN, TAIWAN, R.O.C. TEL: 886-2-22980098 FAX: 886-2-22980094, 22980097

1



## **CONTENTS**

| 1. FEATURES   | 3      |
|---|--------|
| 2. GENERAL DESCRIPTION                              | 4      |
| 3. PIN CONFIGURATION                                | 5      |
| 4. PIN DESCRIPTION                                  |        |
| 4.1. Power Pins ·····                               |        |
| 4.2. ISA Bus Interface Pins                         | 6      |
| 4.3. Memory Interface Pins (including BROM, EEPROM) | ·····7 |
| 4.4. Medium Interface Pins ·····                    | 8      |
| 4.5. LED Output Pins                                | 8      |
| 5. REGISTER DESCRIPTIONS                            |        |
| 5.1. Group 1: NE2000 Registers                      | 9      |
| 5.1.1. Register Table                               | 9      |
| 5.1.2. Register Functions                           | 11     |
| 5.1.2.1. NE2000 Compatible Registers                | 11     |
| 5.1.2.2. RTL8019AS Defined Registers                |        |
| 5.2. Group 2: Plug and Play (PnP) Registers         | 23     |
| 5.2.1. Card Control Registers ······                | 24     |
| 5.2.2. Logical Device Control Registers             | 25     |
| 5.2.3. Logical Device Configuration Registers       | 25     |
| 6. FUNCTIONAL DESCRIPTIONS                          |        |
| 6.1. RTL8019AS Configuration Modes                  | 27     |
| 6.2. Plug and Play ·····                            | 29     |
| 6.2.1. Initiation Key ······                        | 29     |
| 6.2.2. Isolation Protocol                           | 30     |
| 6.2.3. Plug and Play Isolation Sequence             | 34     |
| 6.2.4. Reading Resource Data                        | 35     |
| 6.2.5. PnP auto detect mode                         |        |
| 6.3. 9346 Contents                                  |        |
| 6.4. Boot ROM                                       |        |
| 6.5. LED Behaviors                                  | 40     |
| 6.6. Loopback Diagnostic Operation                  | 42     |
| 6.6.1. Loopback Operation                           | 42     |
| 6.6.2. To implement Loopback Test                   | 43     |
| 7. Electrical Specification and Timings             |        |
| 7.1. Absolute Maximum Ratings                       | 46     |
| 7.2. D.C. Characteristics                           | 46     |
| 7.3. A.C. Timing Characteristics                    | 46     |



#### 1. FEATURES

- O 100-pin PQFP
- RTL8019 software compatible
- O Supports PnP auto detect mode (RTL8019AS only)
- O Compliant to Ethernet II and IEEE802.3 10Base5, 10Base2, 10BaseT
- O Software compatible with NE2000 on both 8 and 16-bit slots
- O Supports both jumper and jumperless modes
- O Supports Microsoft's Plug and Play configuration for jumperless mode
- O Supports Full-Duplex Ethernet function to double channel bandwidth
- O Supports three level power down modes:
  - Sleep
  - Power down with internal clock running
  - Power down with internal clock halted
- O Built-in data prefetch function to improve performance
- O Supports UTP, AUI & BNC auto-detect (RTL8019AS only)
- O Supports auto polarity correction for 10BaseT
- O Support 8 IRQ lines
- O Supports 16 I/O base address options and extra I/O address fully decode mode (RTL8019AS only)
- O Supports 16K, 32K, 64K and 16K-page mode access to BROM (up to 256 pages with 16K bytes/page)
- O Supports BROM disable command to release memory after remote boot
- O Supports flash memory read/write (RTL8019AS only)
- O 16k byte SRAM built in (RTL8019AS only)
- O Use 9346 (64\*16-bit EEPROM) to store resource configurations and ID parameters
- O Capable of programming blank 9346 on board for manufacturing convenience
- O Support 4 diagnostic LED pins with programmable outputs



### 2. General Description

The RTL8019AS is a highly integrated Ethernet Controller which offers a simple solution to implement a Plug and Play NE2000 compatible adapter with full-duplex and power down features. With the three level power down control features, the RTL8019AS is made to be an ideal choice of the network device for a GREEN PC system. The full-duplex function enables simultaneously transmission and reception on the twisted-pair link to a full-duplex Ethernet switching hub. This feature not only increases the channel bandwidth from 10 to 20 Mbps but also avoids the performance degrading problem due to the channel contention characteristics of the Ethernet CSMA/CD protocol. The Microsoft's Plug and Play function can relieve the users from pains of taking care the adapter's resource configurations such as IRQ, I/O, and memory address, etc. However, for special applications not to be used as a Plug and Play compatible device, the RTL8019AS also supports the jumper and proprietary jumperless options.

To offer a fully *plug and play* solution, the RTL8019AS provides the auto-detect capability between the integrated 10BaseT transceiver, BNC and AUI interface. Besides, the 10BaseT transceiver can automatically correct the polarity error on its receiving pair. Furthermore, 8 IRQ lines and 16 I/O base address options are provided for grand resource configuration flexibility.


The RTL8019AS supports 16k, 32k & 64k byte BROM and fiash memory interface. It also offers the page mode function which can support up to 4M-byte BROM within only 16k-byte system memory space. Besides, the BROM disable command is provided to release the BROM memory space for other system usage (e.g. EMM386, etc.) after the BROM program is loaded.

The RTL8019AS is built in with 16K-byte SRAM in a single chip. It is designed not only to provide more friendly functions but also to save the effort of SRAM sourcing and inventory.

4



#### 3. PIN CONFIGURATION

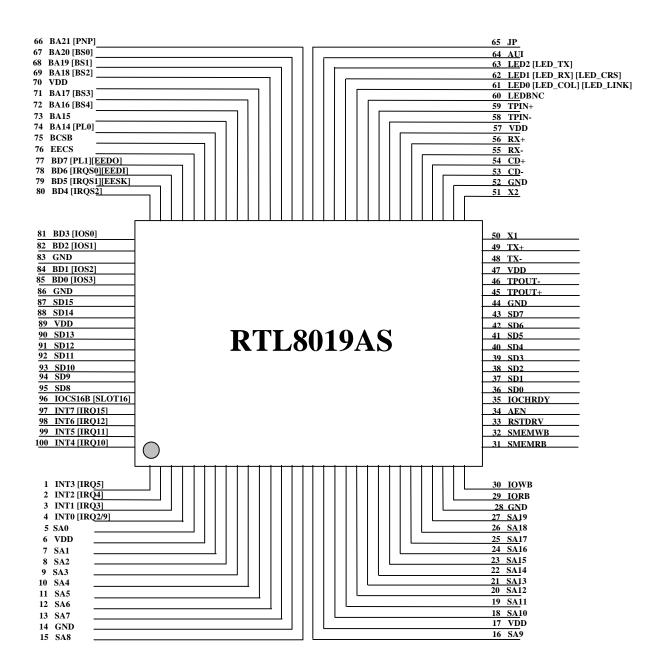



## 4. PIN DESCRIPTIONS

## 4.1. Power Pins

| No.                       | Name | Type | Description  |
|---------------------------|------|------|--------------|
| 6, 17, 47, 57, 70,<br>89  | VDD  | P    | +5V DC power |
| 14, 28, 44, 52,<br>83, 86 | GND  | P    | Ground       |

## 4.2. ISA Bus Interface Pins

| No.                       | Name                | Type | Descriptions   |
|---------------------------|---------------------|------|--|
| 34                        | AEN                 | I    | Address Enable. This ISA signal must be low for a valid I/O command.   |
| 97-100, 1-4               | INT7-0              | O    | Interrupt request lines which are mapped to IRQ15, IRQ12, IRQ11, IRQ10, IRQ5, IRQ4, IRQ3, IRQ2/9 respectively. Only one line is selected to reflect the interrupt requests at one time. All other lines are tri-stated. The RTL8019AS also uses these pins as inputs to monitor the actual state of the corresponding interrupt lines on ISA bus. The result is recorded in the INTR register, which may be used by software to detect interrupt conflict.   |
| 35                        | IOCHRDY             | О    | This ISA signal is driven low to insert wait cycles to current host read/write command.  |
| 96                        | IOCS16B<br>[SLOT16] | O    | Upon power-on reset, this pin acts as an input named SLOT16 to detect whether a 16-bit or 8-bit slot is in use. To do this, it is connected to a pull-down resistor (about 27KW) externally. At the falling edge of RSTDRV, the RTL8019AS senses this pin's state. If it is sensed high, the adapter is thought to be placed on a 16-bit slot where this pin is connected to the host's IOCS16B pin, which is typically pulled up by a 300W resistor on the mother board. If it is sensed low, the adapter is thought to be placed on an 8-bit slot where this pin is merely pulled low by the 27KW resistor. After having latched the input state, this pin is switched as the IOCS16B signal which is an open-drain output and is driven low during a 16-bit host data transfer. It is decoded from AEN and SA9-0. |
| 29                        | IORB                | I    | Host I/O read command.   |
| 30                        | IOWB                | I    | Host I/O write command.  |
| 33                        | RSTDRV              | I    | High active hardware reset signal from the ISA bus. Pulses with high level less than 800ns are ignored.  |
| 27-18, 16-<br>15, 13-7, 5 | SA19-0              | I    | Host address bus. SA10 is added to implement the fully decode of PnP ports, address 279h and A79h. In RTL8019, SA10 is not decoded. In RTL8019AS, SA10 should be 0 for a valid access to PnP ports.  |
| 87-88, 90-<br>95, 43-36   | SD15-0              | I/O  | Host data bus.   |



| 31 | SMEMRB | I | Host memory read command.   |
|----|--------|---|---|
| 32 | SMEMWB | I | Host memory write command. This pin is added to decode the write command of a flash memory. |

#### 4.3. Memory Interface Pins (including BROM, EEPROM)

| No.            | Name      | Type | Description  |
|----------------|-----------|------|--|
| 75             | BCSB      | O    | BROM chip select. Active low signal, asserted when BROM is read. RTL8019AS drives this pin low when SA19-14 matches the selected BROM memory base address and either of the 2 conditions below meets:  (1) SMEMRB is low   |
|                |           |      | (2) SMEMWB is low and RTL8019AS's flash memory write function is enabled.  |
| 76             | EECS      | O    | 9346 chip select. Active high signal, asserted when 9346 is read/write.  |
| 66-69, 71-74   | BA21-14   | O    | BROM address.  |
| 77-82, 84-85   | BD7-0     | I/O  | BROM data bus.   |
| [79]           | [EESK]    | О    | 9346 serial data clock   |
| [78]           | [EEDI]    | О    | 9346 serial data input   |
| [77]           | [EEDO]    | I    | 9346 serial data output  |
|                |           |      | The following pins are defined for jumper options. Their states are latched at the falling edge of RSTDRV, then they are changed to serve as the SRAM bus. Each of them is internally pulled down by a 100KW resistor. Therefore, the input will be low when left open and high when pulled up by a 10K resistor externally. |
| [66]           | [PNP]     | I    | When it is high in jumperless mode (i.e. JP=low), the RTL8019AS is forced into Plug and Play mode regardless of the contents of 9346.  |
|                |           |      | The following pins are don't care in jumperless mode (JP=low).   |
| [72-71, 69-67] | [BS4-0]   | I    | Select BROM size and base address.   |
| [85-84, 82-81] | [IOS3-0]  | I    | Select I/O base address.   |
| [77, 74]       | [PL1-0]   | I    | Select network medium type.  |
| [80-78]        | [IRQS2-0] | I    | Select one interrupt line among INT7-0.  |
| 65             | JP        | I    | When high, this pin selects jumper mode. When low, it selects jumperless modes (including RT jumperless and Plug and Play).  |

After RTL8019AS latches all jumper status upon power on reset, these pins *always\** reflect the value of BPAGE register directly in BROM page mode. In normal mode, BA16-21 are not used and BA14-15 act as:

| BROM Size | BA14 | BA15 |
|-----------|------|------|
| 16K       | high | high |
| 32K       | SA14 | high |
| 64K       | SA14 | SA15 |



\*Note: RTL8019AS doesn't drive BA14-21 until the SMEMRB goes from high to low.

#### 4.4. Medium Interface Pins

| No.   | Name              | Type | Description  |  |  |  |
|-------|-------------------|------|--|--|--|--|
| 64    | AUI               | I    | This input is used to detect the usage of an external MAU on the AUI interface. The input should be driven low for embedded BNC and high for external MAU. When the input is high, RTL8019AS sets the AUI bit (bit5) in CONFIGO and drives LEDBNC low to disable the BNC. If this pin is not used, it should be connected to GND such that RTL8019AS acts like RTL8019. Please refer to section 5.1.2.2. CONFIGO for more details. |  |  |  |
| 54,53 | CD+,CD-           | I    | This AUI collision input pair carries the different collision input signal from the MAU.   |  |  |  |
| 56,55 | RX+,RX-           | I    | This AUI receive input pair carries the differential receive input signal from the MAU.  |  |  |  |
| 49,48 | TX+,TX-           | О    | This AUI transmit output pair contains differential line drivers which send Manchester encoded data to the MAU. These outputs are source followers and require 270 ohm pull-down resistors to GND.   |  |  |  |
| 59,58 | TPIN+,<br>TPIN-   | I    | This TP input pair receives the 10 Mbits/s differential Manchester encoded data from the twisted-pair wire.  |  |  |  |
| 45,46 | TPOUT+,<br>TPOUT- | 0    | This pair carries the differential TP transmit output. The output Manchester encoded signals have been pre-distorted to prevent overcharge on the twisted-pair media and thus reduce jitter.   |  |  |  |
| 50    | X1                | I    | 20Mhz crystal or external oscillator input.  |  |  |  |
| 51    | X2                | 0    | Crystal feedback output. This output is used in crystal connection only. It must be left open when X1 is driven with an external oscillator.   |  |  |  |

## 4.5. LED Output Pins

| No. | Name   | Type | Description   |
|-----|--------|------|---|
| 60  | LEDBNC | 0    | This pin goes high when RTL8019AS's medium type is set to 10Base2 mode or auto-detect mode with link test failure. Otherwise, this pin is low. This pin can be used to control the power of the DC convertor for CX MAU and connected to an LED to indicate the used medium type. |
| 61  | LED0   | 0    | When LEDS0 bit (in CONFIG3 register of RTL8019AS Page3) is 0, this pin acts as LED_COL. When LEDS0=1, it acts as LED_LINK.  |



| 62,63 | LED1,LED2 | O | When LEDS1 bit (in CONFIG3 register of RTL8019AS Page3) is 0, these 2 pins act as LED_RX & LED_TX respectively. When LEDS1=1, these pins act as LED_CRS & MCSB. Please refer to section 6.5 for details of the lightening behavior of all LEDs. |
|-------|-----------|---|---|
|-------|-----------|---|---|

## **5. Register Descriptions**

The registers in RTL8019AS can be roughly divided into two groups by their address and functions -- one for NE2000, the other for Plug and Play (PnP).

#### 5.1. Group 1: NE2000 Registers

This group includes 4 pages of registers which are selected by bit PS0 & PS1 in the CR register. Each page contains 16 registers. Besides those registers compatible with NE2000, the RTL8019AS defines some registers for software configuration and feature enhancement.

#### **5.1.1.** Register Table

| No (Hex) | P          | age0   | Page1 | Page2  |              | Page3   |
|----------|------------|--------|-------|--------|--------------|---------|
|          | [R]        | [W]    | [R/W] | [R]    | [R]          | [W]     |
| 00       | CR         | CR     | CR    | CR     | CR           | CR      |
| 01       | CLDA0      | PSTART | PAR0  | PSTART | 9346CR       | 9346CR  |
| 02       | CLDA1      | PSTOP  | PAR1  | PSTOP  | <b>BPAGE</b> | BPAGE   |
| 03       | BNRY       | BNRY   | PAR2  | -      | CONFIG0      | -       |
| 04       | TSR        | TPSR   | PAR3  | TPSR   | CONFIG1      | CONFIG1 |
| 05       | NCR        | TBCR0  | PAR4  | -      | CONFIG2      | CONFIG2 |
| 06       | FIFO       | TBCR1  | PAR5  | -      | CONFIG3      | CONFIG3 |
| 07       | ISR        | ISR    | CURR  | -      | -            | TEST    |
| 08       | CRDA0      | RSAR0  | MAR0  | -      | CSNSAV       | -       |
| 09       | CRDA1      | RSAR1  | MAR1  | -      | -            | HLTCLK  |
| 0A       | 8019ID0    | RBCR0  | MAR2  | -      | -            | -       |
| 0B       | 8019ID1    | RBCR1  | MAR3  | -      | INTR         | -       |
| 0C       | RSR        | RCR    | MAR4  | RCR    | -            | FMWP    |
| 0D       | CNTR0      | TCR    | MAR5  | TCR    | CONFIG4      | -       |
| 0E       | CNTR1      | DCR    | MAR6  | DCR    | -            | -       |
| 0F       | CNTR2      | IMR    | MAR7  | IMR    | -            | -       |
| 10-17    | Remote DMA | Port   |       |        |              |         |
| 18-1F    | Reset Port |        |       |        |              |         |

Notes: "-" denotes reserved. Registers with names typed in *bold italic* format are RTL8019AS defined registers and are not supported in a standard NE2000 adapter.



## Page 0 (PS1=0, PS0=0)

| No. | Name    | Type | Bit 7 | Bit 6 | Bit 5 | Bit 4 | Bit 3 | Bit 2 | Bit 1 | Bit 0 |
|-----|---------|------|-------|-------|-------|-------|-------|-------|-------|-------|
| 00H | CR      | R/W  | PS1   | PS0   | RD2   | RD1   | RD0   | TXP   | STA   | STP   |
| 01H | CLDA0   | R    | A7    | A6    | A5    | A4    | A3    | A2    | A1    | A0    |
|     | PSTART  | W    | A15   | A14   | A13   | A12   | A11   | A10   | A9    | A8    |
| 02H | CLDA1   | R    | A15   | A14   | A13   | A12   | A11   | A10   | A9    | A8    |
|     | PSTOP   | W    | A15   | A14   | A13   | A12   | A11   | A10   | A9    | A8    |
| 03H | BNRY    | R/W  | A15   | A14   | A13   | A12   | A11   | A10   | A9    | A8    |
| 04H | TSR     | R    | OWC   | CDH   | 0     | CRS   | ABT   | COL   | -     | PTX   |
|     | TPSR    | W    | A15   | A14   | A13   | A12   | A11   | A10   | A9    | A8    |
| 05H | NCR     | R    | 0     | 0     | 0     | 0     | NC3   | NC2   | NC1   | NC0   |
|     | TBCR0   | W    | TBC7  | TBC6  | TBC5  | TBC4  | TBC3  | TBC2  | TBC1  | TBC0  |
| 06H | FIFO    | R    | D7    | D6    | D5    | D4    | D3    | D2    | D1    | D0    |
|     | TBCR1   | W    | TBC15 | TBC14 | TBC13 | TBC12 | TBC11 | TBC10 | TBC9  | TBC8  |
| 07H | ISR     | R/W  | RST   | RDC   | CNT   | OVW   | TXE   | RXE   | PTX   | PRX   |
| 08H | CRDA0   | R    | A7    | A6    | A5    | A4    | A3    | A2    | A1    | A0    |
|     | RSAR0   | W    | A7    | A6    | A5    | A4    | A3    | A2    | A1    | A0    |
| 09H | CRDA1   | R    | A15   | A14   | A13   | A12   | A11   | A10   | A9    | A8    |
|     | RSAR1   | W    | A15   | A14   | A13   | A12   | A11   | A10   | A9    | A8    |
| 0AH | 8019ID0 | R    | 0     | 1     | 0     | 1     | 0     | 0     | 0     | 0     |
|     | RBCR0   | W    | RBC7  | RBC6  | RBC5  | RBC4  | RBC3  | RBC2  | RBC1  | RBC0  |
| 0BH | 8019ID1 | R    | 0     | 1     | 1     | 1     | 0     | 0     | 0     | 0     |
|     | RBCR1   | W    | RBC15 | RBC14 | RBC13 | RBC12 | RBC11 | RBC10 | RBC9  | RBC8  |
| 0CH | RSR     | R    | DFR   | DIS   | PHY   | MPA   | 0     | FAE   | CRC   | PRX   |
|     | RCR     | W    | -     | -     | MON   | PRO   | AM    | AB    | AR    | SEP   |
| 0DH | CNTR0   | R    | CNT7  | CNT6  | CNT5  | CNT4  | CNT3  | CNT2  | CNT1  | CNT0  |
|     | TCR     | W    | -     | -     | -     | OFST  | ATD   | LB1   | LB0   | CRC   |
| 0EH | CNTR1   | R    | CNT7  | CNT6  | CNT5  | CNT4  | CNT3  | CNT2  | CNT1  | CNT0  |
|     | DCR     | W    | -     | FT1   | FT0   | ARM   | LS    | LAS   | BOS   | WTS   |
| 0FH | CNTR2   | R    | CNT7  | CNT6  | CNT5  | CNT4  | CNT3  | CNT2  | CNT1  | CNT0  |
|     | IMR     | W    | -     | RDCE  | CNTE  | OVWE  | TXEE  | RXEE  | PTXE  | PRXE  |

## Page 1 (PS1=0, PS0=1)

| No. | Name | Type | Bit 7 | Bit 6 | Bit 5 | Bit 4 | Bit 3 | Bit 2 | Bit 1 | Bit 0 |
|-----|------|------|-------|-------|-------|-------|-------|-------|-------|-------|
| 00H | CR   | R/W  | PS1   | PS0   | RD2   | RD1   | RD0   | TXP   | STA   | STP   |
| 01H | PAR0 | R/W  | DA7   | DA6   | DA5   | DA4   | DA3   | DA2   | DA1   | DA0   |
| 02H | PAR1 | R/W  | DA15  | DA14  | DA13  | DA12  | DA11  | DA10  | DA9   | DA8   |
| 03H | PAR2 | R/W  | DA23  | DA22  | DA21  | DA20  | DA19  | DA18  | DA17  | DA16  |
| 04H | PAR3 | R/W  | DA31  | DA30  | DA29  | DA28  | DA27  | DA26  | DA25  | DA24  |
| 05H | PAR4 | R/W  | DA39  | DA38  | DA37  | DA36  | DA35  | DA34  | DA33  | DA32  |
| 06H | PAR5 | R/W  | DA47  | DA46  | DA45  | DA44  | DA43  | DA42  | DA41  | DA40  |
| 07H | CURR | R/W  | A15   | A14   | A13   | A12   | A11   | A10   | A9    | A8    |
| 08H | MAR0 | R/W  | FB7   | FB6   | FB5   | FB4   | FB3   | FB2   | FB1   | FB0   |
| 09H | MAR1 | R/W  | FB15  | FB14  | FB13  | FB12  | FB11  | FB10  | FB9   | FB8   |
| 0AH | MAR2 | R/W  | FB23  | FB22  | FB21  | FB20  | FB19  | FB18  | FB17  | FB16  |
| 0BH | MAR3 | R/W  | FB31  | FB30  | FB29  | FB28  | FB27  | FB26  | FB25  | FB24  |
| 0CH | MAR4 | R/W  | FB39  | FB38  | FB37  | FB36  | FB35  | FB34  | FB33  | FB32  |
| 0DH | MAR5 | R/W  | FB47  | FB46  | FB45  | FB44  | FB43  | FB42  | FB41  | FB40  |
| 0EH | MAR6 | R/W  | FB55  | FB54  | FB53  | FB52  | FB51  | FB50  | FB49  | FB48  |
| 0FH | MAR7 | R/W  | FB63  | FB62  | FB61  | FB60  | FB59  | FB58  | FB57  | FB56  |



## Page 2(PS1=1, PS0=0)

| No. | Name   | Type | Bit 7 | Bit 6 | Bit 5 | Bit 4 | Bit 3 | Bit 2 | Bit 1 | Bit 0 |
|-----|--------|------|-------|-------|-------|-------|-------|-------|-------|-------|
| 00H | CR     | R/W  | PS1   | PS0   | RD2   | RD1   | RD0   | TXP   | STA   | STP   |
| 01H | PSTART | R    | A15   | A14   | A13   | A12   | A11   | A10   | A9    | A8    |
| 02H | PSTOP  | R    | A15   | A14   | A13   | A12   | A11   | A10   | A9    | A8    |
| 03H | -      |      |       |       |       |       |       |       |       |       |
| 04H | TPSR   | R    | A15   | A14   | A13   | A12   | A11   | A10   | A9    | A8    |
| 05H | -      |      |       |       |       |       |       |       |       |       |
|     |        |      |       |       |       |       |       |       |       |       |
| 0BH |        |      |       |       |       |       |       |       |       |       |
| 0CH | RCR    | R    | -     | -     | MON   | PRO   | AM    | AB    | AR    | SEP   |
| 0DH | TCR    | R    | 1     | 1     | -     | OFST  | ATD   | LB1   | LB0   | CRC   |
| 0EH | DCR    | R    | 1     | FT1   | FT0   | ARM   | LS    | LAS   | BOS   | WTS   |
| 0FH | IMR    | R    | -     | RDCE  | CNTE  | OVWE  | TXEE  | RXEE  | PTXE  | PRXE  |

#### Page 3(PS1=1, PS0=1)

| No. | Name    | Type  | Bit 7    | Bit 6      | Bit 5     | Bit 4 | Bit 3 | Bit 2 | Bit 1 | Bit 0   |
|-----|---------|-------|----------|------------|-----------|-------|-------|-------|-------|---------|
| 00H | CR      | R/W   | PS1      | PS0        | RD2       | RD1   | RD0   | TXP   | STA   | STP     |
| 01H | 9346CR  | R     | EEM1     | EEM0       | -         | -     | EECS  | EESK  | EEDI  | EEDO    |
|     |         | W     | EEM1     | EEM0       | -         | -     | EECS  | EESK  | EEDI  | _       |
| 02H | BPAGE   | R/W   | BP7      | BP6        | BP5       | BP4   | BP3   | BP2   | BP1   | BP0     |
| 03H | CONFIG0 | R     | VerID1   | VerID0     | AUI       | PNPJP | JP    | BNC   | 0     | 0       |
| 04H | CONFIG1 | R     | IRQEN    | IRQS2      | IRQS1     | IRQS0 | IOS3  | IOS2  | IOS1  | IOS0    |
|     |         | W*    | IRQEN    | -          | -         | -     | -     | -     | -     | -       |
| 05H | CONFIG2 | R     | PL1      | PL0        | BSELB     | BS4   | BS3   | BS2   | BS1   | BS0     |
|     |         | W*    | PL1      | PL0        | BSELB     | -     | -     | -     | -     | -       |
| 06H | CONFIG3 | R     | PNP      | FUDUP      | LEDS1     | LEDS0 | -     | SLEEP | PWRDN | ACTIVEB |
|     |         | W*    | -        | -          | -         | -     | -     | SLEEP | PWRDN | _       |
| 07H | TEST    | R/W   | Reserved | , Do not w | rite      |       |       |       |       |         |
| 08H | CSNSAV  | R     | CSN7     | CSN6       | CSN5      | CSN4  | CSN3  | CSN2  | CSN1  | CNS0    |
| 09H | HLTCLK  | W     | HLT7     | HLT6       | HLT5      | HLT4  | HLT3  | HLT2  | HLT1  | HLT0    |
| 0AH | -       | -     | Reserved |            |           |       |       |       |       |         |
| 0BH | INTR    | R     | INT7     | INT6       | INT5      | INT4  | INT3  | INT2  | INT1  | INT0    |
| 0CH | FMWP    | $W^*$ | Flash Me | mory Writ  | e Protect |       |       |       |       |         |
| 0DH | CONFIG4 | R     | -        | -          | -         | -     | -     | -     | -     | IOMS    |
| 0EH | -       | -     | Reserved | Reserved   |           |       |       |       |       |         |
|     |         |       |          |            |           |       |       |       |       |         |
| 0FH |         |       |          |            |           |       |       |       |       |         |

Note: The registers marked with type='W\*' can be written only if bits EEM1=EEM0=1.

## **5.1.2. Register Functions**

## 5.1.2.1. NE2000 Compatible Registers

**CR:** Command Register (00H; Type=R/W)

This register is used to select register pages, enable or disable remote DMA operation and issue commands.



| Bit  | Symbol   |        |                        |             | Desc              | ription       |                           |            |
|------|----------|--------|------------------------|-------------|-------------------|---------------|---------------------------|------------|
| 7, 6 | PS1, PS0 |        |                        |             |                   |               |                           |            |
|      |          |        | PS1                    | PS0         | Register Pa       | ige           | Remark                    |            |
|      |          |        | 0                      | 0           | 0                 | NE2           | 2000 compatible           |            |
|      |          |        | 0                      | 1           | 1                 | NE2           | 2000 compatible           |            |
|      |          |        | 1                      | 0           | 2                 | NE2           | 2000 compatible           |            |
|      |          |        | 1                      | 1           | 3                 | RTI           | L8019AS                   |            |
|      |          |        |                        |             |                   | Con           | figuration                |            |
|      |          |        |                        |             |                   |               |                           |            |
| 5-3  | RD2-0    |        |                        |             |                   | T             |                           |            |
|      |          |        | RD2                    | RD1         | RD0               |               | Function                  |            |
|      |          |        | 0                      | 0           | 0                 | Not allow     |                           |            |
|      |          |        | 0                      | 0           | 1                 | Remote R      |                           |            |
|      |          |        | 0                      | 1           | 0                 | Remote V      |                           |            |
|      |          |        | 0                      | 1           | 1                 | Send Pacl     |                           |            |
|      |          |        | 1                      | *           | *                 | Abort/Co      | mplete remote DMA         |            |
|      |          |        |                        |             |                   |               |                           |            |
| 2    | TXP      |        |                        |             |                   |               | internally reset either   | after the  |
|      | GTT.4    |        |                        |             | aborted. Writi    |               |                           | ******     |
| 1    | STA      |        |                        | ols nothing | g. It only reflec | ets the value | e written to this bit. PO | WER        |
| 0    | STP      | UP=0   |                        | TOD         |                   | 14 14         |                           |            |
| U    | SIP      |        |                        |             | mana. wnen        | it is set,    | no packets will be re     | eceived or |
|      |          | transi | ansmitted. POWER UP=1. |             |                   |               |                           |            |
|      |          |        | STA                    | STP         | Tr.               | unction       |                           |            |
|      |          |        | 1                      | 0           | Start Comi        |               |                           |            |
|      |          |        | 0                      | 1           | Start Com         |               |                           |            |
|      |          |        | U                      | 1           | Stop Colli        | nanu          |                           |            |
|      |          |        |                        |             |                   |               |                           |            |

**ISR:** Interrupt Status Register (07H; Type=R/W in Page0)

This register reflects the NIC status. The host reads it to determine the cause of an interrupt. Individual bits are cleared by writing a "1" into the corresponding bit. It must be cleared after power up.

| Bit | Symbol | Description   |
|-----|--------|---|
| 7   | RST    | This bit is set when NIC enters reset state and is cleared when a start command is        |
|     |        | issued to the CR. It is also set when receive buffer overflows and is cleared when one or |
|     |        | more packets have been read from the buffer.  |
| 6   | RDC    | Set when remote DMA operation has been completed.   |
| 5   | CNT    | Set when MSB of one or more of the network tally counters has been set.                   |
| 4   | OVW    | This bit is set when the receive buffer has been exhausted.                               |
| 3   | TXE    | Transmit error bit is set when a packet transmission is aborted due to excessive          |
|     |        | collisions.   |
| 2   | RXE    | This bit is set when a packet received with one or more of the following errors:          |
|     |        | - CRC error   |
|     |        | - Frame alignment error   |
|     |        | -Missed packet  |
| 1   | PTX    | This bit indicates packet transmitted with no errors.                                     |
| 0   | PRX    | This bit indicates packet received with no errors.  |



IMR: Interrupt Mask Register (0FH; Type=W in Page0, Type=R in Page2)
All bits correspond to the bits in the ISR register. POWER UP=all 0s. Setting individual bits will enable the corresponding interrupts.

**DCR:** Data Configuration Register (0EH; Type=W in Page0, Type=R in Page2)

| Bit  | Symbol   | Description   |
|------|----------|---|
| 7    | -        | Always 1  |
| 6, 5 | FT1, FT0 | FIFO threshold select bit 1 and 0.                                    |
| 4    | ARM      | Auto-initialize Remote  |
|      |          | 0: Send Packet Command not executed.                                  |
|      |          | 1: Send Packet Command executed.                                      |
| 3    | LS       | Loopback Select   |
|      |          | 0: Loopback mode selected. Bits 1 and 2 of the TCR must also be       |
|      |          | programmed for Loopback operation.                                    |
|      |          | 1: Normal Operation   |
| 2    | LAS      | This bit must be set to zero. NIC only supports dual 16-bit DMA mode. |
|      |          | POWER UP =1   |
| 1    | BOS      | Byte Order Select (Not implement)                                     |
|      |          | 0: MS byte placed on MD15-8 and LS byte on MD7-0. (32xxx,80x86)       |
|      |          | 1: MS byte placed on MD7-0 and LS byte on MD15-8. (680x0)             |
| 0    | WTS      | Word Transfer Select  |
|      |          | 0: byte-wide DMA transfer   |
|      |          | 1: word-wide DMA transfer   |

**TCR:** Transmit Configuration Register (0DH; Type=W in Page0, Type=R in Page2)

| Bit  | Symbol   |        |                           |               | Des           | cription    |                          |                    |  |  |  |
|------|----------|--------|---------------------------|---------------|---------------|-------------|--------------------------|--------------------|--|--|--|
| 7    | -        | Alway  | Always 1                  |               |               |             |                          |                    |  |  |  |
| 6    | -        | Alway  | Always 1                  |               |               |             |                          |                    |  |  |  |
| 5    | -        | Alway  | /s 1                      |               |               |             |                          |                    |  |  |  |
| 4    | OFST     | Collis | ion Offset Er             | iable.        |               |             |                          |                    |  |  |  |
| 3    | ATD      | Auto ' | Transmit Dis              | able.         |               |             |                          |                    |  |  |  |
|      |          |        | mal operation             |               |               |             |                          |                    |  |  |  |
|      |          |        |                           |               |               |             | sables transmitter,      |                    |  |  |  |
|      |          | rec    | eption of mul             | ticast addres | ss hashing to | bit 63 en   | ables transmitter.       |                    |  |  |  |
| 2, 1 | LB1, LB0 | l .    |                           |               |               |             |                          | _                  |  |  |  |
|      |          |        | LB1                       | LB0           | Mode          |             | Remark                   |                    |  |  |  |
|      |          |        | 0                         | 0             | 0             | Normal      | Operation                |                    |  |  |  |
|      |          |        | 0                         | 1             | 1             | Internal    | Lookback                 |                    |  |  |  |
|      |          |        | 1                         | 0             | 2             | External    | Lookback                 |                    |  |  |  |
|      |          |        | 1                         | 1             | 3             | External    | Lookback                 |                    |  |  |  |
|      |          |        |                           |               |               |             |                          |                    |  |  |  |
| 0    | CRC      |        |                           |               |               |             | r transmitter and a      |                    |  |  |  |
|      |          |        |                           |               | -             | -           | gic. If this bit set, Cl | RC is inhibited by |  |  |  |
|      |          | transn | nitter. Otherv            | vise CRC is   | appended by   | y transmitt | er.                      |                    |  |  |  |
|      |          |        | Con                       | ditions       |               | CRC Log     | ic Activities            |                    |  |  |  |
|      |          |        | CRC Bit                   | Mode          |               | enerator    | CRC Checker              |                    |  |  |  |
|      |          |        | 0                         | normal        | enabl         | ed          | enabled                  |                    |  |  |  |
|      |          |        | 1 normal disabled enabled |               |               |             |                          |                    |  |  |  |
|      |          |        | 0                         | loopback      | enabl         | ed          | disabled                 |                    |  |  |  |
|      |          |        | 1                         | loopback      |               | led         | enabled                  |                    |  |  |  |
|      |          | ] '    |                           |               |               |             |                          |                    |  |  |  |



**TSR:** Transmit Status Register (04H; Type=R in Page0)
This register indicates the status of a packet transmission.

| Bit | Symbol | Description   |
|-----|--------|---|
| 7   | OWC    | Out of Window Collision. It is set when a collision is detected after a slot time (51.2us). |
|     |        | Transmissions are rescheduled as in normal collisions.                                      |
| 6   | CDH    | CD Heartbeat. The NIC watches for a collision signal (i.e. CD Heartbeat signal) during      |
|     |        | the first 6.4us of the interframe gap following a transmission. This bit is set if the      |
|     |        | transceiver fails to send this signal.  |
| 5   | -      | Always 1.   |
| 4   | CRS    | Carrier Sense lost bit is set when the carrier is lost during transmitting a packet.        |
| 3   | ABT    | It indicates the NIC aborted the transmission because of excessive collisions.              |
| 2   | COL    | It indicates the transmission collided with some other station on the network.              |
| 1   | -      | Always 1  |
| 0   | PTX    | This bit indicates the transmission completes with no errors.                               |

## **RCR:** Receive Configuration Register (0CH; Type=W in Page0, Type=R in Page2)

| Bit | Symbol | Description  |
|-----|--------|--|
| 7   | ı      | Always 1   |
| 6   | ı      | Always 1   |
| 5   | MON    | When monitor mode bit is set, received packets are checked for address match, good CRC |
|     |        | and frame alignment but not buffered to memory. Otherwise, packets will be buffered to |
|     |        | memory.  |
| 4   | PRO    | If PRO=1, all packets with physical destination address accepted.                      |
|     |        | If PRO=0, physical destination address must match the node address programmed in       |
|     |        | PAR0-5.  |
| 3   | AM     | If AM=1, packets with multicast destination address are accepted.                      |
|     |        | If AM=0, packets with multicast destination address are rejected.                      |
| 2   | AB     | If AB=1, packets with broadcast destination address are accepted.                      |
|     |        | If AB=0, packets with broadcast destination address are rejected.                      |
| 1   | AR     | If AR=1, packets with length fewer than 64 bytes are accepted.                         |
|     |        | If AR=0, packets with length fewer than 64 bytes are rejected.                         |
| 0   | SEP    | If SEP=1, packets with receive errors are accepted.                                    |
|     |        | If SEP=0, packets with receive errors are rejected.                                    |

## **RSR:** Receive Status Register (0CH; Type=R in Page0)

| Symbol | Description  |
|--------|--|
| DFR    | Defferring. Set when a carrier or a collision is detected.                                   |
| DIS    | Receiver Disabled. When the NIC enters the monitor mode, this bit is set and receiver is     |
|        | disabled. Reset when receiver is enabled after leaving the monitor mode.                     |
| PHY    | PHY bit is set when the received packet has a multicast or broadcast destination address. It |
|        | is reset when the received packet has a physical destination address.                        |
| MPA    | Missed Packet bit is set when the incoming packet can not be accepted by NIC because of      |
|        | a lack of receive buffer or if NIC is in monitor mode. Increment CNTR2 tally counter.        |
| ı      | Always 1.  |
| FAE    | Frame Alignment Error bit reflects the incoming packet didn't end on a byte boundary         |
|        | and CRC did not match at last byte boundary. Increment CNTR0 tally counter.                  |
| CRC    | CRC error bit reflects packet received with CRC error. This bit will also be set for FAE     |
|        | errors. Increment CNTR1 tally counter.   |
| PRX    | This bit indicates packet received with no errors.   |
|        | DFR DIS PHY MPA - FAE CRC  |

**CLDA0, 1:** Current Local DMA Registers (01H & 02H; Type=R in Page0)

These two registers can be read to get the current local DMA address.



**PSTART:** Page Start Register (01H; Type=W in Page0, Type=R in Page 2)

The Page Start register sets the start page address of the receive buffer ring.

**PSTOP:** Page Stop Register (02H; Type=W in Page0, Type=R in Page2)

The Page Stop register sets the stop page address of the receive buffer ring. In 8 bit mode the PSTOP register should not exceed to 0x60, in 16 bit mode the PSTOP

register should not exceed to 0x80.

**BNRY:** Boundary Register (03H; Type=R/W in Page0)

This register is used to prevent overwrite of the receive buffer ring. It is typically

used as a pointer indicating the last receive buffer page the host has read.

**TPSR:** Transmit Page Start Register (04H; Type=W in Page0)

This register sets the start page address of the packet to the transmitted.

**TBCR0,1:** Transmit Byte Count Registers (05H & 06H; Type=W in Page0)

These two registers set the byte counts of the packet to be transmitted.

**NCR:** Number of Collisions Register (05H; Type=R in Page0)

The register records the number of collisions a node experiences during a packet

transmission.

**FIFO:** First In First Out Register (06H; Type=R in Page0)

This register allows the host to examine the contents of the FIFO after loopback.

**CRDA0, 1:** Current Remote DMA Address registers (08H & 09H; Type=R in Page0)

These two registers contain the current address of remote DMA.

**RSAR0,1:** Remote Start Address Registers (08H & 09H; Type=W in Page0)

These two registers set the start address of remote DMA.

**RBCR0,1:** Remote Byte Count Registers (0AH & 0BH; Type=W in Page0)

These two registers se the data byte counts of remote DMA.

**CNTR0:** Frame Alignment Error Tally Counter Register (0DH; Type=R in Page0)

**CNTR1:** CRC Error Tally Counter Register (0EH; Type=R in Page0)

**CNTR2:** Missed Packet Tally Counter Register (0FH; Type=R in Page0)

**PAR0-5:** Physical Address Registers (01H - 06H; Type=R/W in Page1)

These registers contain my Ethernet node address and are used to compare the

destination adderss of incoming packets for acceptation or rejection.

**CURR:** Current Page Register (07H; Type=R/W in Page1)

This register points to the page address of the first receive buffer page to be used for

a packet reception.



MAR0-7: Multicast Address Register (08H - 0FH; Type=R/W in Page1)
These registers provide filtering bits of multicast addresses hashed by the CRC logic.

## 5.1.2.2. RTL8019AS Defined Registers

#### Page 0 (PS1=0, PS0=0)

Two registers are defined to contain the RTL8019AS chip ID.

| No. | Name Type |   | Bit7-0                  |  |  |
|-----|-----------|---|-------------------------|--|--|
| 0AH | 8019ID0   | R | 50H (ASCII code of "P") |  |  |
| 0BH | 8019ID1   | R | 70H (ASCII code of "p") |  |  |

#### Page 3(PS1=1, PS0=1)

#### Page3 Power Up Values before loading jumper states and 9346 contents

| No. | Name    | Type | Bit 7 | Bit 6 | Bit 5 | Bit 4 | Bit 3 | Bit 2 | Bit 1 | Bit 0 |
|-----|---------|------|-------|-------|-------|-------|-------|-------|-------|-------|
| 00H | CR      | R/W  | 0     | 0     | 1     | 0     | 0     | 0     | 0     | 1     |
| 01H | 9346CR  | R/W  | 0     | 0     | -     | -     | *     | *     | *     | *     |
| 02H | BPAGE   | R/W  | 0     | 0     | 0     | 0     | 0     | 0     | 0     | 0     |
| 03H | CONFIG0 | R/W  | 0     | 0     | *     | *     | *     | *     | 0     | 0     |
| 04H | CONFIG1 | R/W  | 1     | *     | *     | *     | *     | *     | *     | *     |
| 05H | CONFIG2 | R/W  | *     | *     | 0     | *     | *     | *     | *     | *     |
| 06H | CONFIG3 | R/W  | *     | *     | *     | *     | *     | 0     | 0     | 1     |
| 07H | TEST    | R/W  | -     | -     | -     | -     | -     | -     | -     | -     |
| 08H | CSNSAV  | R    | 0     | 0     | 0     | 0     | 0     | 0     | 0     | 0     |
| 09H | HLTCLK  | W    | 1     | 1     | 1     | 1     | 1     | 1     | 1     | 1     |
| 0AH | -       |      |       |       |       |       |       |       |       |       |
| 0BH | INTR    | R    | *     | *     | *     | *     | *     | *     | *     | *     |
| 0CH | FMWP    | W    |       |       |       |       |       |       |       |       |
| 0DH | CONFIG4 | R    | -     | -     | -     | -     | -     | -     | -     | *     |
| 0EH | -       |      |       |       |       |       |       |       |       |       |
|     |         |      |       |       |       |       |       |       |       |       |
| 0FH |         |      |       |       |       |       |       |       |       |       |



## **Page3 Content Descriptions**

9346CR: 9346 Command Register (01H; Type=R/W except Bit0=R)

| Bit | Symbol |       |             |              | Description                                     |  |  |  |  |  |  |  |
|-----|--------|-------|-------------|--------------|---|--|--|--|--|--|--|--|
| 7-6 | EEM1-0 | These | 2 bits sele | ect the RTI  | L8019AS operating mode.                         |  |  |  |  |  |  |  |
|     |        |       |             |              |   |  |  |  |  |  |  |  |
|     |        |       | EEM1        | EEM0         | Operating Mode                                  |  |  |  |  |  |  |  |
|     |        |       | 0           | 0            | Normal (DP8390 compatible)                      |  |  |  |  |  |  |  |
|     |        |       | 0           | 1            | Auto-load:                                      |  |  |  |  |  |  |  |
|     |        |       |             |              | Entering this mode will make the RTL8019AS      |  |  |  |  |  |  |  |
|     |        |       |             |              | load the contents of 9346 like when the         |  |  |  |  |  |  |  |
|     |        |       |             |              | RSTDRV signal is asserted.                      |  |  |  |  |  |  |  |
|     |        |       |             |              | This auto-load operation will take about 2ms.   |  |  |  |  |  |  |  |
|     |        |       |             |              | After it is completed, the RTL8019AS goes back  |  |  |  |  |  |  |  |
|     |        |       |             |              | to the normal mode automatically                |  |  |  |  |  |  |  |
|     |        |       |             |              | (EEM1=EEM0 =0) and the CR register is reset     |  |  |  |  |  |  |  |
|     |        |       |             |              | to 21H.   |  |  |  |  |  |  |  |
|     |        |       | 1           | 0            | 9346 programming:                               |  |  |  |  |  |  |  |
|     |        |       |             |              | In this mode, both the local & remote DMA       |  |  |  |  |  |  |  |
|     |        |       |             |              | operation of 8390 are disabled. The 9346 can be |  |  |  |  |  |  |  |
|     |        |       |             |              | directly accessed via bit3-0 which now reflect  |  |  |  |  |  |  |  |
|     |        |       |             |              | the states of EECS, EESK,EEDI, & EEDO pins      |  |  |  |  |  |  |  |
|     |        |       |             |              | respectively.                                   |  |  |  |  |  |  |  |
|     |        |       | 1           | 1            | Config register write enable:                   |  |  |  |  |  |  |  |
|     |        |       |             |              | Before writing to the Page3 CONFIG1-3           |  |  |  |  |  |  |  |
|     |        |       |             |              | registers, the RTL8019AS must be placed in this |  |  |  |  |  |  |  |
|     |        |       |             |              | mode. This will prevent RTL8019AS's             |  |  |  |  |  |  |  |
|     |        |       |             |              | configurations from accidental change.          |  |  |  |  |  |  |  |
| 5-4 | _      | Not u | sed.        |              |   |  |  |  |  |  |  |  |
| 3   | EECS   | -     |             | et the state | of EECS, EESK, EEDI & EEDO pins in auto-load or |  |  |  |  |  |  |  |
| 2   | EESK   |       | programm    |              |   |  |  |  |  |  |  |  |
| 1   | EEDI   | 1 .0  | r 25        |              |   |  |  |  |  |  |  |  |
| 0   | EEDO   | 1     |             |              |   |  |  |  |  |  |  |  |

BPAGE: BROM Page Register (02H; Type=R/W)

This register selects a BROM page to be read by the host. Totally it can select 256 pages with 16k bytes per page. Thus the maximum BROM size is 256\*16k=4M bytes.



## CONFIG0: RTL8019AS Configuration Register 0 (03H; Type=R except Bit[7:6]=R/W)

| Bit | Symbol | Description   |   |             |   |  |  |  |
|-----|--------|---|---|-------------|---|--|--|--|
| 7-6 | VERID  | Version ID: Th  | ese two b   | its are def | ined as below.  |  |  |  |
|     |        | Bit7  | Bit6  | Type        | Mode  |  |  |  |
|     |        | 1   | 1   | R           | RTL8019   |  |  |  |
|     |        | 0   | 0   | R           | RTL8019A  |  |  |  |
|     |        | 0   | 0   | R/W         | RTL8019AS, these two bits are all "0"                 |  |  |  |
|     |        |   |   |             | when power on, but can be written in                  |  |  |  |
|     |        |   |   |             | RTL8019AS's config write enable                       |  |  |  |
|     |        |   |   |             | mode (EEM0=EEM1=1). Software uses                     |  |  |  |
|     |        |   |   |             | these differences to identify the chip.               |  |  |  |
|     |        |   |   |             |   |  |  |  |
| 5   | AUI    | This bit is set v   | This bit is set when external MAU is used on AUI interface. Therefore it is set when in |             |   |  |  |  |
|     |        | 10Base5 mode  | 10Base5 mode or the AUI input pin is high.  |             |   |  |  |  |
| 4   | PNPJP  | This bit is set v   | when PNP  | jumper p    | in is pulled high externally.                         |  |  |  |
| 3   | JP     | This bit reflect  | s the state   | of JP inp   | out. It, when set, indicates the RTL8019 is in jumper |  |  |  |
|     |        | mode.   |   |             |   |  |  |  |
| 2   | BNC    | When set, this  | When set, this bit indicates that the RTL8019 is using the 10Base2 thin cable as its    |             |   |  |  |  |
|     |        | networking medium. This bit will be set in the following 2 cases: |   |             |   |  |  |  |
|     |        | (1) PL1=PL0=  | (1) PL1=PL0=0 (auto-detect) and link test fails   |             |   |  |  |  |
|     |        | (2) PL1=PL0=  | 1 (10 Base  | 2)          |   |  |  |  |
| 1-0 | 0      | Always 0s.  |   |             |   |  |  |  |

The following table describes the behavior of bits and pins for cabling media.

| Media Type               | AUI Input | Selected<br>Media | AUI Bit | BNC Bit | LEDBNC<br>Output | Original BNC bit in 8019<br>(For reference only) |
|--------------------------|-----------|-------------------|---------|---------|------------------|--|
| 10Base5                  | X         | AUI               | 1       | 0       | L                | 0  |
| 10Base2                  | X         | BNC               | 0       | 1       | Н                | 1  |
| 10BaseT<br>Link disabled | X         | UTP               | 0       | 0       | L                | 0  |
| Auto detect<br>Link OK   | X         | UTP               | 0       | 0       | L                | 0  |
| Auto detect<br>Link fail | L         | BNC               | 0       | 1       | Н                | 1  |
| Auto detect<br>Link fail | Н         | AUI               | 1       | 0       | L                | 1  |



## CONFIG1: RTL8019AS Configuration Register 1 (04H; Type=R except Bit7=R/W)

| Bit | Symbol  |                |   | <u> </u>    | Description  |            |                |           |            |  |
|-----|---------|----------------|---|-------------|--------------|------------|----------------|-----------|------------|--|
| 7   | IRQEN   | IRQ Enable:    |   |             |              |            |                |           |            |  |
|     |         | This bit contr | rols the state  | of the inte | errupt reque | st line se | lected by IRQ  | S2-0. If  | this bit   |  |
|     |         | is set, the in |   |             |              |            |                |           |            |  |
|     |         | there is no in | terrupt reque   | est.        |              |            |                |           |            |  |
|     |         | The interrupt  |   |             |              |            |                |           |            |  |
|     |         |                | This bit's power-up initial value is 1 and may be modified by software if |             |              |            |                |           |            |  |
|     |         | EEM1=EEM       | 0=1 in 93460  | CR register | r <b>.</b>   |            |                |           |            |  |
| 6-4 | IRQS2-0 | IRQ Select:    |   |             |              |            |                |           |            |  |
|     |         | These 3 bits   |   |             |              | RTL8019    | 9AS's interruj | pt reques | st status. |  |
|     |         | All unselecte  | d interrupt li  | nes will be | tri-stated.  |            |                |           |            |  |
|     |         | IDOS2          | IDOC1   | IDOGO       | T 4          | 4 T !      | A 1 TC         | A IDO     |            |  |
|     |         | IRQS2          |   | IRQS0       | Interrup     |            | Assigned IS    | AIKŲ      |            |  |
|     |         | 0              | 0   | 0           | INT          |            | IRQ2/9         |           |            |  |
|     |         | 0              | 0   | 1           | INT          |            | IRQ3           |           |            |  |
|     |         | 0              | 1   | 0           | INT          |            | IRQ4           |           |            |  |
|     |         | 0              | 1   | 1           | INT          |            | IRQ5           |           |            |  |
|     |         | 1              | 0   | 0           | INT<br>INT   |            | IRQ10          |           |            |  |
|     |         | 1              | 1   | 0           | INT          |            | IRQ11<br>IRQ12 |           |            |  |
|     |         | 1              | 1   | 1           | INT          |            | IRQ12<br>IRQ15 |           |            |  |
|     |         |                | 1   | 1           | 1111         | /          | IKQ13          |           |            |  |
| 3-0 | IOS3-0  | Select I/O bas | se address.   |             |              |            |                |           |            |  |
|     |         |                |   |             |              |            |                |           |            |  |
|     |         | IOS            | 3 IOS2  | IOS1        | IOS0         | I/O        | Base           |           |            |  |
|     |         | 0              | 0   | 0           | 0            | 3          | 800H           |           |            |  |
|     |         | 0              | 0   | 0           | 1            | 3          | 320H           |           |            |  |
|     |         | 0              | 0   | 1           | 0            | 3          | 340H           |           |            |  |
|     |         | 0              | 0   | 1           | 1            | (3)        | 860H           |           |            |  |
|     |         | 1              | 0   | 0           | 0            |            | 880H           |           |            |  |
|     |         | 1              | 0   | 0           | 1            |            | A0H            |           |            |  |
|     |         | 1              | 0   | 1           | 0            |            | C0H            |           |            |  |
|     |         | 1              | 0   | 1           | 1            |            | E0H            |           |            |  |
|     |         | 0              | 1   | 0           | 0            |            | 200H           |           |            |  |
|     |         | 0              | 1   | 0           | 1            |            | 220H           |           |            |  |
|     |         | 0              | 1   | 1           | 0            |            | 240H           |           |            |  |
|     |         | 0              | 1   | 1           | 1            |            | 260H           |           |            |  |
|     |         | 1              | 1   | 0           | 0            |            | 280H           |           |            |  |
|     |         | 1              | 1   | 0           | 1            |            | A0H            |           |            |  |
|     |         | 1              | 1   | 1           | 0            |            | СОН            |           |            |  |
|     |         | 1              | 1   | 1           | 1            | 2          | EOH            |           |            |  |
|     |         |                |   |             |              |            |                |           |            |  |



## CONFIG2: RTL8019AS Configuration Register 2 (05H; Type=R except Bit[7:5]=R/W)

| Bit | Symbol |        |          |         |          |          | Des     | scription   |
|-----|--------|--------|----------|---------|----------|----------|---------|---|
| 7-6 | PL1-0  | Select | t netwo  | rk med  | lium ty  | pes.     |         |   |
|     |        |        | PL1      |         | PL0      | Me       | dium T  | Гуре  |
|     |        |        | 0        |         | 0        | TP/CX    |         |   |
|     |        |        |          |         |          | (10Base  |         |   |
|     |        |        |          |         |          | enabled  | 1)      |   |
|     |        |        | 0        |         | 1        | 10Base   | T with  | link test   |
|     |        |        |          |         |          | disable  |         |   |
|     |        |        | 1        |         | 0        | 10Base   |         |   |
|     |        |        | 1        |         | 1        | 10Base   | 2       |   |
| 5   | BSELB  | This b | oit, whe | n set,  | forces   | the BRC  | OM disa | abled regardless of the contents of BS4-0. Its  |
|     |        |        |          |         | lue is 0 | and car  | n be mo | odified by software if EEM1=EEM0=1 in   |
|     |        | 93460  | CR regi  | ster.   |          |          |         |   |
| 4-0 | BS4-0  | These  | bits sel | ect the | BRON     | M size & | memo    | ory base address.   |
|     |        |        | BS4      | BS3     | BS2      | BS1      | BS0     | BROM Base & size  |
|     |        |        | 0        | 0       | *        | *        | *       | Disabled  |
|     |        |        | 0        | 1       | 0        | 0        | 0       | C000h, 32K  |
|     |        |        | 0        | 1       | 0        | 0        | 1       | C800h, 32K  |
|     |        |        | 0        | 1       | 0        | 1        | 0       | D000h, 32K  |
|     |        |        | 0        | 1       | 0        | 1        | 1       | D800h, 32K  |
|     |        |        | 0        | 1       | 1        | 0        | 0       | C000h, 64K  |
|     |        |        | 0        | 1       | 1        | 0        | 1       | D000h, 64K  |
|     |        |        | 1        | 0       | 0        | 0        | 0       | C000h, 16K  |
|     |        |        | 1        | 0       | 0        | 0        | 1       | C400h, 16K  |
|     |        |        | 1        | 0       | 0        | 1        | 0       | C800h, 16K  |
|     |        |        | 1 1      | 0       | 0<br>1   | 1<br>0   | 1<br>0  | CC00h, 16K<br>D000h, 16K  |
|     |        |        | 1        | 0       | 1        | 0        | 1       | D400h, 16K  |
|     |        |        | 1        | 0       | 1        | 1        | 0       | D800h, 16K  |
|     |        |        | 1        | 0       | 1        | 1        | 1       | DC00h, 16K  |
|     |        |        | 1        | 1       | 0        | 0        | 0       | C000h, Page   |
|     |        |        | 1        | 1       | 0        | 0        | 1       | C400h, Page   |
|     |        |        | 1        | 1       | 0        | 1        | 0       | C800h, Page   |
|     |        |        | 1        | 1       | 0        | 1        | 1       | CC00h, Page   |
|     |        |        | 1        | 1       | 1        | 0        | 0       | D000h, Page   |
|     |        |        | 1        | 1       | 1        | 0        | 1       | D400h, Page   |
|     |        |        | 1        | 1       | 1        | 1        | 0       | D800h, Page   |
|     |        |        | 1        | 1       | 1        | 1        | 1       | DC00h, Page   |
|     |        | BRO    |          | ys occi | upies 1  |          |         | ROM mode: page mode. In page mode, the nemory space. However the actual BROM size             |
|     |        | page   | 0 and    | the pr  | ogram    |          | e 0 is  | -byte pages. The power on boot page is set to responsible to select the other pages by the s. |
|     |        | the p  | roper B  | ROM     | page.    |          | er mode | gister are mapped to the BA21-14 pins to select es, BA21-16 are not used and the BA15-14.     |

20



| BROM size | BA14 BA15 |
|-----------|-----------|
| 16K       | high high |
| 32K       | SA14 high |
| 64K       | SA14 SA15 |

## CONFIG3: RTL8019AS Configuration Register 3 (06H; Type=R except Bit[2:1]=R/W)

| Bit | Symbol  |  |   | Des       | scription |          |                    |  |
|-----|---------|--|---|-----------|-----------|----------|--------------------|--|
| 7   | PNP     | RTL8019AS  | This bit is negligible in jumper mode. In jumperless mode it, when set, indicates the RTL8019AS is operating in Plug and Play mode. This bit is set when the PNP pin is   |           |           |          |                    |  |
|     | ETIDLID |  | high or the PNP bit in 9346 is set in jumperless mode.  When this bit is set, RTL8019AS is set to the full-duplex mode which enables  |           |           |          |                    |  |
| 6   | FUDUP   |  |   |           |           |          | k to a full-duplex |  |
|     |         |  |   |           |           |          | el bandwidth from  |  |
|     |         |  | •   |           | •         |          | due to the channel |  |
|     |         |  | naracteristics of the   | _         |           |          | due to the chamier |  |
| 5-4 | LEDS1-0 |  | ts select the output  |           |           | 1        |                    |  |
|     |         |  | •   |           | •         |          | _                  |  |
|     |         |  | LEDS0   |           |           | LED0 Pin |                    |  |
|     |         |  | 0   |           | LED       | _COL     |                    |  |
|     |         |  | 1   |           | LED       | _LINK    |                    |  |
|     |         |  |   |           |           |          | 1                  |  |
|     |         |  | LEDS1   | LED       | 1 Pin     | LED2 Pin |                    |  |
|     |         |  | 0   | LED_      |           | LED_TX   |                    |  |
|     |         |  | 1   | LED_      | CRS       | MCSB     |                    |  |
|     |         | The MCSB   | so section 6.5 for the signal is defined to in progress and thus  | o put the | local bu  |          | andby mode while   |  |
| 3   | -       | Reserved. M  | ust not write a 1 to  | this bit. |           |          |                    |  |
| 2   | SLEEP   | In sleep mod<br>are forced h<br>transmission<br>bit.<br>This bit's p<br>EEM1=EEM   | This bit, when set, puts RTL8019AS into sleep mode.  In sleep mode, all LED signals (P.S. MCSB is not an LED signal) except LEDBNC are forced high to turn off the LEDs. The RTL8019AS still handles the network transmission and reception like in normal mode. The LEDBNC is not affected by this bit.  This bit's power-up initial value is 0 and can be modified by software when |           |           |          |                    |  |
| 1   | PWRDN   | EEM1=EEM0=1.  This bit, when set, puts RTL8019AS into power down mode.  RTL8019AS supports two kinds of power down modes, which is selected by the contents of the HLTCLK register: (1) mode 1: power down with clock running (2) mode 2: power down with clock halted In both power down modes, the RTL8019AS's serial network interface and transceiver are turned off. All network activities are ignored.  All LED signals except LEDBNC are forced high. The LEDBNC is forced low to disable the DC convertor for coaxial transceiver.  In power down mode2, the RTL8019AS stops its internal clock for minimal power consumption. Registers except HLTCLK are typically not accessible in this mode.  This bit's initial value comes from 9346 and can be modified if EEM1=EEM0=1 in |   |           |           |          |                    |  |



| 0 | ACTIVEB | This bit is the inverse of bit 0 in PnP Activate register (index 30H).        |
|---|---------|---|
|   |         | When RTL8019AS is deactivated, all BROM memory read and I/O accesses to the   |
|   |         | Group1 registers except the HLTCLK register are ignored.                      |
|   |         | The HLTCLK register and PnP logic work the same as when RTL8019AS is active.  |
|   |         | Note: The PnP logical device control register is the only way to activate     |
|   |         | RTL8019AS. Therefore, the HLTCLK register is allowed to be written to prevent |
|   |         | RTL8019AS from dying when it is inactive in the clock-halted power-down mode. |

#### CONFIG4 RTL8019AS Configuration Register 4 (0DH; Type=R)

| Bit | Symbol | Description  |
|-----|--------|--|
| 7-1 | -      | Reserved   |
| 0   | IOMS   | When this bit is set, RTL8019AS uses SA15-SA0 to decode I/O address of NE2000 registers. When this bit is reset, RTL8019AS only decodes SA9-SA0 like the RTL8019 does. This mode is supported for applications which might require to fully decode I/O address. This bit is read-only and comes from the CONFIG4 byte(Offset 03H) of 9346(refer to section 6.3). |

CSNSAV: CSN Save Register (08H; Type=R)

This register is provided to backup the CSN assigned to the PnP CSN register.

HLTCLK: Halt Clock Register (09H; Type=W)

This is the only active one of Group1 registers when RTL8019AS is inactivated.

Writing to this register is invalid if RTL8019AS is not in power down mode. (i.e. If PWRDN bit in CONFIG3 register is zero.)

The data written to this register determines the RTL8019AS's power down mode.

| Data                    | Power Down Mode                |
|-------------------------|--------------------------------|
| 52H (ASCII code of 'R') | Mode 1 - clock <b>R</b> unning |
| 48H (ASCII code of 'H') | Mode 2 - clock <b>H</b> alted  |
| Other values            | Ignored                        |

INTR: Interrupt Register (0BH; Type=R)

This register reflects the ISA bus states of INT7-0 pins.

FMWP: Flash Memory Write Protect Register (0Ch, Type=W)

This register is write only. A write to this register is valid only when EEM0=EEM1=1. Sequentially writing 2 bytes of data (57H then A8H) to this register enables the flash memory write operation. Writing other data to this register will reset the write sequence and disable the flash write. All flash memory write commands from host are ignored if the write operation is not enabled.



#### 5.2. Group 2: Plug and Play (PnP) Registers

#### **Auto-configuration Ports**

Three 8-bit I/O ports are defined for the PnP read/write operations. They are called Auto-configuration ports and are listed below.

| Port Name  | Type | Location                          |
|------------|------|-----------------------------------|
| ADDRESS    | W    | 279H (Printer status port)        |
| WRITE_DATA | W    | A79H (Printer status port + 800H) |
| READ_DATA  | R    | Relocatable in range 200H to 3FFH |

The Plug and Play registers are accessed by first writing the address of the desired register, which is called "*Register Index*" in the following paragraph, to the ADDRESS port, followed by a read of data from the READ\_DATA port or a write of data to the WRITE\_DATA port. A write to the ADDRESS port may be followed by any number of WRITE\_DATA or READ\_DATA accesses to the same indexed register without the need to write to the ADDRESS port before each access.

The Address port is also the write destination of the initiation key, which will be described later.

#### **Plug and Play Registers**

The Plug and Play registers may be divided into card registers and logical device registers. According to the Plug and Play specification, a PnP card may contain more than one logical devices. The card registers are unique for each card. However, the logical device registers are repeated for each logical device on the card. Furthermore, all card registers are card control registers, while the logical device registers can be divided into logical device control registers and configuration registers. Although an RTL8019AS card contains only one logical device, the following paragraph still depicts the Plug and Play registers by the same PnP categorizing method.

23

p.s. Those registers or bits not mentioned below are all read only with value=0.



## **5.2.1. Card Control Registers**

| Index | Name                        | Type | Definition   |
|-------|-----------------------------|------|--|
| 00H   | Set RD_DATA port            | W    | The location of the READ_DATA port is determined by writing to   |
|       |                             |      | this register. Bits[7:0] become ISA I/O read port address bits[9:2].   |
|       |                             |      | Address bits[1:0] of the READ_DATA port are always 1.  |
| 01H   | Serial Isolation            | R    | A read to this register causes a PnP card in the <i>Isolation</i> state to compare one bit of the card's serial ID. This process will be described in more details in section 6.   |
| 02H   | Config Control              | W    | Bit[0] - Reset command Setting this bit will reset all logical devices and restore configuration registers to their power-up values. The CSN is preserved.  Bit[1] - Wait for Key command Setting this bit makes the Pap good return to the  |
|       |                             |      | Setting this bit makes the PnP card return to the Wait for Key state. The CSN is preserved.  |
|       |                             |      | Bit[2] - PnP Reset CSN command Setting this bit will reset the card's CSN to 0. Both the CSN (index 06H) and CSNSAV (index F5H) registers are reset.   |
|       |                             |      | Note that the hardware will automatically clear the bits and there is no need for software to clear them.  |
| 03H   | Wake[CSN]                   | W    | A write to this register will cause all cards that have a CSN that matches the write data[7:0] to go from the <i>Sleep</i> state to either the <i>Isolation</i> state if the write data for this command is zero or the <i>Config</i> state if the write data is not zero.   |
| 04H   | Resource Data               | R    | A read from this register reads the next byte of resource data. The Status register must be polled until bit[0] is set before this register may be read.   |
| 05H   | Status                      | R    | Bit[0] when set indicates it is okay to read the next data byte from the Resource Data register.   |
| 06H   | Card Select Number<br>(CSN) | R/W  | A write to this register sets a card's CSN. The CSN is a value uniquely assigned to each ISA PnP card after the serial identification process so that each card may be individually selected during a Wake[CSN] command. The CSN value written to this register will also be recorded to the CSNSAV register located at PnP register index F5H and Group 1 Page3 offset 08H. |
| 07H   | Logical Device<br>Number    | R    | 00H (Only one logical device in RTL8019AS).  |



## **5.2.2.** Logical Device Control Registers

| Index | Name            | Type | Definition   |
|-------|-----------------|------|--|
| 30H   | Activate        | R/W  | For each logical device there is one Activate register that controls           |
|       |                 |      | whether or not the logical device is active on the ISA bus. Bit[0], if set,    |
|       |                 |      | activates the logical device. Before a logical device is activated, I/O        |
|       |                 |      | range check must be disabled.  |
| 31H   | I/O Range Check | R/W  | This register is used to perform a conflict check on the I/O port range        |
|       |                 |      | programmed for use by a logical device.  |
|       |                 |      |  |
|       |                 |      | Bit[1] - This bt, when set, enables I/O range check.                           |
|       |                 |      | I/O range check is only valid when the logical device is inactive.             |
|       |                 |      |  |
|       |                 |      | Bit[0] - If set, this bit forces the logical device to respond to I/O reads of |
|       |                 |      | the logical device's assigned I/O range with a 55H when I/O range check        |
|       |                 |      | is in operation. If clear, the logical device drives AAH.                      |

## **5.2.3.** Logical Device Configuration Registers

## **Memory Configuration Registers**

| Index | Name              | Type | Definition   |
|-------|-------------------|------|--|
| 40H   | BROM base address | R/W  | Bits[23:20] & bit[17] are read only with values=0. |
|       | bits[23:16]       |      | All other bits are read/write bits.                |
| 41H   | BROM base address | R/W  | Bits[13:8] are read only with values=0.            |
|       | bits[15:0]        |      | All other bits are read/write bits.                |
| 42H   | Memory Control    | R    | 00H. (Only 8-bit operation is supported for BROM)  |

Note: The BROM size of RTL8019AS is determined by the 9346 contents but not the memory configuration registers.

## I/O Configuration Registers

| Index | Name                        | Type | Definition                               |
|-------|-----------------------------|------|--|
| 60H   | I/O base address bits[15:8] | R/W  | Bits[15:10] are read only with values=0. |
|       |                             |      | All other bits are read/write bits.      |
| 61H   | I/O base address bits[7:0]  | R/W  | Bits[4:0] are read only with values=0.   |
|       |                             |      | All other bits are read/write bits.      |

#### **Interrupt Configuration Registers**

| Index | Name      | Type | Definition  |
|-------|-----------|------|---|
| 70H   | IRQ level | R/W  | Read/write value indicating a selected interrupt level.   |
|       |           |      | Bits[3:0] select which ISA interrupt level is used. One selects IRQ1, fifteen selects IRQ15. IRQ0 is not a valid interrupt selection and represents no interrupt selection. |



| 71H | IRQ type | R | Read/Write value indicating which type of interrupt is used for the IRQ selected above. |
|-----|----------|---|---|
|     |          |   | Bit[1] - Level, 1=high, 0=low<br>Bit[0] - Type, 1=level, 0=edge                         |
|     |          |   | For RTL8019AS, this register is read only with value=02H.                               |

## **DMA Configuration Registers**

| Index | Name                 | Type | Definition                                |
|-------|----------------------|------|---|
| 74H   | DMA channel select 0 | R    | 04H (indicating no DMA channel is needed) |
| 75H   | DMA channel select 1 | R    | 04H (indicating no DMA channel is needed) |

## **Vendor Defined Registers**

| Index | Name           | Type | Definition   |
|-------|----------------|------|--|
| F0H   | CONFIG0        | R    | Direct mapping of the Page3 CONFIG0 register.                              |
| F1H   | CONFIG1        | R    | Direct mapping of the Page3 CONFIG1 register.                              |
| F2H   | CONFIG2        | R    | Direct mapping of the Page3 CONFIG2 register.                              |
| F3H   | CONFIG3        | R    | Direct mapping of the Page3 CONFIG3 register.                              |
| F4H   | -              | -    |  |
| F5H   | CSNSAV         | R    | Direct mapping of the Page3 CSNSAV register.                               |
| F6H   | Vendor Control | W    | Bit[2] - RT Reset CSN command  |
|       |                |      | Setting this bit will reset the card's CSN in the CSN register (index 06H) |
|       |                |      | to 0.  |
|       |                |      | The CSNSAV register is not affected.                                       |
|       |                |      | This bit is cleared by hardware automatically.                             |

26



### **6. Functional Descriptions**

#### **6.1. RTL8019AS Configuration Modes**

The RTL8019AS supports 3 configuration modes: jumper, RT jumperless, and PnP.

| JP Pin | PnP Pin | 9346 Content |            | Mode       | CONFIG0 |       | CONFIG3 |         |
|--------|---------|--------------|------------|------------|---------|-------|---------|---------|
|        |         | PNP          | ACTIVEB    |            | JP      | PNPJP | PNP     | ACTIVEB |
| Н      | Н       | X            | X          | Jumper     | 1       | 1     | 0       | 0       |
|        | L       |              |            |            |         | 0     |         |         |
| L      | Н       | X            | a (a=0or1) | PnP        | 0       | 1     | 1       | a       |
| L      | L       | 1            | a (a=0or1) | PnP        | 0       | 0     | 1       | a       |
| L      | L       | 0            | Х          | RT jmpless | 0       | 0     | 0       | 0       |

P.S. "x" denotes don't care.

The RTL8019AS's resource configuration informations such as I/O base address, BROM memory base address, and interrupt request line, etc., are stored in the CONFIG3-0 registers in Group1 Page3 as well as the PnP logical device configuration registers. Their power-up default values may come from the states of jumper pins in jumper mode or the contents of 9346 in PnP and RT jumperless mode. Their values can be modified by software via the logical device configuration registers in all 3 modes. The update values will be recorded to the CONFIG3-0 registers, too. This new configuration is only valid temporarily and will be lost after an auto-load command, an active RSTDRV, or PC power off . Permanent changes of configuration must be done by changing the jumper states or the contents of 9346. Note that the BROM size can not be modified temporarily.

The Plug and Play logic can work in all the three configuration modes except that an RT defined initiation key, named RT initiation key, should be used instead of the PnP initiation key. In other words, the RT initiation key is supported in all configuration modes while the PnP initiation key is only supported in the PnP mode. By using the RT initiation key, the software can put RTL8019AS to the PnP *Config* state and access the logical device configuration registers even in the jumper and RT jumperless modes.

#### Power up default ACTIVE state

In RTL8019, the ACTIVEB bit in 93C46 decides the power-up adapter status even in RT jumpless mode. In the standard application when BROM is not enabled, the adapter should be power up inactive in PnP mode and active in RT jumperless mode. However RTL8019's PnP jumper only decides the jumperless mode. The adapter's "ACTIVE" status is not changed properly at the same time when the user changes the PnP jumper state. This causes an application inconsistence when PnP jumper is to be used.

In RTL8019AS, we change RTL8019's original specification into:

The ACTIVEB bit in 9346 is ignored when RTL8019AS is in jumper or RT jumperless mode. The adapter's power-up status is always "ACTIVE" in RT jumperless mode. However, the active status still can be changed via the PnP Activate register.



The differences between the 3 configuration modes are shown in the following table.

| Configuration Mode | Resource of Power-up Value | Supported Initiation Key  |
|--------------------|----------------------------|---------------------------|
| Jumper             | Jumper Pins                | RT Initiation Key         |
| RT Jumperless      | 9346                       | RT Initiation Key         |
| Plug and Play      | 9346                       | RT and PnP Initiation Key |

## Initial Values of CONFIG1-3 Registers after RSTDRV or Auto-load Command

## CONFIG1

|               | Bit 7        | Bit 6  | Bit 5  | Bit 4  | Bit 3  | Bit 2  | Bit 1  | Bit 0  |
|---------------|--------------|--------|--------|--------|--------|--------|--------|--------|
| Mode          | <b>IRQEN</b> | IRQS2  | IRQS1  | IRQS0  | IOS3   | IOS2   | IOS1   | IOS0   |
| Jumper        | 1            | jumper |
| RT Jumperless | 1            | 9346   | 9346   | 9346   | 9346   | 9346   | 9346   | 9346   |
| Plug and Play |              |        |        |        |        |        |        |        |

#### CONFIG2

|               | Bit 7  | Bit 6  | Bit 5        | Bit 4  | Bit 3  | Bit 2  | Bit 1  | Bit 0  |
|---------------|--------|--------|--------------|--------|--------|--------|--------|--------|
| Mode          | PL1    | PL0    | <b>BSELB</b> | BS4    | BS3    | BS2    | BS1    | BS0    |
| Jumper        | jumper | jumper | 0            | jumper | jumper | jumper | jumper | jumper |
| RT Jumperless | 9346   | 9346   | 0            | 9346   | 9346   | 9346   | 9346   | 9346   |
| Plug and Play |        |        |              |        |        |        |        |        |

## CONFIG3

|               | Bit 7 | Bit 6        | Bit 5 | Bit 4 | Bit 3 | Bit 2 | Bit 1        | Bit 0   |
|---------------|-------|--------------|-------|-------|-------|-------|--------------|---------|
| Mode          | PNP   | <b>FUDUP</b> | LEDS1 | LEDS0 | -     | SLEEP | <b>PWRDN</b> | ACTIVEB |
| Jumper        | 0     | 9346         | 9346  | 9346  | -     | 0     | 9346         | 9346    |
| RT Jumperless | 0     | 9346         | 9346  | 9346  | -     | 0     | 9346         | 9346    |
| Plug and Play | 1     |              |       |       |       |       |              |         |

#### 6.2. Plug and Play

#### **6.2.1. Initiation Key**

The Plug and Play logic is quiescent on power up and must be enabled by software. This is done by a predefined series of writes (32 I/O writes) to the ADDRESS port, which is called the *initiation key*. The write sequence is decoded by RTL8019AS. If the proper series of I/O writes is detected, then the Plug and Play auto-configuration ports are enabled. The write sequence will be reset and must be issued from the beginning if any data mismatch occurs. The exact sequence for the initiation key is listed below in hexadecimal notation.

#### **PnP Initiation Key**

| 6A, | B5, | DA, | ED, | F6, | FB, | 7D, | BE  |
|-----|-----|-----|-----|-----|-----|-----|-----|
| DF, | 6F, | 37, | 1B, | 0D, | 86, | C3, | 61, |
| B0, | 58, | 2C, | 16, | 8B, | 45, | A2, | D1, |
| E8. | 74, | 3A, | 9D, | CE, | E7, | 73. | 39  |

#### **RT** Initiation Key

```
DA, 6D,
           36,
                 1B.
                       8D,
                             46.
                                   23,
                                        91,
     A4,
           D2,
                 69.
                       34,
                             9A,
                                   4D,
                                         26,
48,
13,
     89,
           44,
                 A2,
                       51,
                             28,
                                   94,
                                         CA,
65,
     32,
           19,
                 0C,
                       86,
                             43,
                                   A1,
                                        50
```



#### 6.2.2. Isolation Protocol

A simple algorithm is used to isolate each Plug and Play card. This algorithm uses the signals on the ISA bus and requires lock-step operation between the Plug and Play hardware and the isolation software.

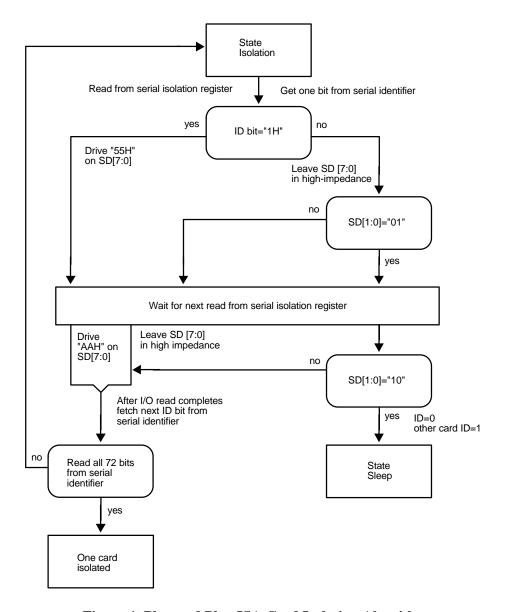


Figure 1. Plug and Play ISA Card Isolation Algorithm



#### **Serial Identifier**

The key element of the Plug and Play isolation protocol is that each card contains a unique number, named *serial identifier*. The serial identifier is a 72-bit unique, non-zero number composed of two 32-bit fields and an 8-bit checksum. The first 32-bit field is a vendor identifier. The other 32-bits can be any value, for example, a serial number, part of a LAN address, or a static number, as long as there will never be two cards in a single system with the same 64-bit number. The serial identifier is accessed bit-serially by the isolation logic and is used to differentiate the cards.

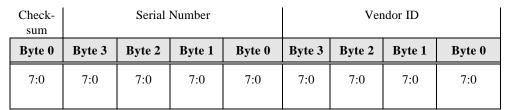




Figure 2. Shifting of Serial Identifier

The shift order for all Plug and Play serial isolation and resource data is defined as bit[0], bit[1], and so on through bit[7].

#### **Hardware Protocol**

The isolation protocol can be invoked by the Plug and Play software at any time. The initiation key described earlier, puts all cards into configuration mode. The hardware on each card expects 72 pairs of I/O read accesses to the READ\_DATA port. The card's response to these reads depends on the value of each bit of the serial identifier which is being examined one bit at a time, in the sequence shown in Figure 1.

If the current bit of the serial identifier is a "1", then the card will drive the data bus to 55H to complete the first I/O read cycle. If the bit is "0", then the card puts its data bus driver into high impedance. All cards in high impedance will check the data bus during the I/O read cycle to sense if another card is driving SD[1:0] to "01". During the second I/O read, the card(s) that drove the 55H, will now drive a AAH. All high impedance card will check the data bus to sense if another card is driving SD[1:0] to "10."

If a high impedance card sensed another card driving the data bus with the appropriate data during both cycles, then that card ceases to participate in the current iteration of card isolation. Such cards, which lose out, will participate in future iterations of the isolation protocol.

NOTE: During each read cycle, the Plug and Play hardware drives the entire 8-bit data bus, but only checks the lower 2 bits.

If a card was driving the bus or if the card was in high impedance and did not sense another card driving the bus, then it should prepare for the next pair of I/O reads. The card shifts the serial identifier by one bit and uses the shifted bit to decide its response.

The above sequence is repeated for the entire 72-bit serial identifier.



At the end of this process, one card remains. This card is assigned a handle referred to as the *Card Select Number* (CSN) that will be used later to select the card. Cards which have been assigned a CSN will not participate in subsequent iterations of the isolation protocol. Cards must be assigned a CSN before they will respond to the other PnP commands.

It should be noted that the protocol permits the 8-bit checksum to be stored in non-volatile memory on the card or generated by the on-card logic in real-time. The checksum algorithm is implemented as a *Linear Feedback Shift Register* (LFSR), which is shown in Figure 3.

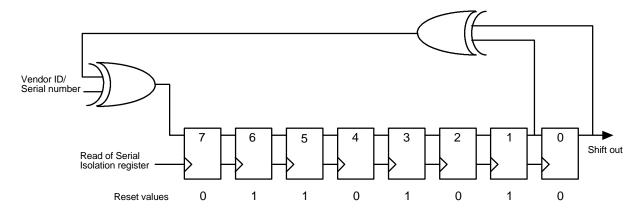


Figure 3. Checksum LFSR

The LFSR resets to 6AH upon receiving the Wake[CSN] command. The next shift value for the LFSR is calculated as LFSR[1] XOR LFSR[0] XOR Serial Data. The LFSR is shifted right one bit at the conclusion of each pair of reads to the Serial Isolation register. LFSR[7] is assigned the next shift value described above.

After the first 64 pairs of reads of the Serial Isolation register, the LFSR will have the value of serial identifier checksum.

Plug and Play cards must not drive the IOCHRDY signal during serial isolation. However, cards may drive IOCHRDY at any other time.

#### **Software Protocol**

The Plug and Play software sends the initiation key to all Plug and Play cards to place them into configuration mode. The software is then ready to perform the isolation protocol.

The Plug and Play software generates 72 pairs of I/O read cycles from the READ\_DATA port. The software checks the data returned from each pair of I/O reads for the 55H or AAH driven by the hardware. If both 55H or AAH are read back, then the software assumes that the hardware had a "1" bit in that position. All other results are assumed to be a "0".

During the first 64 bits, software generates a checksum using the received data. The checksum is compared with the checksum read back in the last 8 bits of the sequence.

32





There are two other special considerations for the software protocol. During an iteration, it is possible that the 55H and AAH combination is never detected. It is also possible that the checksum does not match. If either of these cases occur on the first iteration, it must be assumed that the READ\_DATA port is in conflict. If a conflict is detected, then the READ\_DATA port is relocated. The above process is repeated until a non-conflicting location for the READ\_DATA port is found. The entire range between 200H and 3FFH is available, however in practice it is expected that only a few locations will be tried before software determines that no Plug and Play cards are present.


During subsequent iterations, the occurrence of either of these two special cases should be interpreted as the absence of any further Plug and Play cards (i.e. the last card was found in the previous iteration). This terminates the isolation protocol.

NOTE: The software must delay 1 msec prior to starting the first pair of isolation reads, and must wait 250 msec between each subsequent pair of isolation reads. This delay gives the ISA card time to access information from possibly very slow storage devices.



#### 6.2.3. Plug and Play Isolation Sequence

The Plug and Play isolation sequence is divided into four states: *Wait for Key*, *Sleep*, *Isolation*, and *Config* states. The state transitions for the Plug and Play ISA card are shown below.

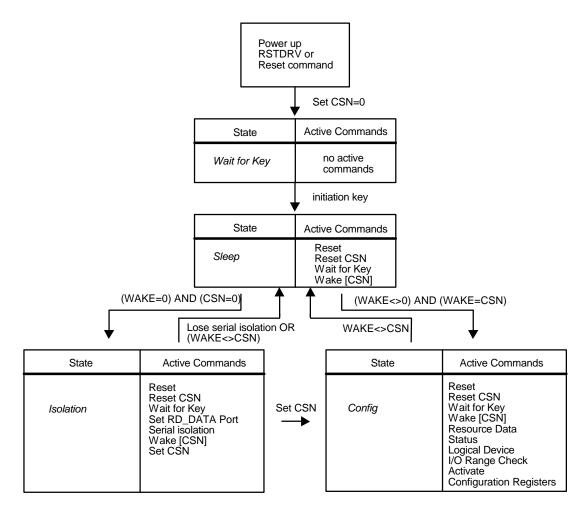

#### NOTES:

- 1. CSN= Card Select Number
- RSTDRV causes a state transition from the current state to Wait for Key and sets all CSNs to zero
- The Wait for Key command causes a state transition from the current state to Wait for Key
- 4. The Reset CSN commands include PnP Reset CSN and RT Reset CSN commands. The former sets all ISA PnP cards' CSNs to zero while the latter only sets RTL8019 PnP cards' CSNs to zero. Both commands do not cause a state transition.

Figure 4. Plug and Play ISA Card State Transitions

34



On power up, all PnP cards detect RSTDRV, set their CSN to 0, and enter the *Wait for Key* state. There is a required 2 msec delay from either a RSTDRV or a PnP Reset command to any Plug and Play port access to allow a card to load initial configuration information from a non-volatile device, which is 9346 for RTL8019AS.

Cards in the *Wait for Key* state do not respond to any access to their auto-configuration ports until the initiation key is detected. Cards ignore all ISA access to their Plug and Play interface.

When the cards have received the initiation key, they enter the *Sleep* state. In this state, the cards listen for a Wake[CSN] command with the write data set to 00H. This wake[CSN] command will send all cards to the *Isolation* state and reset the serial identifier/resource data pointer to the beginning.

The first time the cards enter the *Isolation* state it is necessary to set the READ\_DATA port address using the Set RD\_DATA port command. The software should then verify the selected READ\_DATA port address is not in conflict with any other devices by the isolation protocol.

Next, 72 pairs of reads are performed to the Serial Isolation register to isolate a card as described previously. If the checksum read from the card is valid, then this means one card has been isolated. The isolated card remains in the *Isolation* state while all other cards have failed the isolation protocol and have returned to the *Sleep* state. The CSN on this card is set to a unique number. Writing this value causes this card to transition to the *Config* state. Sending a Wake[0] command causes this card to transition back to *Sleep* state and all cards with a CSN value of zero to transition to the Isolation state. This entire process is repeated until no Plug and Play cards are detected.

#### **6.2.4. Reading Resource Data**

Each PnP card supports a *resource data* structure stored in a non-volatile device (e.g. 9346) to describe the resources supported and those requested by the functions on the card. The Plug and Play resource management software will arbitrate resources and setup the logical device configuration registers according to the resource data.

Card resource data may only be read from cards in the *Config* state. A card may get to the *Config* state by one of two different methods. A card enters the *Config* state in response to the card "winning" the serial isolation protocol and having a CSN assigned. The card also enters the *Config* state in response to receiving a Wake[CSN] command that matches the card's CSN.

As described above, all Plug and Play cards function as if their serial identifier and their resource data both come from the same serial device. As also stated above, the pointer to the serial device is reset in response to any Wake[CSN] command. This implies that if a card enters the *Config* state directly in response to a Wake[CSN] command, the 9-byte serial identifier must be read first before the card resource data is accessed. The Vendor ID and Unique Serial Number is valid; however, the checksum byte, when read in this way, is not valid. A card that enters the *Config* state after the isolation protocol has been run has already accessed all 72 bits of the serial identifier and the first read of the Resource Data register will return resource data.



Card resource data is read by first polling the Status register and waiting for bit[0] to be set. When this bit is set it means that one byte of resource data is ready to be read from the Resource Data register. After the Resource Data register is read, the Status register must be polled before reading the next byte of resource data. This process is repeated until all resource data is read. The format of resource data is described in the following section.

The above operation implies that the hardware is responsible for accumulating 8 bits of data in the Resource Data register. When this operation is complete, the status bit[0] is set. When a read is performed on the Resource Data register, the status bit[0] is cleared, eight more bits are shifted into the Resource Data register, then the status bit[0] is set again.

#### 6.2.5. PnP auto detect mode

When using RTL8019, the user needs to setup the card to PnP or jumperless mode according to the host environments. The typical operating modes of a RTL8019 card include:

- (1) when used in a non-PnP PC, set the card to RT jumperless mode & power-on active
- (2) when used in a PnP PC,
  - (2.1) if BROM disabled, set the card to PnP mode & power-on inactive
  - (2.2) if BROM enabled, set the card to PnP mode & power-on active
- P.S. PCs with PnP BIOS, or Windows 95, or Intel Configuration Manager, etc. are called PnP PCs

If a card in mode(2.1) is put in a non-PnP PC, the drivers will fail to initialize the card. RTL8019AS supports a PnP auto-detect mode to solve the problem. *The card may be set to a default state: PnP mode & power-on active with BROM disabled.* If the card is in a non-PnP PC, it will work like a normal jumperless card. If the card is in a PnP PC which requires the card to be power-on inactive, RTL8019AS will change itself into inactive state when the first time a PnP init key is detected.



## 6.3. 9346 Contents

The 9346 is a 1k-bit EEPROM. Although it is actually addressed by words, we list its contents by bytes below for convenience.

| Bytes     |                               | Contents   | Comments   |
|-----------|-------------------------------|--|--|
| 00Н - 03Н | (4 bytes)                     |  | Power-up initial value of Page3 and PnP logical device configuration registers |
|           | 00H<br>01H<br>02H<br>03H      | CONFIG1<br>CONFIG2<br>CONFIG3<br>CONFIG4                 |  |
| 04H - 11H | <b>(14 bytes)</b>             |  | NE2000 IDPROM  |
|           | 04H - 09H                     | Ethernet ID 0-5  | Ethernet node address  |
|           | 0AH - 11H                     | Product ID 0-7   | Assigned by card makers; negligible  |
| 12H - 1AH | (9 bytes)                     |  | Plug and Play Serial Identifier  |
|           | 12H - 15H<br>16H - 19H<br>1AH | Vendor ID 0-3<br>Serial Number 0-3<br>Serial ID Checksum |  |
| 1BH - 7FH | (101 bytes)                   |  | Plug and Play Resource Data  |

# Detail values of 9346 CONFIG1-3 bytes

|         | Bit 7 | Bit 6 | Bit 5 | Bit 4 | Bit 3 | Bit 2 | Bit 1 | Bit 0   |
|---------|-------|-------|-------|-------|-------|-------|-------|---------|
| CONFIG1 | *     | IRQS2 | IRQS1 | IRQS0 | IOS3  | IOS2  | IOS1  | IOS0    |
| CONFIG2 | PL1   | PL0   | *     | BS4   | BS3   | BS2   | BS1   | BS0     |
| CONFIG3 | PNP   | FUDUP | LEDS1 | LEDS0 | *     | *     | PWRDN | ACTIVEB |

P.S. '\*' denotes don't care.

# Example: Plug and Play Resource Data for RTL8019AS (Total 73+5 bytes)

| TAG | Plug and Play Version Nur<br>Item byte<br>PnP version<br>Vendor version             | nber<br>0AH<br>10H<br>10H                     | Length: fixed                             | 3 bytes                  |
|-----|---|---|---|--------------------------|
| TAG | ANSI Identifier String Item byte Length bits 7-0 Length bits 15-8 Identifier string | 82H<br>22H<br>00H<br>'REALTEK PLU             | Length: variable  JG & PLAY ETHERN        | 37 bytes  TET CARD', 00H |
| TAG | Logical Device ID<br>Item byte<br>Logical device ID0-3<br>Flag 0<br>Flag 1          | 16H<br>4AH, 8CH, 80H<br>02H or 03H (us<br>00H | Length: fixed  1, 19H  e 03H when BROM is | 7 bytes<br>enabled)      |

TAG Compatible Device ID (NE2000 compatible) Length: fixed 5 bytes if given




|     | Item byte<br>Compatible ID0-3  | 1CH<br>41H, D0H, 80H  | , D6H  |                          |
|-----|--|---|--|--------------------------|
| TAG | I/O Format Item byte I/O information Min. I/O base bits 7-0 Min. I/O base bits 15-8 Max. I/O base bits 7-0 Max. I/O base bits 15-8 Base alignment Range length   | 47H<br>00H<br>20H<br>02H<br>80H<br>03H<br>20H                             | Length: fixed  | 8 bytes                  |
| TAG | IRQ Format Item byte IRQ mask bits 7-0 IRQ mask bits 15-8 IRQ information  | 23H<br>38H<br>9EH<br>01H  | Length: fixed  | 4 bytes                  |
| TAG | Memory Format (optional) Item byte Length bits 7-0 Length bits 15-8 Memory information Min. base bits 15-8 Min. base bits 23-16 Max. base bits 23-16 Base alignment bits 7-0 Base alignment bits 15-8 Range length bits 15-8 Range length bits 23-16 | 81H<br>09H<br>00H<br>40H<br>00H<br>0CH<br>C0H<br>0DH<br>00H<br>40H<br>40H | Length: fixed This example uses 16                         | 12 bytes<br>k-byte BROM. |
| TAG | END Tag<br>Item byte<br>Checksum   | •   | Length: fixed of the sum of all the about of (0AH+10H+10H) |                          |

#### 6.4. Boot ROM

Whether a EPROM or flash memory is used as the BROM, RTL8019AS's BROM read operation is still the same as RTL8019's. The supported BROM size is the same, too.

The write operation of a flash memory is much like the read except that a SMEMWB command is issued instead of SMEMRB. The block diagram below shows the application when an 128k\*8bit flash memory (e.g. 29F010) is used as the BROM.



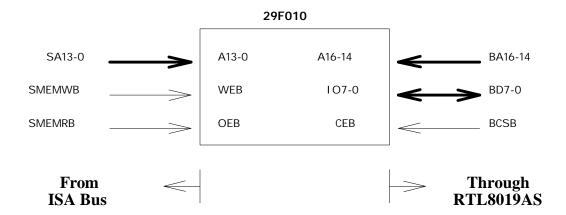

In this case, the BROM page mode is used. Before either to read or write BROM, the appropriate ROM page must be set in the BPAGE (page3, offset 02h) register first. The RTL8019AS will always reflect the content of BPAGE onto the BA14-21 bus. When RTL8019AS decodes a valid BROM read or write command, it asserts BCSB low. Note the flash memory write must be enabled through the RTL8019AS's FMWP register before the host's flash write command.




## 6.5. LED Behaviors


This section describes the lighting behaviors of the LED output signals which may be selected by LEDS1 and LEDS0 bits in the Page3 CONFIG3 register.

P.S. It is assumed that the LED is on when the signal goes low.

# (1) LED\_TX: Tx LED

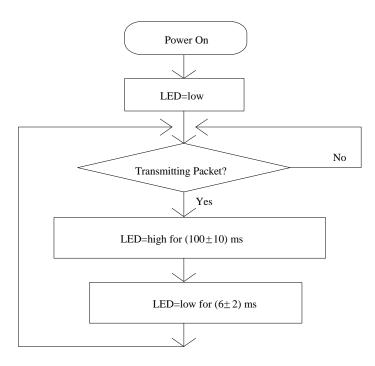


# (2) LED\_RX: Rx LED

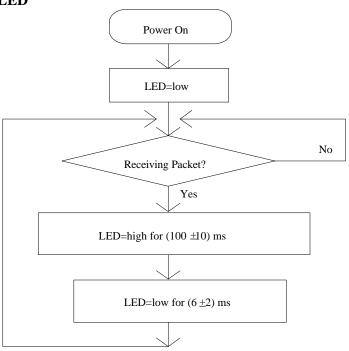




# (3) LED\_CRS=LED\_TX+LED\_RX: Carrier Sense LED

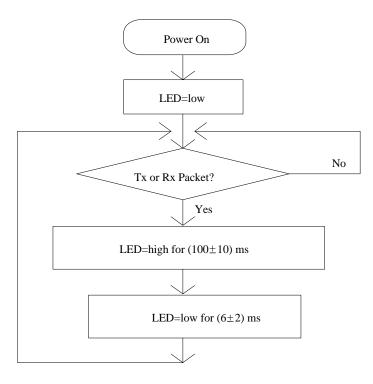

# (4) LED\_COL: Collision LED

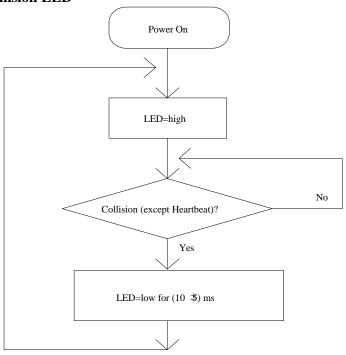



## LED1 (LED RX or LED CRS)

RTL8019's LED\_RX or LED\_CRS LED sometimes keeps blinking when the media type of a 2-in-1 (UTP+BNC) LAN adapter is set to auto-detect and both UTP and coaxial cable are not connected. In the case, RTL8019 is actually using the BNC because the UTP link test fails. Many 8392 will falsely detect a carrier when the BNC inteface is not properly terminated (e.g. coaxial cable is not connected). That carrier sense will then make RTL8019's LED\_RX or LED\_CRS blink. The problem is that not all 8392s cause the LED blinking, which makes the phenomenon very ambiguous. Considering the phenomenon is normally awared upon power on, we change RTL8019's original function to solve the problem to some extent.

### The new specification is:

The LED\_RX or LED\_CRS does not reflect the carrier sense when the CR register bit 0 is set (in stop mode). Thus, the false carrier due to cabling problem upon power on will not cause the LED1 to blink anymore.

## **LED Output States in Power Down Modes**

| LED Output | Normal Mode / Idle | Sleep Mode | Power Down Mode |
|------------|--------------------|------------|-----------------|
| LEDBNC     | -                  | -          | Low             |
| LED_LINK   | -                  | High       | High            |
| LED_COL    | High               | High       | High            |
| LED_TX     | Low                | High       | High            |
| LED_RX     | Low                | High       | High            |
| LED_CRS    | Low                | High       | High            |


## 6.6. Loopback Diagnostic Operation

#### 6.6.1. Loopback operation

The RTL8019AS provides 3 loopback modes. By loopback test, we can verify the integrity of data path, CRC logic, address recognition logic and cable connection status.


### **Mode 1:** Loopback through the NIC (LB1=0, LB0=1 in TCR).

The NRZ data is not transmitted to the SNI but instead it's loopbacked to the NIC's Rx deserializer. The traffic on the cable is ignored.

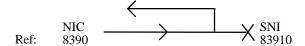

#### **Mode 2:** Loopback through the SNI (LB1=1, LB0=0 in TCR)


The Manchester encoded data is not transmitted to the MAU. It's loopbacked through the SNI to NIC. The traffic on the cable is ignored.

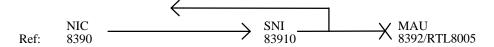



## **Mode 3:** Loopback through the cable (LB1=1, LB0=1 in TCR)

The packets are transmitted via the MAU onto the network and RTL8009 receives all incoming packets (not only the MAU-loopbacked Tx data) in the meantime.

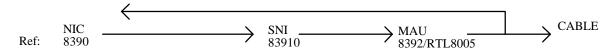

#### Alignment of the Reception FIFO

The reception FIFO is an 8-byte ring structure. The first received byte is put at location zero. When the location pointer goes to the end of the FIFO, it wraps to the beginning of the FIFO and overwrites the previous data. At the end of the packet reception, the FIFO contents are in the "order" (from the ring structure's view) as shown below.

## (1) CRC enabled (CRC bit in TCR=0)

1-byte received packet data

4-byte CRC

1-byte lower byte count

1-byte upper byte count

1-byte upper byte count

## (2) CRC disabled (CRC bit in TCR=1)

5-byte received packet data

1-byte lower byte count

1-byte upper byte count

1-byte upper byte count

## 6.6.2. To Implement Loopback Test

### (1) To verify the integrity of data path

set RCR=00h to accept physical packet

set PAR0-5 to accept packet

set DCR=40h (8-bit slot) or 43h (16-bit slot)

set TCR=02h, 04h, 06h to do loopback test 1, 2, 3 respectively

set CRC enabled (CRC=0 in TCR)

clear ISR

tx a packet and check ISR

check FIFO after loopback

Note: Loopback mode 3 is sensitive to the network traffic, so the values of FIFO may be not correct.

## (2) To verify CRC logic

Select a loopback mode (e.g. mode 2) to test

### A. To test CRC generator

set RCR=00h to accept physical packet



set PAR0-5 to accept packet set TCR=04h (CRC enabled) set DCR=40h (8-bit slot) or 43h (16-bit slot) clear ISR tx a packet check CRC bytes in FIFO after loopback

#### B. To test CRC checker

set RCR=00h to accept physical packet
set PAR0-5 to accept packet
set TCR=05h (CRC disabled)
set DCR=40h (8-bit slot) or 43h (16-bit slot)
clear ISR
tx a packet with good or bad CRC appended by program
check FIFO, ISR & RSR after loopback
For bad CRC, expected: ISR=06h, RSR=02h (Tx: OK, Rx:CRC error)
For good CRC, expected: ISR=02h, RSR=01h (Tx:OK, Rx: OK)

Note: In loopback mode, the received packets are not stored to SRAM, so PRX bit in ISR isn't set.

#### (3) To verify the address recognition function

Select a loopback mode (e.g. mode 2) to test

## A. Right physical destination address

set RCR=00h to accept physical packet set PAR0-5 to accept packet set TCR=04h (CRC enabled) set DCR=40h (8-bit slot) or 43h (16-bit slot) clear ISR tx a packet

tx a packet check ISR after loopback

Expected: ISR=06h (packets accepted, Rx CRC error)

#### **B.** Wrong physical destination address

set RCR=00h to accept physical packet set PAR0-5 to reject packet

set TCR=04h (CRC enabled)

DCD 401 (0.1% 1.4) 421 (16.1%

set DCR=40h (8-bit slot) or 43h (16-bit slot)

clear ISR

tx a packet

check ISR after loopback

Expected: ISR=02h (packets rejected, Rx no response)



## (4) To Test Cable Connection

There are four physical medium types in RTL8019.

## We perform loopback mode 3 to test the cable connection status.

set RCR=00h to accept physical packet set PAR0-5 to accept packet set TCR=06h (CRC enabled) set DCR=40h (8-bit slot) or 43h (16-bit slot) clear ISR tx a packet check TSR after loopback

#### A. 10Base2

If cable OK, get TSR=03h (Tx OK). If cable FAIL, get TSR=0Eh (Collision and Tx aborted).

### **B.** 10Base5

If cable OK, get TSR=03h (Tx OK).

If MAU connected but cable FAIL, get TSR=0Eh (Tx collision and Tx aborted).

If MAU not connected, get TSR=53h (Carrier sense is lost during transmission and CD heartbeat fails.).

#### C. 10BaseT with link test disabled

RTL8019AS disables link test in this case, so cable OK or FAIL doesn't affect TSR; get TSR=03h.

## D. Auto-detection (10BaseT with link test enabled)

RTL8019AS automatically switches from 10BaseT to 10Base 2 if the twisted-pair wire is not connected (10BaseT link test fails).

If twisted-pair wire OK, get TSR=03h (Tx OK) & BNC=0 in CONFIG2 If twisted-pair wire FAIL but coaxial cable OK, get TSR=03h (Tx OK) & BNC=1 in CONFIG2 Otherwise, get TSR=0Eh (same as 10Base2 connection fail).



# 7. Electrical Specifications and Timings

## 7.1. Absolute Maximum Ratings

| Operating Temperature                                   | 0 to 70    |
|---|------------|
| Storage Temperature                                     | 65 to 140  |
| All Outputs and Supply Voltages, with respect to Ground | 0.5V to 7V |
| Power Dissipation                                       |            |

## Warning:

Stresses beyond those listed under "Absolute Maximum Ratings" may cause permanent damage to the device. These are stress ratings only.

Functionality at or above these limits is not recommended and extended exposure to "Absolute Maximum Ratings" may affect device reliability.

# 7.2. D.C. Characteristics (Tc=0 to 70 , $Vcc=5V\pm5\%$ )

| Symbol    | Parameter                    | Min. | Тур. | Max. | Unit | Conditions       |
|-----------|------------------------------|------|------|------|------|------------------|
| Vil       | Input Low Voltage            |      |      | 0.8  | V    |                  |
| Vih       | Input Low Voltage            | 2.0  |      |      | V    |                  |
| Vol1      | Output Low Voltage 1         |      | 0.4  | 0.6  | V    | Iol=16mA, Note 1 |
| Voh1      | Output High Voltage 1        | 3.0  | 3.5  |      | V    | Ioh=8mA, Note 1  |
| Vol2      | Output Low Voltage 2         |      | 0.4  | 0.6  | V    | Iol=4mA, Note 2  |
| Voh2      | Output High Voltage 2        | 3.5  | 4.0  |      | V    | Ioh=4mA, Note 2  |
| Vol3      | Output Low Voltage 3         |      |      | 0.6  | V    | Iol=24mA, Note 3 |
| Rpull-low | Internal Pull-Low Resistance | 50   | 100  | 150  | KW   |                  |
| II        | Input Leakage Current        | -10  |      | 10   | mA   |                  |


Note 1: Apply only to INT7  $\sim$  INT0, SD15  $\sim$  SD0.

Note 2: Apply only to MD7 ~ MD0, MA13 ~ MA0, LED Pins, EECS, MWRB, MRDB, BCSB.

Note 3: Apply only to IOCHRDY, IOCS16B


# 7.3. A.C. Timing Characteristics

## (1) ISA I/O Read/Write

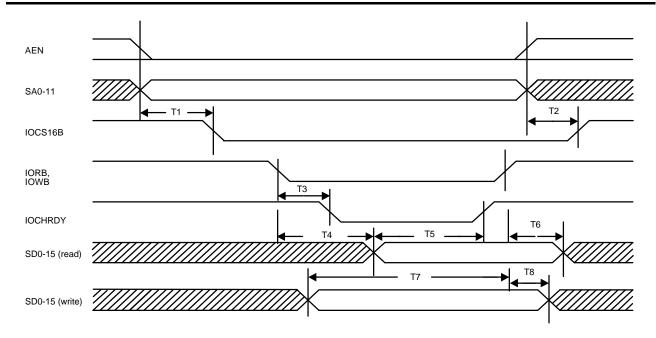


| Symbol | Parameter   | Min. | Тур. | Max. | Unit |
|--------|---|------|------|------|------|
| T1     | Host address valid to IOCS16B low   | 8    | 20   | 20   | ns   |
| T2     | Host address invalid to IOCS16B high  | 4    | 30   |      | ns   |
| Т3     | IOCHRDY goes low from falling edge of IORB or IOWB when wait state insertion is needed.   |      | 50   | 50   | ns   |
| T4     | Read data valid from falling edge of IORB or IOWB when no wait state insertion is needed. |      | 50   | 60   | ns   |
| T5     | Read data valid to IOCHRDY high when wait state is needed                                 | 25   |      |      | ns   |
| Т6     | Read data hold after IORB rising edge   | 10   | 30   | 30   | ns   |
| T7     | Write data setup to IOWB rising edge  | 10   | 10   |      | ns   |
| Т8     | Write data hold from IOWB rising edge   | 10   | 10   |      | ns   |


# (2) BROM Read

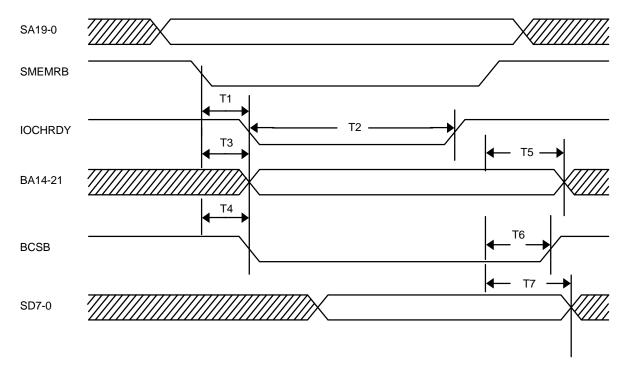

| Symbol | Parameter                              | Min. | Тур. | Max. | Unit |
|--------|--|------|------|------|------|
| T1     | SMEMRB low to IOCHRDY low              | -    | -    | 30   | ns   |
| T2     | IOCHRDY low width                      | 125  | 200  | 350  | ns   |
| Т3     | SMEMRB low to BA14-21 valid            | -    | -    | 30   | ns   |
| T4     | SMEMRB low to BCSB valid               | -    | -    | 30   | ns   |
| T5     | BA14-21 hold from SMEMRB rising edge   | -    | -    | 30   | ns   |
| Т6     | BCSB hold from SMEMRB rising edge      | -    | -    | 30   | ns   |
| T7     | Read data hold from SMEMRB rising edge | -    | -    | 30   | ns   |


# (3) Serial EEPROM (9346) Auto-load

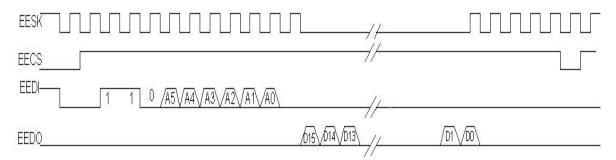

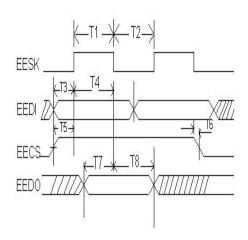

| Symbol | Parameter                            | Min. | Тур. | Max. | Unit |
|--------|--------------------------------------|------|------|------|------|
| T1     | EESK high width                      | -    | 3.2  | -    | ms   |
| T2     | EESK low width                       | -    | 3.2  | -    | ms   |
| Т3     | EEDI setup to EESK rising edge       | 3.0  | -    | -    | ms   |
| T4     | EEDI hold from EESK rising edge      | 3.0  | -    | -    | ms   |
| T5     | EECS goes high to EESK rising edge   | 3.0  | -    | -    | ms   |
| Т6     | EECS goes low from EESK falling edge | -    | 0    | -    | ns   |
| Т7     | EEDO setup to EESK falling edge      | 20   | -    | -    | ns   |
| Т8     | EEDO hold from EESK falling edge     | 10   | -    | -    | ns   |

**REALTEK Semiconductor Co., Ltd.** reserved all rights of this document. No part of this document may be copied or reproduced in any form or by any means or transferred to any third party without the prior written consent of **REALTEK Semiconductor Co., Ltd. REALTEK** reserves the right to change products or specifications without notice. This document has been carefully checked and is believed to be accurate. However **REALTEK Semiconductor Co., Ltd.** assumes no responsibility for inaccuracies.

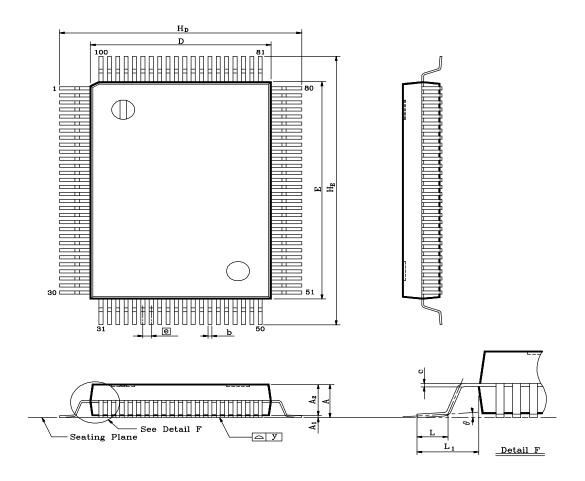

| Symbol                    | Dimension in |       |       | Dimension in |       |       |
|---------------------------|--------------|-------|-------|--------------|-------|-------|
|                           |              | mil   |       | mm           |       |       |
|                           | Min          | Typ   | Max   | Min          | Typ   | Max   |
| A                         | 106.3        | 118.1 | 129.9 | 2.70         | 3.00  | 3.30  |
| $\mathbf{A_1}$            | 4.3          | 20.1  | 35.8  | 0.11         | 0.51  | 0.91  |
| $\mathbf{A}_2$            | 102.4        | 112.2 | 122.0 | 2.60         | 2.85  | 3.10  |
| b                         | 7.1          | 11.8  | 16.5  | 0.18         | 0.30  | 0.42  |
| c                         | 1.6          | 5.9   | 10.2  | 0.04         | 0.15  | 0.26  |
| D                         | 541.3        | 551.2 | 561.0 | 13.75        | 14.00 | 14.25 |
| E                         | 777.6        | 787.4 | 797.2 | 19.75        | 20.00 | 20.25 |
| e                         | 19.7         | 25.6  | 31.5  | 0.50         | 0.65  | 0.80  |
| $\mathbf{H}_{\mathrm{D}}$ | 726.4        | 740.2 | 753.9 | 18.45        | 18.80 | 19.15 |
| $\mathbf{H}_{\mathrm{E}}$ | 962.6        | 976.4 | 990.2 | 24.45        | 24.80 | 25.15 |
| L                         | 39.4         | 47.2  | 55.1  | 1.00         | 1.20  | 1.40  |
| $\mathbf{L}_1$            | 88.6         | 94.5  | 104.3 | 2.25         | 2.40  | 2.65  |
| y                         |              |       | 3.9   |              |       | 0.10  |
|                           | 0°           |       | 12°   | 0°           |       | 12°   |

## Note:

- 1.Dimension D & E do not include interlead flash.
- 2.Dimension b does not include dambar protrusion/intrusion.
- 3. Controlling dimension: Millimeter
- 4.General appearance spec. should be based on final visual inspection spec.

| TITLE: 100L QFP ( 14x20 mm**2 ) FOOTPRINT 4.8 mm |              |           |      |  |
|--|--------------|-----------|------|--|
|  | PACKAGE OUT  | LINE DRAW | ING  |  |
|  | LEADFRAME    | E MATERIA | L:   |  |
| APPROVE  |              | DWG NO.   |      |  |
|  |              | REV NO.   |      |  |
|  |              | SCALE     |      |  |
| CHECK  | Ricardo Chen | DATE      |      |  |
|  |              | SHT NO.   | 1 OF |  |
| REALTEK SEMI-CONDUCTOR CO., LTD                  |              |           |      |  |