

<b>Document Title</b>	Modeling Show Cases Report
Document Owner	AUTOSAR
Document Responsibility	AUTOSAR
<b>Document Identification No</b>	789

Document Status	published
Part of AUTOSAR Standard	Classic Platform
Part of Standard Release	R23-11

Document Change History			
Date	Release Changed by Description		
2023-11-23	R23-11	AUTOSAR Release Management	No content changes
2022-11-24	R22-11	AUTOSAR Release Management	No content changes
2021-11-25	R21-11	AUTOSAR Release Management	No content changes
2020-11-30	R20-11	AUTOSAR Release Management	No content changes
2019-11-28	R19-11	AUTOSAR Release Management	<ul> <li>Add Show case Structured Requirement</li> <li>Changed Document Status from Final to published</li> </ul>
2018-10-31	4.4.0	AUTOSAR Release Management	Editorial Changes
2017-12-08	4.3.1	AUTOSAR Release Management	Editorial Changes
2016-11-30	4.3.0	AUTOSAR Release Management	Initial Release



#### **Disclaimer**

This work (specification and/or software implementation) and the material contained in it, as released by AUTOSAR, is for the purpose of information only. AUTOSAR and the companies that have contributed to it shall not be liable for any use of the work.

The material contained in this work is protected by copyright and other types of intellectual property rights. The commercial exploitation of the material contained in this work requires a license to such intellectual property rights.

This work may be utilized or reproduced without any modification, in any form or by any means, for informational purposes only. For any other purpose, no part of the work may be utilized or reproduced, in any form or by any means, without permission in writing from the publisher.

The work has been developed for automotive applications only. It has neither been developed, nor tested for non-automotive applications.

The word AUTOSAR and the AUTOSAR logo are registered trademarks.



# **Contents**

1	Introduction	7
2	Overview	8
3	Measurement and Calibration	9
	3.1 Introductory Show Case	10 10 11
	3.1.1.2 The Environment	12
	3.1.1.3 The Plant	13
	3.1.1.4 The Controller	14
	3.1.2 AUTOSAR Modeling	16 17
	3.1.3.1 FlatMap	18
	3.1.3.2 ECU Documentation, Measurement and Calibration	18
	3.1.4 A2L File	18
	3.1.5 Implementation in C	20
	3.1.6 A walk with T_Plant through the Show Case	23
	3.1.6.1 Physical System	23
	3.1.6.1.1 Components	23
	3.1.6.1.2 Equations	24
	3.1.6.2 AUTOSAR Modeling	24 24
	3.1.6.2.1 Physical Dimension and Unit	24 26
	3.1.6.2.3 Port Interface	29
	3.1.6.2.4 Software Components	30
	3.1.6.3 System	35
	3.1.6.4 ECU Configuration	36
	3.1.6.5 RTE Generation	38
	3.1.6.6 Implementation in C	40
	3.1.6.7 A2L File	40
	3.1.6.8 Measurement and Calibration Tool	41
	3.1.7 Show cases in the Example	43
	3.1.7.1 CompositionSwComponentTypes	43 44
	3.1.7.2 ParameterSwComponentTypes	45
	3.1.7.4 ParameterInterfaces	50
	3.1.7.5 SenderReceiverInterfaces	53
	3.1.7.6 ApplicationDataTypes, Category VALUE	54
	3.1.7.7 Units	57
	3.1.7.8 PhysicalDimensions	59
	3.1.7.9 SwAddrMethods	62
	3.2 Advanced Show Case	63
	3.2.1 General Objectives of the Model Structure	63



	3.2.1.1	The Ecu Description	63
	3.2.1.2	The Ecu Extract	63
		3.2.1.2.1 The ECU Flat Map	
	3.2.1.3	Data Types and Data Objects	
	3.2.1.4	Axis, Curves and Maps	
	3.2.1.5	Axis, Curves and Maps on ApplicationDataType level	
	3.2.1.6	Axis, Curves and Maps on DataPrototype and	
		SwComponentPrototype level	67
		3.2.1.6.1 Instantiation of Axis, Curves and Maps	67
		3.2.1.6.2 Usage of Axis, Curves and Maps by Software	00
		Components	68
		3.2.1.6.3 Linking map and curve instances to its axes instances	68
		3.2.1.6.4 Linking axes instances to its working point in-	
		stances	69
		3.2.1.6.5 Axis, Curves and Maps in the ECU Flat Map .	
	3.2.1.7		
	-	3.2.1.7.1 Arrays of Maps and Axes in the ECU Flat Map	72
	3.2.1.8	Measurement of Modes	
	0.2	3.2.1.8.1 Enabling Measurement of Modes	
		3.2.1.8.2 Modes in the ECU Flat Map	
	3.2.2 S	how cases in the Example	
	3.2.2.1	CompositionSwComponentTypes	
	3.2.2.2	ParameterSwComponentTypes	
	3.2.2.3	ApplicationSwComponentTypes	
	3.2.2.4	ParameterInterfaces	
	3.2.2.5	ModeSwitchInterfaces	
	3.2.2.6	SenderReceiverInterfaces	
	3.2.2.7	ApplicationDataTypes, Category BOOLEAN	
	3.2.2.8	ApplicationDataTypes, Category VALUE	
	3.2.2.9	ApplicationDataTypes, Category COM_AXIS	
	3.2.2.10		98
	3.2.2.1		
	3.2.2.12		
	3.2.2.13		
	3.2.2.14		
	3.2.2.1	•	103
	3.2.2.16		105
	3.2.2.17		
1	Structured Requir	ements	109
	4.1 Introductory	y Show Case	109
	4.1.1 A	dditional information (M1 parameter)	109
		pecification items as requirements	
		liagnostic requirements	
		ecomposition of requirements	





A Mentioned Class Tables

117



## References

- [1] Methodology for Classic Platform AUTOSAR\_CP\_TR\_Methodology
- [2] Modeling Show Cases Examples AUTOSAR\_CP\_EXP\_ModelingShowCases
- [3] Software Component Template
  AUTOSAR\_CP\_TPS\_SoftwareComponentTemplate
- [4] Standardization Template AUTOSAR\_FO\_TPS\_StandardizationTemplate
- [5] Specification of Platform Types for Classic Platform AUTOSAR\_CP\_SWS\_PlatformTypes
- [6] System Template AUTOSAR\_CP\_TPS\_SystemTemplate



## 1 Introduction

The objective of this report is the illustration and execution of AUTOSAR modeling and the AUTOSAR methodology (see [1]) for selected show cases.

Each show case focuses on a few specific topics and gives an overview of their basic usage and their application in the field. Where appropriate, the show cases are based on real world applications of the AUTOSAR standard.

#### It contains

- explanatory background on the functional use case for which the specific part of the AUTOSAR modeling is applied.
- illustration of the AUTOSAR model content in form of interlinked tables
- explanation of the processing results of these AUTOSAR models (e.g. C code, A2L files, ...)
- snippets of the full-blown examples. The complete examples are provided in the archive AUTOSAR\_EXP\_ModelingShowCases.zip [2].



### 2 Overview

The report is organized in chapters according to the main focus of the contained show cases. Each chapter contains a topic specific overview and at least one show case. Each chapter is self contained and understandable without reading any other chapter.

The technical report on the AUTOSAR Methodology [1] deserves a special mentioning as accompanying document for going through the show cases.

In the first version of the technical report, the show cases are targeting the topic of measurement and calibration, involving the creation of A2L files based on AUTOSAR models. For these show cases, also the specification of the SoftwareComponent-Template [3] is a good accompanying document.

This updated version is extended by an additional show case targeting the topic of Structured Requirements. For these show cases, also the specification of the StandardizationTemplate [4] is a good accompanying document.



# 3 Measurement and Calibration

Measurements and Calibration (short: MC) is a major step in the development of electronic control units (ECUS). Measurement and Calibration systems (MC systems), involving software tools (MC tools) as well as the hardware to access an ECU (not in focus here), enable the developer to measure variables and to adapt calibration parameters (or "characteristics") during the run-time of the ECU.

For instance, the following tasks are regularly done by "Measurement and Calibration"

- Adaptation to real hardware (e.g. inserting the electrical characteristics of a sensor)
- Calibration of controllers (e.g. adjusting the parameters of a closed loop controller)
- Tuning of ECU internal environment models (e.g. for "virtual sensors")
- Validation of ECU functions
- Tracking of development errors
- Collecting data for automated optimization of parameters

The "Introductory Show Case" (see 3.1), illustrates all basic artifacts on the way from a physical system that is to be controlled by an ECU until measuring and calibrating with a MC system.

As didactic simplification only a few data types were used, e.g. neither  ${\tt CURVES}^1$  nor  ${\tt MAPS}^2$  were chosen, nor any  ${\tt ApplicationCompositeDataType}$ .

However, those advanced topics, their modeling in AUTOSAR as well as their transfer to a MC tool, is of particular interest: they are regularly needed and used the field. Therefore, the "Advanced Show Case" in chapter 3.2 especially highlights these topics. This show case is directly derived from the real world modeling and structuring approach of a major Tier 1 in the powertrain domain. So it also illustrates "good practices" in the field for designing AUTOSAR systems which are to be measured and calibrated later on in their development.

<sup>&</sup>lt;sup>1</sup>CURVES are two dimensional functions defined via axis points and the corresponding function values. Interpolation or extrapolation is used to calculate function values that are not directly defined.

<sup>&</sup>lt;sup>2</sup>MAPs are similar to CURVES but three dimensional



#### **Introductory Show Case** 3.1

As introduction to measurement and calibration with AUTOSAR a simple, artificial closed-loop control system was chosen. This allows interesting feedback of the system when using a MC tool. At the same time, the model, the source code and generated files are still comprehensible.

A drawback is, that not all typical "real world" data types are featured, for instance. Such topics are covered in the "Advanced Show Case", chapter 3.2.

#### **Physical System** 3.1.1

This section contains a description of the physical system setup. It can safely be skipped, if only the AUTOSAR modeling itself is of interest to the reader.

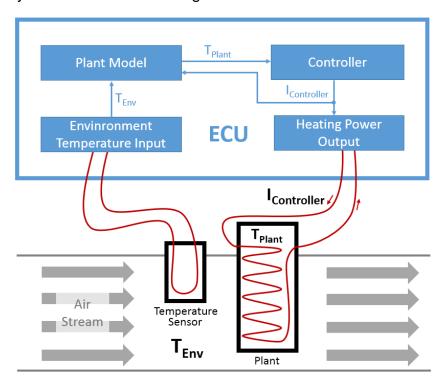


Figure 3.1: Physical Overview

Figure 3.1 shows the major physical values and entities of our system. The control task is the following: The plant is a sensor in an airstream that requires heating. The temperature  $T_{Plant}$  is to be controlled by the ECU. However, there is no direct way to measure  $T_{Plant}$ .

For the estimation of  $T_{Plant}$  the following properties of the system are used:

•  $T_{Plant}$  depends on the temperature of the environment  $T_{Env}$ , i.e. the temperature of the air stream.  $T_{Env}$  can be measured directly.



- ullet  $T_{Plant}$  depends on the current  $I_{Controller}$  which is output by the ECU and controlled by the controller and therefore known.
- The plant itself acts as a thermal energy storage. So  $T_{Plant}$  also depends on the heat quantity that is currently stored within the plant.
- All other influences on  $T_{Plant}$  are considered to be insignificant. So they can safely be ignored for this control task.

An estimation of  $T_{Plant}$  can be calculated by a plant model, which uses  $T_{Env}$  and  $I_{Controller}$  as inputs and has the stored heat quantity as internal state.

### 3.1.1.1 Components Overview

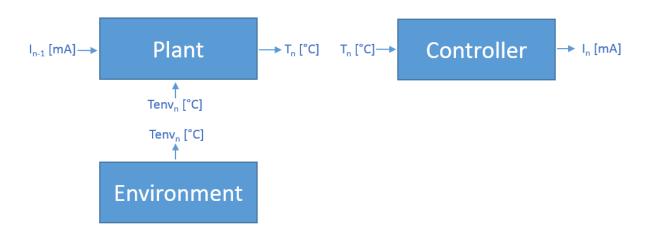


Figure 3.2: Component Overview

For this show case, the interaction with a real physical environment is completely left out, i.e. there is no Heating Power Output component and the profile of  $T_{Env}$  is randomly generated inside the component Environment. This cuts off a lot of complexity from the example, and allows to run the software system on a PC without complex environment simulations.

For completeness: The plant model is calculated inside the component Plant and the controller inside the component Controller.

As typical for ECUs the calculations happen in a time-discrete manner, i.e. the calculations in the components are executed periodically at discrete in time steps. In the following, the index  $n \in \{1,2,...\}$  denotes the current time step. The previous time step is denoted by the index n-1. The index 0 denotes the initialization value. This also means that time step 1 is the first, that is actually calculated by the ECU.

Furthermore  $\Delta t$  denotes the time in seconds, that elapsed between the calculation of the previous time step and the current time step. In case of time step 1,  $\Delta t$  denotes the time that elapsed between initialization of the system and time step 1. For setting



the actual value of  $\Delta t$  the frequency bandwidth of the physical properties in the system has to be taken into account. Decreasing the value of  $\Delta t$  usually increases the quality of the sampling of physical signals up to a certain point where the costs of further decreasing the value of  $\Delta t$  outweighs the benefit gained in terms of signal quality.

#### 3.1.1.2 The Environment

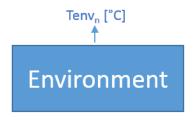


Figure 3.3: Environment

The modeling and implementation of the environment is not in the focus of this show case. The temperature  $Tenv_n[^{\circ}C]$  is generated (pseudo) randomly. This is done in order to see the controller and the plant model "in action" during run-time of the system.

The generated profile is a random walk limited by an upper and a lower boundary, with saturation at these boundaries.

The random walk is configurable via  $T_{\texttt{LowLimit}}$  [°C] and  $T_{\texttt{HighLimit}}$  [°C], for the boundaries, and  $T_{\texttt{StepSize}}$  [K], for the change of the temperature during one time step.

Assuming  $rand_n$  [-]  $\in \{-1, 0, 1\}$  and  $n \in \{1, 2, 3, ...\}$  then  $Tenv_n$  is characterized by this equation (with  $Tenv_0$  [°C] = -273.15 [°C]):

$$Tenv_{n}\left[^{\circ}\mathbf{C}\right] \ = \ Tenv_{n-1}\left[^{\circ}\mathbf{C}\right] + \mathbf{T_{StepSize}}\left[\mathbf{K}\right] \cdot rand_{n}\left[\text{-}\right]$$

if and only if  $Tenv_n$  would be inside the boundaries, i.e.

$$T_{LowLimit} < Tenv_n < T_{HighLimit}$$

If  $Tenv_n$  would be outside one of the boundaries, it is set to the value of that boundary.



#### 3.1.1.3 The Plant

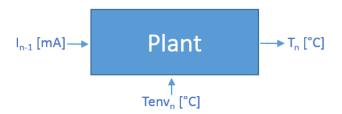


Figure 3.4: Plant

The plant is an electrically heated mass that is exposed to the air flow in the environment. The heat quantity Qplant that is stored inside the plant is considered to always be directly proportional to the temperature T with constant proportionality factor. Neither the mass of the plant, nor the specific heat capacity changes during the run-time of our system.

For simplicity, this proportionality factor is considered to be  $1 \left[ \frac{J}{K} \right]$ . For the calculations inside the Plant component, we are always using [K] as unit for temperatures, so the conversion from and to  $[^{\circ}C]$  only happens at the interface of the component.

With this, we have the following:

$$\begin{array}{rcl} Qplant_{n}\left[\mathbf{J}\right] & = & T_{n}\left[\mathbf{K}\right] \cdot 1\left[\frac{\mathbf{J}}{\mathbf{K}}\right] \\ \\ T_{n}\left[\mathbf{K}\right] & = & \frac{Qplant_{n}\left[\mathbf{J}\right]}{1\left[\frac{\mathbf{J}}{\mathbf{K}}\right]} \end{array}$$

This also means, that  $Qplant_n[J] = 0[J]$  corresponds  $T_n[K] = 0[K]$ , i.e. absolute zero. So  $Qplant_n[J] \ge 0[J]$  shall always be true.

In each time step, there are two heat flows: One from the electrical heater to the plant and one from the plant to the environment. A negative heat flow means that heat energy is flowing away from the plant. Respectively, a positive heat flow means that heat energy is stored in the plant.

The heat flow  $Qheater_n[\mathtt{J}]$  from the electrical heater to the plant in one time step is considered to be proportional to the current  $I_n[\mathtt{m}\mathtt{A}]$  through the plant during this time step. The proportionality factor is  $\mathtt{h}_{\mathtt{Heater}}[\frac{\mathtt{J}}{\mathtt{m}\mathtt{A}\,\mathtt{s}}]$ . Of course, the plant can only be heated up by the electrical heater, i.e. a "negative" current  $I_n$  would not cool down the plant, but causes the same heat up as  $-I_n$ . So we have

$$Qheater_{n}\left[\mathtt{J}\right] \ = \ \mid I_{n} \mid \ [\mathtt{mA}] \cdot \mathtt{h}_{\mathtt{Heater}} \left[ \frac{\mathtt{J}}{\mathtt{mA}\,\mathtt{s}} \right] \cdot \Delta t \left[\mathtt{s}\right]$$

The cool down of the plant can only happen via the second heat flow, i.e. the heat flow  $Qenv_n[J]$  from the plant to the environment. The flow in one time step is considered



to be proportional to the difference between the temperature of the plant (calculated from the stored heat quantity during the last time step) and the temperature of the environment (received in this time step, but actually "measured" during the last time step). With the proportionality factor  $h_{\text{Env}}\left[\frac{J}{K}\right]$ , we have:

$$Qenv_{n}\left[\mathbf{J}\right] \ = \ \left(Tenv_{n}\left[\mathbf{K}\right] - T_{n-1}\left[\mathbf{K}\right]\right) \cdot \mathbf{h}_{\mathtt{Env}}\left[\frac{\mathbf{J}}{\mathbf{K}}\right] \cdot \Delta t\left[\mathbf{s}\right]$$

The heat quantity that was stored in the plant in last time step  $Qplant_{n-1}$  is now modified by these two heat flows. This results in the stored heat quantity in the current time step. With  $Qplant_0[J] = 0[J]$ , we have

$$Qplant_n[J] = Qplant_{n-1}[J] + Qheater_n[J] + Qenv_n[J]$$

#### 3.1.1.4 The Controller



Figure 3.5: Controller

For the closed loop control an I controller (by and large) was chosen for component Controller. This means that the amplification of the input signal is proportional to the integral of the errors, i.e. the deviation between measured variable and setpoint. Because the controller cannot actively cool down the temperature of the plant, the output  $I_n>=0$  for all n.

Again, all temperatures are converted to and from  $[^{\circ}C]$  at the interface of the component. All internal calculation are done in [K].

The error during the current time step is the difference between  $T_{\tt SetPoint}[K]$  and the measured variable  $T_n[K]$ :

$$e_n\left[ \mathtt{K} 
ight] \ = \ \mathtt{T}_{\mathtt{SetPoint}}\left[ \mathtt{K} 
ight] - T_n\left[ \mathtt{K} 
ight]$$

The integral part of the controller is calculated via summing up all errors from the previous steps. With  $eSum_n$  [Ks] = 0 [Ks] we have:

$$eSum_n [Ks] = eSum_{n-1} [Ks] + e_n [K] \cdot \Delta t$$

A further design decision for the controller was, to limit the integral and to saturate at the limits. This has the benefit that it limits the current  $I_n$  that is output by the controller. Furthermore, it enables the controller to react faster after long deviations.



The lower limit is  $0\,[{\rm Ks}]$ . So if  $eSum_n$  would fall below zero in time step n, we set  $eSum_n[{\rm Ks}] = 0\,[{\rm Ks}]$ . The upper limit is  ${\rm L_{MaxESum}}\,[{\rm Ks}]$ . If  $eSum_n$  would exceed  $L_{MaxESum}$  in time step n we set  $eSum_n[{\rm Ks}] = {\rm L_{MaxESum}}\,[{\rm Ks}]$ .

The integral state  $eSum_n$  of the controller is then amplified by  $\mathbf{k} \begin{bmatrix} \frac{\mathbf{m} \mathbf{A}}{\mathbf{K} \mathbf{s}} \end{bmatrix}$  to calculate the current  $I_n [\mathbf{m} \mathbf{A}]$ , i.e. the output of the controller:

$$I_n\left[\mathtt{mA}\right] = eSum_n\left[\mathtt{Ks}\right] \cdot \mathtt{k}\left[\frac{\mathtt{mA}}{\mathtt{Ks}}\right]$$

So the limitations of the  $eSum_n$  guarantee, that

$$0\,[\mathrm{mA}] \, \leq \, I_n\,[\mathrm{mA}] \, \leq \, \mathrm{L}_{\mathtt{MaxESum}}\,[\mathrm{Ks}] \cdot \mathrm{k}\left[\tfrac{\mathrm{mA}}{\mathrm{Ks}}\right]$$



### 3.1.2 AUTOSAR Modeling

This section gives a brief overview of the AUTOSAR modeling. More insight can be gained by browsing through the hyper-linked tables in section 3.1.7. These tables are generated from the AUTOSAR model of this show case. If this is still not sufficient, the complete model is available in .arxml format in AUTOSAR\_EXP\_ModelingShowCases.zip [2].

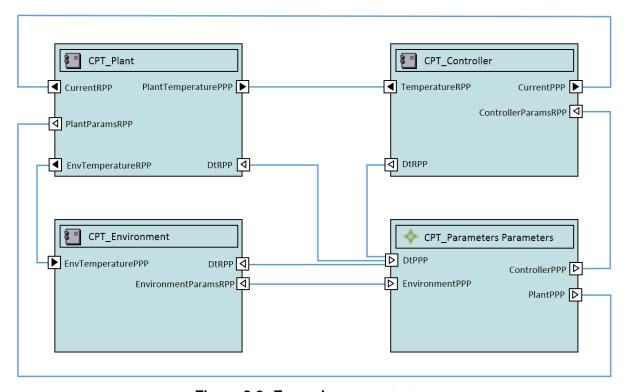


Figure 3.6: Example Composition

In this show case the components specified in section 3.1.1.1 are modeled as ApplicationSwComponentTypeS.

- Environment
- Plant
- Controller

To keep the example simple, no SwcImplementations were modeled. For some tasks, like generation of a MemMap for an embedded controller, this would be needed.

The in- and outputs of the ApplicationSwComponentTypes are modeled as SenderReceiverInterface. The internal state is realized as implicitInter-RunnableVariables. Besides the illustrative aspect, the rationale for this design decision was that the internal state is likely to be used by more than one runnable in ApplicationSwComponentTypes (at least "outside" of an introductory show case).



For variables that should just be available for measurement in a MC tool, arTyped-PerInstanceMemorys are used. For this use case, no synchronization of access to the variable needs to be implemented, so the way with the least overhead was chosen.

All parameters in the specification of the components were put in a fourth SwComponentType, in the ParameterSwComponentType "Parameters".

A distinct ParameterInterface was defined for the parameters of each of the three ApplicationSwComponentTypes. The respective PPortPrototypes of the ParameterSwComponentType hold the initValue for each ParameterDataPrototype in the PortPrototypes. Each value is specified in a ValueSpecification aggregated by a ParameterProvideComSpec.

The component types are instantiated in the CompositionSwComponentType "Composition".

This Composition is the type of the rootSoftwareComposition of the ECU\_Extract. This also implies that all SwComponentPrototypes of Composition are mapped to one EcuInstance.

Some information on the FlatMap can be found in section 3.1.3.1.

### 3.1.3 RTE Generation, Measurement and Calibration

The McSupport is an interface between the RTE generator and the A2L generator. A RTE generator provides a McDataInstance for each calibrateable or measurable object. From logical view the generation of McSupport could be seen in two steps:

- 1. Provide unique names for all parameters, measurements, component prototypes which are instantiated one or multiple times. This is done by the used AUTOSAR Authoring Tool.
- 2. Generate the McSupport itself. This is usually done by the RTE generator. A2L supports only one global namespace, while AUTOSAR defines own namespaces within each ARPackage. This means, that on the one hand unique names are needed for all objects which are to be accessible during measurement and calibration (parameters, measurements, component prototypes). But on the other hand, unique names are needed for all other things that will appear in A2L, e.g. CompuMethods, Units. For them the RTE generator will create unique names.

AUTOSAR specifies additionally an AliasNameSet to override names which is not used here.

See AUTOSAR\_EXP\_ModelingShowCases.zip [2] for the generated Rte\_McSupportData.arxml file.



### 3.1.3.1 FlatMap

In this show case, the FlatMap gives unique names to the

- dataElementS
- implicitInterRunnableVariableS
- arTypedPerInstanceMemoryS

The RTE-Generator uses this information for the generation of the McSupport file as well as for generation of the .c and .h files.

The FlatMap consists of a FlatInstanceDescriptor for each instance of these VariableDataPrototypes.

The concrete modeling of the FlatMap for this use case can be found in AUTOSAR\_EXP\_ModelingShowCases.zip [2].

### 3.1.3.2 ECU Documentation, Measurement and Calibration

When developing an ECU one usual requirement is, that objects described in A2L can be easily found in the documentation of the ECU. This is a challenge since documentation is on the level of SwComponentTypes while A2L is defined on the level of a System of category "ECU\_EXTRACT".

- The names of SwComponentPrototypes are potentially different to the names of SwComponentTypes
- The names of McDataInstances are potentially different to the names of DataPrototypes

The challenge gets bigger, if types are instantiated multiple times. This issue needs to be solved by proper architecture, modeling conventions and clever generation of the FlatMap.

In this show case, this topic is only slightly touched by instantiating TemperatureSRIF two times, for the interface transporting  $T_{Env}$  as well as for the interface transporting  $T_{Plant}$ .

It is demonstrated that the FlatMap can be used to solve the issue. However, we manually crafted our FlatMap, which is usually not possible in the field. FlatMaps are usually automatically generated by customizable, "clever", not standardized tools.

#### 3.1.4 A2L File

With the information in the McSupport file an A2L file is generated. However, for this generation the memory addresses for the variables and characteristics are needed. They are usually extracted from the map file that is output by the linker of the ECU



executable. The exact process as well as the tool for the  $\mathtt{A2L}$  file generation is not standardized.

An example A2L file is provided in AUTOSAR\_EXP\_ModelingShowCases.zip.



### 3.1.5 Implementation in C

The implementation in C is a straight forward realization of the physical specification within the AUTOSAR modeling (see section 3.1.1.1 and 3.1.2). Therefore, the listings are presented without further explanation besides the comments in the source code.

A remark on the (pseudo) random numbers generated in line 22 of Environment.c (Listing 3.1): The numbers don't have good "pseudo randomness" properties but are sufficient for this show case, nevertheless. This way of generation was only chosen, because it fits in one line of C code without introducing a dependency to a library.

```
1 #include "Rte_Environment.h"
3 #define envRE START SEC CODE
4 #include "Environment MemMap.h"
6 FUNC (void, Environment_CODE) envRE_func (void)
     /* read parameters for simulation of the temperature profile
8
     float32 lLowLimit = Rte_Prm_EnvParamsRPP_env_TLowLimit();
9
    float32 lStepSize = Rte_Prm_EnvParamsRPP_env_TStepSize();
10
     /* retrieve internal state
                                                                   */
12
     13
     float32 lTEnv = Rte_IrvIRead_envRE_TEnv();
14
15
     float32 direction = (float32)(lSeed % 3) - 1.0;
16
     /* calc high limit with parameter, store for measurement
17
     *Rte_Pim_THighLimit()
18
         = lLowLimit + Rte_Prm_EnvParamsRPP_env_THighLimitDistance();
20
     /* update state for pseudo random number generation
                                                                   */
     1Seed = (8253729 * 1Seed + 2396403);
22
23
     /* calculate environment temperature
24
     lTEnv += lStepSize * direction;
25
     /* saturating environment temperature at the bounds
     if( lTEnv < lLowLimit) { lTEnv = lLowLimit; }</pre>
28
     if( lTEnv > *Rte_Pim_THighLimit())
29
                            { lTEnv = *Rte_Pim_THighLimit(); }
31
     /* Store internal state
                                                                   */
32
    Rte_IrvIWrite_envRE_Seed(lSeed);
    Rte_IrvIWrite_envRE_TEnv(lTEnv);
     /* write output
                                                                   */
36
     Rte_IWrite_envRE_EnvTemperaturePPP_T(lTEnv);
37
39 #define envRE STOP SEC CODE
40 #include "Environment_MemMap.h"
```

Listing 3.1: Environment.c



```
1 #include "Rte Plant.h"
3 #define plantRE_START_SEC_CODE
4 #include "Plant_MemMap.h"
6 FUNC (void, Plant_CODE) plantRE_func (void)
8
      /* read input
     float32 lTenv = Rte_IRead_plantRE_EnvTemperatureRPP_T();
float32 lI = Rte_IRead_plantRE_CurrentRPP_I();
9
     float32 lI
10
11
     /* retrieve internal state
     float32 lQPlant = Rte_IrvIRead_plantRE_QPlant();
13
14
     /* read parameters
                                                                        */
15
     float32 1Dt = Rte_Prm_DtRPP_Dt();
     float32 lEFactor = Rte_Prm_PlantParamsRPP_plnt_EnvFactor();
17
     float32 lHFactor = Rte_Prm_PlantParamsRPP_plnt_HeaterFactor();
18
     /* heat capacity of 1 assumed
                                                                        */
     float32 lTPlant = lQPlant;
21
22
      /\star calculate heat flows, store in PIM to make them measurable \star/
      *Rte_Pim_QEnv() = (lTenv - lTPlant) * lEFactor * lDt;
     *Rte_Pim_QHeater() = lI * lHFactor * lDt;
25
26
      /* update heat quantity in plant
      lQPlant = lQPlant + *Rte_Pim_QHeater() + *Rte_Pim_QEnv();
28
      /* limit heat quantity to absolute zero
      lQPlant = lQPlant < 0 ? 0 : lQPlant;</pre>
32
     /* heat capacity of 1 assumed
33
     lTPlant = lQPlant;
     /* store internal state of plant: stored heat quantity
                                                                        */
     Rte_IrvIWrite_plantRE_QPlant(lQPlant);
      /* Write output of plant: temerature of plant
                                                                        */
     Rte_IWrite_plantRE_PlantTemperaturePPP_T(lTPlant);
40
42 #define plantRE_STOP_SEC_CODE
43 #include "Plant MemMap.h"
```

Listing 3.2: Plant.c



```
1 #include "Rte Controller.h"
3 #define ControllerRE_START_SEC_CODE
4 #include "Controller_MemMap.h"
6 FUNC (void, Controller_CODE) controllerRE_func (void)
     /* read input, define output variable
9
     float32 lT = Rte_IRead_ControllerRE_TemperatureRPP_T();
     float32 lI;
10
11
    /* retrieve internal state: Sum of errors until last time step */
    float32 lESum = Rte_IrvIRead_ControllerRE_ESum();
13
14
    /* read parameters
                                                                   */
15
     float32 lDt = Rte_Prm_DtRPP_Dt();
     float32 lSetPoint = Rte_Prm_ControllerParamsRPP_ctrl_SetPoint();
17
     float32 lK = Rte_Prm_ControllerParamsRPP_ctrl_K();
18
    float32 lMaxESum = Rte_Prm_ControllerParamsRPP_ctrl_MaxESum();
     /* store current error in PIM to make it measurable
                                                                   */
     *Rte Pim E() = 1SetPoint - 1T;
22
      /* update eSum
                                                                   */
     lESum += *Rte_Pim_E() * lDt;
25
26
     /* limit eSum
     if(lESum > lMaxESum) { lESum = lMaxESum; }
28
     if(lESum < 0) { lESum = 0; }
     /* Controller equation: Calculation of manipulated variable
     lI = lESum * lK;
32
33
    /* Store internal state
34
    Rte_IrvIWrite_ControllerRE_ESum(lESum);
     /* Write output of controller
                                                                   */
37
     Rte_IWrite_ControllerRE_CurrentPPP_I(lI);
38
40 #define ControllerRE STOP SEC CODE
41 #include "Controller_MemMap.h"
```

Listing 3.3: Controller.c



### 3.1.6 A walk with T\_Plant through the Show Case

This section revisits the complete show case, but focuses on one physical value:  $T_{Plant}$ . It visits all artifacts and highlights all places that relate to  $T_{Plant}$  to illustrate the dependencies between all artifacts.

### 3.1.6.1 Physical System

Our journey begins at the physical system, where the value of the physical system outside of the ECU is identified with a software value inside the ECU.

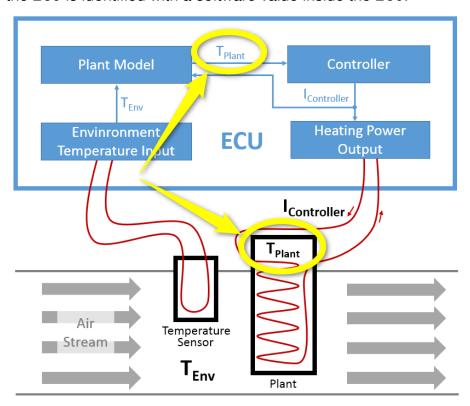


Figure 3.7: Physical Overview

## **3.1.6.1.1 Components**

It was located at the interface between two architectural components, sent by the Plant and received by the Controller. Furthermore a sequencing was introduced<sup>3</sup>, i.e. in one time step the Plant is calculated before the Controller.

<sup>&</sup>lt;sup>3</sup>Please note that this sequencing is a design decision. As there is also a data flow from the Plant to the Controller one could also argue for another calculation sequence.



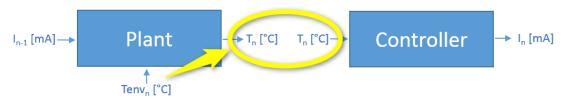


Figure 3.8: Component Overview

### 3.1.6.1.2 **Equations**

The functional behavior is defined by the equations for the Plant

$$Qplant_n [J] = T_n [K] 1 \begin{bmatrix} J \\ K \end{bmatrix}$$
$$T_n [K] = \frac{Qplant_n [J]}{1 \begin{bmatrix} J \\ K \end{bmatrix}}$$

Figure 3.9: Dependency between  $Q_{Plant}$  and  $T_{Plant}$ 

$$Qenv_{n}\left[\mathbf{J}\right] \ = \ \left(Tenv_{n}\left[\mathbf{K}\right] - T_{n-1}\left[\mathbf{K}\right]\right) \cdot \mathbf{h}_{\mathsf{Env}}\left[\frac{\mathbf{J}}{\mathbf{K}}\right] \cdot \Delta t\left[\mathbf{s}\right]$$

Figure 3.10: Heat flow from the Plant to the Environment

 $T_{Plant}$  is also used by the physical equations in the component Controller:

$$e_n\left[\mathtt{K}\right] = \mathtt{T}_{\mathtt{SetPoint}}\left[\mathtt{K}\right] - T_n\left[\mathtt{K}\right]$$

Figure 3.11: Calculation of the control error in the Controller

Furthermore, calculations inside the components are done in Kelvin [K]. The conversion from and to  $[^{\circ}C]$  happens at the interface level.

#### 3.1.6.2 AUTOSAR Modeling

This architecture, i.e. the layout of the physical system, is modeled in AUTOSAR. The functional behavior defined by the equations will be implemented in C Code later on.

### 3.1.6.2.1 Physical Dimension and Unit

A Physical Dimension is defined:  $T_{Plant}$  is a temperature.



С	Common PhysicalDimension attributes		
s	hortName	Temperature	
	currentExp	0	
	lengthExp	0	
	<pre>luminousIntensity- Exp</pre>	0	
	massExp	0	
	molarAmountExp	0	
	temperatureExp	1	
	timeExp	0	

**Table 3.1: PhysicalDimension Temparature** 

The corresponding ARXML description is:

```
<PHYSICAL-DIMENSION>
  <SHORT-NAME>Temperature
<LENGTH-EXP>0</LENGTH-EXP>
  <MASS-EXP>0</MASS-EXP>
  <TIME-EXP>0</TIME-EXP>
  <CURRENT-EXP>0</CURRENT-EXP>
  <TEMPERATURE-EXP>1</TEMPERATURE-EXP>
  <MOLAR-AMOUNT-EXP>0</MOLAR-AMOUNT-EXP>
  <LUMINOUS-INTENSITY-EXP>0</PHYSICAL-DIMENSION>
```

**Listing 3.4: Physical Dimension of Temperature** 

 $T_{Plant}$  shall have the Unit DegreeCelsius:

С	Common Unit attributes	
s	hortName	DegreeCelsius
	displayName	Ϊ¿½C
	offsetSiToUnit	-273.15
	factorSiToUnit	1.0
	physicalDimension	Temperature

Table 3.2: Unit DegreeCelsius

The corresponding ARXML description is:

**Listing 3.5: Unit Degree Celsius** 



The following is presented for completeness, although not directly needed for  $T_{Plant}$ . It is possible to link more than one unit to a physical dimension. So in the model, there is also a definition for the unit Kelvin:

C	Common Unit attributes	
S	hortName	Kelvin
	displayName	K
	offsetSiToUnit	0.0
	factorSiToUnit	1.0
	physicalDimension	Temperature

Table 3.3: Unit Kelvin

The corresponding ARXML Code is:

**Listing 3.6: Unit Kelvin** 

### 3.1.6.2.2 Application Data Type

A new ApplicationDataType is defined for temperatures in degree Celsius:

C	Common ApplicationDataType attributes			
S	shortName Temperature_C			
C	ategory	VALUE		
d	lesc	Type for a temp	erature in [°C]	
s	wCalibrationAccess	readOnly		
u	nit	DegreeCelsi	us	
R	ange			
C	conversion			
	category	LINEAR		
	direction	compuIntern	alToPhys	
	desc	lowerLimit	upperLimit	compuNumerator/ compuDenominator
	-	-	-	$Phys = \frac{-273.15 + 1 * Internal}{1}$

Table 3.4: ApplicationDataType Temperature\_C



The corresponding ARXML Code is split between the definition of the Application—DataType:

```
<APPLICATION-PRIMITIVE-DATA-TYPE>
  <SHORT-NAME>Temperature_C</SHORT-NAME>
    <L-2 L="EN">Type for a temperature in [\hat{A}^{\circ}C]</L-2>
  </DESC>
  <CATEGORY>VALUE</CATEGORY>
  <SW-DATA-DEF-PROPS>
    <SW-DATA-DEF-PROPS-VARIANTS>
      <SW-DATA-DEF-PROPS-CONDITIONAL>
        <SW-CALIBRATION-ACCESS>READ-ONLY</SW-CALIBRATION-ACCESS>
        <COMPU-METHOD-REF DEST="COMPU-METHOD">/McInt/CompuMethods/
           Temperature_C</COMPU-METHOD-REF>
        <UNIT-REF DEST="UNIT">/McInt/Units/DegreeCelsius/UNIT-REF>
      </SW-DATA-DEF-PROPS-CONDITIONAL>
    </SW-DATA-DEF-PROPS-VARIANTS>
  </SW-DATA-DEF-PROPS>
</APPLICATION-PRIMITIVE-DATA-TYPE>
```

**Listing 3.7: Application Data Type** 

and the CompuMethod, which is referenced by the ApplicationDataType:

```
<COMPU-METHOD>
  <SHORT-NAME>Temperature_C
    <L-2 L="EN">Conversion from [\hat{A}^{\circ}C] to [K]</L-2>
  </DESC>
  <CATEGORY>LINEAR</CATEGORY>
  <DISPLAY-FORMAT>%.1f
  <UNIT-REF DEST="UNIT">/McInt/Units/DegreeCelsius/UNIT-REF>
  <COMPU-INTERNAL-TO-PHYS>
    <COMPU-SCALES>
      <COMPU-SCALE>
        <COMPU-RATIONAL-COEFFS>
          <COMPU-NUMERATOR>
            <V>-273.15</V>
            <V>1</V>
          </COMPU-NUMERATOR>
          <COMPU-DENOMINATOR>
            <V>1</V>
          </COMPU-DENOMINATOR>
        </COMPU-RATIONAL-COEFFS>
      </COMPU-SCALE>
    </COMPU-SCALES>
  </COMPU-INTERNAL-TO-PHYS>
</COMPU-METHOD>
```

**Listing 3.8: Conversion** 

This ApplicationDataType is mapped to the ImplementationDataType float32. The DataTypeMappingSet that contains this DataTypeMap is referenced inside the SwcInternalBehaviors of the ApplicationSwComponentTypes presented later on.



**Listing 3.9: Type Mapping** 

For completeness, also the ARXML containing the definition of float32 is inserted here:

```
<AR-PACKAGE>
 <SHORT-NAME>AUTOSAR_PlatformTypes
 <AR-PACKAGES>
   <AR-PACKAGE>
     <SHORT-NAME>ImplementationDataTypes
     <ELEMENTS>
       <IMPLEMENTATION-DATA-TYPE>
         <SHORT-NAME>float32</SHORT-NAME>
         <CATEGORY>VALUE</CATEGORY>
         <SW-DATA-DEF-PROPS>
           <SW-DATA-DEF-PROPS-VARIANTS>
             <SW-DATA-DEF-PROPS-CONDITIONAL>
               <BASE-TYPE-REF DEST="SW-BASE-TYPE">/AUTOSAR PlatformTypes/
                  SwBaseTypes/float32</BASE-TYPE-REF>
             </SW-DATA-DEF-PROPS-CONDITIONAL>
           </SW-DATA-DEF-PROPS-VARIANTS>
         </SW-DATA-DEF-PROPS>
       </IMPLEMENTATION-DATA-TYPE>
     </ELEMENTS>
   </AR-PACKAGE>
   <AR-PACKAGE>
     <SHORT-NAME>SwBaseTypes
     <ELEMENTS>
       <SW-BASE-TYPE>
         <SHORT-NAME>float32
         <CATEGORY>FIXED_LENGTH</CATEGORY>
         <BASE-TYPE-SIZE>32</BASE-TYPE-SIZE>
         <BASE-TYPE-ENCODING>IEEE754</base-TYPE-ENCODING>
       </SW-BASE-TYPE>
     </ELEMENTS>
   </AR-PACKAGE>
 </AR-PACKAGES>
</AR-PACKAGE>
```

Listing 3.10: Implementation Type and Base Type



#### 3.1.6.2.3 Port Interface

The Temperature\_C is used to define the SenderReceiverInterface which is used to type the "transport" of a temperature in degree Celsius between SwComponentTypes. Please note that in the show case, this PortInterface is not only used to type the "transport" of  $T_{Plant}$ , but also to type the "transport" of  $T_{Env}$ .

Common SenderReceiverInterface attributes	
shortName TemperatureSRIF	
desc Interface type for transferring temperatures in $[\ddot{i}_{\dot{c}} \frac{1}{2}C]$	
properties of the dataEleme	ents
properties of VariableDataPrototype	
shortName	Т
type	Temperature_C
swImplPolicy	standard
swCalibrationAccess	readOnly
swAddrMethod	VAR

Table 3.5: SenderReceiverInterface TemperatureSRIF

#### In ARXML:

```
<SENDER-RECEIVER-INTERFACE>
 <SHORT-NAME>TemperatureSRIF</SHORT-NAME>
 <DESC>
   <L-2 L="EN">Interface type for transferring temperatures in [\hat{A}^{\circ}C]</L-2>
 <IS-SERVICE>false
 <DATA-ELEMENTS>
    <VARIABLE-DATA-PROTOTYPE>
      <SHORT-NAME>T</SHORT-NAME>
      <SW-DATA-DEF-PROPS>
        <SW-DATA-DEF-PROPS-VARIANTS>
          <SW-DATA-DEF-PROPS-CONDITIONAL>
            <SW-ADDR-METHOD-REF DEST="SW-ADDR-METHOD">/McInt/SwAddrMethods/
               VAR</SW-ADDR-METHOD-REF>
            <SW-CALIBRATION-ACCESS>READ-ONLY</SW-CALIBRATION-ACCESS>
            <SW-IMPL-POLICY>STANDARD</SW-IMPL-POLICY>
          </SW-DATA-DEF-PROPS-CONDITIONAL>
        </SW-DATA-DEF-PROPS-VARIANTS>
      </SW-DATA-DEF-PROPS>
      <TYPE-TREF DEST="APPLICATION-PRIMITIVE-DATA-TYPE">/McInt/
         ApplicationDataTypes/Temperature_C</TYPE-TREF>
   </VARIABLE-DATA-PROTOTYPE>
 </DATA-ELEMENTS>
</SENDER-RECEIVER-INTERFACE>
```

**Listing 3.11: Port Interface** 

For completeness, also the referenced SwAddrMethod is described here:



С	Common SwAddrMethod attributes		
S	hortName	VAR	
d	esc	Memory section for variables	
	sectionType	var	
	memoryAllocation- KeywordPolicy	addrMethodShortName	
	sectionInitializa- tionPolicy	-	
	option	safetyQM	

Table 3.6: SwAddrMethod VAR

#### In ARXML:

```
<SW-ADDR-METHOD>
     <SHORT-NAME>VAR</SHORT-NAME>
     <DESC>
     <L-2 L="EN">Memory section for variables</L-2>
     </DESC>
     <OPTIONS>
     <OPTION>>
     </OPTIONS>
</SW-ADDR-METHOD>
```

**Listing 3.12: Software Address Method** 

#### 3.1.6.2.4 Software Components

The two ApplicationSwComponentTypes Controller and Plant are using  $T_{Plant}$ .

In Plant a PPortPrototype, typed by TemperatureSRIF, is defined for sending out  $T_{Plant}.$ 

Furthermore dataWriteAccess is granted to the single RunnableEntity in this ApplicationSwComponentType. You also see the symbol, i.e. the name of the implementing C function, as well as the TimingEvent that triggers the execution of the RunnableEntity. These two are of further interest for tying together the system.

Common ApplicationSwComponentType attributes		
shortName Plant		
properties of the ports		
properties of PPortProto	properties of PPortPrototype	
shortName PlantTemperaturePPP		
desc	Port for sending out the estimated temperature of the plant	
providedInterface	TemperatureSRIF	
[]		



#### $\wedge$

internalBehavior	PlantInternalBehavior	
[]		
properties of the runnables		
properties of RunnableEntity		
shortName	plantRE	
symbol	plantRE_func	
properties of the events		
properties of TimingEvent		
shortName	plant100ms	
startOnEvent	plantRE	
period	0.1	

Table 3.7: ApplicationSwComponentType Plant

#### In ARXML:

```
<APPLICATION-SW-COMPONENT-TYPE>
 <SHORT-NAME>Plant
 <PORTS>
   <P-PORT-PROTOTYPE>
     <SHORT-NAME>PlantTemperaturePPP</SHORT-NAME>
       <L-2 L="EN">Port for sending out the estimated temperature of the
          plant</L-2>
     </DESC>
     <PROVIDED-INTERFACE-TREF DEST="SENDER-RECEIVER-INTERFACE">/McInt/
        PortInterfaces/TemperatureSRIF</PROVIDED-INTERFACE-TREF>
   </P-PORT-PROTOTYPE>
 </PORTS>
 <INTERNAL-BEHAVIORS>
   <SWC-INTERNAL-BEHAVIOR>
     <SHORT-NAME>PlantInternalBehavior
     <DATA-TYPE-MAPPING-REFS>
       <DATA-TYPE-MAPPING-REF DEST="DATA-TYPE-MAPPING-SET">/McInt/
          DataTypeMappings/DataTypeMappingSet</DATA-TYPE-MAPPING-REF>
     </DATA-TYPE-MAPPING-REFS>
     <EVENTS>
       <TIMING-EVENT>
         <SHORT-NAME>plant100ms
         <START-ON-EVENT-REF DEST="RUNNABLE-ENTITY">/McInt/SwComponents/
            Plant/PlantInternalBehavior/plantRE</START-ON-EVENT-REF>
         <PERIOD>0.1</PERIOD>
       </TIMING-EVENT>
     </EVENTS>
     <RUNNABLES>
       <RUNNABLE-ENTITY>
         <SHORT-NAME>plantRE
         <DATA-WRITE-ACCESSS>
           <VARIABLE-ACCESS>
             <SHORT-NAME>DWA_PlantTemperature
```



```
<ACCESSED-VARIABLE>
                <AUTOSAR-VARIABLE-IREF>
                  <PORT-PROTOTYPE-REF DEST="P-PORT-PROTOTYPE">/McInt/
                     SwComponents/Plant/PlantTemperaturePPP</PORT-PROTOTYPE
                     -REF>
                  <TARGET-DATA-PROTOTYPE-REF DEST="VARIABLE-DATA-PROTOTYPE"
                     >/McInt/PortInterfaces/TemperatureSRIF/T</TARGET-DATA-
                     PROTOTYPE-REF>
                </AUTOSAR-VARIABLE-IREF>
              </ACCESSED-VARIABLE>
            </VARIABLE-ACCESS>
          </DATA-WRITE-ACCESSS>
        </RUNNABLE-ENTITY>
      </RUNNABLES>
   </SWC-INTERNAL-BEHAVIOR>
 </INTERNAL-BEHAVIORS>
</APPLICATION-SW-COMPONENT-TYPE>
```

In Controller a RPortPrototype, typed by TemperatureSRIF, is defined for receiving  $T_{Plant}$ .

**Listing 3.13: Plant** 

Furthermore dataReadAccess is granted to the single RunnableEntity in this ApplicationSwComponentType. You also see the symbol, i.e. the name of the implementing C function, as well as the TimingEvent that triggers the execution of the RunnableEntity. These two are of further interest for tying together the system.

Common ApplicationSwComponentType attributes	
shortName	Controller
properties of the ports	
properties of RPortPrototype	
shortName	TemperatureRPP
desc	Port to receive the temperature of the plant
requiredInterface	TemperatureSRIF
[]	
internalBehavior	ControllerInternalBehavior
[]	
properties of the runnables	
properties of RunnableEntity	
shortName	ControllerRE
symbol	controllerRE_func
properties of the events	
properties of TimingEver	nt
shortName	controller100ms
startOnEvent	ControllerRE
period	0.1

Table 3.8: ApplicationSwComponentType Controller



#### In ARXML:

```
<APPLICATION-SW-COMPONENT-TYPE>
 <SHORT-NAME>Controller
 <PORTS>
    <R-PORT-PROTOTYPE>
     <SHORT-NAME>TemperatureRPP</SHORT-NAME>
        <L-2 L="EN">Port to receive the temperature of the plant</L-2>
      </DESC>
      <REQUIRED-INTERFACE-TREF DEST="SENDER-RECEIVER-INTERFACE">/McInt/
         PortInterfaces/TemperatureSRIF</REQUIRED-INTERFACE-TREF>
    </R-PORT-PROTOTYPE>
  </PORTS>
  <INTERNAL-BEHAVIORS>
   <SWC-INTERNAL-BEHAVIOR>
      <SHORT-NAME>ControllerInternalBehavior</SHORT-NAME>
      <DATA-TYPE-MAPPING-REFS>
        <DATA-TYPE-MAPPING-REF DEST="DATA-TYPE-MAPPING-SET">/McInt/
           DataTypeMappings/DataTypeMappingSet</DATA-TYPE-MAPPING-REF>
      </DATA-TYPE-MAPPING-REFS>
      <EVENTS>
        <TIMING-EVENT>
          <SHORT-NAME>controller100ms</SHORT-NAME>
          <START-ON-EVENT-REF DEST="RUNNABLE-ENTITY">/McInt/SwComponents/
             Controller/ControllerInternalBehavior/ControllerRE</START-ON-
             EVENT-REF>
          <PERIOD>0.1</PERIOD>
        </TIMING-EVENT>
      </EVENTS>
      <RUNNARLES>
        <RUNNABLE-ENTITY>
          <SHORT-NAME>ControllerRE</SHORT-NAME>
          <DATA-READ-ACCESSS>
            <VARIABLE-ACCESS>
              <SHORT-NAME>DRA_temperature
              <ACCESSED-VARIABLE>
                <AUTOSAR-VARIABLE-IREF>
                  <PORT-PROTOTYPE-REF DEST="R-PORT-PROTOTYPE">/McInt/
                     SwComponents/Controller/TemperatureRPP</PORT-PROTOTYPE
                     -REF>
                  <TARGET-DATA-PROTOTYPE-REF DEST="VARIABLE-DATA-PROTOTYPE"
                     >/McInt/PortInterfaces/TemperatureSRIF/T</TARGET-DATA-
                     PROTOTYPE-REF>
                </AUTOSAR-VARIABLE-IREF>
              </ACCESSED-VARIABLE>
            </VARIABLE-ACCESS>
          </DATA-READ-ACCESSS>
        </RUNNABLE-ENTITY>
      </RUNNABLES>
    </SWC-INTERNAL-BEHAVIOR>
  </INTERNAL-BEHAVIORS>
</APPLICATION-SW-COMPONENT-TYPE>
```

**Listing 3.14: Controller** 



The two ApplicationSwComponentTypes are then used to type SwComponent-Prototypes in the Composition. The PortPrototypes of the SwComponent-Prototypes are connected by an AssemblySwConnector:

Common CompositionSwComponentType attributes	
shortName	Composition
properties of the components	
properties of SwComponentPrototype	
shortName	CPT_Controller
type	Controller
properties of SwComponentPrototype	
shortName	CPT_Plant
type	Plant
[]	

Table 3.9: CompositionSwComponentType Composition

#### In ARXML:

```
<COMPOSITION-SW-COMPONENT-TYPE>
 <SHORT-NAME>Composition
 <COMPONENTS>
   <SW-COMPONENT-PROTOTYPE>
     <SHORT-NAME>CPT Controller
     <TYPE-TREF DEST="APPLICATION-SW-COMPONENT-TYPE">/McInt/SwComponents/
         Controller</TYPE-TREF>
   </SW-COMPONENT-PROTOTYPE>
   <SW-COMPONENT-PROTOTYPE>
     <SHORT-NAME>CPT_Plant
     <TYPE-TREF DEST="APPLICATION-SW-COMPONENT-TYPE">/McInt/SwComponents/
         Plant</TYPE-TREF>
   </SW-COMPONENT-PROTOTYPE>
 </COMPONENTS>
 <CONNECTORS>
   <assembly-sw-connector>
     <SHORT-NAME>
        ASC_CPT_Plant_TemperaturePPP_CPT_Controller_TemperatureRPP</SHORT-
        NAME>
     <PROVIDER-IREF>
       <CONTEXT-COMPONENT-REF DEST="SW-COMPONENT-PROTOTYPE">/McInt/
           SwComponents/Composition/CPT Plant</CONTEXT-COMPONENT-REF>
       <TARGET-P-PORT-REF DEST="P-PORT-PROTOTYPE">/McInt/SwComponents/
           Plant/PlantTemperaturePPP</TARGET-P-PORT-REF>
     </PROVIDER-IREF>
     <REQUESTER-IREF>
       <CONTEXT-COMPONENT-REF DEST="SW-COMPONENT-PROTOTYPE">/McInt/
           SwComponents/Composition/CPT_Controller</CONTEXT-COMPONENT-REF>
       <TARGET-R-PORT-REF DEST="R-PORT-PROTOTYPE">/McInt/SwComponents/
           Controller/TemperatureRPP</TARGET-R-PORT-REF>
     </REQUESTER-IREF>
   </ASSEMBLY-SW-CONNECTOR>
 </CONNECTORS>
```



</COMPOSITION-SW-COMPONENT-TYPE>

#### **Listing 3.15: Composition**

#### 3.1.6.3 System

In the ECU\_Extract, i.e. a System with category ECU\_EXTRACT, the Composition is used to type the rootSoftwareComposition. All SwComponentPrototypes in Composition are mapped to the single EcuInstance in this show case.

```
<ECU-INSTANCE>
 <SHORT-NAME>EcuInstance
</ECU-INSTANCE>
<SYSTEM>
 <SHORT-NAME>EcuExtract
 <CATEGORY>ECU EXTRACT</CATEGORY>
 <MAPPINGS>
 <SYSTEM-MAPPING>
   <SHORT-NAME>SystemMapping
   <SW-MAPPINGS>
   <SWC-TO-ECU-MAPPING>
     <SHORT-NAME>SwcToEcuMapping
     <COMPONENT-IREFS>
       <CONTEXT-COMPOSITION-REF DEST="ROOT-SW-COMPOSITION-PROTOTYPE">/
          McInt/System/EcuExtract/RootSwCompositionPrototype</CONTEXT-
          COMPOSITION-REF>
       <TARGET-COMPONENT-REF DEST="SW-COMPONENT-PROTOTYPE">/McInt/
          SwComponents/Composition/CPT_Controller</TARGET-COMPONENT-REF>
     </COMPONENT-IREF>
     <COMPONENT-IREF>
       <CONTEXT-COMPOSITION-REF DEST="ROOT-SW-COMPOSITION-PROTOTYPE">/
          McInt/System/EcuExtract/RootSwCompositionPrototype</CONTEXT-
          COMPOSITION-REF>
       <TARGET-COMPONENT-REF DEST="SW-COMPONENT-PROTOTYPE">/McInt/
          SwComponents/Composition/CPT Plant</TARGET-COMPONENT-REF>
     </COMPONENT-IREF>
     </COMPONENT-IREFS>
     <ECU-INSTANCE-REF DEST="ECU-INSTANCE">/McInt/System/EcuInstance</ECU-
        INSTANCE-REF>
   </SWC-TO-ECU-MAPPING>
   </SW-MAPPINGS>
 </SYSTEM-MAPPING>
 </MAPPINGS>
 <ROOT-SOFTWARE-COMPOSITIONS>
 <ROOT-SW-COMPOSITION-PROTOTYPE>
   <SHORT-NAME>RootSwCompositionPrototype
   <FLAT-MAP-REF DEST="FLAT-MAP">/McInt/FlatMaps/FlatMap
   <SOFTWARE-COMPOSITION-TREF DEST="COMPOSITION-SW-COMPONENT-TYPE">/McInt/
       SwComponents/Composition</SOFTWARE-COMPOSITION-TREF>
 </ROOT-SW-COMPOSITION-PROTOTYPE>
```

</ROOT-SOFTWARE-COMPOSITIONS>



</SYSTEM>

#### Listing 3.16: System and EcuInstance

The FlatMap that is referenced in the ECU\_Extract, gives the name TPlant to a dataElement (see ecuExtractReference below). The name TPlant is later on displayed in the MC Tool.

```
<FLAT-MAP>
 <SHORT-NAME>FlatMap</SHORT-NAME>
 <INSTANCES>
  <FLAT-INSTANCE-DESCRIPTOR>
   <SHORT-NAME>TPlant
   <ECU-EXTRACT-REFERENCE-IREF>
   <CONTEXT-ELEMENT-REF DEST="ROOT-SW-COMPOSITION-PROTOTYPE">/McInt/System
       /EcuExtract/RootSwCompositionPrototype</CONTEXT-ELEMENT-REF>
   <CONTEXT-ELEMENT-REF DEST="SW-COMPONENT-PROTOTYPE">/McInt/SwComponents/
       Composition/CPT_Plant</CONTEXT-ELEMENT-REF>
    <CONTEXT-ELEMENT-REF DEST="P-PORT-PROTOTYPE">/McInt/SwComponents/Plant/
       PlantTemperaturePPP</CONTEXT-ELEMENT-REF>
   <TARGET-REF DEST="VARIABLE-DATA-PROTOTYPE">/McInt/PortInterfaces/
       TemperatureSRIF/T</TARGET-REF>
   </ECU-EXTRACT-REFERENCE-IREF>
 </FLAT-INSTANCE-DESCRIPTOR>
  </INSTANCES>
</FLAT-MAP>
```

Listing 3.17: FlatMap

### 3.1.6.4 ECU Configuration

DEFINITION-REF>

There are further things that need to be defined before the RTE and the OS can be generated. For instance, the order in which the RTEEvents for the RunnableEntitys are invoked and the assignment to an OsTask. This is done via EcucModuleConfigurationValues. The interesting parts of the RTE configuration are:

```
<ECUC-CONTAINER-VALUE>
 <SHORT-NAME>controller100ms</SHORT-NAME>
 <DEFINITION-REF DEST="ECUC-PARAM-CONF-CONTAINER-DEF">/AUTOSAR/EcucDefs/
    Rte/RteSwComponentInstance/RteEventToTaskMapping
 <PARAMETER-VALUES>
 <ECUC-NUMERICAL-PARAM-VALUE>
   <DEFINITION-REF DEST="ECUC-INTEGER-PARAM-DEF">/AUTOSAR/EcucDefs/Rte/
      RteSwComponentInstance/RteEventToTaskMapping/RtePositionInTask</
      DEFINITION-REF>
   <VALUE>3</VALUE>
 </ECUC-NUMERICAL-PARAM-VALUE>
 </PARAMETER-VALUES>
 <REFERENCE-VALUES>
 <ECUC-REFERENCE-VALUE>
   <DEFINITION-REF DEST="ECUC-REFERENCE-DEF">/AUTOSAR/EcucDefs/Rte/
      RteSwComponentInstance/RteEventToTaskMapping/RteMappedToTaskRef</
```



```
<VALUE-REF DEST="ECUC-CONTAINER-VALUE">/McInt/OS/OS CFG/task 100ms
       VALUE-REF>
 </ECUC-REFERENCE-VALUE>
  <ECUC-REFERENCE-VALUE>
    <DEFINITION-REF DEST="ECUC-FOREIGN-REFERENCE-DEF">/AUTOSAR/EcucDefs/Rte
       /RteSwComponentInstance/RteEventToTaskMapping/RteEventRef</
       DEFINITION-REF>
    <VALUE-REF DEST="TIMING-EVENT">/McInt/SwComponents/Controller/
       ControllerInternalBehavior/controller100ms</VALUE-REF>
 </ECUC-REFERENCE-VALUE>
  </REFERENCE-VALUES>
</ECUC-CONTAINER-VALUE>
<ECUC-CONTAINER-VALUE>
 <SHORT-NAME>plant100ms
 <DEFINITION-REF DEST="ECUC-PARAM-CONF-CONTAINER-DEF">/AUTOSAR/EcucDefs/
     Rte/RteSwComponentInstance/RteEventToTaskMapping
 <PARAMETER-VALUES>
 <ECUC-NUMERICAL-PARAM-VALUE>
    <DEFINITION-REF DEST="ECUC-INTEGER-PARAM-DEF">/AUTOSAR/EcucDefs/Rte/
       RteSwComponentInstance/RteEventToTaskMapping/RtePositionInTask</
       DEFINITION-REF>
    <VALUE>2</VALUE>
 </ECUC-NUMERICAL-PARAM-VALUE>
 </PARAMETER-VALUES>
 <REFERENCE-VALUES>
  <ECUC-REFERENCE-VALUE>
    <DEFINITION-REF DEST="ECUC-REFERENCE-DEF">/AUTOSAR/EcucDefs/Rte/
       RteSwComponentInstance/RteEventToTaskMapping/RteMappedToTaskRef</
       DEFINITION-REF>
    <VALUE-REF DEST="ECUC-CONTAINER-VALUE">/McInt/OS/OS_CFG/task_100ms<//
       VALUE-REF>
 </ECUC-REFERENCE-VALUE>
  <ECUC-REFERENCE-VALUE>
    <DEFINITION-REF DEST="ECUC-FOREIGN-REFERENCE-DEF">/AUTOSAR/EcucDefs/Rte
       /RteSwComponentInstance/RteEventToTaskMapping/RteEventRef</
       DEFINITION-REF>
    <VALUE-REF DEST="TIMING-EVENT">/McInt/SwComponents/Plant/
       PlantInternalBehavior/plant100ms</VALUE-REF>
 </ECUC-REFERENCE-VALUE>
  </REFERENCE-VALUES>
</ECUC-CONTAINER-VALUE>
```

**Listing 3.18: RTE Config** 

This part of the OS configuration defines the name of the OSTask, that we see later on in the generated C code:



Listing 3.19: OsConfig

These configurations are tied to the ECU\_Extract by an EcucValueCollection:

Listing 3.20: EcuC Value Collection

This completes the presentation of the AUTOSAR modeling in our walk through.

#### 3.1.6.5 RTE Generation

In the following, some snippets of the generated RTE are presented. However, they are examples only and may differ if different RTE generators are used.

Among other things, the OsTask is generated as defined in the ECU configuration above:



```
18    ...
19    TPlant = Rte_ImplicitBufs.isa_1._task_100ms.sbuf1.value;
20    ...
21 } /* task_100ms */
22    ...
```

#### Listing 3.21: Rte.c

Also a MACRO to write  $T_{Plant}$  in the Plant

#### Listing 3.22: Rte\_Plant.h

and to read  $T_{Plant}$  in the Controller

Listing 3.23: Rte\_Controller.h

was generated. Furthermore, the McSupport file is generated as an interface between the "AUTOSAR world" and the "A2L world". As the reader can see, this is a compilation of necessary data from the AUTOSAR model presented before:

```
<BSW-IMPLEMENTATION>
 <SHORT-NAME>Rte
 <MC-SUPPORT>
   <MC-VARIABLE-INSTANCES>
     <MC-DATA-INSTANCE>
      <SHORT-NAME>TPlant
      <DESC>
        <L-2 L="EN">Type for a temperature in [\hat{A}^{\circ}C]</L-2>
      </DESC>
      <CATEGORY>VALUE</CATEGORY>
      <FLAT-MAP-ENTRY-REF DEST="FLAT-INSTANCE-DESCRIPTOR">/McInt/FlatMaps/
          FlatMap/TPlant</FLAT-MAP-ENTRY-REF>
      <RESULTING-PROPERTIES>
        <SW-DATA-DEF-PROPS-VARIANTS>
          <SW-DATA-DEF-PROPS-CONDITIONAL>
            <BASE-TYPE-REF DEST="SW-BASE-TYPE">/AUTOSAR_PlatformTypes/
                SwBaseTypes/float32</BASE-TYPE-REF>
            <SW-CALIBRATION-ACCESS>READ-ONLY</SW-CALIBRATION-ACCESS>
            <COMPU-METHOD-REF DEST="COMPU-METHOD">/McInt/CompuMethods/
                Temperature C</COMPU-METHOD-REF>
            <DISPLAY-FORMAT>%.1f
            <UNIT-REF DEST="UNIT">/McInt/Units/DegreeCelsius/UNIT-REF>
          </SW-DATA-DEF-PROPS-CONDITIONAL>
        </SW-DATA-DEF-PROPS-VARIANTS>
      </RESULTING-PROPERTIES>
      <SYMBOL>TPlant</SYMBOL>
```

</MC-DATA-INSTANCE>



```
</MC-VARIABLE-INSTANCES>
</MC-SUPPORT>
</BSW-IMPLEMENTATION>
```

Listing 3.24: McSupportData

## 3.1.6.6 Implementation in C

The implementation in C-Code is a direct implementation of the physical equations. The Plant uses the MACRO, generated by the RTE generator, to write  $T_{Plant}$ :

```
1 #include "Rte_Plant.h"
3 FUNC (void, Plant_CODE) plantRE_func (void)
5
    /* heat capacity of 1 assumed
                                                                   */
    float32 lTPlant = lQPlant;
     /* calculate heat flows, store in PIM to make them measurable */
8
    *Rte Pim QEnv() = (lTenv - lTPlant) * lEFactor * lDt;
9
10
     /* heat capacity of 1 assumed
                                                                   */
    lTPlant = lQPlant;
12
    /* Write output of plant: temerature of plant
    Rte_IWrite_plantRE_PlantTemperaturePPP_T(lTPlant);
16 }
```

Listing 3.25: Plant

The Controller uses the MACRO, generated by the RTE generator, to read  $T_{Plant}$ :

**Listing 3.26: Controller** 

#### 3.1.6.7 A2L File

Using the McSupport file and the map file from the linker, an example A2L file was generated for this show case. The snippet below is an example only and could differ if a different A2L file generator is used:



```
. . .
2 /begin MEASUREMENT TPlant
3 "TPlant"
        FLOAT32 IEEE
        McInt_CompuMethods_Temperature_C
5
6
        Ω
         -1E+32
8
         1E+32
9
        DISPLAY_IDENTIFIER "TPlant"
10
        ECU_ADDRESS 0xe000001c
11
        FORMAT "%.1f"
       PHYS UNIT "°C"
13
14 /end MEASUREMENT
15
  /begin UNIT McInt_PhysicalDimensions_Temparature
         "McInt_PhysicalDimensions_Temparature"
17
         "McInt_PhysicalDimensions_Temparature"
18
        EXTENDED_SI
        SI_EXPONENTS 0 0 0 0 1 0 0
21 /end UNIT
22 /begin UNIT McInt_Units_DegreeCelsius
   "McInt_Units_DegreeCelsius"
        "°C"
24
         DERIVED
25
        REF_UNIT McInt_PhysicalDimensions_Temparature
26
         UNIT_CONVERSION 1 -273.15
28 /end UNIT
29 /begin COMPU_METHOD McInt_CompuMethods_Temperature_C
         "McInt_CompuMethods_Temperature_C"
30
         LINEAR
31
         "%f"
32
         "°C"
33
        COEFFS_LINEAR 1 -273.15
        REF_UNIT McInt_Units_DegreeCelsius
36 /end COMPU METHOD
```

Listing 3.27: A2L File

#### 3.1.6.8 Measurement and Calibration Tool

The A2L file is then used by a MC tool to measure  $T_{Plant}$ . Of course, in addition to the A2L file a suitable ECU access<sup>4</sup> must be available, to actually do measurement and calibration with the AUTOSAR system of this show case. However, the ECU access is not presented because this is not in the focus of this show case.

Below is a typical screen shot from a MC tool during an actual measurement and calibration task. You can see  $T_{Plant}$  measured and displayed in degree Celsius.

<sup>&</sup>lt;sup>4</sup>for instance, a measurement and calibration service like XCP or a hardware access to the memory of the micro controller



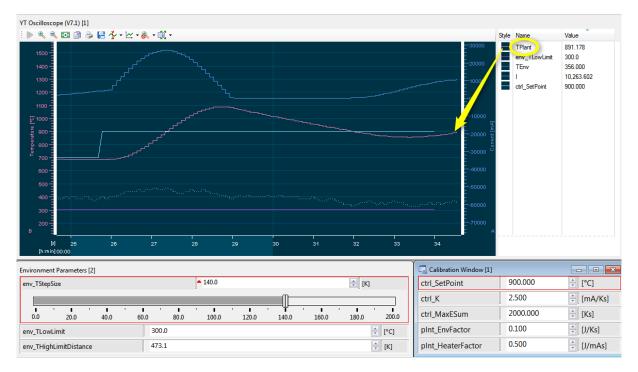


Figure 3.12: Screenshot of a MC Tool



# 3.1.7 Show cases in the Example

# 3.1.7.1 CompositionSwComponentTypes

ommon CompositionSwComponentType attributes			
hortName	Composition		
roperties of the components			
properties of SwCon	properties of SwComponentPrototype		
shortName	CPT_Controller		
type	Controller		
properties of SwCon	mponentPrototype		
shortName	CPT_Parameters		
type	Parameters		
properties of SwCon	properties of SwComponentPrototype		
shortName	CPT_Plant		
type	Plant		
properties of SwComponentPrototype			
shortName	CPT_Environment		
type	Environment		

Table 3.10: CompositionSwComponentType Composition



# 3.1.7.2 ParameterSwComponentTypes

Common ParameterSwComponentType attributes			
shortName	Parameters		
desc	Type for providing the parameters to the ApplicationSwCompoments		
properties of the ports	properties of the ports		
properties of PPortProto	properties of PPortPrototype		
shortName	ControllerPPP		
desc	Port for providing the parameters for the controller		
providedInterface	ControllerPIF		
properties of PPortProto	properties of PPortPrototype		
shortName	PlantPPP		
desc	Port for providing the parameters for the plant		
providedInterface	PlantPIF		
properties of PPortProto	otype		
shortName	EnvironmentPPP		
desc	Port for providing the parameters for the environment		
providedInterface	EnvironmentPIF		
properties of PPortPrototype			
shortName	DtPPP		
desc	Time of one time step		
providedInterface	DtPIF		

Table 3.11: ParameterSwComponentType Parameters



# 3.1.7.3 ApplicationSwComponentTypes

hortName	Controller	
roperties of the ports		
properties of RPortPrototype		
shortName	TemperatureRPP	
desc	Port to receive the temperature of the plant	
requiredInterface	TemperatureSRIF	
properties of PPortPrototype		
shortName	CurrentPPP	
desc	Port for sending out the current output by this controller	
providedInterface	CurrentSRIF	
properties of RPortPrototype		
shortName	ControllerParamsRPP	
desc	Port to get the parameters for the controller	
requiredInterface	ControllerPIF	
properties of RPortPrototype		
shortName	DtRPP	
desc	Port to get delta t, i.e. time of one time step	
requiredInterface	DtPIF	
 nternalBehavior	ControllerInternalBehavior	

Table 3.12: ApplicationSwComponentType Controller

Common SwcInternalBehavior attributes		
shortName	ControllerInternalBehavior	
properties of implicitInterRunnableVariableS / explicitInterRunnableVariableS		
properties of VariableDa	properties of VariableDataPrototype	
shortName	ESum	
desc	Internal state of the controller: the sum of control errors	
type	ESum	
swImplPolicy	standard	
swCalibrationAccess	readOnly	
swAddrMethod	CODE	
properties of the arTypedPe	erInstanceMemory <b>S</b>	
properties of VariableDa	properties of VariableDataPrototype	
shortName	E	
desc	Measurement point for the control error, the deviation between set point and acutal temperature of the plant, in the current time step	
type	Temperature_K	
swImplPolicy	standard	
swCalibrationAccess	readOnly	



swAddrMethod	CODE		
properties of the runnabl	properties of the runnables		
properties of Runnable	properties of RunnableEntity		
shortName	ControllerRE		
symbol	controllerRE_func		
properties of the events	properties of the events		
properties of TimingEvent			
shortName	controller100ms		
startOnEvent	ControllerRE		
period	0.1		

 Table 3.13: SwcInternalBehavior ControllerInternalBehavior

Common ApplicationSwCor	ommon ApplicationSwComponentType attributes		
shortName	Plant		
properties of the ports	roperties of the ports		
properties of RPortProt	otype		
shortName	CurrentRPP		
desc	Port to receive the current from the controller		
requiredInterface	CurrentSRIF		
properties of PPortProt	otype		
shortName	PlantTemperaturePPP		
desc	Port for sending out the estimated temperature of the plant		
providedInterface	TemperatureSRIF		
properties of RPortProt	properties of RPortPrototype		
shortName	PlantParamsRPP		
desc	Port to get the parameters for the plant		
requiredInterface	PlantPIF		
properties of RPortProt	otype		
shortName	EnvTemperatureRPP		
desc	Port to receive the tempertature of the environment		
requiredInterface	TemperatureSRIF		
properties of RPortProt	properties of RPortPrototype		
shortName	DtRPP		
desc	Port to get delta t, i.e. time of one time step		
requiredInterface	DtPIF		
internalBehavior	PlantInternalBehavior		

Table 3.14: ApplicationSwComponentType Plant



nortName	PlantInternalBehavior
roperties of implicitInte	erRunnableVariableS / explicitInterRunnableVariableS
properties of VariableDa	ataPrototype
shortName	QPlant
desc	Internal state of the plant: the stored energy quantity in the current time step
type	Energy
swImplPolicy	standard
swCalibrationAccess	readOnly
swAddrMethod	CODE
roperties of the arTypedPe	erInstanceMemoryS
properties of VariableDa	ataPrototype
shortName	QHeater
desc	Measurement point for heat flow between the electrical heater and the plant in the current time step.
type	Energy
swImplPolicy	standard
swCalibrationAccess	readOnly
swAddrMethod	VAR
properties of VariableDa	ataPrototype
shortName	QEnv
desc	Measurement point for heat flow between the plant and the environment in the current time step.
type	Energy
swImplPolicy	standard
swCalibrationAccess	readOnly
swAddrMethod	CODE
operties of the runnables	<b>S</b>
properties of RunnableEr	ntity
shortName	plantRE
symbol	plantRE_func
roperties of the events	
properties of TimingEver	nt
shortName	plant100ms
startOnEvent	plantRE
period	0.1

 Table 3.15: SwcInternalBehavior PlantInternalBehavior





Common ApplicationSwComponentType attributes			
shortName	Environment		
properties of the ports	properties of the ports		
properties of PPortProto	otype		
shortName	EnvTemperaturePPP		
desc	Port to send out the temperature of the environment		
providedInterface	TemperatureSRIF		
properties of RPortProto	properties of RPortPrototype		
shortName	EnvParamsRPP		
desc	Port to get the parameters for the environment		
requiredInterface	EnvironmentPIF		
properties of RPortProto	properties of RPortPrototype		
shortName	DtRPP		
desc	Port to get delta t, i.e. time of one time step		
requiredInterface	DtPIF		
internalBehavior	EnvironmentInternalBehavior		

Table 3.16: ApplicationSwComponentType Environment

roperties of implicitInterRunnableVariables / explicitInterRunnableVariables  properties of VariableDataPrototype  shortName Seed  desc Internal state of the environment: the current seed for the (pseudo) random number generation		
properties of VariableDataPrototype  shortName Seed Internal state of the environment: the current seed for the (pseudo)		
ShortName   Seed   Internal state of the environment: the current seed for the (pseudo)		
Internal state of the environment: the current seed for the (pseudo)		
1 <b>3</b> · · · · · · · · · · · · · · · ·		
type uint32		
swImplPolicy standard		
swCalibrationAccess notAccessible		
swAddrMethod CODE		
properties of VariableDataPrototype		
shortName TEnv		
desc Internal state of the environment: the temperture of the environmen		
type Temperature_C		
swImplPolicy standard		
swCalibrationAccess readOnly		
swAddrMethod CODE		
roperties of the arTypedPerInstanceMemoryS		
properties of VariableDataPrototype		
shortName THighLimit		
desc Measurement point for the upper limit of the generated temperature profile		
type Temperature_C		



swImplPolicy	standard		
swCalibrationAccess	readOnly		
swAddrMethod	CODE		
properties of the runnables	roperties of the runnables		
properties of RunnableE	ntity		
shortName	envRE		
symbol	envRE_func		
properties of the events	roperties of the events		
properties of TimingEver	nt		
shortName	env100ms		
startOnEvent	envRE		
period	0.1		

Table 3.17: SwcInternalBehavior EnvironmentInternalBehavior



# 3.1.7.4 ParameterInterfaces

Common ParameterInterfa	ControllerPIF	
shortName	COLLIGHE II	
desc	Interface with all parameters for the controller	
properties of the parameters		
properties of ParameterDataPrototype		
shortName	ctrl_SetPoint	
desc	Set point for the temperature of the plant	
type	Temperature_C	
swImplPolicy	standard	
swCalibrationAccess	readWrite	
swAddrMethod	CALIB	
properties of ParameterDataPrototype		
shortName	ctrl_K	
desc	Amplification factor for the I-controller	
type	Amplification	
swImplPolicy	standard	
swCalibrationAccess	readWrite	
swAddrMethod	CALIB	
properties of ParameterI	DataPrototype	
shortName	ctrl_MaxESum	
desc	Upper limit of the integal part of the I-controller	
type	ESum	
swImplPolicy	standard	
swCalibrationAccess	readWrite	
swAddrMethod	CALIB	

**Table 3.18: ParameterInterface ControllerPIF** 

Common ParameterInterface attributes		
shortName	PlantPIF	
desc	Interface with all parameters for the plant	
properties of the parameters		
properties of ParameterD	properties of ParameterDataPrototype	
shortName	plnt_EnvFactor	
desc	Proportionality factor for the heat flow between plant and environment	
type	EnvFactor	
swImplPolicy	standard	
swCalibrationAccess	readWrite	
swAddrMethod	CALIB	
properties of ParameterD	properties of ParameterDataPrototype	
shortName	plnt_HeaterFactor	



desc	Proportionality factor for the heat flow between plant and the electrical heater
type	HeaterFactor
swImplPolicy	standard
swCalibrationAccess	readWrite
swAddrMethod	CALIB

**Table 3.19: ParameterInterface PlantPIF** 

nortName	ce attributes EnvironmentPIF		
esc	Interface with all parameters for the environment		
properties of the parameters			
properties of ParameterI	DataPrototype		
shortName	env_TLowLimit		
desc	Lower limit of the generated temeprature profile		
type	Temperature_C		
swImplPolicy	standard		
swCalibrationAccess	readWrite		
swAddrMethod	CALIB		
properties of ParameterI	DataPrototype		
shortName	env_TStepSize		
desc	The maximal temperature diffenrence of the environment in one time step		
type	Temperature_K		
swImplPolicy	standard		
swCalibrationAccess	readWrite		
swAddrMethod	CALIB		
properties of ParameterI	DataPrototype		
shortName	env_THighLimitDistance		
desc	Distance of the upper limit from the lower limit for the generated temeprature profile.		
type	Temperature_K		
swImplPolicy	standard		
swCalibrationAccess	readWrite		
swAddrMethod	CALTB		

Table 3.20: ParameterInterface EnvironmentPIF

Common ParameterInterface attributes	
shortName	DtPIF
properties of the parameters	
properties of ParameterDataPrototype	
shortName	Dt



desc	Scheduling time of the components
type	Time
swImplPolicy	standard
swCalibrationAccess	readWrite
swAddrMethod	CALIB

Table 3.21: ParameterInterface DtPIF



# 3.1.7.5 SenderReceiverInterfaces

Common SenderReceiverInterface attributes			
shortName	TemperatureSRIF		
desc	Interface type for transferring temperatures in $[\ddot{c}_{2}^{\frac{1}{2}}C]$		
properties of the dataEleme	ents		
properties of VariableDataPrototype			
shortName	Т		
type	Temperature_C		
swImplPolicy standard			
swCalibrationAccess	readOnly		
swAddrMethod VAR			

Table 3.22: SenderReceiverInterface TemperatureSRIF

Common SenderReceiverInterface attributes			
shortName	CurrentSRIF		
desc	Interface type for transferring a current in [mA]		
properties of the dataEleme	ents		
properties of VariableDataPrototype			
shortName	1		
type	Current		
swImplPolicy	standard		
swCalibrationAccess	readOnly		
swAddrMethod	VAR		

Table 3.23: SenderReceiverInterface CurrentSRIF



# 3.1.7.6 ApplicationDataTypes, Category VALUE

Common ApplicationDataType attributes				
shortName	Temperature_C			
category	VALUE			
desc	Type for a temperature in [°C]			
swCalibrationAccess	readOnly			
unit	DegreeCelsi	us		
Range				
Conversion				
category	LINEAR			
direction	compuIntern	alToPhys		
desc	lowerLimit	upperLimit	compuNumerator/ compuDenominator	
-	-	-	$Phys = \frac{-273.15 + 1 * Internal}{1}$	

Table 3.24: ApplicationDataType Temperature\_C

С	Common ApplicationDataType attributes				
S	shortName Current				
C	ategory	VALUE			
d	lesc	Type for the cui	rrent in [mA]		
s	wCalibrationAccess	readOnly			
u	nit	MilliAmpere			
R	lange				
С	Conversion				
	category	LINEAR			
	direction	compuIntern	alToPhys		
	desc	lowerLimit	upperLimit	compuNumerator/ compuDenominator	
	-	-	-	$Phys = \frac{0 + 1000 * Internal}{1}$	

**Table 3.25: ApplicationDataType Current** 

Common ApplicationDataType attributes		
shortName	EnvFactor	
category	VALUE	
desc	Type for the environt factor in [J/Ks]	
swCalibrationAccess	readOnly	
unit	JoulePerKelvinSecond	



R	Range	
С	Conversion	
	category	IDENTICAL
	direction	-

Table 3.26: ApplicationDataType EnvFactor

Common ApplicationDataType attributes			
sh	nortName	Temperature_K	
са	itegory	VALUE	
de	esc	Type for a temperature in [K]	
SW	CalibrationAccess	readOnly	
unit		Kelvin	
Ra	Range		
Со	Conversion		
	category	IDENTICAL	
	direction	-	

Table 3.27: ApplicationDataType Temperature\_K

Common ApplicationDataType attributes			
shortName	Amplification		
category	VALUE		
desc	Type for an amplification factor in a controller in [mA/Ks]		
swCalibrationAccess	readOnly		
unit	MilliAmperePerKelvinSecond		
Range			
Conversion	Conversion		
category IDENTICAL			
direction -			

Table 3.28: ApplicationDataType Amplification

Common ApplicationDataType attributes	
shortName	Energy
category	VALUE
desc	Type for energy [J]
swCalibrationAccess	readOnly
unit	Joule
Range	
Conversion	
category	IDENTICAL



direction	-
•	

Table 3.29: ApplicationDataType Energy

С	Common ApplicationDataType attributes	
s	hortName	ESum
C	ategory	VALUE
d	lesc	Type for the sum of control errors of an I controller in [Ks]
S	wCalibrationAccess	readOnly
u	nit	KelvinSecond
R	Range	
С	Conversion	
	category	IDENTICAL
	direction	-

Table 3.30: ApplicationDataType ESum

C	Common ApplicationDataType attributes	
s	hortName	HeaterFactor
C	ategory	VALUE
d	esc	Type of a proportionality factor for the heat flow from an electrical heater to a thermal energy storage in [J/mAs]
S	wCalibrationAccess	readOnly
u	nit	JoulePerMilliAmpereSecond
Range		
C	Conversion	
	category	IDENTICAL
	direction	-

Table 3.31: ApplicationDataType HeaterFactor

Common ApplicationDataType attributes	
shortName	Time
category	VALUE
desc	Type for time in [s]
swCalibrationAccess	readOnly
unit	Second
Range	
Conversion	
category	IDENTICAL
direction	-

Table 3.32: ApplicationDataType Time



# 3.1.7.7 Units

С	Common Unit attributes	
s	hortName	DegreeCelsius
	displayName	°C
	offsetSiToUnit	-273.15
	factorSiToUnit	1.0
	physicalDimension	Temperature

Table 3.33: Unit DegreeCelsius

С	Common Unit attributes	
s	hortName	Kelvin
	displayName	K
	offsetSiToUnit	0.0
	factorSiToUnit	1.0
	physicalDimension	Temperature

Table 3.34: Unit Kelvin

С	Common Unit attributes	
shortName Joule		Joule
	displayName	J
	offsetSiToUnit	0.0
	factorSiToUnit	1.0
	physicalDimension	Energy

Table 3.35: Unit Joule

ommon Unit attributes	
hortName	MilliAmpere
displayName	mA
offsetSiToUnit	0.0
factorSiToUnit	1000.0
physicalDimension	Current
	hortName displayName offsetSiToUnit factorSiToUnit

Table 3.36: Unit MilliAmpere

C	Common Unit attributes	
s	hortName	KelvinSecond
	displayName	Ks
	offsetSiToUnit	0.0
	factorSiToUnit	1.0



physicalDimension	TemperatureTime

Table 3.37: Unit KelvinSecond

C	Common Unit attributes	
S	hortName	JoulePerKelvinSecond
	displayName	J/Ks
	offsetSiToUnit	0.0
	factorSiToUnit	1.0
	physicalDimension	EnergyPerTemperatureTime

Table 3.38: Unit JoulePerKelvinSecond

C	Common Unit attributes	
s	hortName	JoulePerMilliAmpereSecond
	displayName	J/mAs
	offsetSiToUnit	0.0
	factorSiToUnit	0.001
	physicalDimension	EnergyPerCurrentTime

Table 3.39: Unit JoulePerMilliAmpereSecond

C	Common Unit attributes	
S	hortName	MilliAmperePerKelvinSecond
	displayName	mA/Ks
	offsetSiToUnit	0.0
	factorSiToUnit	1000.0
	physicalDimension	CurrentPerTemperatureTime

Table 3.40: Unit MilliAmperePerKelvinSecond

Common Unit attributes	
shortName	Second
displayName	s
offsetSiToUnit	0.0
factorSiToUnit	1.0
physicalDimension	Time

Table 3.41: Unit Second



# 3.1.7.8 PhysicalDimensions

hortName	Energy
currentExp	0
lengthExp	2
luminousIntensity- Exp	0
massExp	1
molarAmountExp	0
temperatureExp	0
timeExp	-2

**Table 3.42: PhysicalDimension Energy** 

С	Common PhysicalDimension attributes	
s	hortName	Current
	currentExp	1
	lengthExp	0
	luminousIntensity- Exp	0
	massExp	0
	molarAmountExp	0
	temperatureExp	0
	timeExp	0

**Table 3.43: PhysicalDimension Current** 

C	Common PhysicalDimension attributes	
s	hortName	CurrentPerTemperatureTime
	currentExp	1
	lengthExp	0
	<pre>luminousIntensity- Exp</pre>	0
	massExp	0
	molarAmountExp	0
	temperatureExp	-1
	timeExp	-1

Table 3.44: Physical Dimension Current Per Temperature Time

Common PhysicalDimension attributes		n attributes
S	hortName	EnergyPerCurrentTime
	currentExp	-1



/	\
/	\
/	\

lengthExp	2
<pre>luminousIntensity- Exp</pre>	0
massExp	1
molarAmountExp	0
temperatureExp	0
timeExp	-3

Table 3.45: PhysicalDimension EnergyPerCurrentTime

С	Common PhysicalDimension attributes	
S	hortName	EnergyPerTemperatureTime
	currentExp	0
	lengthExp	2
	<pre>luminousIntensity- Exp</pre>	0
	massExp	1
	molarAmountExp	0
	temperatureExp	-1
	timeExp	-3

Table 3.46: PhysicalDimension EnergyPerTemperatureTime

С	Common PhysicalDimension attributes	
s	hortName	Time
	currentExp	0
	lengthExp	0
	luminousIntensity- Exp	0
	massExp	0
	molarAmountExp	0
	temperatureExp	0
	timeExp	1

**Table 3.47: PhysicalDimension Time** 

C	Common PhysicalDimension attributes	
S	hortName	Temperature
	currentExp	0
	lengthExp	0
	<pre>luminousIntensity- Exp</pre>	0
	massExp	0
	molarAmountExp	0



temperatureExp	1
timeExp	0

**Table 3.48: PhysicalDimension Temperature** 

Common PhysicalDimension attributes			
shortName	TemperatureTime		
currentExp	0		
lengthExp	0		
luminousInte	ensity- 0		
massExp	0		
molarAmountE	Exp 0		
temperatureE	Exp 1		
timeExp	1		

Table 3.49: PhysicalDimension TemperatureTime



# 3.1.7.9 SwAddrMethods

С	Common SwAddrMethod attributes		
shortName		VAR	
d	esc	Memory section for variables	
	sectionType	var	
	memoryAllocation- KeywordPolicy	addrMethodShortName	
	sectionInitializa- tionPolicy	-	
	option	safetyQM	

Table 3.50: SwAddrMethod VAR

С	Common SwAddrMethod attributes		
shortName		CALIB	
desc		Memory section for calibration parameters	
	sectionType	var	
	memoryAllocation- KeywordPolicy	addrMethodShortName	
	sectionInitializa- tionPolicy	-	
	option	safetyQM	

Table 3.51: SwAddrMethod CALIB

Common SwAddrMethod attributes		
shortName		CODE
d	esc	Memory section for code
	sectionType	var
	memoryAllocation- KeywordPolicy	addrMethodShortName
	sectionInitializa- tionPolicy	-
	option	safetyQM

Table 3.52: SwAddrMethod CODE



## 3.2 Advanced Show Case

# 3.2.1 General Objectives of the Model Structure

# 3.2.1.1 The Ecu Description

calibra-Since the show is focusing and case on measurement tion only a minimal system model is provided. the file Hereby Pprj\_EcuDescr\_U\_SystemNodeStub.arxml defines the System temU EcuDescr of category ECU SYSTEM DESCRIPTION which contains only the RootSwCompositionPrototype. The file Pprj\_EcuDescr\_U.arxml contains the according CompositionSwComponentType describing the hierarchical top-level-composition of software components shown in table SystemURootComposition EcuDescr.

#### 3.2.1.2 The Ecu Extract

The file Pprj\_EcuExtract\_U\_SystemNodeStub.arxml defines the System SystemU\_System of category ECU\_EXTRACT which contains only the RootSwCompositionPrototype SystemU referencing the ECU Flat Map and the flat top-level-compositionSystemU\_Root. The file Pprj\_EcuExtract\_U.arxml contains the according CompositionSwComponentType describing the flat top-level-composition of software components shown in table SystemU\_Root.

Please note that the flat top-level-composition uses the identical software component types as the hierarchical top-level-composition. Therefore an identification of component and data instances in the hierarchical software component structure or in the flat structure requires the correct iteration from the according System nodes.

## **3.2.1.2.1** The ECU Flat Map

The file Pprj\_EcuExtract\_U\_FlatMap.arxml contains the ECU Flat Map.

The ECU Flat Map is utilized to assign unique and comprehensible names to all DataPrototypes representing measurements and characteristics. This is important for the calibration engineers<sup>5</sup>

The applied strategy for the creation of a FlatInstanceDescriptor.shortName is to shorten it to the shortName of the DataPrototype when only a single instance of the DataPrototype is used.

<sup>&</sup>lt;sup>5</sup>Calibration engineers in this context means the engineers working with measurement and calibration tooling e.g. to determine the correct calibration parameter values in order to adopt functionality in the software components to the mechanical components in the vehicle.



# 3.2.1.3 Data Types and Data Objects

The components are designed top down coming from the physical function down to the implementation in the target programming language C. Hereby the interfaces of Software Components are typically typed with ApplicationDataTypes in order to describe the physical meaning of the DataPrototypes. The only exceptions are the interfaces to AUTOSAR Services which are typed by ImplementationDataTypes directly as those are standardized. ApplicationPrimitiveDataTypes are mainly of category

- BOOLEAN
- VALUE
- CURVE
- MAP
- COM AXIS

and the most important CompuMethod categorys are

- LINEAR
- TEXTTABLE

In case of LINEAR conversions it is supported to differentiate the Unit used for the implemented calculations and an additional Unit used in the MCD system. This relationship of such Units are expressed with Unit-Groups. The ARElements are structured in a way to support the common usage of elements relevant for the interface description up to the level of PortInterfaces by several Component Descriptions. Those elements are located under Tier1/ARPlatform1/DataDictionary/<KindPackage> in the file Pprj\_DataDictionary.arxml.

The CompuMethods and DataConstrs are exclusively used by one Application—PrimitiveDataType. The possible reuse between ApplicationPrimitive—DataTypes supported by AUTOSAR is not used in this model structure. When such a ApplicationDataType is defined the intended mapping to the reasonable Imple—mentationDataType is already considered in order to get an optimal usage of the possible range of the ImplementationDataType. Nevertheless, the several physical meanings are not reflected by the definition of individual ImplementationDataType but only the standardized Platform Types [5] are used to describe primitives on implementation level. This has the effect that the RTE APIs are typed by the standardized Platform Types in cases of primitives and arrays of primitives. Only structure types are getting observable in the types of RTE APIs. This approach allows the direct usage of data read from RTE in mathematical or interpolation libraries without any type cast.

The memory allocation of the data objects is controlled by the usage of SwAddrMethods. Those are defined for ParameterDataPrototypes and Variable-DataPrototypes on level of the PortInterfaces. A few examples are shown in



the chapter 3.2.2.17 for the basic uses cases like calibration parameter, normal data and code.

### 3.2.1.4 Axis, Curves and Maps

The show case contains description for axis, curves and maps which are in AUTOSAR so called compound primitives. In order to understand the structure and the defined attributes in the example it is helpful to understand how such objects are described in AUTOSAR. For this it is necessary to look at the hierarchy of ApplicationDataTypes, DataPrototypes, PortPrototypes, SwComponentTypes and FlatMap.

## 3.2.1.5 Axis, Curves and Maps on ApplicationDataType level

Figure 3.13 is based on the example of the ApplicationPrimitiveDataType Map\_Time\_Lnr\_s\_uint16. It shows the relationships between the Application-PrimitiveDataTypes describing the

- MAP itself
- its axis being a group axis
- in turn the properties of a matching working point

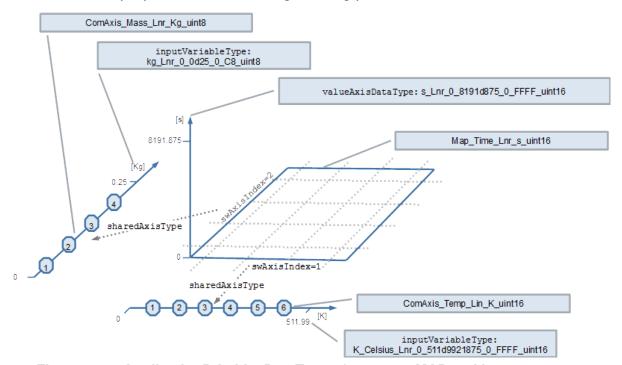


Figure 3.13: ApplicationPrimitiveDataType of category MAP and its group axes



The ApplicationPrimitiveDataType Map\_Time\_Lnr\_s\_uint16 defines a data type for a MAP with group axes. The physical meaning and range of the contained values is described with the ApplicationPrimitiveDataType s\_Lnr\_-0\_8191d875\_0\_FFFF\_uint16. It is referenced with the valueAxisDataType attribute. This means it's a value in the range 0 .. 8191.875 [second] with the resolution of 0.125 [second].

The referenced ApplicationPrimitiveDataType in the role valueAxis—DataType represents the primitive data type of the value axis within a compound primitive (e.g. CURVE, MAP). It supersedes CompuMethod, Unit, and BaseType. In the particular example, the valueAxisDataType provides the properties of the primitive elements of the CURVE or MAP via a valueAxisDataType reference to an ApplicationPrimitiveDataType. This in turn defines the attributes:

- dataConstr
- compuMethod
- displayFormat
- unit
- swCalibrationAccess

Thereby, despite being set, the value of swCalibrationAccess of the referenced ApplicationPrimitiveDataType is meaningless for the using CURVE and MAP. Note: The referenced data type needs to be a real primitive (typically of category VALUE. Category BOOLEAN is also supported).

The ApplicationPrimitiveDataType of the CURVE and MAP can additionally define SwDataDefProps which are relevant for the whole compound primitive. Currently the following attributes are used in the example:

- swCalprmAxisSet
- swRecordLayout
- swCalibrationAccess (but will be refined on DataPrototype level)

Further on, via the dataTypeMapping of the using software component, the properties of ImplementationDataType and SwBaseType are described.

As axes of the MAP two group axes are used. The properties of the group axes are described by two ApplicationPrimitiveDataTypes of category COM\_AXIS. The attribute swAxisIndex indicates for which dimension the group axis applies (1 = X, 2 = Y). With the attribute sharedAxisType the reference to the ApplicationPrimitiveDataType describing the axis is defined.

In the example, the group axis <code>ComAxis\_Temp\_Lin\_K\_uint16</code> defines the the applicable minimum and maximum number of axis points. Additionally the <code>in-putVariableType</code> reference to the <code>ApplicationPrimitiveDataType</code> <code>K\_Celsius Lnr 0 511d9921875 0 FFFF uint16</code> defines the properties of the input



value for the axis. This in turn corresponds to the values stored as axis point. The same principle applies for the group axis ComAxis\_Mass\_Lnr\_Kg\_uint8.

Please note, the above mentioned properties are defined on the level of ApplicationDataTypes and so far not any data instance implementing such properties exists. This requires an instantiation of such ApplicationDataTypes.

# 3.2.1.6 Axis, Curves and Maps on DataPrototype and SwComponentPrototype level

### 3.2.1.6.1 Instantiation of Axis, Curves and Maps

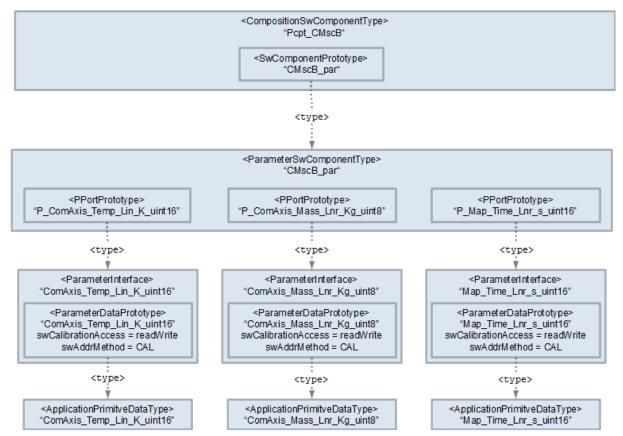


Figure 3.14: Instantiation of a MAP and its group axes

Figure 3.14 shows the instantiation of the ApplicationPrimitiveDataType Co-mAxis\_Temp\_Lin\_K\_uint16, ComAxis\_Mass\_Lnr\_Kg\_uint8, and Map\_Time\_-Lnr\_s\_uint16 up to the level of the CompositionSwComponentType Pcpt\_CM-scB.

Thereby ParameterDataPrototypes are typed by the mentioned Application—PrimitiveDataTypes. Each ParameterDataPrototype is owned by an own ParameterInterface. This offers the most flexibility to instantiate the map and axes independently from each other. On the level of the ParameterDataPrototype additionally the swCalibrationAccess and the swAddrMethod is defined.



Further on, the ParameterSwComponentType CMscB\_par defines three PPort-Prototypes typed by the ParameterInterfaces.

Please note that a group axes of a curve or map are not necessarily provided by the same ParameterSwComponentType as the one providing the curve or map. This case is illustrated with the map ArrldMap\_Time\_Lnr\_s\_uint16 using the group axes ArrldComAxis\_Temp\_Lin\_K\_uint16 provided by CMscD\_par and ComAxis\_Mass\_Lnr\_Kq\_uint8 provided by CMscB\_par.

### 3.2.1.6.2 Usage of Axis, Curves and Maps by Software Components

#### 3.2.1.6.3 Linking map and curve instances to its axes instances

Consider a software component that uses curves and maps with group axes. It is than required to denote which instance of curve and map uses which instance of a group axis as axis of abscissae and, in case of a map, as axis of ordinate.

The AUTOSAR meta model provides hereby two possibilities:

- RunnableEntity.parameterAccess.swDataDefPropsor
- SwcInternalBehavior.instantiationDataDefProps.swDataDef-Props.

Inside one software component it's very unlikely, that the same curve or map is used with different axes by different <code>RunnableEntitys</code> (note that this cannot be expressed by ASAM MCD-2MC, also) . Therefore, in this show case the second ability is used. This avoids the risk of inconsistencies when several <code>RunnableEntitys</code> are defining <code>parameterAccesses</code> to the same curve or map instance.

The according instantiationDataDefProps.parameterInstance references the map instance in the scope of the SwComponentType and the swDataDefProps. swCalprmAxisSet.swCalprmAxis.swCalprmAxisTypeProps.swCalprmRef references the applied group axes with the according SwCalprmAxis.swAxisIndex



```
<SW-CALPRM-AXIS-SET>
          <SW-CALPRM-AXIS>
            <SW-AXIS-INDEX>1</SW-AXIS-INDEX>
            <SW-AXIS-GROUPED>
              <AR-PARAMETER>
                <AUTOSAR-PARAMETER-IREF>
                  <PORT-PROTOTYPE-REF DEST="R-PORT-PROTOTYPE">/Tier1/
                     ARPlatform1/Pcpt_CMscB/CMscB/
                     R_ComAxis_Temp_Lin_K_uint16</port-PROTOTYPE-REF>
                  <TARGET-DATA-PROTOTYPE-REF DEST="PARAMETER-DATA-PROTOTYPE
                      ">/Tier1/ARPlatform1/DataDictionary/PortInterfaces/
                     V1_0_0/ComAxis_Temp_Lin_K_uint16/
                     ComAxis_Temp_Lin_K_uint16</TARGET-DATA-PROTOTYPE-REF>
                </AUTOSAR-PARAMETER-IREF>
              </AR-PARAMETER>
            </SW-AXIS-GROUPED>
          </SW-CALPRM-AXIS>
          <SW-CALPRM-AXIS>
            <SW-AXIS-INDEX>2</SW-AXIS-INDEX>
            <SW-AXIS-GROUPED>
              <AR-PARAMETER>
                <AUTOSAR-PARAMETER-IREF>
                  <PORT-PROTOTYPE-REF DEST="R-PORT-PROTOTYPE">/Tier1/
                     ARPlatform1/Pcpt CMscB/CMscB/
                     R_ComAxis_Mass_Lnr_Kg_uint8</port-prototype-REF>
                  <TARGET-DATA-PROTOTYPE-REF DEST="PARAMETER-DATA-PROTOTYPE
                      ">/Tier1/ARPlatform1/DataDictionary/PortInterfaces/
                     V1_0_0/ComAxis_Mass_Lnr_Kq_uint8/
                     ComAxis_Mass_Lnr_Kq_uint8</TARGET-DATA-PROTOTYPE-REF>
                </AUTOSAR-PARAMETER-IREF>
              </AR-PARAMETER>
            </SW-AXIS-GROUPED>
          </SW-CALPRM-AXIS>
        </SW-CALPRM-AXIS-SET>
      </SW-DATA-DEF-PROPS-CONDITIONAL>
    </SW-DATA-DEF-PROPS-VARIANTS>
  </SW-DATA-DEF-PROPS>
</INSTANTIATION-DATA-DEF-PROPS>
       Listing 3.28: Example of an InstantiationDataDefProps for a map
```

Listing 3.20. Example of all instanciation bacabet Props for a map

#### 3.2.1.6.4 Linking axes instances to its working point instances

When a software component uses compound primitives containing axes (e.g. curves, maps, or group axes) it's beneficial to indicate which data is used as input for the according axis. This enables the measurement and calibration tool to display the current working point. Like explained in section 3.2.1.6.3, this information can be provided

- at the ParameterAccess.swDataDefProps of the compound primitives containing the axis or
- by means of instantiationDataDefProps.swDataDefProps.



In this show case the second ability is used for the same reasons as discussed in section 3.2.1.6.3.

The according instantiationDataDefProps.parameterInstance references the axes instance in the scope of the SwComponentType CMscB. The swDataDef-Props.swCalprmAxisSet.swCalprmAxis.swCalprmAxisTypeProps.swVariableRef references the applied working point variable (in this case, a dataElement in a RPortPrototype) with the according SwCalprmAxis.swAxisIndex.

```
<INSTANTIATION-DATA-DEF-PROPS>
  <PARAMETER-INSTANCE>
    <autosar-parameter-iref>
      <PORT-PROTOTYPE-REF DEST="R-PORT-PROTOTYPE">/Tier1/ARPlatform1/
         Pcpt CMscB/CMscB/R ComAxis Temp Lin K uint16</port-prototype-ref>
      <TARGET-DATA-PROTOTYPE-REF DEST="PARAMETER-DATA-PROTOTYPE">/Tier1/
         ARPlatform1/DataDictionary/PortInterfaces/V1 0 0/
         ComAxis Temp Lin K uint16/ComAxis Temp Lin K uint16</TARGET-DATA-
         PROTOTYPE-REF>
    </AUTOSAR-PARAMETER-IREF>
  </PARAMETER-INSTANCE>
  <SW-DATA-DEF-PROPS>
    <SW-DATA-DEF-PROPS-VARIANTS>
      <SW-DATA-DEF-PROPS-CONDITIONAL>
        <SW-CALPRM-AXIS-SET>
          <SW-CALPRM-AXIS>
            <SW-AXIS-INDEX>1</SW-AXIS-INDEX>
            <SW-AXIS-INDIVIDUAL>
              <SW-VARIABLE-REFS>
                <AUTOSAR-VARIABLE>
                  <AUTOSAR-VARIABLE-IREF>
                    <PORT-PROTOTYPE-REF DEST="R-PORT-PROTOTYPE">/Tier1/
                       ARPlatform1/Pcpt_CMscB/CMscB/
                       R_PrimData_Temperature_Lin_K_C_uint16</PORT-
                       PROTOTYPE-REF>
                    <TARGET-DATA-PROTOTYPE-REF DEST="VARIABLE-DATA-
                       PROTOTYPE">/Tier1/ARPlatform1/DataDictionary/
                       PortInterfaces/V1_0_0/
                       PrimData_Temperature_Lin_K_C_uint16/
                       PrimData_Temperature_Lin_K_C_uint16</TARGET-DATA-
                       PROTOTYPE-REF>
                  </AUTOSAR-VARIABLE-IREF>
                </AUTOSAR-VARIABLE>
              </SW-VARIABLE-REFS>
            </SW-AXIS-INDIVIDUAL>
          </SW-CALPRM-AXIS>
        </SW-CALPRM-AXIS-SET>
      </SW-DATA-DEF-PROPS-CONDITIONAL>
    </SW-DATA-DEF-PROPS-VARIANTS>
  </SW-DATA-DEF-PROPS>
</INSTANTIATION-DATA-DEF-PROPS>
```

Listing 3.29: Example of an InstantiationDataDefProps for an axis



# 3.2.1.6.5 Axis, Curves and Maps in the ECU Flat Map

The ECU Flat Map contains entries for all curves, maps, axes and working point variables. The used naming patterns are described in 3.2.1.2.1.

```
<FLAT-INSTANCE-DESCRIPTOR>
  <SHORT-NAME>Map_Time_Lnr_s_uint16
  <ECU-EXTRACT-REFERENCE-IREF>
    <CONTEXT-ELEMENT-REF DEST="ROOT-SW-COMPOSITION-PROTOTYPE">/Tier1/
       ARPlatform1/System/SystemU_SystemU</CONTEXT-ELEMENT-REF>
    <CONTEXT-ELEMENT-REF DEST="SW-COMPONENT-PROTOTYPE">/Tier1/ARPlatform1/
       System/CompositionSwComponentTypes/SystemU_Root/CMscB_par</CONTEXT-
       ELEMENT-REF>
    <CONTEXT-ELEMENT-REF DEST="P-PORT-PROTOTYPE">/Tier1/ARPlatform1/
       Pcpt_CMscB/CMscB_par/P_Map_Time_Lnr_s_uint16</CONTEXT-ELEMENT-REF>
    <TARGET-REF DEST="PARAMETER-DATA-PROTOTYPE">/Tier1/ARPlatform1/
       DataDictionary/PortInterfaces/V1_0_0/Map_Time_Lnr_s_uint16/
       Map_Time_Lnr_s_uint16</TARGET-REF>
  </ECU-EXTRACT-REFERENCE-IREF>
</FLAT-INSTANCE-DESCRIPTOR>
<FLAT-INSTANCE-DESCRIPTOR>
  <SHORT-NAME>ComAxis_Temp_Lin_K_uint16</SHORT-NAME>
  <ECU-EXTRACT-REFERENCE-IREF>
    <CONTEXT-ELEMENT-REF DEST="ROOT-SW-COMPOSITION-PROTOTYPE">/Tier1/
       ARPlatform1/System/SystemU_System/SystemU</CONTEXT-ELEMENT-REF>
    <CONTEXT-ELEMENT-REF DEST="SW-COMPONENT-PROTOTYPE">/Tier1/ARPlatform1/
       System/CompositionSwComponentTypes/SystemU_Root/CMscB_par</CONTEXT-
       ELEMENT-REF>
    <CONTEXT-ELEMENT-REF DEST="P-PORT-PROTOTYPE">/Tier1/ARPlatform1/
       Pcpt_CMscB/CMscB_par/P_ComAxis_Temp_Lin_K_uint16</CONTEXT-ELEMENT-
       REF>
    <TARGET-REF DEST="PARAMETER-DATA-PROTOTYPE">/Tier1/ARPlatform1/
       DataDictionary/PortInterfaces/V1_0_0/ComAxis_Temp_Lin_K_uint16/
       ComAxis_Temp_Lin_K_uint16</TARGET-REF>
  </ECU-EXTRACT-REFERENCE-IREF>
</FLAT-INSTANCE-DESCRIPTOR>
<FLAT-INSTANCE-DESCRIPTOR>
  <SHORT-NAME>PrimData_Temperature_Lin_K_C_uint16</SHORT-NAME>
  <ECU-EXTRACT-REFERENCE-IREF>
    <CONTEXT-ELEMENT-REF DEST="ROOT-SW-COMPOSITION-PROTOTYPE">/Tier1/
       ARPlatform1/System/SystemU_System/SystemU</CONTEXT-ELEMENT-REF>
    <CONTEXT-ELEMENT-REF DEST="SW-COMPONENT-PROTOTYPE">/Tier1/ARPlatform1/
       System/CompositionSwComponentTypes/SystemU_Root/CMscA</CONTEXT-
       ELEMENT-REF>
    <CONTEXT-ELEMENT-REF DEST="P-PORT-PROTOTYPE">/Tier1/ARPlatform1/
       Pcpt_CMscA/CMscA/P_PrimData_Temperature_Lin_K_C_uint16</CONTEXT-
       ELEMENT-REF>
    <TARGET-REF DEST="VARIABLE-DATA-PROTOTYPE">/Tier1/ARPlatform1/
       DataDictionary/PortInterfaces/V1_0_0/
       PrimData_Temperature_Lin_K_C_uint16/
       PrimData_Temperature_Lin_K_C_uint16</TARGET-REF>
  </ECU-EXTRACT-REFERENCE-IREF>
</FLAT-INSTANCE-DESCRIPTOR>
```

Listing 3.30: Example of a FlatInstanceDescriptor for map axis and working point variable



# 3.2.1.7 Arrays of Maps and Axes

The ability of curves, maps and cuboids is usually used to describe the physical dependency of a characteristic on other physical input values. Hereby each input value is described by an orthogonal axis. In contrast to this, arrays are used to group a set of values of the same nature which can be handled by the same algorithm. Typically, in this case the algorithm iterates over the array with an index. Nevertheless, each array element may represent a particular part of the vehicle, e.g. a specific cylinder or a specific sensor. It's possible to combine these design principles. This ends up in the need to describe arrays of curves, maps, cuboids and the according axes.

The show case illustrates the model of those objects by the following elements:

- ArrldMap\_Time\_Lnr\_s\_uint16
- Arr1dComAxis\_Temp\_Lin\_K\_uint16
- Arr1dPrimData\_Temperature\_Lin\_K\_C\_uint16

Hereby, the array of the map Arr1dMap\_Time\_Lnr\_s\_uint16 uses for the x-axis an array of group axes Arr1dComAxis\_Temp\_Lin\_K\_uint16 which in turn uses an array of primitive values as working points Arr1dPrimData\_Temperature\_Lin\_-K\_C\_uint16. In this case, the n'th map uses the n'th x-axes which uses the n'th value as working point. In contrast, the map uses one group axis ComAxis\_Mass\_-Lnr\_Kg\_uint8 for the y-axis. In this case all maps in the array are using the same y-axis.

#### 3.2.1.7.1 Arrays of Maps and Axes in the ECU Flat Map

In the ECU Flat Map the ability to reference ApplicationCompositeElementDataPrototypes is used to express the specific meaning of each array element in the array of map and group axis.

For instance, each element in the array Arr1dMap\_Time\_Lnr\_s\_uint16 is named in a way to indicate the specific meaning:

- ArrldMap\_Time\_Lnr\_s\_uint16\_FrontLeft
- ArrldMap Time Lnr s uint16 FrontRight
- ArrldMap\_Time\_Lnr\_s\_uint16\_RearLeft
- ArrldMap\_Time\_Lnr\_s\_uint16\_RearRight

The following listing shows the structure of such an FlatInstanceDescription on one example:



```
<CONTEXT-ELEMENT-REF DEST="SW-COMPONENT-PROTOTYPE">/Tier1/ARPlatform1/
       System/CompositionSwComponentTypes/SystemU_Root/CMscD_par</CONTEXT-
       ELEMENT-REF>
    <CONTEXT-ELEMENT-REF DEST="P-PORT-PROTOTYPE">/Tier1/ARPlatform1/
       Pcpt_CMscD/CMscD_par/P_Arr1dMap_Time_Lnr_s_uint16</CONTEXT-ELEMENT-
    <CONTEXT-ELEMENT-REF DEST="PARAMETER-DATA-PROTOTYPE">/Tier1/ARPlatform1
       /DataDictionary/PortInterfaces/V1_0_0/Arr1dMap_Time_Lnr_s_uint16/
       Arr1dMap_Time_Lnr_s_uint16</CONTEXT-ELEMENT-REF>
    <TARGET-REF DEST="APPLICATION-ARRAY-ELEMENT" INDEX="0">/Tier1/
       ARPlatform1/DataDictionary/ApplicationDataTypes/
       Map_Time_Lnr_s_uint16_ScNoOfWheels/
       Map_Time_Lnr_s_uint16_ScNoOfWheels/TARGET-REF>
  </ECU-EXTRACT-REFERENCE-IREF>
</FLAT-INSTANCE-DESCRIPTOR>
        3.31:
Listing
                  Example
                             of a
                                     FlatInstanceDescriptor
                                                                 for
                                                                      an
ApplicationCompositeElementDataPrototype
```

Please note the usage of the index attribute in the target reference.

#### 3.2.1.8 Measurement of Modes

#### 3.2.1.8.1 Enabling Measurement of Modes

The measurement of a mode is enabled in the software-component description by setting the ModeDeclarationGroupPrototype.swCalibrationAccess to read-Only. See ModeDirection.

#### 3.2.1.8.2 Modes in the ECU Flat Map

AUTOSAR supports the measurement of the current mode, the previous mode and the next mode. Hereby the last two are useful when the mode is measured during a ongoing transition to identify the kind of transition. In this show case only the measurement of the current mode is illustrated. For this, the FlatMap contains a FlatInstanceDescriptor pointing to the ModeDeclarationGroupPrototype which is to be measured. The role attribute of the FlatInstanceDescriptor is set to CURRENT MODE



<TARGET-REF DEST="MODE-DECLARATION-GROUP-PROTOTYPE">/Tier1/ARPlatform1/
 DataDictionary/PortInterfaces/V1\_0\_0/ModeDirection/ModeDirection/
TARGET-REF>

</ECU-EXTRACT-REFERENCE-IREF>
</FLAT-INSTANCE-DESCRIPTOR>

Listing 3.32: Example of a FlatInstanceDescriptor for a ModeDeclarationGroupPrototype



## 3.2.2 Show cases in the Example

## 3.2.2.1 CompositionSwComponentTypes

Common CompositionSwComponentType attributes		
shortName	Pcpt_CMscA	
desc	Modeling show case for primitive measurement and calculation.	
properties of the ports		
properties of PPortProt	otype	
shortName	P_ModeDirection	
desc	Mode to indicate a direction	
providedInterface	ModeDirection	
properties of PPortProt		
shortName	P_PrimCal_Mass_Lnr_Kg	
desc	Primitive calibration parameter for minimum egg mass.	
providedInterface	PrimCal_Mass_Lnr_Kg	
properties of PPortProt	otype	
shortName	P_PrimData_Mass_Lnr_Kg_uint8	
desc	Mass in kilogram	
providedInterface	PrimData_Mass_Lnr_Kg_uint8	
properties of PPortProt	otype	
shortName	P_PrimData_StepsSpeed_Txt_sint8	
desc	Stepwise speed indication	
providedInterface	PrimData_StepsSpeed_Txt_sint8	
properties of PPortProt	otype	
shortName	P_PrimData_Temperature_Lin_K_C_uint16	
desc	Temperature 1 in Kelvin but displayed as degree Celsius	
providedInterface	PrimData_Temperature_Lin_K_C_uint16	
properties of RPortProt	otype	
shortName	R_PrimData_StepsSpeed_Txt_sint8	
desc	Stepwise speed indication	
requiredInterface	PrimData_StepsSpeed_Txt_sint8	
properties of the components		
properties of SwComponentPrototype		
shortName	CMscA	
type	CMscA	
properties of SwCompone	ntPrototype	
shortName	CMscA_par	
type	CMscA_par	

Table 3.53: CompositionSwComponentType Pcpt\_CMscA



hortName	SystemU_Root	
roperties of the components		
properties of SwComponentPrototype		
shortName	CMscA	
type	CMscA	
properties of SwCo	mponentPrototype	
shortName	CMscA_par	
type	CMscA_par	
properties of SwCo	mponentPrototype	
shortName	CMscB	
type	CMscB	
properties of SwCo	nponentPrototype	
shortName	CMscB_par	
type	CMscB_par	
properties of SwComponentPrototype		
shortName	CMscC_nvm	
type	CMscC_nvm	
properties of SwCo	mponentPrototype	
shortName	CMscD	
type	CMscD	
properties of SwComponentPrototype		
shortName	CMscD_par	
type	CMscD_par	

Table 3.54: CompositionSwComponentType SystemU\_Root

Common CompositionSwComponentType attributes		
shortName	SystemURootComposition_EcuDescr	
properties of the components		
properties of SwComponentPrototype		
shortName	CMscC	
type	Pcpt_CMscC	

Table 3.55: CompositionSwComponentType SystemURootComposition\_EcuDescr

Common CompositionSwComponentType attributes	
shortName	Pcpt_CMscD
desc	Modeling show case for arrays of axes and mapes.
properties of the ports	
properties of RPortPrototype	
shortName	R_ComAxis_Mass_Lnr_Kg_uint8



desc	Shared axis for mass	
requiredInterface	ComAxis_Mass_Lnr_Kg_uint8	
properties of RPortPrototype		
shortName	R_PrimData_MassCorrected_Lnr_Kg_uint8	
desc	Primitve data for the corrected mass in kg.	
requiredInterface	PrimData_MassCorrected_Lnr_Kg_uint8	
properties of the components  properties of SwComponentPrototype		
shortName	CMscD	
type	CMscD	
properties of SwComponer	properties of SwComponentPrototype	
shortName	CMscD_par	
type	CMscD_par	

Table 3.56: CompositionSwComponentType Pcpt\_CMscD

Common CompositionSwComponentType attributes	
shortName	Pcpt_CMscC
desc	Composit of modeling show case C
properties of the ports	
properties of PPortProt	otype
shortName	P_PrimData_Time_Lnr_s_uint16
desc	Primitve data holding a time value.
providedInterface	PrimData_Time_Lnr_s_uint16
properties of PPortProt	otype
shortName	P_PrimData_ValidState_Txt_noUnit_boolean
desc	Boolean representing the data validity
providedInterface	PrimData_ValidState_Txt_noUnit_boolean
properties of the component	ts
properties of SwComponer	ntPrototype
shortName	CMscA
type	Pcpt_CMscA
properties of SwComponer	ntPrototype
shortName	CMscB
type	Pcpt_CMscB
properties of SwComponer	ntPrototype
shortName	CMscC_nvm
type	CMscC_nvm
properties of SwComponentPrototype	
shortName	CMscD



type	Pcpt_CMscD

Table 3.57: CompositionSwComponentType Pcpt\_CMscC

Common CompositionSwComponentType attributes		
hortName	Pcpt_CMscB	
esc	Modeling show case for axes, curves and mapes.	
roperties of the ports		
properties of PPortProt	otype	
shortName	P_ComAxis_Mass_Lnr_Kg_uint8	
desc	Shared axis for mass	
providedInterface	ComAxis_Mass_Lnr_Kg_uint8	
properties of PPortProt	otype	
shortName	P_PrimData_MassCorrected_Lnr_Kg_uint8	
desc	Primitve data for the corrected mass in kg.	
providedInterface	PrimData_MassCorrected_Lnr_Kg_uint8	
properties of PPortProt	otype	
shortName	P_PrimData_Time_Lnr_s_uint16	
desc	Primitve data holding a time value.	
providedInterface	PrimData_Time_Lnr_s_uint16	
properties of PPortProt	otype	
shortName	P_PrimData_ValidState_Txt_noUnit_boolean	
desc	Boolean representing the data validity	
providedInterface	PrimData_ValidState_Txt_noUnit_boolean	
properties of RPortProt	otype	
shortName	R_ModeDirection	
desc	Mode to indicate a direction	
requiredInterface	ModeDirection	
properties of RPortProt	otype	
shortName	R_PrimData_Mass_Lnr_Kg_uint8	
desc	Mass in kilogram	
requiredInterface	PrimData_Mass_Lnr_Kg_uint8	
properties of RPortProt	otype	
shortName	R_PrimData_StepsSpeed_Txt_sint8	
desc	Stepwise speed indication	
requiredInterface	PrimData_StepsSpeed_Txt_sint8	
properties of RPortPrototype		
shortName	R_PrimData_Temperature_Lin_K_C_uint16	
desc	Temperature 1 in Kelvin but displayed as degree Celsius	
requiredInterface	PrimData_Temperature_Lin_K_C_uint16	
properties of the components		



properties of SwComponentPrototype		
shortName	CMscB	
type	CMscB	
properties of SwComponer	properties of SwComponentPrototype	
shortName	CMscB_par	
type	CMscB_par	

Table 3.58: CompositionSwComponentType Pcpt\_CMscB



## 3.2.2.2 ParameterSwComponentTypes

Common ParameterSwComponentType attributes		
shortName	CMscA_par	
desc	Modeling show case for primitive measurement and calculation.	
properties of the ports		
properties of PPortPrototype		
shortName	P_PrimCal_Mass_Lnr_Kg	
desc	Primitive calibration parameter for minimum egg mass.	
providedInterface	PrimCal_Mass_Lnr_Kg	

Table 3.59: ParameterSwComponentType CMscA\_par

Common ParameterSwComponentType attributes	
hortName	CMscD_par
esc	Modeling show case for arrays of axes and mapes.
properties of the ports	
properties of PPortPrototype	
shortName	P_Arr1dComAxis_Temp_Lin_K_uint16
desc	Array of shared axis for temperature
providedInterface	ArrldComAxis_Temp_Lin_K_uint16
properties of PPortProto	otype
shortName	P_Arr1dMap_Time_Lnr_s_uint16
desc	Map to get time dependent on temperature and mass.
providedInterface	ArrldMap_Time_Lnr_s_uint16

Table 3.60: ParameterSwComponentType CMscD\_par

Common ParameterSwComponentType attributes	
shortName	CMscB_par
desc	Modeling show case for axes, curves and mapes.
properties of the ports	
properties of PPortPrototype	
shortName	P_ComAxis_Mass_Lnr_Kg_uint8
desc	Shared axis for mass
providedInterface	ComAxis_Mass_Lnr_Kg_uint8
properties of PPortProto	otype
shortName	P_ComAxis_Steps_Txt_sint8
desc	Shared axis for speed steps
providedInterface	ComAxis_Steps_Txt_sint8
properties of PPortPrototype	
shortName	P_ComAxis_Temp_Lin_K_uint16



desc	Shared axis for temperature	
providedInterface	ComAxis_Temp_Lin_K_uint16	
properties of PPortProto	otype	
shortName	P_Curve_Mass_Lnr_Kg_uint8	
desc	Curve to get mass according differnt speed steps.	
providedInterface	Curve_Mass_Lnr_Kg_uint8	
properties of PPortProto	properties of PPortPrototype	
shortName	P_Map_Time_Lnr_s_uint16	
desc	Map to get time dependent on temperature and mass.	
providedInterface	Map_Time_Lnr_s_uint16	

Table 3.61: ParameterSwComponentType CMscB\_par

81 of 176



## 3.2.2.3 ApplicationSwComponentTypes

Common ApplicationSwCom	Common ApplicationSwComponentType attributes		
shortName	CMscD		
desc	Modeling show case for arrays of axes and mapes.		
properties of the ports			
properties of PPortProto	otype		
shortName	P_Arr1dPrimData_Temperature_Lin_K_C_uint16		
desc	Temperature 1 in Kelvin but displayed as degree Celsius		
providedInterface	ArrldPrimData_Temperature_Lin_K_C_uint16		
properties of RPortProto	otype		
shortName	R_Arr1dComAxis_Temp_Lin_K_uint16		
desc	Array of shared axis for temperature		
requiredInterface	ArrldComAxis_Temp_Lin_K_uint16		
properties of RPortPrototype			
shortName	R_Arr1dMap_Time_Lnr_s_uint16		
desc	Map to get time dependent on temperature and mass.		
requiredInterface	ArrldMap_Time_Lnr_s_uint16		
properties of RPortProto	properties of RPortPrototype		
shortName	R_Arr1dPrimData_Temperature_Lin_K_C_uint16		
desc	Temperature 1 in Kelvin but displayed as degree Celsius		
requiredInterface	ArrldPrimData_Temperature_Lin_K_C_uint16		
properties of RPortProto	otype		
shortName	R_ComAxis_Mass_Lnr_Kg_uint8		
desc	Shared axis for mass		
requiredInterface	ComAxis_Mass_Lnr_Kg_uint8		
properties of RPortProto	properties of RPortPrototype		
shortName	R_PrimData_MassCorrected_Lnr_Kg_uint8		
desc	Primitve data for the corrected mass in kg.		
requiredInterface	PrimData_MassCorrected_Lnr_Kg_uint8		
internalBehavior	CMscD		
	1		

Table 3.62: ApplicationSwComponentType CMscD

Common SwcInternalBehavior attributes		
shortName	CMscD	
properties of the runnables		
properties of RunnableEntity		
shortName	CMscD_Process	
symbol	CMscD_Process	

Table 3.63: SwcInternalBehavior CMscD



Common ApplicationSwCom	Common ApplicationSwComponentType attributes	
shortName	CMscB	
desc	Modeling show case for axes, curves and mapes.	
properties of the ports		
properties of PPortProto	otype	
shortName	P_PrimData_MassCorrected_Lnr_Kg_uint8	
desc	Primitve data for the corrected mass in kg.	
providedInterface	PrimData_MassCorrected_Lnr_Kg_uint8	
properties of PPortProto	otype	
shortName	P_PrimData_Time_Lnr_s_uint16	
desc	Primitve data holding a time value.	
providedInterface	PrimData_Time_Lnr_s_uint16	
properties of PPortProto	otype	
shortName	P_PrimData_ValidState_Txt_noUnit_boolean	
desc	Boolean representing the data validity	
providedInterface	PrimData_ValidState_Txt_noUnit_boolean	
properties of RPortPrototype		
shortName	R_ComAxis_Mass_Lnr_Kg_uint8	
desc	Shared axis for mass	
requiredInterface	ComAxis_Mass_Lnr_Kg_uint8	
properties of RPortProto	otype	
shortName	R_ComAxis_Steps_Txt_sint8	
desc	Shared axis for speed steps	
requiredInterface	ComAxis_Steps_Txt_sint8	
properties of RPortProto	otype	
shortName	R_ComAxis_Temp_Lin_K_uint16	
desc	Shared axis for temperature	
requiredInterface	ComAxis_Temp_Lin_K_uint16	
properties of RPortProto	otype	
shortName	R_Curve_Mass_Lnr_Kg_uint8	
desc	Curve to get mass according differnt speed steps.	
requiredInterface	Curve_Mass_Lnr_Kg_uint8	
properties of RPortProto	properties of RPortPrototype	
shortName	R_Map_Time_Lnr_s_uint16	
desc	Map to get time dependent on temperature and mass.	
requiredInterface	Map_Time_Lnr_s_uint16	
properties of RPortProto	otype	
shortName	R_ModeDirection	
desc	Mode to indicate a direction	
requiredInterface	ModeDirection	





properties of RPortProto	otype
shortName	R_PrimData_Mass_Lnr_Kg_uint8
desc	Mass in kilogram
requiredInterface	PrimData_Mass_Lnr_Kg_uint8
properties of RPortProto	otype
shortName	R_PrimData_MassCorrected_Lnr_Kg_uint8
desc	Primitve data for the corrected mass in kg.
requiredInterface	PrimData_MassCorrected_Lnr_Kg_uint8
properties of RPortPrototype	
shortName	R_PrimData_StepsSpeed_Txt_sint8
desc	Stepwise speed indication
requiredInterface	PrimData_StepsSpeed_Txt_sint8
properties of RPortPrototype	
shortName	R_PrimData_Temperature_Lin_K_C_uint16
desc	Temperature 1 in Kelvin but displayed as degree Celsius
requiredInterface	PrimData_Temperature_Lin_K_C_uint16
properties of RPortPrototype	
shortName	R_PrimData_Time_Lnr_s_uint16
desc	Primitve data holding a time value.
requiredInterface	PrimData_Time_Lnr_s_uint16
properties of RPortPrototype	
shortName	R_PrimData_ValidState_Txt_noUnit_boolean
desc	Boolean representing the data validity
requiredInterface	PrimData_ValidState_Txt_noUnit_boolean
nternalBehavior	CMscB

Table 3.64: ApplicationSwComponentType CMscB

Common SwcInternalBehavior attributes		
shortName	CMscB	
properties of the runnables		
properties of RunnableEntity		
shortName	CMscB_Process	
desc	cyclic process for calculation	
symbol	CMscB_Process	

Table 3.65: SwcInternalBehavior CMscB



#### 3.2.2.4 ParameterInterfaces

common ParameterInterface attributes	
shortName	Arr1dComAxis_Temp_Lin_K_uint16
desc	Array of shared axis for temperature
properties of the parameters	
properties of ParameterDataPrototype	
shortName	Arr1dComAxis_Temp_Lin_K_uint16
desc	Array of shared axis for temperature
type	ComAxis_Temp_Lin_K_uint16_ScNoOfWheels
swImplPolicy	standard
swCalibrationAccess	readWrite
swAddrMethod	CAL

Table 3.66: ParameterInterface Arr1dComAxis\_Temp\_Lin\_K\_uint16

Common ParameterInterface attributes		
shortName	Arr1dMap_Time_Lnr_s_uint16	
desc	Map to get time dependent on temperature and mass.	
properties of the parameter	properties of the parameters	
properties of ParameterDataPrototype		
shortName	Arr1dMap_Time_Lnr_s_uint16	
desc	Map to get time dependent on temperature and mass.	
type	Map_Time_Lnr_s_uint16_ScNoOfWheels	
swImplPolicy	standard	
swCalibrationAccess	readWrite	
swAddrMethod	CAL	

Table 3.67: ParameterInterface Arr1dMap\_Time\_Lnr\_s\_uint16

Common ParameterInterface attributes		
shortName	ComAxis_Mass_Lnr_Kg_uint8	
desc	Shared axis for mass	
properties of the parameter	properties of the parameters	
properties of ParameterDataPrototype		
shortName	ComAxis_Mass_Lnr_Kg_uint8	
desc	Shared axis for mass	
type	ComAxis_Mass_Lnr_Kg_uint8	
swImplPolicy	standard	
swCalibrationAccess	readWrite	
swAddrMethod	CAL	

Table 3.68: ParameterInterface ComAxis\_Mass\_Lnr\_Kg\_uint8



Common ParameterInterface attributes		
shortName	ComAxis_Steps_Txt_sint8	
desc	Shared axis for speed steps	
properties of the parameter	properties of the parameters	
properties of ParameterDataPrototype		
shortName	ComAxis_Steps_Txt_sint8	
desc	Shared axis for speed steps	
type	ComAxis_Steps_Txt_sint8	
swImplPolicy	standard	
swCalibrationAccess	readWrite	
swAddrMethod	CAL	

Table 3.69: ParameterInterface ComAxis\_Steps\_Txt\_sint8

Common ParameterInterface attributes	
shortName	ComAxis_Temp_Lin_K_uint16
desc	Shared axis for temperature
properties of the parameters	
properties of ParameterDataPrototype	
shortName	ComAxis_Temp_Lin_K_uint16
desc	Shared axis for temperature
type	ComAxis_Temp_Lin_K_uint16
swImplPolicy	standard
swCalibrationAccess	readWrite
swAddrMethod	CAL

Table 3.70: ParameterInterface ComAxis\_Temp\_Lin\_K\_uint16

Common ParameterInterface attributes	
shortName	Curve_Mass_Lnr_Kg_uint8
desc	Curve to get mass according differnt speed steps.
properties of the parameter	·s
properties of ParameterDataPrototype	
shortName	Curve_Mass_Lnr_Kg_uint8
desc	Curve to get mass according differnt speed steps.
type	Curve_Mass_Lnr_Kg_uint8
swImplPolicy	standard
swCalibrationAccess	readWrite
swAddrMethod	CAL

Table 3.71: ParameterInterface Curve\_Mass\_Lnr\_Kg\_uint8



Common ParameterInterface attributes				
shortName	Map_Time_Lnr_s_uint16			
desc	Map to get time dependent on temperature and mass.			
properties of the parameter	·s			
properties of Parameter	DataPrototype			
shortName	Map_Time_Lnr_s_uint16			
desc	Map to get time dependent on temperature and mass.			
type	Map_Time_Lnr_s_uint16			
swImplPolicy	standard			
swCalibrationAccess	readWrite			
swAddrMethod	CAL			

Table 3.72: ParameterInterface Map\_Time\_Lnr\_s\_uint16

Common ParameterInterface attributes			
shortName	PrimCal_Mass_Lnr_Kg		
desc	Primitive calibration parameter for minimum egg mass.		
properties of the parameter	es es		
properties of ParameterI	DataPrototype		
shortName	PrimCal_Mass_Lnr_Kg		
desc	Primitive calibration parameter for minimum egg mass.		
type	kg_Lnr_0_0d25_0_C8_uint8		
swImplPolicy	standard		
swCalibrationAccess	readWrite		
swAddrMethod	CAL		

Table 3.73: ParameterInterface PrimCal\_Mass\_Lnr\_Kg



#### 3.2.2.5 ModeSwitchInterfaces

Co	Common ModeSwitchInterface attributes				
shortName		ModeDirection			
desc Mode to indicate a direction		Mode to indicate a direction			
рі	properties of the modeGroupS				
	shortName	ModeDirection			
	swCalibrationAccess	readOnly			
	type	Direction			

**Table 3.74: ModeSwitchInterface ModeDirection** 



#### 3.2.2.6 SenderReceiverInterfaces

Common SenderReceiverInterface attributes				
shortName	Arr1dPrimData_Temperature_Lin_K_C_uint16			
lesc	Temperature 1 in Kelvin but displayed as degree Celsius			
properties of the dataEleme	ents			
properties of VariableDa	ataPrototype			
shortName Arr1dPrimData_Temperature_Lin_K_C_uint16				
desc	Temperature 1 in Kelvin but displayed as degree Celsius			
type	K_Celsius_Lnr_0_511d9921875_0_FFFF_uint16 ScNoOfWheels			
swImplPolicy	standard			
swCalibrationAccess	readOnly			
swAddrMethod	DATA			

Table 3.75: SenderReceiverInterface Arr1dPrimData\_Temperature\_Lin\_K\_C\_uint16

Common SenderReceiverInterface attributes					
shortName	PrimData_Mass_Lnr_Kg_uint8				
desc	Mass in kilogram				
properties of the dataEleme	properties of the dataElements				
properties of VariableDataPrototype					
shortName	PrimData_Mass_Lnr_Kg_uint8				
desc	Mass in kilogram				
type	kg_Lnr_0_0d25_0_C8_uint8				
swImplPolicy	standard				
swCalibrationAccess	readOnly				
swAddrMethod DATA					

Table 3.76: SenderReceiverInterface PrimData\_Mass\_Lnr\_Kg\_uint8

Common SenderReceiverInterface attributes			
shortName	PrimData_MassCorrected_Lnr_Kg_uint8		
desc	Primitve data for the corrected mass in kg.		
properties of the dataEleme	nts		
properties of VariableDataPrototype			
shortName	PrimData_MassCorrected_Lnr_Kg_uint8		
desc	Primitve data for the corrected mass in kg.		
type	kg_Lnr_0_0d25_0_C8_uint8		
swImplPolicy	standard		
swCalibrationAccess	readOnly		
swAddrMethod	DATA		

Table 3.77: SenderReceiverInterface PrimData\_MassCorrected\_Lnr\_Kg\_uint8



Common SenderReceiverInterface attributes			
shortName	PrimData_Temperature_Lin_K_C_uint16		
desc	Temperature 1 in Kelvin but displayed as degree Celsius		
properties of the dataEleme	ents		
properties of VariableDa	ataPrototype		
shortName	PrimData_Temperature_Lin_K_C_uint16		
desc	Temperature 1 in Kelvin but displayed as degree Celsius		
type	K_Celsius_Lnr_0_511d9921875_0_FFFF_uint16		
swImplPolicy	standard		
swCalibrationAccess	readOnly		
swAddrMethod	DATA		

Table 3.78: SenderReceiverInterface PrimData\_Temperature\_Lin\_K\_C\_uint16

Common SenderReceiverInterface attributes				
shortName	PrimData_Time_Lnr_s_uint16			
desc	Primitve data holding a time value.			
properties of the dataEleme	ents			
properties of VariableDa	ntaPrototype			
shortName	PrimData_Time_Lnr_s_uint16			
desc	Primitve data holding a time value.			
type	s_Lnr_0_8191d875_0_FFFF_uint16			
swImplPolicy	standard			
swCalibrationAccess	readOnly			
swAddrMethod	DATA			

Table 3.79: SenderReceiverInterface PrimData\_Time\_Lnr\_s\_uint16

Common SenderReceiverInterface attributes					
shortName	PrimData_ValidState_Txt_noUnit_boolean				
desc	Boolean representing the data validity				
properties of the dataEleme	properties of the dataElements				
properties of VariableDataPrototype					
shortName	PrimData_ValidState_Txt_noUnit_boolean				
desc	Boolean representing the data validity				
type	DataValidityType				
swImplPolicystandardswCalibrationAccessreadOnlyswAddrMethodDATA					

Table 3.80: SenderReceiverInterface PrimData\_ValidState\_Txt\_noUnit\_boolean



# 3.2.2.7 ApplicationDataTypes, Category BOOLEAN

С	Common ApplicationDataType attributes					
s	hortName	DataValidityType				
С	ategory	BOOLEAN				
d	desc Boolean to represent the data validity					
s	wCalibrationAccess	notAccessib	le			
u	nit	NoUnit				
R	lange					
		lowerLimit	lowerLimit		upperLimit	
	physConstrs	0		1		
С	Conversion					
	category	TEXTTABLE				
	direction	compuInternalToPhys				
	desc	lowerLimit	upperLimit	vt	symbol	
	-	0	0	Invalid		
	-	1	1	Valid		

Table 3.81: ApplicationDataType DataValidityType

91 of 176



## 3.2.2.8 ApplicationDataTypes, Category VALUE

Common ApplicationDataType attributes					
shortName	K_Celsius_Lnr_0_511d9921875_0_FFFF_uint16				
category	VALUE				
desc	Temperature				
swCalibrationAccess	notAccessib	le			
unit	K				
Range					
	lowerLimit		upperLimit		
physConstrs	0		511.9921875		
Conversion					
category	LINEAR				
direction	compuInterna	alToPhys			
desc	lowerLimit upperLimit		compuNumerator/ compuDenominator		
-	-	-	$Phys = \frac{0 + 0.0078125 * Internal}{1}$		

Table 3.82: ApplicationDataType K\_Celsius\_Lnr\_0\_511d9921875\_0\_FFFF\_uint16

C	Common ApplicationDataType attributes					
S	hortName	kg_Lnr_0_0d25	kg_Lnr_0_0d25_0_C8_uint8			
C	ategory	VALUE				
d	lesc	Mass				
s	wCalibrationAccess	notAccessib	notAccessible			
u	nit	kg	kg			
R	Range					
		lowerLimit upperLimit				
	physConstrs	0		0.25		
C	Conversion					
	category	LINEAR				
	direction	compuIntern	alToPhys			
	desc	lowerLimit upperLimit		compuNumerator/ compuDenominator		
	-	-	-	$Phys = \frac{0 + 0.00125 * Internal}{1}$		

Table 3.83: ApplicationDataType kg\_Lnr\_0\_0d25\_0\_C8\_uint8





shortName	NoUnit_Lnr_1_4_1_4_uint8			
category	VALUE			
swCalibrationAccess	notAccessib	le		
unit	NoUnit			
Range				
	lowerLimit	lowerLimit upperLimit		
physConstrs	1		4	
Conversion				
category	LINEAR			
direction	compuIntern	alToPhys		
desc	lowerLimit	upperLimit	compuNumerator/ compuDenominator	
-	-	-	$Phys = \frac{0 + 1 * Internal}{1}$	

Table 3.84: ApplicationDataType NoUnit\_Lnr\_1\_4\_1\_4\_uint8

С	Common ApplicationDataType attributes				
s	hortName	NoUnit_Lnr_1_65535_1_FFFF_uint16			
C	ategory	VALUE			
s	wCalibrationAccess	notAccessible			
u	nit	NoUnit			
R	ange				
		lowerLimit		upperLimit	
	physConstrs	1 65535		65535	
С	Conversion				
	category	LINEAR			
	direction	compuIntern	alToPhys		
	desc	lowerLimit upperLimit		compuNumerator/ compuDenominator	
	-	-	-	$Phys = \frac{0 + 1 * Internal}{1}$	

Table 3.85: ApplicationDataType NoUnit\_Lnr\_1\_65535\_1\_FFFF\_uint16

Common ApplicationDataType attributes		
shortName	s_Lnr_0_8191d875_0_FFFF_uint16	
category	VALUE	
desc	cooking time in seconds	
swCalibrationAccess notAccessible		
<u> </u>		



u	mit	s			
R	Range				
		lowerLimit		upperLimit	
	physConstrs	0		8191.875	
С	Conversion				
	category	LINEAR			
	direction	compuInterna	compuInternalToPhys		
	desc	lowerLimit upperLimit		compuNumerator/ compuDenominator	
	-	-	-	$Phys = \frac{0 + 0.125 * Internal}{1}$	

Table 3.86: ApplicationDataType s\_Lnr\_0\_8191d875\_0\_FFFF\_uint16

С	Common ApplicationDataType attributes				
S	hortName	speedSteps			
С	ategory	VALUE			
d	esc	Possible speed	steps		
S	wCalibrationAccess	notAccessib	le		
u	nit	NoUnit			
R	ange				
		lowerLimit	lowerLimit upperLimit		
	physConstrs	-1 2			
С	onversion				
	category	TEXTTABLE			
	direction	compuIntern	alToPhys		
	desc	lowerLimit	upperLimit	vt	symbol
	-	-1	-1	Stop	
	-	0	0	LightSpeed	
	-	1	1	RidiculousSpeed	
	-	2	2	LudicrousSpeed	

Table 3.87: ApplicationDataType speedSteps

Common ApplicationDataType attributes			
shortName	TxWheelNames		
category	VALUE		
desc	Wheel names		
swCalibrationAccess	notAccessible		
unit	NoUnit		
Range			
	lowerLimit	upperLimit	



physConstrs	0		3	
nversion				
category	TEXTTABLE			
direction	compuIntern	compuInternalToPhys		
desc	lowerLimit	upperLimit	vt	symbol
-	0	0	FrontLeft	
-	1	1	FrontRight	
-	2	2	RearLeft	
-	3	3	RearRight	

Table 3.88: ApplicationDataType TxWheelNames



## 3.2.2.9 ApplicationDataTypes, Category COM\_AXIS

Common ApplicationDataType attributes		
shortName ComAxis_Temp_Lin_K_uint16		
category	COM_AXIS	
swCalibrationAccess	notAccessible	
swRecordLayout	RL20_ME_Axis	
properties of the axes (swCalprmAxisSet)		
properties of SwAxisIndi	ividual (swCalprmAxis and swCalprmAxisTypeProps)	
swAxisIndex 1		
category COM_AXIS		
inputVariableType K_Celsius_Lnr_0_511d9921875_0_FFFF_uint16		
swMaxAxisPoints	6	
swMinAxisPoints	6	

Table 3.89: ApplicationDataType ComAxis\_Temp\_Lin\_K\_uint16

Common ApplicationDataType attributes			
shortName ComAxis_Steps_Txt_sint8			
category COM_AXIS			
swCalibrationAccess	notAccessible		
swRecordLayout	RL20_ME_Axis		
properties of the axes (swCalprmAxisSet)			
properties of SwAxisIndi	properties of SwAxisIndividual (swCalprmAxis and swCalprmAxisTypeProps)		
swAxisIndex 1			
category	COM_AXIS		
inputVariableType speedSteps			
swMaxAxisPoints	4		
swMinAxisPoints	4		

Table 3.90: ApplicationDataType ComAxis\_Steps\_Txt\_sint8

Common ApplicationDataType attributes				
shortName	ComAxis_Mass_Lnr_Kg_uint8			
category	COM_AXIS			
swCalibrationAccess	notAccessible			
swRecordLayout	RL20_ME_Axis			
properties of the axes (swCalprmAxisSet)				
properties of SwAxisIndi	ividual (swCalprmAxis and swCalprmAxisTypeProps)			
swAxisIndex	1			
category COM_AXIS inputVariableType kg_Lnr_0_0d25_0_C8_uint8 swMaxAxisPoints 4				



swMinAxisPoints

Table 3.91: ApplicationDataType ComAxis\_Mass\_Lnr\_Kg\_uint8



## 3.2.2.10 ApplicationDataTypes, Category CURVE

Common ApplicationDataType attributes			
shortName	Curve_Mass_Lnr_Kg_uint8		
category	CURVE		
swCalibrationAccess	notAccessible		
swRecordLayout	Layout RL20_ME_1DimMap		
valueAxisDataType	meAxisDataType kg_Lnr_0_0d25_0_C8_uint8		
properties of the axes (swCalprmAxisSet)			
properties of SwAxisGrou	properties of SwAxisGrouped (swCalprmAxis and swCalprmAxisTypeProps)		
swAxisIndex 1			
category COM_AXIS			
sharedAxisType	ComAxis_Steps_Txt_sint8		

Table 3.92: ApplicationDataType Curve\_Mass\_Lnr\_Kg\_uint8



## 3.2.2.11 ApplicationDataTypes, Category MAP

Common ApplicationDataType attributes			
shortName	Map_Time_Lnr_s_uint16		
category	MAP		
swCalibrationAccess	notAccessible		
swRecordLayout	RL20_ME_2DimMap		
valueAxisDataType	s_Lnr_0_8191d875_0_FFFF_uint16		
properties of the axes (swCa	lprmAxisSet)		
properties of SwAxisGrou	ped (swCalprmAxis and swCalprmAxisTypeProps)		
swAxisIndex	1		
category	COM_AXIS		
sharedAxisType	ComAxis_Temp_Lin_K_uint16		
properties of SwAxisGrouped (swCalprmAxis and swCalprmAxisTypeProps)			
swAxisIndex	2		
category COM_AXIS			
sharedAxisType         ComAxis_Mass_Lnr_Kg_uint8			

Table 3.93: ApplicationDataType Map\_Time\_Lnr\_s\_uint16



## 3.2.2.12 ApplicationArrayDataTypes

Common ApplicationArrayDataType attributes		
shortName	ComAxis_Temp_Lin_K_uint16_ScNoOfWheels	
category	ARRAY	
swCalibrationAccess	notAccessible	
properties of the elements		
properties of ApplicationArrayElement		
shortName	ComAxis_Temp_Lin_K_uint16_ScNoOfWheels	
category	COM_AXIS	
type	ComAxis_Temp_Lin_K_uint16	
arraySizeSemantics	fixedSize	
maxNumberOfElements		

Table 3.94: ApplicationArrayDataType ComAxis\_Temp\_Lin\_K\_uint16\_ScNoOfWheels

Common ApplicationArrayDataType attributes	
shortName	K_Celsius_Lnr_0_511d9921875_0_FFFF_uint16_ScNoOfWheels
category	ARRAY
swCalibrationAccess	notAccessible
properties of the elements	
properties of ApplicationArrayElement	
shortName	K_Celsius_Lnr_0_511d9921875_0_FFFF_uint16_ScNoOfWheels
category	VALUE
type	K_Celsius_Lnr_0_511d9921875_0_FFFF_uint16
arraySizeSemantics	fixedSize
maxNumberOfElements	

Table 3.95: ApplicationArrayDataType K\_Celsius\_Lnr\_0\_511d9921875\_0\_FFFF\_uint16\_ScNoOfWheels

Common ApplicationArrayDataType attributes			
shortName	Map_Time_Lnr_s_uint16_ScNoOfWheels		
category	ARRAY		
swCalibrationAccess	notAccessible		
properties of the elements	properties of the elements		
properties of Application	properties of ApplicationArrayElement		
shortName	Map_Time_Lnr_s_uint16_ScNoOfWheels		
category	MAP		
type	Map_Time_Lnr_s_uint16		
arraySizeSemantics	fixedSize		
maxNumberOfElements			

Table 3.96: ApplicationArrayDataType Map\_Time\_Lnr\_s\_uint16\_ScNoOfWheels



## 3.2.2.13 ApplicationRecordDataTypes

Common ApplicationRecordDataType attributes			
shortName	CMscC_nvm_NvBlockATyp		
category	STRUCTURE		
swCalibrationAccess	notAccessible		
properties of the elements	properties of the elements		
properties of ApplicationRecordElement			
shortName	PrimData_StepsSpeed_Txt_sint8		
category VALUE			
type	speedSteps		

Table 3.97: ApplicationRecordDataType CMscC\_nvm\_NvBlockATyp



## 3.2.2.14 ModeDeclarationGroups

Common ModeDeclarationGroup attributes		
shortName	Direction	
category	EXPLICIT_ORDER	
initialMode	Halt	
properties of the modeDecla	rationS	
properties of ModeDeclaration		
shortName	Backward	
desc	Backward direction	
value	2	
properties of ModeDeclar	properties of ModeDeclaration	
shortName	Forward	
desc	Forward direction	
value	1	
properties of ModeDeclaration		
shortName	Halt	
desc	Standstill	
value	0	

**Table 3.98: ModeDeclarationGroup Direction** 



#### 3.2.2.15 Units

С	Common Unit attributes	
s	hortName	Celsius
d	esc	Degrees Celsius
	displayName	°C
	offsetSiToUnit	-273.15
	factorSiToUnit	1.0
	physicalDimension	PD_K

**Table 3.99: Unit Celsius** 

С	Common Unit attributes	
s	hortName	K
d	esc	Temperature
	displayName	K
	offsetSiToUnit	0.0
	factorSiToUnit	1.0
	physicalDimension	PD_K

Table 3.100: Unit K

C	Common Unit attributes	
s	hortName	kg
d	esc	Mass
	displayName	kg
	offsetSiToUnit	0.0
	factorSiToUnit	1.0
	physicalDimension	PD_kg

Table 3.101: Unit kg

С	Common Unit attributes	
S	hortName	NoUnit
d	esc	No Unit
	displayName	-
	offsetSiToUnit	0.0
	factorSiToUnit	1.0
	physicalDimension	PD_NoUnit

**Table 3.102: Unit NoUnit** 



С	Common Unit attributes	
s	hortName	S
d	esc	Time
	displayName	s
	offsetSiToUnit	0.0
	factorSiToUnit	1.0
	physicalDimension	PD_s

Table 3.103: Unit s



## 3.2.2.16 PhysicalDimensions

hortName	PD_K
currentExp	0
lengthExp	0
luminousIntensity- Exp	0
massExp	0
molarAmountExp	0
temperatureExp	1
timeExp	0

Table 3.104: PhysicalDimension PD\_K

С	Common PhysicalDimension attributes		
shortName PD_kg		PD_kg	
	currentExp	0	
	lengthExp	0	
	<pre>luminousIntensity- Exp</pre>	0	
	massExp	1	
	molarAmountExp	0	
	temperatureExp	0	
	timeExp	0	

Table 3.105: PhysicalDimension PD\_kg

Common PhysicalDimension attributes	
shortName	PD_NoUnit
currentExp	0
lengthExp	0
luminousIntensity- Exp	0
massExp	0
molarAmountExp	0
temperatureExp	0
timeExp	0

Table 3.106: PhysicalDimension PD\_NoUnit

C	Common PhysicalDimension attributes	
s	hortName	PD_s
	currentExp	0



lengthExp	0
luminousIntensity- Exp	0
massExp	0
molarAmountExp	0
temperatureExp	0
timeExp	1

Table 3.107: PhysicalDimension PD\_s



#### 3.2.2.17 SwAddrMethods

C	Common SwAddrMethod attributes	
S	hortName	CAL
d	lesc	Calibratable constants; safety level QM. Constants will be located in different memory sections depending on the alignment of the constant.
	sectionType	calprm
	memoryAllocation- KeywordPolicy	addrMethodShortNameAndAlignment
	sectionInitializa- tionPolicy	-
	option	safetyQM

Table 3.108: SwAddrMethod CAL

С	Common SwAddrMethod attributes	
S	hortName	CODE_10MS
d	esc	Code of ECU-functions called every 10 ms; safety level QM.
	sectionType	code
	memoryAllocation- KeywordPolicy	addrMethodShortName
	sectionInitializa- tionPolicy	-
	option	safetyQM

Table 3.109: SwAddrMethod CODE\_10MS

С	Common SwAddrMethod attributes	
s	hortName	CONST_SLOW
d	esc	Non calibratable constants of ECU-functions called seldom; safety level QM.
	sectionType	const
	memoryAllocation- KeywordPolicy	addrMethodShortName
	sectionInitializa- tionPolicy	-
	option	safetyQM

Table 3.110: SwAddrMethod CONST\_SLOW

C	Common SwAddrMethod attributes	
shortName		DATA
d	lesc	Variables of ECU-functions; safety level QM. Variables will be located in different memory sections depending on the alignment of the variable.
	sectionType	var



memoryAllocation- KeywordPolicy	addrMethodShortNameAndAlignment	
sectionInitializa- tionPolicy	INIT	
option	safetyQM	

Table 3.111: SwAddrMethod DATA

С	Common SwAddrMethod attributes	
S	hortName	DATA_NVDAT
d	esc	Variables stored in non-volatile memory; safety level QM.
	sectionType	var
	memoryAllocation- KeywordPolicy	addrMethodShortName
	sectionInitializa- tionPolicy	NO-INIT
	option	nvData, safetyQM

Table 3.112: SwAddrMethod DATA\_NVDAT



# 4 Structured Requirements

Structured Requirements are available at different sections in the meta model. There exists a clear definition of the elements of StructuredReq. Based on these elements a variety of possible use cases can be applied. The following show cases shall illustrate this:

- provide additional information for configuration
- provide specification items as requirements
- provide diagnostical requirements
- provide decomposition of requirements

### 4.1 Introductory Show Case

An OEMs e.g. can specify additional unmapped Ecu Configuration information using Structured Requirements. They are serialized using standardized ARXML. This would ensure a consistent processing of these data by a suitable tooling solution on supplier side. In addition, further validation can be applied to data and lead to a high quality of the exchanged information. No new and additional elements have to be introduced in the meta model because StructuredReg still provides all needed entities.

#### 4.1.1 Additional information (M1 parameter)

The System Template [6] defines upstream mappings for a variety of M1 parameters. They are transported by the System Extract or Diagnostic Extract and presented in figure 4.1 as importable parameters.

The show case that an OEM needs to specify a value for not importable M1 parameters (no full mapping specified in AUTOSAR templates) to determine a dedicated behavior, e.g. CanDevErrorDetect which can be enabled by true or disabled by false is illustrated in figure 4.1 as processable parameters. A tool based processing of these information can increase efficiency and minimize error-proneness. This show case is targeting to solve this by using the StructuredReq.



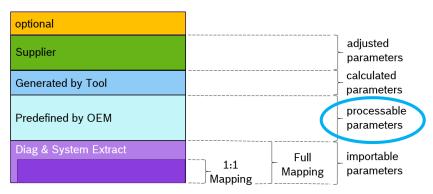


Figure 4.1: Types of Parameters

The figure 4.1 shows further type of parameters; calculated and adjusted parameters; which exist but are not in the scope of show case.

In listing 4.1 the StructuredReg for CanDevErrorDetect is illustrated.

```
<STRUCTURED-REQ SI="UNMAPPED_ECUC">
  <SHORT-NAME>CAN_0001
 <LONG-NAME>
    <L-4 L="EN">CanDevErrorDetect</L-4>
 </LONG-NAME>
 <CATEGORY>REQUIREMENT ITEM</CATEGORY>
 <DATE>2018-03-19</DATE>
  <ISSUED-BY>OEM</ISSUED-BY>
 <TYPE>valid</TYPE>
 <IMPORTANCE>High</IMPORTANCE>
  <DESCRIPTION>
    <LIST>
      <ITEM SI="Guideline">
        <P>
          <L-1 L="EN">Switches the development error detection and
             notification on or off. true: detection and notification is
             enabled. false: detection and notification is disabled.</L-1>
        </P>
      </ITEM>
      <ITEM SI="SupplierSetting">
          <L-1 L="FOR-ALL">FALSE</L-1>
        </P>
      </ITEM>
      <ITEM SI="ARVersion">
        <P>
          <L-1 L="FOR-ALL">4.2.2</L-1>
        </P>
        <P>
          <L-1 L="FOR-ALL">4.3.0</L-1>
        </P>
          <L-1 L="FOR-ALL">4.4.0</L-1>
        </P>
      </ITEM>
      <ITEM SI="ValueRange">
```

<P>



```
<L-1 L="FOR-ALL">TRUE</L-1>
        </P>
        <P>
          <L-1 L="FOR-ALL">FALSE</L-1>
        </P>
      </ITEM>
    </LIST>
  </DESCRIPTION>
  <RATIONALE>
    <P>
      <L-1 L="EN">The feature development error detection shall be
         disabled for production code else it has to be ensured that there
          will be no side effects from this code.</L-1>
    </P>
  </RATIONALE>
  <USE-CASE>
      <L-1 L="EN">preconfigured/default</L-1>
    </P>
  </USE-CASE>
</STRUCTURED-REQ>
```

Listing 4.1: Example 1 for StructuredReq

For illustrative reasons the following listing 4.2 only contains a subset of the example where the ValueRange is specified using a DataConstr.

Listing 4.2: Example 2 for ValueRange in StructuredReq

The corresponding DataConstr is shown in the listing 4.3.

```
<DATA-CONSTR>
  <SHORT-NAME>Range_Boolean
<DATA-CONSTR-RULES>
  <DATA-CONSTR-RULE>
  <PHYS-CONSTRS>
    <LOWER-LIMIT>TRUE</LOWER-LIMIT>
    <UPPER-LIMIT>FALSE</UPPER-LIMIT>

</pre
```

Listing 4.3: Example 2 for DataConstr

The same data can also be rendered in the table 4.1.



ReqID	CAN_00001	CanDevErrorDetect	Setting	FALSE
Use Case	preconfigured/default	4.2.2, 4.3.0, 4.4.0	Range	FALSE, TRUE
Descrip- tion	Switches the development error detection and notification on or off. true: detection and notification is enabled. false: detection and notification is disabled.	Rational	The feature developm shall be disabled for p has to be ensured that effects from this code.	roduction code else it t there will be no side

Table 4.1: StructuredReq Of CanDevErrorDetect

### 4.1.2 Specification items as requirements

AUTOSAR uses <u>StructuredReq</u> within AUTOSAR RS documents [TPS\_STDT\_-00060]. They are automatically generated based on the specification generation process. Theses specification items use the attributes of <u>StructuredReq</u> including <u>Traceable</u>, to realize the up tracing. A dedicated example is illustrated in 4.4 this.

```
<STRUCTURED-REQ>
  <SHORT-NAME>RS_SYST_00020
  <LONG-NAME>
    <L-4 L="EN">Exclusion of signals from a specific physical line</L-4>
  <CATEGORY>REQUIREMENT_ITEM</CATEGORY>
  <TRACE-REFS>
    <TRACE-REF BASE="ArTrace" DEST="TRACEABLE">RS_Main_00150/TRACE-REF>
    <TRACE-REF BASE="ArTrace" DEST="TRACEABLE">RS_Main_00030/TRACE-REF>
  </TRACE-REFS>
  <DATE>2004-10-29</DATE>
  <ISSUED-BY>WP Methodology&amp; Templates/ISSUED-BY>
  <TYPE>valid</TYPE>
  <IMPORTANCE>medium</IMPORTANCE>
  <DESCRIPTION>
   <P>
      <L-1 L="EN">The System Constraint Description shall be able to
         describe that signals have not to be mapped to a specific
         physical line.</L-1>
    </P>
  </DESCRIPTION>
  <RATIONALE>
    <P>
      <L-1 L="EN">Some physical lines can result unsuitable (too slow,
         unsafe communication protocol, etc.) for the transmission of
         some specific signals.</L-1>
    </P>
  </RATIONALE>
  <USE-CASE>
    < D >
      <L-1 L="EN">Most of power train signals cannot be mapped to a low
         speed CAN bus, due to their timing requirements.</L-1>
    </P>
  </USE-CASE>
  <CONFLICTS>
```



Listing 4.4: Example for StructuredReq in RS AUTOSAR Specification

The Traceable is realized by the tags <TRACE-REF>s in inside <TRACE-REFS>. In the specification the up traces appear as links below the table.

[RS\_SYST\_00020] Exclusion of signals from a specific physical line [

Туре:	valid
Description:	The System Constraint Description shall be able to describe that signals have not to be mapped to a specific physical line.
Rationale:	Some physical lines can result unsuitable (too slow, unsafe communication protocol, etc.) for the transmission of some specific signals.
Dependencies:	None identified.
Use Case:	Most of power train signals cannot be mapped to a low speed CAN bus, due to their timing requirements.
Supporting Material:	_

(RS\_Main\_00150, RS\_Main\_00030)

Figure 4.2: Spec item represented by StructuredReq

Using StructuredReg a complete requirements description and tracing is available.

#### 4.1.3 Diagnostic requirements

In this context the StructuredReq is embedded in DiagnosticAccessPermission. Mainly the description of the two conditions are shown here.



```
<P>
          <L-1 L="EN">This is a textual description of a pre-condition</L-1
        </P>
      </DESCRIPTION>
   </STRUCTURED-REQ>
   <STRUCTURED-REQ>
      <SHORT-NAME>runcondition
      <CATEGORY>DIAG_ACCESS_PERM_RUN_COND</CATEGORY>
      <DESCRIPTION>
       <P>
          <L-1 L="EN">This is a textual description of a run-condition</L-1
       </P>
     </DESCRIPTION>
   </STRUCTURED-REQ>
 </INTRODUCTION>
  <DIAGNOSTIC-SESSION-REFS>
   <DIAGNOSTIC-SESSION-REF DEST="DIAGNOSTIC-SESSION">/AUTOSAR/UseCase_230/
       ExampleSession</DIAGNOSTIC-SESSION-REF>
 </DIAGNOSTIC-SESSION-REFS>
 <SECURITY-LEVEL-REFS>
    <SECURITY-LEVEL-REF DEST="DIAGNOSTIC-SECURITY-LEVEL">/AUTOSAR/
       UseCase 230/ExampleSecurityLevel</SECURITY-LEVEL-REF>
  </SECURITY-LEVEL-REFS>
</DIAGNOSTIC-ACCESS-PERMISSION>
```

Listing 4.5: Example for the definition of pre- and run-conditions for DiagnosticAccessPermission

### 4.1.4 Decomposition of requirements

The StructuredReq can also be used for decomposition of requirements.

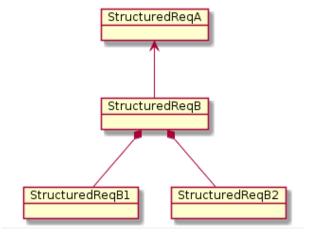


Figure 4.3: Decomposition of StructuredReq

In figure 4.3 the StructuredReqB has an upstream requirement to StructuredReqA realized by Traceable using <TRACE-REF>. The StructuredReqB itself is



decomposed by StructuredReqB1 and StructuredReqB2. This is realized by the attribute dependencies of StructuredReq. It contains two <TRACE>s which in turn use <TRACE-REF> again.

```
<ELEMENTS>
  <DOCUMENTATION>
   <SHORT-NAME>DecompositionExample
   <LONG-NAME>
      <L-4 L="EN">Decomposition Example</L-4>
   </LONG-NAME>
      <DOCUMENTATION-CONTENT>
        <STRUCTURED-REO>
          <SHORT-NAME>A</SHORT-NAME>
          <CATEGORY>REQUIREMENT ITEM</CATEGORY>
          <DATE>2019-07-19</DATE>
          <ISSUED-BY>OEM</ISSUED-BY>
          <TYPE>valid</TYPE>
          <IMPORTANCE>High</IMPORTANCE>
        </STRUCTURED-REQ>
        <STRUCTURED-REQ>
          <SHORT-NAME>B</SHORT-NAME>
          <CATEGORY>REQUIREMENT ITEM</CATEGORY>
          <TRACE-REFS>
            <TRACE-REF BASE="ArTrace" DEST="STRUCTURED-REQ">DecompositionExample
               /A</TRACE-REF>
          </TRACE-REFS>
          <DATE>2019-07-19</DATE>
          <ISSUED-BY>OEM</ISSUED-BY>
          <TYPE>valid</TYPE>
          <IMPORTANCE>High</IMPORTANCE>
          <DEPENDENCIES>
           <TRACE>
             <SHORT-NAME>DECOMPB1</SHORT-NAME>
             <LONG-NAME>
               <L-4 L="EN">Decomposition element 1</L-4>
             </LONG-NAME>
             <CATEGORY>DECOMPOSITION</CATEGORY>
             <TRACE-REFS>
               <TRACE-REF BASE="ArTrace" DEST="STRUCTURED-REQ">
                  DecompositionExample/B1</TRACE-REF>
             </TRACE-REFS>
           </TRACE>
           <TRACE>
             <SHORT-NAME>DECOMPB2</SHORT-NAME>
               <L-4 L="EN">Decomposition element 2</L-4>
             </LONG-NAME>
             <CATEGORY>DECOMPOSITION</CATEGORY>
               <TRACE-REF BASE="ArTrace" DEST="STRUCTURED-REQ">
                  DecompositionExample/B2</TRACE-REF>
             </TRACE-REFS>
           </TRACE>
          </DEPENDENCIES>
        </STRUCTURED-REQ>
        <STRUCTURED-REQ>
```



Listing 4.6: Example for decomposition of StructuredReq



# A Mentioned Class Tables

For the sake of completeness, this chapter contains a set of class tables representing meta-classes mentioned in the context of this document but which are not contained directly in the scope of describing specific meta-model semantics.

Class	ARElement (abstract)								
Package	M2::AUTOSARTemplates::GenericStructure::GeneralTemplateClasses::ARPackage								
Note	An element that can be defined stand-alone, i.e. without being part of another element (except for packages of course).								
Base	ARObject, CollectableEle	ment, <mark>Ide</mark>	ntifiable, I	MultilanguageReferrable, PackageableElement, Referrable					
Subclasses	Partition, AutosarDataType, BaseType, BlueprintMappingSet, BswEntryRelationshipSet, BswModule Description, BswModuleEntry, BuildActionManifest, CalibrationParameterValueSet, ClientIdDefinitionSet, ClientServerInterfaceToBswModuleEntryBlueprintMapping, Collection, CompuMethod, Consistency NeedsBlueprintSet, ConstantSpecification, ConstantSpecificationMappingSet, CpSoftwareCluster, Cp SoftwareClusterBinaryManifestDescriptor, CpSoftwareClusterMappingSet, CpSoftwareClusterResource Pool, CryptoEllipticCurveProps, CryptoServiceCertificate, CryptoServiceKey, CryptoServicePrimitive, CryptoServiceQueue, CryptoSignatureScheme, DataConstr, DataExchangePoint, DataTransformation Set, DataTypeMappingSet, DdsCpConfig, DiagnosticCommonElement, DiagnosticConnection, DiagnosticContributionSet, DltContext, DltEcu, Documentation, E2EProfileCompatibilityProps, Ecuc DefinitionCollection, EcucDestinationUriDefSet, EcucModuleConfigurationValues, EcucModuleDef, Ecuc ValueCollection, EndToEndProtectionSet, EthIpProps, EthTcplpIcmpProps, EthTcplpProps, Evaluated VariantSet, FMFeature, FMFeatureMap, FMFeatureModel, FMFeatureSelectionSet, FirewallRule, Flat Map, GeneralPurposeConnection, HwCategory, HwElement, HwType, IEEE1722TpConnection, IPSec ConfigProps, IPv6ExtHeaderFilterSet, IdsCommonElement, IdsDesign, Implementation, ImpositionTime DefinitionGroup, InterpolationRoutineMappingSet, J1939ControllerApplication, KeywordSet, LifeCycle InfoSet, LifeCycleStateDefinitionGroup, LogAndTraceMessageCollectionSet, MacSecGlobalKayProps, MacSecParticipantSet, McFunction, McGroup, ModeDeclarationGroup, ModeDeclarationMappingSet, Os TaskProxy, PhysicalDimension, PhysicalDimensionMappingSet, PortInterface, PortInterfaceMappingSet, Os TaskProxy, PhysicalDimension, PhysicalDimensionMappingSet, SomeipSdServerEventGroupTimingConfig, SomeipSdClientServiceInstanceConfig, SomeipSdServerEventGroupTimingConfig, SomeipSdServerServiceInstanceConfig, SwAddrMethod, SwAxisType, SwComponentType, SwRecordLayout, SwSystemconst, SwSystemconstantValueSet, Swc BswMappi								
Aggregated by	ARPackage.element								
Attribute	Туре	Mult.	Kind	Note					
_	_	_	_	_					

**Table A.1: ARElement** 

Class	ARPackage					
Package	M2::AUTOSARTemplates:	:GenericS	Structure::	GeneralTemplateClasses::ARPackage		
Note	AUTOSAR package, allow	AUTOSAR package, allowing to create top level packages to structure the contained ARElements.				
	ARPackages are open sets. This means that in a file based description system multiple files can be used to partially describe the contents of a package.					
	This is an extended version of MSR's SW-SYSTEM.					
Base	ARObject, AtpBlueprint, AtpBlueprintable, CollectableElement, Identifiable, MultilanguageReferrable, Referrable					
Aggregated by	ARPackage.arPackage, AUTOSAR.arPackage					
Attribute	Туре	Mult.	Kind	Note		



Class	ARPackage			
arPackage	ARPackage	*	aggr	This represents a sub package within an ARPackage, thus allowing for an unlimited package hierarchy.
				Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=arPackage.shortName, arPackage.variation Point.shortLabel vh.latestBindingTime=blueprintDerivationTime xml.sequenceOffset=30
element	PackageableElement	*	aggr	Elements that are part of this package
				Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=element.shortName, element.variation Point.shortLabel vh.latestBindingTime=systemDesignTime xml.sequenceOffset=20
referenceBase	ReferenceBase	*	aggr	This denotes the reference bases for the package. This is the basis for all relative references within the package. The base needs to be selected according to the base attribute within the references.
				Stereotypes: atpSplitable Tags: atp.Splitkey=referenceBase.shortLabel xml.sequenceOffset=10

Table A.2: ARPackage

Class	AliasNameSet				
Package	M2::AUTOSARTemplates:	::Common	Structure	::FlatMap	
Note	This meta-class represent A2L-Generator.	ts a set of	AliasNam	nes. The AliasNameSet can for example be an input to the	
	Tags: atp.recommendedF	Package=A	AliasName	eSets	
Base	ARElement, ARObject, AtpBlueprint, AtpBlueprintable, CollectableElement, Identifiable, Multilanguage Referrable, PackageableElement, Referrable				
Aggregated by	ARPackage.element				
Attribute	Туре	Mult.	Kind	Note	
aliasName	AliasNameAssignment	*	aggr	AliasNames contained in the AliasNameSet.	
				Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=aliasName.shortLabel, aliasName.variation Point.shortLabel vh.latestBindingTime=preCompileTime	

Table A.3: AliasNameSet

Class	AnylnstanceRef
Package	M2::AUTOSARTemplates::GenericStructure::GeneralTemplateClasses::AnyInstanceRef
Note	Describes a reference to any instance in an AUTOSAR model. This is the most generic form of an instance ref. Refer to the superclass notes for more details.
Base	ARObject, AtplnstanceRef





Class	AnyInstanceRef					
Aggregated by	Collection.collectedInstance, Collection.sourceInstance, DocumentationContext.feature, EcucInstance ReferenceValue.value, FlatInstanceDescriptor.ecuExtractReference, FlatInstanceDescriptor.upstream Reference, RptContainer.byPassPoint, RptHook.rptArHook, ViewMap.firstElementInstance, ViewMap. secondElementInstance					
Attribute	Type Mult. Kind Note					
base	AtpClassifier	1	ref	This is the base from which navigation path begins.		
				Stereotypes: atpDerived		
contextElement (ordered)	AtpFeature	*	ref	This is one step in the navigation path specified by the instance ref.		
target	AtpFeature	1	ref	This is the target of the instance ref.		

Table A.4: AnyInstanceRef

Class	ApplicationArrayDataType				
Package	M2::AUTOSARTemplates	::SWCom	onentTer	mplate::Datatype::Datatypes	
Note	An application data type v	which is ar	array, ea	ch element is of the same application data type.	
	Tags: atp.recommended	Package=	Application	nDataTypes	
Base	ARElement, ARObject, ApplicationCompositeDataType, ApplicationDataType, AtpBlueprint, Atp Blueprintable, AtpClassifier, AtpType, AutosarDataType, CollectableElement, Identifiable, Multilanguage Referrable, PackageableElement, Referrable				
Aggregated by	ARPackage.element				
Attribute	Туре	Mult.	Kind	Note	
dynamicArray SizeProfile	String	01	attr	Specifies the profile which the array will follow if it is a variable size array.	
element	ApplicationArray Element	01	aggr	This association implements the concept of an array element. That is, in some cases it is necessary to be able to identify single array elements, e.g. as input values for an interpolation routine.	

Table A.5: ApplicationArrayDataType

Class	ApplicationArrayElement					
Package	M2::AUTOSARTemplates	::SWCom	oonentTer	mplate::Datatype::DataPrototypes		
Note	Describes the properties	of the elen	nents of a	n application array data type.		
Base	ARObject, ApplicationCompositeElementDataPrototype, AtpFeature, AtpPrototype, DataPrototype, Identifiable, MultilanguageReferrable, Referrable					
Aggregated by	ApplicationArrayDataType.element, AtpClassifier.atpFeature					
Attribute	Type Mult. Kind Note			Note		
arraySize Handling	ArraySizeHandling Enum	01	attr	The way how the size of the array is handled.		
arraySize Semantics	ArraySizeSemantics Enum	01	attr	This attribute controls how the information about the array size shall be interpreted.		
indexDataType	ApplicationPrimitive DataType	01	ref	This reference can be taken to assign a CompuMethod of category TEXTTABLE to the array. The texttable entries associate a textual value to an index number such that the element with that index number is represented by a symbolic name.		





Class	ApplicationArrayElement				
maxNumberOf Elements	PositiveInteger	01	attr	The maximum number of elements that the array can contain.	
				Stereotypes: atpVariation Tags: vh.latestBindingTime=preCompileTime	

Table A.6: ApplicationArrayElement

Class	ApplicationCompositeDataType (abstract)				
Package	M2::AUTOSARTemplates:	:SWComp	onentTer	nplate::Datatype::Datatypes	
Note	Abstract base class for all	application	n data typ	pes composed of other data types.	
Base	ARElement, ARObject, ApplicationDataType, AtpBlueprint, AtpBlueprintable, AtpClassifier, AtpType, AutosarDataType, CollectableElement, Identifiable, MultilanguageReferrable, PackageableElement, Referrable				
Subclasses	ApplicationArrayDataType	ApplicationArrayDataType, ApplicationRecordDataType			
Aggregated by	ARPackage.element				
Attribute	Type Mult. Kind Note				
_	-	-	_	-	

Table A.7: ApplicationCompositeDataType

Class	ApplicationCompositeElementDataPrototype (abstract)					
Package	M2::AUTOSARTemplates:	:SWComp	onentTer	nplate::Datatype::DataPrototypes		
Note	This class represents a data prototype which is aggregated within a composite application data type (record or array). It is introduced to provide a better distinction between target and context in instance Refs.					
Base	ARObject, AtpFeature, At	ARObject, AtpFeature, AtpPrototype, DataPrototype, Identifiable, MultilanguageReferrable, Referrable				
Subclasses	ApplicationArrayElement,	Applicatio	nRecordE	Element		
Aggregated by	AtpClassifier.atpFeature					
Attribute	Туре	Type Mult. Kind Note				
type	ApplicationDataType 01 tref This represents the corresponding data type.					
				Stereotypes: isOfType		

Table A.8: ApplicationCompositeElementDataPrototype

Class	ApplicationDataType (abstract)						
Package	M2::AUTOSARTemplates:	:SWComp	onentTer	nplate::Datatype::Datatypes			
Note		ApplicationDataType defines a data type from the application point of view. Especially it should be used whenever something "physical" is at stake.					
	An ApplicationDataType represents a set of values as seen in the application model, such as measurement units. It does not consider implementation details such as bit-size, endianess, etc.						
	It should be possible to me Types only.	odel the a	pplication	level aspects of a VFB system by using ApplicationData			
Base	ARElement, ARObject, AtpBlueprint, AtpBlueprintable, AtpClassifier, AtpType, AutosarDataType, CollectableElement, Identifiable, MultilanguageReferrable, PackageableElement, Referrable						
Subclasses	ApplicationCompositeDataType, ApplicationPrimitiveDataType						
Aggregated by	ARPackage.element						
Attribute	Туре	Type Mult. Kind Note					
_	-	-   -   -   -					

Table A.9: ApplicationDataType



Class	ApplicationPrimitiveDataType					
Package	M2::AUTOSARTemplates:	:SWCom	onentTer	nplate::Datatype::Datatypes		
Note	A primitive data type defin	es a set c	f allowed	values.		
	Tags: atp.recommendedPackage=ApplicationDataTypes					
Base	ARElement, ARObject, ApplicationDataType, AtpBlueprint, AtpBlueprintable, AtpClassifier, AtpType, AutosarDataType, CollectableElement, Identifiable, MultilanguageReferrable, PackageableElement, Referrable					
Aggregated by	ARPackage.element					
Attribute	Type Mult. Kind Note					
_						

Table A.10: ApplicationPrimitiveDataType

Class	ApplicationRecordDataType				
Package	M2::AUTOSARTemplates	::SWComp	onentTer	nplate::Datatype::Datatypes	
Note	An application data type v	vhich can l	be decom	posed into prototypes of other application data types.	
	Tags: atp.recommendedF	Package=A	Application	nDataTypes	
Base	ARElement, ARObject, ApplicationCompositeDataType, ApplicationDataType, AtpBlueprint, Atp Blueprintable, AtpClassifier, AtpType, AutosarDataType, CollectableElement, Identifiable, Multilanguage Referrable, PackageableElement, Referrable				
Aggregated by	ARPackage.element				
Attribute	Туре	Mult.	Kind	Note	
element	ApplicationRecord	*	aggr	Specifies an element of a record.	
(ordered)	Element			The aggregation of ApplicationRecordElement is subject to variability with the purpose to support the conditional existence of elements inside a ApplicationrecordData Type.	
				Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=element.shortName, element.variation Point.shortLabel vh.latestBindingTime=preCompileTime	

Table A.11: ApplicationRecordDataType

Class	ApplicationRecordElement				
Package	M2::AUTOSARTemplates:	:SWComp	onentTer	nplate::Datatype::DataPrototypes	
Note	Describes the properties of	of one par	ticular ele	ment of an application record data type.	
Base	ARObject, ApplicationCompositeElementDataPrototype, AtpFeature, AtpPrototype, DataPrototype, Identifiable, MultilanguageReferrable, Referrable				
Aggregated by	ApplicationRecordDataType.element, AtpClassifier.atpFeature				
Attribute	Туре	Mult.	Kind	Note	
isOptional	Boolean	01	attr	This attribute represents the ability to declare the enclosing ApplicationRecordElement as optional. This means the that, at runtime, the ApplicationRecord Element may or may not have a valid value and shall therefore be ignored.	
				The underlying runtime software provides means to set the ApplicationRecordElement as not valid at the sending end of a communication and determine its validity at the receiving end.	

**Table A.12: ApplicationRecordElement** 



Class	ApplicationSwCompone	ApplicationSwComponentType					
Package	M2::AUTOSARTemplates:	:SWComp	onentTer	nplate::Components			
Note	The ApplicationSwCompo	nentType	is used to	represent the application software.			
	Tags: atp.recommendedP	ackage=S	SwCompo	nentTypes			
Base	ARElement, ARObject, AtomicSwComponentType, AtpBlueprint, AtpBlueprintable, AtpClassifier, Atp Type, CollectableElement, Identifiable, MultilanguageReferrable, PackageableElement, Referrable, Sw ComponentType						
Aggregated by	ARPackage.element						
Attribute	Type Mult. Kind Note						
_							

Table A.13: ApplicationSwComponentType

Enumeration	ArraySizeSemanticsEnum	
Package	M2::AUTOSARTemplates::CommonStructure::ImplementationDataTypes	
Note	This type controls how the information about the number of elements in an ApplicationArrayDataType is to be interpreted.	
Aggregated by	ApplicationArrayElement.arraySizeSemantics, DiagnosticDataElement.arraySizeSemantics, ImplementationDataTypeElement.arraySizeSemantics, SwTextProps.arraySizeSemantics	
Literal	Description	
fixedSize	This means that the ApplicationArrayDataType will always have a fixed number of elements.	
	Tags: atp.EnumerationLiteralIndex=0	
variableSize	This implies that the actual number of elements in the ApplicationArrayDataType might vary at run-time. The value of arraySize represents the maximum number of elements in the array.	
	Tags: atp.EnumerationLiteralIndex=1	

Table A.14: ArraySizeSemanticsEnum

Class	AssemblySwConnector					
Package	M2::AUTOSARTemplates	::SWCom	onentTer	nplate::Composition		
Note	AssemblySwConnectors are exclusively used to connect SwComponentPrototypes in the context of a CompositionSwComponentType.					
Base	ARObject, AtpClassifier, AtpFeature, AtpStructureElement, Identifiable, MultilanguageReferrable, Referrable, SwConnector					
Aggregated by	AtpClassifier.atpFeature, CompositionSwComponentType.connector					
Attribute	Туре	Mult.	Kind	Note		
provider	AbstractProvidedPort Prototype	01	iref	Instance of providing port.  InstanceRef implemented by: PPortInComposition InstanceRef		
requester	AbstractRequiredPort Prototype	01	iref	Instance of requiring port.  InstanceRef implemented by: RPortInComposition InstanceRef		

Table A.15: AssemblySwConnector

Class	AtomicSwComponentType (abstract)				
Package	M2::AUTOSARTemplates::SWComponentTemplate::Components				
Note	An atomic software component is atomic in the sense that it cannot be further decomposed and distributed across multiple ECUs.				





Class	AtomicSwComponentType (abstract)				
Base	ARElement, ARObject, AtpBlueprint, AtpBlueprintable, AtpClassifier, AtpType, CollectableElement, Identifiable, MultilanguageReferrable, PackageableElement, Referrable, SwComponentType				
Subclasses	ApplicationSwComponentType, ComplexDeviceDriverSwComponentType, EcuAbstractionSwComponent Type, NvBlockSwComponentType, SensorActuatorSwComponentType, ServiceProxySwComponent Type, ServiceSwComponentType				
Aggregated by	ARPackage.element				
Attribute	Туре	Mult.	Kind	Note	
internalBehavior	SwcInternalBehavior	01	aggr	The SwcInternalBehaviors owned by an AtomicSw ComponentType can be located in a different physical file. Therefore the aggregation is < <atpsplitable>&gt;.</atpsplitable>	
				Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=internalBehavior.shortName, internal Behavior.variationPoint.shortLabel vh.latestBindingTime=preCompileTime	
symbolProps	SymbolProps	01	aggr	This represents the SymbolProps for the AtomicSw ComponentType.	
				Stereotypes: atpSplitable Tags: atp.Splitkey=symbolProps.shortName	

Table A.16: AtomicSwComponentType

Class	AutosarDataPrototype (abstract)						
Package	M2::AUTOSARTemplates::SWComponentTemplate::Datatype::DataPrototypes						
Note	Base class for prototypica	Base class for prototypical roles of an AutosarDataType.					
Base	ARObject, AtpFeature, At	ARObject, AtpFeature, AtpPrototype, DataPrototype, Identifiable, MultilanguageReferrable, Referrable					
Subclasses	ArgumentDataPrototype, ParameterDataPrototype, VariableDataPrototype						
Aggregated by	AtpClassifier.atpFeature						
Attribute	Туре	Type Mult. Kind Note					
type	AutosarDataType 01 tref This represents the corresponding data type.						
				Stereotypes: isOfType			

**Table A.17: AutosarDataPrototype** 

Class	CompositionSwComponentType					
Package	M2::AUTOSARTemplates:	:SWCom	oonentTer	nplate::Composition		
Note	A CompositionSwComponentType aggregates SwComponentPrototypes (that in turn are typed by SwComponentTypes) as well as SwConnectors for primarily connecting SwComponentPrototypes among each others and towards the surface of the CompositionSwComponentType. By this means, a hierarchical structures of software-components can be created.					
	Tags: atp.recommendedPackage=SwComponentTypes					
Base		ARElement, ARObject, AtpBlueprint, AtpBlueprintable, AtpClassifier, AtpType, CollectableElement, Identifiable, MultilanguageReferrable, PackageableElement, Referrable, SwComponentType				
Aggregated by	ARPackage.element					
Attribute	Туре	Mult.	Kind	Note		





Class	CompositionSwCompo	nentType		
component	SwComponent Prototype	*	aggr	The instantiated components that are part of this composition. The aggregation of SwComponentPrototype is subject to variability with the purpose to support the conditional existence of a SwComponentPrototype. Please be aware: if the conditional existence of SwComponentPrototypes is resolved post-build, the deselected SwComponentPrototypes are still contained in the ECUs build but the instances are inactive in that they are not scheduled by the RTE.  The aggregation is marked as atpSplitable in order to
				allow the addition of service components to the ECU extract during the ECU integration.  The use case for having 0 components owned by the CompositionSwComponentType could be to deliver an empty CompositionSwComponentType to e.g. a supplier for filling the internal structure.
				Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=component.shortName, component.variation Point.shortLabel vh.latestBindingTime=postBuild
connector	SwConnector	*	aggr	SwConnectors have the principal ability to establish a connection among PortPrototypes. They can have many roles in the context of a CompositionSwComponentType. Details are refined by subclasses.
				The aggregation of SwConnectors is subject to variability with the purpose to support variant data flow.
				The aggregation is marked as atpSplitable in order to allow the extension of the ECU extract with AssemblySwConnectors between ApplicationSwComponentTypes and ServiceSwComponentTypes during the ECU integration.
				Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=connector.shortName, connector.variation Point.shortLabel vh.latestBindingTime=postBuild
constantValue Mapping	ConstantSpecification MappingSet	*	ref	Reference to the ConstantSpecificationMapping to be applied for initValues of PPortComSpecs and RPortComSpec.
				Stereotypes: atpSplitable Tags: atp.Splitkey=constantValueMapping





Class	CompositionSwCompor	nentType		
dataType Mapping	DataTypeMappingSet	*	ref	Reference to the DataTypeMappingSet to be applied for the used ApplicationDataTypes in PortInterfaces.
				Background: when developing subsystems it may happen that ApplicationDataTypes are used on the surface of CompositionSwComponentTypes. In this case it would be reasonable to be able to also provide the intended mapping to the ImplementationDataTypes. However, this mapping shall be informal and not technically binding for the implementors mainly because the RTE generator is not concerned about the CompositionSwComponentTypes.
				Rationale: if the mapping of ApplicationDataTypes on the delegated and inner PortPrototype matches then the mapping to ImplementationDataTypes is not impacting compatibility.
				Stereotypes: atpSplitable Tags: atp.Splitkey=dataTypeMapping
instantiation RTEEventProps	InstantiationRTEEvent Props	*	aggr	This allows to define instantiation specific properties for RTE Events, in particular for instance specific scheduling.
				Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=instantiationRTEEventProps.shortLabel, instantiationRTEEventProps.variationPoint.shortLabel vh.latestBindingTime=codeGenerationTime
physical Dimension Mapping	PhysicalDimension MappingSet	01	ref	This reference identifies the PhysicalDimensionMappingSet that is applicable in the context of the enclosing CompositionSwComponentType. The PhysicalDimensionMappings contained in the PhysicalDimensionMappingSet shall be taken into account for the assessment of the compatibility of PhysicalDimensions in the context of creation of a PortInterfaceMapping in the scope of the CompositionSwComponentType.

Table A.18: CompositionSwComponentType

Class	CompuConstTextContent				
Package	M2::MSR::AsamHdo::Con	nputationN	/lethod		
Note	This meta-class represent	This meta-class represents the textual content of a scale.			
Base	ARObject, CompuConstContent				
Aggregated by	CompuConst.compuCons	tContentT	ype		
Attribute	Туре	Mult.	Kind	Note	
vt	VerbatimString	01	attr	This represents a textual constant in the computation method.	

Table A.19: CompuConstTextContent



Class	CompuMethod	CompuMethod					
Package	M2::MSR::AsamHdo::ComputationMethod						
Note	This meta-class represents the ability to express the relationship between a physical value and the mathematical representation.						
	Note that this is still indep formula how the internal v			ical implementation in data types. It only specifies the o its physical pendant.			
	Tags: atp.recommended	Package=0	CompuMe	ethods			
Base	ARElement, ARObject, A Referrable, Packageable			eprintable, CollectableElement, Identifiable, Multilanguage			
Aggregated by	ARPackage.element						
Attribute	Туре	Mult.	Kind	Note			
compulnternal ToPhys	Compu	01	aggr	This specifies the computation from internal values to physical values.			
				Stereotypes: atpSplitable Tags: atp.Splitkey=compuInternalToPhys xml.sequenceOffset=80			
compuPhysTo Internal	Compu	01	aggr	This represents the computation from physical values to the internal values.			
				Stereotypes: atpSplitable Tags: atp.Splitkey=compuPhysToInternal xml.sequenceOffset=90			
displayFormat	DisplayFormatString	01	attr	This property specifies, how the physical value shall be displayed e.g. in documents or measurement and calibration tools.			
				Tags: xml.sequenceOffset=20			
unit	Unit	01	ref	This is the physical unit of the Physical values for which the CompuMethod applies.			
				Tags: xml.sequenceOffset=30			

Table A.20: CompuMethod

Class	CompuRationalCoeffs				
Package	M2::MSR::AsamHdo::Com	nputationN	/lethod		
Note	This meta-class represents the ability to express a rational function by specifying the coefficients of nominator and denominator.				
Base	ARObject				
Aggregated by	CompuScaleRationalFormula.compuRationalCoeffs				
Attribute	Туре	Mult.	Kind	Note	
compu	CompuNominator	01	aggr	This is the denominator of the expression.	
Denominator	Denominator			Tags: xml.sequenceOffset=30	
compu	' ' ' ' ' ' ' ' ' ' ' ' ' ' ' ' ' ' ' '		aggr	This is the numerator of the rational expression.	
Numerator	Denominator			Tags: xml.sequenceOffset=20	

Table A.21: CompuRationalCoeffs



Class	CompuScale					
Package	M2::MSR::AsamHdo::ComputationMethod					
Note	This meta-class represents the ability to specify one segment of a segmented computation method.					
Base	ARObject					
Aggregated by	CompuScales.compuScal	е				
Attribute	Туре	Mult.	Kind	Note		
a2lDisplayText	String	01	attr	The value of this attribute shall be taken for generating one display text (specifically the OutVal) within the equivalent of the enclosing CompuMethod in A2L.		
compulnverse Value	CompuConst	01	aggr	This is the inverse value of the constraint. This supports the case that the scale is not reversible per se.		
				Tags: xml.sequenceOffset=60		
compuScale Contents	CompuScaleContents	01	aggr	This represents the computation details of the scale.  Tags: xml.roleElement=false xml.roleWrapperElement=false xml.sequenceOffset=70 xml.typeElement=false xml.typeWrapperElement=false		
desc	MultiLanguageOverview Paragraph	01	aggr	<desc> represents a general but brief description of the object in question. Tens. yml assumes Officet, 20</desc>		
lowerLimit	Limit	01	l	Tags: xml.sequenceOffset=30		
IOWEILIIII	Litting	01	attr	This specifies the lower limit of the scale.  Stereotypes: atpVariation Tags: vh.latestBindingTime=preCompileTime xml.sequenceOffset=40		
mask	PositiveUnlimitedInteger	01	attr	In difference to all the other computational methods every COMPU-SCALE will be applied including the bit MASK. Therefore it is allowed for this type of COMPU-METHOD, that COMPU-SCALES overlap.  To calculate the string reverse to a value, the string has to be split and the according value for each substring has to		
				be summed up. The sum is finally transmitted.  The processing has to be done in order of the COMPU-SCALE elements.		
				Tags: xml.sequenceOffset=35		
shortLabel	Identifier	01	attr	This element specifies a short name for the particular scale. The name can for example be used to derive a programming language identifier.		
				Tags: xml.sequenceOffset=20		
symbol	Cldentifier	01	attr	The symbol, if provided, is used by code generators to get a C identifier for the CompuScale. The name will be used as is for the code generation, therefore it needs to be unique within the generation context.		
				Tags: xml.sequenceOffset=25		
upperLimit	Limit	01	attr	This specifies the upper limit of a of the scale.  Stereotypes: atpVariation Tags: vh.latestBindingTime=preCompileTime xml.sequenceOffset=50		

Table A.22: CompuScale



Class	DataConstr	DataConstr			
Package	M2::MSR::AsamHdo::C	onstraints::C	GlobalCon	straints	
Note	This meta-class represe	ents the abili	ty to spec	ify constraints on data.	
	Tags: atp.recommende	dPackage=[	DataCons	trs	
Base	ARElement, ARObject, AtpBlueprint, AtpBlueprintable, CollectableElement, Identifiable, Multilanguage Referrable, PackageableElement, Referrable				
Aggregated by	ARPackage.element				
Attribute	Туре	Mult.	Kind	Note	
dataConstrRule	DataConstrRule	*	aggr	This is one particular rule within the data constraints.	
				Tags: xml.roleElement=true xml.roleWrapperElement=true xml.sequenceOffset=30 xml.typeElement=false xml.typeWrapperElement=false	

**Table A.23: DataConstr** 

Class	DataConstrRule	DataConstrRule				
Package	M2::MSR::AsamHdo::Coi	nstraints::C	GlobalCon	straints		
Note	This meta-class represen	its the abili	ty to expr	ess one specific data constraint rule.		
Base	ARObject					
Aggregated by	DataConstr.dataConstrRi	ule				
Attribute	Туре	Mult.	Kind	Note		
constrLevel	Integer	01	attr	This attribute describes the category of a constraint. One of its functions is in the area of constraint violation, where it can be used from a certain level, to produce error messages.		
				The lower the level, the more stringent the check.		
				Used to distinguish hard or soft limits.		
				Tags: xml.sequenceOffset=20		
internalConstrs	InternalConstrs	01	aggr	Describes the limitations applicable on the internal domain (as opposed to the physical domain).		
				Tags: xml.sequenceOffset=40		
physConstrs	PhysConstrs	01	aggr	Describes the limitations applicable on the physical domain (as opposed to the internal domain).		
				Tags: xml.sequenceOffset=30		

**Table A.24: DataConstrRule** 

Class	DataPrototype (abstract)	DataPrototype (abstract)			
Package	M2::AUTOSARTemplates::	M2::AUTOSARTemplates::SWComponentTemplate::Datatype::DataPrototypes			
Note	Base class for prototypical	Base class for prototypical roles of any data type.			
Base	ARObject, AtpFeature, AtpPrototype, Identifiable, MultilanguageReferrable, Referrable				
Subclasses	ApplicationCompositeElem	ApplicationCompositeElementDataPrototype, AutosarDataPrototype			
Aggregated by	AtpClassifier.atpFeature				
Attribute	Туре	Mult.	Kind	Note	





Class	DataPrototype (abstract)			
swDataDef Props	SwDataDefProps	01	aggr	This property allows to specify data definition properties which apply on data prototype level.
				Stereotypes: atpSplitable Tags: atp.Splitkey=swDataDefProps

# Table A.25: DataPrototype

Class	DataTypeMap					
Package	M2::AUTOSARTemplates:	:SWComp	onentTer	mplate::Datatype::Datatypes		
Note	This class represents the relationship between ApplicationDataType and its implementing Abstract ImplementationDataType.					
Base	ARObject	ARObject				
Aggregated by	DataTypeMappingSet.data	DataTypeMappingSet.dataTypeMap				
Attribute	Туре	Mult.	Kind	Note		
applicationData Type	ApplicationDataType	01	ref	This is the corresponding ApplicationDataType		
implementation DataType	AbstractImplementation DataType	01	ref	This is the corresponding AbstractImplementationData Type.		

### Table A.26: DataTypeMap

Class	DataTypeMappingSet			
Package	M2::AUTOSARTemplates:	:SWComp	onentTer	nplate::Datatype::Datatypes
Note				een ApplicationDataTypes and ImplementationDataTypes. ImplementationDataTypes and ModeDeclarationGroups.
	Tags: atp.recommendedP	ackage=[	DataTypeN	MappingSets
Base	ARElement, ARObject, A Referrable, PackageableE			eprintable, CollectableElement, Identifiable, Multilanguage
Aggregated by	ARPackage.element			
Attribute	Туре	Mult.	Kind	Note
dataTypeMap	DataTypeMap	*	aggr	This is one particular association between an Application DataType and its AbstractImplementationDataType.
modeRequest TypeMap	ModeRequestTypeMap	*	aggr	This is one particular association between an Mode DeclarationGroup and its AbstractImplementationData Type.

# Table A.27: DataTypeMappingSet

Class	DiagnosticAccessPermission
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm
Note	This represents the specification of whether a given service can be accessed according to the existence of meta-classes referenced by a particular DiagnosticAccessPermission.
	In other words, this meta-class acts as a mapping element between several (otherwise unrelated) pieces of information that are put into context for the purpose of checking for access rights.
	Tags: atp.recommendedPackage=DiagnosticAccessPermissions
Base	ARElement, ARObject, CollectableElement, DiagnosticCommonElement, Identifiable, Multilanguage Referrable, PackageableElement, Referrable
Aggregated by	ARPackage.element





Class	DiagnosticAccessPermission						
Attribute	Туре	Mult.	Kind	Note			
authentication Enabled	DiagnosticAuthRole Proxy	01	aggr	The existence of this aggregation indicates that an authentication is foreseen. The details are clarified by the aggregated class.			
				Stereotypes: atpSplitable Tags: atp.Splitkey=authenticationEnabled			
diagnostic	DiagnosticSession	*	ref	This represents the associated DiagnosticSessions			
Session				Stereotypes: atpSplitable Tags: atp.Splitkey=diagnosticSession			
environmental Condition	Diagnostic EnvironmentalCondition	01	ref	This represents the environmental conditions associated with the access permission.			
				Stereotypes: atpSplitable Tags: atp.Splitkey=environmentalCondition			
securityLevel	DiagnosticSecurityLevel	*	ref	This represents the associated DiagnosticSecurityLevels			
				Stereotypes: atpSplitable Tags: atp.Splitkey=securityLevel			

Table A.28: DiagnosticAccessPermission

Class	Eculnstance					
Package	M2::AUTOSARTemplates	M2::AUTOSARTemplates::SystemTemplate::Fibex::FibexCore::CoreTopology				
Note		ECUInstances are used to define the ECUs used in the topology. The type of the ECU is defined by a reference to an ECU specified with the ECU resource description.				
	Tags: atp.recommended	Package=E	EcuInstan	ces		
Base	ARObject, CollectableEle Element, Referrable	ement, Fib	exElemer	nt, Identifiable, MultilanguageReferrable, Packageable		
Aggregated by	ARPackage.element					
Attribute	Туре	Mult.	Kind	Note		
associatedCom IPduGroup	ISignallPduGroup	*	ref	With this reference it is possible to identify which ISignal IPduGroups are applicable for which Communication Connector/ ECU.		
				Only top level ISignallPduGroups shall be referenced by an EcuInstance. If an ISignallPduGroup contains other ISignallPduGroups than these contained ISignallPduGroups shall not be referenced by the EcuInstance. Contained ISignallPduGroups are associated to an Ecu Instance via the top level ISignallPduGroup.		
associated Consumed Provided	ConsumedProvided ServiceInstanceGroup	*	ref	With this reference it is possible to identify which ConsumedProvidedServiceInstanceGroups are applicable for which ECUInstance.		
ServiceInstance Group				Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=associatedConsumedProvidedService InstanceGroup.consumedProvidedServiceInstanceGroup, associatedConsumedProvidedServiceInstance Group.variationPoint.shortLabel vh.latestBindingTime=postBuild		
associatedPdur IPduGroup	PdurlPduGroup	*	ref	With this reference it is possible to identify which PduR IPdu Groups are applicable for which Communication Connector/ ECU.		





Class	Eculnstance			
channel Synchronous Wakeup	Boolean	01	attr	If this parameter is available and set to true, then all available channels will be woken up as soon as at least one channel wakeup occurs. If PNCs are configured, then all PNCs will be requested upon a channel wakeup.
clientIdRange	ClientIdRange	01	aggr	Restriction of the Client Identifier for this Ecu to an allowed range of numerical values. The Client Identifier of the transaction handle is generated by the client RTE for inter-Ecu Client/Server communication.
com Configuration GwTimeBase	TimeValue	01	attr	The period between successive calls to Com_Main FunctionRouteSignals of the AUTOSAR COM module in seconds.
com ConfigurationRx TimeBase	TimeValue	01	attr	The period between successive calls to Com_Main FunctionRx of the AUTOSAR COM module in seconds.
com ConfigurationTx TimeBase	TimeValue	01	attr	The period between successive calls to Com_Main FunctionTx of the AUTOSAR COM module in seconds.
comEnable MDTForCyclic Transmission	Boolean	01	attr	Enables for the Com module of this Eculnstance the minimum delay time monitoring for cyclic and repeated transmissions (TransmissionModeTiming has cyclic Timing assigned or eventControlledTiming with numberOf Repetitions > 0).
commController	Communication Controller	*	aggr	CommunicationControllers of the ECU.
	Controller			Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=commController.shortName, comm Controller.variationPoint.shortLabel vh.latestBindingTime=postBuild
connector	Communication	*	aggr	All channels controlled by a single controller.
	Connector			Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=connector.shortName, connector.variation Point.shortLabel vh.latestBindingTime=postBuild
dltConfig	DltConfig	01	aggr	Describes the Dlt configuration on this Eculnstance.
dolpConfig	DolpConfig	01	aggr	Dolp configuration on this Eculnstance.
				Tags: atp.Status=draft
ecuTaskProxy	OsTaskProxy	*	ref	Reference to OsTaskProxies assigned to the Ecu Instance.
				Stereotypes: atpSplitable Tags: atp.Splitkey=ecuTaskProxy
ethSwitchPort Group Derivation	Boolean	01	attr	Defines whether the derivation of SwitchPortGroups based on VLAN and/or CouplingPort.pncMapping shall be performed for this Eculnstance. If not defined the derivation shall not be done.
firewallRule	StateDependentFirewall	*	ref	Firewall rules defined in the context of an EcuInstance.  Tags: atp.Status=candidate
partition	EcuPartition	*	aggr	Optional definition of Partitions within an Ecu.
pncNmRequest	Boolean	01	attr	Defines if this Eculnstance shall request Nm on all its PhysicalChannels which have Nm variant set to FULL each time a PNC is requested.
pncPrepare SleepTimer	TimeValue	01	attr	Time in seconds the PNC state machine shall wait in PNC_PREPARE_SLEEP.





Class	Eculnstance			
pnc Synchronous Wakeup	Boolean	01	attr	If this parameter is available and set to true then all available PNCs will be woken up as soon as a channel wakeup occurs. This is ensured by adding all PNCs to all channel wakeup sources during upstream mapping.
pnResetTime	TimeValue	01	attr	Specifies the runtime of the reset timer in seconds. This reset time is valid for the reset of PN requests in the EIRA and in the ERA.
sleepMode Supported	Boolean	01	attr	Specifies whether the ECU instance may be put to a "low power mode"
				true: sleep mode is supported
				false: sleep mode is not supported
				Note: This flag may only be set to "true" if the feature is supported by both hardware and basic software.
tcplplcmpProps	EthTcplplcmpProps	01	ref	Eculnstance specific ICMP (Internet Control Message Protocol) attributes
tcplpProps	EthTcplpProps	01	ref	Eculnstance specific Tcplp Stack attributes.
v2xSupported	V2xSupportEnum	01	attr	This attribute is used to control the existence of the V2X stack on the given EcuInstance.
wakeUpOver BusSupported	Boolean	01	attr	Driver support for wakeup over Bus.

Table A.29: Eculnstance

Class	EcucModuleConfigurationValues				
Package	M2::AUTOSARTemplates	s::ECUCDe	scription	Template Template	
Note	Head of the configuration Infrastructure.	of one Mo	dule. A M	fodule can be a BSW module as well as the RTE and ECU	
	As part of the BSW mode roles:	ule descrip	tion, the E	EcucModuleConfigurationValues element has two different	
	The recommendedConfig	guration co	ntains pai	rameter values recommended by the BSW module vendor.	
	The preconfiguredConfig implementation and cann			ues for those parameters which are fixed by the	
	1	0		are used when the base EcucModuleConfigurationValues eated to fill parameters with initial values.	
	Tags: atp.recommended	Package=E	EcucModu	uleConfigurationValuess	
Base	ARElement, ARObject, C Element, Referrable	Collectable	Element,	Identifiable, MultilanguageReferrable, Packageable	
Aggregated by	ARPackage.element				
Attribute	Туре	Mult.	Kind	Note	
container	EcucContainerValue	*	aggr	Aggregates all containers that belong to this module configuration.	
	atpVariation: [RS_ECUC_00078]				
				Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=container.shortName, container.variation Point.shortLabel vh.latestBindingTime=postBuild xml.sequenceOffset=10	





Class	EcucModuleConfigurat	ionValues		
definition	EcucModuleDef	01	ref	Reference to the definition of this EcucModule ConfigurationValues element. Typically, this is a vendor specific module configuration.
				Tags: xml.sequenceOffset=-10
ecucDefEdition	RevisionLabelString	01	attr	This is the version info of the ModuleDef ECUC Parameter definition to which this values conform to / are based on.
				For the Definition of ModuleDef ECUC Parameters the AdminData shall be used to express the semantic changes. The compatibility rules between the definition and value revision labels is up to the module's vendor.
implementation ConfigVariant	EcucConfiguration VariantEnum	01	attr	Specifies the kind of deliverable this EcucModule ConfigurationValues element provides. If this element is not used in a particular role (e.g. preconfigured Configuration or recommendedConfiguration) then the value shall be one of VariantPreCompile, VariantLink Time, VariantPostBuild.
module Description	BswImplementation	01	ref	Referencing the BSW module description, which this EcucModuleConfigurationValues element is configuring. This is optional because the EcucModuleConfiguration Values element is also used to configure the ECU infrastructure (memory map) or Application SW-Cs. However in case the EcucModuleConfigurationValues are used to configure the module, the reference is mandatory in order to fetch module specific "common" published information.
postBuildVariant Used	Boolean	01	attr	Indicates whether a module implementation has or plans to have (i.e., introduced at link or post-build time) new post-build variation points. TRUE means yes, FALSE means no. If the attribute is not defined, FALSE semantics shall be assumed.

Table A.30: EcucModuleConfigurationValues

Class	EcucValueCollection					
Package	M2::AUTOSARTemplates:	:ECUCDe	scription	Template Template		
Note	This represents the ancho	r point of	the ECU	configuration description.		
	Tags: atp.recommendedP	ackage=E	EcucValue	Collections		
Base	ARElement, ARObject, Co Element, Referrable	ollectable	Element,	Identifiable, MultilanguageReferrable, Packageable		
Aggregated by	ARPackage.element					
Attribute	Туре	Type Mult. Kind Note				
ecucValue	EcucModule ConfigurationValues	*	ref	References to the configuration of individual software modules that are present on this ECU.		
				atpVariation: [RS_ECUC_00079]		
				Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=ecucValue.ecucModuleConfigurationValues, ecucValue.variationPoint.shortLabel vh.latestBindingTime=preCompileTime		
ecuExtract	System	01	ref	Represents the extract of the System Configuration that is relevant for the ECU configured with that ECU Configuration Description.		

Table A.31: EcucValueCollection



Class	FlatInstanceDescriptor					
Package	M2::AUTOSARTemplates::CommonStructure::FlatMap					
Note	Represents exactly one node (e.g. a component instance or data element) of the instance tree of a software system. The purpose of this element is to map the various nested representations of this instance to a flat representation and assign a unique name (shortName) to it.					
	Use cases:					
	Specify unique names	of measur	able data	to be used by MCD tools		
	Specify unique names	of calibrati	on data to	b be used by MCD tool		
	Specify a unique name description	e for an ins	tance of a	component prototype in the ECU extract of the system		
	Note that in addition it is	possible to	assign al	ias names via AliasNameAssignment.		
Base	ARObject, Identifiable, M	lultilanguag	geReferra	ble, Referrable		
Aggregated by	FlatMap.instance					
Attribute	Туре	Mult.	Kind	Note		
ecuExtract Reference	AtpFeature	01	iref	Refers to the instance in the ECU extract. This is valid only, if the FlatMap is used in the context of an ECU extract.		
				The reference shall be such that it uniquely defines the object instance. For example, if a data prototype is declared as a role within an SwcInternalBehavior, it is not enough to state the SwcInternalBehavior as context and the aggregated data prototype as target. In addition, the reference shall also include the complete path identifying instance of the component prototype and the Atomic SoftwareComponentType, which is refered by the particular SwcInternalBehavior.		
				Tags: xml.sequenceOffset=40 InstanceRef implemented by: AnyInstanceRef		
role	Identifier	01	attr	The role denotes the particular role of the downstream memory location described by this FlatInstanceDescriptor.		
				It applies to use case where one upstream object results in multiple downstream objects, e.g. ModeDeclaration GroupPrototypes which are measurable. In this case the RTE will provide locations for current mode, previous mode and next mode.		
rtePluginProps	RtePluginProps	01	aggr	The properties of a communication graph with respect to the utilization of RTE Implementation Plug-in.		
				Stereotypes: atpSplitable Tags: atp.Splitkey=rtePluginProps		
swDataDef	SwDataDefProps	01	aggr	The properties of this FlatInstanceDescriptor.		
Props				Stereotypes: atpSplitable Tags: atp.Splitkey=swDataDefProps		





Class	FlatInstanceDescriptor			
upstream Reference	AtpFeature	01	iref	Refers to the instance in the context of an "upstream" description, which could be: the SYSTEM_ DESCRIPTION, or SYSTEM_EXTRACT, or ECU_ SYSTEM_DESCRIPTION, or SW_CLUSTER_SYSTEM_ DESCRIPTION, or the basic software module description (in this case only the target reference of the AnyInstance Ref is needed), or (if a flat map is used in preliminary context) a description of an atomic component or composition.
				This reference is optional in case the flat map is used in ECU context. The reference shall be such that it uniquely defines the object instance in the given context. For example, if a data prototype is declared as a role within an SwcInternal Behavior, it is not enough to state the Swc Internal Behavior as context and the aggregated data prototype as target. In addition, the reference shall also include the complete path identifying the instance of the component prototype that contains the particular instance of Swc InternalBehavior.
				Tags: xml.sequenceOffset=20 InstanceRef implemented by: AnyInstanceRef

Table A.32: FlatInstanceDescriptor

Class	FlatMap				
Package	M2::AUTOSARTemplates::CommonStructure::FlatMap				
Note	name conflicts. The scope	Contains a flat list of references to software objects. This list is used to identify instances and to resolve name conflicts. The scope is given by the RootSwCompositionPrototype for which it is used, i.e. it can be applied to a system, system extract or ECU-extract.			
				a preliminary context, e.g. in the scope of a software In this case it is not referred by a RootSwComposition	
	Tags: atp.recommendedF	ackage=F	latMaps		
Base	ARElement, ARObject, AtpBlueprint, AtpBlueprintable, CollectableElement, Identifiable, Multilanguage Referrable, PackageableElement, Referrable				
Aggregated by	ARPackage.element				
Attribute	Туре	Mult.	Kind	Note	
instance	FlatInstanceDescriptor	*	aggr	A descriptor instance aggregated in the flat map.	
	The variation point accounts for the fact, that the system in scope can be subject to variability, and thus the existence of some instances is variable.				
	The aggregation has been made splitable because the content might be contributed by different stakeholders at different times in the workflow. Plus, the overall size might be so big that eventually it becomes more manageable if it is distributed over several files.				
				Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=instance.shortName, instance.variation Point.shortLabel vh.latestBindingTime=postBuild	

Table A.33: FlatMap



Class	Identifiable (abstract)								
Package	M2::AUTOSARTemplates::GenericStructure::GeneralTemplateClasses::Identifiable								
Note	Instances of this class can be referred to by their identifier (within the namespace borders). In addition to this, Identifiables are objects which contribute significantly to the overall structure of an AUTOSAR description. In particular, Identifiables might contain Identifiables.								
Base	ARObject, MultilanguageReferrable, Referrable								
Subclasses	ARPackage, AbstractSocurityEventFilter, AbstractSecurityIdsmInstanceFilter, AbstractServiceInstance, AppCsTask ProxyToEcuTaskFroxyMapping, ApplicationEndpoint, ApplicationError, ApplicationPartitionToEcuPartition Mapping, AppliedStandard, AsynchronousServerCallResultPoint, AtpBlueprint, AtpBlueprintable, App Classifier, Abfreature, AutosarOperationArgumentInstance, AutosarVariableInstance, BinaryManifest AddressableObject, BinaryManifestItemDefinition, BinaryManifestResource, BinaryManifestResource Definition, BlockState, BswinternalTitiggeringPoint, BswModuleDependency, BuildActionEntity, Build ActionEnvironment, CanTpAddress, CanTpChannel, CanTpNode, Chapter, ClassContentConditional, ClientIdDefinition, ClientServerOperation, Code, CollectableElement, ComManagementMapping, CommonscorPort, CommunicationController, Compiler, ConsistencyNeeds, ConsumedEventGroup, CouplingElementAbstractDetails, CouplingPort, CouplingPortAbstractShaper, CouplingPortStructuralElement, CoptwareClusterResource, CopSoftwareClusterResource ToApplication PartitionMapping, CpSoftwareClusterToApplicationPartitionMapping, CpSoftwareClusterToEcuInstance Mapping, CpSoftwareClusterToResourceMapping, CryptoServiceMapping, DataPrototypeGroup, Data Transformation, DdsCpDomain, DdsCpPartition, DdsCpCosProfile, DdsCpTopic, DependencyOnArtifact, DiagEventDebounceAlgorithm, DiagnosticDetounceAlgorithmProps, DiagnosticConnected Indicator, DiagnosticParameterElement, DiagnosticRoutinesSubfunction, DiApplication, DiltArgument, Dilt LogChannel, DitMessage, DolpInterface, DolpLogicAddress, DolpPolingActivation, ECURapping, EOC ExecutableEntityRetAbstract, EcuPartition, EcucContainerValue, EcucDefinitionElement, Ecuc DestinationUriDef, EcucEnumerationLiteralDef, EcucCuery, EcucValidationCondition, EndToEnd Protection, EthernetWakeupSleepOnDatalineConfig, EventHandfer, ExclusiveArea, ExecutableEntity, ExecutionTime, FMAttributeDef, FMFeatureMapAssertion, FMFeatureMapCondition, EndTeatureMap Element, FMFeatureMapCondition, EndTeatureMapAssertion, Medebacke								
Attribute	TracedFailure, TransformationProps, TransformationTechnology, Trigger, VariableAccess, VariationPoint Proxy, ViewMap, VlanConfig, WaitPoint  Type Mult. Kind Note								





Identifiable (abstract)			
AdminData	01	aggr	This represents the administrative data for the identifiable object.  Stereotypes: atpSplitable Tags: atp.Splitkey=adminData xml.sequenceOffset=-40
Annotation	*	aggr	Possibility to provide additional notes while defining a model element (e.g. the ECU Configuration Parameter Values). These are not intended as documentation but are mere design notes.
CategoryString	01	attr	Tags: xml.sequenceOffset=-25  The category is a keyword that specializes the semantics of the Identifiable. It affects the expected existence of attributes and the applicability of constraints.
MultiLanguageOverview Paragraph	01	aggr	Tags: xml.sequenceOffset=-50  This represents a general but brief (one paragraph) description what the object in question is about. It is only one paragraph! Desc is intended to be collected into overview tables. This property helps a human reader to identify the object in question.
			More elaborate documentation, (in particular how the object is built or used) should go to "introduction".  Tags: xml.sequenceOffset=-60
DocumentationBlock	01	aggr	This represents more information about how the object in question is built or is used. Therefore it is a DocumentationBlock.
			Tags: xml.sequenceOffset=-30
String	01	attr	The purpose of this attribute is to provide a globally unique identifier for an instance of a meta-class. The values of this attribute should be globally unique strings prefixed by the type of identifier. For example, to include a DCE UUID as defined by The Open Group, the UUID would be preceded by "DCE:". The values of this attribute may be used to support merging of different AUTOSAR models. The form of the UUID (Universally Unique Identifier) is taken from a standard defined by the Open Group (was Open Software Foundation). This standard is widely used, including by Microsoft for COM (GUIDs) and by many companies for DCE, which is based on CORBA. The method for generating these 128-bit IDs is published in the standard and the effectiveness and uniqueness of the IDs is not in practice disputed. If the id namespace is omitted, DCE is assumed. An example is "DCE:2fac1234-31f8-11b4-a222-08002b34c003". The uuid attribute has no semantic meaning for an AUTOSAR model and there is no requirement for AUTOSAR tools to manage the timestamp.  Tags: xml.attribute=true
	Annotation  CategoryString  MultiLanguageOverview Paragraph  DocumentationBlock	Annotation *  CategoryString 01  MultiLanguageOverview Paragraph 01  DocumentationBlock 01	AdminData 01 aggr  Annotation * aggr  CategoryString 01 attr  MultiLanguageOverview Paragraph 01 aggr

Table A.34: Identifiable



Class	ImplementationDataType				
Package	M2::AUTOSARTemplates::CommonStructure::ImplementationDataTypes				
Note	Describes a reusable data type on the implementation level. This will typically correspond to a typedef in C-code.				
	Tags: atp.recommendedPackage=ImplementationDataTypes				
Base	ARElement, ARObject, AbstractImplementationDataType, AtpBlueprint, AtpBlueprintable, AtpClassifier, AtpType, AutosarDataType, CollectableElement, Identifiable, MultilanguageReferrable, Packageable Element, Referrable				
Aggregated by	ARPackage.element				
Attribute	Туре	Mult.	Kind	Note	
dynamicArray SizeProfile	String	01	attr	Specifies the profile which the array will follow in case this data type is a variable size array.	
isStructWith Optional	Boolean	01	attr	This attribute is only valid if the attribute category is set to STRUCTURE.	
Element				If set to true, this attribute indicates that the ImplementationDataType has been created with the intention to define at least one element of the structure as optional.	
subElement (ordered)	ImplementationData TypeElement	*	aggr	Specifies an element of an array, struct, or union data type.	
, ,				The aggregation of ImplementionDataTypeElement is subject to variability with the purpose to support the conditional existence of elements inside a Implementation DataType representing a structure.	
				Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=subElement.shortName, sub Element.variationPoint.shortLabel vh.latestBindingTime=preCompileTime	
symbolProps	SymbolProps	01	aggr	This represents the SymbolProps for the Implementation DataType.	
				Stereotypes: atpSplitable Tags: atp.Splitkey=symbolProps.shortName	
typeEmitter	NameToken	01	attr	This attribute is used to control which part of the AUTOSAR toolchain is supposed to trigger data type definitions.	

Table A.35: ImplementationDataType

Class	InstantiationDataDefProps
Package	M2::AUTOSARTemplates::SWComponentTemplate::SwcInternalBehavior::InstantiationDataDefProps
Note	This is a general class allowing to apply additional SwDataDefProps to particular instantiations of a Data Prototype.
	Typically the accessibility and further information like alias names for a particular data is modeled on the level of DataPrototypes (especially VariableDataPrototypes, ParameterDataPrototypes). But due to the recursive structure of the meta-model concerning data types (a composite (data) type consists out of data prototypes) a part of the MCD information is described in the data type (in case of Application CompositeDataType).
	This is a strong restriction in the reuse of data typed because the data type should be re-used for different VariableDataPrototypes and ParameterDataPrototypes to guarantee type compatibility on C-implementation level (e.g. data of a Port is stored in PIM or a ParameterDataPrototype used as ROM Block and shall be typed by the same data type as NVRAM Block).
	This class overcomes such a restriction if applied properly.
Base	ARObject





Class	InstantiationDataDefProps			
Aggregated by	NvBlockDescriptor.instantiationDataDefProps, ParameterSwComponentType.instantiationDataDefProps, SwcInternalBehavior.instantiationDataDefProps			
Attribute	Туре	Mult.	Kind	Note
parameter Instance	AutosarParameterRef	01	aggr	This reference identifies the particular DataPrototype (defined in the context of a composite ParameterData Prototype) on which the swDataDefProps shall be applied.
swDataDef Props	SwDataDefProps	01	aggr	These are the particular data definition properties which shall be applied
				Stereotypes: atpSplitable Tags: atp.Splitkey=swDataDefProps
variableInstance	AutosarVariableRef	01	aggr	This reference identifies the particular DataPrototype (defined in the context of a composite VariableData Prototype) on which the swDataDefProps shall be applied.

Table A.36: InstantiationDataDefProps

Class	InternalBehavior (abstract)					
Package	M2::AUTOSARTemplates::CommonStructure::InternalBehavior					
Note	Common base class (abstract) for the internal behavior of both software components and basic software modules/clusters.					
Base	ARObject, AtpClassifier, AtpFeature, AtpStructureElement, Identifiable, MultilanguageReferrable, Referrable					
Subclasses	BswInternalBehavior, Swo	InternalB	ehavior			
Aggregated by	AtpClassifier.atpFeature					
Attribute	Туре	Mult.	Kind	Note		
constant Memory	ParameterData Prototype	*	aggr	Describes a read only memory object containing characteristic value(s) implemented by this Internal Behavior.		
				The shortName of ParameterDataPrototype has to be equal to the "C' identifier of the described constant.		
				The characteristic value(s) might be shared between Sw ComponentPrototypes of the same SwComponentType.		
				The aggregation of constantMemory is subject to variability with the purpose to support variability in the software component or module implementations. Typically different algorithms in the implementation are requiring different number of memory objects.		
				Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=constantMemory.shortName, constant Memory.variationPoint.shortLabel vh.latestBindingTime=preCompileTime		
constantValue Mapping	ConstantSpecification MappingSet	*	ref	Reference to the ConstantSpecificationMapping to be applied for the particular InternalBehavior		
				Stereotypes: atpSplitable Tags: atp.Splitkey=constantValueMapping		
dataType Mapping	DataTypeMappingSet	*	ref	Reference to the DataTypeMapping to be applied for the particular InternalBehavior		
				Stereotypes: atpSplitable Tags: atp.Splitkey=dataTypeMapping		





Class	InternalBehavior (abstra	ct)		
exclusiveArea	ExclusiveArea	*	aggr	This specifies an ExclusiveArea for this InternalBehavior. The exclusiveArea is local to the component resp. module. The aggregation of ExclusiveAreas is subject to variability. Note: the number of ExclusiveAreas might vary due to the conditional existence of RunnableEntities or BswModuleEntities.
				Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=exclusiveArea.shortName, exclusive Area.variationPoint.shortLabel vh.latestBindingTime=preCompileTime
exclusiveArea NestingOrder	ExclusiveAreaNesting Order	*	aggr	This represents the set of ExclusiveAreaNestingOrder owned by the InternalBehavior.
				Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=exclusiveAreaNestingOrder.shortName, exclusiveAreaNestingOrder.variationPoint.shortLabel vh.latestBindingTime=preCompileTime
staticMemory	VariableDataPrototype	*	aggr	Describes a read and writeable static memory object representing measurerment variables implemented by this software component. The term "static" is used in the meaning of "non-temporary" and does not necessarily specify a linker encapsulation. This kind of memory is only supported if supportsMultipleInstantiation is FALSE.
				The shortName of the VariableDataPrototype has to be equal with the "C' identifier of the described variable.
				The aggregation of staticMemory is subject to variability with the purpose to support variability in the software component's implementations.
				Typically different algorithms in the implementation are requiring different number of memory objects.
				Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=staticMemory.shortName, static Memory.variationPoint.shortLabel vh.latestBindingTime=preCompileTime

Table A.37: InternalBehavior



Class	McDataInstance						
Package	M2::AUTOSARTemplates::CommonStructure::MeasurementCalibrationSupport						
Note	Describes the specific properties of one data instance in order to support measurement and/or calibration of this data instance.						
	The most important attributes are:						
	Its shortName is copied from the ECU Flat map (if applicable) and will be used as identifier and for display by the MC system.						
	The category is copied ImplementationDataTyp			ding data type (ApplicationDataType if defined, otherwise lble.			
				ming language. It will be used to find out the actual memory e help of linker generated information.			
	It is assumed that in the M1 model this part and all the aggregated and referred elements (with the exception of the Flat Map and the references from ImplementationElementInParameterInstanceRef an McAccessDetails) are completely generated from "upstream" information. This means, that even if an element like e.g. a CompuMethod is only used via reference here, it will be copied into the M1 artifact which holds the complete McSupportData for a given Implementation.						
Base	ARObject, Identifiable, Mu	ultilanguag	geReferra	ble, Referrable			
Aggregated by	McDataInstance.subElem Instance	ent, McSu	pportData	a.mcParameterInstance, McSupportData.mcVariable			
Attribute	Туре	Mult.	Kind	Note			
arraySize	PositiveInteger	01	attr	The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of number of elements.			
displayIdentifier	Mcdldentifier	01	attr	An optional attribute to be used to set the ASAM ASAP2 DISPLAY_IDENTIFIER attribute.			
flatMapEntry	FlatInstanceDescriptor	01	ref	Reference to the corresponding entry in the ECU Flat Map. This allows to trace back to the original specification of the generated data instance. This link shall be added by the RTE generator mainly for documentation purposes.			
				The reference is optional because			
				The McDataInstance may represent an array or struct in which only the subElements correspond to FlatMap entries.			
				The McDataInstance may represent a task local buffer for rapid prototyping access which is different from the "main instance" used for measurement access.			
instanceIn Memory	ImplementationElement InParameterInstance Ref	01	aggr	Reference to the corresponding data instance in the description of calibration data structures published by the RTE generator. This is used to support emulation methods inside the ECU, it is not required for A2L generation.			
mcDataAccess Details	McDataAccessDetails	01	aggr	Refers to "upstream" information on how the RTE uses this data instance. Use Case: Rapid Prototyping			
mcData Assignment	RoleBasedMcData Assignment	*	aggr	An assignment between McDataInstances. This supports the indication of related McDataElement implementing the of "RP global buffer", "RP global measurement buffer", "RP enabler flag".			
resulting Properties	SwDataDefProps	01	aggr	These are the generated properties resulting from decisions taken by the RTE generator for the actually implemented data instance. Only those properties are relevant here, which are needed for the measurement and calibration system.			
				Stereotypes: atpSplitable Tags: atp.Splitkey=resultingProperties			
resultingRptSw Prototyping Access	RptSwPrototyping Access	01	aggr	Describes the implemented accessibility of data and modes by the rapid prototyping tooling.			





Class	McDataInstance			
role	Identifier	01	attr	An optional attribute to be used for additional information on the role of this data instance, for example in the context of rapid prototyping.
rptImplPolicy	RptImplPolicy	01	aggr	Describes the implemented code preparation for rapid prototyping at data accesses for a hook based bypassing.
subElement (ordered)	McDataInstance	*	aggr	This relation indicates, that the target element is part of a "struct" which is given by the source element. This information will be used by the final generator to set up the correct addressing scheme.
				Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=subElement.shortName, sub Element.variationPoint.shortLabel vh.latestBindingTime=preCompileTime
symbol	SymbolString	01	attr	This String is used to determine the memory address during final generation of the MC configuration data (e.g. "A2L" file) . It shall be the name of the element in the programming language such that it can be identified in linker generated information.
				In case the McDataInstance is part of composite data in the programming language, the symbol String may include parts denoting the element context, unless the context is given by the symbol attribute of an enclosing McDataInstance. This means in particular for the C language that the "." character shall be used as a separator between the name of a "struct" variable the name of one of its elements.
				The symbol can differ from the shortName in case of generated C data declarations.
				It is an optional attribute since it may be missing in case the instance represents an element (e.g. a single array element) which has no name in the linker map.
				Stereotypes: atpSplitable Tags: atp.Splitkey=symbol

**Table A.38: McDataInstance** 

Enumeration	MemoryAllocationKeywordPolicyType			
Package	M2::MSR::DataDictionary::AuxillaryObjects			
Note	Enumeration to specify the name pattern of the Memory Allocation Keyword.			
Aggregated by	SwAddrMethod.memoryAllocationKeywordPolicy			
Literal	Description			
addrMethodShort Name	The MemorySection shortNames of referring MemorySections and therefore the belonging Memory Allocation Keywords in the code are build with the shortName of the SwAddrMethod. This is the default value if the attribute does			
	Tags: atp.EnumerationLiteralIndex=0			
addrMethodShort NameAndAlignment	The MemorySection shortNames of referring MemorySections and therefore the belonging Memory Allocation Keywords in the code are build with the shortName of the SwAddrMethod and a variable alignment postfix.			
	Thereby the alignment postfix needs to be consistent with the alignment attribute of the related MemorySection.			
	Tags: atp.EnumerationLiteralIndex=1			

Table A.39: MemoryAllocationKeywordPolicyType



Enumeration	MemorySectionType				
Package	M2::MSR::DataDictionary::AuxillaryObjects				
Note	Enumeration to specify the essential nature of the data which can be allocated in a common memory class by the means of the AUTOSAR Memory Mapping.				
Aggregated by	SwAddrMethod.sectionType				
Literal	Description				
calibrationVariables	This memory section is reserved for "virtual variables" that are computed by an MCD system during a measurement session but do not exist in the ECU memory.				
	Tags: atp.EnumerationLiteralIndex=2				
calprm	To be used for calibratable constants of ECU-functions.				
	Tags: atp.EnumerationLiteralIndex=3				
code	To be used for mapping code to application block, boot block, external flash etc.				
	Tags: atp.EnumerationLiteralIndex=4				
configData	Constants with attributes that show that they reside in one segment for module configuration.				
	Tags: atp.EnumerationLiteralIndex=5				
const	To be used for global or static constants.				
	Tags: atp.EnumerationLiteralIndex=6				
excludeFromFlash	This memory section is reserved for "virtual parameters" that are taken for computing the values of so-called dependent parameter of an MCD system. Dependent Parameters that are not at the same time "virtual parameters" are allocated in the ECU memory.				
	Virtual parameters, on the other hand, are not allocated in the ECU memory. Virtual parameters exist in the ECU Hex file for the purpose of being considered (for computing the values of dependent parameters) during an offline-calibration session.				
	Tags: atp.EnumerationLiteralIndex=7				
var	To be used for global or static variables. The expected initialization is specified with the attribute sectionInitializationPolicy.				
	Tags: atp.EnumerationLiteralIndex=9				

### Table A.40: MemorySectionType

Class	ModeDeclaration			
Package	M2::AUTOSARTemplates::CommonStructure::ModeDeclaration			
Note	Declaration of one Mode. The name and semantics of a specific mode is not defined in the meta-model.			
Base	ARObject, AtpClassifier, AtpFeature, AtpStructureElement, Identifiable, MultilanguageReferrable, Referrable			
Aggregated by	AtpClassifier.atpFeature, ModeDeclarationGroup.modeDeclaration			
Attribute	Type Mult. Kind Note			
value	PositiveInteger	01	attr	The RTE shall take the value of this attribute for generating the source code representation of this Mode Declaration.

**Table A.41: ModeDeclaration** 

Class	ModeDeclarationGroup
Package	M2::AUTOSARTemplates::CommonStructure::ModeDeclaration
Note	A collection of Mode Declarations. Also, the initial mode is explicitly identified.
	Tags: atp.recommendedPackage=ModeDeclarationGroups





Class	ModeDeclarationGroup					
Base	ARElement, ARObject, AtpBlueprint, AtpBlueprintable, AtpClassifier, AtpType, CollectableElement, Identifiable, MultilanguageReferrable, PackageableElement, Referrable, UploadableDesignElement, UploadablePackageElement					
Aggregated by	ARPackage.element					
Attribute	Туре	Mult.	Kind	Note		
initialMode	ModeDeclaration	01	ref	The initial mode of the ModeDeclarationGroup. This mode is active before any mode switches occurred.		
mode Declaration	ModeDeclaration	*	aggr	The ModeDeclarations collected in this ModeDeclaration Group.		
				Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=modeDeclaration.shortName, mode Declaration.variationPoint.shortLabel vh.latestBindingTime=blueprintDerivationTime		
modeManager ErrorBehavior	ModeErrorBehavior	01	aggr	This represents the ability to define the error behavior expected by the mode manager in case of errors on the mode user side (e.g. terminated mode user).		
modeTransition	ModeTransition	*	aggr	This represents the avaliable ModeTransitions of the ModeDeclarationGroup		
modeUserError Behavior	ModeErrorBehavior	01	aggr	This represents the definition of the error behavior expected by the mode user in case of errors on the mode manager side (e.g. terminated mode manager).		
onTransition Value	PositiveInteger	01	attr	The value of this attribute shall be taken into account by the RTE generator for programmatically representing a value used for the transition between two statuses.		

**Table A.42: ModeDeclarationGroup** 

Class	ModeDeclarationGroupPrototype					
Package	M2::AUTOSARTemplates::CommonStructure::ModeDeclaration					
Note	The ModeDeclarationGroupPrototype specifies a set of Modes (ModeDeclarationGroup) which is provided or required in the given context.					
Base	ARObject, AtpFeature, AtpPrototype, Identifiable, MultilanguageReferrable, Referrable					
Aggregated by	AtpClassifier.atpFeature, BswModuleDescription.providedModeGroup, BswModuleDescription.required ModeGroup, FirewallStateSwitchInterface.firewallStateMachine, FunctionGroupSet.functionGroup, Mode SwitchInterface.modeGroup, Process.processStateMachine, StateManagementStateNotification.state Machine					
Attribute	Туре	Mult.	Kind	Note		
swCalibration Access	SwCalibrationAccess Enum	01	attr	This allows for specifying whether or not the enclosing ModeDeclarationGroupPrototype can be measured at run-time.		
type	ModeDeclarationGroup	01	tref	The "collection of ModeDeclarations" ( = ModeDeclaration Group) supported by a component		
				Stereotypes: isOfType		

Table A.43: ModeDeclarationGroupPrototype

Class	ModeSwitchInterface			
Package	M2::AUTOSARTemplates::SWComponentTemplate::PortInterface			
Note	A mode switch interface declares a ModeDeclarationGroupPrototype to be sent and received.			
	Tags: atp.recommendedPackage=PortInterfaces			





Class	ModeSwitchInterface					
Base	ARElement, ARObject, AtpBlueprint, AtpBlueprintable, AtpClassifier, AtpType, CollectableElement, Identifiable, MultilanguageReferrable, PackageableElement, PortInterface, Referrable					
Aggregated by	ARPackage.element	ARPackage.element				
Attribute	Туре	Type Mult. Kind Note				
modeGroup	ModeDeclarationGroup Prototype	01	aggr	The ModeDeclarationGroupPrototype of this mode interface.		

#### **Table A.44: ModeSwitchInterface**

Class	NumericalValueSpecification				
Package	M2::AUTOSARTemplates:	:Common	Structure	::Constants	
Note	A numerical ValueSpecific the numerical value is a va			ded to be assigned to a Primitive data element. Note that nputed by a formula.	
Base	ARObject, ValueSpecifica	tion			
Aggregated by	ApplicationAssocMapElementValueSpecification.key, ApplicationAssocMapElementValueSpecification. value, ArrayValueSpecification.element, CalibrationParameterValue.applInitValue, CalibrationParameter Value.implInitValue, ConstantSpecification.valueSpec, CryptoServiceKey.developmentValue, Diagnostic EnvDataCondition.compareValue, DiagnosticEnvDataElementCondition.compareValue, FieldSenderCom Spec.initValue, ISignal.initValue, ISignal.timeoutSubstitutionValue, NonqueuedReceiverComSpec.init Value, NonqueuedReceiverComSpec.initValue, NvProvideComSpec.romBlockInitValue, NvProvideComSpec.romBlockInitValue, NvProvideComSpec.initValue, ParameterPataPrototype.initValue, ParameterProvideComSpec.initValue, ParameterRequireCom Spec.initValue, PersistencyDataRequiredComSpec.initValue, PersistencyValuePair.initValue, Port DefinedArgumentValue.value, PortPrototypeBlueprintInitValue.value, RecordValueSpecification.field, SomeipEventDeployment.eventReceptionDefaultValue, StateManagementCompareCondition.compare Value, SwDataDefProps.invalidValue, VariableDataPrototype.initValue				
Attribute	Туре	Mult.	Kind	Note	
value	Numerical	01	attr	This is the value itself.	
				Stereotypes: atpVariation Tags: vh.latestBindingTime=preCompileTime	

#### Table A.45: NumericalValueSpecification

Class	PPortPrototype					
Package	M2::AUTOSARTemplates:	:SWComp	onentTen	nplate::Components		
Note	Component port providing	a certain	port inter	face.		
Base	ARObject, AbstractProvidedPortPrototype, AtpBlueprintable, AtpFeature, AtpPrototype, Identifiable, MultilanguageReferrable, PortPrototype, Referrable					
Aggregated by	AtpClassifier.atpFeature,	SwCompo	onentType	.port		
Attribute	Туре	Mult.	Kind	Note		
provided	PortInterface 01 tref The interface that this port provides.					
Interface				Stereotypes: isOfType		

# **Table A.46: PPortPrototype**

Class	ParameterAccess
Package	M2::AUTOSARTemplates::SWComponentTemplate::SwcInternalBehavior::DataElements
Note	The presence of a ParameterAccess implies that a RunnableEntity needs access to a ParameterData Prototype.





Class	ParameterAccess					
Base	ARObject, AbstractAccessPoint, AtpClassifier, AtpFeature, AtpStructureElement, Identifiable, MultilanguageReferrable, Referrable					
Aggregated by	AtpClassifier.atpFeature, RunnableEntity.parameterAccess					
Attribute	Type Mult. Kind Note					
accessed Parameter	AutosarParameterRef	01	aggr	Reference to the accessed calibration parameter.		
swDataDef Props	SwDataDefProps	01	aggr	This allows denote instance and access specific properties, mainly input values and common axis.		
				Stereotypes: atpSplitable Tags: atp.Splitkey=swDataDefProps		

**Table A.47: ParameterAccess** 

Class	ParameterDataPrototype						
Package	M2::AUTOSARTemplates:	:SWCom	onentTer	nplate::Datatype::DataPrototypes			
Note	A ParameterDataPrototype represents a formalized generic piece of information that is typically immutable by the application software layer, but mutable by measurement and calibration tools. ParameterDataPrototype is used in various contexts and the specific context gives the otherwise generic ParameterDataPrototype a dedicated semantics.						
Base	ARObject, AtpFeature, AtpPrototype, AutosarDataPrototype, DataPrototype, Identifiable, Multilanguage Referrable, Referrable						
Aggregated by	AtpClassifier.atpFeature, BswInternalBehavior.perInstanceParameter, InternalBehavior.constant Memory, NvBlockDescriptor.romBlock, ParameterInterface.parameter, SwcInternalBehavior.perInstance Parameter, SwcInternalBehavior.sharedParameter						
Attribute	Туре	Type Mult. Kind Note					
initValue	ValueSpecification	01	aggr	Specifies initial value(s) of the ParameterDataPrototype			

Table A.48: ParameterDataPrototype

Class	ParameterInterface						
Package	M2::AUTOSARTemplates:	:SWComp	onentTer	nplate::PortInterface			
Note	A parameter interface declares a number of parameter and characteristic values to be exchanged between parameter components and software components.						
	Tags: atp.recommendedP	ackage=F	PortInterfa	ices			
Base	ARElement, ARObject, AtpBlueprint, AtpBlueprintable, AtpClassifier, AtpType, CollectableElement, DataInterface, Identifiable, MultilanguageReferrable, PackageableElement, PortInterface, Referrable						
Aggregated by	ARPackage.element						
Attribute	Туре	Type Mult. Kind Note					
parameter	ParameterData Prototype	*	aggr	The ParameterDataPrototype of this ParameterInterface.			

**Table A.49: ParameterInterface** 

Class	ParameterProvideComSpec			
Package	M2::AUTOSARTemplates::SWComponentTemplate::Communication			
Note	"Communication" specification that applies to parameters on the provided side of a connection.			
Base	ARObject, PPortComSpec			
Aggregated by	$Abstract Provided Port Prototype. \\ provided Com Spec, Port Prototype Blue print. \\ provided Com Spec \\$			





Class	ParameterProvideComSpec				
Attribute	Туре	Mult.	Kind	Note	
initValue	ValueSpecification	01	aggr	The initial value applicable for the corresponding ParameterDataPrototype.	
parameter	ParameterData Prototype	01	ref	The ParameterDataPrototype to which the Parameter ComSpec applies.	

Table A.50: ParameterProvideComSpec

Class	ParameterSwComponentType						
Package	M2::AUTOSARTemplates	::SWComp	onentTer	mplate::Components			
Note		The ParameterSwComponentType defines parameters and characteristic values accessible via provided Ports. The provided values are the same for all connected SwComponentPrototypes					
	Tags: atp.recommended	Package=S	SwCompo	nentTypes			
Base				eprintable, AtpClassifier, AtpType, CollectableElement, geableElement, Referrable, SwComponentType			
Aggregated by	ARPackage.element						
Attribute	Туре	Mult.	Kind	Note			
constant Mapping	ConstantSpecification MappingSet	*	ref	Reference to the ConstantSpecificationMapping to be applied for the particular ParameterSwComponentType			
				Stereotypes: atpSplitable Tags: atp.Splitkey=constantMapping			
dataType Mapping	DataTypeMappingSet	*	ref	Reference to the DataTypeMapping to be applied for the particular ParameterSwComponentType			
				Stereotypes: atpSplitable Tags: atp.Splitkey=dataTypeMapping			
instantiation DataDefProps	InstantiationDataDef Props	*	aggr	The purpose of this is that within the context of a given SwComponentType some data def properties of individua instantiations can be modified.			
				The aggregation of InstantiationDataDefProps is subject to variability with the purpose to support the conditional existence of PortPrototypes			
				Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=instantiationDataDefProps, instantiationData DefProps.variationPoint.shortLabel vh.latestBindingTime=preCompileTime			

Table A.51: ParameterSwComponentType

Class	PhysConstrs				
Package	M2::MSR::AsamHdo::Cons	straints::C	BlobalCon	straints	
Note	This meta-class represents the ability to express physical constraints. Therefore it has (in opposite to InternalConstrs) a reference to a Unit.				
Base	ARObject				
Aggregated by	DataConstrRule.physConstrs				
Attribute	Type Mult. Kind Note				





Class	PhysConstrs			
lowerLimit	Limit	01	attr	This specifies the lower limit of the constraint.
				Stereotypes: atpVariation Tags: vh.latestBindingTime=preCompileTime xml.sequenceOffset=20
maxDiff	Numerical	01	attr	Maximum difference that is permitted between two consecutive values if the constraint is applied to an axis.
				Tags: xml.sequenceOffset=60
maxGradient	Numerical	01	attr	This element specifies the maximum slope that may be used in curves and maps.
				Tags: xml.sequenceOffset=50
monotony	MonotonyEnum	01	attr	This specifies the monotony constraints on the data object. Note that this applies only to curves and maps.
				Tags: xml.sequenceOffset=70
scaleConstr (ordered)	ScaleConstr	*	aggr	This is one particular scale which contributes to the data constraints.
				Tags: atp.Status=obsolete xml.roleElement=true xml.roleWrapperElement=true xml.sequenceOffset=40 xml.typeElement=false xml.typeWrapperElement=false
unit	Unit	01	ref	This is the unit to which the physical constraints relate to. In particular, it is the physical unit of the specified limits.
				Tags: xml.sequenceOffset=80
upperLimit	Limit	01	attr	This specifies the upper limit of the constraint.
				Stereotypes: atpVariation Tags: vh.latestBindingTime=preCompileTime xml.sequenceOffset=30

**Table A.52: PhysConstrs** 

Class	PhysicalDimension	PhysicalDimension						
Package	M2::MSR::AsamHdo::Unit	M2::MSR::AsamHdo::Units						
Note		This class represents a physical dimension. If the physical dimension of two units is identical, then a conversion between them is possible. The conversion between units is related to the definition of the physical dimension.						
	Note that the equivalence and Torque share the san			pes not per se define the convertibility. For example Energy				
	also possible that the valu quantity. In this case the	Please note further the value of an exponent does not necessarily have to be an integer number. It is also possible that the value yields a rational number, e.g. to compute the square root of a given physical quantity. In this case the exponent value would be a rational number where the numerator value is 1 and the denominator value is 2.						
	Tags: atp.recommendedF	Package=F	PhysicalD	mensions				
Base	ARElement, ARObject, CollectableElement, Identifiable, MultilanguageReferrable, Packageable Element, Referrable							
Aggregated by	ARPackage.element							
Attribute	Туре	Mult.	Kind	Note				





Class	PhysicalDimension			
currentExp	Numerical	01	attr	This attribute represents the exponent of the physical dimension "electric current".
				Tags: xml.sequenceOffset=50
lengthExp	Numerical	01	attr	The exponent of the physical dimension "length".
				Tags: xml.sequenceOffset=20
luminous IntensityExp	Numerical	01	attr	The exponent of the physical dimension "luminous intensity".
				Tags: xml.sequenceOffset=80
massExp	Numerical	01	attr	The exponent of the physical dimension "mass".
				Tags: xml.sequenceOffset=30
molarAmount Exp	Numerical	01	attr	The exponent of the physical dimension "quantity of substance".
				Tags: xml.sequenceOffset=70
temperatureExp	Numerical	01	attr	The exponent of the physical dimension "temperature".
				Tags: xml.sequenceOffset=60
timeExp	Numerical	01	attr	The exponent of the physical dimension "time".
				Tags: xml.sequenceOffset=40

Table A.53: PhysicalDimension

Class	PortInterface (abstract)	PortInterface (abstract)					
Package	M2::AUTOSARTemplates::SWComponentTemplate::PortInterface						
Note	Abstract base class for ar	interface	that is eit	her provided or required by a port of a software component.			
Base				eprintable, AtpClassifier, AtpType, CollectableElement, geableElement, Referrable			
Subclasses	ClientServerInterface, Da	taInterface	e, ModeS	witchInterface, TriggerInterface			
Aggregated by	ARPackage.element						
Attribute	Туре	Mult.	Kind	Note			
isService	Boolean	01	attr	This flag is set if the PortInterface is to be used for communication between an			
				ApplicationSwComponentType or			
				ServiceProxySwComponentType or			
				SensorActuatorSwComponentType or			
				ComplexDeviceDriverSwComponentType			
				ServiceSwComponentType			
				EcuAbstractionSwComponentType			
				and a ServiceSwComponentType (namely an AUTOSAR Service) located on the same ECU. Otherwise the flag is not set.			
				Stereotypes: atpVariation Tags: vh.latestBindingTime=blueprintDerivationTime			
serviceKind	ServiceProviderEnum	01	attr	This attribute provides further details about the nature of the applied service.			

**Table A.54: PortInterface** 



Class	PortPrototype (abstract)						
Package	M2::AUTOSARTemplates::SWComponentTemplate::Components						
Note	Base class for the ports o	f an AUTC	SAR soft	ware component.			
	The aggregation of PortPlexistence of ports.	rototypes i	is subject	to variability with the purpose to support the conditional			
Base	ARObject, AtpBlueprintal	ole, AtpFe	ature, Atp	Prototype, Identifiable, MultilanguageReferrable, Referrable			
Subclasses	AbstractProvidedPortProt	otype, Ab	stractReq	uiredPortPrototype			
Aggregated by	AtpClassifier.atpFeature,	SwCompo	onentType	p.port			
Attribute	Туре	Mult.	Kind	Note			
clientServer Annotation	ClientServerAnnotation	*	aggr	Annotation of this PortPrototype with respect to client/ server communication.			
delegatedPort Annotation	DelegatedPort Annotation	01	aggr	Annotations on this delegated port.			
ioHwAbstraction Server Annotation	IoHwAbstractionServer Annotation	*	aggr	Annotations on this IO Hardware Abstraction port.			
modePort Annotation	ModePortAnnotation	*	aggr	Annotations on this mode port.			
nvDataPort Annotation	NvDataPortAnnotation	*	aggr	Annotations on this non voilatile data port.			
parameterPort Annotation	ParameterPort Annotation	*	aggr	Annotations on this parameter port.			
senderReceiver Annotation	SenderReceiver Annotation	*	aggr	Collection of annotations of this ports sender/receiver communication.			
triggerPort Annotation	TriggerPortAnnotation	*	aggr	Annotations on this trigger port.			

**Table A.55: PortPrototype** 

Class	RPortPrototype			
Package	M2::AUTOSARTemplates:	:SWComp	onentTer	nplate::Components
Note	Component port requiring	a certain	port inter	face.
Base	ARObject, AbstractRequi MultilanguageReferrable,			tpBlueprintable, AtpFeature, AtpPrototype, Identifiable, errable
Aggregated by	AtpClassifier.atpFeature,	SwCompo	onentType	p.port
Attribute	Туре	Mult.	Kind	Note
mayBe Unconnected	Boolean	01	attr	If set to true, this attribute indicates that the enclosing RPortPrototype may be left unconnected and that this aspect has explicitly been considered in the software-component's design.
required Interface	PortInterface	01	tref	The interface that this port requires.  Stereotypes: isOfType

**Table A.56: RPortPrototype** 

Class	RTEEvent (abstract)
Package	M2::AUTOSARTemplates::SWComponentTemplate::SwcInternalBehavior::RTEEvents
Note	Abstract base class for all RTE-related events
Base	ARObject, AbstractEvent, AtpClassifier, AtpFeature, AtpStructureElement, Identifiable, Multilanguage Referrable, Referrable





Class	RTEEvent (abstract)	RTEEvent (abstract)			
Subclasses	AsynchronousServerCallReturnsEvent, BackgroundEvent, DataReceiveErrorEvent, DataReceivedEvent, DataSendCompletedEvent, DataWriteCompletedEvent, ExternalTriggerOccurredEvent, InitEvent, InternalTriggerOccurredEvent, ModeSwitchedAckEvent, OperationInvokedEvent, OsTaskExecutionEvent, SwcModeManagerErrorEvent, SwcModeSwitchEvent, TimingEvent, TransformerHardErrorEvent				
Aggregated by	AtpClassifier.atpFeature,	SwcIntern	alBehavio	pr.event	
Attribute	Type Mult. Kind Note				
disabledMode	ModeDeclaration	*	iref	Reference to the Modes that disable the Event.	
				Stereotypes: atpSplitable Tags: atp.Splitkey=disabledMode.contextPort, disabled Mode.contextModeDeclarationGroupPrototype, disabled Mode.targetModeDeclaration InstanceRef implemented by: RModeInAtomicSwc InstanceRef	
startOnEvent	RunnableEntity	01	ref	The referenced RunnableEntity starts when the corresponding RTEEvent is raised.	

Table A.57: RTEEvent

Primitive	Ref						
Package	M2::AUTOSARTemplates::GenericStructure::GeneralTemplateClasses::PrimitiveTypes						
Note	This primitive denotes a	s a name based reference. For detailed syntax see the xsd.pattern.					
	• first slash (relative or absolute reference) [optional]						
	Identifier [required]						
	a sequence of slashes	and Identi	fiers [opti	onal]			
	This primitive is used by	the meta-n	nodel tools	s to create the references.			
	Tags: xml.xsd.customType=REF xml.xsd.pattern=/?[a-zA-Z][a-zA-Z0-9_]{0,127}(/[a-zA-Z][a-zA-Z0-9_]{0,127})* xml.xsd.type=string						
Attribute	Туре	Mult.	Kind	Note			
base	Identifier	01	attr	This attribute reflects the base to be used for this reference.			
				Tags: xml.attribute=true			
blueprintValue	String	01	attr	This represents a description that documents how the value shall be defined when deriving objects from the blueprint.			
				Tags: atp.Status=draft xml.attribute=true			
index	PositiveInteger	01	attr	This attribute supports the use case to point on specific elements in an array. This is in particular required if arrays are used to implement particular data objects.			
				The counting of array indices starts with the value 0, i.e. the index of the first array element is 0.			
				Tags: xml.attribute=true			

Table A.58: Ref



Class	Referrable (abstract)	Referrable (abstract)				
Package	M2::AUTOSARTemplates:	:GenericS	Structure::	GeneralTemplateClasses::Identifiable		
Note	Instances of this class car	be referr	ed to by th	neir identifier (while adhering to namespace borders).		
Base	ARObject					
Subclasses	AtpDefinition, BswDistinguishedPartition, BswModuleCallPoint, BswModuleClientServerEntry, Bsw VariableAccess, CouplingPortTrafficClassAssignment, DiagnosticEnvModeElement, EthernetPriority Regeneration, ExclusiveAreaNestingOrder, HwDescriptionEntity, ImplementationProps, LinSlaveConfig Ident, ModeTransition, MultilanguageReferrable, PncMappingIdent, SingleLanguageReferrable, SoConl Pduldentifier, SocketConnectionBundle, TimeSyncServerConfiguration, TpConnectionIdent					
Attribute	Туре	Mult.	Kind	Note		
shortName	Identifier	1	attr	This specifies an identifying shortName for the object. It needs to be unique within its context and is intended for humans but even more for technical reference.  Stereotypes: atpldentityContributor Tags: xml.enforceMinMultiplicity=true		
				xml.sequenceOffset=-100		
shortName Fragment	ShortNameFragment	*	aggr	This specifies how the Referrable.shortName is composed of several shortNameFragments.		
				Tags: xml.sequenceOffset=-90		

Table A.59: Referrable

Class	RootSwCompositionPro	ototype				
Package	M2::AUTOSARTemplates::SystemTemplate					
Note	The RootSwCompositionPrototype represents the top-level-composition of software components within a given System.					
				may for example be a more or less complete VFB or the software of a flat ECU Extract with only atomic SWCs.		
	used in a complete VFB sinterfaces defining the int such a component contain	Therefore the RootSwComposition will only occasionally contain all atomic software components that are used in a complete VFB System. The OEM is primarily interested in the required functionality and the interfaces defining the integration of the Software Component into the System. The internal structure of such a component contains often substantial intellectual property of a supplier. Therefore a top-level software composition will often contain empty compositions which represent subsystems.				
		s, Variable	DataProto	fully specified by their SwComponentTypes (including Port otypes, SwcInternalBehavior etc.), and their ports are s.		
Base	ARObject, AtpFeature, A	tpPrototyp	e, Identifia	able, MultilanguageReferrable, Referrable		
Aggregated by	AtpClassifier.atpFeature,	System.rc	otSoftwa	reComposition		
Attribute	Туре	Mult.	Kind	Note		
calibration ParameterValue	CalibrationParameter ValueSet	*	ref	Used CalibrationParameterValueSet for instance specific initialization of calibration parameters.		
Set				Stereotypes: atpSplitable Tags: atp.Splitkey=calibrationParameterValueSet		
flatMap	FlatMap	01	ref	The FlatMap used in the scope of this RootSw CompositionPrototype.		
				Stereotypes: atpSplitable Tags: atp.Splitkey=flatMap		
software Composition	CompositionSw ComponentType	01	tref	We assume that there is exactly one top-level composition that includes all Component instances of the system.		
				Stereotypes: isOfType		

Table A.60: RootSwCompositionPrototype



Class	RunnableEntity					
Package	M2::AUTOSARTemplates	::SWCom	oonentTer	mplate::SwcInternalBehavior		
Note	A RunnableEntity represents the smallest code-fragment that is provided by an AtomicSwComponent Type and are executed under control of the RTE. RunnableEntities are for instance set up to respond to data reception or operation invocation on a server.					
Base	ARObject, AtpClassifier, AtpFeature, AtpStructureElement, ExecutableEntity, Identifiable, Multilanguage Referrable, Referrable					
Aggregated by	AtpClassifier.atpFeature,	SwcIntern	nalBehavio	or.runnable		
Attribute	Туре	Mult.	Kind	Note		
argument (ordered)	RunnableEntity Argument	*	aggr	This represents the formal definition of a an argument to a RunnableEntity.		
asynchronous ServerCall	AsynchronousServer CallResultPoint	*	aggr	The server call result point admits a runnable to fetch the result of an asynchronous server call.		
ResultPoint				The aggregation of AsynchronousServerCallResultPoint is subject to variability with the purpose to support the conditional existence of client server PortPrototypes and the variant existence of server call result points in the implementation.		
				Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=asynchronousServerCallResultPoint.short Name, asynchronousServerCallResultPoint.variation Point.shortLabel		
				vh.latestBindingTime=preCompileTime		
canBelnvoked Concurrently	Boolean	01	attr	If the value of this attribute is set to "true" the enclosing RunnableEntity can be invoked concurrently (even for one instance of the corresponding AtomicSwComponent Type). This implies that it is the responsibility of the implementation of the RunnableEntity to take care of this form of concurrency.		
dataRead Access	VariableAccess	*	aggr	RunnableEntity has implicit read access to dataElement of a sender-receiver PortPrototype or nv data of a nv data PortPrototype.		
				The aggregation of dataReadAccess is subject to variability with the purpose to support the conditional existence of sender receiver ports or the variant existence of dataReadAccess in the implementation.		
				Stereotypes: atpSplitable; atpVariation		
				Tags: atp.Splitkey=dataReadAccess.shortName, dataRead Access.variationPoint.shortLabel vh.latestBindingTime=preCompileTime		
dataReceive PointBy Argument	VariableAccess	*	aggr	RunnableEntity has explicit read access to dataElement of a sender-receiver PortPrototype or nv data of a nv data PortPrototype. The result is passed back to the application by means of an argument in the function signature.		
				The aggregation of dataReceivePointByArgument is subject to variability with the purpose to support the conditional existence of sender receiver PortPrototype or the variant existence of data receive points in the implementation.		
				Stereotypes: atpSplitable; atpVariation Tags:		
				atp.Splitkey=dataReceivePointByArgument.shortName, dataReceivePointByArgument.variationPoint.shortLabel vh.latestBindingTime=preCompileTime		





Class	RunnableEntity			
dataReceive PointByValue	VariableAccess	*	aggr	RunnableEntity has explicit read access to dataElement of a sender-receiver PortPrototype or nv data of a nv data PortPrototype.
				The result is passed back to the application by means of the return value. The aggregation of dataReceivePointBy Value is subject to variability with the purpose to support the conditional existence of sender receiver ports or the variant existence of data receive points in the implementation.
				Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=dataReceivePointByValue.shortName, data ReceivePointByValue.variationPoint.shortLabel vh.latestBindingTime=preCompileTime
dataSendPoint	VariableAccess	*	aggr	RunnableEntity has explicit write access to dataElement of a sender-receiver PortPrototype or nv data of a nv data PortPrototype.
				The aggregation of dataSendPoint is subject to variability with the purpose to support the conditional existence of sender receiver PortPrototype or the variant existence of data send points in the implementation.
				Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=dataSendPoint.shortName, dataSend Point.variationPoint.shortLabel vh.latestBindingTime=preCompileTime
dataWrite Access	VariableAccess	*	aggr	RunnableEntity has implicit write access to dataElement of a sender-receiver PortPrototype or nv data of a nv data PortPrototype.
				The aggregation of dataWriteAccess is subject to variability with the purpose to support the conditional existence of sender receiver ports or the variant existence of dataWriteAccess in the implementation.
				Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=dataWriteAccess.shortName, dataWrite Access.variationPoint.shortLabel vh.latestBindingTime=preCompileTime
external TriggeringPoint	ExternalTriggeringPoint	*	aggr	The aggregation of ExternalTriggeringPoint is subject to variability with the purpose to support the conditional existence of trigger ports or the variant existence of external triggering points in the implementation.
				Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=externalTriggeringPoint.ident.shortName, externalTriggeringPoint.variationPoint.shortLabel vh.latestBindingTime=preCompileTime
internal TriggeringPoint	InternalTriggeringPoint	*	aggr	The aggregation of InternalTriggeringPoint is subject to variability with the purpose to support the variant existence of internal triggering points in the implementation.
				Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=internalTriggeringPoint.shortName, internal TriggeringPoint.variationPoint.shortLabel vh.latestBindingTime=preCompileTime





Class	RunnableEntity			
modeAccess Point	ModeAccessPoint	*	aggr	The runnable has a mode access point. The aggregation of ModeAccessPoint is subject to variability with the purpose to support the conditional existence of mode ports or the variant existence of mode access points in the implementation.
				Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=modeAccessPoint.ident.shortName, mode AccessPoint.variationPoint.shortLabel
				vh.latestBindingTime=preCompileTime
modeSwitch Point	ModeSwitchPoint	*	aggr	The runnable has a mode switch point. The aggregation of ModeSwitchPoint is subject to variability with the purpose to support the conditional existence of mode ports or the variant existence of mode switch points in the implementation.
				Stereotypes: atpSplitable; atpVariation
				Tags: atp.Splitkey=modeSwitchPoint.shortName, modeSwitch Point.variationPoint.shortLabel vh.latestBindingTime=preCompileTime
parameter Access	ParameterAccess	*	aggr	The presence of a ParameterAccess implies that a RunnableEntity needs read only access to a Parameter DataPrototype which may either be local or within a Port Prototype.
				The aggregation of ParameterAccess is subject to variability with the purpose to support the conditional existence of parameter ports and component local parameters as well as the variant existence of Parameter Access (points) in the implementation.
				Stereotypes: atpSplitable; atpVariation
				Tags: atp.Splitkey=parameterAccess.shortName, parameter Access.variationPoint.shortLabel vh.latestBindingTime=preCompileTime
readLocal Variable	VariableAccess	*	aggr	The presence of a readLocalVariable implies that a RunnableEntity needs read access to a VariableData Prototype in the role of implicitInterRunnableVariable or explicitInterRunnableVariable.
				The aggregation of readLocalVariable is subject to variability with the purpose to support the conditional existence of implicitInterRunnableVariable and explicit InterRunnableVariable or the variant existence of read LocalVariable (points) in the implementation.
				Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=readLocalVariable.shortName, readLocal Variable.variationPoint.shortLabel vh.latestBindingTime=preCompileTime
serverCallPoint	ServerCallPoint	*	aggr	The RunnableEntity has a ServerCallPoint. The aggregation of ServerCallPoint is subject to variability with the purpose to support the conditional existence of client server PortPrototypes or the variant existence of server call points in the implementation.
				Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=serverCallPoint.shortName, serverCall Point.variationPoint.shortLabel vh.latestBindingTime=preCompileTime





Class	RunnableEntity			
symbol	Cldentifier	01	attr	The symbol describing this RunnableEntity's entry point. This is considered the API of the RunnableEntity and is required during the RTE contract phase.
waitPoint	WaitPoint	*	aggr	The WaitPoint associated with the RunnableEntity.
writtenLocal Variable	VariableAccess	*	aggr	The presence of a writtenLocalVariable implies that a RunnableEntity needs write access to a VariableData Prototype in the role of implicitInterRunnableVariable or explicitInterRunnableVariable.
				The aggregation of writtenLocalVariable is subject to variability with the purpose to support the conditional existence of implicitInterRunnableVariable and explicit InterRunnableVariable or the variant existence of written LocalVariable (points) in the implementation.
				Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=writtenLocalVariable.shortName, written LocalVariable.variationPoint.shortLabel vh.latestBindingTime=preCompileTime

Table A.61: RunnableEntity

Class	SenderReceiverInterface	SenderReceiverInterface				
Package	M2::AUTOSARTemplates:	:SWComp	onentTer	nplate::PortInterface		
Note	A sender/receiver interfac	e declares	a numbe	er of data elements to be sent and received.		
	Tags: atp.recommendedF	ackage=F	PortInterfa	ces		
Base				eprintable, AtpClassifier, AtpType, CollectableElement, errable, PackageableElement, PortInterface, Referrable		
Aggregated by	ARPackage.element					
Attribute	Туре	Mult.	Kind	Note		
dataElement	VariableDataPrototype	*	aggr	The data elements of this SenderReceiverInterface.		
invalidation Policy	InvalidationPolicy	*	aggr	InvalidationPolicy for a particular dataElement		
metaDataItem Set	MetaDataItemSet	*	aggr	This aggregation defines fixed sets of meta-data items associated with dataElements of the enclosing Sender ReceiverInterface		

**Table A.62: SenderReceiverInterface** 

Class	StructuredReq			
Package	M2::MSR::Documentation	::BlockEle	ments::R	equirementsTracing
Note	This represents a structured requirement. This is intended for a case where specific requirements for features are collected.			
	Note that this can be rendered as a labeled list.			st.
Base	ARObject, DocumentViewSelectable, Identifiable, MultilanguageReferrable, Paginateable, Referrable, Traceable			
Aggregated by	DocumentationBlock.structuredReq			
Attribute	Туре	Mult.	Kind	Note





Class	StructuredReq			
appliesTo	StandardNameEnum	*	attr	This attribute represents the platform the requirement is assigned to.  Tags: xml.namePlural=APPLIES-TO-DEPENDENCIES xml.sequenceOffset=25
conflicts	DocumentationBlock	01	aggr	This represents an informal specification of conflicts.
			-33	Tags: xml.sequenceOffset=40
date	DateTime	1	attr	This represents the date when the requirement was initiated.
				Tags: xml.sequenceOffset=5
dependencies	DocumentationBlock	01	aggr	This represents an informal specification of dependencies. Note that upstream tracing should be formalized in the property trace provided by the superclass Traceable.
				Tags: xml.sequenceOffset=30
description	DocumentationBlock	01	aggr	This represents the general description of the requirement.
				Tags: xml.sequenceOffset=10
importance	String	1	attr	This allows to represent the importance of the requirement.
				Tags: xml.sequenceOffset=8
issuedBy	String	1	attr	This represents the person, organization or authority which issued the requirement.
				Tags: xml.sequenceOffset=6
rationale	DocumentationBlock	01	aggr	This represents the rationale of the requirement.
				Tags: xml.sequenceOffset=20
remark	DocumentationBlock	01	aggr	This represents an informal remark. Note that this is not modeled as annotation, since these remark is still essential part of the requirement.
				Tags: xml.sequenceOffset=60
supporting Material	DocumentationBlock	01	aggr	This represents an informal specification of the supporting material.
				Tags: xml.sequenceOffset=50
testedItem	Traceable	*	ref	This association represents the ability to trace on the same specification level. This supports for example the cacceptance tests.
				Tags: xml.sequenceOffset=70
type	String	1	attr	This attribute allows to denote the type of requirement to denote for example is it an "enhancement", "new feature' etc.
				Tags: xml.sequenceOffset=7
useCase	DocumentationBlock	01	aggr	This describes the relevant use cases. Note that formal references to use cases should be done in the trace relation.
				Tags: xml.sequenceOffset=35

Table A.63: StructuredReq



Class	SwAddrMethod						
Package	M2::MSR::DataDictionary::AuxillaryObjects						
Note		Used to assign a common addressing method, e.g. common memory section, to data or code objects. These objects could actually live in different modules or components.					
	Tags: atp.recommended	Package=9	SwAddrMe	ethods			
Base	ARElement, ARObject, A Referrable, Packageable			eprintable, CollectableElement, Identifiable, Multilanguage			
Aggregated by	ARPackage.element						
Attribute	Туре	Mult.	Kind	Note			
memory Allocation KeywordPolicy	MemoryAllocation KeywordPolicyType	01	attr	Enumeration to specify the name pattern of the Memory Allocation Keyword.			
option	Identifier	*	attr	This attribute introduces the ability to specify further intended properties of the MemorySection in with the related objects shall be placed.			
				These properties are handled as to be selected. The intended options are mentioned in the list.			
				In the Memory Mapping configuration, this option list is used to determine an appropriate MemMapAddressing ModeSet.			
section Initialization Policy	SectionInitialization PolicyType	01	attr	Specifies the expected initialization of the variables (inclusive those which are implementing VariableData Prototypes). Therefore this is an implementation constraint for initialization code of BSW modules (especially RTE) as well as the start-up code which initializes the memory segment to which the AutosarData Prototypes referring to the SwAddrMethod's are later on mapped.			
				If the attribute is not defined it has the identical semantic as the attribute value "INIT"			
sectionType	MemorySectionType	01	attr	Defines the type of memory sections which can be associated with this addressing method.			

Table A.64: SwAddrMethod

Class	SwAxisGrouped				
Package	M2::MSR::DataDictionary:	M2::MSR::DataDictionary::Axis			
Note	An SwAxisGrouped is an axis which is shared between multiple calibration parameters.				
Base	ARObject, SwCalprmAxis	ARObject, SwCalprmAxisTypeProps			
Aggregated by	SwCalprmAxis.swCalprm/	AxisTypeP	rops		
Attribute	Туре	Mult.	Kind	Note	
sharedAxisType	ApplicationPrimitive DataType	01	ref	This is the datatype of the calibration parameter providing the shared axis.	





Class	SwAxisGrouped			
swAxisIndex	AxisIndexType	01	attr	Describes which axis of the referenced calibration parameter provides the values for the group axis. The index satisfies the following convention:
				0 = value axis. in this case, the interpolation result of the referenced parameter is used as a base point index.
				The index should only be specified if the parameter under swCalprm contains more than one axis. It is standard practice for the axis index of parameters with more than one axis, to be set to 1, if data has not been assigned to swAxisIndex.
				Tags: xml.sequenceOffset=20
swCalprmRef	SwCalprmRefProxy	1	aggr	This property specifies the calibration parameter which serves as the input axis. In AUTOSAR, the type of the referenced Calibration parameter shall be compatible to the type specified by sharedAxisType.
				Please note that the multiplicity of this aggregation cannot be set to 01 based on the non-mainstream schema generation instructions defined at the aggregation.
				However, the multiplicity has to be factually considered 01 (i.e. a SwAxisGrouped that does not aggregate the role swCalprmRef is still valid according to the XML schema, depending on the use case documented in [constr_1015]).
				Tags: xml.roleElement=false xml.roleWrapperElement=false xml.sequenceOffset=30 xml.typeElement=false xml.typeWrapperElement=false

Table A.65: SwAxisGrouped

Class	SwAxisIndividual					
Package	M2::MSR::DataDictionary::Axis					
Note	This meta-class describes an axis integrated into a parameter (field etc.). The integration makes this individual to each parameter. The so-called grouped axis represents the counterpart to this. It is conceived as an independent parameter (see class SwAxisGrouped).					
Base	ARObject, SwCalprmAx	isTypeProp	s			
Aggregated by	SwCalprmAxis.swCalprn	nAxisTypeF	rops			
Attribute	Туре	Mult.	Kind	Note		
compuMethod	CompuMethod	01	ref	This is the compuMethod which is expected for the axis. It is used in early stages if the particular input-value is not yet available.		
				Tags: xml.sequenceOffset=30		
dataConstr	DataConstr	01	ref	Refers to constraints, e.g. for plausibility checks.		
				Tags: xml.sequenceOffset=80		
inputVariable Type	ApplicationPrimitive DataType	01	ref	This is the datatype of the input value for the axis. This allows to define e.g. a type of curve, where the input value is finalized at the access point.		
swAxisGeneric	SwAxisGeneric	01	aggr	this specifies the properties of a generic axis if applicable.		
				Tags: xml.sequenceOffset=90		





Class	SwAxisIndividual			
swMaxAxis Points	Integer	01	attr	Maximum number of base points contained in the axis of a map or curve.
				Stereotypes: atpVariation Tags: vh.latestBindingTime=preCompileTime
swMinAxis Points	Integer	01	attr	xml.sequenceOffset=60  Minimum number of base points contained in the axis of a map or curve.
				Stereotypes: atpVariation Tags: vh.latestBindingTime=preCompileTime xml.sequenceOffset=70
swVariableRef (ordered)	SwVariableRefProxy	*	aggr	Refers to input variables of the axis. It is possible to specify more than one variable. Here the following is valid:
				The variable with the highest priority shall be given first. It is used in the generation of the code and is also displayed first in the application system.
				All variables referenced shall be of the same physical nature. This is usually detected in that the conversion formulae affected refer back to the same SI-units.
				In AUTOSAR this ensured by the constraint, that the referenced input variables shall use a type compatible to "inputVariableType".
				This multiple referencing allows a base point distribution for more than one input variable to be used. One example of this are the temperature curves which can depend both on the induction air temperature and the engine temperature.
				These variables can be displayed simultaneously by MCD systems (adjustment systems), enabling operating points to be shown in the curves.
				Tags: xml.roleElement=false xml.roleWrapperElement=true xml.sequenceOffset=20 xml.typeElement=false xml.typeWrapperElement=false
unit	Unit	01	ref	This represents the physical unit of the input value of the axis. It is provided to support the case that the particular input variable is not yet known.
				Tags: xml.sequenceOffset=40

Table A.66: SwAxisIndividual

Class	SwBaseType			
Package	M2::MSR::AsamHdo::Base	eTypes		
Note	This meta-class represent	s a base t	type used	within ECU software.
	Tags: atp.recommendedPackage=BaseTypes			3
Base	ARElement, ARObject, AtpBlueprint, AtpBlueprintable, BaseType, CollectableElement, Identifiable, MultilanguageReferrable, PackageableElement, Referrable			
Aggregated by	ARPackage.element			
Attribute	Туре	Mult.	Kind	Note
_	_	_	_	_

Table A.67: SwBaseType



Enumeration	SwCalibrationAccessEnum
Package	M2::MSR::DataDictionary::DataDefProperties
Note	Determines the access rights to a data object w.r.t. measurement and calibration.
Aggregated by	ModeDeclarationGroupPrototype.swCalibrationAccess, SwCalprmAxis.swCalibrationAccess, SwData DefProps.swCalibrationAccess
Literal	Description
notAccessible	The element will not be accessible via MCD tools, i.e. will not appear in the ASAP file.
	Tags: atp.EnumerationLiteralIndex=0
readOnly	The element will only appear as read-only in an ASAP file.
	Tags: atp.EnumerationLiteralIndex=1
readWrite	The element will appear in the ASAP file with both read and write access.
	Tags: atp.EnumerationLiteralIndex=2

Table A.68: SwCalibrationAccessEnum

Class	SwCalprmAxis						
Package	M2::MSR::DataDictionary::CalibrationParameter						
Note	This element specifies ar	individual	input par	ameter axis (abscissa).			
Base	ARObject						
Aggregated by	SwCalprmAxisSet.swCal	prmAxis					
Attribute	Туре	Mult.	Kind	Note			
category	CalprmAxisCategory	01	attr	This property specifies the category of a particular axis.			
	Enum			Tags: xml.sequenceOffset=30			
displayFormat	DisplayFormatString	01	attr	This property specifies how the axis values shall be displayed e.g. in documents or in measurement and calibration tools.			
				Tags: xml.sequenceOffset=100			
swAxisIndex	AxisIndexType	01	attr	This attribute specifies which axis is specified by the containing SwCalprmAxis.			
				For example in a curve this is usually "1". In a map this is "1" or "2".			
				Tags: xml.sequenceOffset=20			
swCalibration	SwCalibrationAccess	01	attr	Describes the applicability of parameters and variables.			
Access	Enum			Tags: xml.sequenceOffset=90			
swCalprmAxis	SwCalprmAxisType	01	aggr	specific properties depending on the type of the axis.			
TypeProps	Props			Tags: xml.roleElement=false xml.roleWrapperElement=false xml.sequenceOffset=40 xml.typeElement=true xml.typeWrapperElement=false			

Table A.69: SwCalprmAxis

Class	SwCalprmAxisSet
Package	M2::MSR::DataDictionary::CalibrationParameter
Note	This element specifies the input parameter axes (abscissas) of parameters (and variables, if these are used adaptively).
Base	ARObject





Class	SwCalprmAxisSet				
Aggregated by	SwDataDefProps.swCa	lprmAxisSet	t		
Attribute	Type Mult. Kind Note				
swCalprmAxis	SwCalprmAxis	*	aggr	One axis belonging to this SwCalprmAxisSet  Tags: xml.roleElement=true xml.roleWrapperElement=false xml.sequenceOffset=20 xml.typeElement=false xml.typeWrapperElement=false	

## Table A.70: SwCalprmAxisSet

Class	SwComponentPrototype				
Package	M2::AUTOSARTemplates:	::SWComp	onentTer	nplate::Composition	
Note	Role of a software compo	nent withii	n a compo	osition.	
Base	ARObject, AtpFeature, At	ARObject, AtpFeature, AtpPrototype, Identifiable, MultilanguageReferrable, Referrable			
Aggregated by	AtpClassifier.atpFeature,	Compositi	onSwCor	nponentType.component	
Attribute	Туре	Mult.	Kind	Note	
type	SwComponentType	SwComponentType 01 tref Type of the instance.			
				Stereotypes: isOfType	

# Table A.71: SwComponentPrototype

Class	SwComponentType (abstract)					
Package	M2::AUTOSARTemplates	M2::AUTOSARTemplates::SWComponentTemplate::Components				
Note	Base class for AUTOSAF	software	compone	nts.		
Base				eprintable, AtpClassifier, AtpType, CollectableElement, geableElement, Referrable		
Subclasses	AtomicSwComponentTyp	e, Compos	sitionSwC	componentType, ParameterSwComponentType		
Aggregated by	ARPackage.element					
Attribute	Туре	Mult.	Kind	Note		
consistency Needs	ConsistencyNeeds	*	aggr	This represents the collection of ConsistencyNeeds owned by the enclosing SwComponentType.		
				Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=consistencyNeeds.shortName, consistency Needs.variationPoint.shortLabel vh.latestBindingTime=preCompileTime		
port	PortPrototype	*	aggr	The PortPrototypes through which this SwComponent Type can communicate.		
				The aggregation of PortPrototype is subject to variability with the purpose to support the conditional existence of PortPrototypes.		
				Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=port.shortName, port.variationPoint.short Label vh.latestBindingTime=preCompileTime		





Class	SwComponentType (abs	tract)		
portGroup	PortGroup	*	aggr	A port group being part of this component.
				Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=portGroup.shortName, portGroup.variation Point.shortLabel vh.latestBindingTime=preCompileTime
swcMapping Constraint	SwComponentMapping Constraints	*	ref	Reference to constraints that are valid for this Sw ComponentType.
swComponent Documentation	SwComponent Documentation	01	aggr	This adds a documentation to the SwComponentType.  Stereotypes: atpSplitable; atpVariation  Tags: atp.Splitkey=swComponentDocumentation, sw ComponentDocumentation.variationPoint.shortLabel vh.latestBindingTime=preCompileTime xml.sequenceOffset=-10
unitGroup	UnitGroup	*	ref	This allows for the specification of which UnitGroups are relevant in the context of referencing SwComponentType.

Table A.72: SwComponentType

Class	< <atpvariation>&gt; SwData</atpvariation>	DefProps	•	·			
Package	M2::MSR::DataDictionary::DataDefProperties						
Note	This class is a collection of properties relevant for data objects under various aspects. One could consider this class as a "pattern of inheritance by aggregation". The properties can be applied to all objects of all classes in which SwDataDefProps is aggregated.						
				elements are useful all of the time. Hence, the process cument Control Instance MSR-DCI) has the task of			
	SwDataDefProps covers v	arious as	pects:				
	the recordLayouts which	n specify I	how such	use cases: is it a single value, a curve, or a map, but also elements are mapped/converted to the DataTypes in the his is mainly expressed by properties like swRecordLayout			
				by swImplPolicy, swVariableAccessImplPolicy, swAddr nplementationDataType and additionalNativeTypeQualifier			
	Access policy for the MC	CD syster	m, mainly	expressed by swCalibrationAccess			
	Semantics of the data element, mainly expressed by compuMethod and/or unit, dataConstr, invalid Value						
	Code generation policy provided by swRecordLayout						
	Tags: vh.latestBindingTime=codeGenerationTime						
Base	ARObject						
Aggregated by	AutosarDataType.swDataDefProps, CompositeNetworkRepresentation.networkRepresentation, Data Prototype.swDataDefProps, DataPrototypeTransformationProps.networkRepresentationProps, DiagnosticDataElement.swDataDefProps, DiagnosticEnvDataElementCondition.swDataDefProps, DIt Argument.networkRepresentation, FlatInstanceDescriptor.swDataDefProps, ImplementationDataType Element.swDataDefProps, InstantiationDataDefProps.swDataDefProps, ISignal.networkRepresentation Props, McDataInstance.resultingProperties, ParameterAccess.swDataDefProps, PerInstanceMemory.sw DataDefProps, ReceiverComSpec.networkRepresentation, SenderComSpec.networkRepresentation, SomeipDataPrototypeTransformationProps.networkRepresentation, SwPointerTargetProps.swDataDefProps, SwServiceArg.swDataDefProps, SwSystemconst.swDataDefProps, SystemSignal.physicalProps						
Attribute	Туре	Mult.	Kind	Note			





Class	< <atpvariation>&gt; SwData</atpvariation>	DefProps	<b>3</b>	
additionalNative TypeQualifier	NativeDeclarationString	01	attr	This attribute is used to declare native qualifiers of the programming language which can neither be deduced from the baseType (e.g. because the data object describes a pointer) nor from other more abstract attributes. Examples are qualifiers like "volatile", "strict" or "enum" of the C-language. All such declarations have to be put into one string.
				Tags: xml.sequenceOffset=235
annotation	Annotation	*	aggr	This aggregation allows to add annotations (yellow pads) related to the current data object.  Tags:  xml.roleElement=true  xml.roleWrapperElement=true  xml.sequenceOffset=20  xml.typeElement=false  xml.typeWrapperElement=false
baseType	SwBaseType	01	ref	Base type associated with the containing data object.
				Tags: xml.sequenceOffset=50
compuMethod	CompuMethod	01	ref	Computation method associated with the semantics of this data object.
				Tags: xml.sequenceOffset=180
dataConstr	DataConstr	01	ref	Data constraint for this data object.
				Tags: xml.sequenceOffset=190
displayFormat	DisplayFormatString	01	attr	This property describes how a number is to be rendered e.g. in documents or in a measurement and calibration system.
				Tags: xml.sequenceOffset=210
display Presentation	DisplayPresentation Enum	01	attr	This attribute controls the presentation of the related data for measurement and calibration tools.
implementation DataType	AbstractImplementation DataType	01	ref	This association denotes the ImplementationDataType of a data declaration via its aggregated SwDataDefProps. It is used whenever a data declaration is not directly referring to a base type. Especially
				redefinition of an ImplementationDataType via a     "typedef" to another ImplementationDatatype
				the target type of a pointer (see SwPointerTarget Props), if it does not refer to a base type directly
				the data type of an array or record element within an ImplementationDataType, if it does not refer to a base type directly
				the data type of an SwServiceArg, if it does not refer to a base type directly
				Tags: xml.sequenceOffset=215
invalidValue	ValueSpecification	01	aggr	Optional value to express invalidity of the actual data element.
				Tags: xml.sequenceOffset=255
stepSize	Float	01	attr	This attribute can be used to define a value which is added to or subtracted from the value of a DataPrototype when using up/down keys while calibrating.





Class	< <atpvariation>&gt; SwDat</atpvariation>	aDefProps	3	
swAddrMethod	SwAddrMethod	01	ref	Addressing method related to this data object. Via an association to the same SwAddrMethod it can be specified that several DataPrototypes shall be located in the same memory without already specifying the memory section itself.
				Tags: xml.sequenceOffset=30
swAlignment	AlignmentType	01	attr	The attribute describes the intended typical alignment of the DataPrototype. If the attribute is not defined the alignment is determined by the swBaseType size and the memoryAllocationKeywordPolicy of the referenced Sw AddrMethod.
				Tags: xml.sequenceOffset=33
swBit Representation	SwBitRepresentation	01	aggr	Description of the binary representation in case of a bit variable.
				Tags: xml.sequenceOffset=60
swCalibration Access	SwCalibrationAccess Enum	01	attr	Specifies the read or write access by MCD tools for this data object.
				Tags: xml.sequenceOffset=70
swCalprmAxis Set	SwCalprmAxisSet	01	aggr	This specifies the properties of the axes in case of a curve or map etc. This is mainly applicable to calibration parameters.
				Tags: xml.sequenceOffset=90
swComparison	SwVariableRefProxy	*	aggr	Variables used for comparison in an MCD process.
Variable				Tags: xml.sequenceOffset=170 xml.typeElement=false
swData Dependency	SwDataDependency	01	aggr	Describes how the value of the data object has to be calculated from the value of another data object (by the MCD system).
				Tags: xml.sequenceOffset=200
swHostVariable	SwVariableRefProxy	01	aggr	Contains a reference to a variable which serves as a host-variable for a bit variable. Only applicable to bit objects.
				Tags: xml.sequenceOffset=220 xml.typeElement=false
swImplPolicy	SwImplPolicyEnum	01	attr	Implementation policy for this data object.
				Tags: xml.sequenceOffset=230
swIntended Resolution	Numerical	01	attr	The purpose of this element is to describe the requested quantization of data objects early on in the design process.
				The resolution ultimately occurs via the conversion formula present (compuMethod), which specifies the transition from the physical world to the standardized world (and vice-versa) (here, "the slope per bit" is presen implicitly in the conversion formula).
				In the case of a development phase without a fixed conversion formula, a pre-specification can occur through swIntendedResolution.
				The resolution is specified in the physical domain according to the property "unit".
				Tags: xml.sequenceOffset=240





Class	< <atpvariation>&gt; SwData</atpvariation>	aDefProps	6	
swInterpolation Method	Identifier	01	attr	This is a keyword identifying the mathematical method to be applied for interpolation. The keyword needs to be related to the interpolation routine which needs to be invoked.
				Tags: xml.sequenceOffset=250
swlsVirtual	Boolean	01	attr	This element distinguishes virtual objects. Virtual objects do not appear in the memory, their derivation is much more dependent on other objects and hence they shall have a swDataDependency.
				Tags: xml.sequenceOffset=260
swPointerTarget Props	SwPointerTargetProps	01	aggr	Specifies that the containing data object is a pointer to another data object.
				Note: This atpSplitable property has no atp.Splitkey due to atpVariation (PropertySetPattern).
				Stereotypes: atpSplitable Tags: xml.sequenceOffset=280
swRecord	SwRecordLayout	01	ref	Record layout for this data object.
Layout				Tags: xml.sequenceOffset=290
swRefresh Timing	MultidimensionalTime	01	aggr	This element specifies the frequency in which the object involved shall be or is called or calculated. This timing can be collected from the task in which write access processes to the variable run. But this cannot be done by the MCD system.
				So this attribute can be used in an early phase to express the desired refresh timing and later on to specify the real refresh timing.
				Tags: xml.sequenceOffset=300
swTextProps	SwTextProps	01	aggr	the specific properties if the data object is a text object.
				Tags: xml.sequenceOffset=120
swValueBlock	Numerical	01	attr	This represents the size of a Value Block
Size				Stereotypes: atpVariation Tags: vh.latestBindingTime=preCompileTime xml.sequenceOffset=80
swValueBlock SizeMult (ordered)	Numerical	*	attr	This attribute is used to specify the dimensions of a value block (VAL_BLK) for the case that that value block has more than one dimension.
				The dimensions given in this attribute are ordered such that the first entry represents the first dimension, the second entry represents the second dimension, and so on.
				For one-dimensional value blocks the attribute swValue BlockSize shall be used and this attribute shall not exist.
				Stereotypes: atpVariation Tags: vh.latestBindingTime=preCompileTime
unit	Unit	01	ref	Physical unit associated with the semantics of this data object. This attribute applies if no compuMethod is specified. If both units (this as well as via compuMethod) are specified the units shall be compatible.
				Tags: xml.sequenceOffset=350





Class	< <atpvariation>&gt; SwDataDefProps</atpvariation>				
valueAxisData Type	ApplicationPrimitive DataType	01	ref	The referenced ApplicationPrimitiveDataType represents the primitive data type of the value axis within a compound primitive (e.g. curve, map). It supersedes CompuMethod, Unit, and BaseType.  Tags: xml.sequenceOffset=355	

## Table A.73: SwDataDefProps

Enumeration	SwImplPolicyEnum
Package	M2::MSR::DataDictionary::DataDefProperties
Note	Specifies the implementation strategy with respect to consistency mechanisms of variables.
Aggregated by	BswInternalTriggeringPoint.swImplPolicy, InternalTriggeringPoint.swImplPolicy, SwDataDefProps.sw ImplPolicy, Trigger.swImplPolicy
Literal	Description
const	forced implementation such that the running software within the ECU shall not modify it. For example implemented with the "const" modifier in C. This can be applied for parameters (not for those in NVRAM) as well as argument data prototypes.
	Tags: atp.EnumerationLiteralIndex=0
fixed	This data element is fixed. In particular this indicates, that it might also be implemented e.g. as in place data, (#DEFINE).
	Tags: atp.EnumerationLiteralIndex=1
measurementPoint	The data element is created for measurement purposes only. The data element is never read directly within the ECU software. In contrast to a "standard" data element in an unconnected provide port is, this unconnection is guaranteed for measurementPoint data elements.
	Tags: atp.EnumerationLiteralIndex=2
queued	The content of the data element is queued and the data element has 'event' semantics, i.e. data elements are stored in a queue and all data elements are processed in 'first in first out' order. The queuing is intended to be implemented by RTE Generator. This value is not applicable for parameters.
	Tags: atp.EnumerationLiteralIndex=3
standard	This is applicable for all kinds of data elements. For variable data prototypes the 'last is best' semantics applies. For parameter there is no specific implementation directive.
	Tags: atp.EnumerationLiteralIndex=4

#### Table A.74: SwlmplPolicyEnum

Class	SwcImplementation				
Package	M2::AUTOSARTemplates:	:SWComp	onentTer	nplate::SwcImplementation	
Note	This meta-class represents a specialization of the general Implementation meta-class with respect to the usage in application software.				
	Tags: atp.recommendedP	ackage=S	SwcImpler	mentations	
Base	ARElement, ARObject, Co PackageableElement, Red		Element,	Identifiable, Implementation, MultilanguageReferrable,	
Aggregated by	ARPackage.element				
Attribute	Туре	Type Mult. Kind Note			
behavior	SwcInternalBehavior	01	ref	The internal behavior implemented by this Implementation.	





Class	SwcImplementation			
perInstance MemorySize	PerInstanceMemory Size	*	aggr	Allows a definition of the size of the per-instance memory for this implementation. The aggregation of PerInstance MemorySize is subject to variability with the purpose to support variability in the software components implementations. Typically different algorithms in the implementation are requiring different number of memory objects, in this case PerInstanceMemory.
				Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=perInstanceMemorySize, perInstance MemorySize.variationPoint.shortLabel vh.latestBindingTime=preCompileTime
required RTEVendor	String	01	attr	Identify a specific RTE vendor. This information is potentially important at the time of integrating (in particular: linking) the application code with the RTE. The semantics is that (if the association exists) the corresponding code has been created to fit to the vendor-mode RTE provided by this specific vendor. Attempting to integrate the code with another RTE generated in vendor mode is in general not possible.

**Table A.75: SwcImplementation** 

Class	SwcInternalBehavior				
Package	M2::AUTOSARTemplates::SWComponentTemplate::SwcInternalBehavior				
Note				mponentType describes the relevant aspects of the i.e. the RunnableEntities and the RTEEvents they respond	
Base	ARObject, AtpClassifier, Referrable, Referrable	AtpFeature	e, AtpStru	uctureElement, Identifiable, InternalBehavior, Multilanguage	
Aggregated by	AtomicSwComponentType	e.internalE	Behavior,	AtpClassifier.atpFeature	
Attribute	Туре	Mult.	Kind	Note	
arTypedPer Instance Memory	VariableDataPrototype	*	aggr	Defines an AUTOSAR typed memory-block that needs to be available for each instance of the SW-component.  This is typically only useful if supportsMultipleInstantiation is set to "true" or if the component defines NVRAM access via permanent blocks.  The aggregation of arTypedPerInstanceMemory is subject to variability with the purpose to support variability in the software component's implementations. Typically different algorithms in the implementation are requiring different number of memory objects.  Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=arTypedPerInstanceMemory.shortName, ar TypedPerInstanceMemory.variationPoint.shortLabel vh.latestBindingTime=preCompileTime	



Class	SwcInternalBehavior			
event	RTEEvent	*	aggr	This is a RTEEvent specified for the particular Swc InternalBehavior.  The aggregation of RTEEvent is subject to variability with the purpose to support the conditional existence of RTE events. Note: the number of RTE events might vary due to the conditional existence of PortPrototypes using Data ReceivedEvents or due to different scheduling needs of algorithms.  Stereotypes: atpSplitable; atpVariation
exclusiveArea	SwcExclusiveArea	*	aggr	Tags: atp.Splitkey=event.shortName, event.variationPoint.short Label vh.latestBindingTime=preCompileTime  Options how to generate the ExclusiveArea related APIs.
Policy	Policy		35	When no SwcExclusiveAreaPolicy is specified for an ExclusiveArea the default values apply.  Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=exclusiveAreaPolicy, exclusiveArea Policy.variationPoint.shortLabel vh.latestBindingTime=preCompileTime
explicitInter Runnable Variable	VariableDataPrototype	*	aggr	Implement state message semantics for establishing communication among runnables of the same component. The aggregation of explicitInterRunnable Variable is subject to variability with the purpose to support variability in the software components implementations. Typically different algorithms in the implementation are requiring different number of memory objects.  Stereotypes: atpSplitable; atpVariation
				Tags: atp.Splitkey=explicitInterRunnableVariable.shortName, explicitInterRunnableVariable.variationPoint.shortLabel vh.latestBindingTime=preCompileTime
implicitInter Runnable Variable	VariableDataPrototype	*	aggr	Implement state message semantics for establishing communication among runnables of the same component. The aggregation of implicitInterRunnable Variable is subject to variability with the purpose to support variability in the software components implementations. Typically different algorithms in the implementation are requiring different number of memory objects.
				Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=implicitInterRunnableVariable.shortName, implicitInterRunnableVariable.variationPoint.shortLabel vh.latestBindingTime=preCompileTime
includedData TypeSet	IncludedDataTypeSet	*	aggr	The includedDataTypeSet is used by a software component for its implementation.  Stereotypes: atpSplitable Tags: atp.Splitkey=includedDataTypeSet
includedMode Declaration	IncludedMode DeclarationGroupSet	*	aggr	This aggregation represents the included Mode DeclarationGroups
GroupSet				Stereotypes: atpSplitable Tags: atp.Splitkey=includedModeDeclarationGroupSet





Class	SwcInternalBehavior			
instantiation DataDefProps	InstantiationDataDef Props	*	aggr	The purpose of this is that within the context of a given SwComponentType some data def properties of individual instantiations can be modified. The aggregation of InstantiationDataDefProps is subject to variability with the purpose to support the conditional existence of Port Prototypes and component local memories like "per InstanceParameter" or "arTypedPerInstanceMemory".
				Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=instantiationDataDefProps, instantiationData DefProps.variationPoint.shortLabel vh.latestBindingTime=preCompileTime
perInstance Memory	PerInstanceMemory	*	aggr	Defines a per-instance memory object needed by this software component. The aggregation of PerInstance Memory is subject to variability with the purpose to support variability in the software components implementations. Typically different algorithms in the implementation are requiring different number of memory objects.
				Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=perInstanceMemory.shortName, perInstance Memory.variationPoint.shortLabel vh.latestBindingTime=preCompileTime
perInstance Parameter	ParameterData Prototype	*	aggr	Defines parameter(s) or characteristic value(s) that needs to be available for each instance of the software-component. This is typically only useful if supportsMultipleInstantiation is set to "true". The aggregation of perInstanceParameter is subject to variability with the purpose to support variability in the software components implementations. Typically different algorithms in the implementation are requiring different number of memory objects.
				Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=perInstanceParameter.shortName, per InstanceParameter.variationPoint.shortLabel vh.latestBindingTime=preCompileTime
portAPIOption	PortAPIOption	*	aggr	Options for generating the signature of port-related calls from a runnable to the RTE and vice versa. The aggregation of PortPrototypes is subject to variability with the purpose to support the conditional existence of ports.
				Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=portAPIOption, portAPIOption.variation Point.shortLabel vh.latestBindingTime=preCompileTime





Class	SwcInternalBehavior		Δ	
runnable	RunnableEntity	*	aggr	This is a RunnableEntity specified for the particular Swc InternalBehavior.
				The aggregation of RunnableEntity is subject to variability with the purpose to support the conditional existence of RunnableEntities. Note: the number of RunnableEntities might vary due to the conditional existence of Port Prototypes using DataReceivedEvents or due to different scheduling needs of algorithms.
				Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=runnable.shortName, runnable.variation Point.shortLabel vh.latestBindingTime=preCompileTime
service Dependency	SwcService Dependency	*	aggr	Defines the requirements on AUTOSAR Services for a particular item.
				The aggregation of SwcServiceDependency is subject to variability with the purpose to support the conditional existence of ports as well as the conditional existence of ServiceNeeds.
				The SwcServiceDependency owned by an SwcInternal Behavior can be located in a different physical file in order to support that SwcServiceDependency might be provided in later development steps or even by different expert domain (e.g OBD expert for Obd related Service Needs) tools. Therefore the aggregation is < <atp>splitable&gt;&gt;.</atp>
				Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=serviceDependency.shortName, service Dependency.variationPoint.shortLabel vh.latestBindingTime=preCompileTime
shared Parameter	ParameterData Prototype	*	aggr	Defines parameter(s) or characteristic value(s) shared between SwComponentPrototypes of the same Sw ComponentType The aggregation of sharedParameter is subject to variability with the purpose to support variability in the software components implementations. Typically different algorithms in the implementation are requiring different number of memory objects.
				Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=sharedParameter.shortName, shared Parameter.variationPoint.shortLabel vh.latestBindingTime=preCompileTime
supports Multiple Instantiation	Boolean	01	attr	Indicate whether the corresponding software-component can be multiply instantiated on one ECU. In this case the attribute will result in an appropriate component API on programming language level (with or without instance handle).
variationPoint Proxy	VariationPointProxy	*	aggr	Proxy of a variation points in the C/C++ implementation.  Stereotypes: atpSplitable Tags: atp.Splitkey=variationPointProxy.shortName

Table A.76: SwcInternalBehavior



Class	System					
Package	M2::AUTOSARTemplates::SystemTemplate					
Note				ion. The System description defines five major elements: g and Mapping Constraints.		
	The System element directly aggregates the elements describing the Software, Mapping and Mapping Constraints; it contains a reference to an ASAM FIBEX description specifying Communication and Topology.					
	Tags: atp.recommendedF	Package=	Systems			
Base		eReferrab		ature, AtpStructureElement, CollectableElement, geableElement, Referrable, UploadableDesignElement,		
Aggregated by	ARPackage.element, Atp	Classifier.	atpFeatur	е		
Attribute	Туре	Mult.	Kind	Note		
clientId DefinitionSet	ClientIdDefinitionSet	*	ref	Set of Client Identifiers that are used for inter-ECU client-server communication in the System.		
containerIPdu HeaderByte Order	ByteOrderEnum	01	attr	Defines the byteOrder of the header in ContainerIPdus.		
ecuExtract Version	RevisionLabelString	01	attr	Version number of the Ecu Extract.		
fibexElement	FibexElement	*	ref	Reference to ASAM FIBEX elements specifying Communication and Topology.		
				All Fibex Elements used within a System Description shall be referenced from the System Element.		
				atpVariation: In order to describe a product-line, all Fibex Elements can be optional.		
				Stereotypes: atpSplitable; atpVariation		
				Tags: atp.Splitkey=fibexElement.fibexElement, fibex Element.variationPoint.shortLabel vh.latestBindingTime=postBuild		
interpolation Routine MappingSet	InterpolationRoutine MappingSet	*	ref	This reference identifies the InterpolationRoutineMapping Sets that are relevant in the context of the enclosing System.		
j1939Shared AddressCluster	J1939SharedAddress Cluster	*	aggr	Collection of J1939Clusters that share a common address space for the routing of messages.		
				Stereotypes: atpSplitable; atpVariation		
				Tags: atp.Splitkey=j1939SharedAddressCluster.shortName, j1939SharedAddressCluster.variationPoint.shortLabel vh.latestBindingTime=postBuild		
mapping	SystemMapping	*	aggr	Aggregation of all mapping aspects (mapping of SW components to ECUs, mapping of data elements to signals, and mapping constraints).		
				In order to support OEM / Tier 1 interaction and shared development for one common System this aggregation is atpSplitable and atpVariation. The content of System Mapping can be provided by several parties using different names for the SystemMapping.		
				This element is not required when the System description is used for a network-only use-case.		
				Stereotypes: atpSplitable; atpVariation		
				Tags: atp.Splitkey=mapping.shortName, mapping.variation Point.shortLabel vh.latestBindingTime=postBuild		





Class	System			
pncVector Length	PositiveInteger	01	attr	Length of the partial networking request release information vector (in bytes).
pncVectorOffset	PositiveInteger	01	attr	Absolute offset (with respect to the NM-PDU) of the partial networking request release information vector that is defined in bytes as an index starting with 0.
rootSoftware Composition	RootSwComposition Prototype	01	aggr	Aggregation of the root software composition, containing all software components in the System in a hierarchical structure. This element is not required when the System description is used for a network-only use-case.
				atpVariation: The RootSwCompositionPrototype can vary.
				Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=rootSoftwareComposition.shortName, root SoftwareComposition.variationPoint.shortLabel vh.latestBindingTime=systemDesignTime
swCluster	CpSoftwareCluster	*	ref	CP Software Clusters of this System
				Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=swCluster.cpSoftwareCluster, sw Cluster.variationPoint.shortLabel vh.latestBindingTime=systemDesignTime
system Documentation	Chapter	*	aggr	Possibility to provide additional documentation while defining the System. The System documentation can be composed of several chapters.
				Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=systemDocumentation.shortName, system Documentation.variationPoint.shortLabel vh.latestBindingTime=systemDesignTime xml.sequenceOffset=-10
systemVersion	RevisionLabelString	01	attr	Version number of the System Description.

Table A.77: System

Class	TimingEvent			
Package	M2::AUTOSARTemplates:	:SWComp	onentTen	nplate::SwcInternalBehavior::RTEEvents
Note	This event is used to start	Runnable	Entities th	nat shall be executed periodically.
Base	ARObject, AbstractEvent, Referrable, RTEEvent, Re		ifier, AtpF	Feature, AtpStructureElement, Identifiable, Multilanguage
Aggregated by	AtpClassifier.atpFeature,	SwcIntern	alBehavio	pr.event
Attribute	Туре	Mult.	Kind	Note
offset	TimeValue	01	attr	The value makes an assumption about the time offset of the first activation of the RunnableEntity triggered by the mapped TimingEvent relative to the periodic activation of the time base of this TimingEvent. Unit: second.
period	TimeValue	01	attr	Period of timing event in seconds. The value of this attribute shall be greater than zero.

Table A.78: TimingEvent



Class	Traceable (abstract)	Traceable (abstract)				
Package	M2::MSR::Documentation	n::BlockEle	ements::R	equirementsTracing		
Note	This meta class represe	nts the abili	ty to be s	ubject to tracing within an AUTOSAR model.		
	Note that it is expected that its subclasses inherit either from MultilanguageReferrable or from Identifiable. Nevertheless it also inherits from MultilanguageReferrable in order to provide a common reference target for all Traceables.					
Base	ARObject, Multilanguag	eReferrable	e, Referra	ble		
Subclasses	StructuredReq, TimingC	Constraint, T	raceable1	Table, TraceableText		
Attribute	Туре	Mult.	Kind	Note		
trace	Traceable	*	ref	This association represents the ability to trace to upstream requirements / constraints. This supports for example the bottom up tracing		
		ProjectObjectives <- MainRequirements <- Features RequirementSpecs <- BSW/AI				
				Tags: xml.sequenceOffset=20		

Table A.79: Traceable

Class	Unit						
Package	M2::MSR::AsamHdo::Units						
Note	This is a physical measurement unit. All units that might be defined should stem from SI units. In order to convert one unit into another factor and offset are defined.						
	For the calculation from S Unit ) are applied as follov		e defined	unit the factor (factorSiToUnit ) and the offset (offsetSiTo			
	x [{unit}] := y * [{siUnit}] * f	actorSiTol	Unit [[unit]	/{siUnit}] + offsetSiToUnit [{unit}]			
	For the calculation from a the offset (offsetSiToUnit)			eciprocal of the factor (factorSiToUnit ) and the negation of			
	y {siUnit} := (x*{unit} - offs	etSiToUni	t [{unit}]) /	(factorSiToUnit [[unit]/{siUnit}]			
	Tags: atp.recommendedF	ackage=l	Jnits				
Base	ARElement, ARObject, C Element, Referrable	ollectable	Element,	Identifiable, MultilanguageReferrable, Packageable			
Aggregated by	ARPackage.element						
Attribute	Туре	Mult.	Kind	Note			
displayName	SingleLanguageUnit Names	01	aggr	This specifies how the unit shall be displayed in documents or in user interfaces of tools. The displayName corresponds to the Unit. Display in an ASAM MCD-2MC file.			
				Tags: xml.sequenceOffset=20			
factorSiToUnit	Float	01	attr	This is the factor for the conversion from SI Units to units.			
				The inverse is used for conversion from units to SI Units.			
				Tags: xml.sequenceOffset=30			
offsetSiToUnit	Float	01	attr	This is the offset for the conversion from and to siUnits.			
				Tags: xml.sequenceOffset=40			
physical Dimension	PhysicalDimension	01	ref	This association represents the physical dimension to which the unit belongs to. Note that only values with units of the same physical dimensions might be converted.			
				Tags: xml.sequenceOffset=50			

Table A.80: Unit



Class	UnitGroup					
Package	M2::MSR::AsamHdo::Units					
Note	This meta-class represents the ability to specify a logical grouping of units. The category denotes the unit system that the referenced units are associated to.					
	, ,	In this way, e.g. country-specific unit systems (CATEGORY="COUNTRY") can be defined as well as specific unit systems for certain application domains.				
	In the same way a group of equivalent units, can be defined which are used in different countries, by setting CATEGORY="EQUIV_UNITS". KmPerHour and MilesPerHour could such be combined to one group named "vehicle_speed". The unit MeterPerSec would not belong to this group because it is normally not used for vehicle speed. But all of the mentioned units could be combined to one group named "speed".					
	Note that the UnitGroup does not ensure the physical compliance of the units. This is maintained by the physical dimension.					
	Tags: atp.recommended	dPackage=l	JnitGroup	s		
Base	ARElement, ARObject, Element, Referrable	Collectable	Element,	Identifiable, MultilanguageReferrable, Packageable		
Aggregated by	ARPackage.element					
Attribute	Туре	Mult.	Kind	Note		
unit	Unit	*	ref	This represents one particular unit in the UnitGroup.		
				Tags: xml.sequenceOffset=20		

Table A.81: UnitGroup

Class	ValueSpecification (abstract)					
Package	M2::AUTOSARTemplates::CommonStructure::Constants					
Note	Base class for expressions leading to a value which can be used to initialize a data object.					
Base	ARObject					
Subclasses	AbstractRuleBasedValueSpecification, ApplicationValueSpecification, CompositeValueSpecification, ConstantReference, NotAvailableValueSpecification, NumericalValueSpecification, ReferenceValue Specification, TextValueSpecification					
Aggregated by	ApplicationAssocMapElementValueSpecification.key, ApplicationAssocMapElementValueSpecification. value, ArrayValueSpecification.element, CalibrationParameterValue.applInitValue, CalibrationParameter Value.implInitValue, ConstantSpecification.valueSpec, CryptoServiceKey.developmentValue, Diagnostic EnvDataCondition.compareValue, DiagnosticEnvDataElementCondition.compareValue, FieldSenderCom Spec.initValue, ISignal.initValue, DiagnosticEnvDataElementCondition.compareValue, FieldSenderCom Spec.initValue, NonqueuedReceiverComSpec.init Value, NonqueuedSenderComSpec.init Value, NonqueuedSenderComSpec.initValue, NvProvideComSpec.romBlockInitValue, NvProvideComSpec.romBlockInitValue, NvProvideComSpec.initValue, ParameterDataPrototype.initValue, ParameterProvideComSpec.initValue, ParameterRequireCom Spec.initValue, PersistencyDataRequiredComSpec.initValue, PersistencyKeyValuePair.initValue, Port DefinedArgumentValue.value, PortPrototypeBlueprintInitValue.value, RecordValueSpecification.field, SomeipEventDeployment.eventReceptionDefaultValue, StateManagementCompareCondition.compare Value, SwDataDefProps.invalidValue, VariableDataPrototype.initValue					
Attribute	Туре	Mult.	Kind	Note		
shortLabel	Identifier	01	attr	This can be used to identify particular value specifications for human readers, for example elements of a record type.		

Table A.82: ValueSpecification

Class	VariableDataPrototype			
Package	M2::AUTOSARTemplates::SWComponentTemplate::Datatype::DataPrototypes			
Note	A VariableDataPrototype represents a formalized generic piece of information that is typically mutable by the application software layer. VariableDataPrototype is used in various contexts and the specific context gives the otherwise generic VariableDataPrototype a dedicated semantics.			





Class	VariableDataPrototype					
Base	ARObject, AtpFeature, AtpPrototype, AutosarDataPrototype, DataPrototype, Identifiable, Multilanguage Referrable, Referrable					
Aggregated by	ApplicationInterface.indication, AtpClassifier.atpFeature, BswInternalBehavior.arTypedPerInstance Memory, BswModuleDescription.providedData, BswModuleDescription.requiredData, BulkNvData Descriptor.bulkNvBlock, InternalBehavior.staticMemory, NvBlockDescriptor.ramBlock, NvDataInterface. nvData, SenderReceiverInterface.dataElement, ServiceInterface.event, SwcInternalBehavior.arTypedPer InstanceMemory, SwcInternalBehavior.explicitInterRunnableVariable, SwcInternalBehavior.implicitInter RunnableVariable					
Attribute	Туре	Mult.	Kind	Note		
initValue	ValueSpecification	01	aggr	Specifies initial value(s) of the VariableDataPrototype		

Table A.83: VariableDataPrototype