

Setting up your Magic Mirror

Everything here is done from a phone or a laptop. You will not need a keyboard, a monitor, or a card reader.

1. Turn it on

Plug the mirror in. The first boot takes around a minute — longer than later boots, because it is setting itself up. The screen stays dark for most of it.


You will end up at one of two places:

- **The mirror knows your Wi-Fi already.** You see the clock, weather and calendar. Skip to step 3.
 - **The mirror has no Wi-Fi yet.** The screen tells you to join a network called `MagicMirror-Setup`. Carry on to step 2.
-

2. Put it on your Wi-Fi

The mirror makes its own temporary Wi-Fi network so you can tell it about yours. This network only exists until the mirror is online.

1. On your phone, open Wi-Fi settings and join `MagicMirror-Setup`. There is no password.
2. A setup page should open by itself. If it does not, open a browser and go to `http://192.168.4.1`.

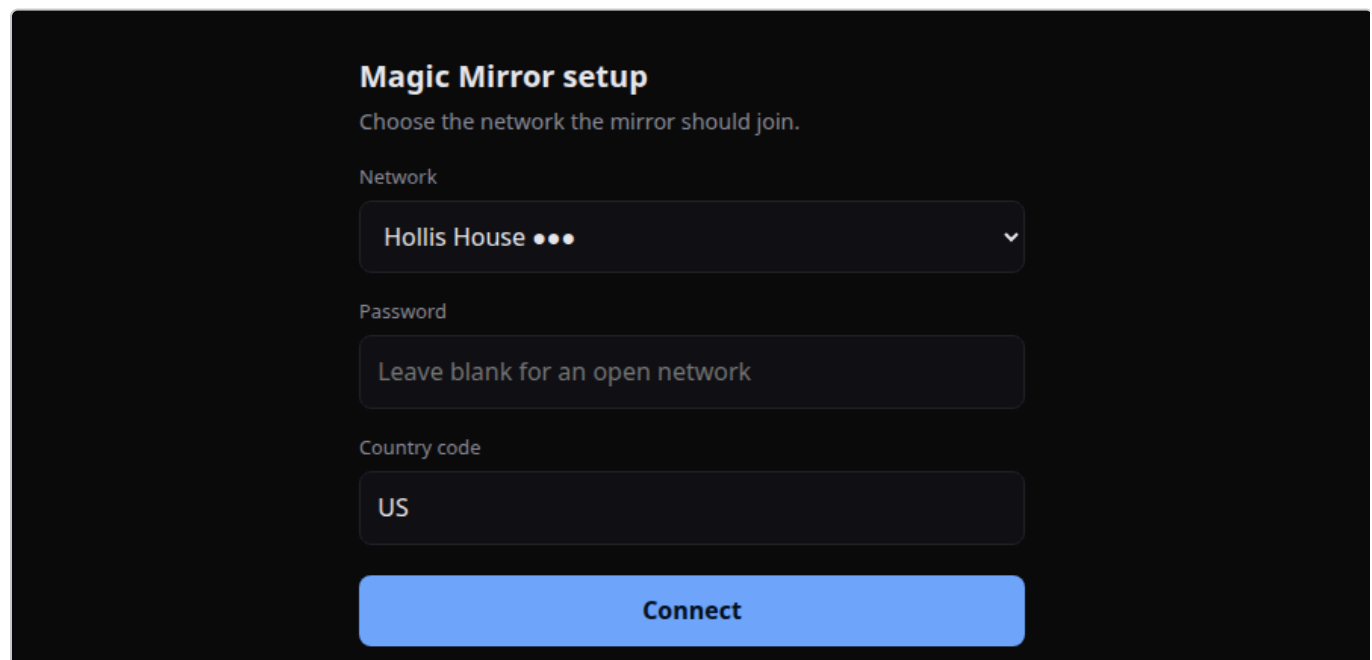

Magic Mirror setup

Choose the network the mirror should join.

Network

Hollis House ●●●

Password

Leave blank for an open network

Country code

US

Connect

3. Pick your network from the **Network** list, type its password, and press **Connect**.

Your phone will drop off `MagicMirror-Setup` as the mirror leaves it and joins your network instead. That is expected. Rejoin your normal Wi-Fi.

If your network is not in the list: the mirror scans once, before it starts its own network. Hidden networks never appear. 5 GHz networks never appear either — this hardware is 2.4 GHz only, so pick the 2.4 GHz network if your router offers both.

3. Find the settings page

Once the mirror is online it prints its own web address in the bottom-right corner of the screen, in small grey text.



Type that address into a browser on the same Wi-Fi. It will look like `http://192.168.1.96`.

You can also try `http://magicmirror.local`, which is easier to remember. It works on most computers and iPhones. Android is unreliable about `.local` names, which is exactly why the address is printed on the screen — the numbers always work.

The settings page has four tabs: **Layout**, **Calendars**, **General** and **Status**. Changes are not applied until you press **Save**, and a reminder appears next to the button whenever you have unsaved work.

4. Add your calendars

Open the **Calendars** tab and press **Add a calendar**.

Magic Mirror

DiscardSave

LayoutCalendarsGeneralStatus

Calendars

Each calendar you add shows up on the mirror in its own colour. You can choose which panels show which calendars in the Layout tab.

FamilyRemove

Name

Family

Just for you — this is not shown on the mirror.

Calendar link

https://calendar.google.com/calendar/ical/example%40gmail.com/private-7d41c0b98e2f/basic.ics

Paste the sharing link exactly as your calendar gives it to you — webcal:// links work.

- Google: Settings → your calendar → Integrate calendar → **Secret address in iCal format**
- Apple / iCloud: Calendar → share icon beside the calendar → tick **Public Calendar** → **Copy Link**
- Outlook: Settings → Calendar → Shared calendars → **Publish a calendar** → the **ICS** link

Treat the link like a password — anyone who has it can read the calendar.

Colour on the mirror

HouseRemove

Name

House

Just for you — this is not shown on the mirror.

Calendar link

webcal://p52-caldav.icloud.com/published/2/MTQ5ODc2NTQzMjEwOTg3Ng

Paste the sharing link exactly as your calendar gives it to you — webcal:// links work.

- Google: Settings → your calendar → Integrate calendar → **Secret address in iCal format**
- Apple / iCloud: Calendar → share icon beside the calendar → tick **Public Calendar** → **Copy Link**
- Outlook: Settings → Calendar → Shared calendars → **Publish a calendar** → the **ICS** link

Treat the link like a password — anyone who has it can read the calendar.

Colour on the mirror

Add a calendar

Each calendar needs two things:

- **Name** — for your reference only. It is never shown on the mirror.

- **Calendar link** — the sharing link from whoever hosts your calendar.

Where to find that link:

Provider	Where the link is
Google	Settings → your calendar → Integrate calendar → Secret address in iCal format
Apple / iCloud	Calendar → the share icon beside the calendar → tick Public Calendar → Copy Link
Outlook	Settings → Calendar → Shared calendars → Publish a calendar → the ICS link

Paste the link exactly as you are given it. Links beginning `webcal://` work as they are — there is no need to change them to `https://`.

Colour on the mirror is how you tell calendars apart on screen, so give each one a different colour. Each new calendar is given an unused colour automatically.

Treat these links like passwords. Anyone who has one can read that calendar. Do not post them anywhere public.

Press **Save**. Events appear within a few minutes.

A calendar you add here goes onto the mirror on its own. Panels showing every calendar pick it up as a matter of course, and panels set to show particular calendars have the new one added to their list for you. There is no second step to remember. If you would rather one panel left it out, untick it there — see step 6.

5. Set where you are

Open the **General** tab.

Magic Mirror

DiscardSave

LayoutCalendarsGeneralStatus

General

Where the mirror is, and what to call it.

Location & time

Used for the weather and for showing the right local time.

Town or postcode

Time zone

Units

64111

America/Chicago

Fahrenheit and miles per hour

A postcode or a town name — either works.

Software updates

The mirror installs new versions on its own. If a new version fails to start, it puts the previous one back.

Automatic updates

Version to follow

On — keep this mirror up to date

Released versions

Released versions is what you want on a mirror you rely on. Test versions takes new builds before they are released, to try them out before everyone else gets them — expect the occasional rough edge. Switching back brings this mirror to the released version.

Network name

What to type in a browser to reach this page.

Name

magicmirror

The mirror answers to `magicmirror.local` on your home network. Letters, numbers and hyphens only.

Start over

Two ways to put this mirror back the way it came.

Reset all settings

Forget the Wi-Fi network

Puts the layout, calendars, location and everything else on this page back to how the mirror arrived, including its name. It stays on your Wi-Fi and this page stays where it is.

The mirror leaves your network and offers **MagicMirror-Setup** again, the way it did on its first day. Your settings are kept, but you will need a phone to put it back online — and this page will stop answering until you have.


- **Town or postcode** — used for the weather forecast. A postcode or a town name both work.
- **Time zone** — makes the clock and your calendar events show the right local time.
- **Units** — Fahrenheit and miles per hour, or Celsius and kilometres per hour.
- **Network name** — what you type in a browser to reach this page. Changing it to `mirror` means the mirror answers to `mirror.local`. Letters, numbers and hyphens only.

Software updates are on by default and are best left that way. The mirror installs new versions on its own, and if a new version fails to start it puts the previous one back. Leave **Version to follow** on *Released versions* unless you have been asked to test something.

Press **Save**.

6. Arrange the screen

Open the **Layout** tab. Each box is a panel on the mirror.

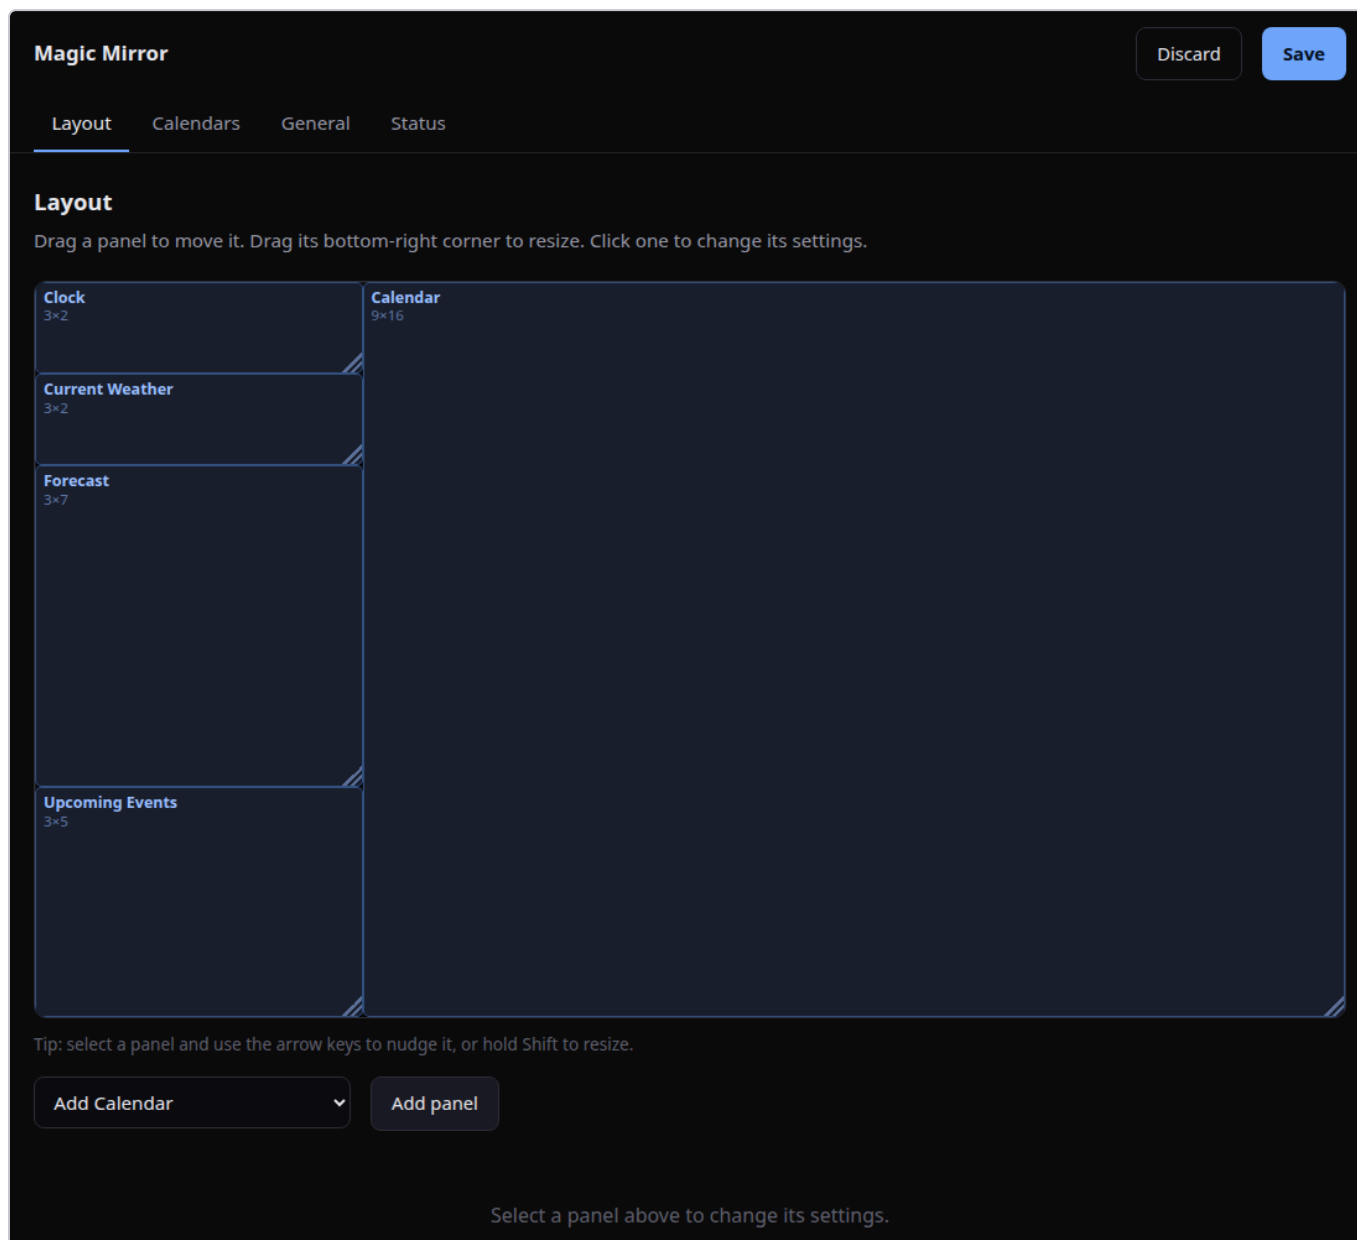

- **Move** a panel by dragging it.
- **Resize** it by dragging its bottom-right corner.
- **Change its settings** by clicking it — the options for that panel appear underneath.
- **Fine adjustments:** click a panel, then use the arrow keys to nudge it, or hold Shift and use the arrow keys to resize it.

- **Add** a panel by choosing a type from the dropdown and pressing **Add panel**. **Remove** one by selecting it and pressing **Remove panel**.

Panels that overlap are outlined in amber, with a warning underneath saying how many. The mirror will still run — whichever panel was added later simply covers the other — but it is usually not what you meant.

Choosing which calendars a panel shows

Click a panel that shows events — the month grid, or an upcoming-events list — and look for the **Calendars** setting underneath. It lists every calendar you added in step 4, with a tickbox and a colour dot for each.

Leave them all unticked and the panel shows everything. That is the setting to keep if you simply want all your calendars on the mirror, and it is the reason a newly added calendar usually appears on its own.

Tick specific ones and the panel shows only those. This is how you give the month grid every calendar while an events list beside it shows only the children's, or put the household calendar on its own panel.


Either way, calendars you add later look after themselves: a panel showing everything simply includes the new one, and a panel with a specific list has it added to that list. Come here only when you want a panel to differ from the rest — untick a calendar to drop it from this panel alone.

Unticking every box does not hide everything; it returns the panel to showing all calendars. To leave a panel with no events at all, remove the panel.

Press **Save**. The mirror redraws immediately.

7. Check it is working

Open the **Status** tab. This is the page to look at whenever something seems wrong.

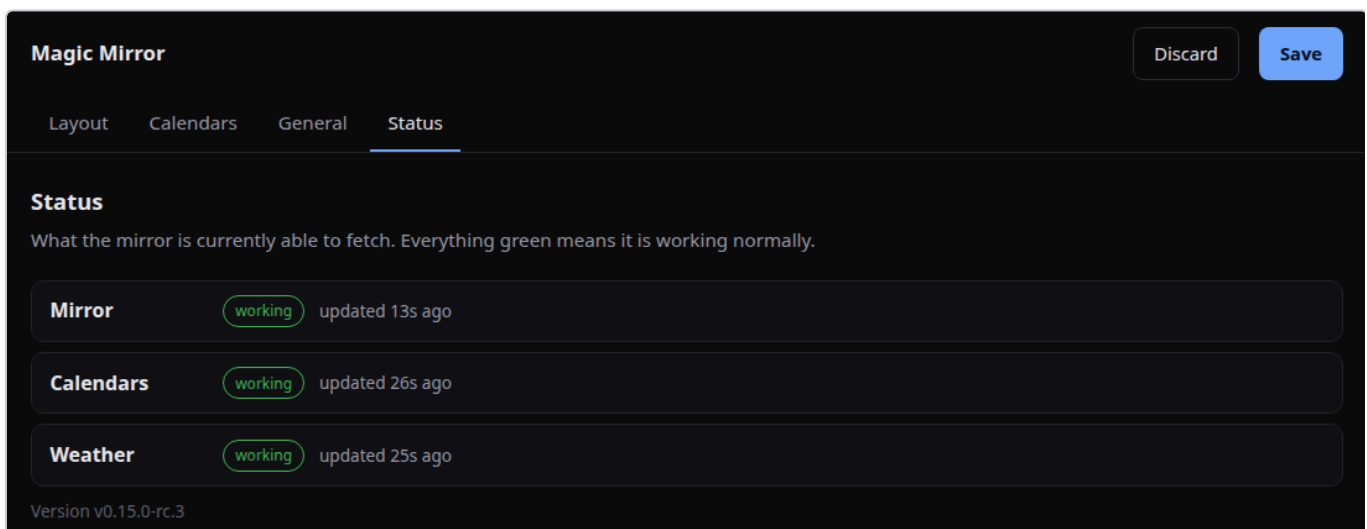

Each row is one thing the mirror fetches, with a label saying how it is doing:

Label	Meaning
working	Fetches recently. Nothing to do.
using older data	The last fetch failed, so it is showing what it had. Often fixes itself.
not working	Cannot fetch at all. The reason is printed beside it.
waiting	Has not tried yet. Normal for the first minute after a restart.

On a healthy mirror every row says *working*. The version the mirror is running is at the bottom of the page.

Starting over

At the bottom of the **General** tab there are two buttons. Both ask before doing anything.

Reset all settings puts the layout, calendars, location and everything else back to how the mirror arrived, including its name. It stays on your Wi-Fi, and this page stays where it is. Use this when you have made a mess of the layout and want a clean start.

Forget the Wi-Fi network makes the mirror leave your network and offer `MagicMirror-Setup` again, exactly as it did on its first day. Your settings are kept. Use this when you move house or change your router — then go back to step 2. You will need a phone to put it back online, and the settings page will stop answering until you have.

If something goes wrong

The screen is blank. Give it a full minute from power-on. If it stays dark, unplug it and plug it back in — the mirror restarts itself if it locks up, but only after about thirty seconds.

The settings page will not load. Check the address printed in the corner of the mirror's screen; it changes if your router hands out a different one. Make sure you are on the same Wi-Fi as the mirror. If `magicmirror.local` fails, use the numeric address.

Weather says "not working". Almost always the location. Try a postcode rather than a town name.

A calendar says "not working". The link has usually expired or been regenerated. Fetch a fresh sharing link and paste it in again.

A calendar says "working" but its events are not on screen. It has been unticked on the panel you are looking at. Open the Layout tab, click that panel, and check its **Calendars** setting (step 6).

The mirror shows old information. Look at the Status tab. *Using older data* means it cannot reach the internet at the moment — check your router before anything else.

It dropped off Wi-Fi and did not come back. The mirror tries to recover on its own, escalating over several minutes and restarting itself as a last resort. Give it five minutes before intervening. If it still cannot get on, it puts up `MagicMirror-Setup` again so you can redo step 2.