


1590XX SIDE ELEVATION (height study, projected) -- PRINT AT 100%

ALL heights DEFAULT (brief's vertical budget). Front = left, back wall = right.

△ the jack-axis height and the rear-wall hole must match -- see the red note.

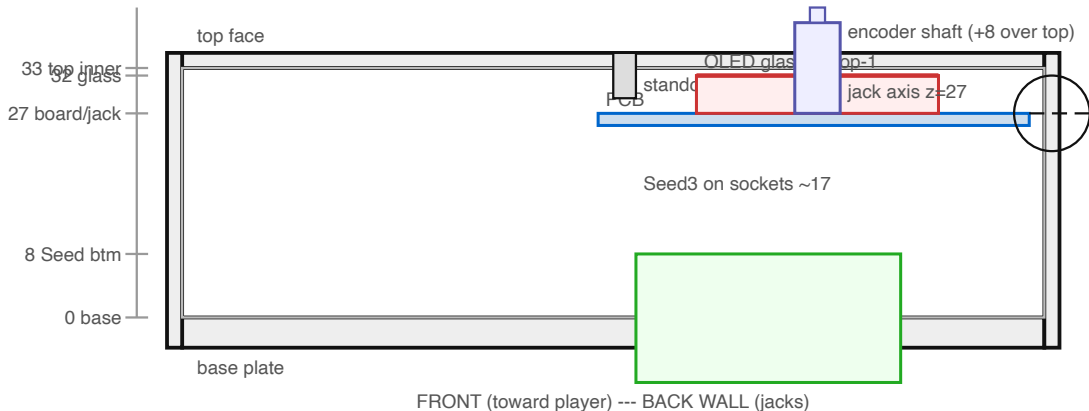

△ JACK AXIS (z=27, board level) is HIGH on the 33 mm wall. For a mid-wall jack:
lower the board (compresses the Seed space below) OR use a jack whose axis sits
below the board OR keep panel-mount jacks on flying leads (height-independent).