1590XX template -- OUTSIDE, ink up, drill from outside -- PRINT AT 100%

Register by CENTRE: mark the box's diagonals, cross = centre, align the blue crosshair. Box ext ~145x121x39.
IN on the RIGHT, OUT on the LEFT (convention); encoder right of the centred screen. Positions shared with the PCB.

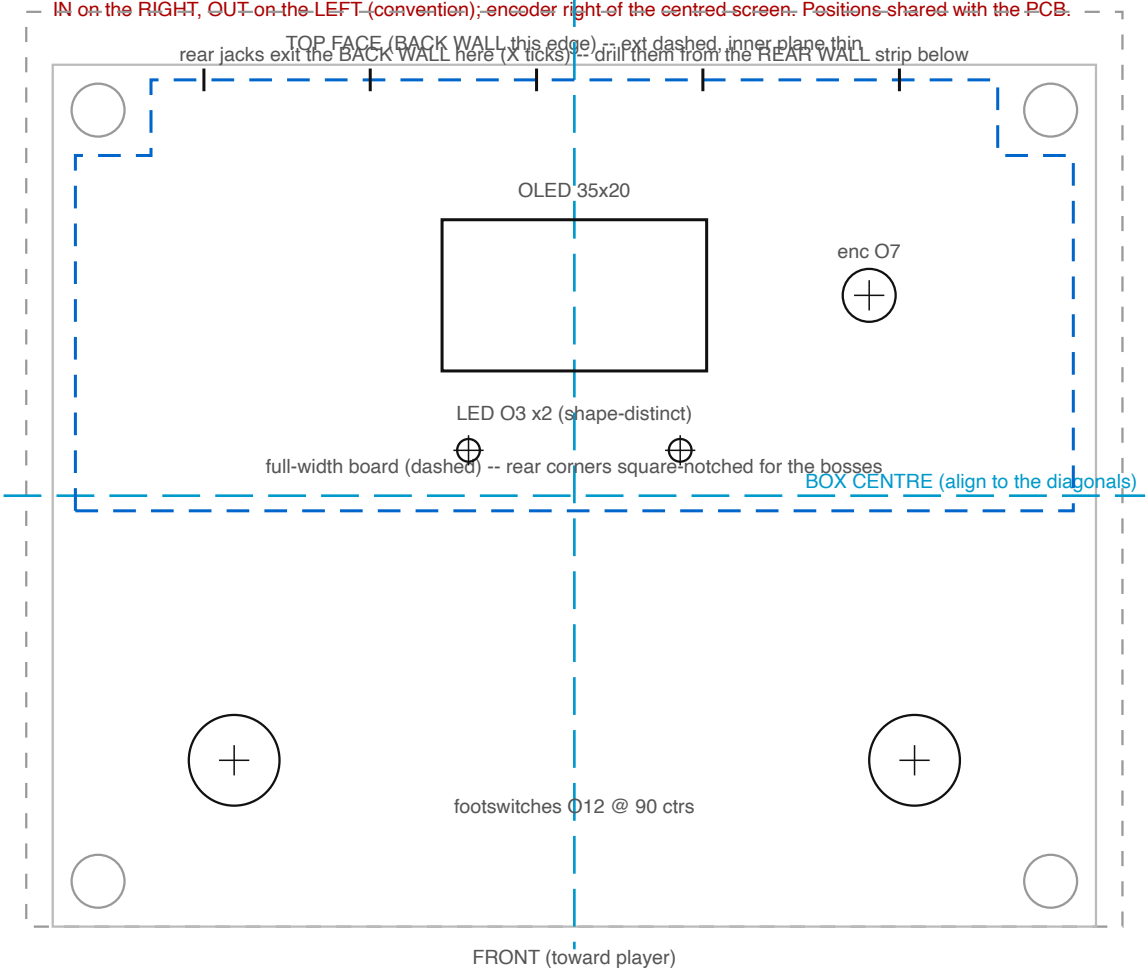

REAR WALL -- tape OUTSIDE, you are BEHIND the pedal (so this is MIRRORED from the top view).
Centre-register (mark the back-wall centre + base). Best accuracy for board jacks: drill through the finished board.

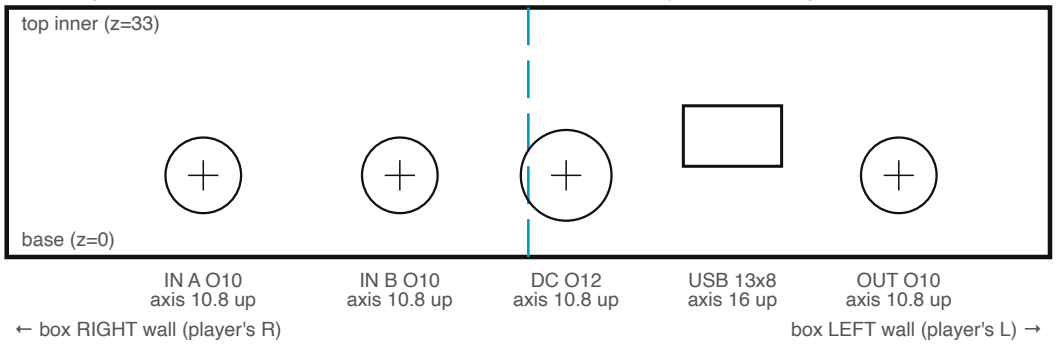

this bar MUST measure 100.0 mm -- if not, fix the print scale