1590XX template -- OUTSIDE, ink up, drill from outside -- PRINT AT 100%

Box NET: TOP FACE centre; REAR WALL above (jacks); LEFT WALL to the left (HP jack); FRONT = small registration tab below. Each panel: FOLD -> top-face band -> panel -> LID SEAM.
Fold each panel over its wall; rear jack columns project straight down. IN on the RIGHT, OUT on the LEFT; encoder right of screen. IN B = Neutrik NCJ9FI-H combo (O24).

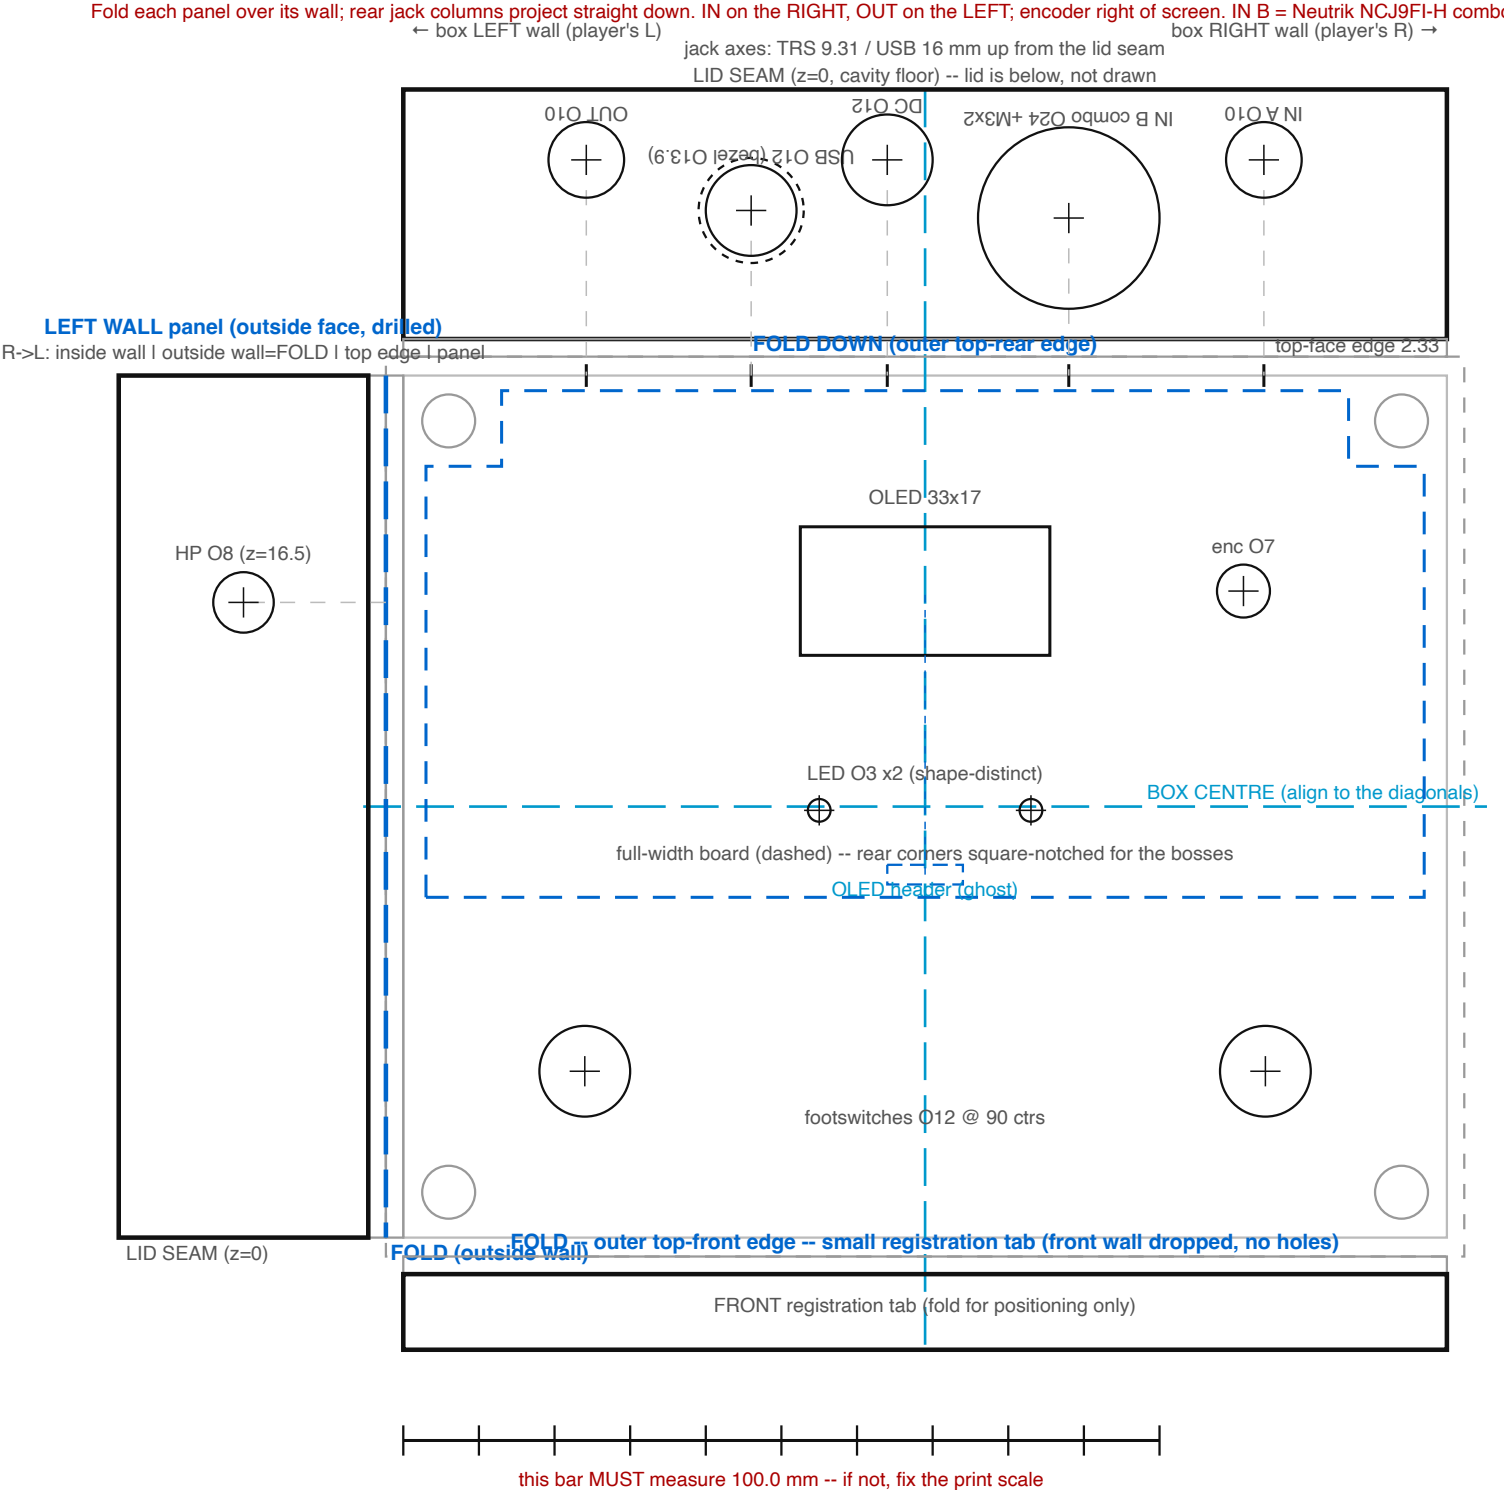

this bar MUST measure 100.0 mm -- if not, fix the print scale