1590XX drilling template -- tape OUTSIDE, ink up, drill from outside -- PRINT AT 100%

Fold each wall panel over its wall (jack columns project straight down). Register by the CENTRE crosshair (box diagonals). IN on the RIGHT, OUT on the LEFT. Confirm the 100 mm ruler before drilling.

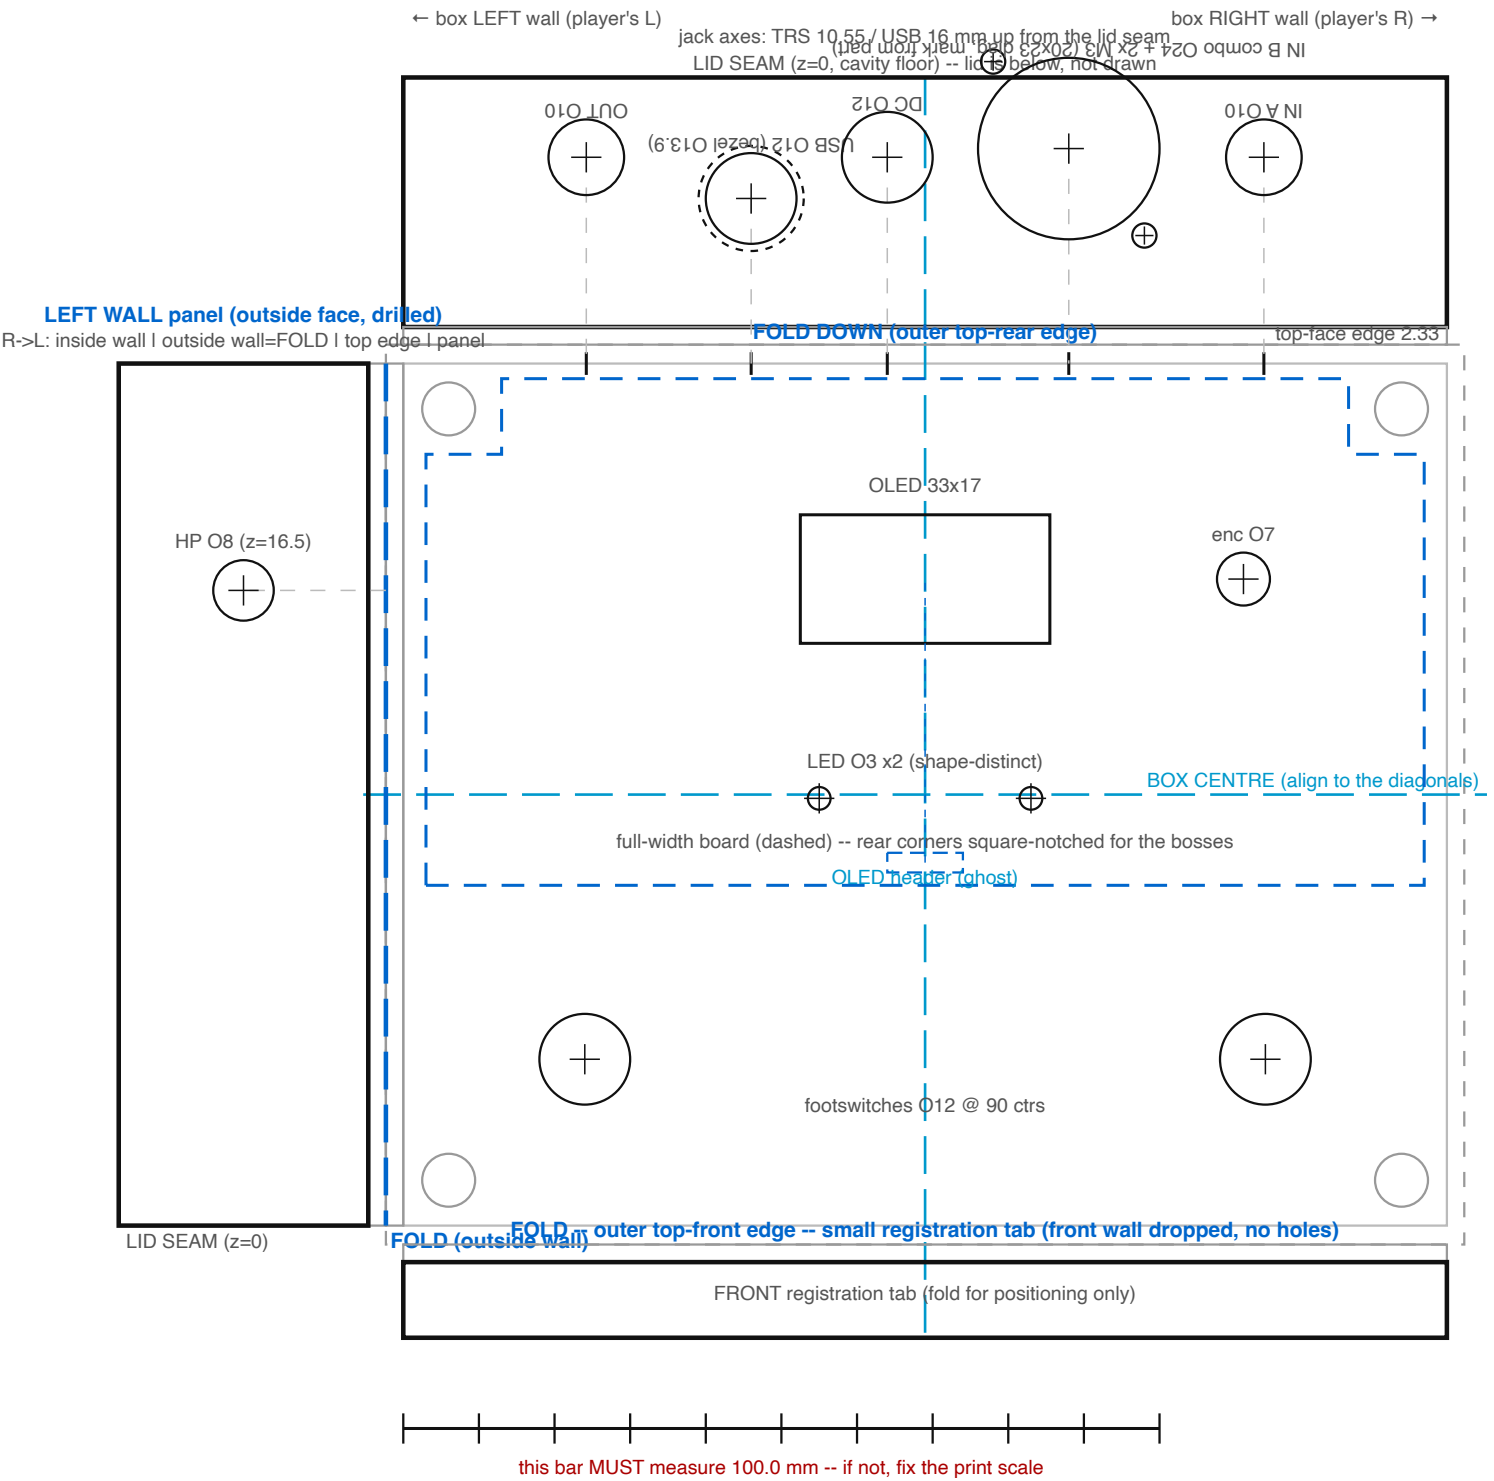

this bar MUST measure 100.0 mm -- if not, fix the print scale