1590XX template -- OUTSIDE, ink up, drill from outside -- PRINT AT 100%

Box NET: TOP FACE centre; REAR WALL panel above, FRONT WALL panel below. Each panel: FOLD (outer edge) -> top-face band -> par
Fold each panel down over its wall; rear jack columns project straight down. IN on the RIGHT, OUT on the LEFT; encoder right of screen.

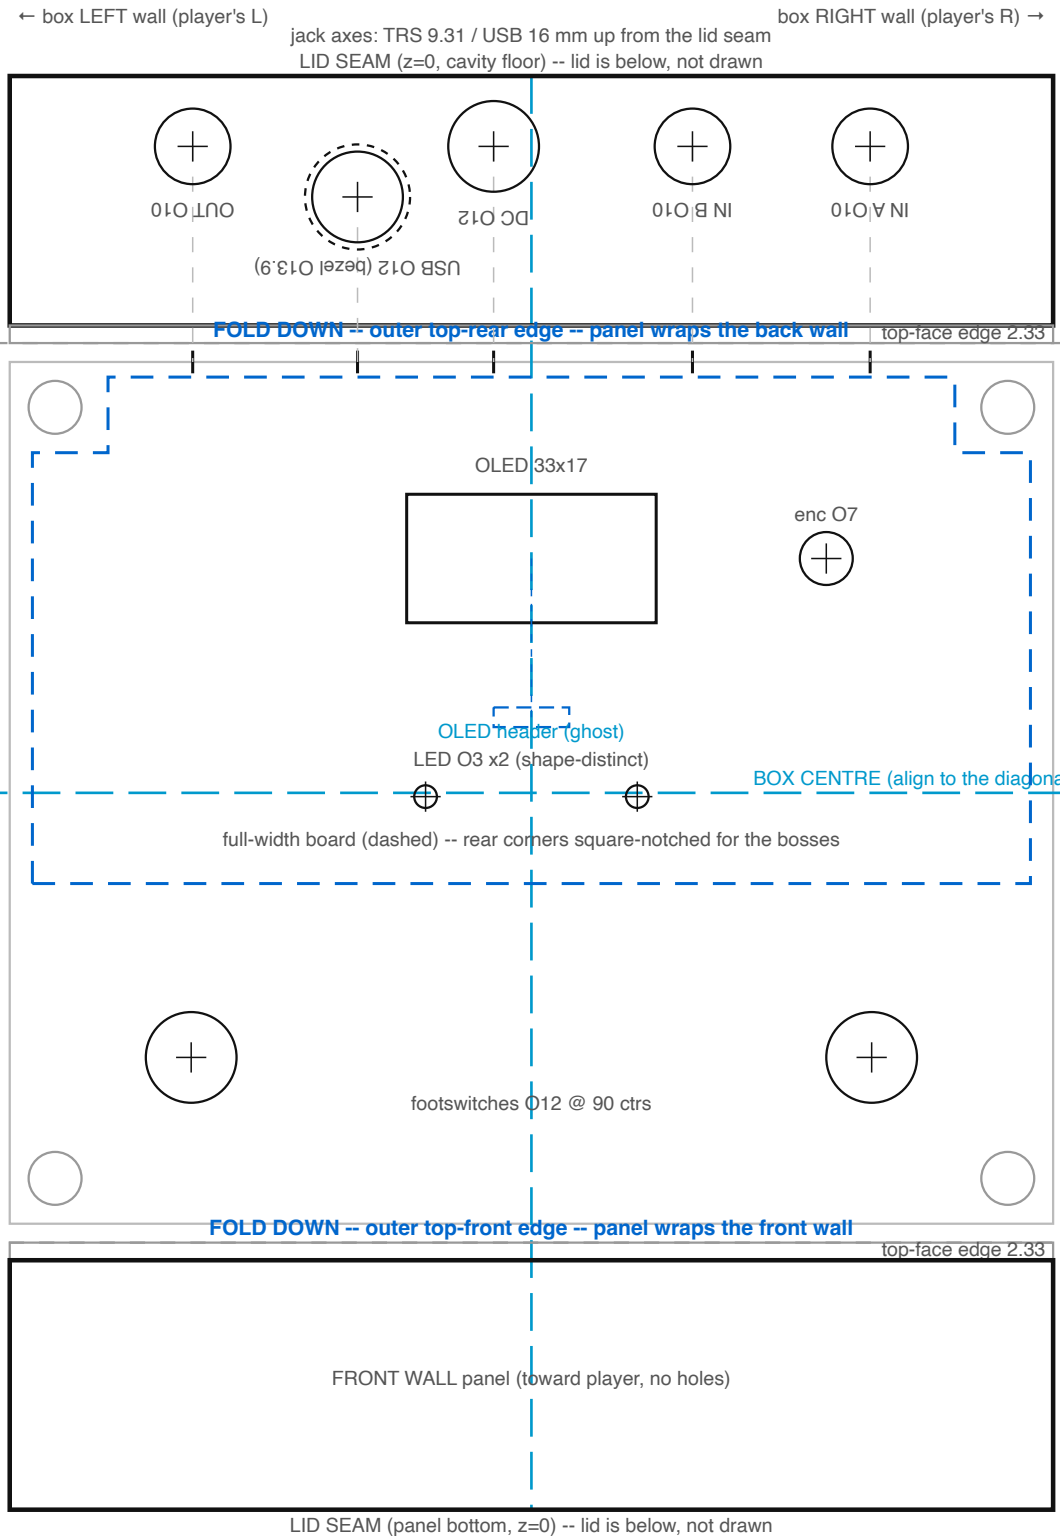

this bar MUST measure 100.0 mm -- if not, fix the print scale