

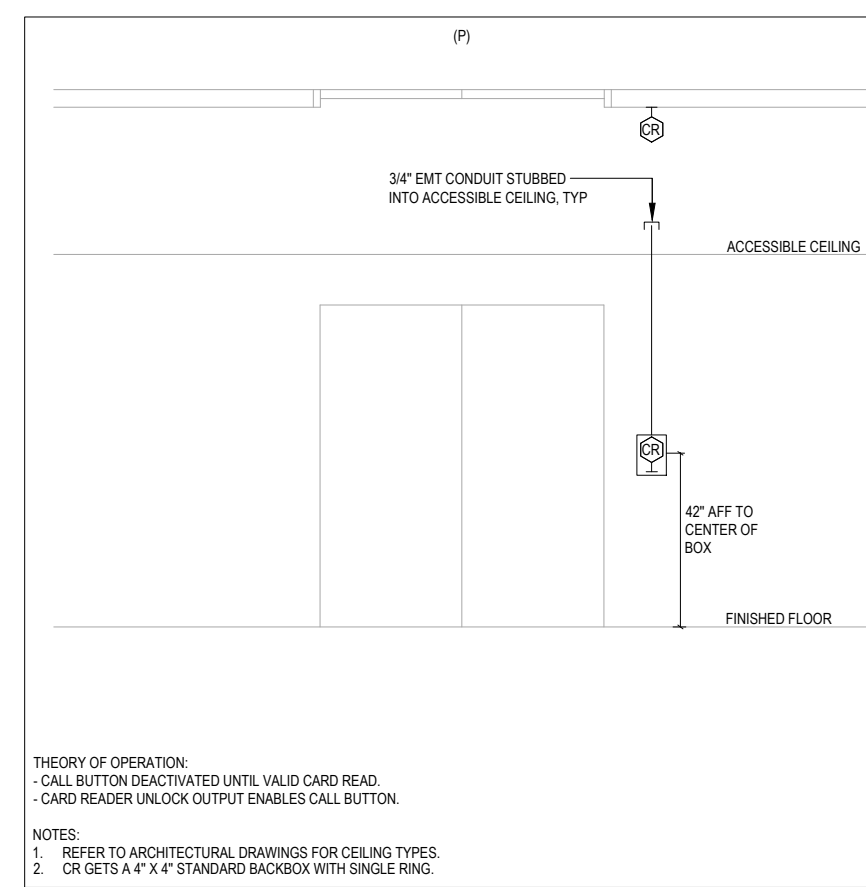
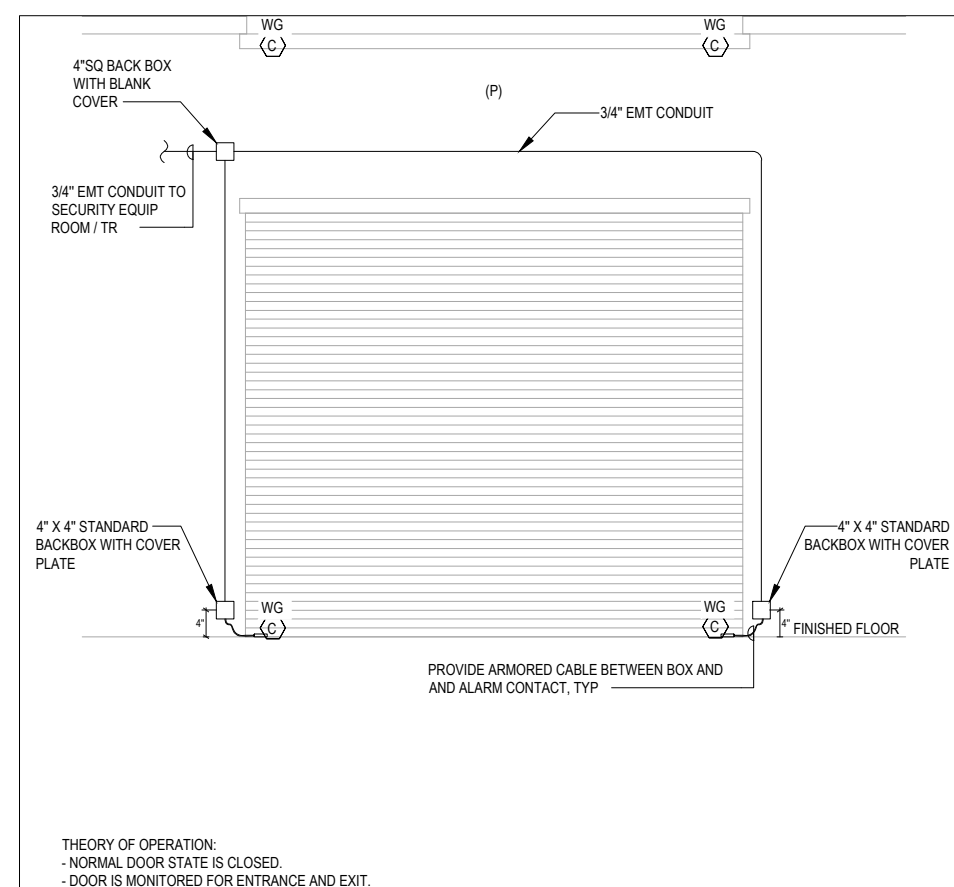


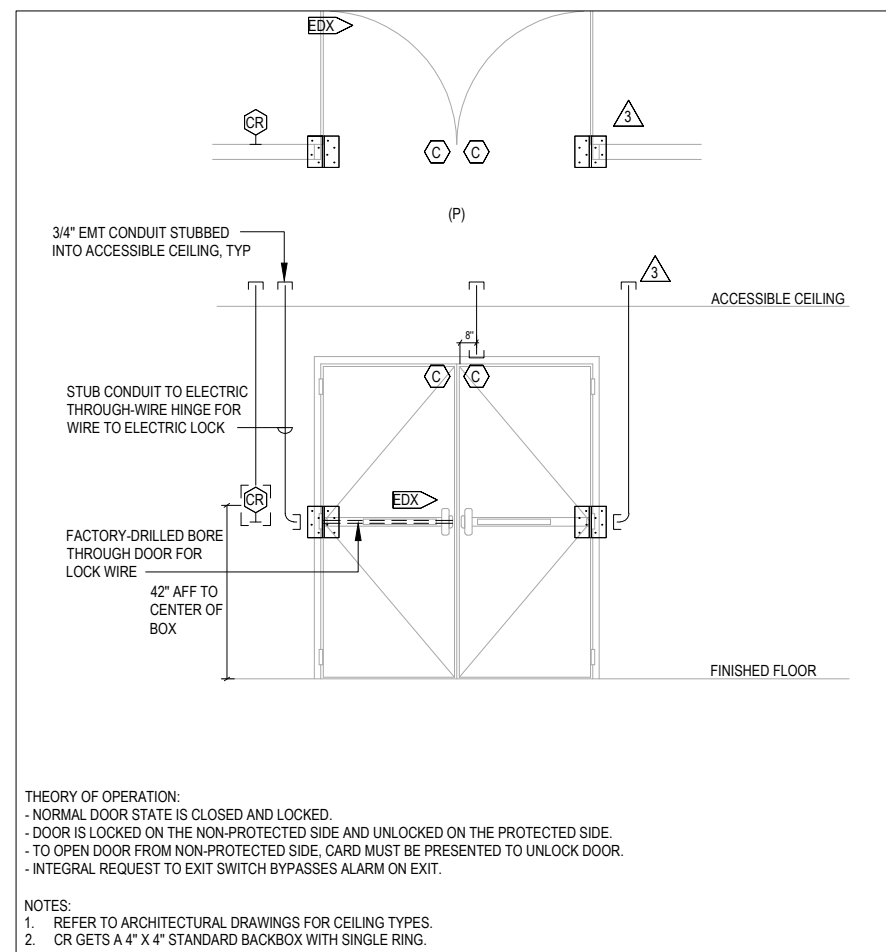

DOOR DETAIL SHEET NOTES

1. REFER TO SHEET D-1 FOR ABREVIATIONS, GENERAL NOTES, AND SYMBOLS DEFINITIONS.
2. THE DIAGRAMS ON THIS SHEET ARE SHOWN AS A GUIDELINE FOR ROUGH IN CONFIGURATION. INDIVIDUAL DOORS MAY VARY ADJUST THE INSTALLATION TO SUIT EACH CASE.
3. PROVIDE THE FOLLOWING INFORMATION TO THE ARCHITECT: MATERIALS AND DEVICE LOCATIONS.
4. PROVIDE THE DOOR SCHEDULE FOR INDIVIDUALLY ASSIGNED DOOR DETAILS.
5. SUBMIT INDIVIDUAL DOOR DETAILS TO MATCH PROJECT REQUIREMENTS.
6. DASHED COMPONENTS AND LINES INDICATE ITEMS ON THE OPPOSITE SIDE OF THE WALL.
7. PROVIDE 1" (1") CUT POINT FROM ABOVE DOOR JUNCTION BOX TO ACCESSIBLE CEILING SLIP OR PRIMARY PATHWAY (OR SERVING TELECOM ROOM, IF ANY) CUTOFF IS PROVIDED.
8. INSTALL JUNCTION BOXES AND POWER SUPPLIES ABOVE ACCESSIBLE CEILINGS ON THE INSIDE OF DOORS. WHERE COMPONENTS CANNOT BE BELOW CEILING, OR IN OPEN TO WARE AREAS, INSTALL JUNCTION BOXES FLUSH TO WALL AND INSTALL CONDUITS TO THE WALL.
9. TERMINATE SECURITY CABLE TO TRANSFER HINGE AND LOCK BODY. COORDINATE INSTALLATION WITH THE DOOR HARDWARE PROVIDER.
10. FOR DOORS WITH FAI SAFE LOCKING HARDWARE AND IN THE PATH OF EGRESS, ACTIVATION OF THE FAI-ALARM SHALL BE PROVIDED BY THE FAI-ALARM (OR FAI SAFE) DOOR. IN THE PATH OF EGRESS, DOORS WILL REMAIN LATCHED. PROVIDE FAI ALARM SYSTEM INCLUDING THE LATCHER THAT WILL BE PROVIDED BY THE ARCHITECT. PROVIDE THE FAI-ALARM WITH ARCHITECTURAL DRAWINGS, DOOR HARDWARE SCHEDULE AND SPECIFICATIONS, AND FIRE ALARM DRAWINGS FOR DOORS IN THE PATH OF EGRESS.
11. DOORS AND FRAMES ARE FACTORY-FABRICATED FOR SECURITY DEVICES INCLUDING LOCK

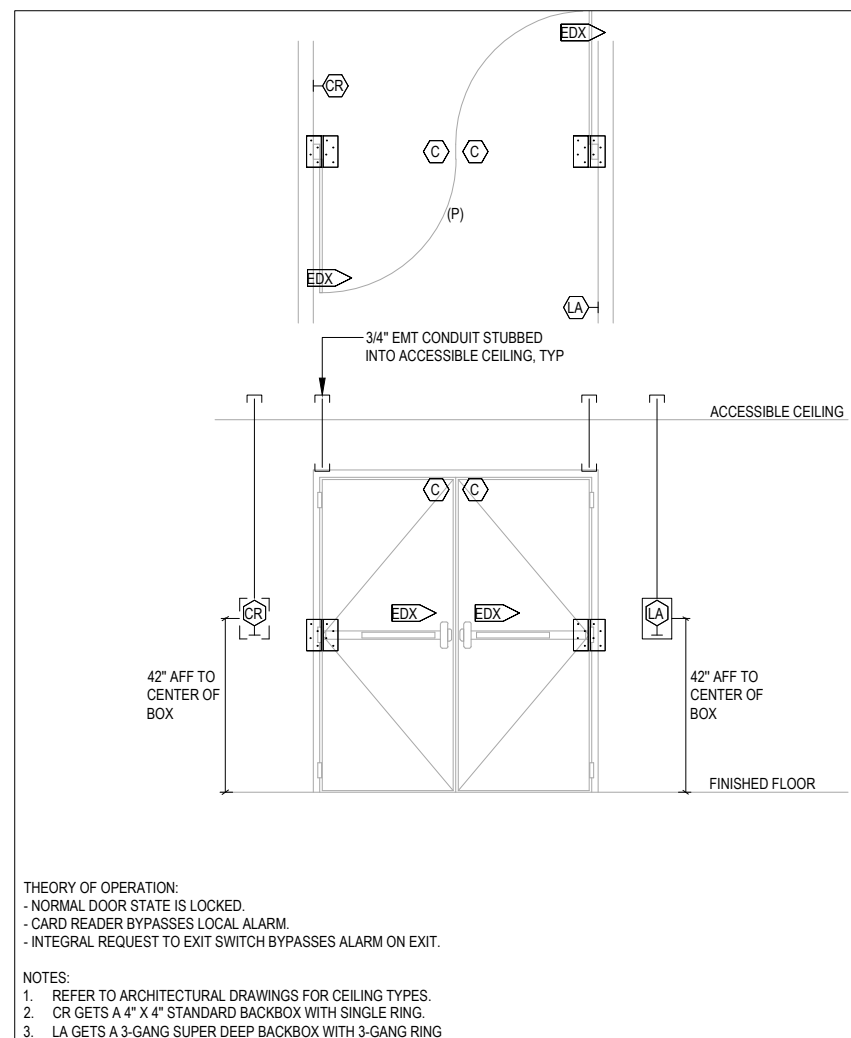