



Overview


DC & Mounting Holes

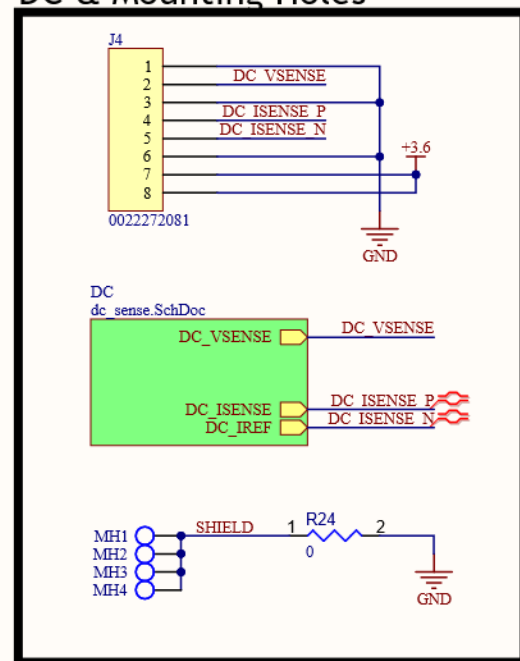

Phases

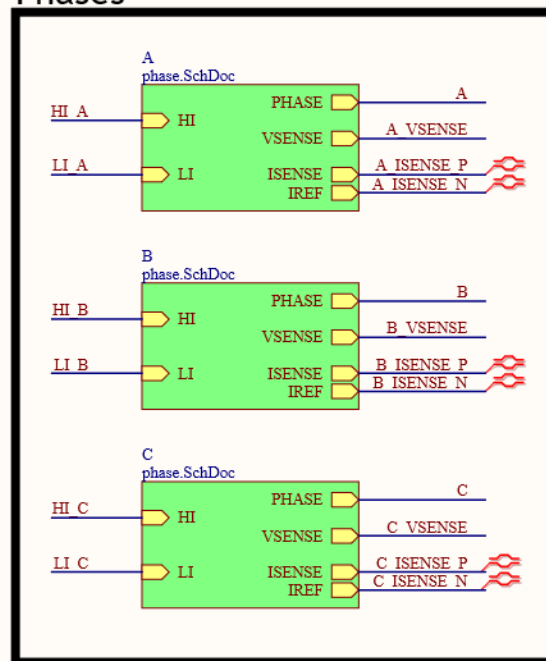


Phase Connections

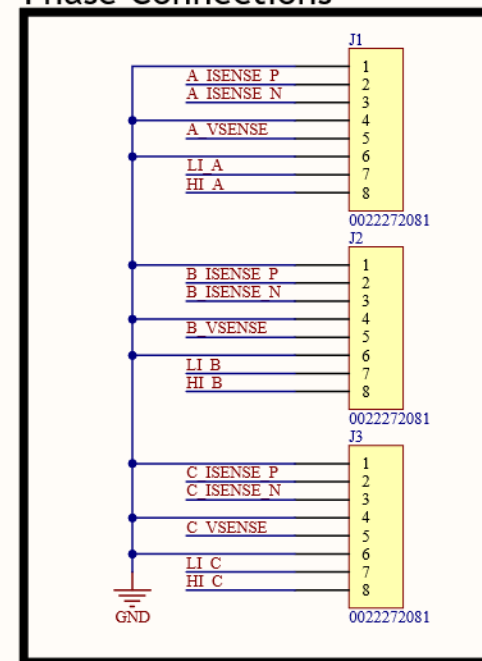

Title		
Size	Number	Revision
A4		
Date:	6/07/2026	Sheet of
File:	C:\Users\...\top.SchDoc	Drawn By:

Phase: GaN Half Bridge & Current Sensing

GaN Half Bridge

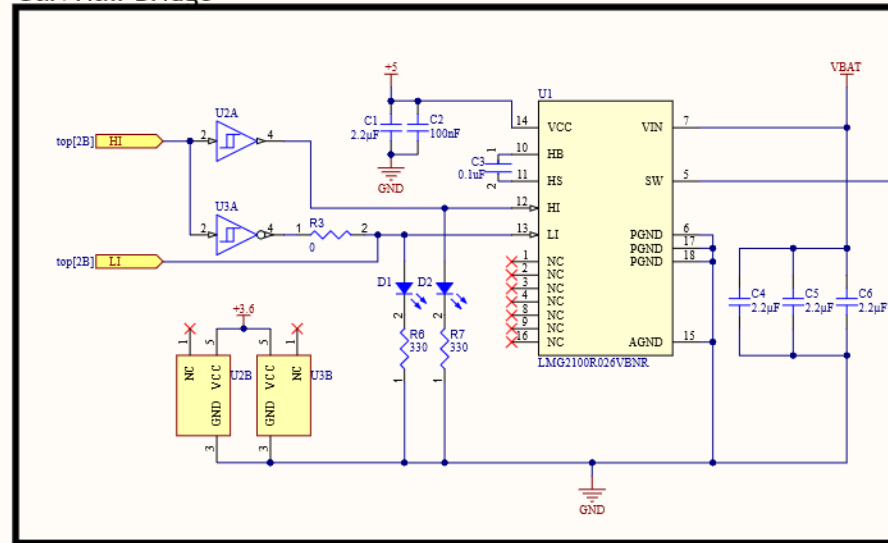


Single- and Dual-PWM setups:
 *3PWM: OR installed, buffer installed, float LI
 *6PWM: OR DNP, buffer DNP + short A to Y (see below), use LI


Went light on nearby capacitance here, only 6.6uF, because:

- *Makes layout simpler
- *I don't actually know how much I need
- *"Just adding more" is trouble - more solder issues
- *Worst case, can stack additional caps on top.

See below for 4-layer layout example from datasheet.

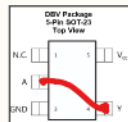

Phase Current Sensing

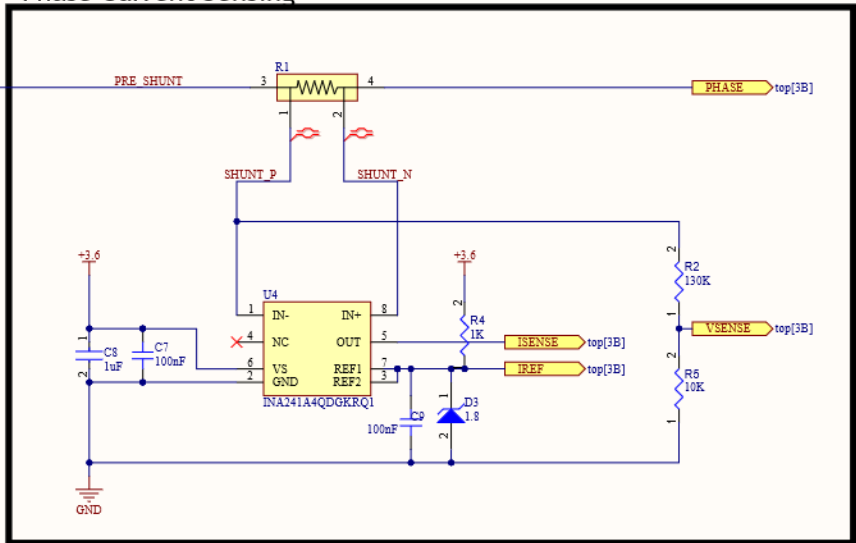

IREF might be used if Vref diodes have variability, or if noise becomes a problem.
 5V used here for routing purposes. Won't saturate before destroying (but maybe not!) STM32 ADC, but worth it for a smaller 36V PDN.

Title		
Size	Number	Revision
A3		
Date:	6/07/2024	Sheet of
File:	C:\Users\phase\SchDoc	Drawn By:

