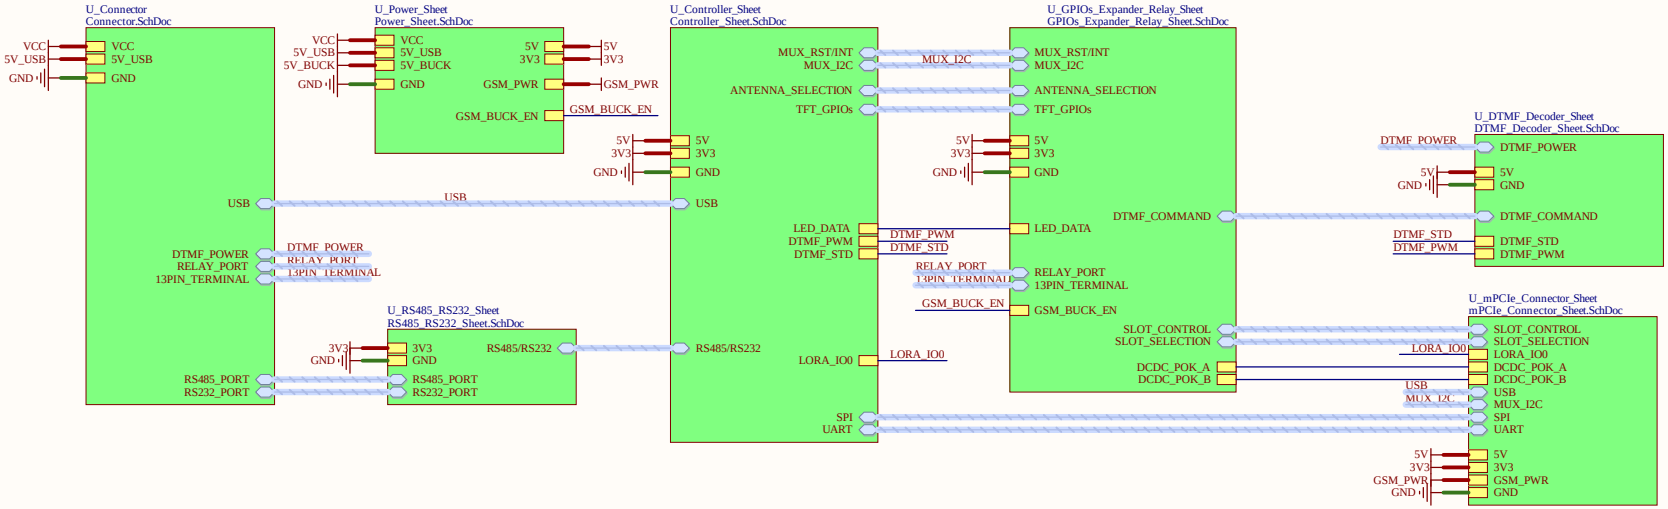
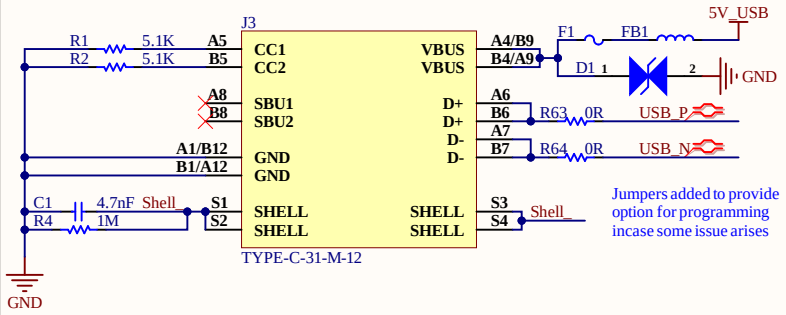


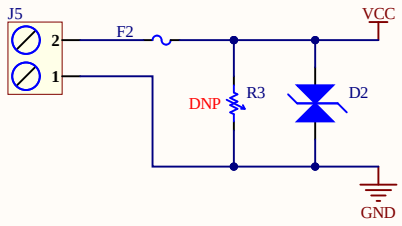

Cannot open file
D:\eSpark-Consultants\eSpark-Hardware\Altium Template\espark-consulting-group-800x300.jpg.
File does not exist.

| | |
|---|---|
| Title: Top_Sheet.SchDoc | |
| File: Baseboard-v2.0.PrjPcb | |
| Date: 10/12/2023 | Page Num: 1 |
| Drawn By: Huzaifa Ali | Page Total: 8 |

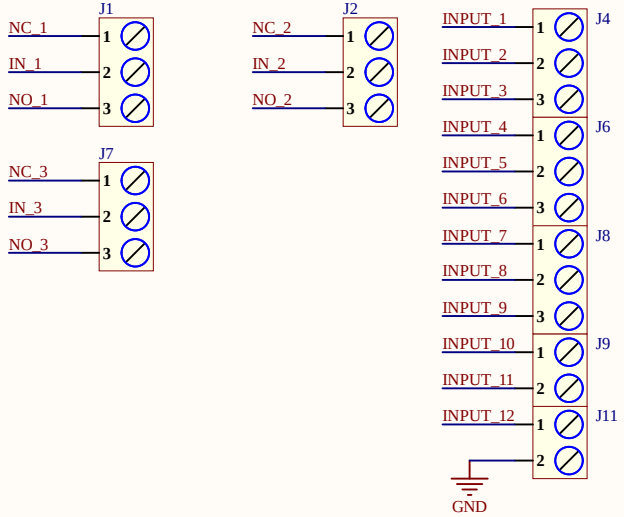
## USB to Power Board



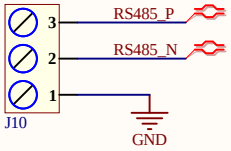

## 9-30V DC INPUT



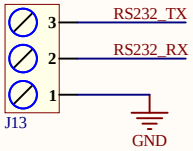

## SCREW TERMINALS





## PORT for RS485

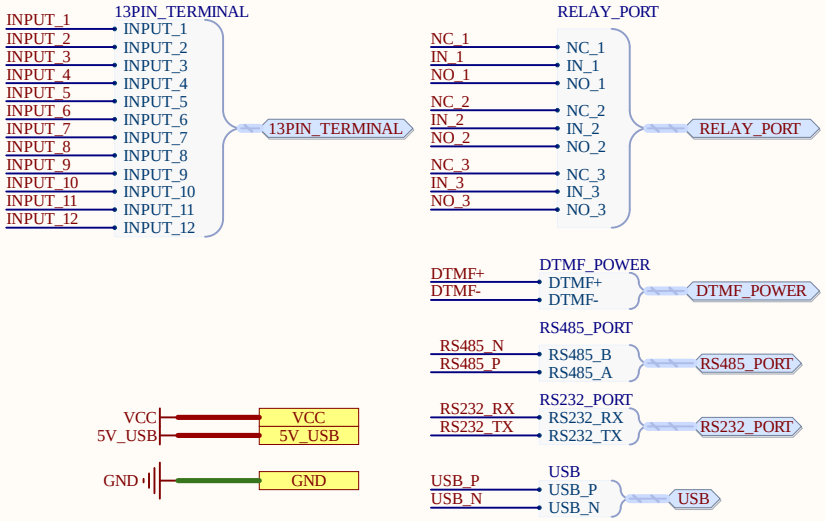



## PORT for RS232




## PORT for DTMF

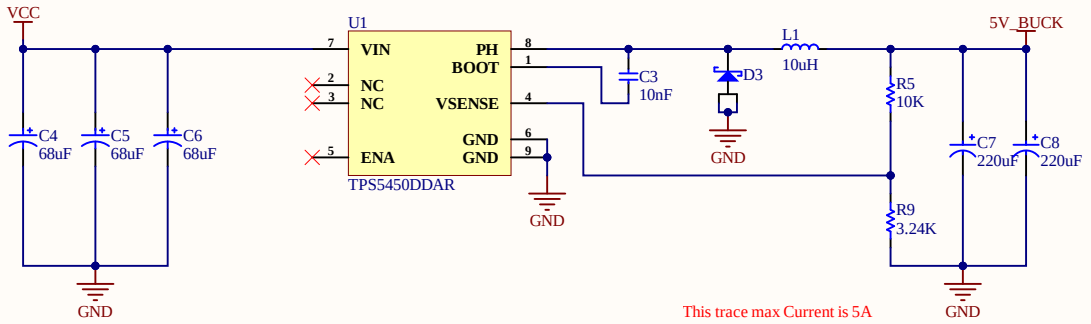


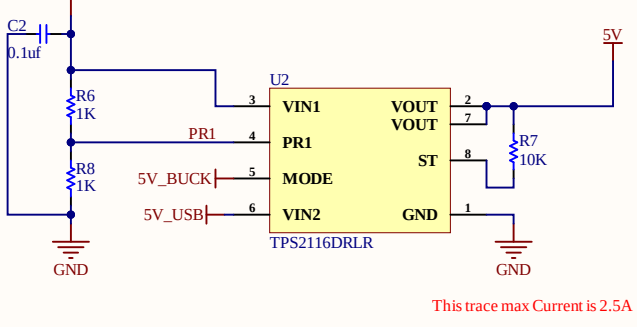

Cannot open file D:\eSpark-Consultants\eSpark-Hardware\Altium Template\espark-consulting-group-800x300.jpg. File does not exist.

| | |
|---|---|
| Title: Connector.SchDoc | |
| File: Baseboard-v2.0.PrjPcb | |
| Date: 10/12/2023 | Page Num: 2 |
| Drawn By: Huzaifa Ali | Page Total: 8 |

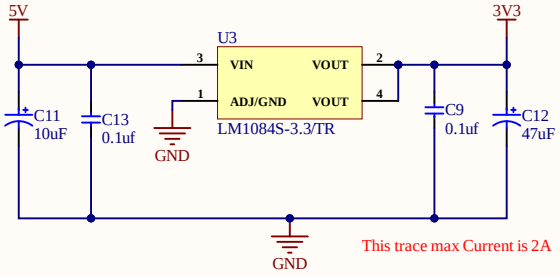
## 5V BUCK REGULATOR



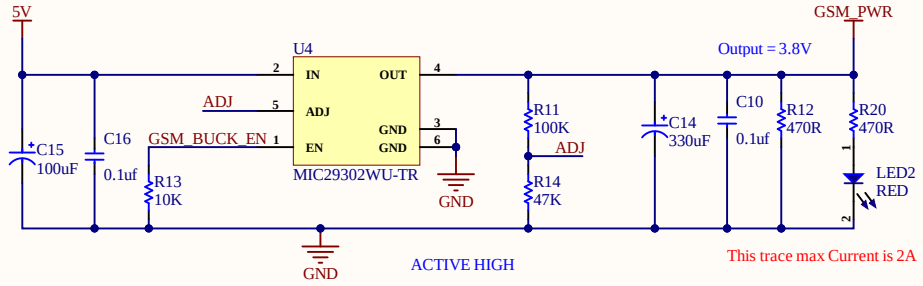

## ORING CIRCUIT



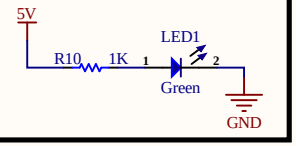

## LDO 3.3V

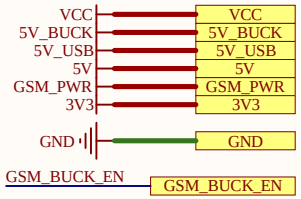



## BUCK FOR GSM POWER

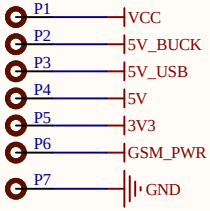



## POWER LED



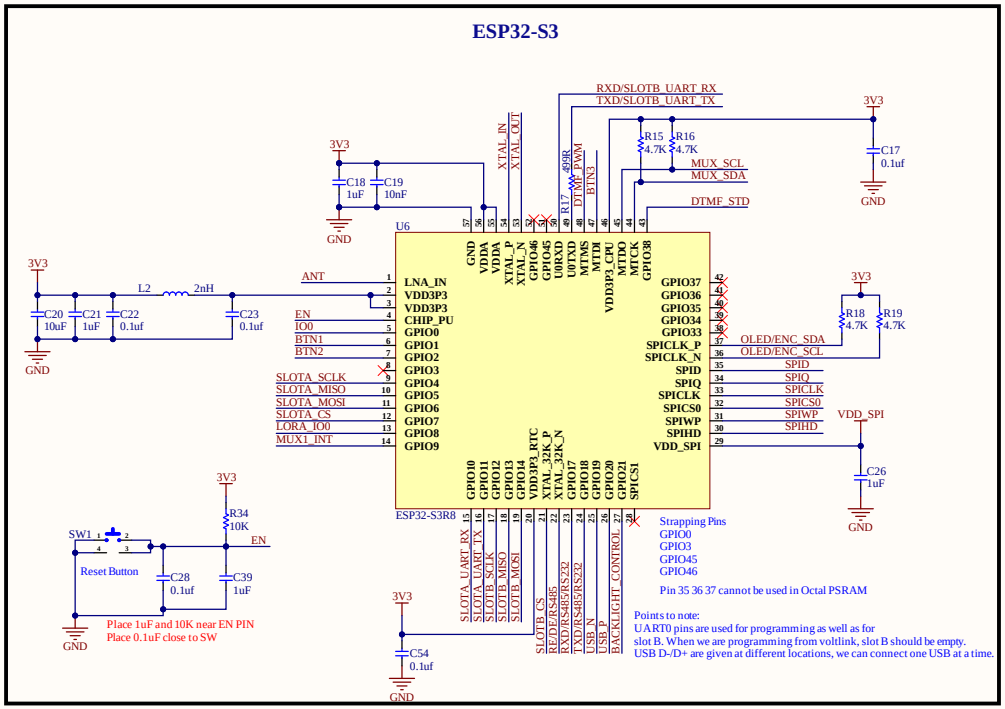



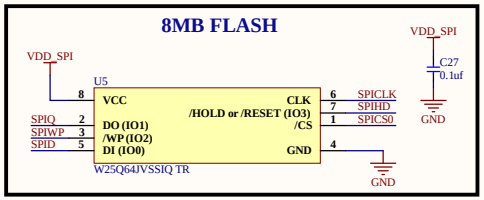

## TEST POINTS

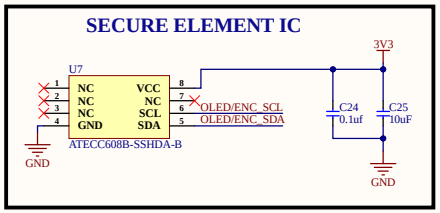


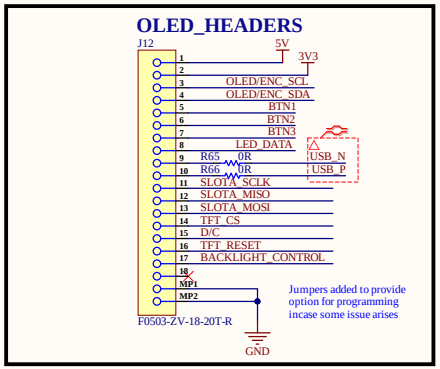

Cannot open file D:\eSpark-Consultants\eSpark-Hardware\Altium Template\espark-consulting-group-800x300.jpg. File does not exist.

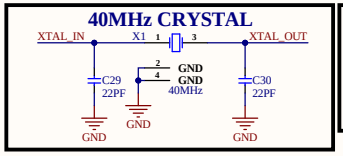
| | |
|---|---|
| Title: Power_Sheet.SchDoc | |
| File: Baseboard-v2.0.PrjPcb | |
| Date: 10/12/2023 | Page Num: 3 |
| Drawn By: Huzaifa Ali | Page Total: 8 |

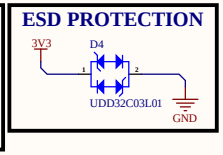


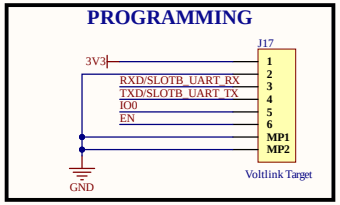



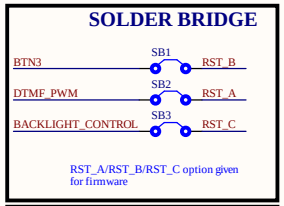







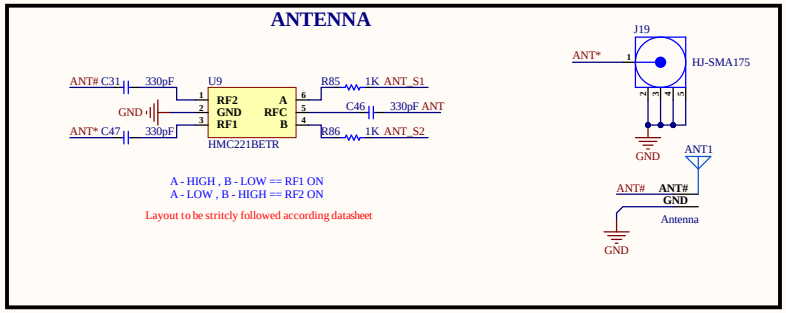







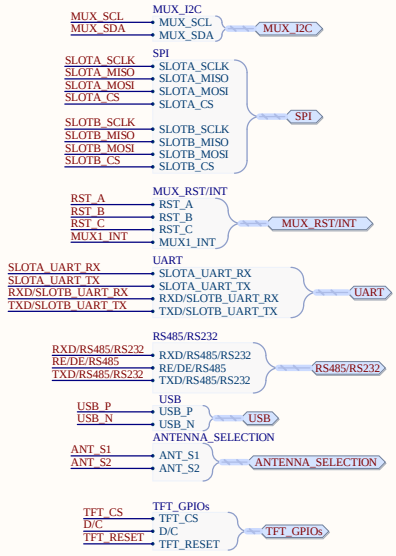



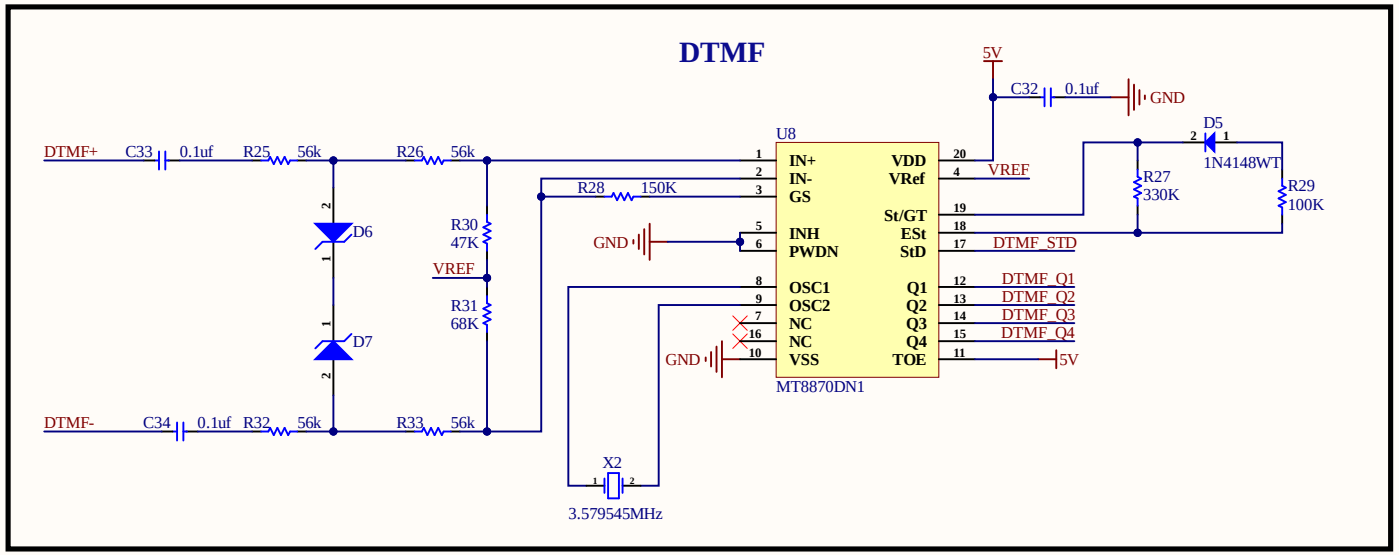



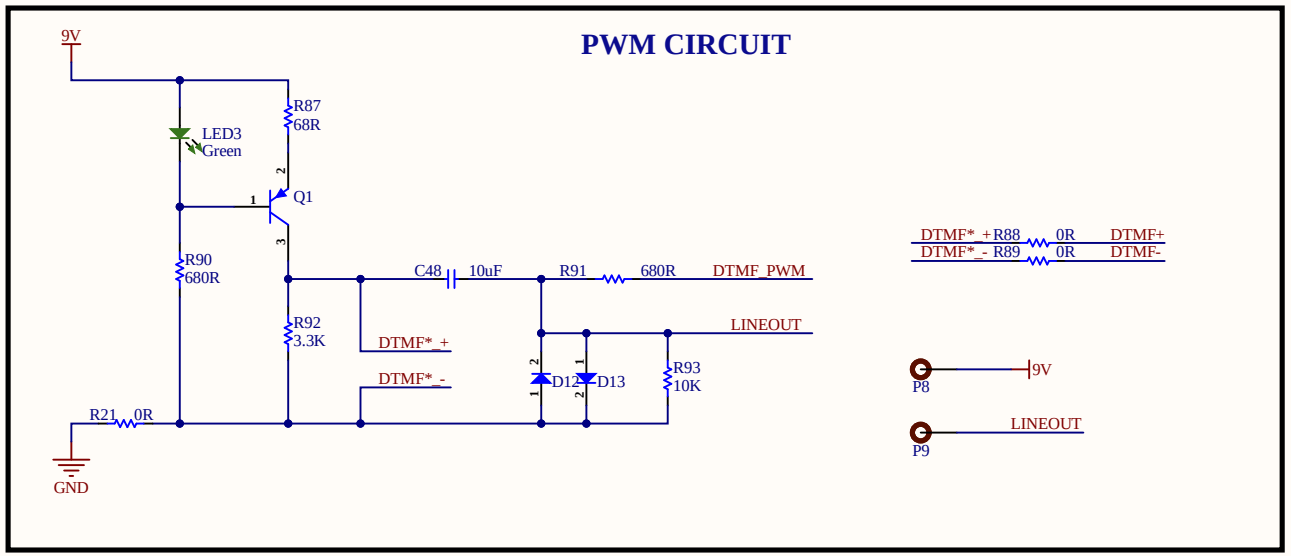

Notes for ESP32 Pinouts

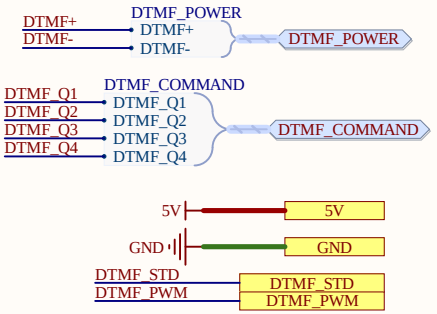
One interrupt for 12 GPIOs
One I2C selected for OLED and Encryption IC
Second I2C selected for 3 MUX and given on mPCIE
Selection between antennas is given on MUX

Cannot open file
D:\eSpark-Consultants\eSpark-Hardware\Altium Template\espark-consulting-group-800x300.jpg.
File does not exist.

| | |
|---|---|
| Title: Controller_Sheet.SchDoc | |
| File: Baseboard-v2.0.PrjPcb | |
| Date: 10/12/2023 | Page Num: 4 |
| Drawn By: Huzaifa Ali | Page Total: 8 |



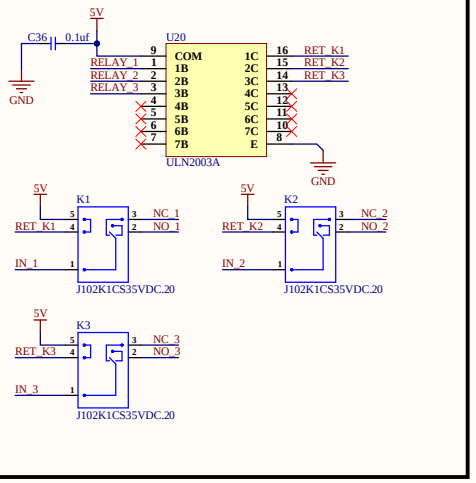



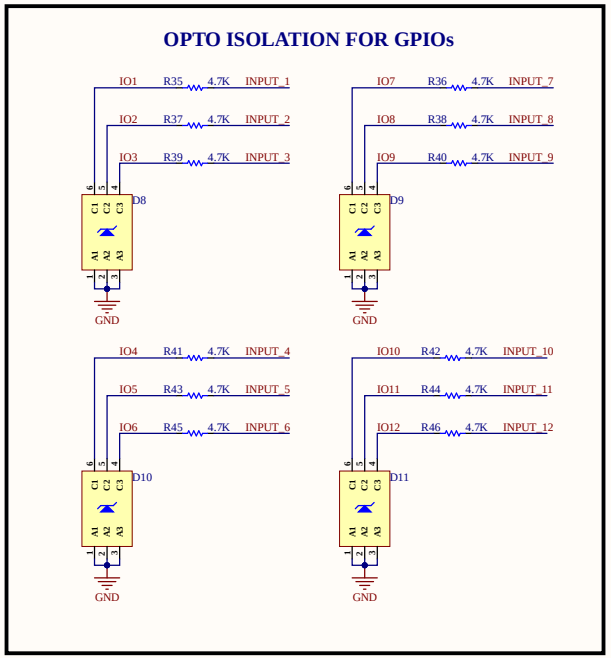

Cannot open file
D:\eSpark-Consultants\eSpark-Hardware\Altium Template\espark-consulting-group-800x300.jpg.
File does not exist.

| | |
|---|---|
| Title: DTMF_Decoder_Sheet.SchDoc | |
| File: Baseboard-v2.0.PrjPcb | |
| Date: 10/12/2023 | Page Num: 5 |
| Drawn By: Huzaifa Ali | Page Total: 8 |

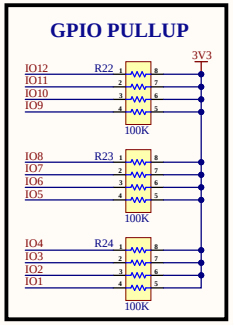
## RELAY WITH DRIVER



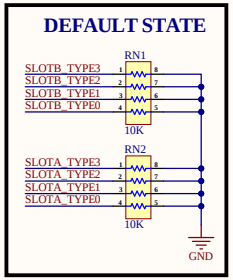

## OPTO ISOLATION FOR GPIOs

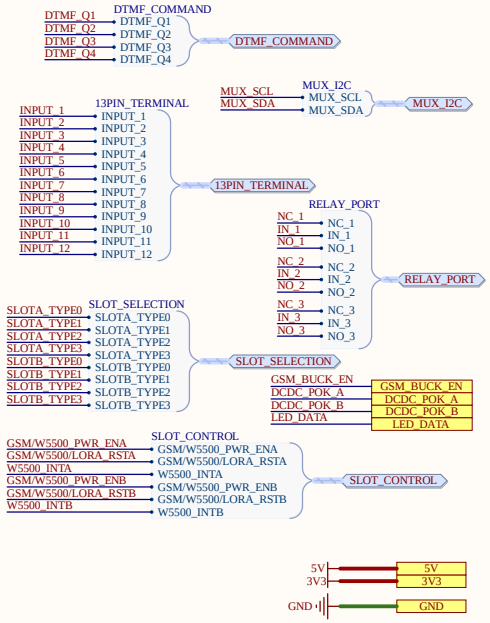



## GPIO PULLUP

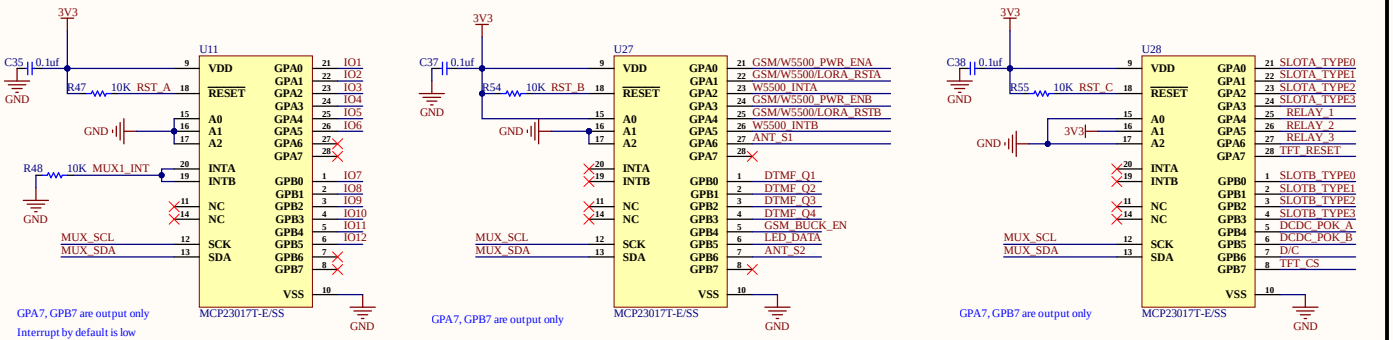


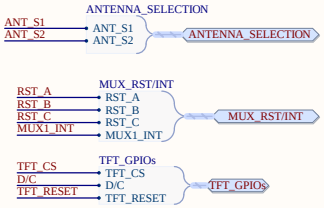

## DEFAULT STATE




## GPIO MULTIPLEXERS

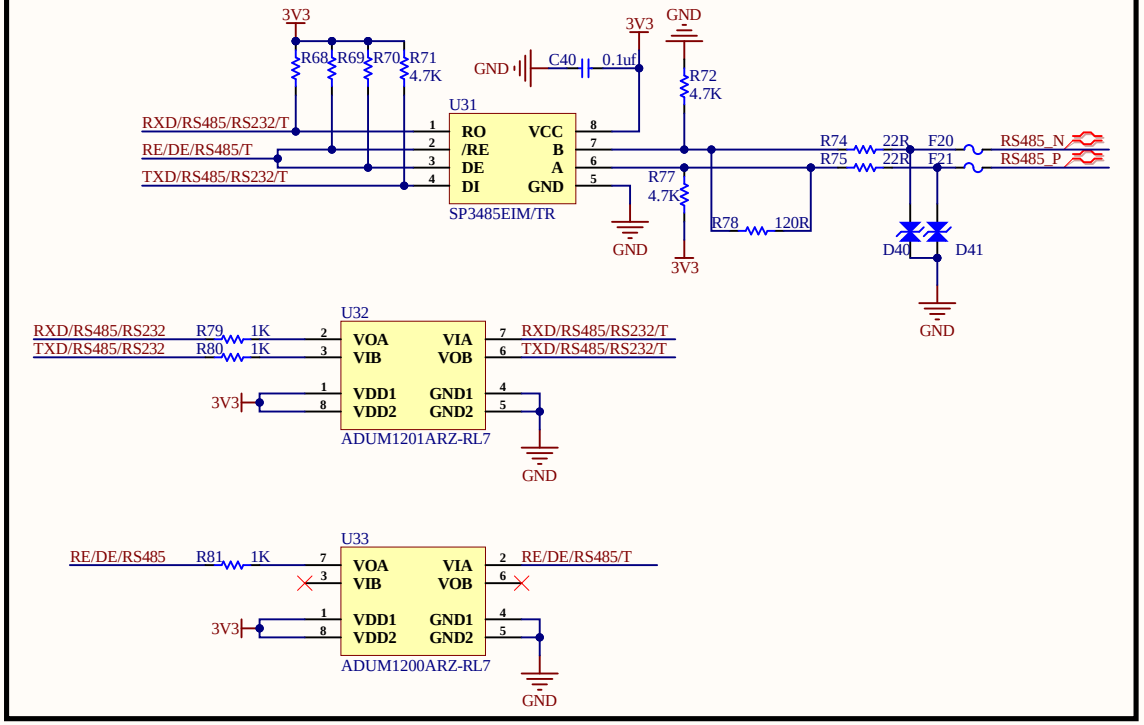


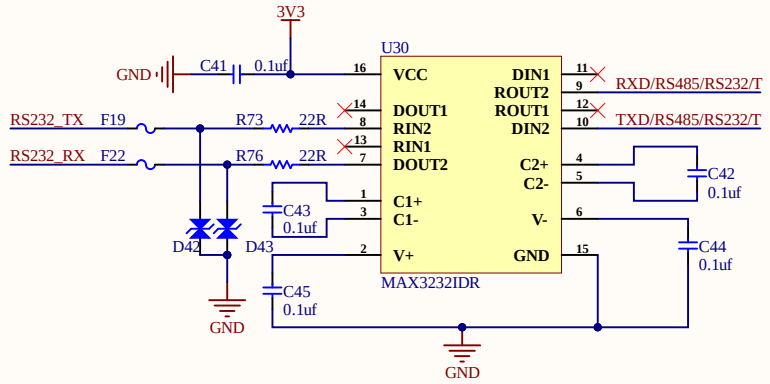

Cannot open file D:\eSpark-Consultants\eSpark-Hardware\Altium Template\espark-consulting-group-800x300.jpg. File does not exist.

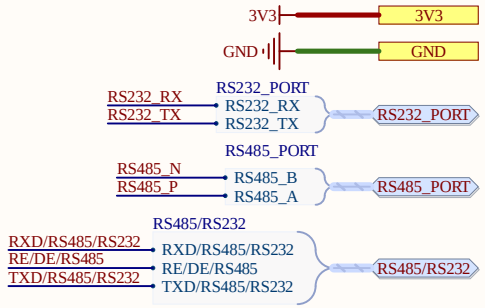
| | |
|---|---|
| Title: GPIOs_Expander_Relay_Sheet.SchDoc | |
| File: Baseboard-v2.0.PrjPcb | |
| Date: 10/12/2023 | Page Num: 6 |
| Drawn By: Huzaifa Ali | Page Total: 8 |

## RS485 to UART



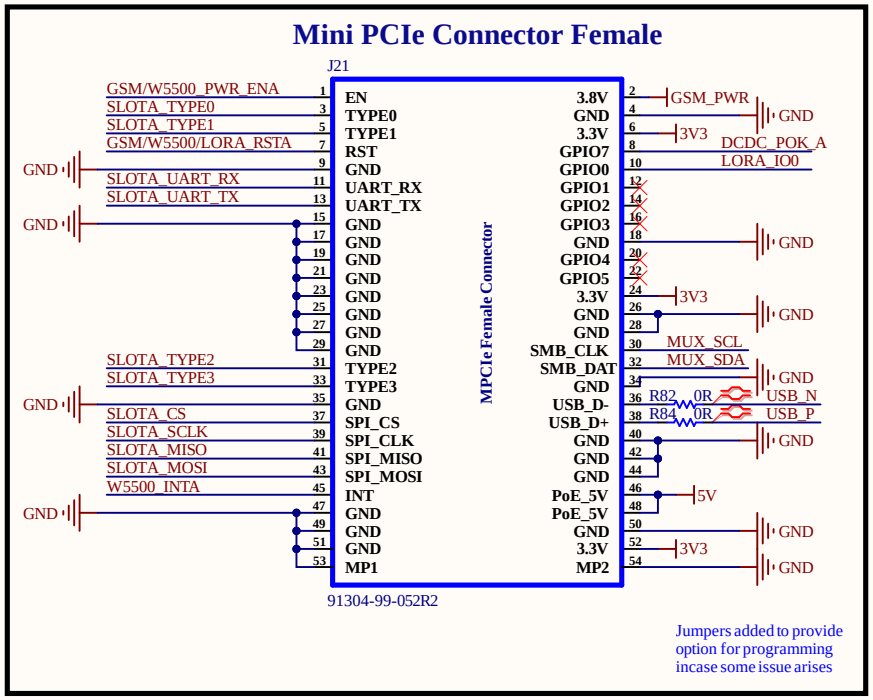

## RS232 to UART

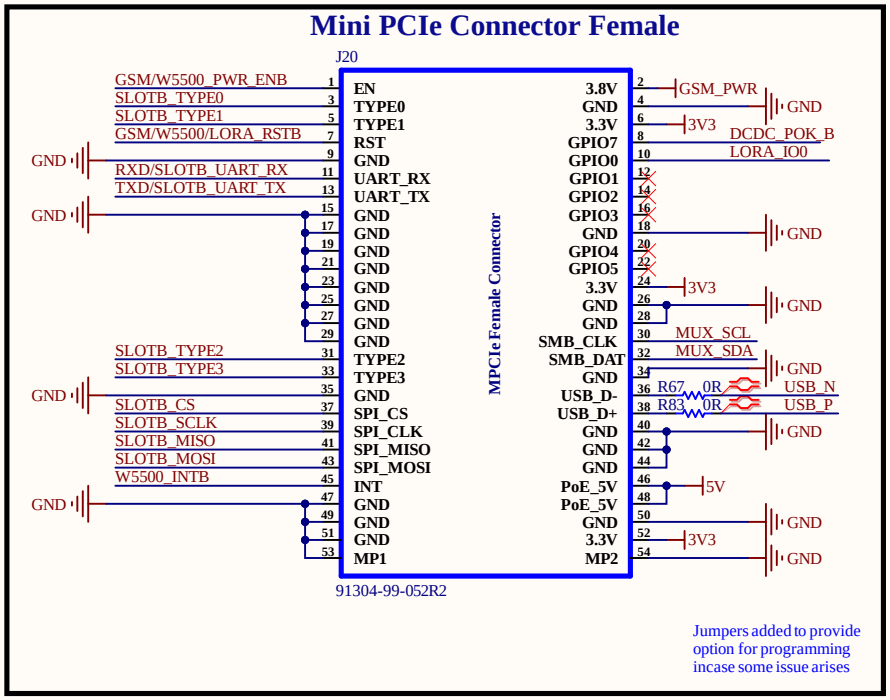


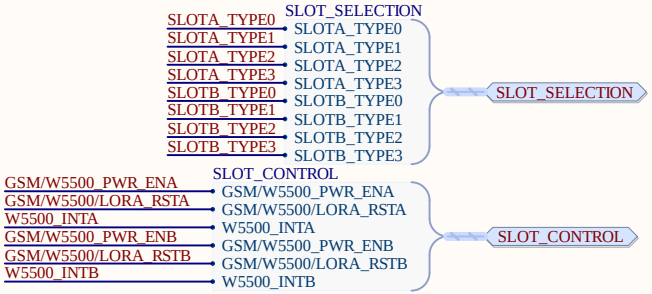



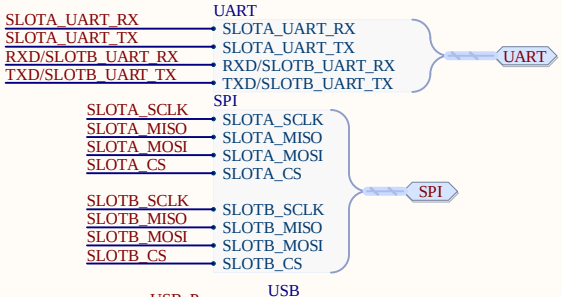

Cannot open file
D:\eSpark-Consultants\eSpark-Hardware\Altium Template\espark-consulting-group-800x300.jpg.
File does not exist.


| | |
|---|---|
| Title: RS485_RS232_Sheet.SchDoc | |
| File: Baseboard-v2.0.PrjPcb | |
| Date: 10/12/2023 | Page Num: 7 |
| Drawn By: Huzaifa Ali | Page Total: 8 |




Cannot open file D:\eSpark-Consultants\eSpark-Hardware\Altium Template\espark-consulting-group-800x300.jpg. File does not exist.

| | |
|---|---|
| Title: mPCIe_Connector_Sheet.SchDoc | |
| File: Baseboard-v2.0.PrjPcb | |
| Date: 10/12/2023 | Page Num: 8 |
| Drawn By: Huzaifa Ali | Page Total: 8 |