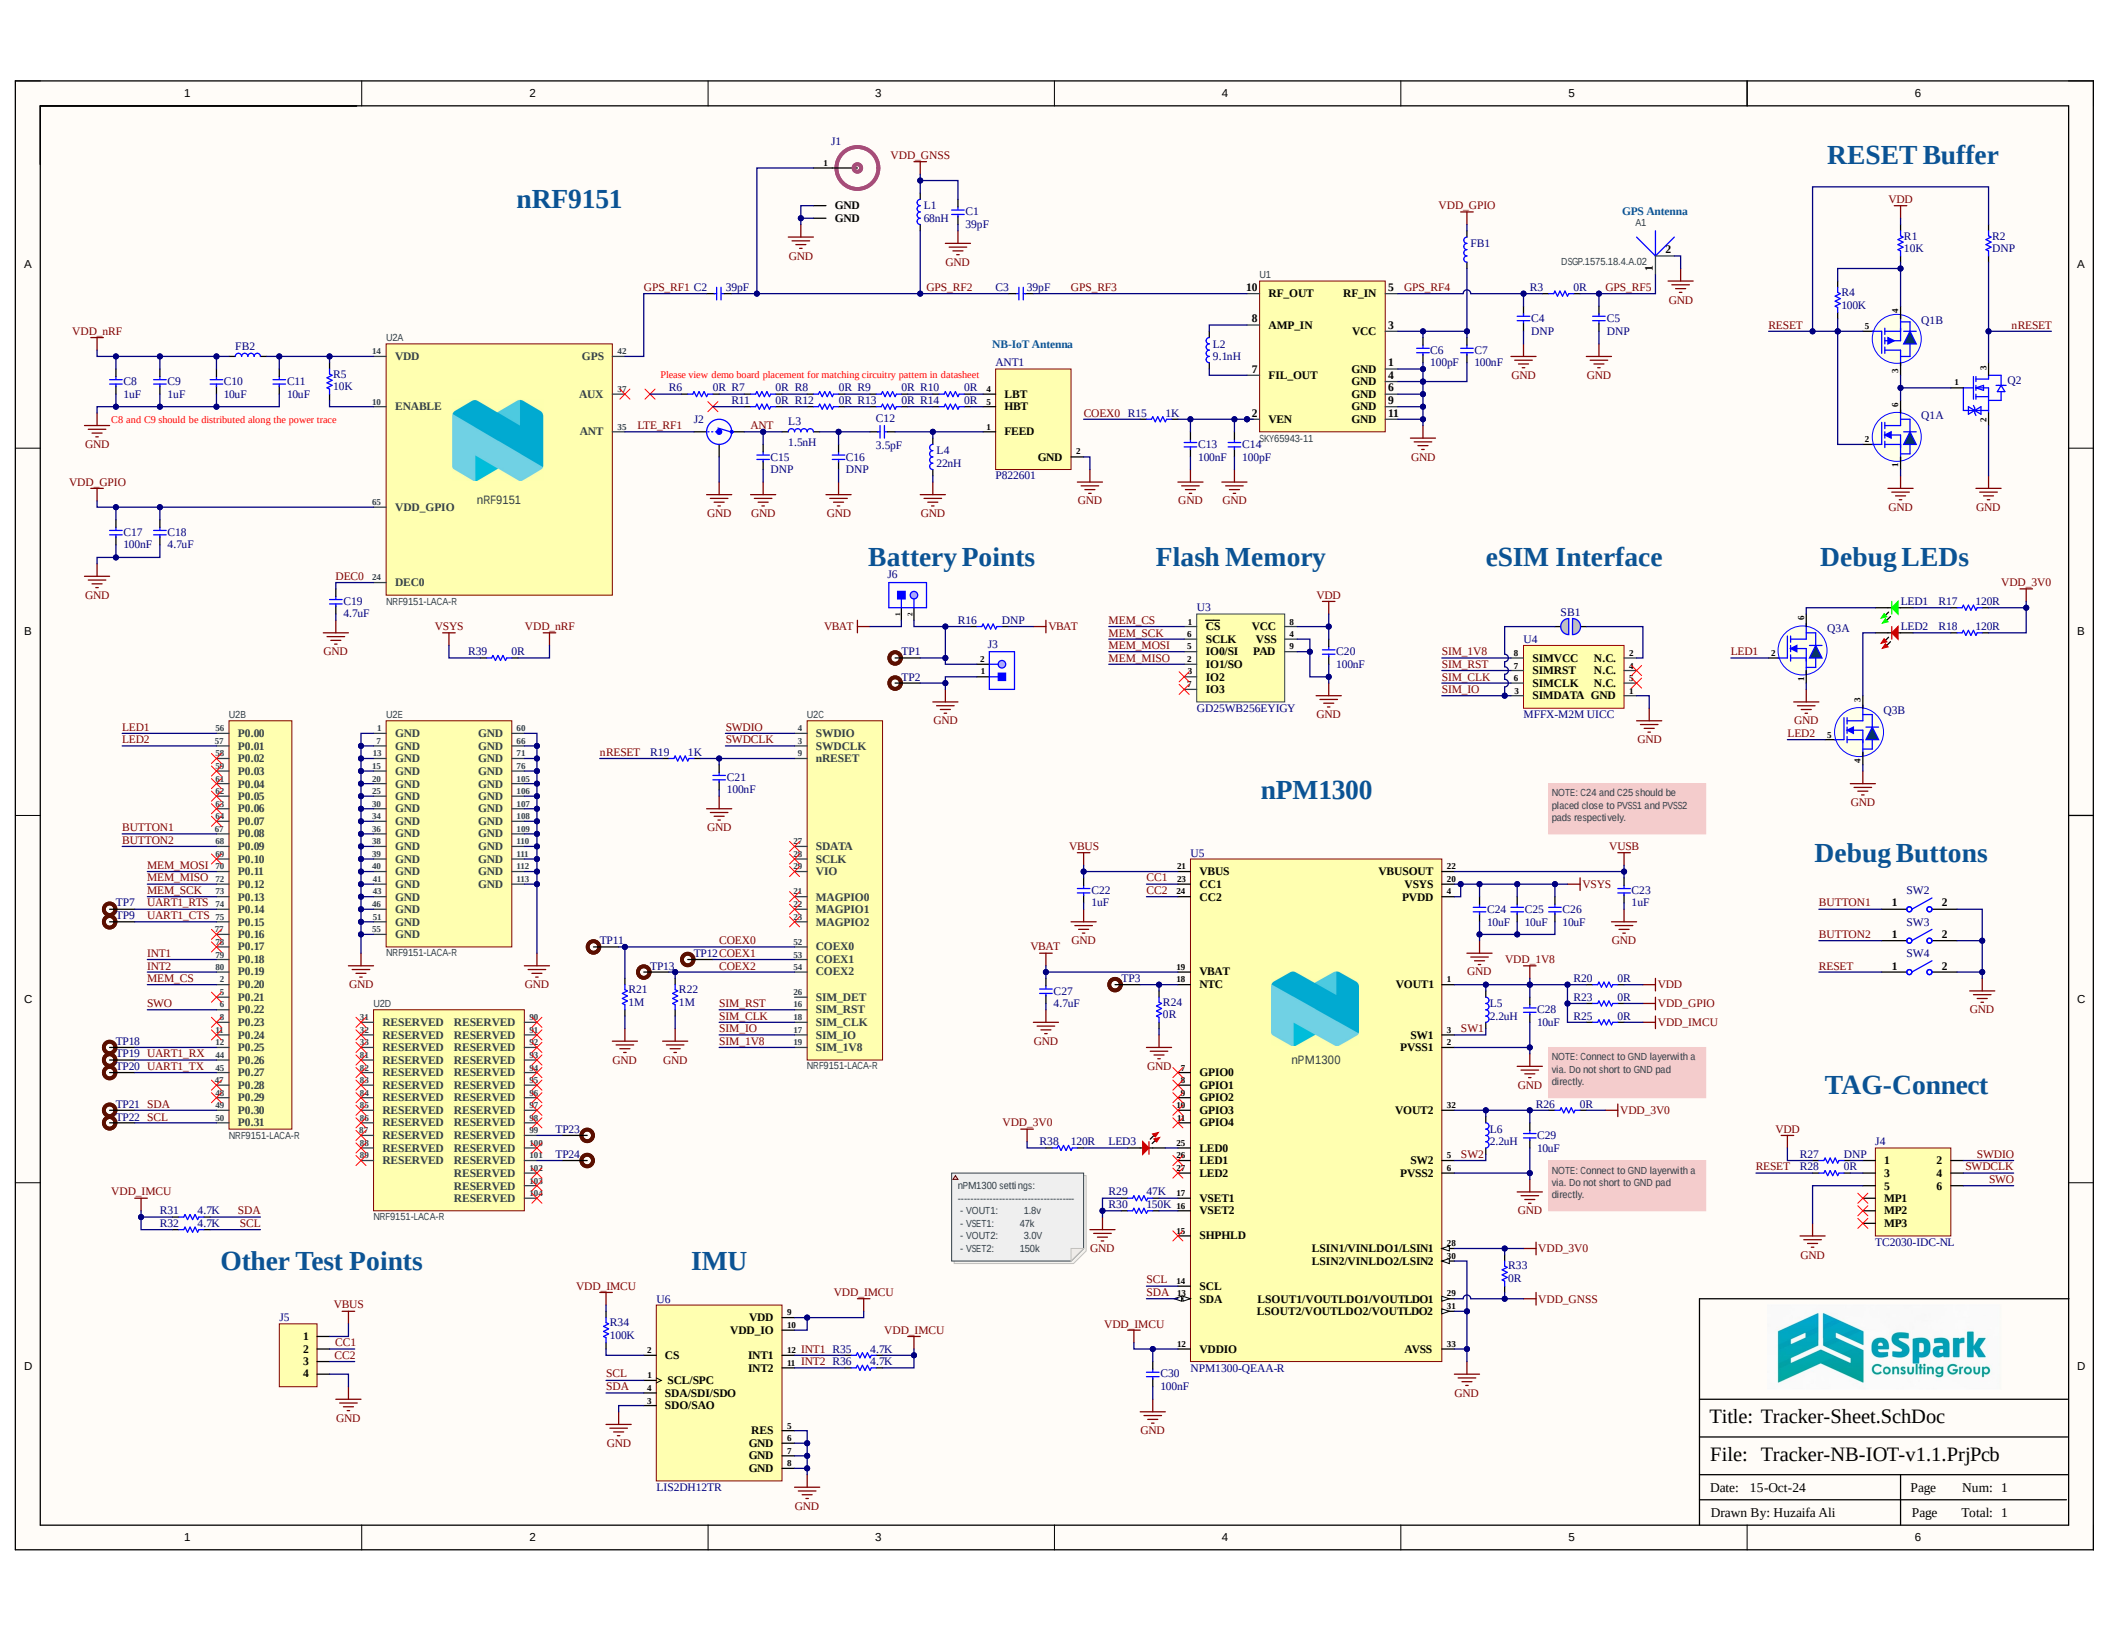

nRF9151
RESET Buffer
Battery Points
Flash Memory
eSIM Interface
Debug LEDs
nPM1300
Debug Buttons
TAG-Connect
Other Test Points
IMU
VDD_GNSS
VDD_nRF
VDD_GPIO
VDD_IMCU
VDD_3V0
VDD_1V8
VSYS
VUSB
VBUS
VBAT
GPS Antenna
NB-IoT Antenna
nRF9151
nRF9151-LACA-R
npm1300
NPM1300-QEAA-R
GD25WB256EYIGY
MFFX-M2M UICC
SKY65943-11
P822601
LIS2DH12TR
TC2030-IDC-NL
C8 and C9 should be distributed along the power trace
Please view demo board placement for matching circuitry pattern in datasheet
NOTE: C24 and C25 should be placed close to PVSS1 and PVSS2 pads respectively.
NOTE: Connect to GND layerwith a via. Do not short to GND pad directly.
npM1300 settings:
- VOUT1: 1.8v
- VSET1: 47k
- VOUT2: 3.0V
- VSET2: 150k
eSpark Consulting Group
Title: Tracker-Sheet.SchDoc
File: Tracker-NB-IOT-v1.1.PrjPcb
Date: 15-Oct-24
Page Num: 1
Drawn By: Huzaifa Ali
Page Total: 1