

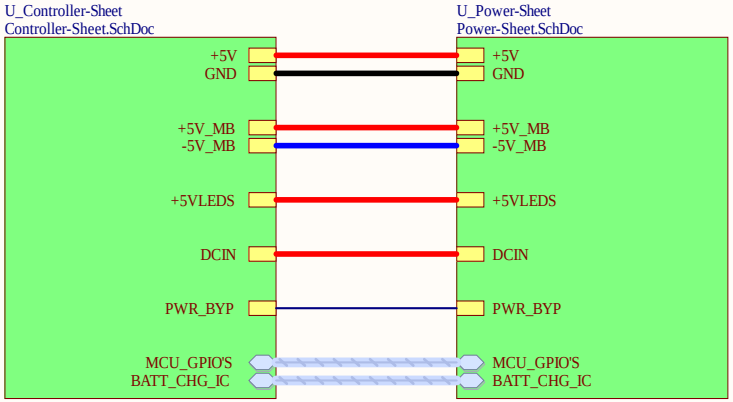


Cannot open file
D:\eSpark-Consultants\eSpark-Hardware\Altium Template\espark-consulting-group-800x300.jpg.
File does not exist.


Title: Top-Sheet.SchDoc	
File: 7000_0303_Rev13.PrjPcb	
Date: 5/2/2024	Page Num: 1
Drawn By: Huzaifa Ali	Page Total: 3

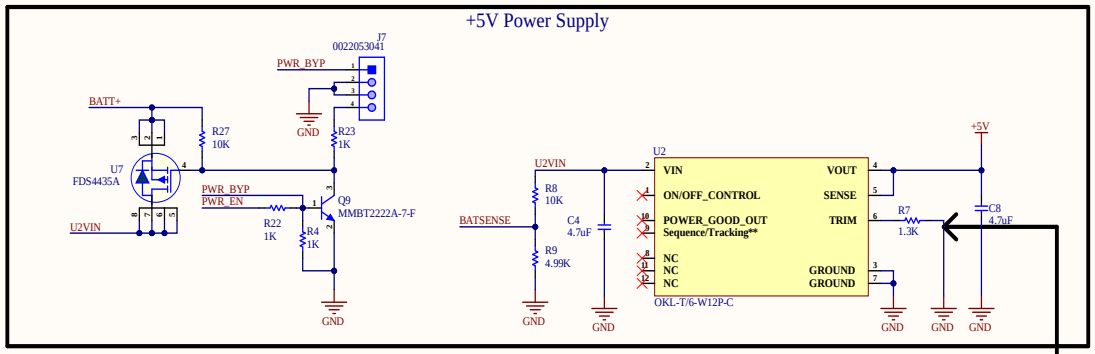


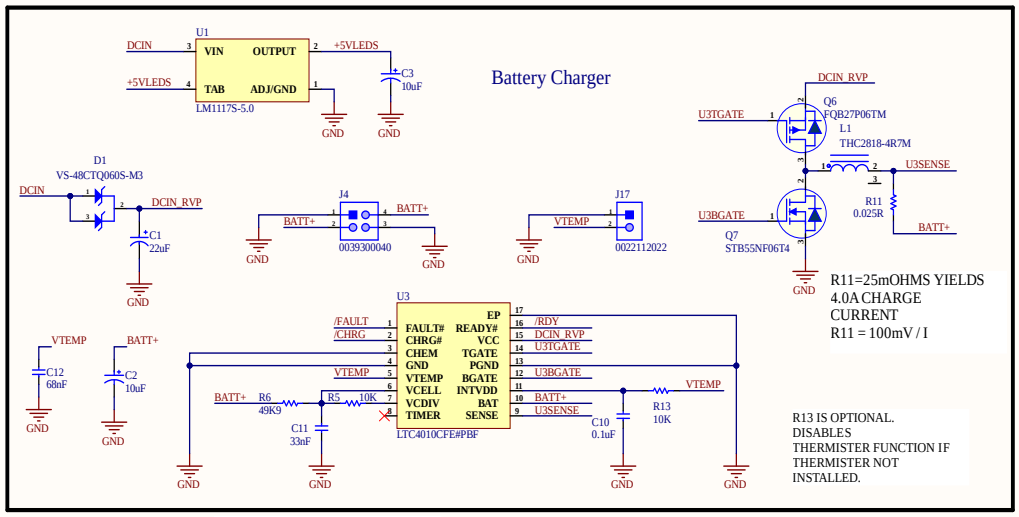



R5 AND R6 DETERMINE NUMBER
OF
CELLS.
R5=10K/R6=50K = 6 CELLS


Input connection moved to after the reverse polarity diode
D1 (R11 -adb)
***WRONG: Battery+ connection is then applied to U 1
and
LED stays on indefinitely. Moving connection back to
DCIN side (R12 6/21/19 -adb)****


















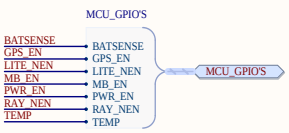

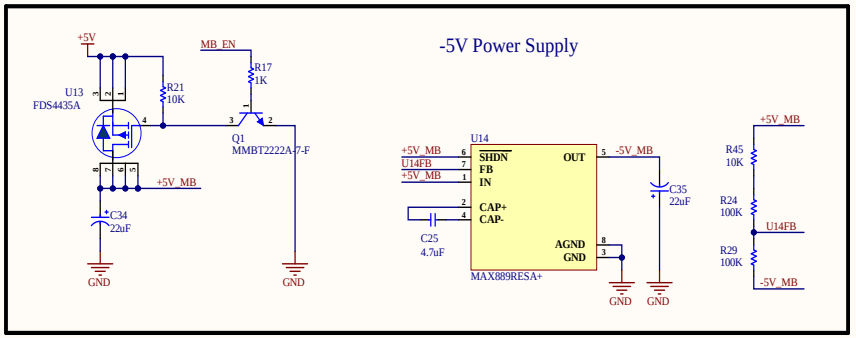

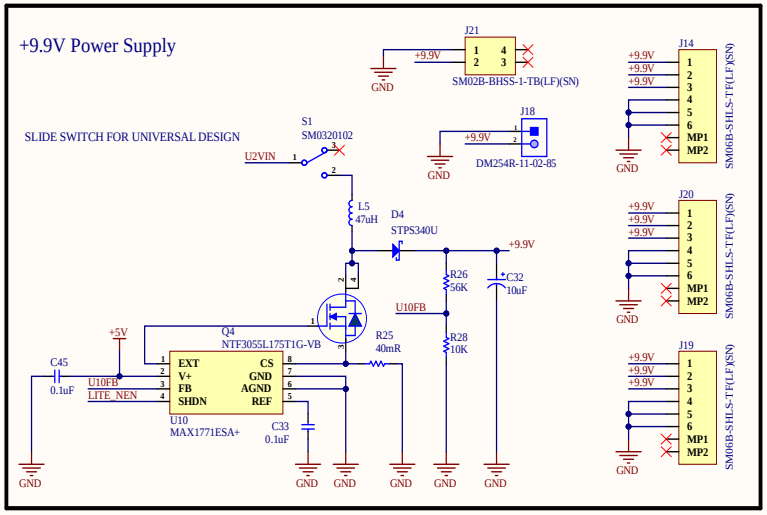

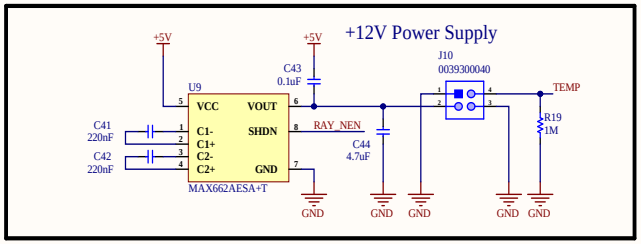

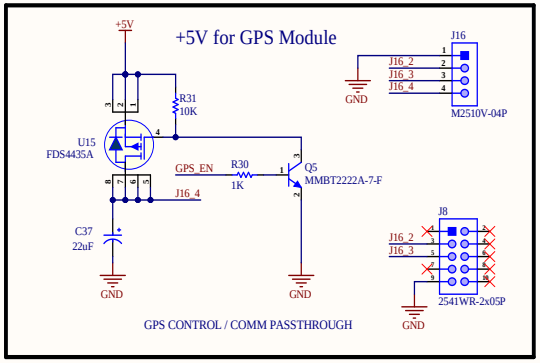

Works with negative or positive logic option:

RTRIM = 10500 / (VOUT-0.7525) - 1000
RTRIM = 1.4K yeilds 5.1275V

****

R7 should be 1.3k!
OTHERWISE CPU RESETS WHEN GPS IS POWERED
ON!
RTRIM=10500/(VOUT-0.7525)-1000
RTRIM=1.3K YIELDS 5.32V


****
(adb 12/6/16)

****

Rtrim Equation above incorrect:
Rtrim(kOhms) = 5.91/(Vout - 0.591)
RTRIM=1.3K YIELDS 5.14V
(adb 4/21/17)

Cannot open file
D:\eSpark-Consultants\eSpark-Hardware\Altium
Template\espark-consulting-group-800x300.jpg.
File does not exist.

Title: Power-Sheet.SchDoc	
File: 7000_0303_Rev13.PrjPcb	
Date: 5/2/2024	Page Num: 2
Drawn By: Huzaifa Ali	Page Total: 3

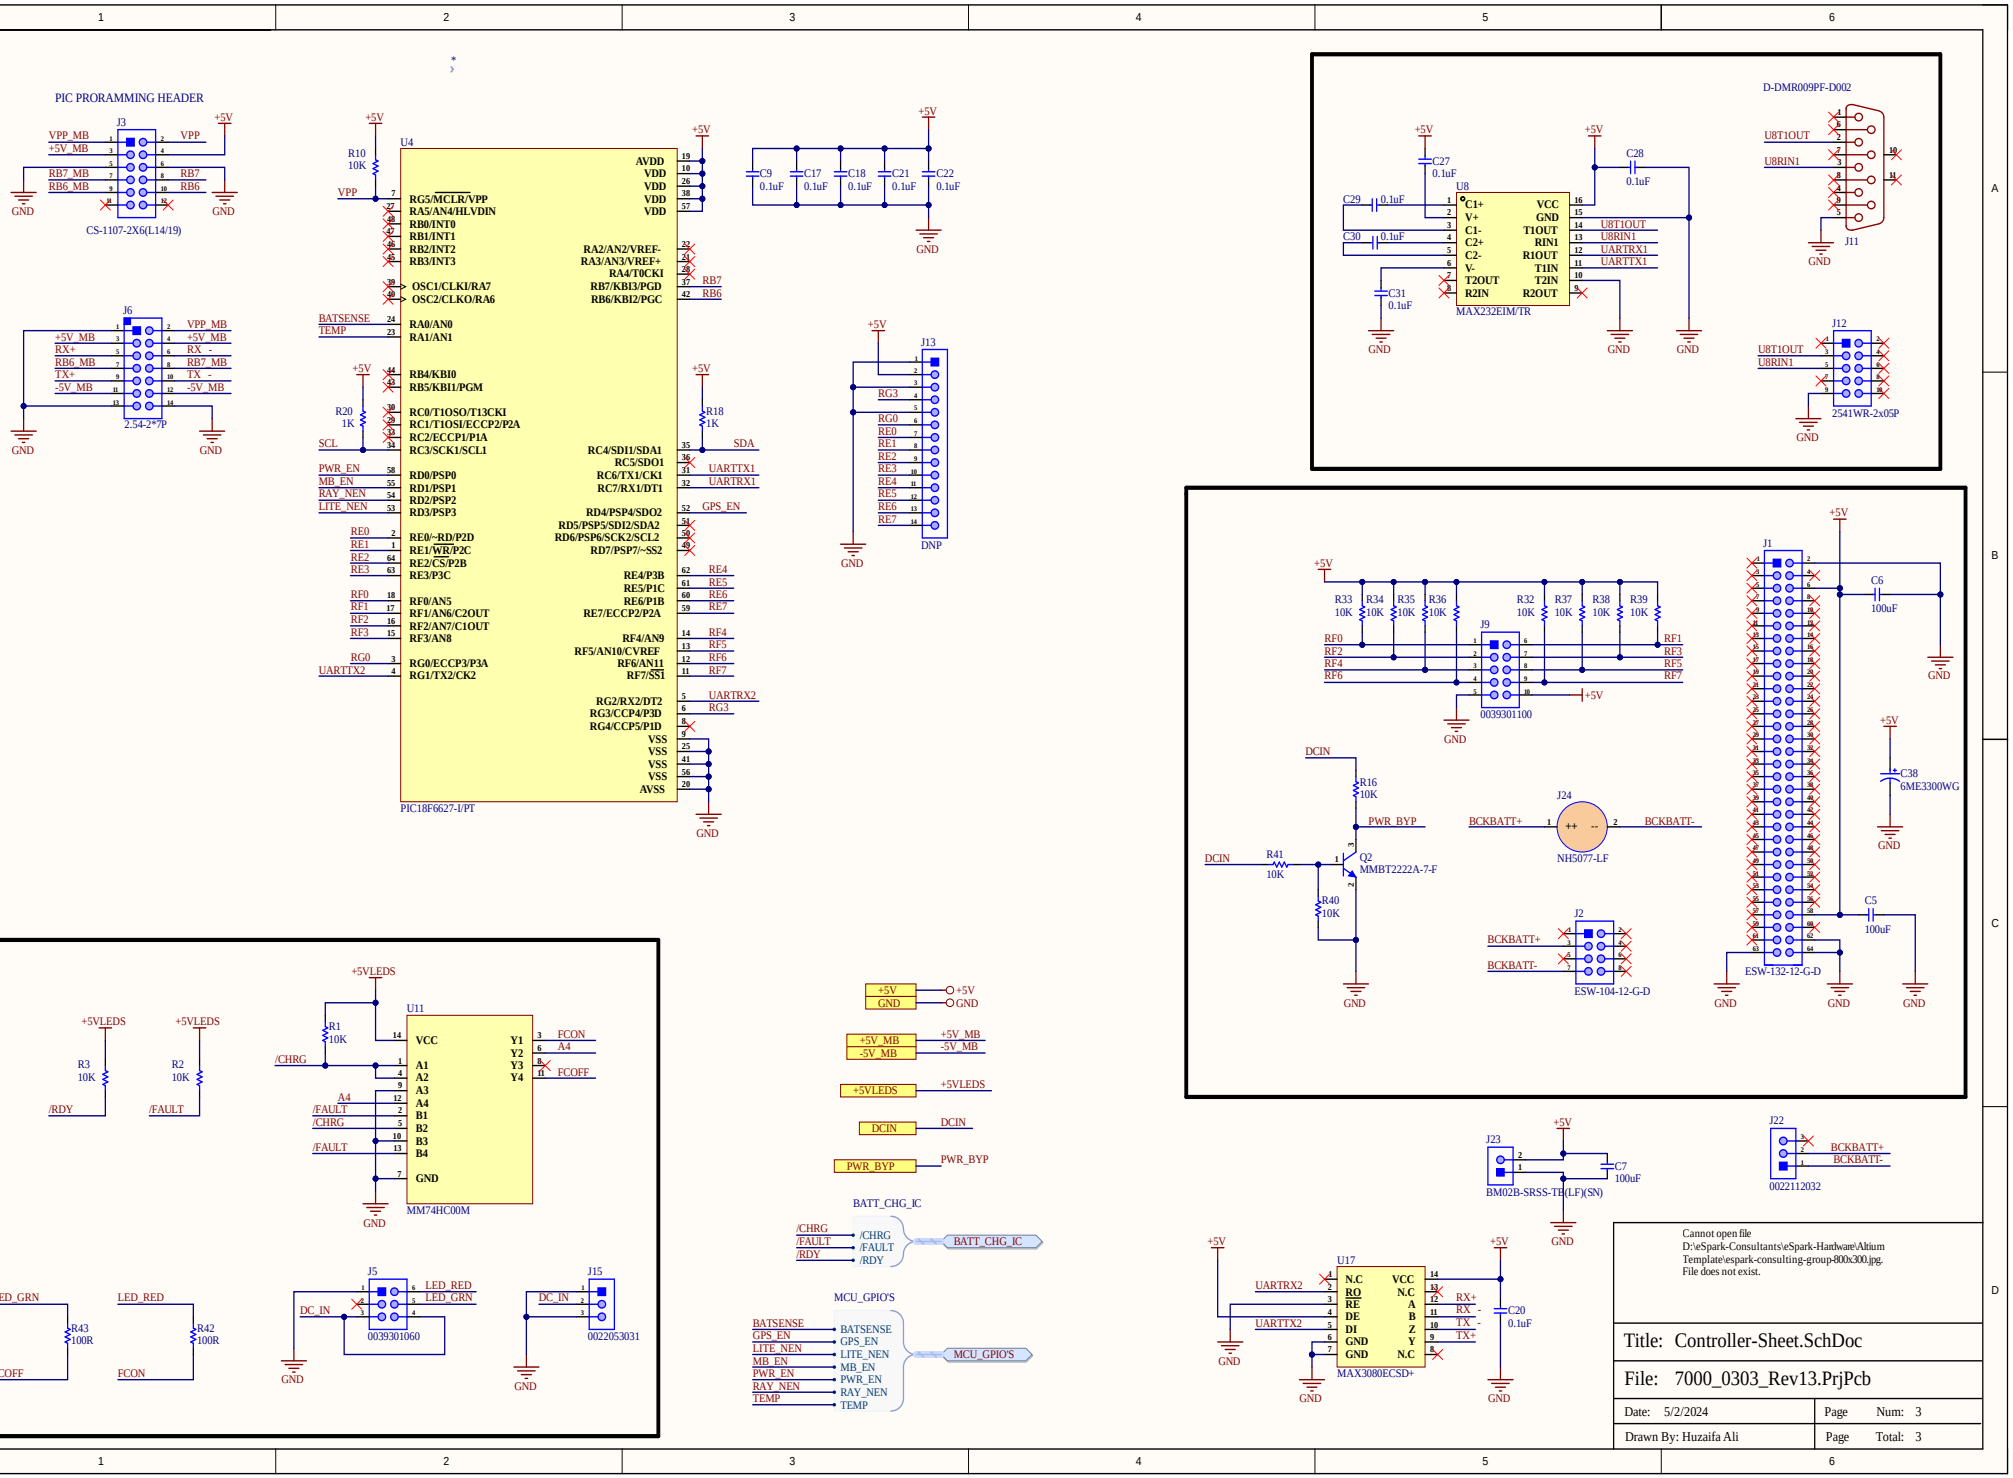
PIC PRORAMMING HEADER
J3
CS-1107-2X6(L14/19)
J6
2.54-2*7P
U4
PIC18F6627-I/PT
U8
MAX232EIM/TR
D-DMR009PF-D002
J11
J12
2541WR-2x05P
J13
DNP
J1
0039301100
ESW-132-12-G-D
J24
NH5077-LF
J2
ESW-104-12-G-D
Q2
MMBT2222A-7-F
U11
MM74HC00M
J5
0039301060
J15
0022053031
J23
BM02B-SRSS-TB(LF)(SN)
J22
0022112032
U17
MAX3080ECSD+
MCU_GPIO'S
BATT_CHG_IC
Cannot open file
D:\eSpark-Consultants\eSpark-Hardware\Altium Template\espark-consulting-group-800x300.jpg.
File does not exist.
Title: Controller-Sheet.SchDoc
File: 7000_0303_Rev13.PrjPcb
Date: 5/2/2024
Page Num: 3
Drawn By: Huzaifa Ali
Page Total: 3