
Electrode Board Hardware Changes Guide

1. Solder electrode board on electrode no. 8 position on the octopus cable.
2. Connect sensor board to control board with the help of flex cable.
3. Interface sensor board to the electrode board by using Octopus cable.
4. Remove C3 from the electrode board and connect yellow box (Outer side pad) of C3 connection to M2 on the sensor board.

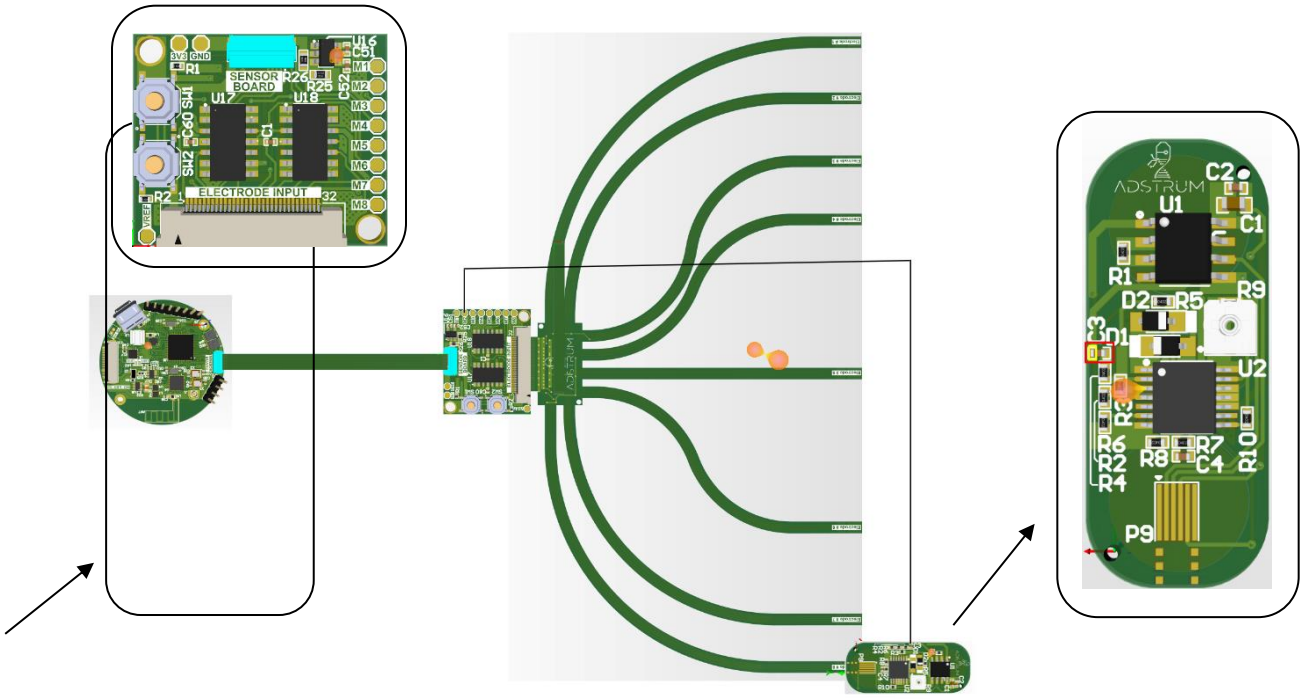

+92 323 278 8259
info@esparkconsultants.com
www.esparkconsultants.com
Office No. 301/B, Blossom Trade Center, Main University Road,
Gulistan e Jouhar, Block 01, Karachi-75290