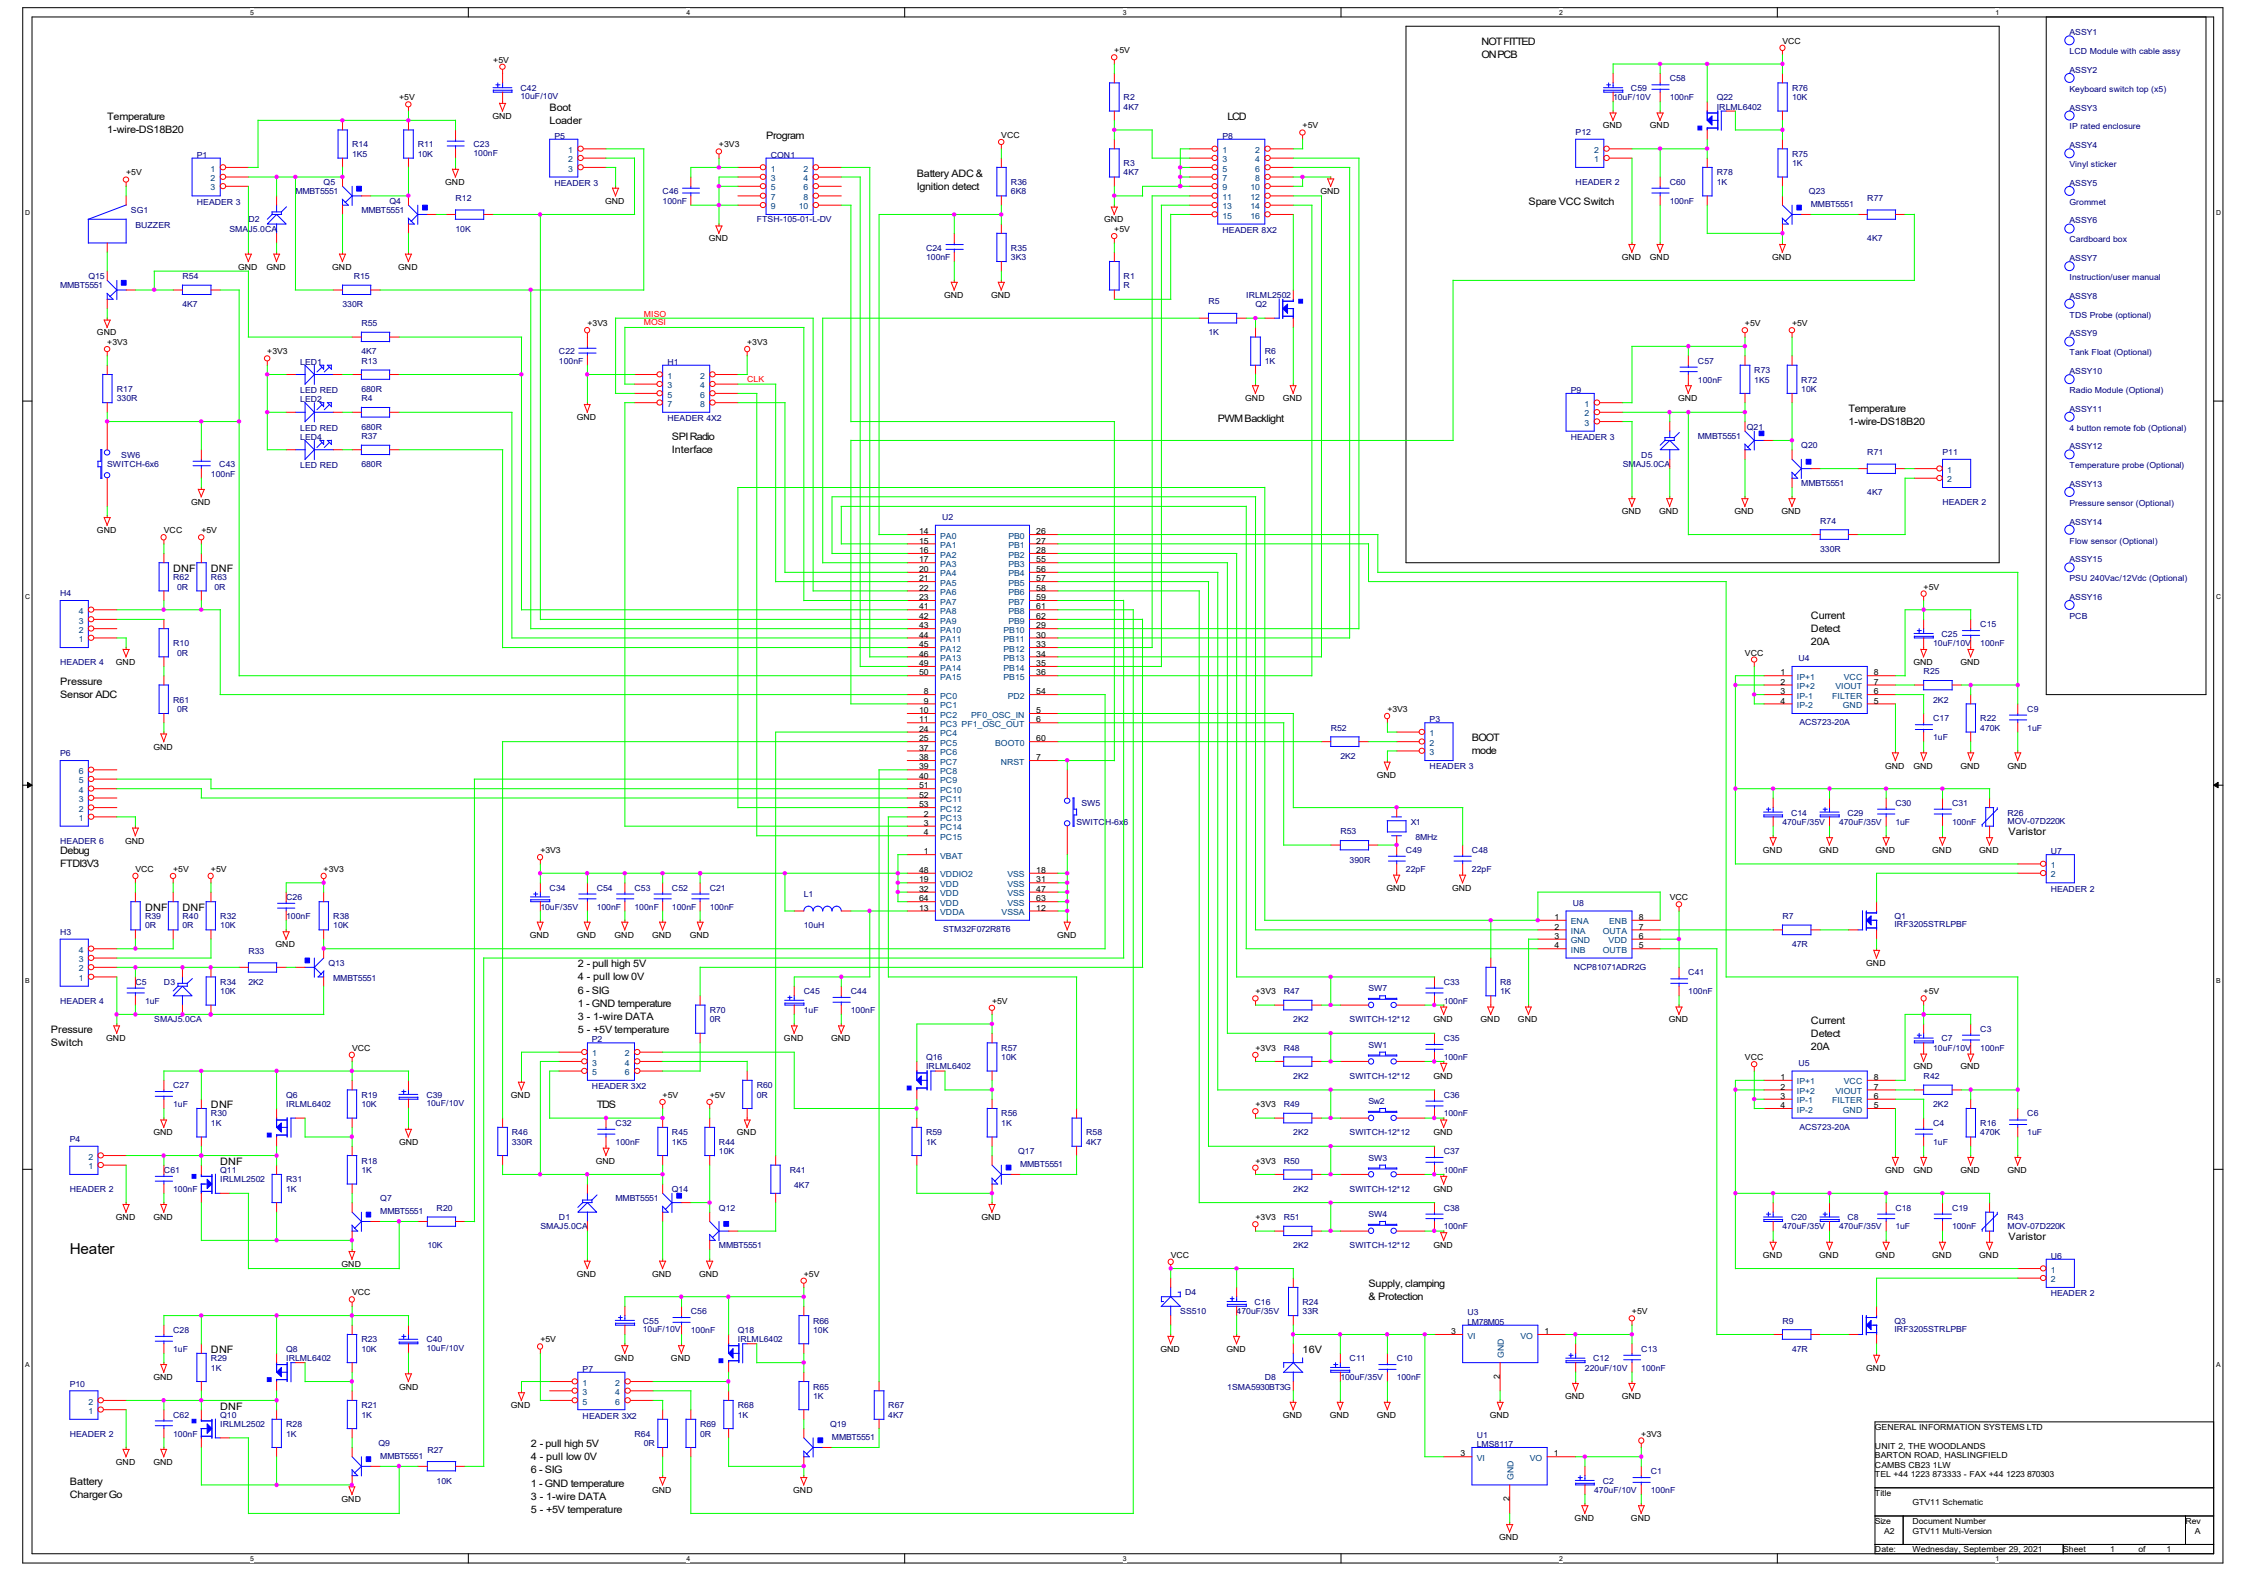

Temperature
1-wire-DS18B20
Boot
Loader
Program
Battery ADC &
Ignition detect
LCD
NOT FITTED
ON PCB
Spare VCC Switch
Temperature
1-wire-DS18B20
BUZZER
SWITCH-6x6
SPI Radio
Interface
PWM Backlight
BOOT
mode
Pressure
Sensor ADC
Debug
FTDI3V3
Pressure
Switch
Heater
Battery
Charger Go
TDS
2 - pull high 5V
4 - pull low 0V
6 - SIG
1 - GND temperature
3 - 1-wire DATA
5 - +5V temperature
Current
Detect
20A
Supply, clamping
& Protection
ASSY1
LCD Module with cable assy
ASSY2
Keyboard switch top (x5)
ASSY3
IP rated enclosure
ASSY4
Vinyl sticker
ASSY5
Grommet
ASSY6
Cardboard box
ASSY7
Instruction/user manual
ASSY8
TDS Probe (optional)
ASSY9
Tank Float (Optional)
ASSY10
Radio Module (Optional)
ASSY11
4 button remote fob (Optional)
ASSY12
Temperature probe (Optional)
ASSY13
Pressure sensor (Optional)
ASSY14
Flow sensor (Optional)
ASSY15
PSU 240Vac/12Vdc (Optional)
ASSY16
PCB
GENERAL INFORMATION SYSTEMS LTD
UNIT 2, THE WOODLANDS
BARTON ROAD, HASLINGFIELD
CAMBS CB23 1LW
TEL +44 1223 873333 - FAX +44 1223 870303
Title
GTV11 Schematic
Size
A2
Document Number
GTV11 Multi-Version
Rev
A
Date:
Wednesday, September 29, 2021
Sheet
1
of
1