




U_Power_Section
Power_Section.SchDoc
VBAT
VDD_5V
VCC_3V3
GND
VBAT
VDD_5V
VCC_3V3
GND
U_Opto_Section
Opto_Section.SchDoc
VCC_3V3
VCC_3V3
MCU_IN
BUTTONS
GND
GND
U_LED_PWR_CTRL_Section
LED_PWR_CTRL_Section.SchDoc
LED_IN1
LED_IN2
LED_IN3
LED_IN4
LED_IN5
VDD_5V
LED_IN1
LED_IN2
LED_IN3
LED_IN4
LED_IN5
VDD_5V
LED_EN
GND
GND
U_Controller_Section
Controller_Section.SchDoc
VCC_3V3
VCC_3V3
MCU_IN
MCU_IN
PWM_SIG
SPI
USB
LED_EN
LED_EN
GND
GND
U_Connector_Section
Connector_Section.SchDoc
LED_IN1
LED_IN2
LED_IN3
LED_IN4
LED_IN5
VBAT
VDD_5V
VCC_3V3
LED_IN1
LED_IN2
LED_IN3
LED_IN4
LED_IN5
VBAT
VDD_5V
VCC_3V3
PWM_SIG
SPI
BUTTONS
USB
BUTTONS
GND
GND

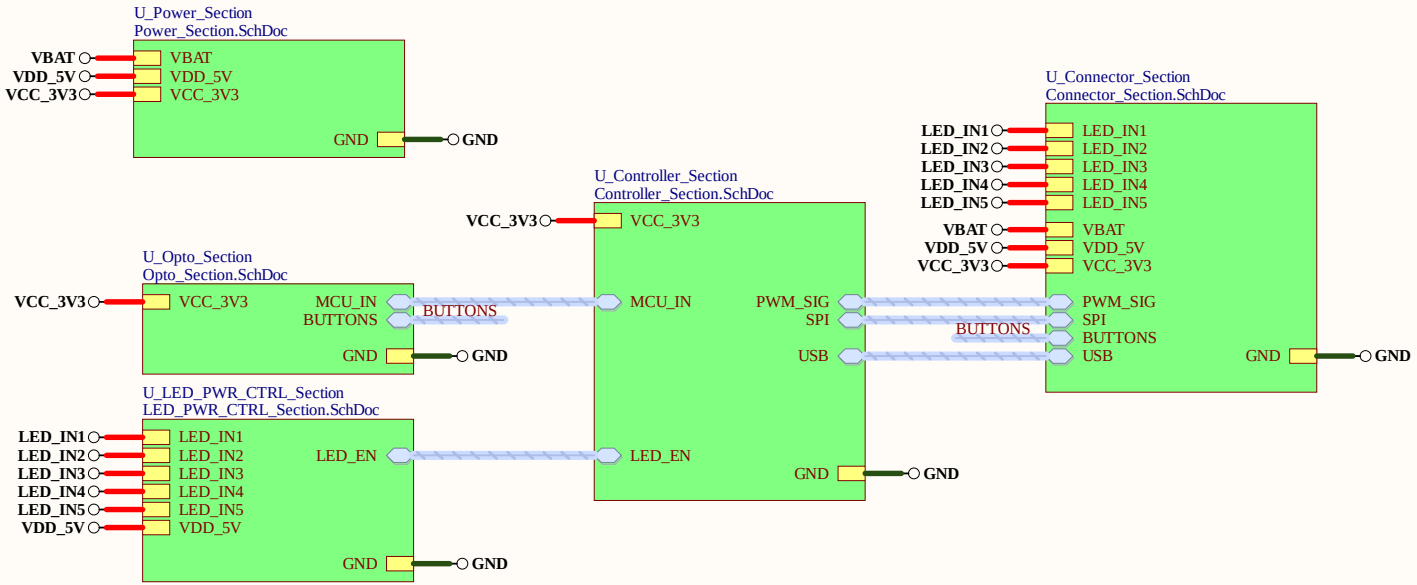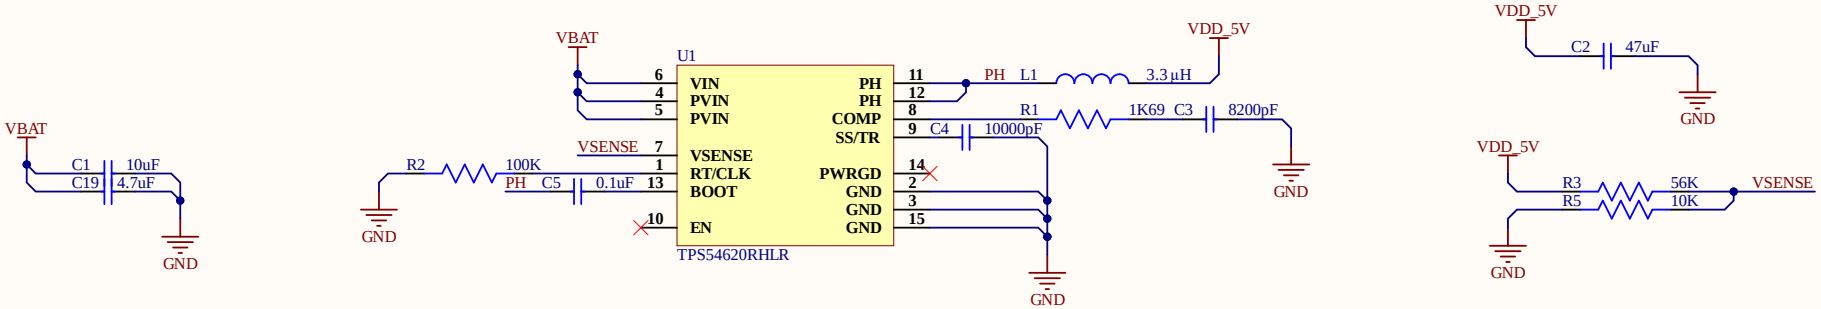



LED Power

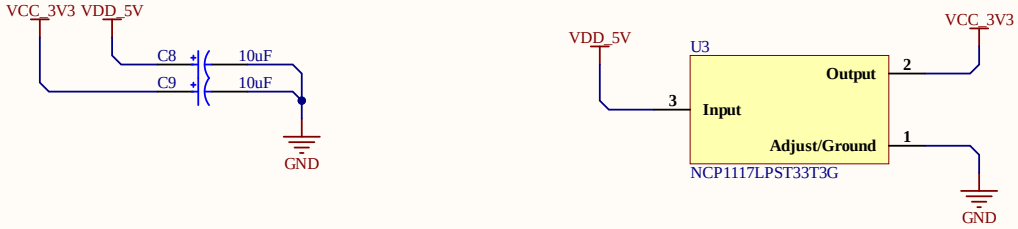



MCU Power




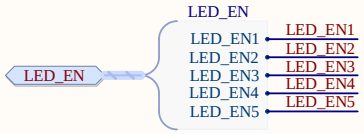


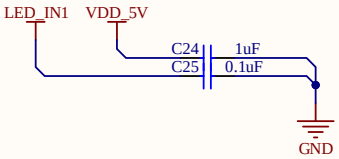


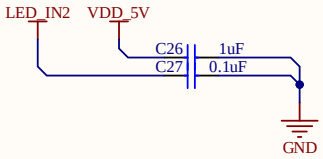


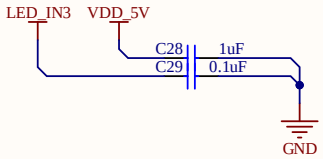


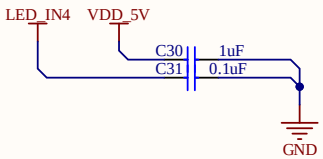


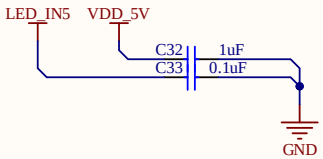


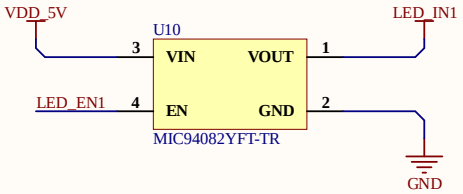

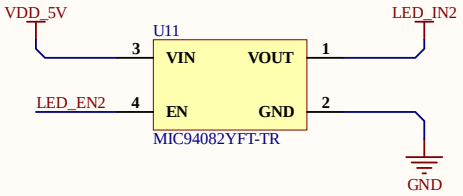


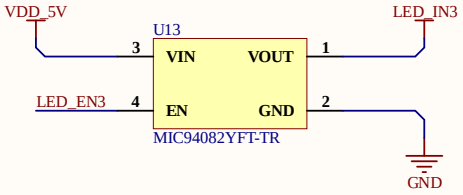


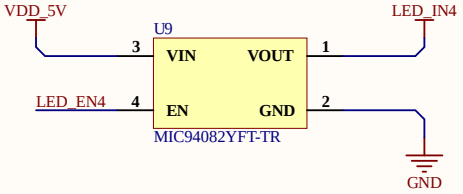


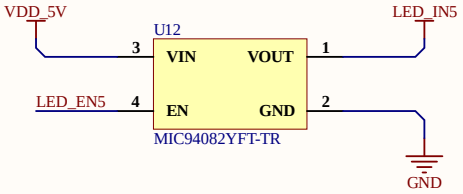


LED Power Switches

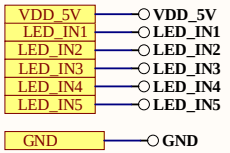

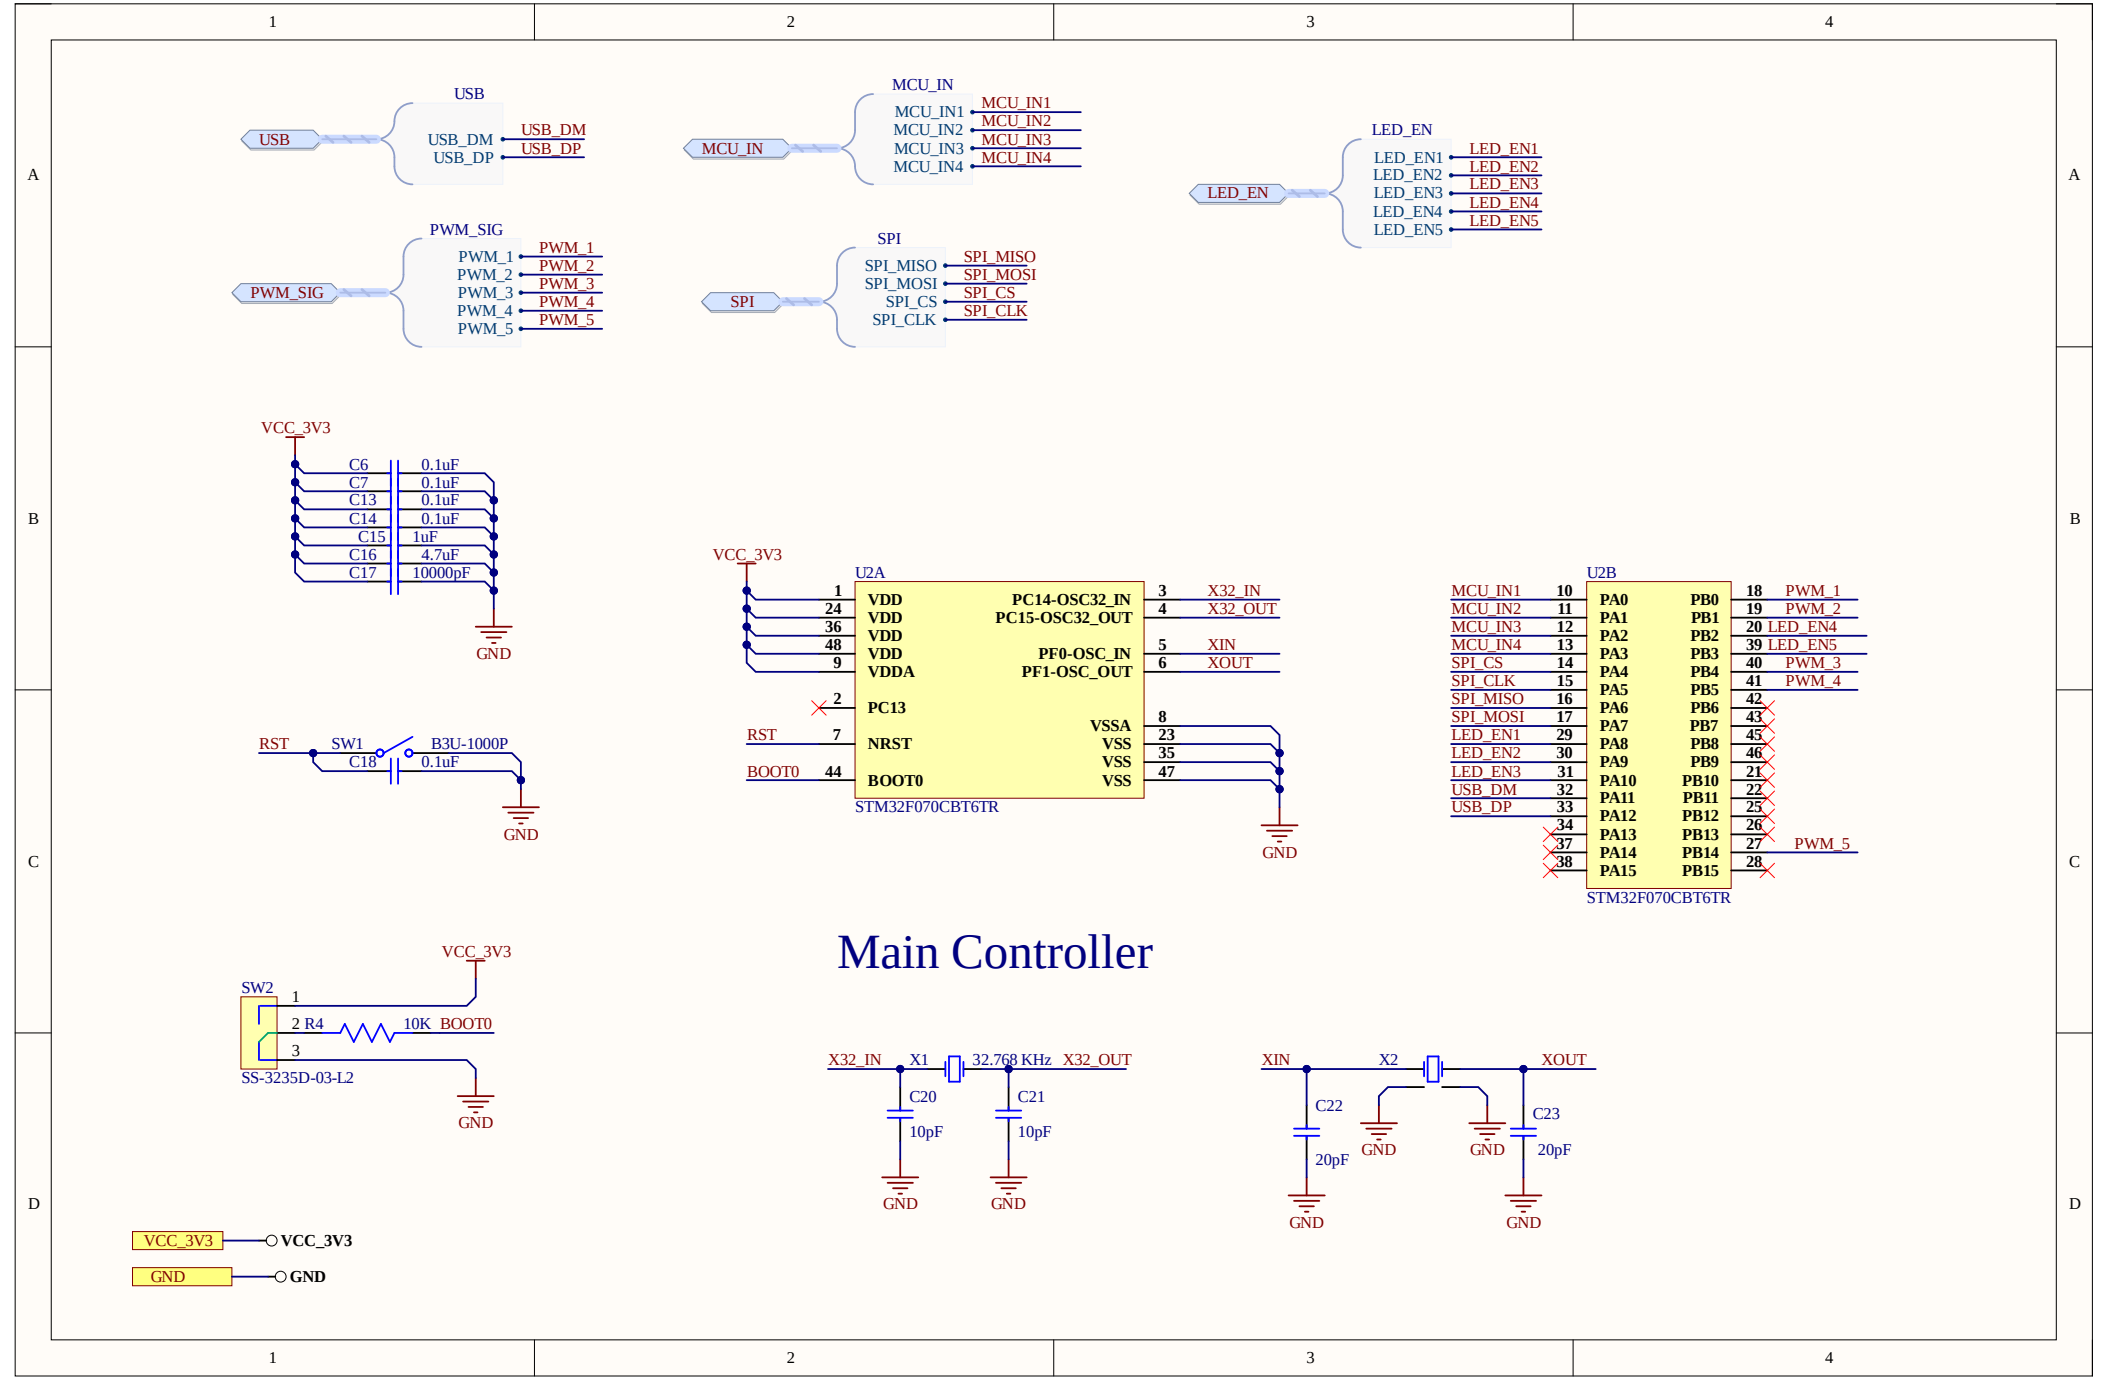
USB
USB_DM
USB_DP
MCU_IN
MCU_IN1
MCU_IN2
MCU_IN3
MCU_IN4
LED_EN
LED_EN1
LED_EN2
LED_EN3
LED_EN4
LED_EN5
PWM_SIG
PWM_1
PWM_2
PWM_3
PWM_4
PWM_5
SPI
SPI_MISO
SPI_MOSI
SPI_CS
SPI_CLK
VCC_3V3
C6 0.1uF
C7 0.1uF
C13 0.1uF
C14 0.1uF
C15 1uF
C16 4.7uF
C17 10000pF
GND
RST
SW1
B3U-1000P
C18 0.1uF
U2A
VDD
VDDA
PC13
NRST
BOOT0
PC14-OSC32_IN
PC15-OSC32_OUT
PF0-OSC_IN
PF1-OSC_OUT
VSSA
VSS
STM32F070CBT6TR
X32_IN
X32_OUT
XIN
XOUT
U2B
PA0
PA1
PA2
PA3
PA4
PA5
PA6
PA7
PA8
PA9
PA10
PA11
PA12
PA13
PA14
PA15
PB0
PB1
PB2
PB3
PB4
PB5
PB6
PB7
PB8
PB9
PB10
PB11
PB12
PB13
PB14
PB15
SW2
2 R4 10K BOOT0
SS-3235D-03-L2
Main Controller
X32_IN X1 32.768 KHz X32_OUT
C20 10pF
C21 10pF
XIN X2 XOUT
C22 20pF
C23 20pF
VCC_3V3
GND

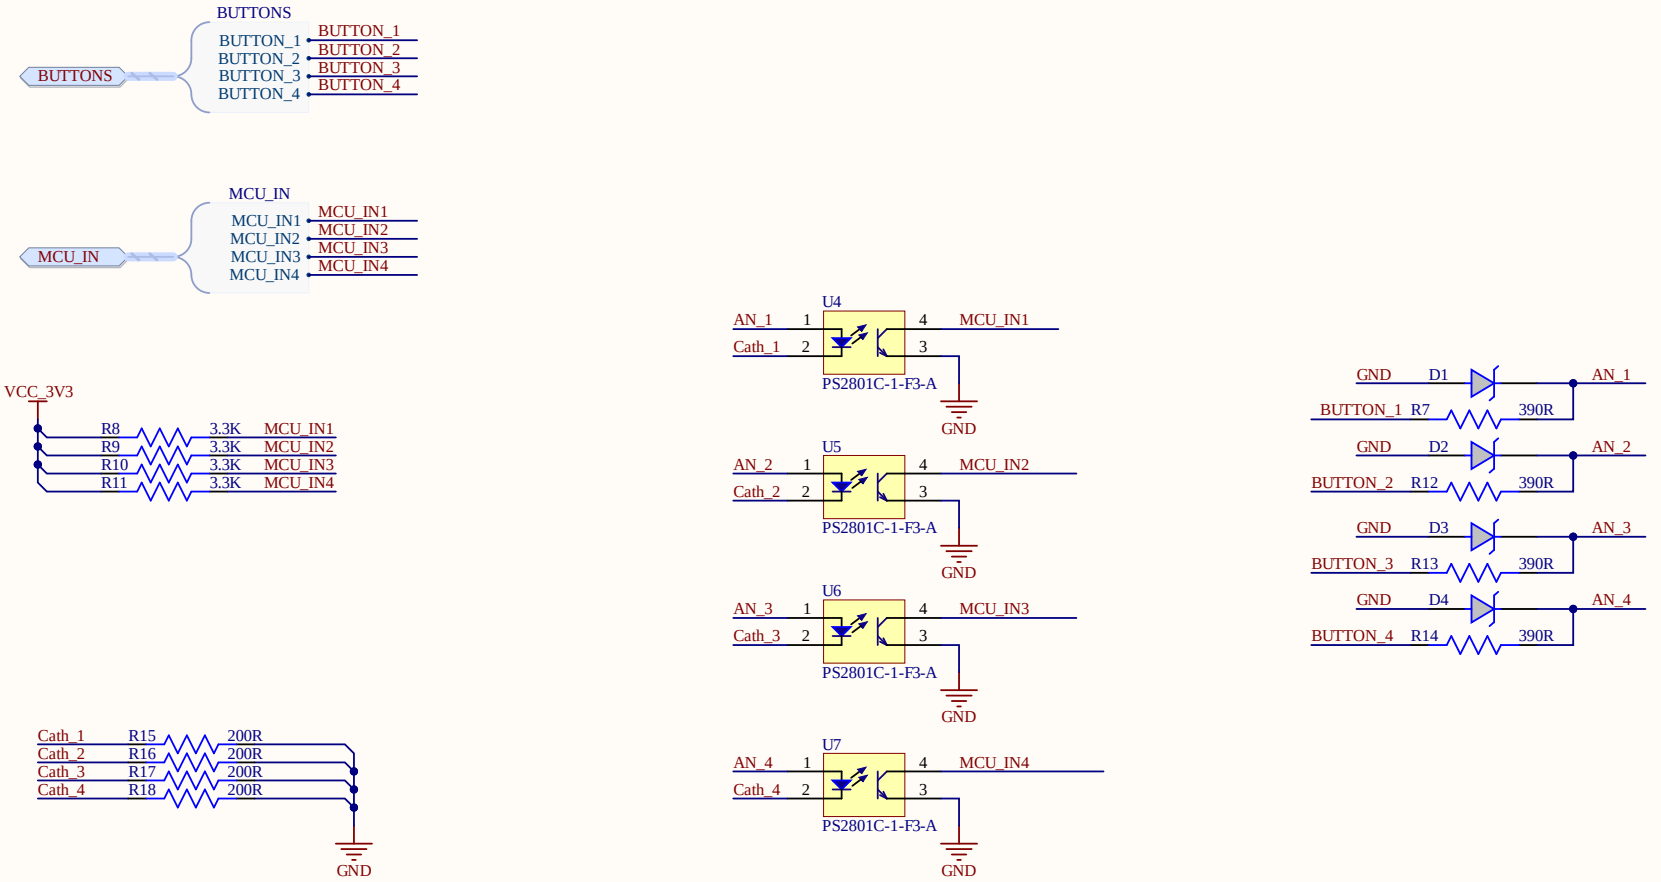

Optocoupler Section

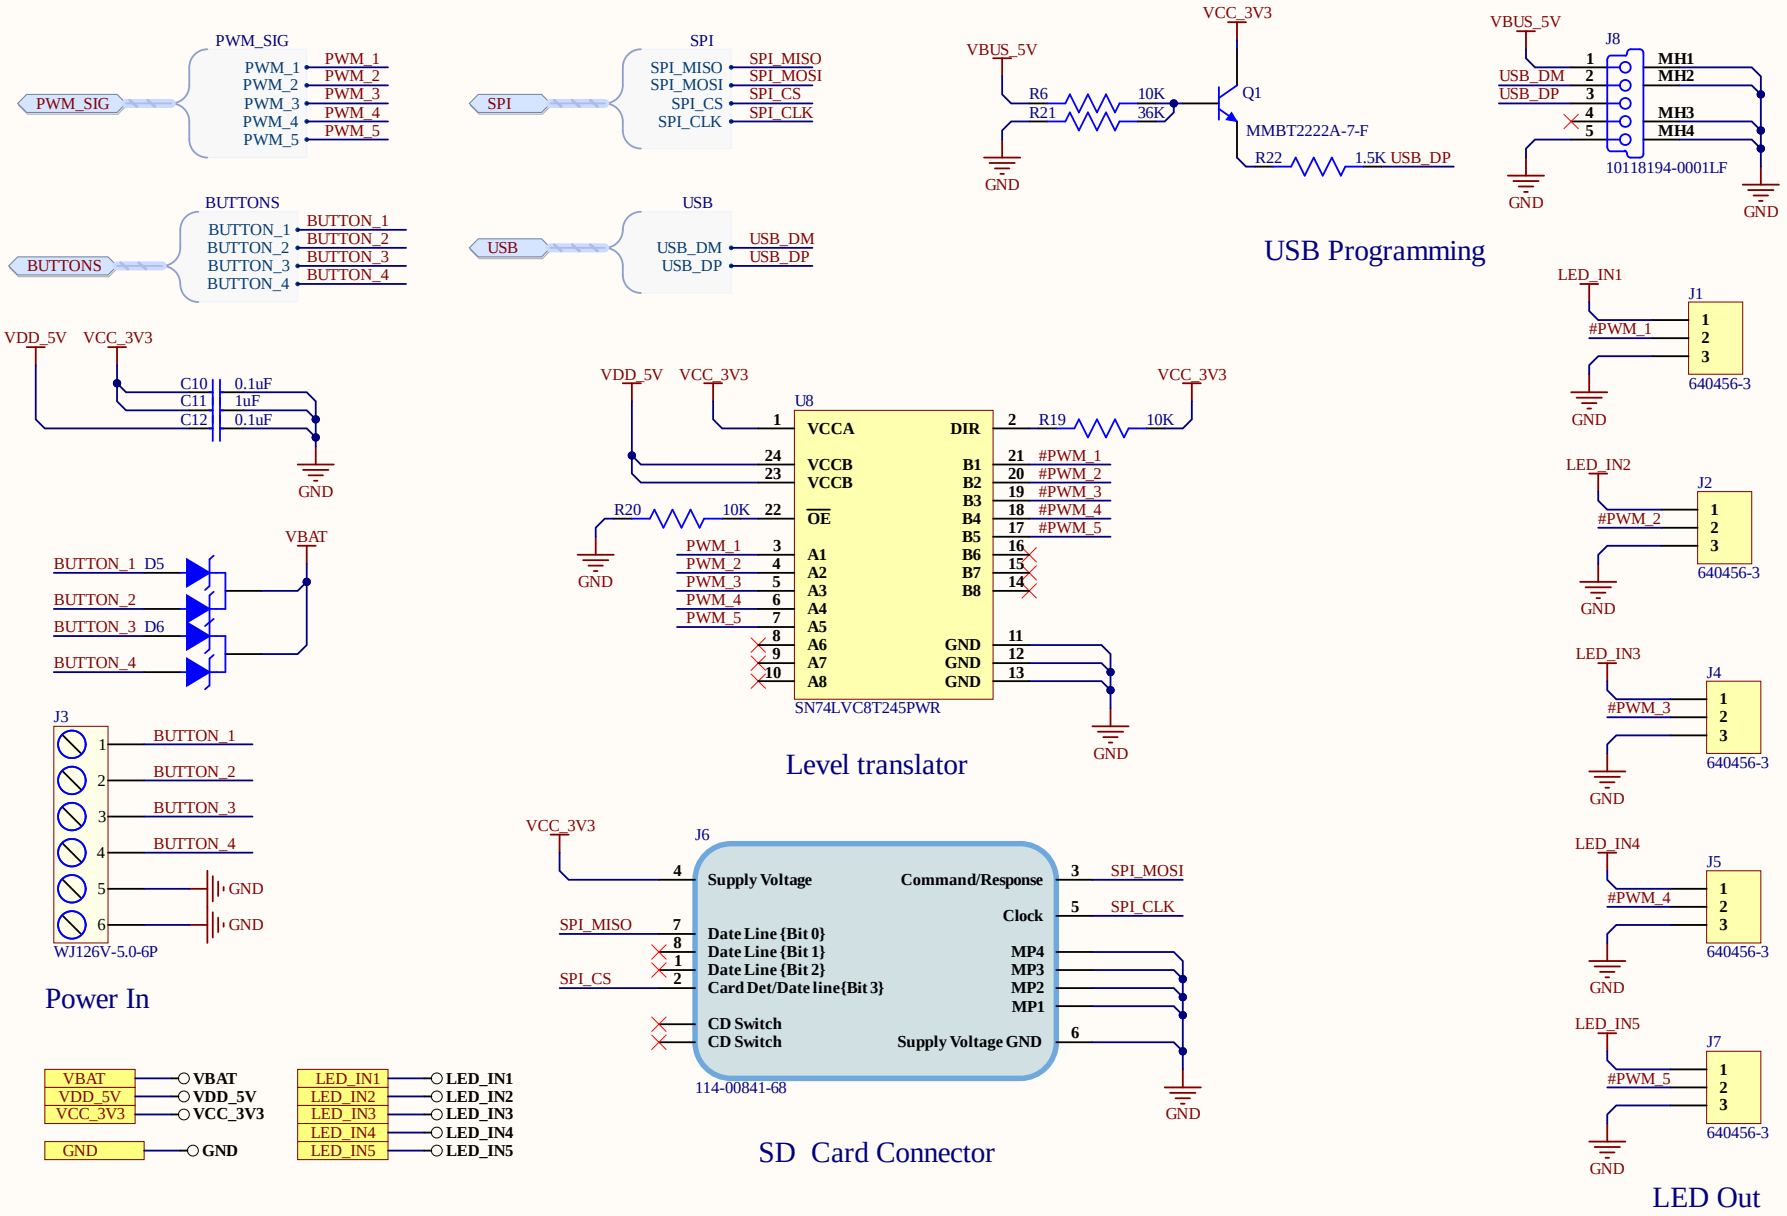
PWM_SIG
PWM_1
PWM_2
PWM_3
PWM_4
PWM_5
SPI
SPI_MISO
SPI_MOSI
SPI_CS
SPI_CLK
BUTTONS
BUTTON_1
BUTTON_2
BUTTON_3
BUTTON_4
USB
USB_DM
USB_DP
VCC_3V3
VBUS_5V
R6
10K
R21
36K
Q1
MMBT2222A-7-F
R22
1.5K USB_DP
GND
J8
MH1
MH2
MH3
MH4
10118194-0001LF
USB Programming
VDD_5V
C10
0.1uF
C11
1uF
C12
0.1uF
VBAT
BUTTON_1 D5
BUTTON_2
BUTTON_3 D6
BUTTON_4
J3
WJ126V-5.0-6P
Power In
U8
VCCA
VCCB
OE
DIR
R19
R20
A1
A2
A3
A4
A5
A6
A7
A8
B1
B2
B3
B4
B5
B6
B7
B8
SN74LVC8T245PWR
Level translator
J6
Supply Voltage
Command/Response
Clock
Date Line {Bit 0}
Date Line {Bit 1}
Date Line {Bit 2}
Card Det/Date line{Bit 3}
CD Switch
CD Switch
MP4
MP3
MP2
MP1
Supply Voltage GND
114-00841-68
SD Card Connector
LED_IN1
LED_IN2
LED_IN3
LED_IN4
LED_IN5
#PWM_1
#PWM_2
#PWM_3
#PWM_4
#PWM_5
J1
J2
J4
J5
J7
640456-3
LED Out