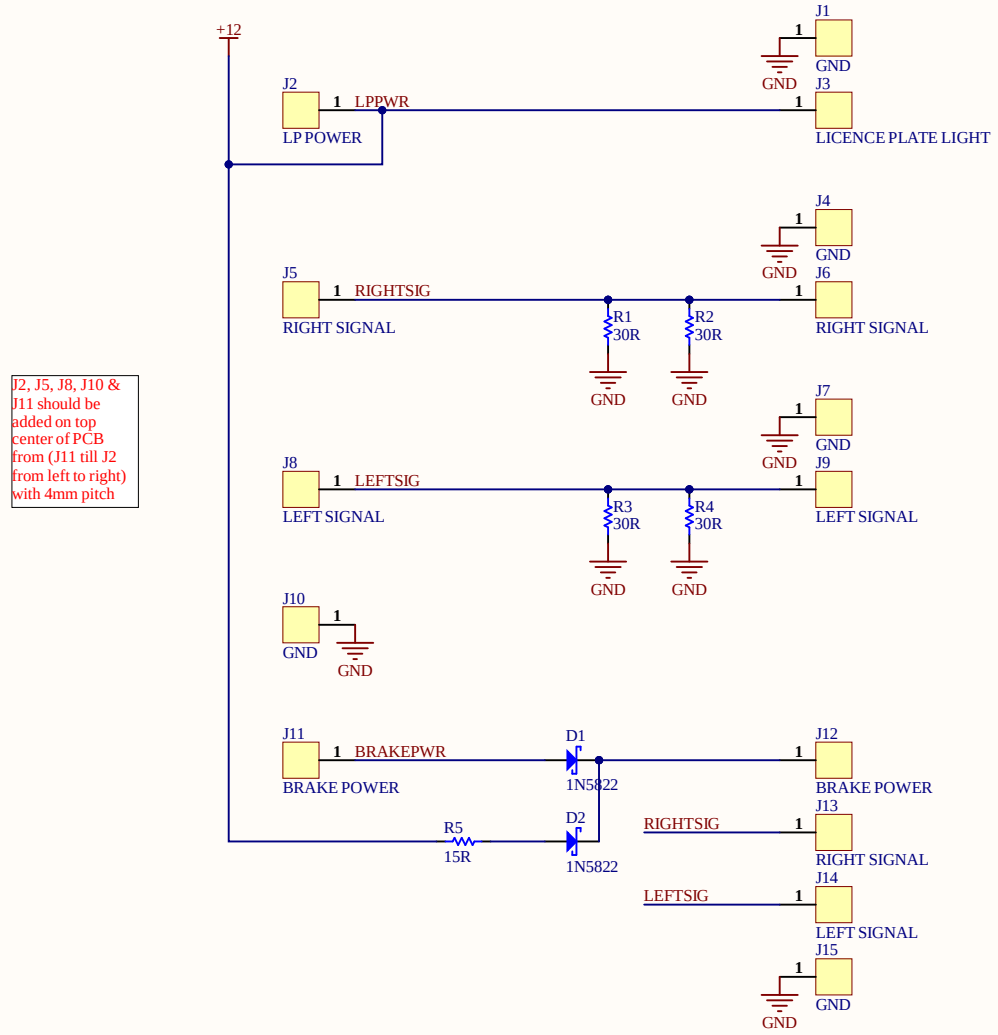


J2, J5, J8, J10 & J11 should be added on top center of PCB from (J11 till J2 from left to right) with 4mm pitch


J1, J3, J4, J6, J7 and J9 should be added on bottom right of PCB from (J9 till J1 from left to right) 4mm pitch

J12, J13, J14, J15 should be added on bottom left of PCB from (J15 till J12 from left to right) 4mm pitch

All the J designator should removed from PCB, instead label each pad with its name in PCB

Cannot open file D:\eSpark-Consultants\eSpark-Hardware\Altium Template\espark-consulting-group-800x300.jpg. File does not exist.

Title: Schematics Design v1.0.SchDoc	
File: Salvatore Brake Kit v1.0.PrjPcb	
Date: 7/12/2023	Page Num: 1
Drawn By: Huzaifa Ali	Page Total: 1

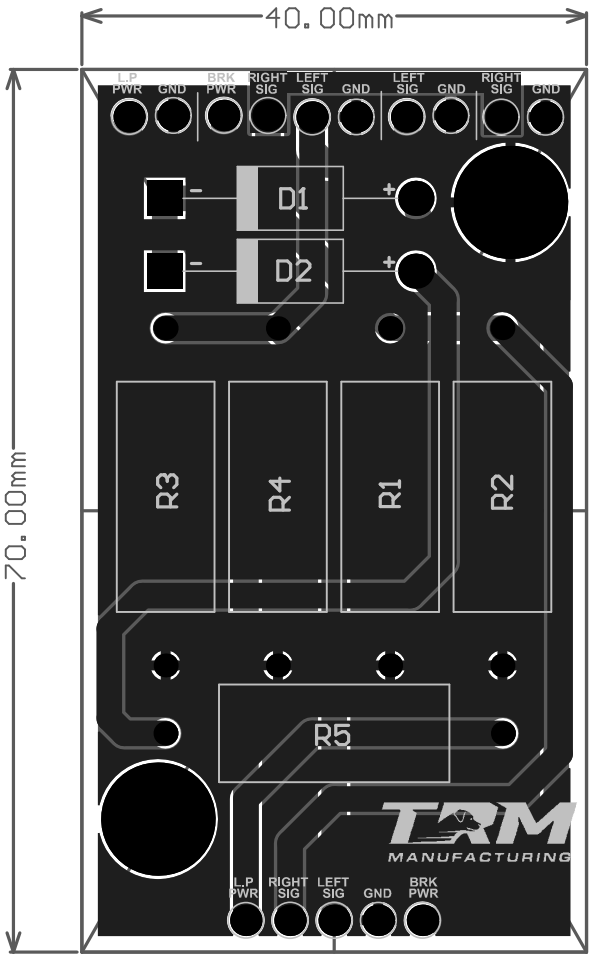

Layer	Name	Material	Thickness	Constant	Board Layer Stack
	Top Overlay				
	Top Solder	Solder Resist	3.00mil	3.5	
1	Top Layer		10.00mil		
	Dielectric 1	FR-4	37.00mil	4.8	
2	Bottom Layer		10.00mil		
	Bottom Solder	Solder Resist	3.00mil	3.5	
	Bottom Overlay				