Setup & Firmware Uploading Guide
Smart Button

Assembly Guide

1. **Prepare the Board for programming by connecting it to Voltlink programmer**
   Use the connection cable provided with the Voltlink adapter to connect with the Voltlink connector marked Serial Programming as shown in the image below

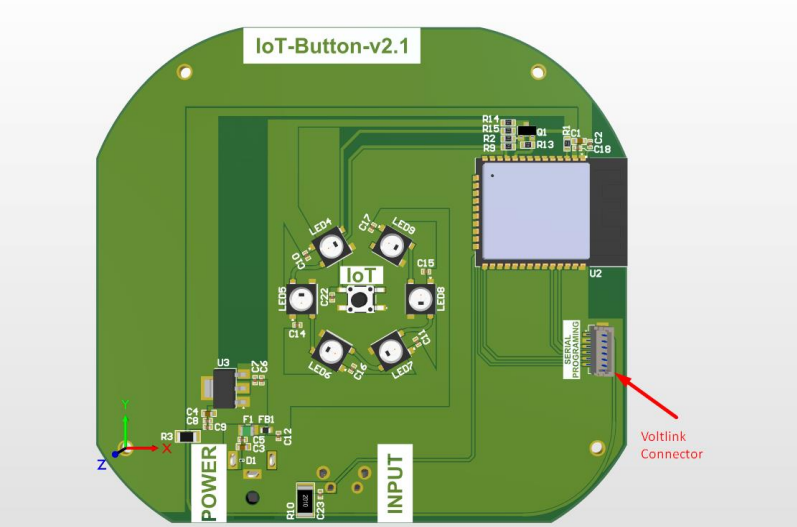


Figure: 1

Power up Sequence


Insert the Type-C cable into the Voltlink programmer. Next power the Smart speaker board by connecting it with the provided 5V adapter make sure the DC barrel jack connector lead is center positive.

Set up the firmware upload and development environment:


Step 1. After doing the above mentioned hardware sequence as shown above Download and install the Flash download tool to upload the given binary files to the Board

By clicking on this Link: Flash Download Tool User Guide

After downloading the Flash download tool extract the files
Next open the .EXE files make sure the following selections are done for Chiptype and WorkMode as shown below in image and click OK

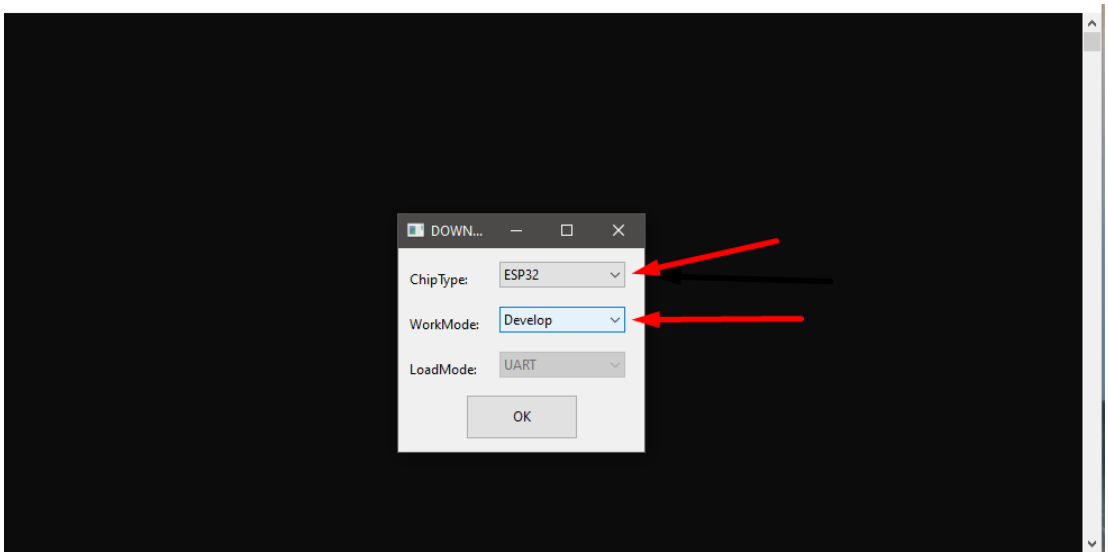


After clicking OK a pop up window will appear as shown in image below and some selections need to be made on this window as illustrated.

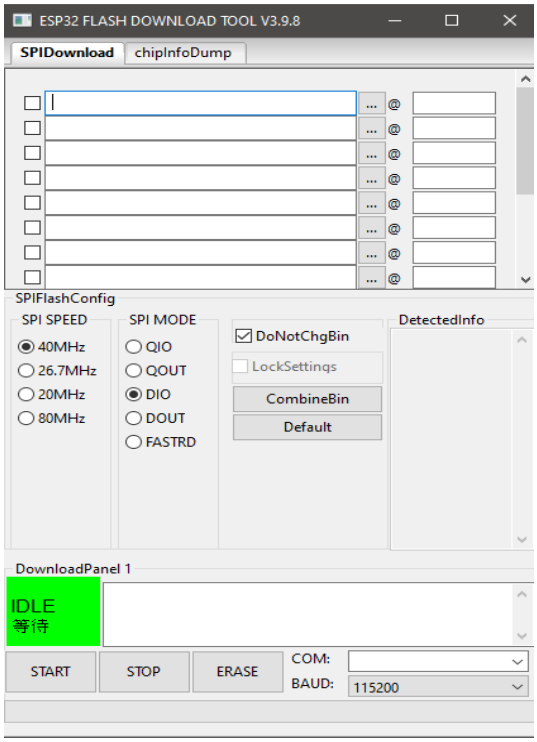

Guide for uploading Merged Binary files

As shown on the image below Click on the (…)(three Dots) to locate the provided Merged binary files Next make sure that there correct address are selected as shown in image below. Now upload the merged binary files by selecting the correct COM port on which the Voltlink programmer is attached and setting the Baud rate to 115200 as shown in image below and click start

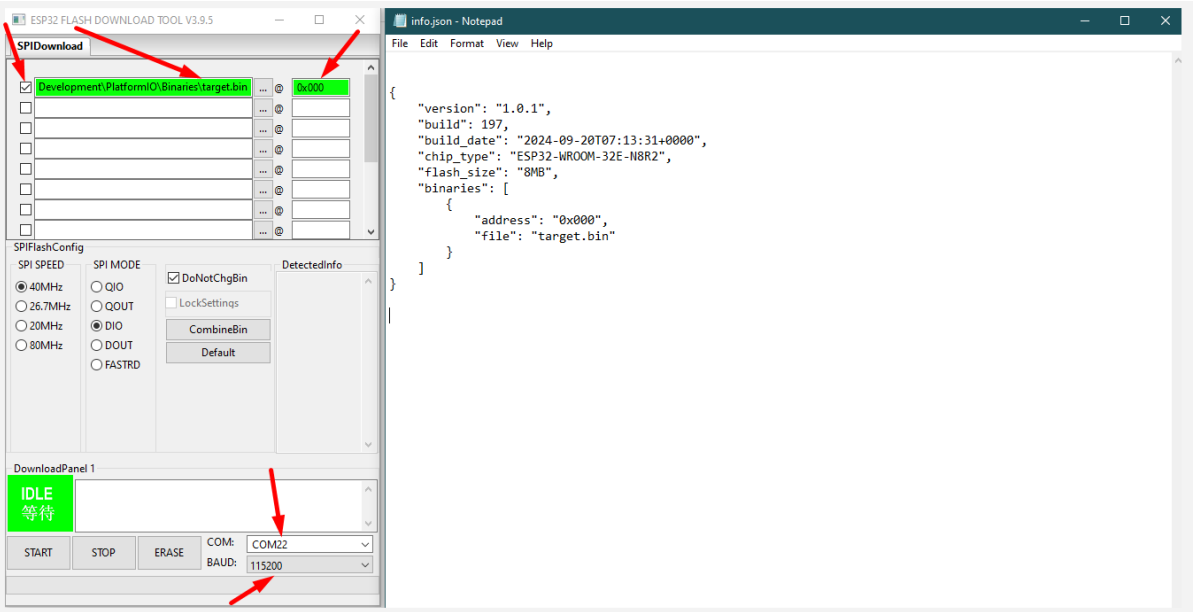

Guide for uploading Separate Binary files

As shown in the image below Click on the (…) (Three Dots) to locate individual provided separate binary files. Next make sure that there correct address are selected as shown in image below and click on the check boxes for them. Next select there correct Addresses as shown in image below select the correct COM port and Baud Rate and click Start button

