
VOLTLINK PROGRAMMER CONNECTION GUIDE:

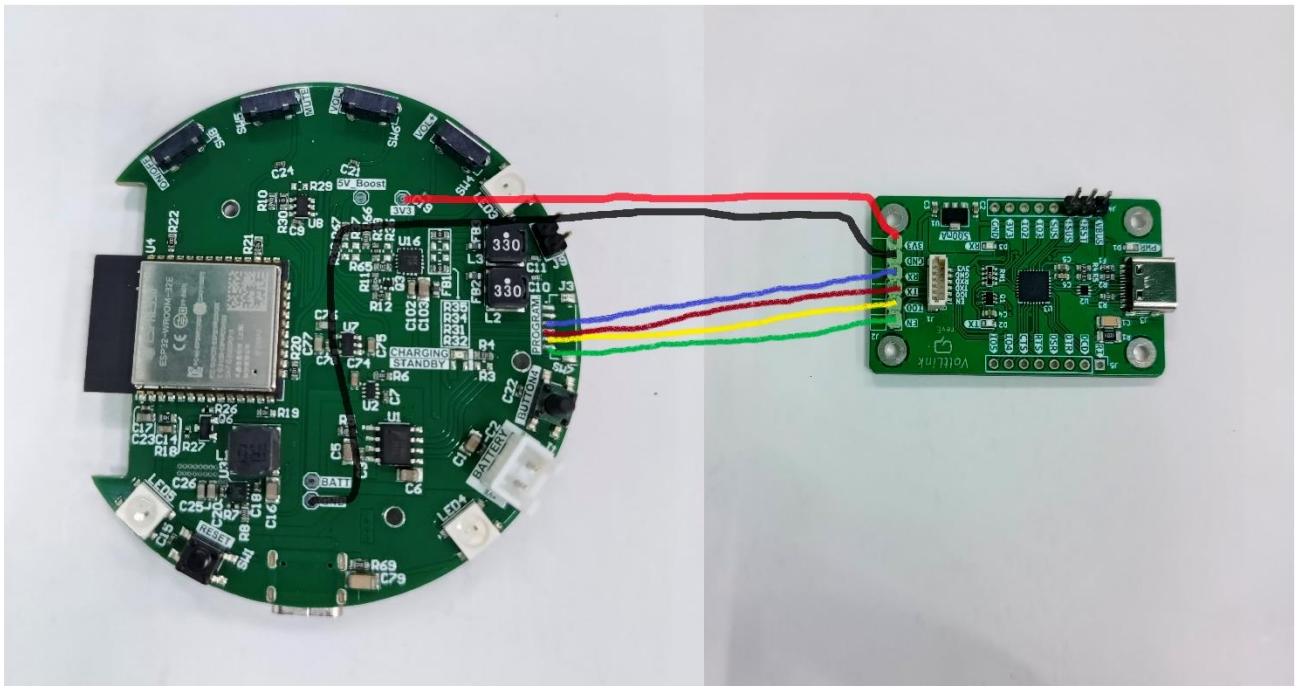

Step-1 Solder Power Connections:

1. Solder a male to female jumper wire to 3v3 test point on IOT speaker PCB (male side on IOT speaker PCB and female side on VOLTLINK Programmer)
2. Solder a male to female jumper wire to GND test point on IOT speaker PCB (male side on IOT speaker PCB and female side on VOLTLINK Programmer)

Step-2 Solder communication wires:

Using Wrapping wires solder the following connections:

3. Solder pin 3 of J3 with RX pin on VOLTLINK Programmer
4. Solder pin 4 of J3 with TX pin on VOLTLINK Programmer
5. Solder pin 5 of J3 with IO0 pin on VOLTLINK Programmer
6. Solder pin 6 of J3 with EN pin on VOLTLINK Programmer