

SNOW HOODS INSTALLATION INSTRUCTIONS

ATTENTION INSTALLING PERSONNEL

As a professional installer, you have an obligation to know the product better than the customer. This includes all safety precautions and related items.

Prior to actual installation, thoroughly familiarize yourself with this Instruction Manual. Pay special attention to all safety warnings. Often during installation or repair, it is possible to place yourself in a position which is more hazardous than when the unit is in operation.

Remember, it is your responsibility to install the product safely and to know it well enough to be able to instruct a customer in its safe use.

Safety is a matter of common sense...a matter of thinking before acting. Most dealers have a list of specific good safety practices...follow them.

The precautions listed in this Installation Manual are intended as supplemental to existing practices. However, if there is a direct conflict between existing practices and the content of this manual, the precautions listed here take precedence.



WARNING

HIGH VOLTAGE
DISCONNECT ALL POWER BEFORE SERVICING OR INSTALLING THIS UNIT. MULTIPLE POWER SOURCES MAY BE PRESENT. FAILURE TO DO SO MAY CAUSE PROPERTY DAMAGE, PERSONAL INJURY OR DEATH.



WARNING

DO NOT BYPASS SAFETY DEVICES.



WARNING

ONLY PERSONNEL THAT HAVE BEEN TRAINED TO INSTALL, ADJUST, SERVICE, MAINTENANCE OR REPAIR (HEREINAFTER, "SERVICE") THE EQUIPMENT SPECIFIED IN THIS MANUAL SHOULD SERVICE THE EQUIPMENT.

THIS EQUIPMENT IS NOT INTENDED FOR USE BY PERSONS (INCLUDING CHILDREN) WITH REDUCED PHYSICAL, SENSORY OR MENTAL CAPACITIES, OR LACK OF EXPERIENCE AND KNOWLEDGE, UNLESS THEY HAVE BEEN GIVEN SUPERVISION OR INSTRUCTION CONCERNING USE OF THE APPLIANCE BY A PERSON RESPONSIBLE FOR THEIR SAFETY.

CHILDREN SHOULD BE SUPERVISED TO ENSURE THAT THEY DO NOT PLAY WITH THE EQUIPMENT.

THE MANUFACTURER WILL NOT BE RESPONSIBLE FOR ANY INJURY OR PROPERTY DAMAGE ARISING FROM IMPROPER SUPERVISION, SERVICE OR SERVICE PROCEDURES. IF YOU SERVICE THIS UNIT, YOU ASSUME RESPONSIBILITY FOR ANY INJURY OR PROPERTY DAMAGE WHICH MAY RESULT. IN ADDITION, IN JURISDICTIONS THAT REQUIRE ONE OR MORE LICENSES TO SERVICE THE EQUIPMENT SPECIFIED IN THIS MANUAL, ONLY LICENSED PERSONNEL SHOULD SERVICE THE EQUIPMENT. IMPROPER SUPERVISION, INSTALLATION, ADJUSTMENT, SERVICING, MAINTENANCE OR REPAIR OF THE EQUIPMENT SPECIFIED IN THIS MANUAL, OR ATTEMPTING TO INSTALL, ADJUST, SERVICE OR REPAIR THE EQUIPMENT SPECIFIED IN THIS MANUAL WITHOUT PROPER SUPERVISION OR TRAINING MAY RESULT IN PRODUCT DAMAGE, PROPERTY DAMAGE, PERSONAL INJURY OR DEATH.

KIT SUMMARY

KIT NO	DESCRIPTION	APPLICABLE UNITS
3K020967-2	Snow Guard-Front	DH9VSA241CAA DH9VSA361CAA DH7VSA6010AA DC9VSA6010AA
3P434587-5	Snow Guard-Rear	
3P434588-1	Snow Guard-Side	

Our continuing commitment to quality products may mean a change in specifications without notice.

© 2024 **DAIKIN COMFORT TECHNOLOGIES MANUFACTURING, L.P.**

IOD-7178
12/2024

19001 Kermier Rd. Waller, TX 77484
www.daikincomfort.com



SAFETY CONSIDERATIONS

Read these Safety Considerations carefully before installing the snow hoods. After completing the installation, make sure that the unit operates properly during the startup operation.

- Inform customer that they should store this Installation Manual for future reference.



WARNING

SAFELY DISPOSE OF ALL PACKING AND TRANSPORTATION MATERIALS IN ACCORDANCE WITH FEDERAL/STATE/LOCAL LAWS OR ORDINANCE. PACKING MATERIALS SUCH AS NAILS AND OTHER METAL OR WOOD PARTS, INCLUDING PLASTIC PACKING MATERIALS USED FOR TRANSPORTATION WILL RESULT IN INJURIES OR DEATH BY SUFFOCATION.



WARNING

BE SURE TO DISCONNECT THE POWER CABLE PLUG FROM THE PLUG SOCKET BEFORE DISASSEMBLING THE EQUIPMENT FOR SNOW HOOD INSTALLATION. WORKING ON THE EQUIPMENT THAT IS CONNECTED TO THE POWER SUPPLY MAY CAUSE AN ELECTRIC SHOCK.



WARNING

ONLY QUALIFIED PERSONNEL SHALL CARRY OUT THE INSTALLATION WORK. INSTALLATION MUST BE DONE IN ACCORDANCE WITH THIS INSTALLATION MANUAL. IMPROPER INSTALLATION COULD RESULT IN WATER LEAKAGE.



WARNING

ASSEMBLY BY MORE THAN TWO PEOPLE IS RECOMMENDED.



WARNING

USE ONLY SPECIFIED ACCESSORIES AND PARTS FOR INSTALLATION WORK. FAILURE TO USE SPECIFIED PARTS COULD RESULT IN WATER LEAKAGE.



WARNING

USE ONLY THE SCREWS PROVIDED OR SCREWS OF AN EQUIVALENT LENGTH.



CAUTION


THE HEAT EXCHANGER FINS ARE SHARP ENOUGH TO CUT, AND MAY RESULT IN INJURY IF IMPROPERLY USED. TO AVOID INJURY WEAR GLOVES OR COVER THE FINS WHEN WORKING AROUND THEM.

NOTE: UNIT PANELS WILL BE REMOVED DURING THIS INSTALLATION.






Take care not to damage unit internals. The snow hoods are also suitable for use as hail guards in hail prone locations. This document contains information to ensure proper installation only. Consult local code for any wind load tie down requirements.

COMPONENTS




Make sure that the Accessories shown below are all present.

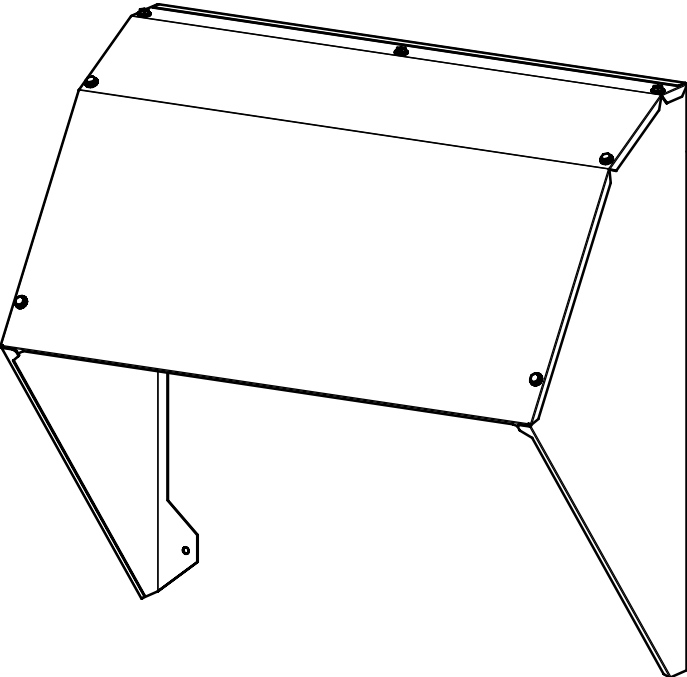NAME		SNOW HOOD PANELS	SET SCREW	MANUALS, ETC.
QUANTITY		SEE BELOW	QUANTITY	1 PC.
SHAPE	CCHP FIT Unit Front KPS00605		22	INSTALLATION MANUAL

COMPONENTS (CONT.)

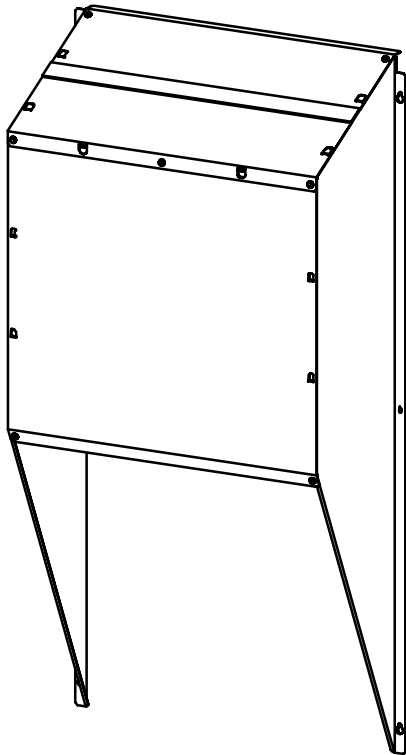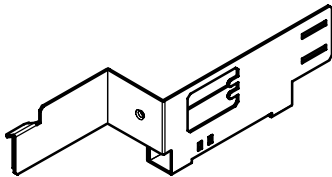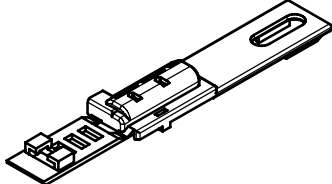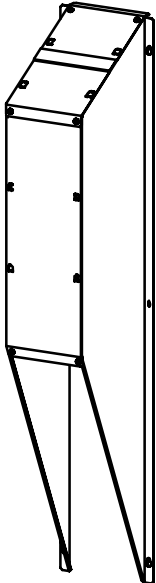NAME			SNOW HOOD PANELS	SET SCREW	MANUALS, ETC.
QUANTITY			SEE BELOW	QUANTITY	1 PC.
SHAPE	Unit Set KPS00608	CCHP FIT Unit Rear KPS00606		11	INSTALLATION MANUAL MOUNTING PLATE  CUSHION MATERIAL  CLAMP MATERIAL(LARGE)  CLAMP MATERIAL (SMALL)  THERMISTOR FIXING PLATE 
		CCHP FIT Unit Side KPS00607		12	INSTALLATION MANUAL



SNOW GUARD COMPONENTS

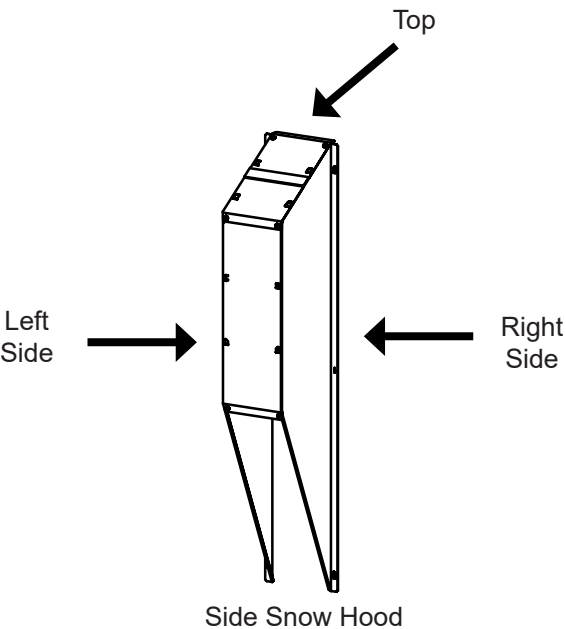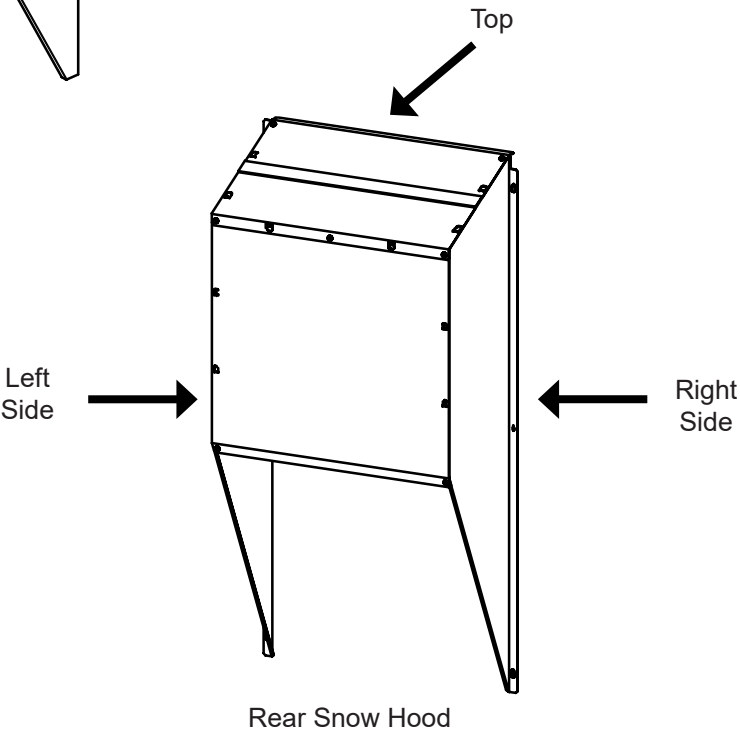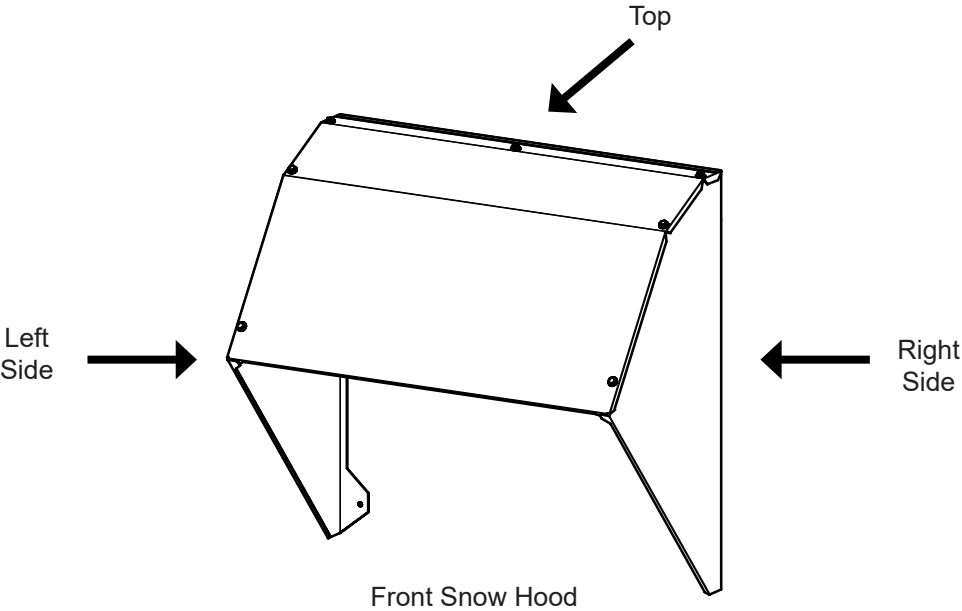


FRONT SNOW HOOD INSTALLATION

1. Remove the eight (8) screws that are holding the two front grills in place as shown below.


NOTE: Save all screws.

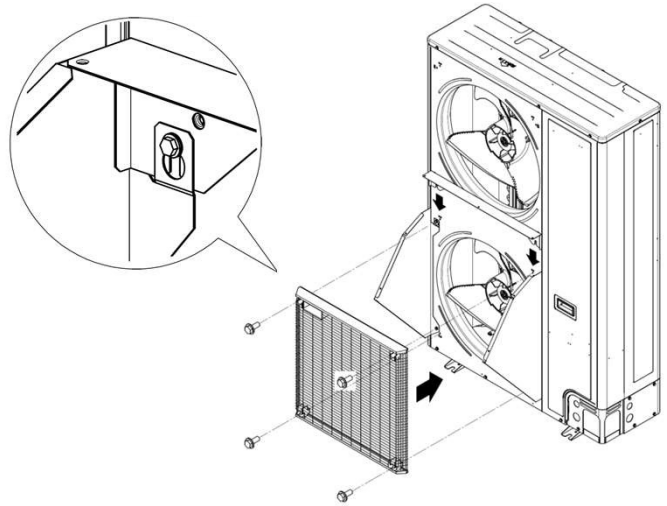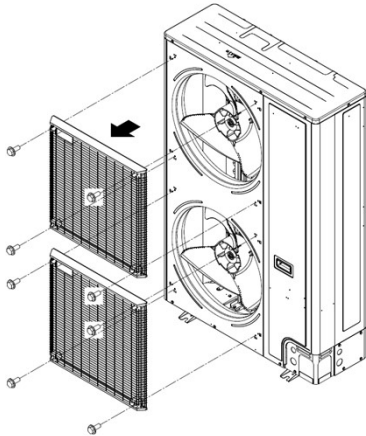

2. Start the installation from the lower snow hood. Install the upper screw using two (2) of the accessories screws. Do not fully tighten screws. Hook the keyhole in the side plate to the screw.

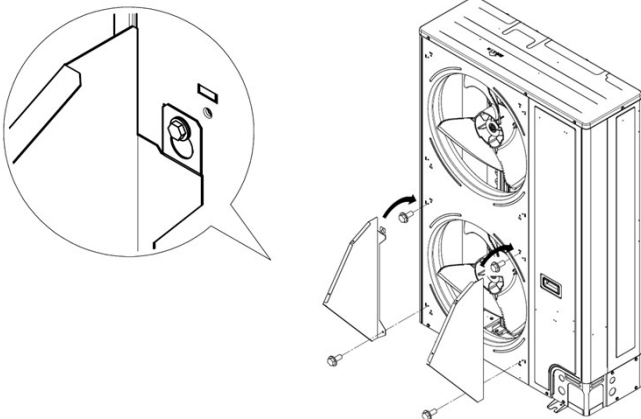


7. Secure the top plate of the snow hood in place using seven (7) screws of the accessories screws.

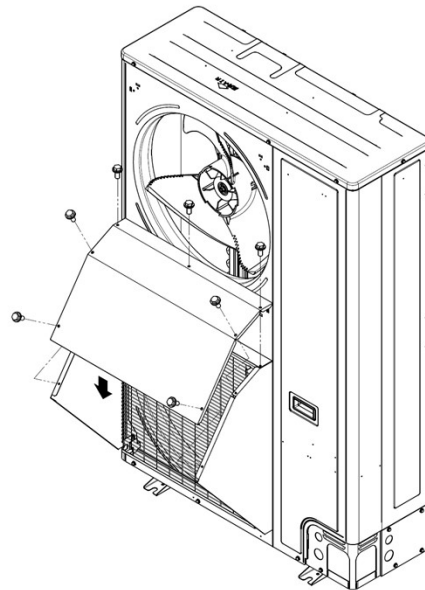

3. Install the bottom screw using two (2) of the accessories screws. Do not fully tighten screws.
4. Insert the mounting plate between the side plate of the snow hood attached in step 2 and the front plate of the unit.
5. Tighten the four (4) screws loosely attached in step 2 and 3 fully.
6. Install the front grille again using four (4) of the screws removed in step 1.


8. Refer to step 2 through 7 and install the upper snow hood as well.

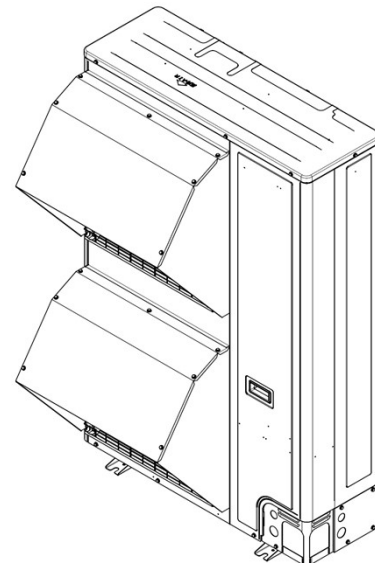


SIDE AND REAR SNOW HOOD INSTALLATION

[Assemble the side snow hood]

1. Insert the claws four (4) places of the top plate_1 into the square holes of the side plate (left) and side plate (right) and tighten them with the two (2) screws of the accessories.

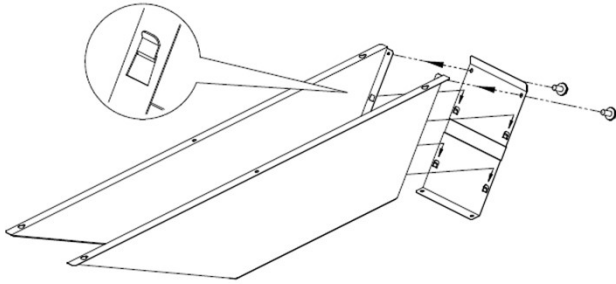


2. Insert the top plate_2 between the top plate_1 and the side plate (left), the side plate (right).
NOTE: Make sure that the four (4) claws are inserted into the square holes.
3. Tighten the side plate (left), side plate (right), top plate_1, and top plate_2 with four (4) screws of the accessories.

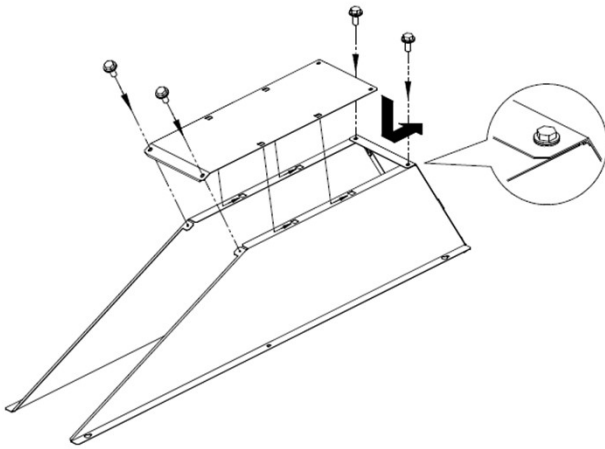

[Assemble the rear snow hood]


1. Insert the claws four (4) places of the top plate_1 into the square holes of the side plate (left) and side plate (right) and tighten them with the two (2) screws of the accessories.

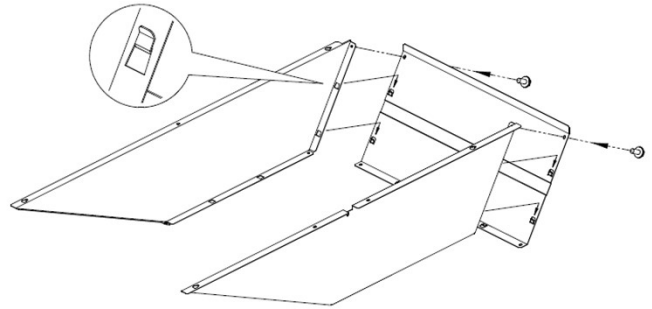

2. Insert the top plate_2 between the top plate_1 and the side plate (left), the side plate (right).

NOTE: Make sure that the six (6) claws are inserted into the square holes

3. Tighten the side plate (left), side plate (right), top plate_1, and top plate_2 with five (5) screws of the accessories.

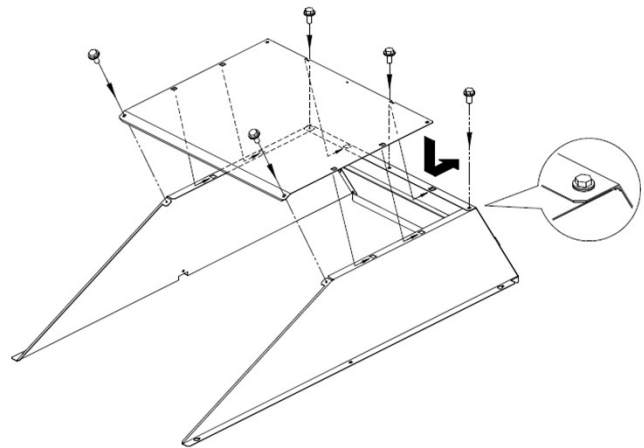




WARNING

VERIFY THAT ALL POWER IS OFF.

[Before installation of side and rear snow hood]


1. To remove the ambient thermistor, unscrew that are holding the casing of the unit.
 - Remove the claws in ten (10) places and remove the suction grille.

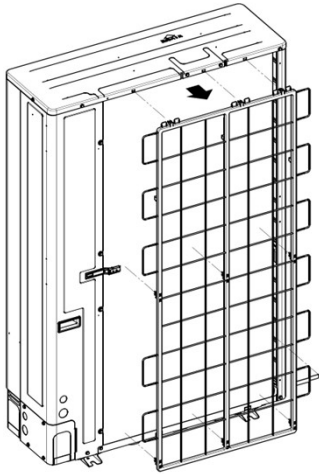


- Remove the three (3) screws that are holding the top plate.
- Remove a screw and push down to remove the front plate.
- Remove a screw and the side cover.
- Remove the eight (8) screws and the right side plate.
- Remove the four (4) screws and the side cover.

NOTE:

- Save all screws.
- The screws marked with * are 3 class hexagon head tapping screws. Use the same screws when reassembling.

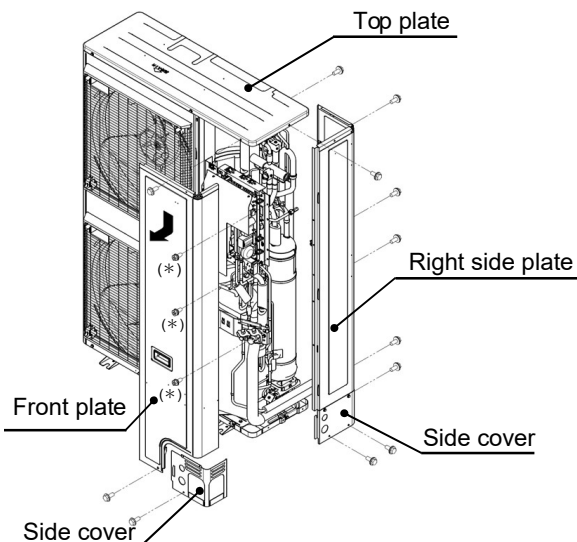


- Pull out the thermistor mounting plate from right side plate to the forward, and then slide it to the right to remove it.

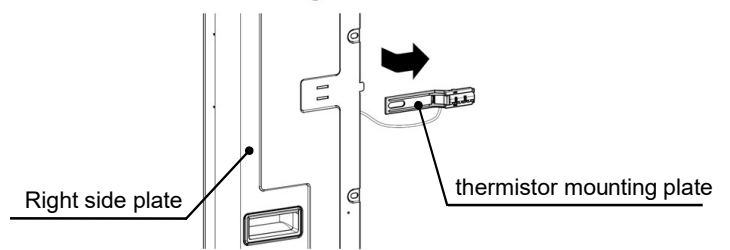


- Open the thermistor mounting plate and remove the ambient thermistor.

2. Remove the cushion material attached to the ambient thermistor and pull out from A part.

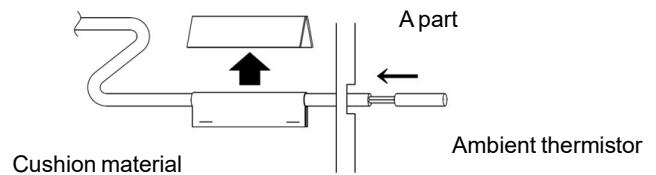


3. Reattach the CUSHION MATERIAL of the accessories firmly in the following position.


NOTE: Do not use cutlery as it may damage the thermistor.

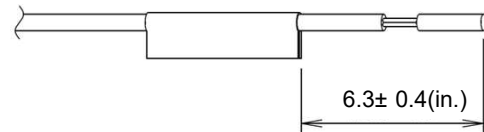


4. Use the CLAMP MATERIAL (LARGE) of the accessories, secure it so that it does not come off.
5. Pull out the thermistor from A part.

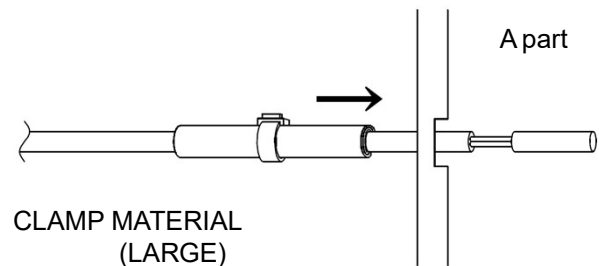


6. Insert the thermistor into **B** part of MOUNTING PLATE of the accessories.

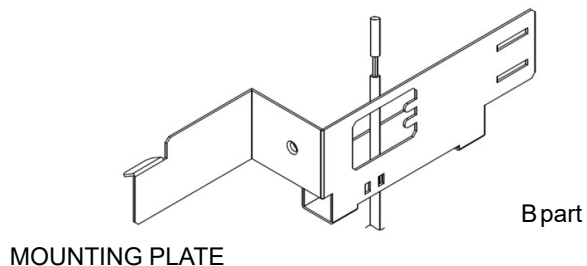


7. Attach the thermistor to the THERMISTOR FIXING PLATE of accessories.

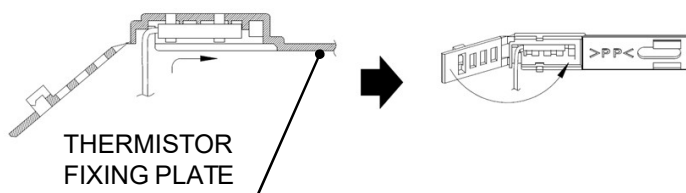



8. Insert the THERMISTOR MOUNTING PLATE of STEP7 into the claw of the MOUNTING PLATE. And at that time, insert the **C** part into the **D** part and attach it.

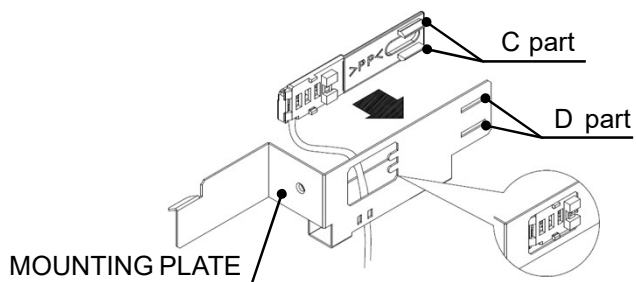

9. Thread the CLAMP MATERIAL (SMALL) of the accessory through the **E** part and fix the lead wire of the thermistor.

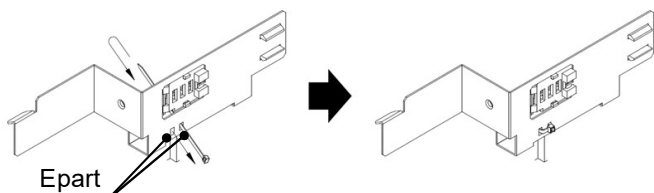


10. After inserting the **F** part of the mounting plate into the **G** part of the unit, reinstall the all casings of unit removed in STEP 1.

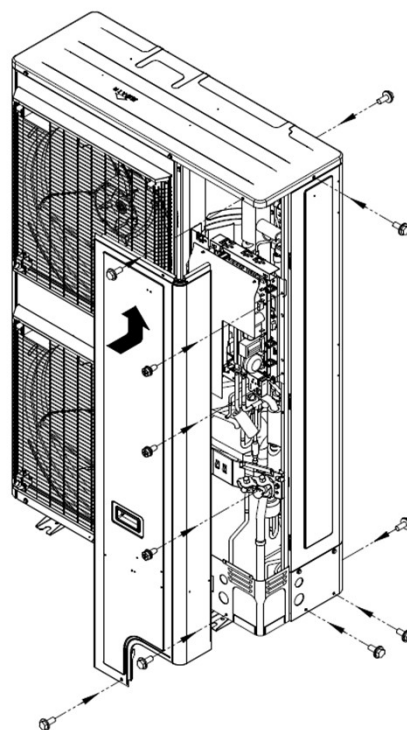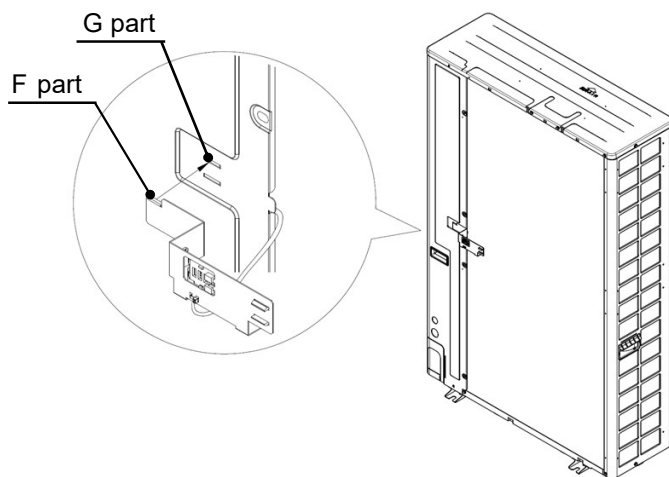


SIDE AND REAR SNOW HOOD INSTALLATION



1. Install using six (6) screws of the accessories as shown below.
NOTE: Do not fully tighten screws.
2. Loosen the top and bottom two screws of the right side plate of the unit.
3. Remove the two (2) screws in the center of the right side plate of the unit.
NOTE: Save all screws.
4. Remove the handle.

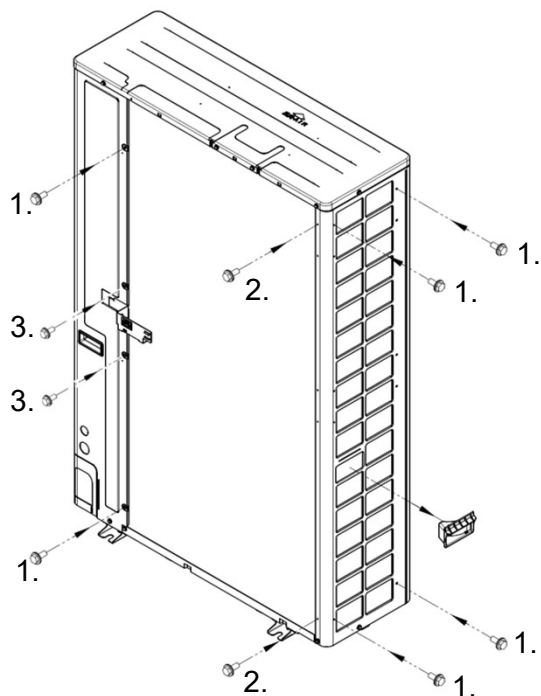

5. Hook the keyholes of the rear snow hood to the screw installed STEP 1 and 2.
6. Tighten the middle of the side and rear snow hood using three (3) of the accessories and the one screw set aside.
7. Tighten the six (6) screws loosely attached in STEP 1 completely.

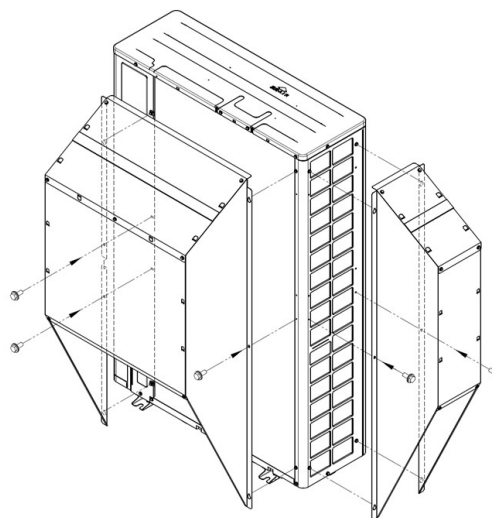

8. Tighten the rear snow hood and mounting plate with a screw of the accessories.

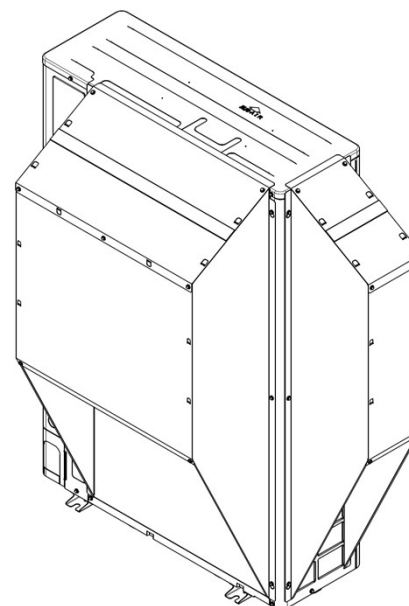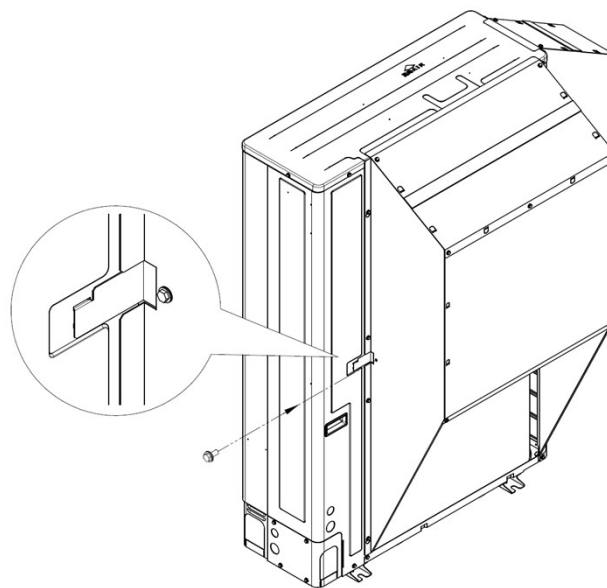

THIS PAGE IS LEFT INTENTIONALLY BLANK.

CUSTOMER FEEDBACK

Daikin is very interested in all product comments.

Please fill out the feedback form on the following link:

<https://daikincomfort.com/contact-us>

You can also scan the QR code on the right to be directed to the feedback page.



Our continuing commitment to quality products may mean a change in specifications without notice.

© 2024 **DAIKIN COMFORT TECHNOLOGIES MANUFACTURING, L.P.**

19001 Kermier Rd. Waller, TX 77484

www.daikincomfort.com