


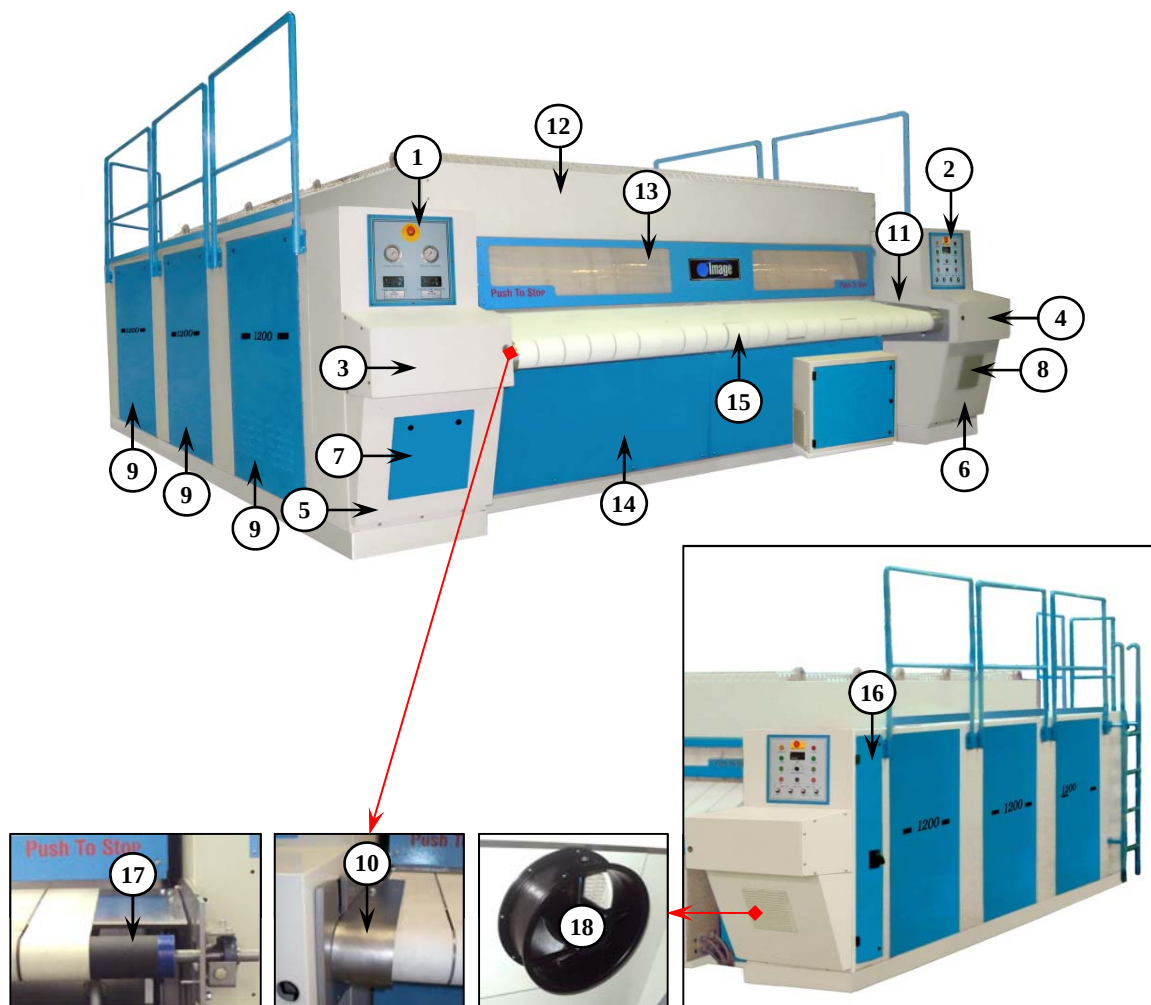


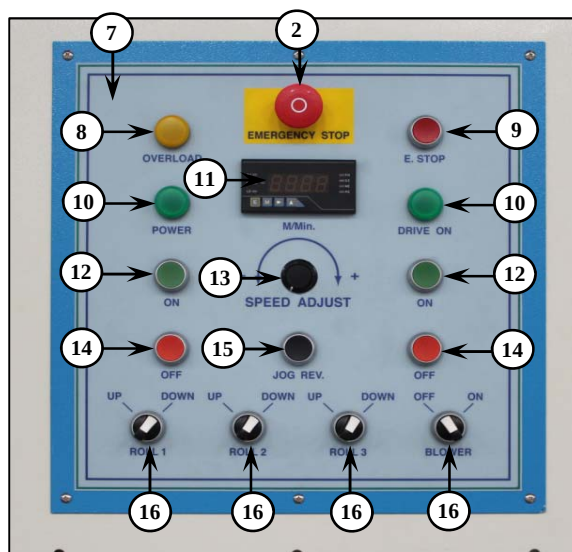


Item	Part No.	Qty.	Description
1	A3-SIM1-002	1	Operating panel, Right
2	A3-SIM1-001	1	Operating panel, Left
3	A3-S120-003	1	Cabinet, Feed belt cover, Right
4	A3-S120-004	1	Cabinet, Feed belt cover, Left
5	A3-S120-005	1	Cabinet, Front lower cover
6	A3-S120-006	1	Cabinet, Front lower air vent cover
7	A3-S120-007	1	Cover plate air supply
8	A0-E012-013	1	Filter, Air Cooling
9	A3-S120-015	6	Side door panel (Left/Right)
10	A3-SIM1-003	1	Safety cover end, Feed belt right
11	A3-SIM1-004	1	Safety cover end, Feed belt left
12	A3-S120-201	1	Front cover plate, Top
13	A3-S120-202	1	Safety finger guard
14	A3-S120-203	2	Front cover plate, lower
15	A0-A002-002-12	21	Feed belt
16	A3-S120-010	1	Electrical door cover
17	A0-A048-001	1	Grip Tape 3" (Black)
18	A0-E012-005	1	Cooling Fan

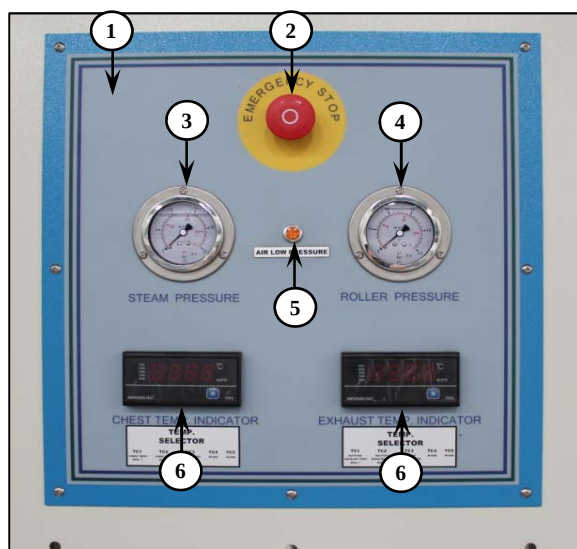


Item	Part No.	Qty.	Description
1	A0-A090-111	1	Sticker DCI Left
2	A0-E032-022	2	Emergency stop
	A0-E032-023	2	Connector Base, E-Stop
	A0-E032-024	2	Contact Block, E-Stop
3	A0-A035-018	1	Pressure Gauge for Steam Pressure (0-25 Bar)
4	A0-A035-011	1	Pressure gauge for air pressure (0-2.5 bar)
5	A0-E059-006	1	Lamp, Indicator, Amber
6	A0-E027-063	2	Temperature Indicator (50-1200 C)
7	A0-A090-073	1	Sticker Decal (Right)
8	A0-E035-052	1	Pilot Lamp (Yellow)
9	A0-E032-223	1	Push Button Switch (Red)
10	A0-E035-050	2	Pilot Lamp (Green)
11	A0-E028-088	1	Counter Rate Meter
12	A0-E032-068	2	Push Button Switch (Green)
13	A0-E038-005	1	Speed Volume Adjust
14	A0-E032-069	2	Push Button Switch (Red)
15	A0-E032-062	1	Push-Button Switch (Black)
16	A0-E032-073	4	Selector Switch Actuator (Black/white)

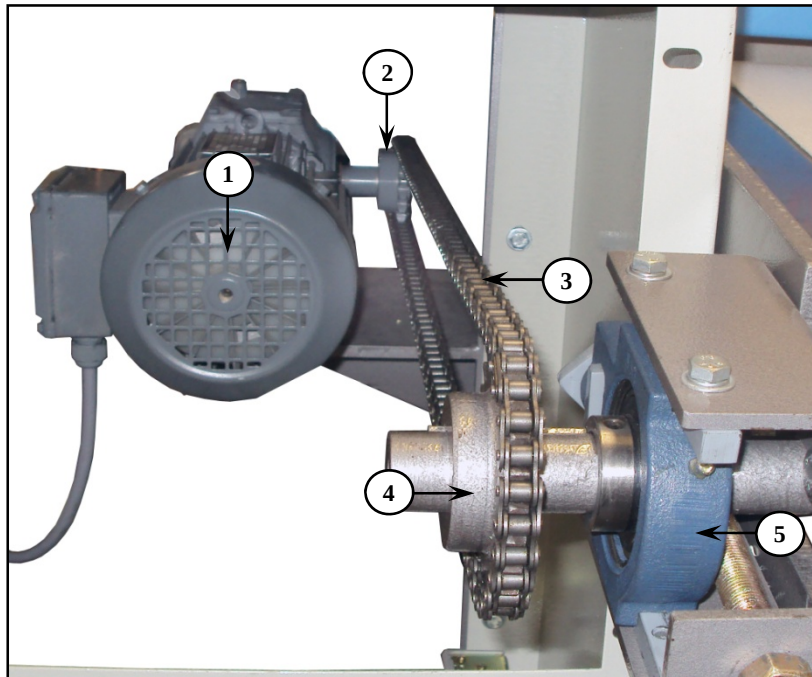


Item	Part No.	Qty.	Description
1	A0-E008-393	1	Helical Worm Gear Motor
2	A0-M001-054-03	1	Feed motor sprocket
3	A0-A051-004	1	Single chain
4	A0-M001-059	1	Feed roll sprocket
5	A0-A004-154	2	Take up bearing

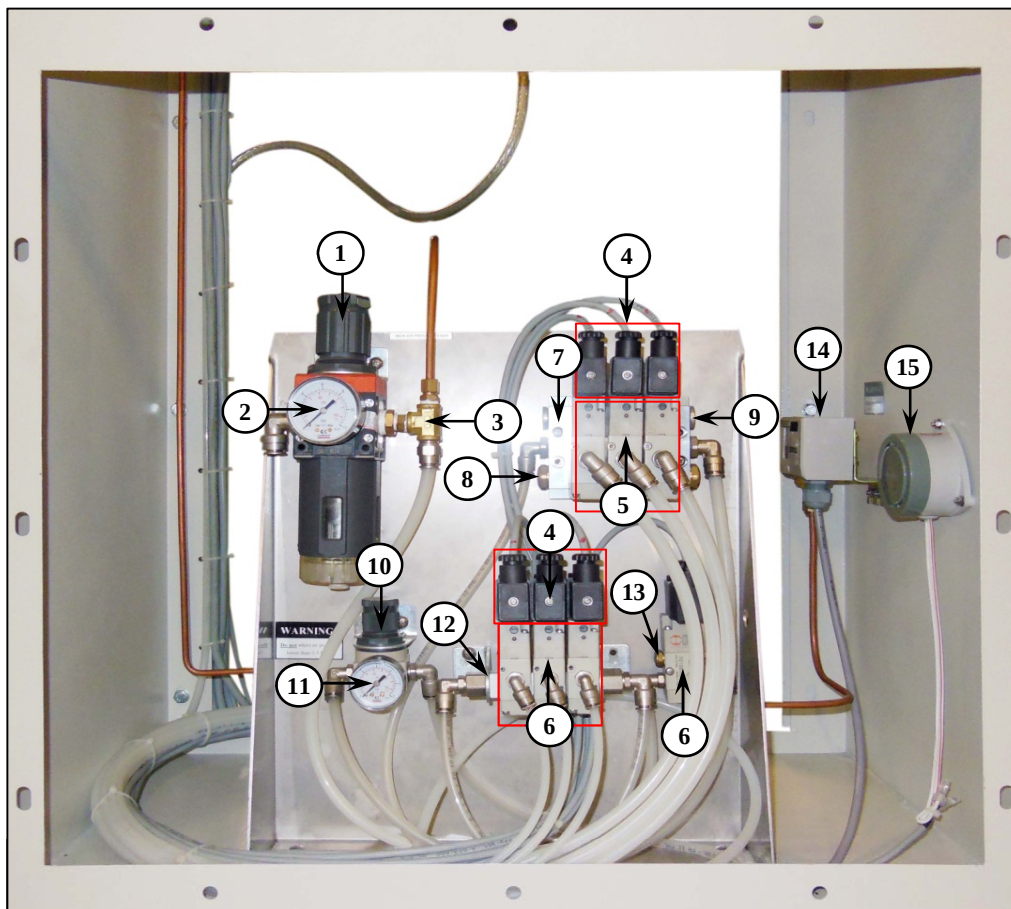


Item	Part No.	Qty.	Description
1	A0-P004-064	1	Regulator
2	A0-A035-025	1	Pressure Gauge
3	A0-A046-004	1	Tee Brass Fitting
	A0-A011-093	1	Nipple Brass 1/4"
	A0-A096-044	1	Brass Reducer
	A0-A046-030	1	Nipple
4	A0-P005-180	7	Coil, Air Solenoid Valve
	A0-P005-181	7	Coil Connector
5	A0-P005-032	3	Solenoid Valve 3/2, 1/4"
6	A0-P005-033	4	Solenoid Valve 3/2, 1/8"
7	A0-P005-130	1	Multiple Bases 1/4" 3Pos
8	A0-P006-016	2	Silencers SFE 3/8"
9	A0-P006-109	2	Plug With Exagon Embedded 3/8"
10	A0-P004-021	1	Regulator 1/4"
11	A0-A035-024	1	Pressure Gauge
12	A0-P005-025	1	Manifolds 1/8" 3P
	A0-P005-128	1	Bracket Set H 60
13	A0-P006-017	4	Silencers SFE 1/8"
14	A0-E018-020	1	Pressure switch
15	A0-E042-002	1	Buzzer bell EBL-2 24 VDC

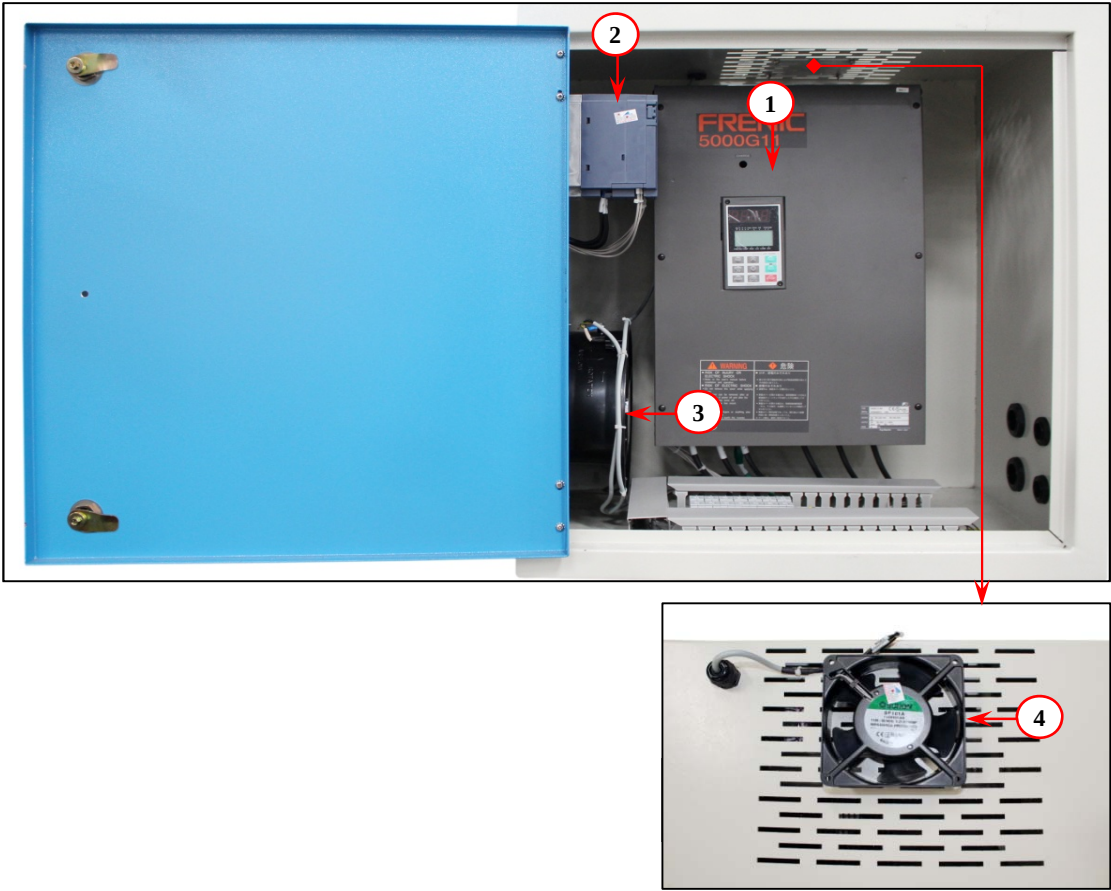


Item	Part No.	Qty.	Description
1	A0-E001-914	1	Inverter 40HP, 430V. 3PH.
2	A0-E001-913	1	Inverter 2HP, 430V. 3PH.
3	A0-E012-005	1	Fan, Cooling
4	A0-E012-008	1	Fan, Cooling

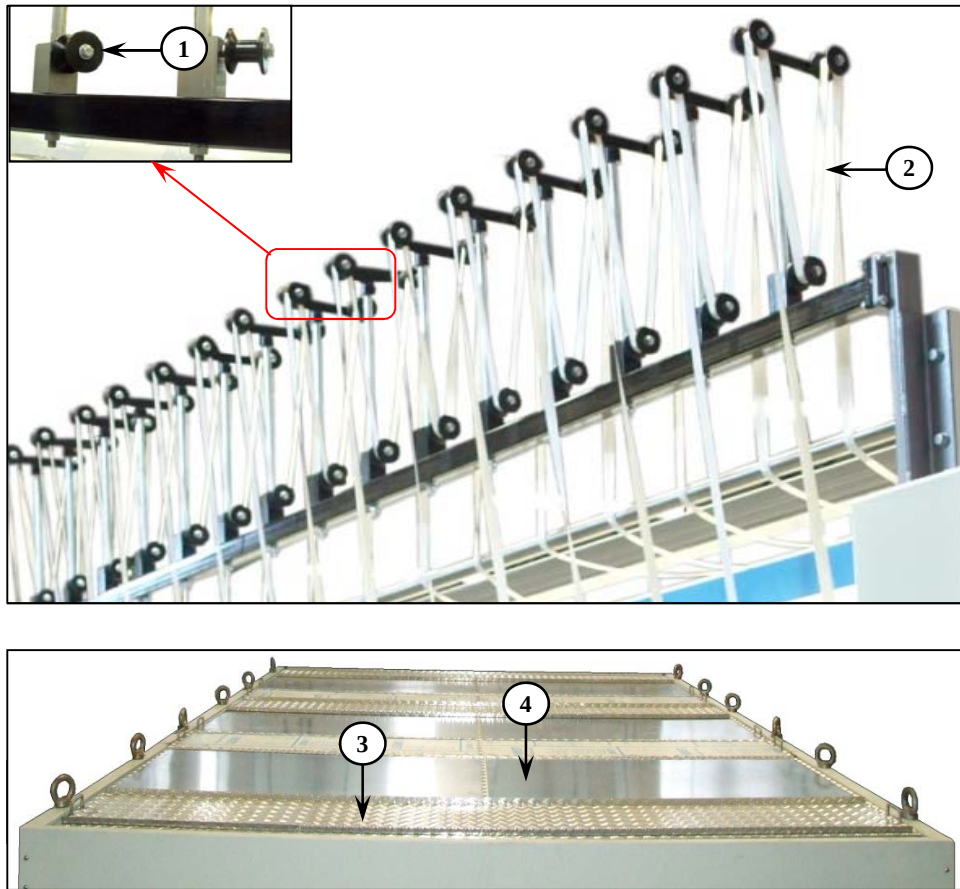


Item	Part No.	Qty.	Description
1	A0-A125-030	51	Black Roller For Guide Tape
2	A0-A002-177	-	Ribbon,Guide Tape Polyester Size. 3/4"
3	A3-S120-212	4	Canopy
4	A3-S120-213	3	Translucent canopy

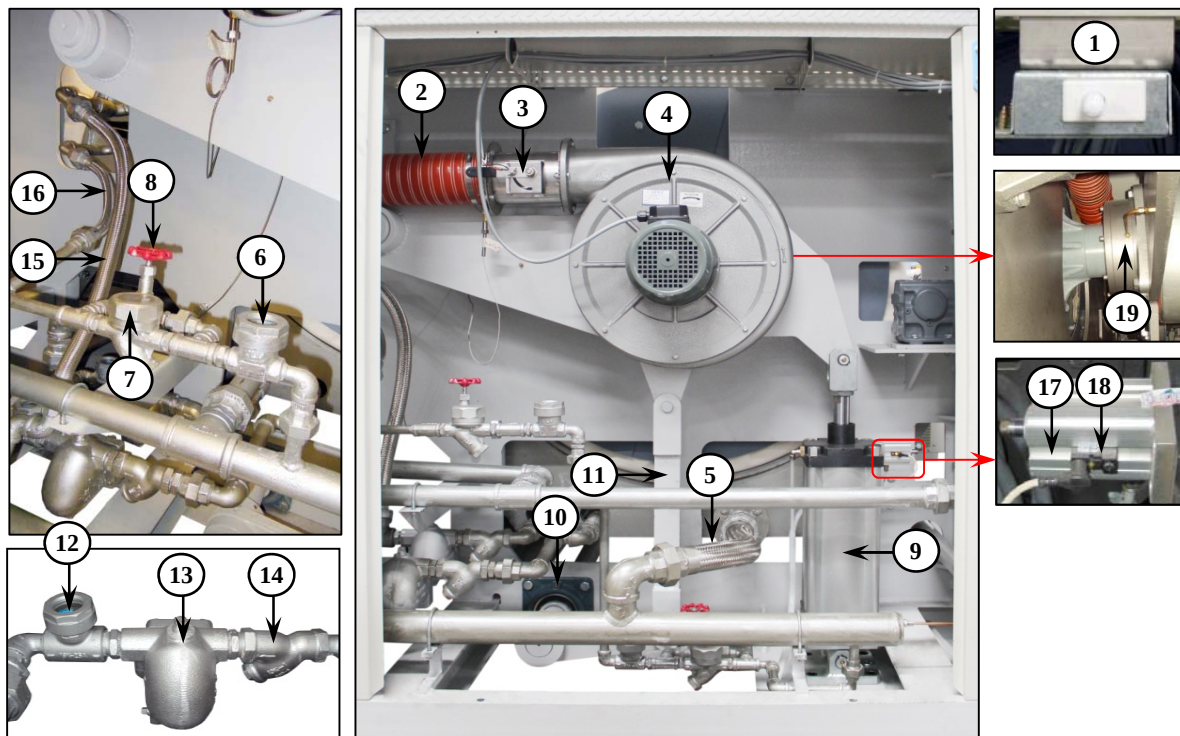


Item	Part No.	Qty.	Description
1	A0-E015-011	1	Door Over Travel Switch
2	A0-A018-032	1	Fiberglass exhaust pipes
3	A0-X053-004	1	Butterfly valve
4	A0-E008-923	1	Suction Blower
5	A0-A017-084	1	Flexible Pipe, 2"X600 MM.
6	A0-A100-001	2	Sight glass 1/2"
7	A0-A019-013	2	Steam Trap 1/2"
8	A0-A021-050	2	Globe Valve 1/2"
9	A0-P003-068	1	Air cylinder
10	A0-A004-287	1	Y-Bearing
11	A3-S120-036	1	Control arm with key
12	A0-A100-002	2	Sight Glass 1"
13	A0-A019-015	2	Steam Trap 1"
14	A0-A099-011	2	Y-Strainer 1"
15	A0-A017-085	1	Flexible Pipe, 1"X800 MM.
16	A0-A017-086	1	Flexible Pipe, 3/4"X400 MM.
17	A0-P003-166	1	Cylinder short stroke
18	A0-E014-016	1	Reed sensor
19	A0-A007-036	1	Bearing housing complete set
	A0-A007-037	1	Bearing housing main
	A0-A007-038	1	Bearing retainer plate
	A3-S120-307	1	Collar, Seal For Main Bearing Housing. Blower Side
	A0-A004-163	1	Bearing

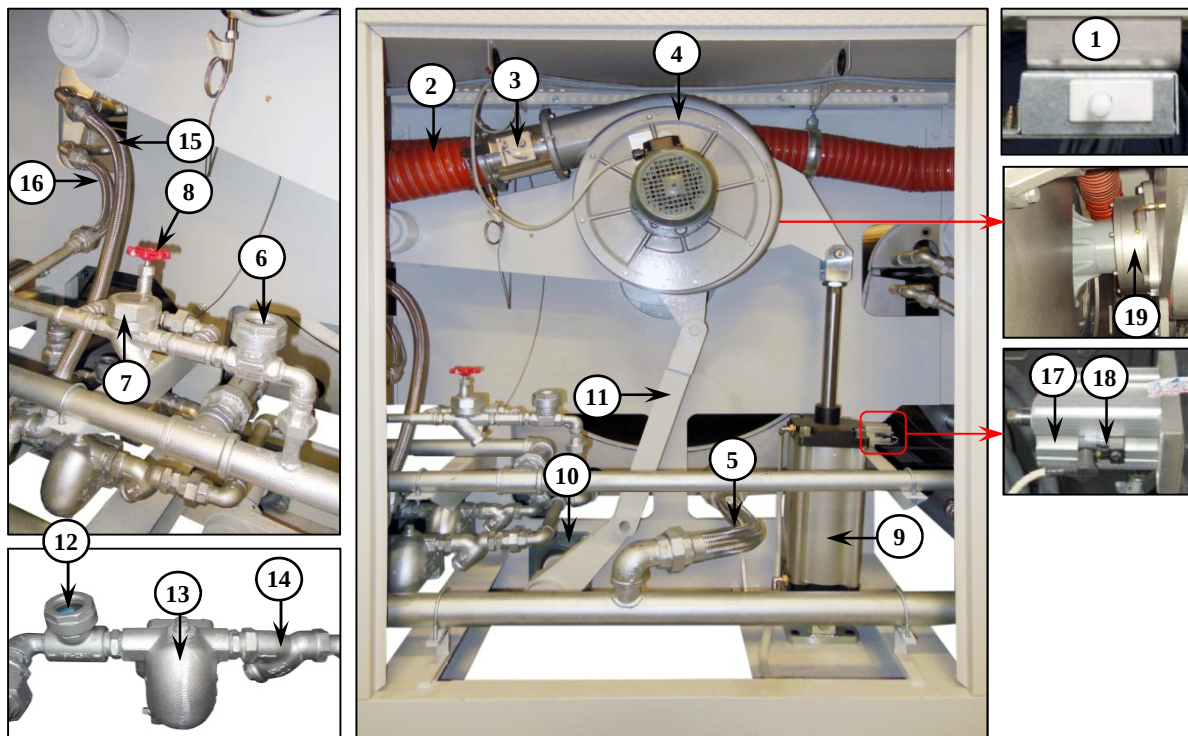


Item	Part No.	Qty.	Description
1	A0-E015-011	1	Door Over Travel Switch
2	A0-A018-032	1	Fiberglass exhaust pipes
3	A0-X053-004	1	Butterfly valve
4	A0-E008-923	1	Suction Blower
5	A0-A017-084	1	Flexible Pipe, 2"X600 MM.
6	A0-A100-001	1	Sight glass 1/2"
7	A0-A019-013	1	Steam Trap 1/2"
8	A0-A021-050	1	Globe Valve 1/2"
9	A0-P003-068	1	Air cylinder
10	A0-A004-287	1	Y-Bearing
11	A3-S120-036	1	Control arm with key
12	A0-A100-002	2	Sight Glass 1"
13	A0-A019-015	2	Steam Trap 1"
14	A0-A099-011	2	Y-Strainer 1"
15	A0-A017-085	1	Flexible Pipe, 1"X800 MM.
16	A0-A017-086	1	Flexible Pipe, 3/4"X400 MM.
17	A0-P003-166	1	Cylinder short stroke
18	A0-E014-016	1	Reed sensor
19	A0-A007-036	1	Bearing housing complete set
	A0-A007-037	1	Bearing housing main
	A0-A007-038	1	Bearing retainer plate
	A3-S120-307	1	Collar, Seal For Main Bearing Housing. Blower Side
	A0-A004-163	1	Bearing

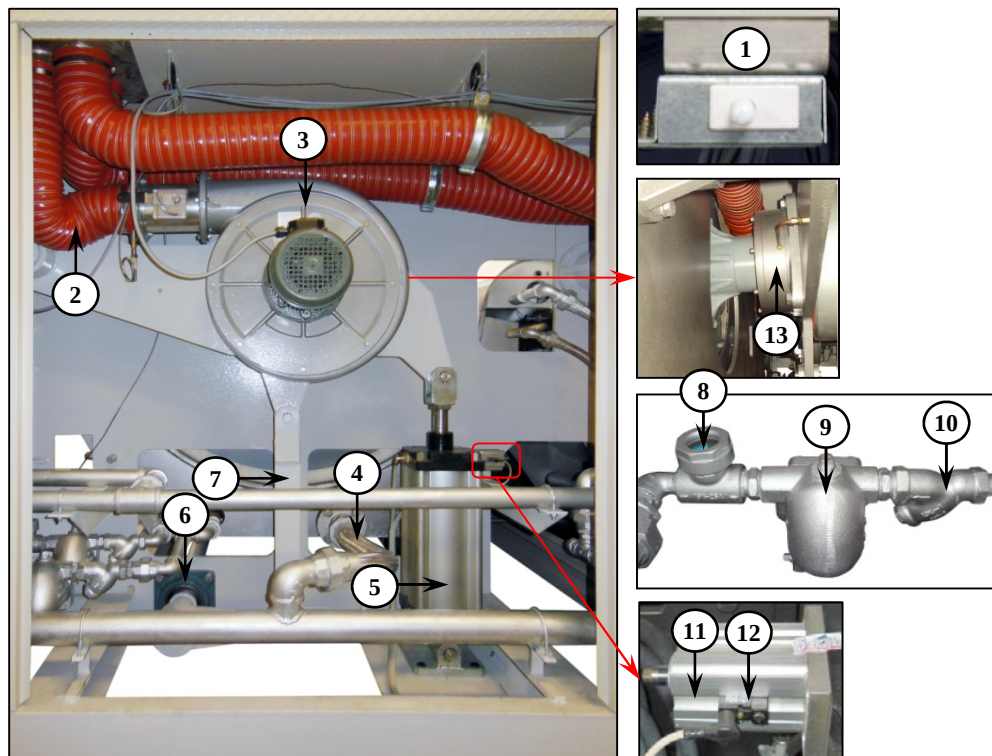


Item	Part No.	Qty.	Description
1	A0-E015-011	1	Door Over Travel Switch
2	A0-A018-032	1	Fiberglass exhaust pipes
3	A0-E008-923	1	Suction Blower
4	A0-A017-084	1	Flexible Pipe, 2"X600 MM.
5	A0-P003-068	1	Air cylinder
6	A0-A004-287	1	Y-Bearing
7	A3-S120-036	1	Control arm with key
8	A0-A100-002	2	Sight Glass 1"
9	A0-A019-015	2	Steam Trap 1"
10	A0-A099-011	2	Y-Strainer 1"
11	A0-P003-166	1	Cylinder short stroke
12	A0-E014-016	1	Reed sensor
13	A0-A007-036	1	Bearing housing complete set
	A0-A007-037	1	Bearing housing main
	A0-A007-038	1	Bearing retainer plate
	A3-S120-307	1	Collar, Seal For Main Bearing Housing. Blower Side
	A0-A004-163	1	Bearing

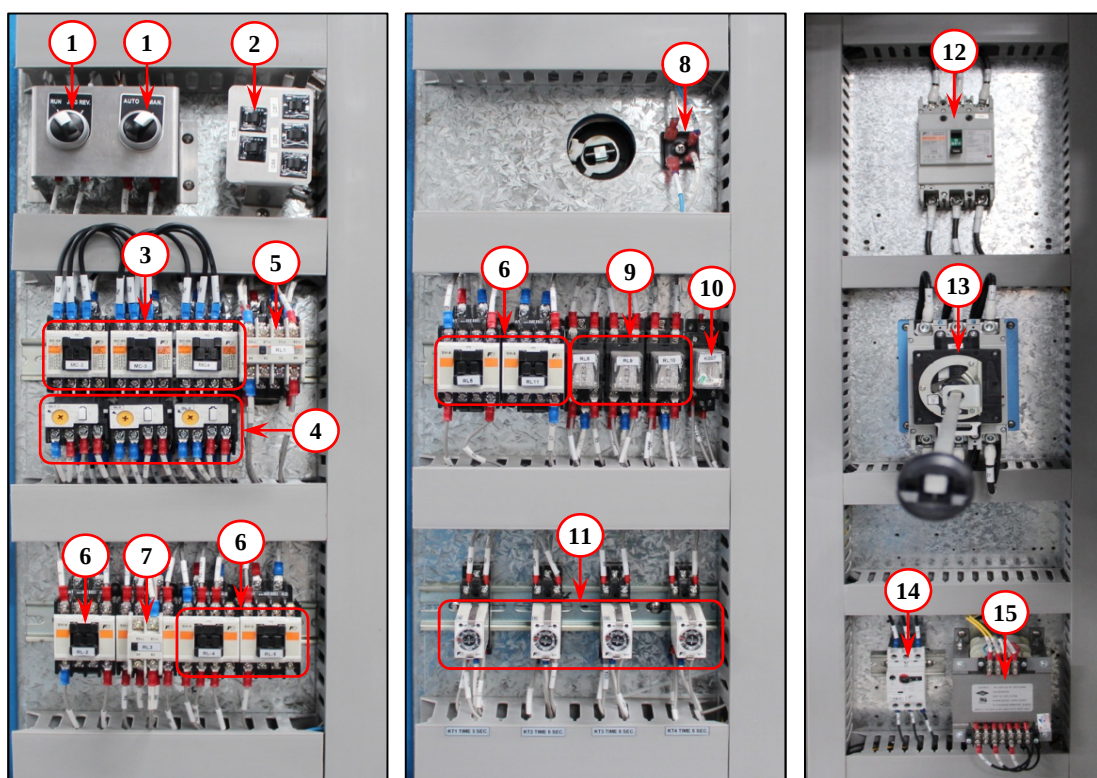


Item	Part No.	Qty.	Description
1	A0-E032-073	2	Selector Switch Actuator (Black/white)
2	A0-E010-035	4	Circuit Breaker 2A
	A0-E010-029	1	Circuit Breaker 6A
3	A0-E004-065	3	Magnetic Contactor
4	A0-E025-052	3	Over Load (1.7-2.6 Amp.)
5	A0-E009-075	1	Relay
	A0-E024-012	1	Auxiliary Contact
6	A0-E009-075	5	Relay
7	A0-E009-075	1	Relay
	A0-E024-011	1	Auxiliary Contact
8	A0-E050-002	1	Bridge Rectifier
9	A0-E009-082	3	Relay
	A0-E009-083	3	Socket
10	A0-E009-073	1	Relay Coil
	A0-E009-024	1	Socket Relay
11	A0-E031-025	4	Timer
	A0-E031-026	4	Socket Timer
12	A0-E010-080	1	Circuit Breaker Manual Start-Stop 100A.
13	A0-E015-051	1	Handle Operation
	A0-E010-081	1	Circuit Breaker Manual Start-Stop 150A.
	A0-E010-300	1	Steel Rod
	A0-E010-301	1	Steel Rod
14	A0-E010-060	1	Circuit Breaker Manual Start-Stop 2.5-4.0 A.
15	A0-E006-032	1	Transformer

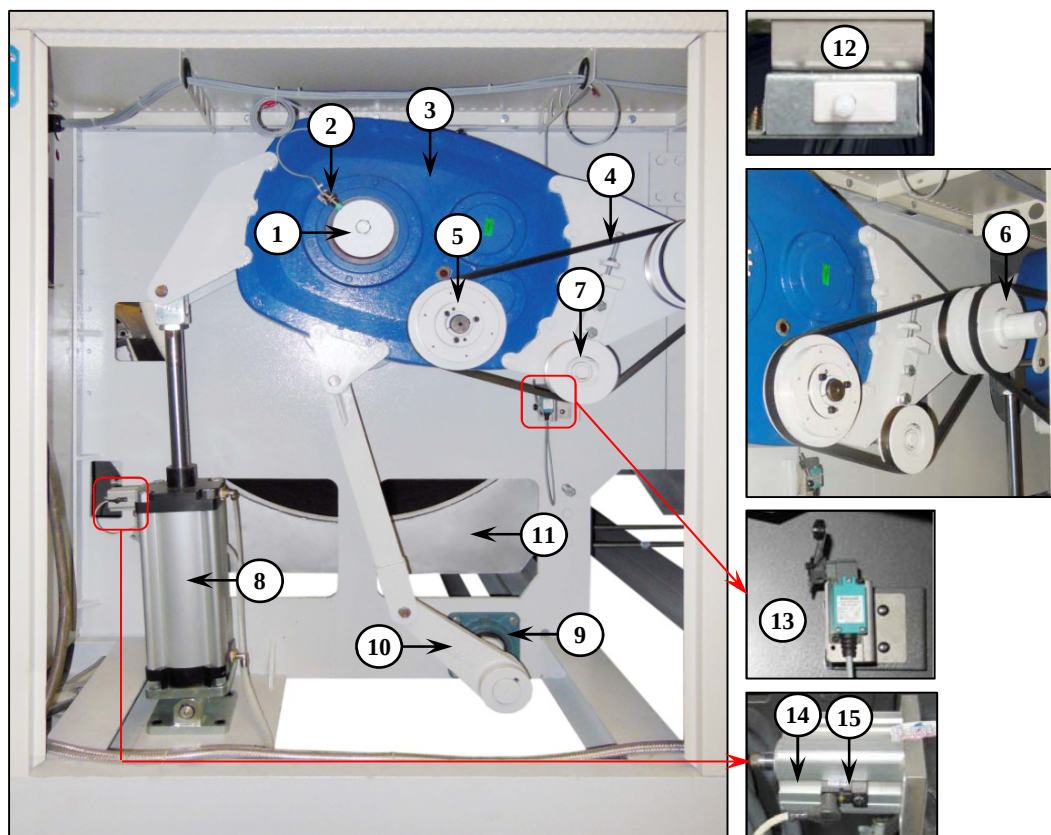



Item	Part No.	Qty.	Description
1	A3-SIM1-005	1	Disc speed sensor
2	A0-E023-003	1	Proximity sensor
3	A0-M002-007	1	Gear Shelf Mount Reducers (New)
4	A0-A002-377	1	V-Belt (C67)
5	A0-M008-193	1	Pulley
6	A0-M008-195	1	Pulley
	A0-A004-196	2	Ball Bearing
7	A0-M008-194	1	Pulley, Tension
	A0-A004-067	1	Ball Bearing
8	A0-P003-068	1	Air cylinder
9	A0-A004-287	1	Y-Bearing
10	A3-S120-036	1	Control arm with key
11	A3-S120-231	1	Chest 1, Assembly steam (std)
12	A0-E015-011	1	Door Over Travel Switch
13	A0-E011-033	1	Limit Switch Variable
14	A0-P003-166	1	Cylinder short stroke
15	A0-E014-016	1	Reed sensor

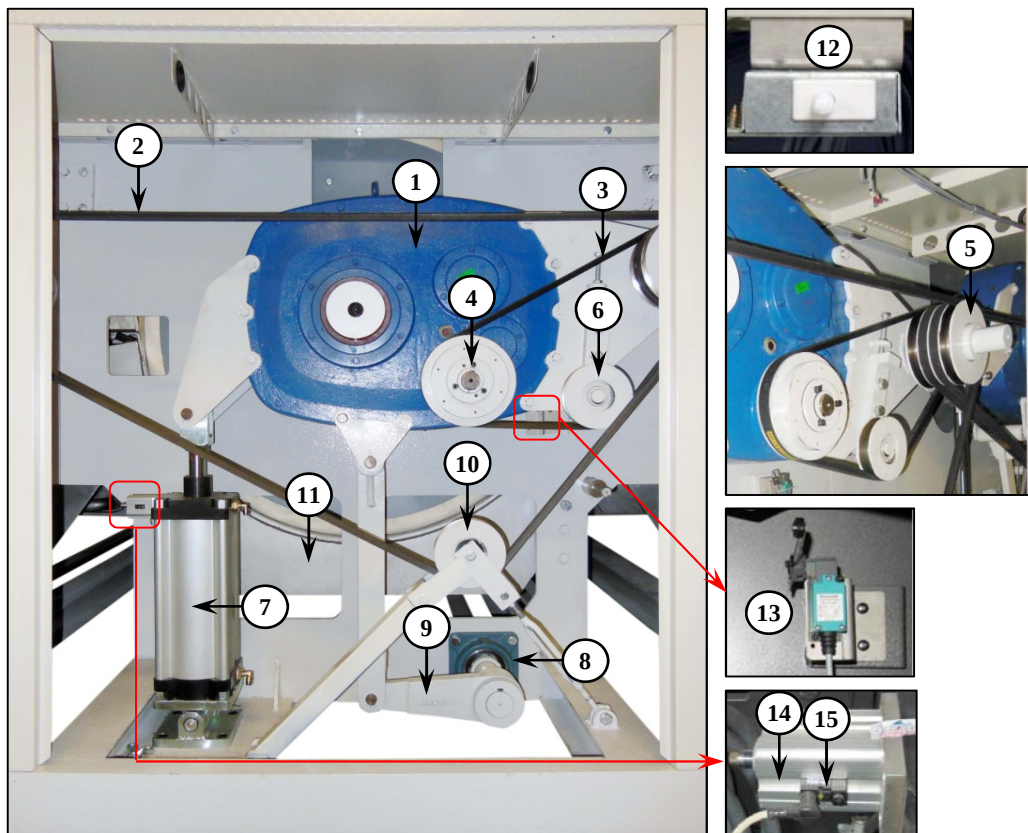


Item	Part No.	Qty.	Description
1	A0-M002-007	1	Gear Shelf Mount Reducers (New)
2	A0-A002-142	1	V-Belt (C166)
3	A0-A002-377	1	V-Belt (C67)
4	A0-M008-193	1	Pulley
5	A0-M008-195	1	Pulley
	A0-A004-196	2	Ball Bearing
6	A0-M008-194	1	Pulley, Tension
	A0-A004-067	1	Ball Bearing
7	A0-P003-068	1	Air cylinder
8	A0-A004-287	1	Y-Bearing
9	A3-S120-036	1	Control arm with key
10	A0-M008-196	1	Pulley
	A0-A004-067	1	Ball Bearing
11	A3-S120-234	1	Chest 2,3 Assembly steam (std)
12	A0-E015-011	1	Door Over Travel Switch
13	A0-E011-033	1	Limit Switch Variable
14	A0-P003-166	1	Cylinder short stroke
15	A0-E014-016	1	Reed sensor

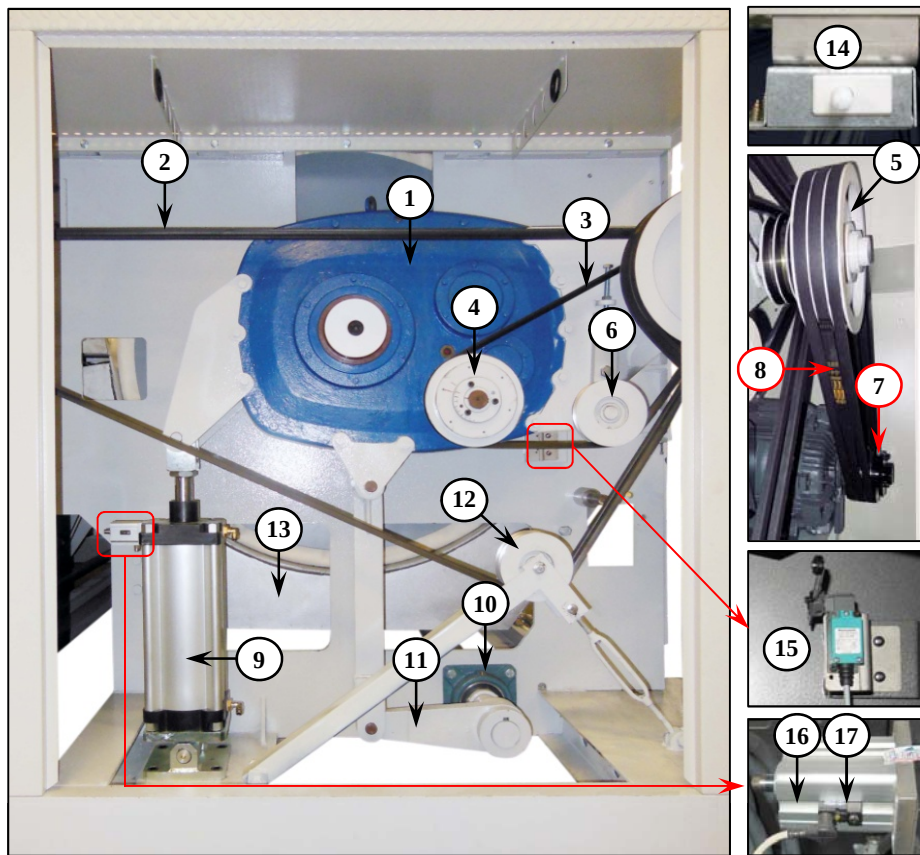



Item	Part No.	Qty.	Description
1	A0-M002-007	1	Gear Shelf Mount Reducers (New)
2	A0-A002-142	2	V-Belt (C166)
3	A0-A002-377	1	V-Belt (C67)
4	A0-M008-193	1	Pulley
5	A0-M008-197	1	Pulley
	A0-A004-196	2	Ball Bearing
6	A0-M008-194	1	Pulley, Tension
	A0-A004-067	1	Ball Bearing
7	A0-M008-199	1	Pulley
8	A0-A002-041	3	V-Belt (C91)
9	A0-P003-068	1	Air cylinder
10	A0-A004-287	1	Y-Bearing
11	A3-S120-036	1	Control arm with key
12	A0-M008-198	1	Pulley
	A0-A004-067	2	Ball Bearing
13	A3-S120-234	1	Chest 2,3 Assembly steam (std)
14	A0-E015-011	1	Door Over Travel Switch
15	A0-E011-033	1	Limit Switch Variable
16	A0-P003-166	1	Cylinder short stroke
17	A0-E014-016	1	Reed sensor

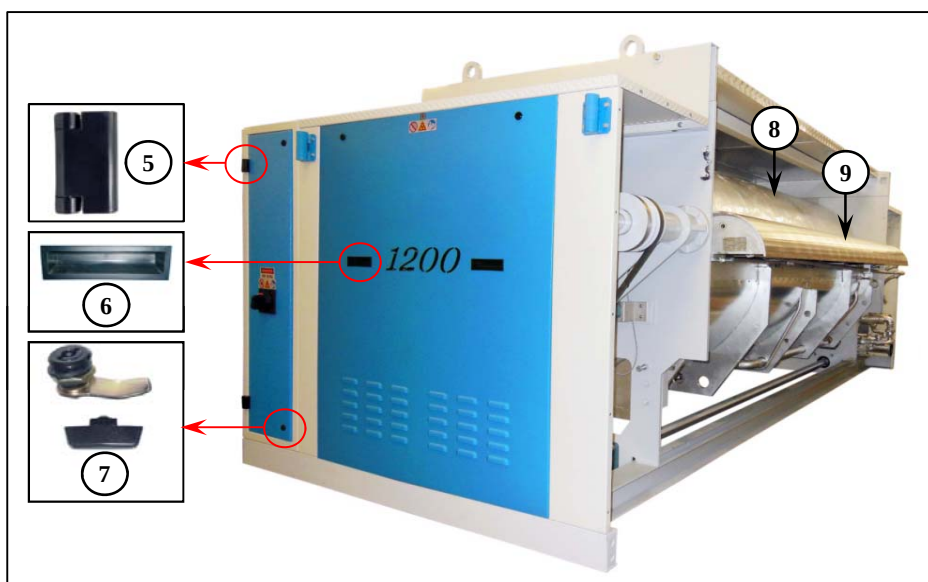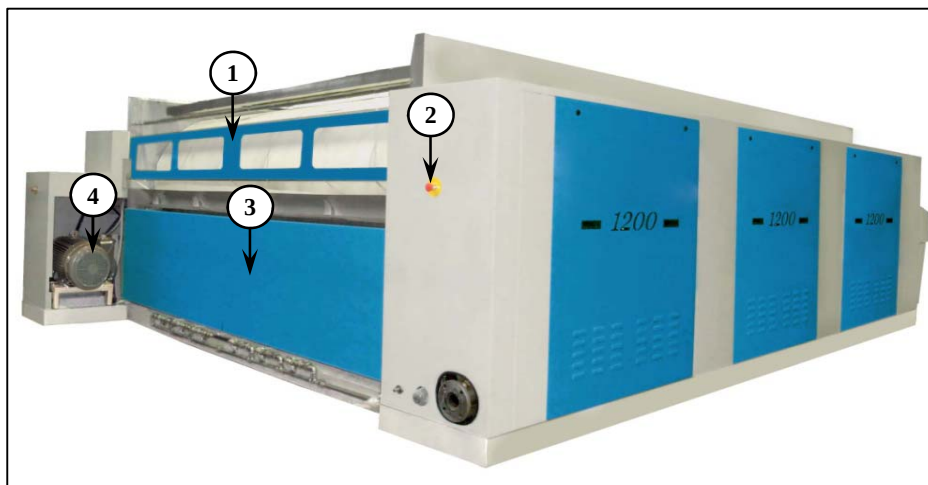

Item	Part No.	Qty.	Description
1	A3-S120-222	1	Rear guard
2	A0-E032-022	2	Emergency stop
	A0-E032-023	2	Connector Base, E-Stop
	A0-E032-024	2	Contact Block, E-Stop
3	A3-S120-206	2	Rear cover plate, lower Left/Right
4	A0-E008-920	1	Motor 40HP. /6P. 190/380V 60HZ. /3PH.
	A0-E012-005	1	Cooling Fan
5	A0-A029-005	2	Hinge, Offset panel door
6	A0-A086-005	12	Door handle
7	A0-A013-011	28	Master Key
	A0-A013-010	28	Key
8	A3-S120-210	3	Heat roll (Steam)
9	A3-S120-219	3	Gap piece, Bridging (Steam)

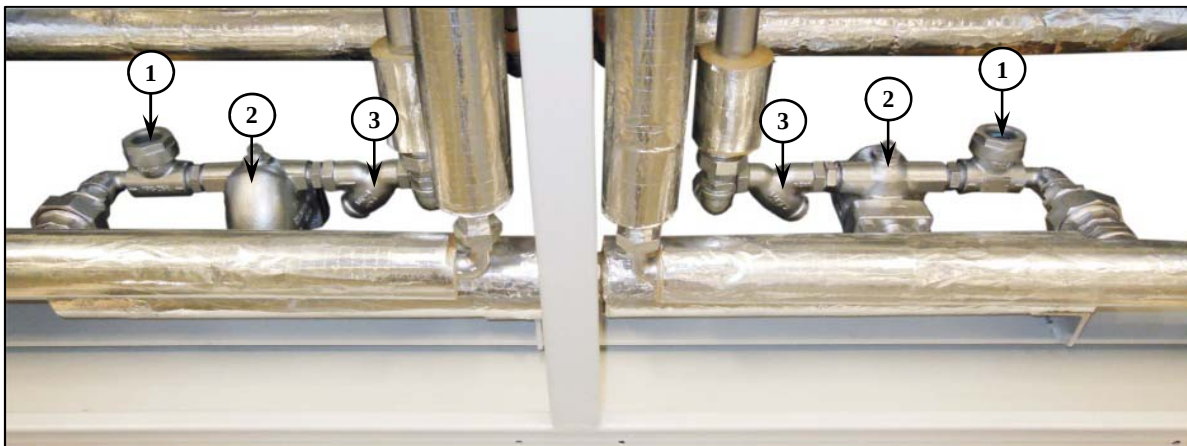


Front Side

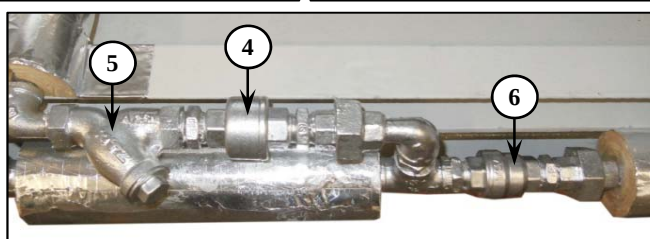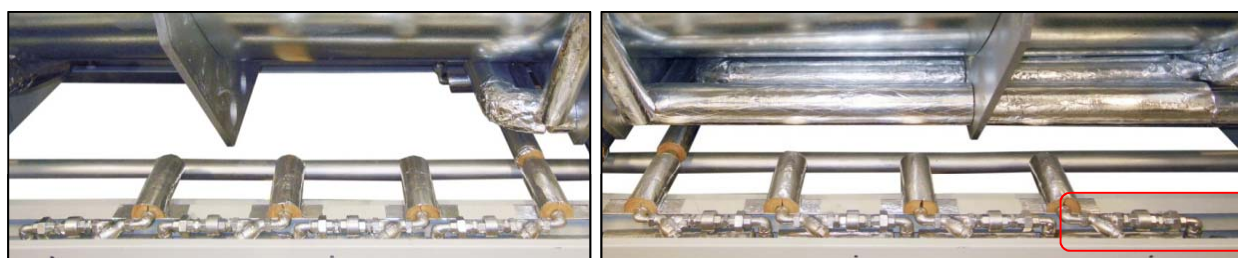

Rear Side

Item	Part No.	Qty.	Description
1	A0-A100-002	2	Sight glass 1"
2	A0-A019-015	2	Steam trap 1"
3	A0-A099-011	2	Y-Strainer 1"
4	A0-A019-031	8	Steam air vent 1/2"
5	A0-A099-012	8	Y-Strainer 1/2"
6	A0-A023-007	1	Check Valve, 1/2"

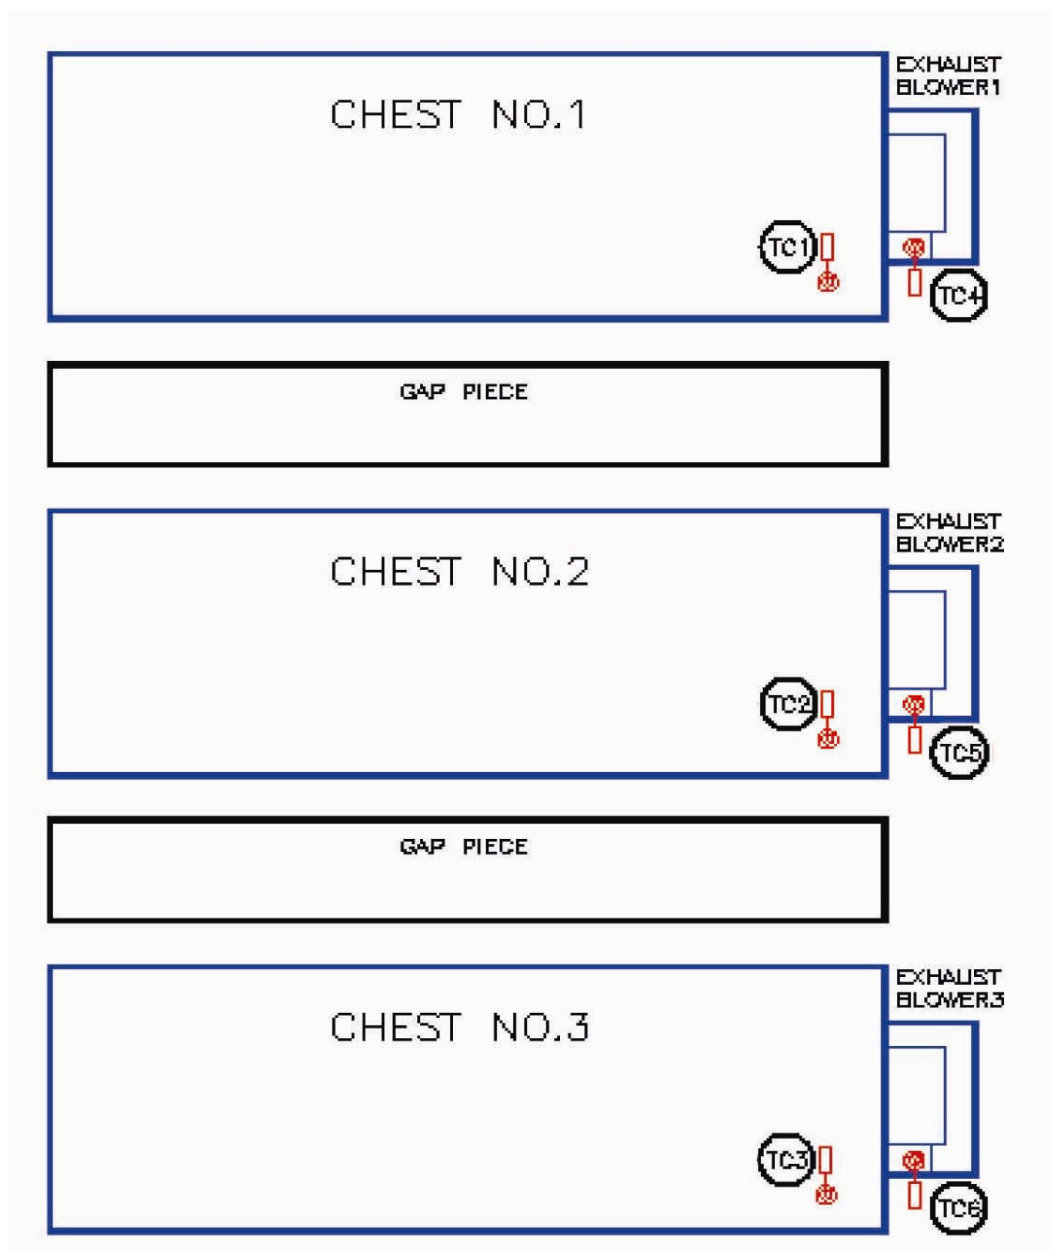

Item	Part No.	Qty.	Description
TC1	A0-E027-033	1	Thermocouple Model. 5M
TC2	A0-E027-035	1	Thermocouple Model. 7M
TC3	A0-E027-036	1	Thermocouple Model. 8M
TC4	A0-E027-045	1	Thermocouple Model. 4M
TC5	A0-E027-034	1	Thermocouple Model. 6M
TC6	A0-E027-035	1	Thermocouple Model. 7M