

## IQ Switch® ProxSense® Series



# Application note: AZD036 Mutual Capacitance Button Layout Guideline

#### **Contents**

1		MUTUAL CAPACITANCE	2
	1.1	Introduction	2
2		EXAMPLE BUTTON LAYOUTS	2
3		BUTTON APPLICATION	4
4		LAYOUT GUIDELINES	
5		DETAILED DISCUSSION	
3		DETAILED DISCOSSION	0
	5.1	Introduction	6
	5.2	Definitions	
	5.2.	2.1 Mutual Capacitance	6
	5.2.	2.2 Sensitivity	6
	5.2.	2.3 Noise	6
	5.2.	2.4 Proximity Distance	6
	5.2.	2.5 Parasitic Capacitance	6
	5.3	Sensitivity	6
	5.4	Parasitic Capacitance	7
	5.5	GROUND LOADING	7
	5.6	Proximity Distance	7
	5.7	Water Effects	7
	5.8	LAYOUT CONSIDERATIONS	7
	5.8.	3.1 Electrode Thickness and Placement	7
	5.8.		
	5.8.		
	5.8	RA LEDS	S





#### 1 Mutual Capacitance

#### 1.1 Introduction

Projected capacitance technology measures the change in capacitive coupling between two electrodes. The coupling between the electrodes is called "Mutual capacitance" / C<sub>M</sub> and the electrodes are called the transmitter (CTx) and receiver (CRx). See the application note AZD008 for the differences between selfcapacitance and projected capacitance technologies. In addition, how to relate the measured capacitance to charge transfers.

Projected capacitance can yield a higher resolution response to touch and proximity events because the electrode size, shape and

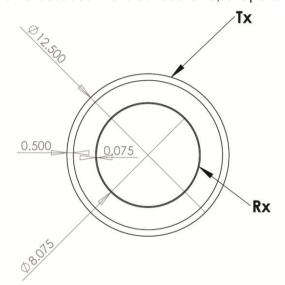


Figure 2.1 Example Button 1

spacing can be controlled by the designer. Projected capacitance also requires fewer pins when applied to multi-channel IC solutions because buttons are multiplexed between pins. Since projected capacitance is measured between two defined pins, it is also less susceptible to EMI.

#### 2 Example Button Layouts

Six possible layouts are shown in this section. The application of each will be discussed in Section 3.

Note that all dimensions are in millimetres and that "Tx" represents the transmit electrode while "Rx" represents the receive electrode.

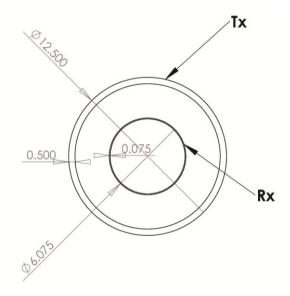


Figure 2.2 Example Button 2



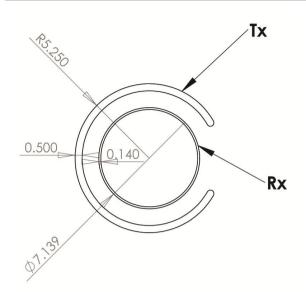


Figure 2.3 Example Button 3

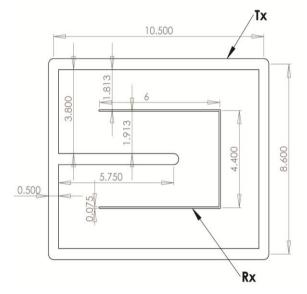


Figure 2.4 Example Button 5

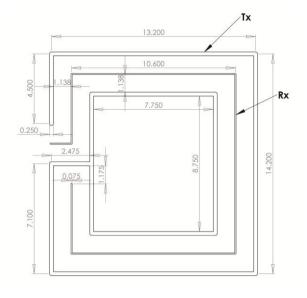


Figure 2.5 Example Button 4

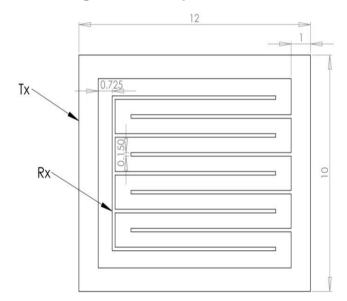


Figure 2.6 Example Button 6



## IQ Switch® ProxSense® Series



### 3 Button Application

This section displays which button layout can be used for different applications. More ticks indicate a more suitable solution.

	Proximity	Touch	2mm Overlay	5mm Overlay	LEDs	Water Detect	Water Immunity
Layout 1		<b>VVV</b>	1/1		111		<b>VVV</b>
Layout 2	$\sqrt{}$	$\sqrt{\sqrt{\sqrt{\sqrt{\sqrt{\sqrt{\sqrt{\sqrt{\sqrt{\sqrt{\sqrt{\sqrt{\sqrt{\sqrt{\sqrt{\sqrt{\sqrt{\sqrt{$	$\sqrt{\sqrt{1}}$	$\sqrt{}$	<b>VVV</b>	$\sqrt{}$	$\sqrt{}$
Layout 3	$\sqrt{}$	$\sqrt{\sqrt{\sqrt{1}}}$	$\sqrt{}$	$\sqrt{}$	$\sqrt{\sqrt{\sqrt{2}}}$	$\sqrt{}$	$\sqrt{\sqrt{\sqrt{1}}}$
Layout 4	$\sqrt{}$	777	$\sqrt{\sqrt{\sqrt{1}}}$	$\sqrt{\sqrt{\sqrt{\sqrt{\sqrt{\sqrt{\sqrt{\sqrt{\sqrt{\sqrt{\sqrt{\sqrt{\sqrt{\sqrt{\sqrt{\sqrt{\sqrt{\sqrt{$	$\sqrt{\sqrt{\sqrt{\sqrt{\sqrt{\sqrt{\sqrt{\sqrt{\sqrt{\sqrt{\sqrt{\sqrt{\sqrt{\sqrt{\sqrt{\sqrt{\sqrt{\sqrt{$	$\sqrt{}$	$\sqrt{\sqrt{\sqrt{\sqrt{\sqrt{\sqrt{\sqrt{\sqrt{\sqrt{\sqrt{\sqrt{\sqrt{\sqrt{\sqrt{\sqrt{\sqrt{\sqrt{\sqrt{$
Layout 5	$\sqrt{}$	$\sqrt{\sqrt{\sqrt{1}}}$	$\sqrt{}$	$\sqrt{}$	$\sqrt{\sqrt{\sqrt{2}}}$	$\sqrt{}$	<b>VVV</b>
Layout 6	$\sqrt{}$	777	$\sqrt{}$	$\sqrt{}$	$\sqrt{\sqrt{\sqrt{\sqrt{\sqrt{\sqrt{\sqrt{\sqrt{\sqrt{\sqrt{\sqrt{\sqrt{\sqrt{\sqrt{\sqrt{\sqrt{\sqrt{\sqrt{$	$\sqrt{}$	$\sqrt{\sqrt{\sqrt{1}}}$





#### 4 Layout Guidelines

A few simple considerations for the layout of projected buttons on printed circuit boards will be discussed below. Throughout this section "Tx" denotes the transmitting electrodes while "Rx" denotes the receiving electrodes. For a more in-depth discussion of the guidelines below, see Section 6.

- Generally the Rx track should be routed as far away as possible from the Tx track.
- Where design limitations require the Rx and Tx tracks to run close to each other in parallel a ground track should be routed between them for shielding purposes as shown in Figure 4.1.

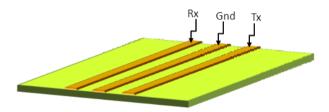


Figure 4.1: Shielding using Ground

 If a Rx and Tx track has to cross on a multilayer PCB the crossing should always be done at a 90°angle (Right Angles). This is demonstrated in Figure 4.2.

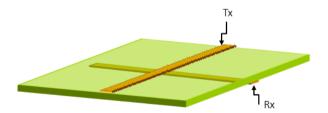


Figure 4.2: Right Angle Crossing

The **Rx** and **Tx** tracks should be routed far away from any communications, LED, or any other digital tracks. If this is not possible a ground track should be routed between the button track and the digital track.

To ensure optimal button sensitivity it is suggested that ground layers should be placed a reasonable distance away from the projected button. For touch applications a gap of 10 mm would be sufficient. For proximity application less ground in the button area will ensure better detection distance. Figure 4.3 illustrates this principle.

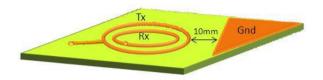


Figure 4.3: Ground Plane Distance

- Ground tracks in the vicinity of the touch button should be kept as thin and as short as possible.
- For applications where substantial ground planes will be present near the Rx and Tx tracks it is suggested that a button layout is chosen where the coupling between Rx and Tx is maximized. Layout 5 (Figure 2.4) from the button examples would fit this description.
- No floating tracks or conductive materials should be placed close to the touch buttons or the Tx and Rx tracks.



#### 5 Detailed Discussion

#### 5.1 Introduction

This section gives general guidelines for the design of robust touch buttons using the projected capacitive sensing technique. The button designs will be evaluated in terms of several parameters which include:

Sensitivity
Noise Immunity (Non RF Noise)
Proximity Distance
Water Effects

The difference in button design for the use with battery application will not be discussed.

This information does not take into account the sensitivity variations possible using automated sensitivity tuning algorithms.

#### 5.2 Definitions

The terms used throughout this section will be briefly discussed in this section.

#### 5.2.1 Mutual Capacitance

Mutual capacitance is the measured quantity of projected capacitive sensing. This equates to the capacitance between transmit and receive electrode as well as any other unwanted coupling (parasitic capacitance and noise).

#### 5.2.2 Sensitivity

In terms of this document sensitivity is defined as the deviation in capacitance caused by a user's hand for proximity or touch purposes. This only includes the "wanted" deviation caused by the user and not the unwanted deviation induced due to noise.

#### **5.2.3** Noise

In contrast to sensitivity noise is defined as the unwanted deviation in mutual capacitance due to various external and internal factors.

#### 5.2.4 Proximity Distance

The distance from the overlay where a user's hand will be detected before touching the electrode overlay will be defined as the proximity distance. This figure is generally correlated to the noise for the minimization of false proximity detections.

#### 5.2.5 Parasitic Capacitance

This is any mutual capacitance between the transmit and receive electrode that the user is unable to influence or that the user is able to unintentionally influence. An example would be the capacitance caused due to transmit and receive tracks being close to each other outside the button area.

#### 5.3 Sensitivity

The sensitivity of a projected touch button is correlated to the amount of nominal capacitance of the button area between the transmit and receive electrodes. Nominal, in this sense, is the button capacitance without any external influence. It is important to remember that only the capacitance of the button area should be influenced by the user.

Generally speaking, closely coupled transmit and receive electrodes (high mutual capacitance) will result in a less sensitive button than would a button with loose coupling.

This in turn limits the type and thickness off the overlay that can be used with a certain button design. A thick overlay using a material with a low relative dielectric constant will thus need a low mutual capacitance for correct button operation. This makes intuitive sense since the user will have less influence on the mutual capacitance and if this capacitance if relatively large almost no deviation will be detectable.

It is important to note the available options for lowering the mutual capacitance:

$$C = \epsilon_r \epsilon_0 \frac{A}{d}$$

- The type of dielectric material can be changed. This is true for the interelectrode material (i.e. FR4 for printed circuit board designs) as well as for the overlay. Note that an overlay with a good dielectric constant will increase the capacitance but will also increase the deviation caused by a touch as this will also increase the capacitive coupling between the users hand and the button electrodes.
- The distance between the transmit electrode and receive electrode can be



### IQ Switch® ProxSense® Series



increased to lower the mutual capacitance.

 The area or length of the transmit and receive electrodes in relation to each other can also be varied.

#### 5.4 Parasitic Capacitance

The mutual capacitance increases wherever the transmit and receive tracks are in close proximity to each other. This is also true for the PCB tracks connecting the transmit and receive electrodes to the sensing IC.

This capacitance should not be influenced by the user and thus must be kept to a minimum. A fixed amount of capacitance has thus been added to your system that cannot be influenced by the user. Parasitic capacitance lowers your button sensitivity.

It is thus good practice to shield the transmit and receive tracks from each other using a ground track. Furthermore any crossing of the Transmit and Receive tracks should be done at a 90° angle.

#### 5.5 Ground Loading

The designer should also keep coupling from the electrodes to ground to a minimum. This is especially true of the receive electrode. The most substantial effect will be noticeable in proximity applications where the proximity distance lowers with any close ground planes or tracks. For button applications this is less of a problem as long as the designer also note that close ground tracks will lower the mutual capacitance whilst not necessarily increasing button sensitivity.

#### 5.6 Proximity Distance

In order to facilitate a large proximity distance, loose coupling between the transmit and receive electrodes are necessary. Generally speaking, the larger the distance between the transmit and receive electrode, the larger the detectable proximity distance.

Influences that will lower the detectable proximity distance are as follows:

Ground	planes	or	trac	ks	near	the
electrodes	s will	decre	ase	the	prox	imity
distance.						

☐ A large parasitic capacitance will minimize

the deviation caused by the user and thus also decrease the proximity distance.

#### 5.7 Water Effects

In applications where water might be present on the touchpad overlay, care should be taken to use the correct button layout.

Buttons having a relatively high mutual capacitance tend to have high water immunity. Water directly on the button overlay will thus not cause false touch detection. Note that due to the sensitivity of the sensing IC, false proximity detections might still be possible.

Buttons having a very low mutual capacitance offers another solution for water effects. Due to the measuring sensitivity water will easily be detectable as a substantial increase in mutual capacitance. This is in contrast to a human touch which has the effect of lowering the mutual capacitance. Water on these buttons will thus not cause a false touch detection but will easily be detectable offering the designer an opportunity to guard against incorrect application operation.

Note that overlays having a high relative dielectric constant will increase the effects of water on the mutual capacitance.

It is also important to notice that due to the conductive properties of water touching any water drops on the overlay will effectively expand the area of the finger to that of the size of the water drop. If a large amount of water is present directly over two adjacent buttons touching the water will cause both buttons to detect touch conditions. It is recommended that the application guard against two buttons being pressed simultaneously in order to mitigate this situation.

#### 5.8 Layout Considerations

This section discusses a few considerations for PCB layout while using projected capacitance for touch buttons.

### 5.8.1 Electrode Thickness and Placement

In order to increase the noise immunity of the button electrodes it is recommended that the receive electrode be made as thin as possible. This will decrease the ground loading of the



## IQ Switch<sup>®</sup> ProxSense<sup>®</sup> Series



receive electrode as well as minimizing any external noise coupling.

It is also generally recommended that the transmit electrode completely surrounds the receive electrode. This will ensure that the receive electrode will be relatively shielded from external influences. Transmit electrodes should also generally be thicker than receive electrodes to improve this shielding effect. In applications where a large proximity is desirable it might not be possible to incorporate these suggestions as this will decrease the proximity sensing sensitivity.

#### 5.8.2 Noise

It is advantageous to route any digital communication lines as far from the sensing electrodes and tracks as possible. Where this is not possible it is necessary to run a ground track between the communication lines and the sensing lines for shielding purposes.

#### **5.8.3 Floating Conductors**

The designer should refrain from placing any floating conductors near the sensing electrodes or sensing tracks. This includes floating tracks. Any floating conductor close to the sensing lines will act as a transmit electrode causing noise and unreliable operation.

#### 5.8.4 LEDs

Light emitting diodes tend to have very little effect on projected button operation. It is suggested that all the tracks connected to the LEDs should not be floating for reasons discussed earlier.

The following patents relate to the device or usage of the device: US 6,249,089 B1, US 6,621,225 B2, US 6,650,066 B2, US 6,952,084 B2, US 6,984,900 B1, US 7,084,526 B2, US 7,084,531 B2, US 7,119,459 B2, US 7,265,494 B2, US 7,291,940 B2, US 7,329,970 B2, US 7,336,037 B2, US 7,443,101 B2, US 7,466,040 B2, US 7,498,749 B2, US 7,528,508 B2, US 7,755,219 B2, US 7,772,781, US 7,781,980 B2, EP 1 120 018 B1, EP 1 206 168 B1, EP 1 308 913 B1, EP 1 530 178 B1, ZL 99 8 14357.X, AUS 761094

IQ Switch®, ProxSense™, AirButton® and the U Logo are trademarks of Azoteq.

#### WWW.AZOTEQ.COM

ProxSenseSupport@azoteq.com