
Lab 6: System Identification

EECS 16B Fall 2022

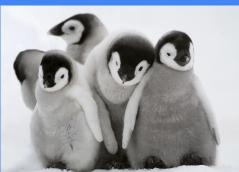





Slides: http://links.eecs16b.org/lab6-slides

Administrivia

- If you are outside Cory 125 running your car, put both your computer number and "outside" for computer number field on help request
- Lab Grades error: https://links.eecs16b.org/lab-checkoff-error
- Ensure your lab report partner is added to the Gradescope submission! Resubmissions require you to add your team member again

Lab 6 Overview

- Sensor Verification
- Model Characterization
 - Data Collection: coarse and fine data
 - o Parameter Estimation: least-squares regression analysis
- Determine optimal operating velocity point
- Next lab:
 - Controls: Design and test open-loop and closed-loop controllers









- As car wheel turns, encoder wheel rotates with it
 - Encoder wheel has many holes in it
 - As wheel rotates, spokes block and holes unblock the beam of light between encoder legs
- Can calculate velocity of car from rate of encoder value change
- Should see red encoder lights flashing if you rotate the wheel
- 3 pins
 - "G" = ground, connect to breadboard 0V negative rail
 - "V" = voltage, connect to breadboard 3.3V positive rail from output of 3.3V regulator, NOT Launchpad's 3.3V pin
 - "S" = encoder signal; input to voltage divider. Output goes to Launchpad pins (P6.2, P6.3)

SIXT33N Car Model and Least-Squares

Car Model

$$v_{L}[i] = d_{L}[i+1] - d_{L}[i] = \theta_{L}u_{L}[i] - \beta_{L}$$

 $v_{R}[i] = d_{R}[i+1] - d_{R}[i] = \theta_{R}u_{R}[i] - \beta_{R}$

i - current timestep

v[i] - discrete time velocity

d[i] - total number of ticks advanced

u[i] - system input (in PWM, controlled by changing *duty cycle*)

Θ - relates change in input PWM to change in velocity

 β - velocity offset that encompasses real world imperfections like static friction Read the <u>lab note</u> for how we solve for Θ and β and least-squares review!

D_{data} $\vec{p} \approx \vec{s}$ $\begin{bmatrix} u[0] & -1 \\ u[1] & -1 \\ u[2] & -1 \\ \vdots & \vdots \\ u[\ell-1] & -1 \end{bmatrix} \begin{bmatrix} \theta \\ \beta \end{bmatrix} \approx \begin{bmatrix} v[0] \\ v[1] \\ v[2] \\ \vdots \\ v[\ell-1] \end{bmatrix}$

Least Squares Review

- We rearrange our encoder model to resemble a linear equation:
 - Our equation takes the form: Ax = b
 - We can solve this equation using Linear Least Squares, to find the best fit parameters

$$\mathbf{x} = (\mathbf{A}^{\mathrm{T}}\mathbf{A})^{-1}\mathbf{A}^{\mathrm{T}}\mathbf{b}$$
 $\vec{p} = (D_{data}^{T}D_{data})^{-1}D_{data}^{T}\vec{s}$

- \circ We know u[i] and v[i], but want to find θ and β
- Numpy has helpful built-in functions:
 - Numpy.linalg.lstsq and numpy.vstack/numpy.hstack -> look at the documentation!
 - Transpose arrays with array_name.T

Determine Operating Point

$$v_{L}[i] = d_{L}[i+1] - d_{L}[i] = \theta_{L}u_{L}[i] - \beta_{L}$$

 $v_{R}[i] = d_{R}[i+1] - d_{R}[i] = \theta_{R}u_{R}[i] - \beta_{R}$

- We measure v, we know u (that's our input PWM)
 - \circ We can find θ and β from least squares
- Determine operating velocity point: What v* should we use? Make sure you check that the chosen v* works well with your model!
- Looking ahead to next lab ... open-loop control
 - We can figure out the input u we need to set to achieve a target velocity v*
 - Does open-loop control work well for systems with disturbances?

Letting Your Car Run Free




Collecting "Coarse" Data

- Let car run outside and collect data
 - After a brief delay, the car will begin driving
 - Arduino LEDs count down
 - Power the circuit when you are outside
 - The Arduino will sweep through a wide range of PWM values
 - Should see it start fast, slow down, and speed back up before stopping
 - Car will not drive straight (most of the time)
- After finishing, upload data from Arduino to your computer
 - All 3 Arduino LEDs should blink to indicate that data is available for download
 - DO NOT unplug the Arduino Vin and plug in the USB (yes, at the same time)
 - Type in anything to serial monitor and hit enter to see your data printed

Collecting Fine Data


- After collecting "coarse" data, we will zoom into a linear range- where we can model the velocity response to PWM using linear parameters
- Choose a range of PWM values where both wheels can reach the same velocity for some PWM within the range

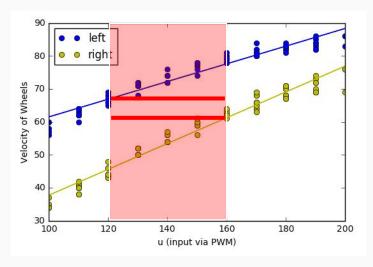

No overlapping range!

Collecting Fine Data

- After collecting "coarse" data, we will zoom into a linear range— where we can model the velocity response to PWM using linear parameters
- Choose a range of PWM values where both wheels can reach the same velocity for some PWM within the range

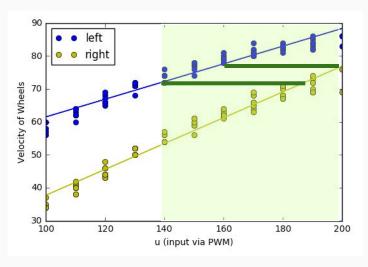

Overlapping range! Yay!

Powering the Car and Arduino


Powering your car

- Use two 9V batteries
 - One for regulator circuits (and sometimes Arduino), one for motors
 - When using the batteries, the RED is 9V and BLACK is GND
- When at the lab benches, use power supply and NOT batteries
 - Save batteries for when you're letting the car drive around
 - You'll need to replace batteries if they drain too low (<~7V or when motors stop running)
- Unplug the batteries when not in use to avoid draining them!
- Remove battery clips after lab to avoid accidental shorts!


Powering your Arduino

- Arduino has 2 input power options: USB and 7-12V pin
 - Tethered: Use USB when you're uploading code and downloading data
 - Mobile: Use Vin pin (connected to 9V from the regulator battery) when car is driving around
- Ensure that you plug in BOTH USB and Power when collecting data


Tethered Powering: uploading code

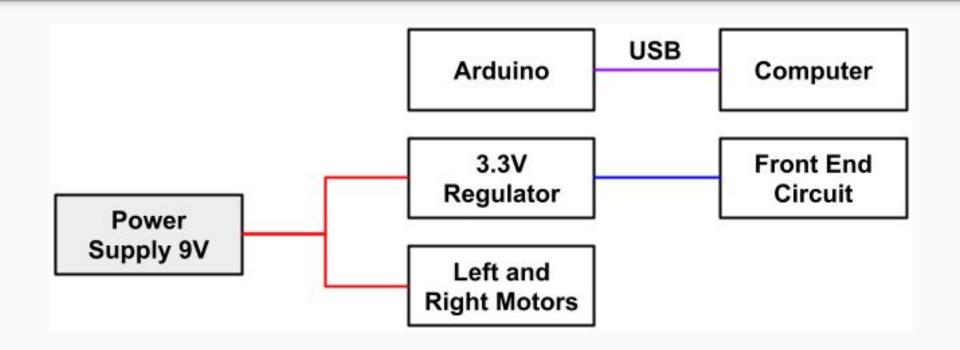

Mobile Powering: driving car around

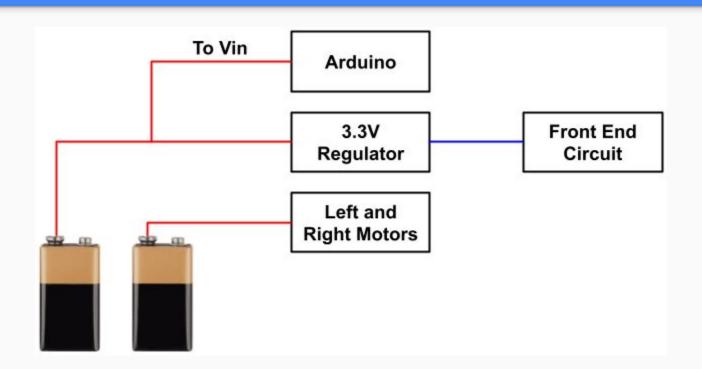

Data Recovery: downloading data

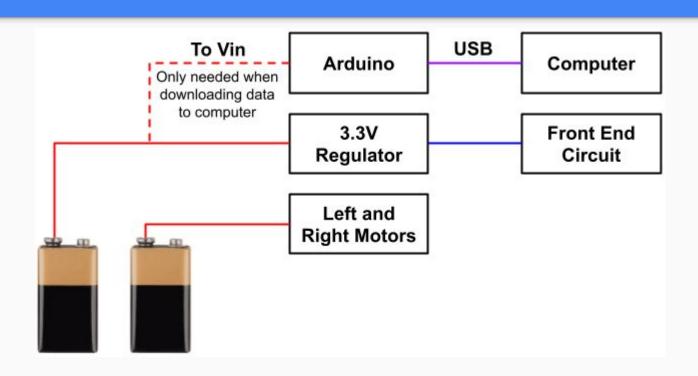

Analyzing Data

- How well does your model fit your data?
 - Do the lines look like they match up with the dots?
 - O Do the velocities of the wheels make sense?
 - Are there different ranges of velocities where our linear model fits better than others?
- Common Bugs
 - \circ Data is flat despite wheels turning \rightarrow rerun encoder tests
 - Isolate issues by using symmetry to your advantage if one side works → swap components to see if it is a circuit, wire, encoder, or Arduino pin issue



Tips, Tricks, and Warnings, oh my!

- Collect data in wide, flat area (hallways outside Cory 125)
 - Try to reposition car so that it doesn't hit any walls
 - o If car is going to hit a wall, quickly pick it up and change its direction before it collides
- Car's orientation
 - When the car is moving, the castor wheel should always be at the back of the car

Important Forms/Links

- Help request form: https://eecs16b.org/lab-help
- Checkoff request form: https://eecs16b.org/lab-checkoff
- Extension Requests: https://eecs16b.org/extensions
- Makeup Lab: https://makeup.eecs16b.org
- Slides: <u>links.eecs16b.org/lab6-slides</u>
- Anon Feedback: https://eecs16b.org/lab-anon-feedback
- Lab Grades error: https://links.eecs16b.org/lab-checkoff-error