

8. HANDLING, SERVICING, AND MAINTENANCE


8.1 HOOK INSTALLATION COMPATIBILITY

CAUTION BEFORE OPERATION OF EXTERNAL CARGO HOOK SYSTEM CHECK COMPATIBILITY OF DETACHABLE ITEMS (HOOK ASSEMBLY) WITH INSTALLATION PROVISIONS.

COMPATIBILITY OF DETACHABLE ITEMS WITH INSTALLATION PROVISIONS				
DETACHABLE ITEMS	INSTALLATION PROVISIONS			
	Helicopter Serial Number			
	Up to S-100	S-101 and Subsequent		
Hook Assembly	105-80344	105-80344	105-80345	105-803471 ⁵⁾
105-80332 ¹⁾	yes	yes	yes ²⁾	no
105-80337	no ³⁾	yes ⁴⁾	yes	no
117-80127 ⁵⁾	no ³⁾	no	no	yes
NOTE ¹⁾ Hook assembly P/N 105-80332 may be replaced with P/N 105-80337 by incorporation of SB 80-53 only on helicopters S-101 and subsequent. ²⁾ When hook assembly P/N 105-80332 is installed with installation provisions P/N 105-80345, hook locking claw must be closed over the hook retainer safety rope for stowing. ³⁾ Helicopters up to and including S-100 <u>can not</u> be modified to accept hook assemblies P/N 105-80337 and 117-80127. ⁴⁾ Helicopters S-101 and subsequent fitted with installation provisions P/N 105-80344 <u>must</u> be modified by SB 80-54 in order to accept hook assembly P/N 105-80337. ⁵⁾ Hook assembly P/N 117-80127 is only compatible with installation provisions P/N 105-803471 and vice versa.				

8.2 ROLL OUT / JAMMING / TURN OUT

The following figures show the various failure modes of the load hook attachment.

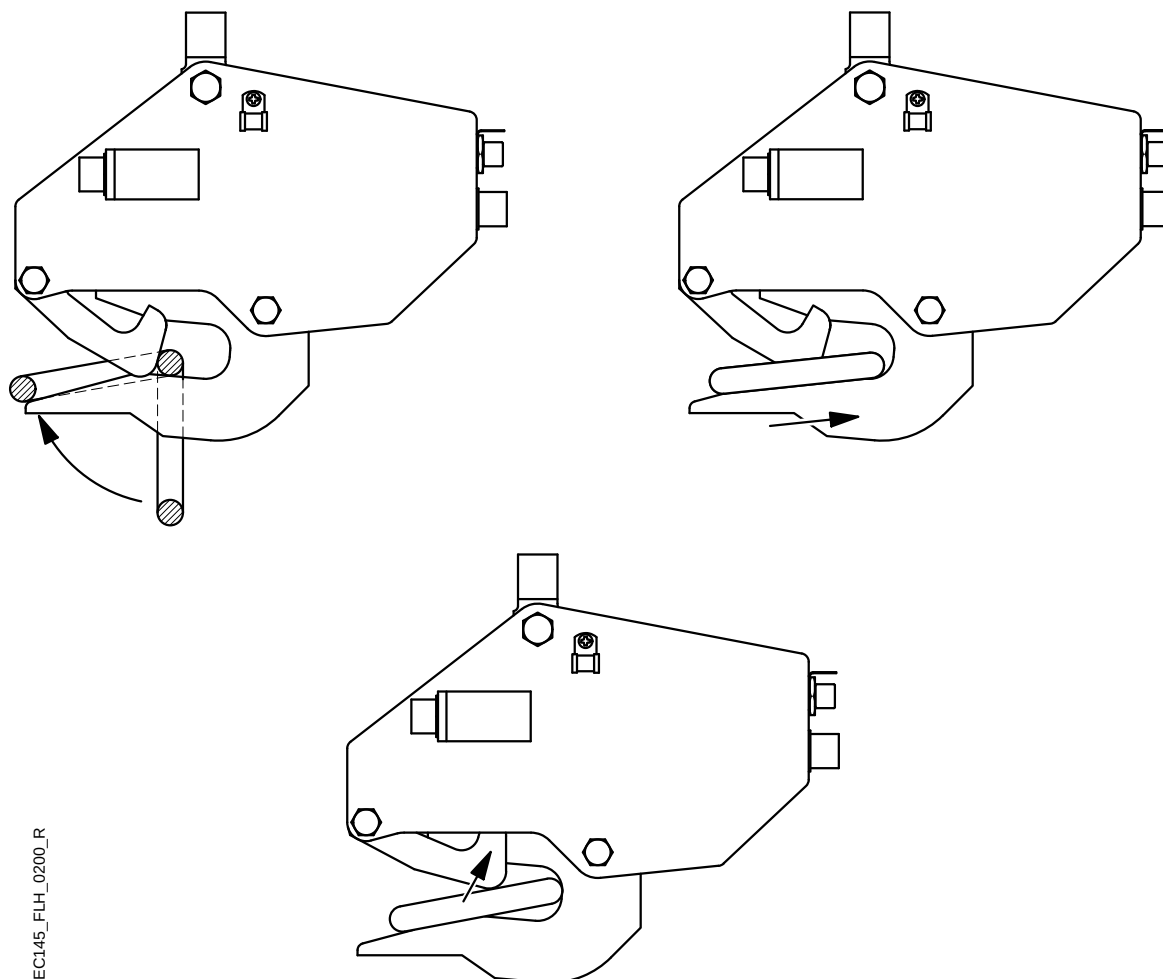

EC145_F1H_0200_R

Fig.7 Roll out

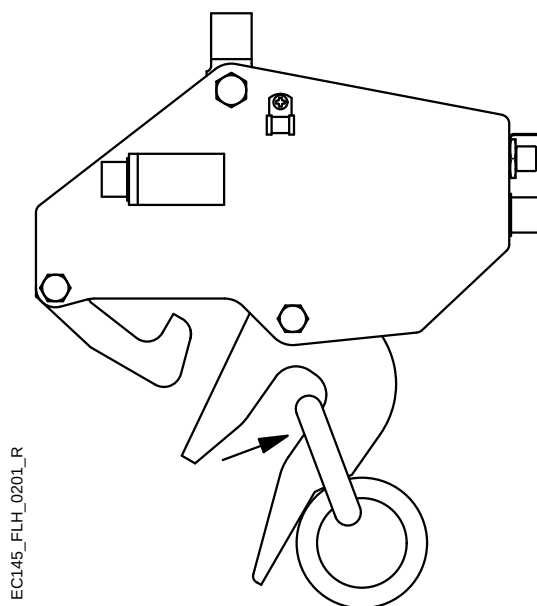


Fig.8 Jamming

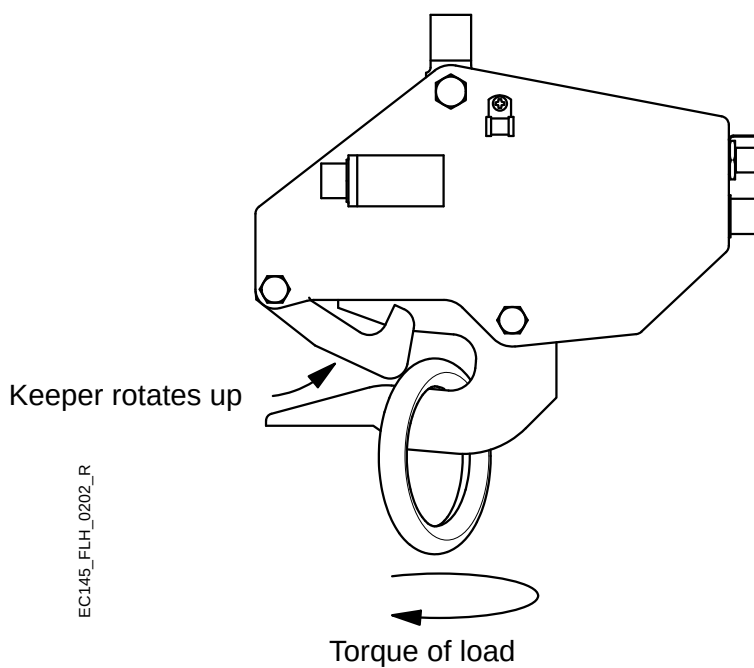


Fig.9 Turn out

