

6. MASS AND BALANCE


6.1 EQUIPMENT LIST ENTRIES

System/Equipment Designation	Part No.	Mass (kg)	Arm (mm)	Massmoment (kgmm)
External Loudspeaker, Cross-tube Mounted	105-83858	23.2	3500	81200
– Installation Provisions	105-83859	8.8	2900	25520
– Detachable Items	105-83860	14.4	3800	54720
External Loudspeaker, Cross-tube Mounted	D134-978	40.0	2800	112000
External Loudspeaker, Cross-tube Mounted	D136-1444	34.0	3800	129200
External Loudspeaker, Cross-tube Mounted	D136-1896	30.0	3800	114000
External Loudspeaker, Integrated	105S-83801	(29.9)	(1800)	(53820)
NOTE Above values in parentheses apply to Model S Variants.				


7. SYSTEM DESCRIPTION

The external loudspeakers permits voice communication transmissions from the airborne helicopter to personnel on the ground. The loudspeakers comprise two external loudspeakers, a 450-Watt amplifier, a control unit on the center console and a hand microphone. The loudspeakers may either be installed integrated in a lower fuselage fairing or cross tube mounted. The cross tube mounted installation varies further in that the loudspeakers may be mounted on the aft cross tube, LH and RH, or on a carrier bar fitted each side between the forward and aft cross tubes.


Operation of the system may be performed from either pilot or copilot station after selecting the loudspeaker on the respective COMM control panel or from the passenger compartment using the hand microphone.

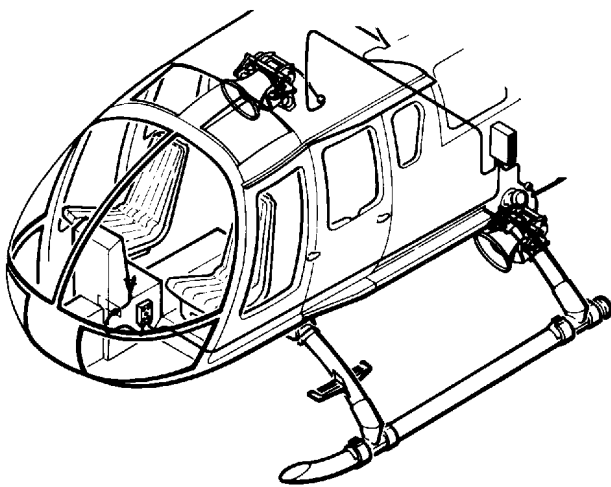

CROSS-TUBE MOUNTED LOUDSPEAKERS

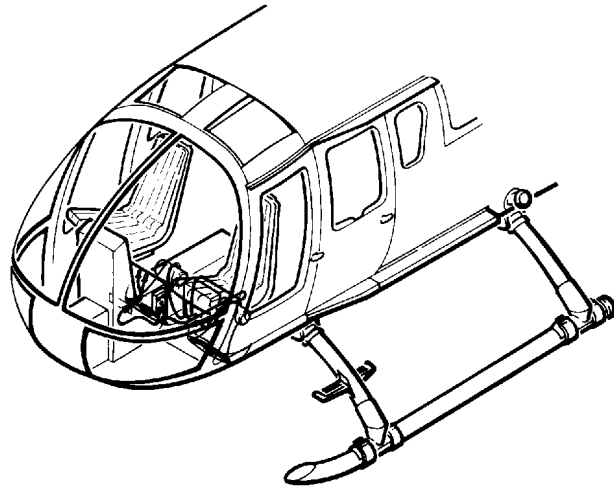

INTEGRATED LOUDSPEAKERS

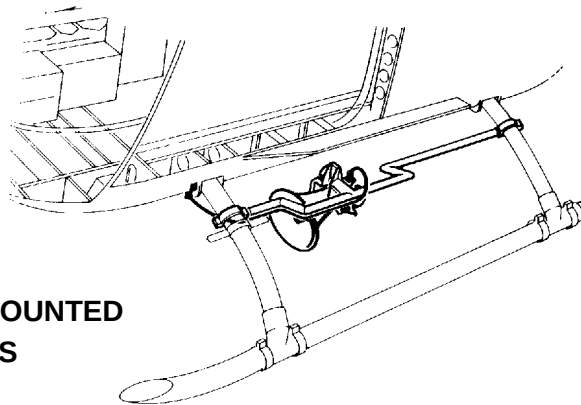

**ALTERNATE
CROSS-TUBE MOUNTED
LOUDSPEAKERS**

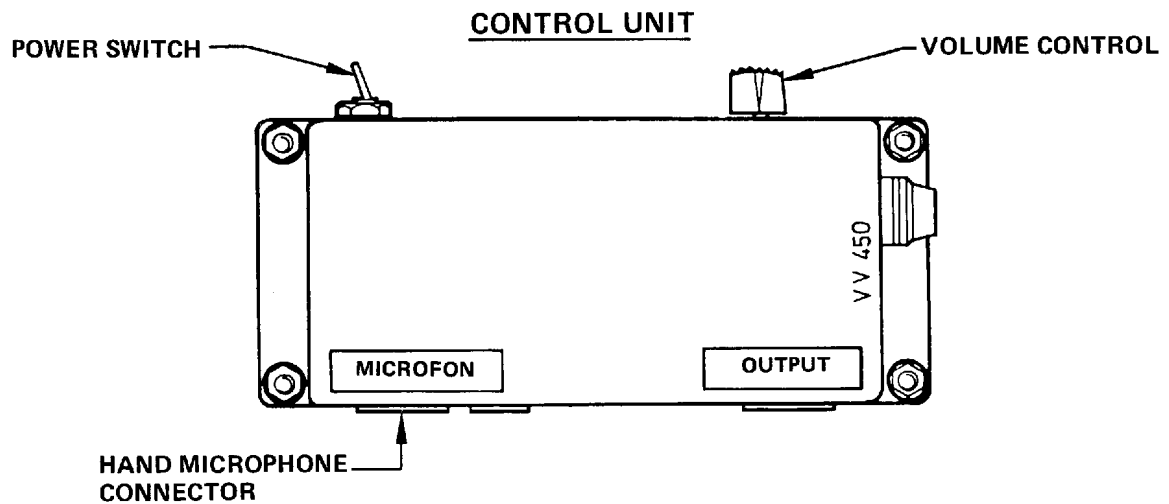


Fig. 1 External Loudspeakers