

6. MASS AND BALANCE

6.1 EQUIPMENT LIST ENTRIES

System/Equipment Designation	Part No.	Mass (kg)	Arm (mm)	Massmoment (kgmm)
Landing and Search Light, 250W	D137-546	3.2	800 (600)	2560 (1920)
Landing and Search Light, 450W	105-85041	3.5	800 (600)	2800 (2100)
NOTE Above values in parentheses apply to Model S Variants.				

7. SYSTEM DESCRIPTION

A retractable and rotatable landing and search light is installed in the fuselage lower nose area. The light is controlled by two switches (LAND LIGHT and SEARCHLIGHT) located on each collective pitch lever switch panel. A COP/PIL switch on the overhead panel is for selecting the command position, either copilot or pilot respectively.


The two-position LAND LIGHT switch controls the lamp. The 4-way SEARCHLIGHT switch is spring-loaded to its center, off position and is used to control the light unit position.

The following table explains the two control switch functions:


SWITCH	POSITION	FUNCTION
LAND LIGHT	ON	Switches the lamp on.
	OFF	Switches the lamp off.
SEARCHLIGHT	OUT	Extends light unit to any position up to approx 110° from fully retracted.
	IN	Retracts light unit to any position from fully extended. When fully retracted, light unit will also center to align itself flush with the fuselage.
	L - R	Rotates light unit in respective direction a full 360° continuously.

A two-segment indicator light is located adjacent to the COP/PIL switch on the overhead panel. The ON light segment comes on whenever the lamp is switched ON. The CLOSED A. LOCKED segment comes on whenever the SEARCHLIGHT switch is held in the IN position and the light unit is fully retracted and centered.

The landing and search light is supplied 28V DC power via two SEARCHLIGHT circuit breakers on the center console switch panel.

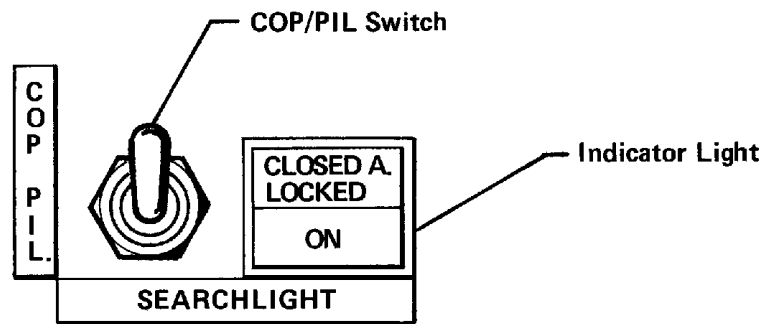

OVERHEAD PANEL

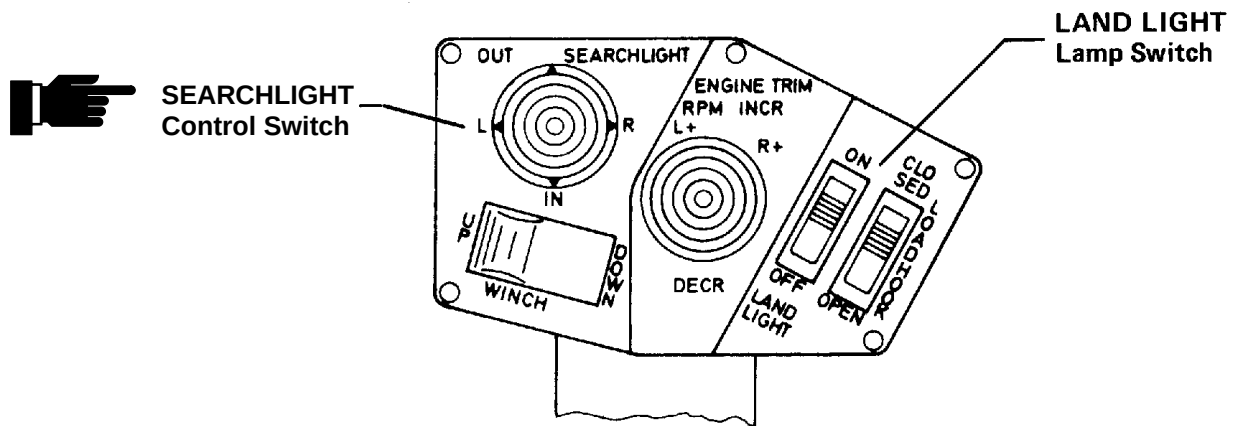

COLLECTIVE LEVER

Fig. 1 Landing and Search Light - Controls and Indicators