


EFFECTIVITY ALL, except Air Cleaner System D133-2760

Text:

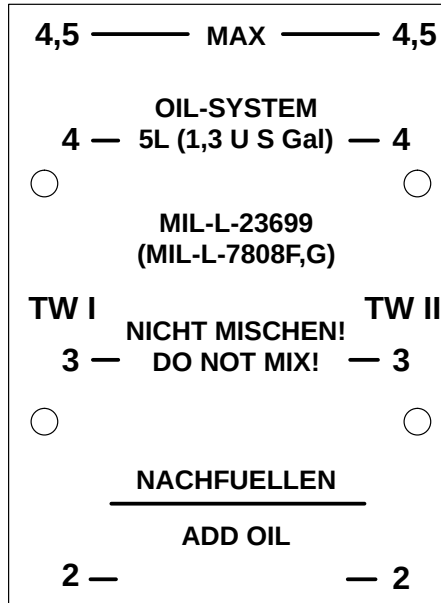

Location: Engine Oil Tank Assembly

EFFECTIVITY ALL

3. EMERGENCY AND MALFUNCTION PROCEDURES

No change in the basic Flight Manual data.

4. NORMAL PROCEDURES

4.1 PREFLIGHT CHECK

4.1.1 Exterior Check

- ★ Particle separator
 - Condition, integrity
 - Housing
 - Secure
 - Bypass door(s)
 - Clean, clear of foreign objects

NOTE When conditions permit, open bypass door(s) and check particle separator interior for cleanliness.

- Swirl tube panels
 - Clean, clear of foreign objects

NOTE Damaged swirl tubes must be replaced or sealed closed.

- Scavenge outlets and extensions
 - Secure, clear of foreign objects

- | | |
|---|------------------------------------|
| Seals (Mast, control rods and particle separator) | – Condition, secure |
| Mast and control rods | – Check for chaffing |
| Oil cooler air intake scoop and screen | – Secure, clear of foreign objects |
| Oil cooler air outlet | – Clean, clear of foreign objects |

4.1.2 Interior Check

EFFECTIVITY Air Cleaner System D133-2760

- | | |
|------------------------|--|
| ★ Bypass control lever | – Aft (closed) position, check detent locked |
|------------------------|--|

NOTE Make certain that the control lever is detent locked in the end positions. Positioning between detents is not permitted.

- | | |
|----------------|----------------|
| ★ Bypass doors | – Check closed |
|----------------|----------------|

EFFECTIVITY ALL, except Air Cleaner System D133-2760

- | | |
|--------------------|-------------------------|
| ★ SAND FILT switch | – On (forward position) |
|--------------------|-------------------------|

NOTE Under sand/dust conditions, make certain that SAND FILT switch is on before switching battery on so that bypass door remains closed.

- | | |
|--|------|
| BLEED AIR/SF indicator light (if fitted) | – On |
|--|------|

- | | |
|-------------|----------------|
| Bypass door | – Check closed |
|-------------|----------------|

EFFECTIVITY ALL

- | |
|---|
| ★ To be checked <u>each flight before takeoff</u> . |
|---|

4.2 AFTER TAKEOFF CHECK

NOTE Perform the following when atmospheric conditions are such that use of the particle separator is no longer necessary.

EFFECTIVITY Air Cleaner System D133-2760

- | | |
|----------------------|--|
| Bypass control lever | – Forward (opened) position, check detent locked |
|----------------------|--|

NOTE At high airspeeds, increased force may be necessary to move the lever in the final quarter of its travel. If opening the bypass doors is not possible, momentarily reduce airspeed.

EFFECTIVITY ALL, except Air Cleaner System D133-2760

- | | |
|------------------|----------------------|
| SAND FILT switch | – Off (aft position) |
|------------------|----------------------|

- | | |
|--|-------|
| BLEED AIR/SF indicator light (if fitted) | – Off |
|--|-------|