

3. EMERGENCY AND MALFUNCTION PROCEDURES

3.1 OEI DURING TAKEOFF PRIOR TO TDP (see Fig. 10)

Procedure

- | | |
|---------------------|--|
| 1. Attitude | – Nosedown -3° to -4° ; maintain starting point in sight |
| 2. Collective lever | – Adjust to 2.5-min Power |

Before touchdown:

- | | |
|---------------------|--------------------------------------|
| 3. Landing attitude | – Establish for minimum ground speed |
| 4. Collective lever | – Raise to cushion landing |

NOTE Plan for zero ground speed touchdown.

After touchdown:

- | | |
|-------------------------------------|--|
| 5. Collective lever | – Lower to full down |
| 6. Cyclic stick | – Neutral position; observe mast moment limits |
| 7. Single engine emergency shutdown | – Perform |

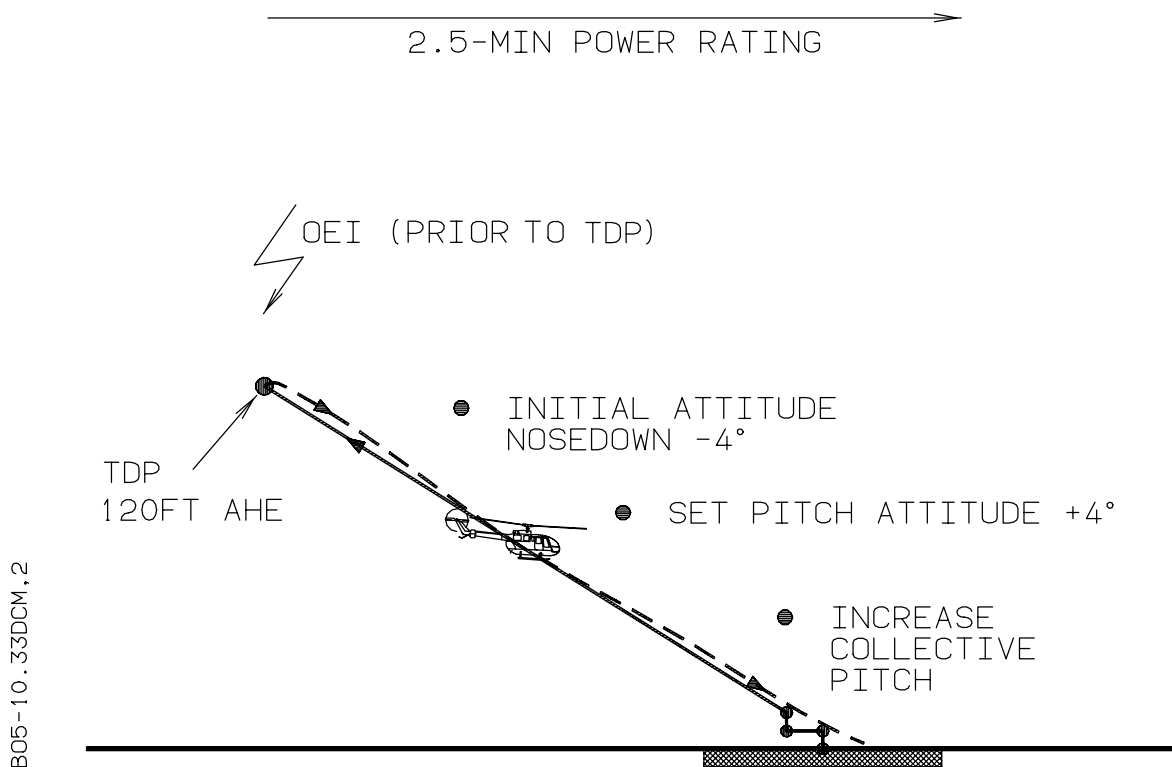


Fig. 10 VTOL - Rejected Takeoff Profile

3.2 OEI DURING TAKEOFF AFTER TDP (see Fig. 11)

Procedure

- | | |
|---------------------|---|
| 1. Attitude | – Nosedown -15° |
| 2. Collective lever | – Adjust to 2.5-min Power |
| 3. Attitude | – Slowly adjust to near level attitude while accelerating to V_{TOSS} (50 KIAS) |

When 200 ft AHE is reached:

- | | |
|-------------------------------------|---|
| 4. Airspeed | – Accelerate to V_Y (60 KIAS) |
| 5. Collective lever | – Adjust to 30-min Power |
| 6. Climbout | – Continue with V_Y to 1000 ft AHE |
| 7. Single engine emergency shutdown | – Perform |
| 8. Bleed air consumers | – As required, when at or above 1000 ft AHE |
| 9. LAND AS SOON AS POSSIBLE | |

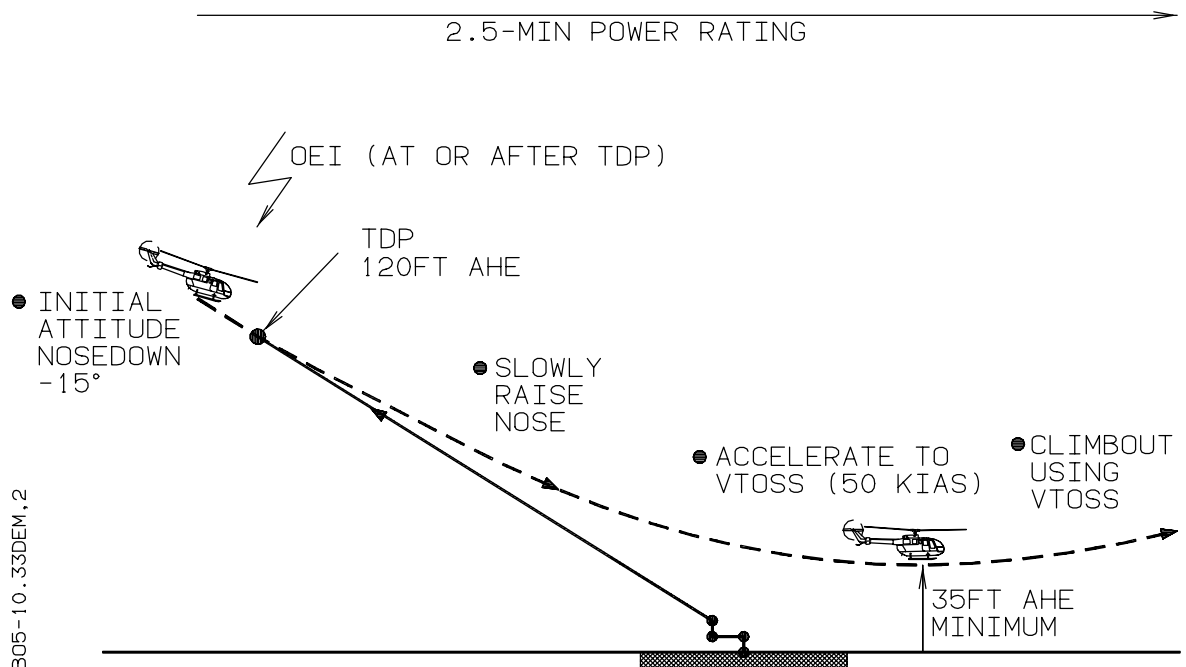


Fig. 11 VTOL - Continued Takeoff Profile

3.3 OEI DURING LANDING PRIOR TO LDP (see Fig. 12)

Procedure

NOTE The pilot may elect to go-around or to continue the approach. If the decision is to continue the approach, use procedures for **OEI DURING LANDING AFTER LDP**.

1. Collective lever – Adjust to 2.5-min Power
2. Airspeed – V_{TOSS} (50 KIAS)

NOTE If airspeed is 60 KIAS or above use V_Y (60 KIAS).

When 200 ft AHE is reached:

3. Airspeed – V_Y (60 KIAS)
4. Collective lever – Adjust to 30-min Power
5. Climbout – Continue with V_Y to 1000 ft AHE
6. Single engine emergency shutdown – Perform
7. Bleed air consumers – As required, when at or above 1000 ft AHE
8. LAND AS SOON AS POSSIBLE

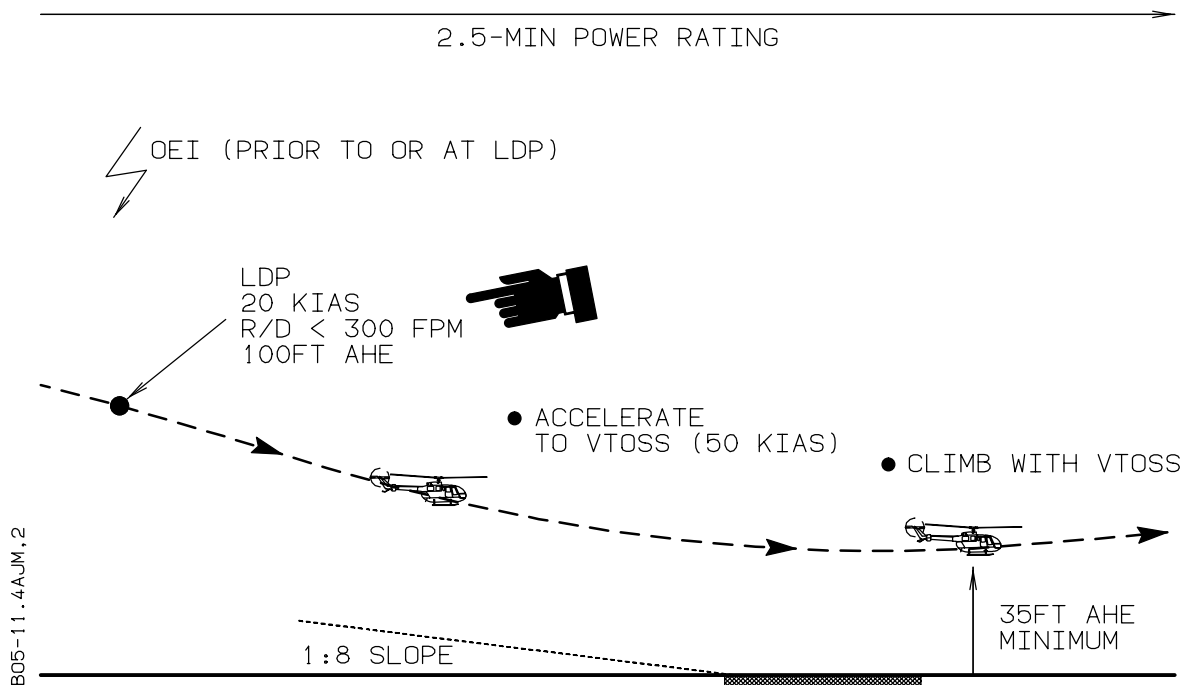


Fig. 12 VTOL - Go-around Profile

3.4 OEI DURING LANDING AFTER LDP (see Fig. 13)

Procedure

1. Collective lever – Adjust to 2.5-min Power

Before touchdown:

2. Landing attitude – Establish for minimum ground speed
3. Collective lever – Raise to cushion landing

NOTE Plan for zero ground speed touchdown.

After touchdown:

4. Collective lever – Lower to full down
5. Cyclic stick – Neutral position; observe mast moment limits
6. Single engine emergency shutdown – Perform

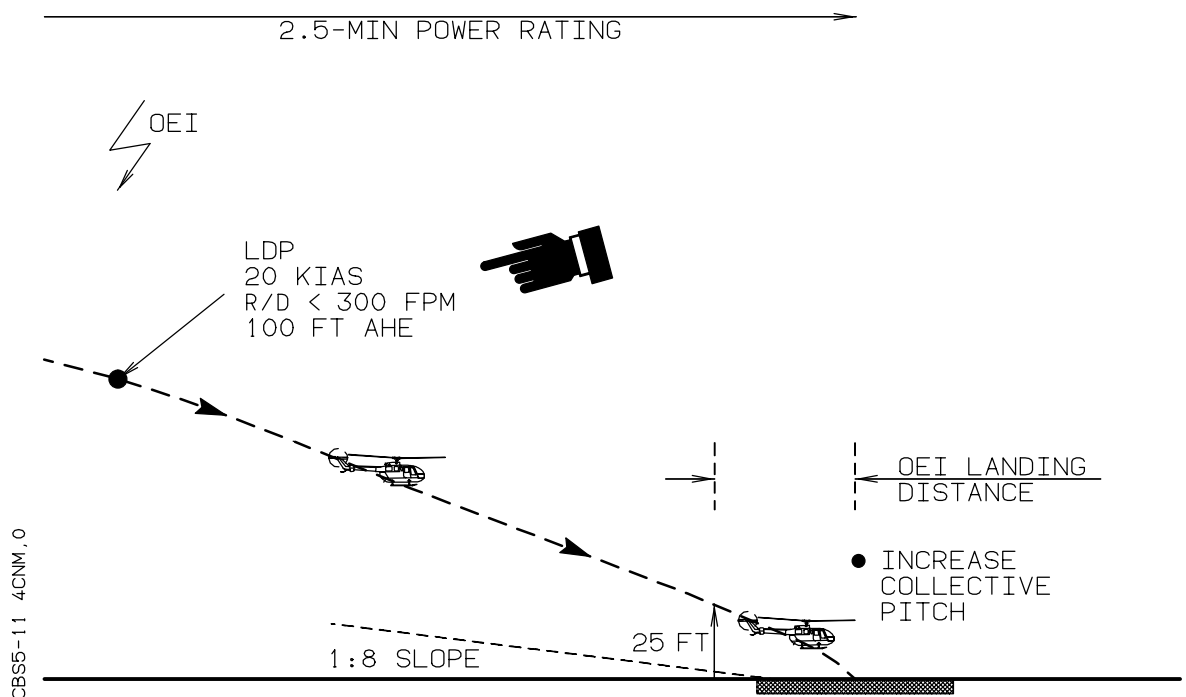


Fig. 13 VTOL - Continued Landing Profile