

4. NORMAL PROCEDURES

4.1 HELIPAD VERTICAL TAKEOFF (see Fig. 14 and 15)

Takeoff flight path – Select as nearly into wind as obstacles will permit

NOTE The helipad maneuvering area and takeoff flight path shall be clear of obstacles.

Pre-takeoff check – Perform

Altimeter – Set

Bleed air consumers other than engine anti-icing – Off

Hover – 3-ft skid height above helipad center

Rotor RPM – 100 % set with matched torque

All instruments – Normal operating ranges, note torque indication

Rearward hover – Hover aft approx 3 m

Slow vertical climb – Establish until reaching 10 ft AHE

Rearward climb – Initiate (use hover power plus 10-15 % to maintain 300 fpm rate of climb); maintain takeoff area in sight

When TDP is reached:

Collective lever – Adjust to Takeoff Power

Airspeed – Accelerate to V_Y (60 KIAS)

Collective lever – Adjust to Max Continuous Power

Bleed air consumers – As required, when at or above 1000 ft AHE

Climbout – Continue to desired altitude

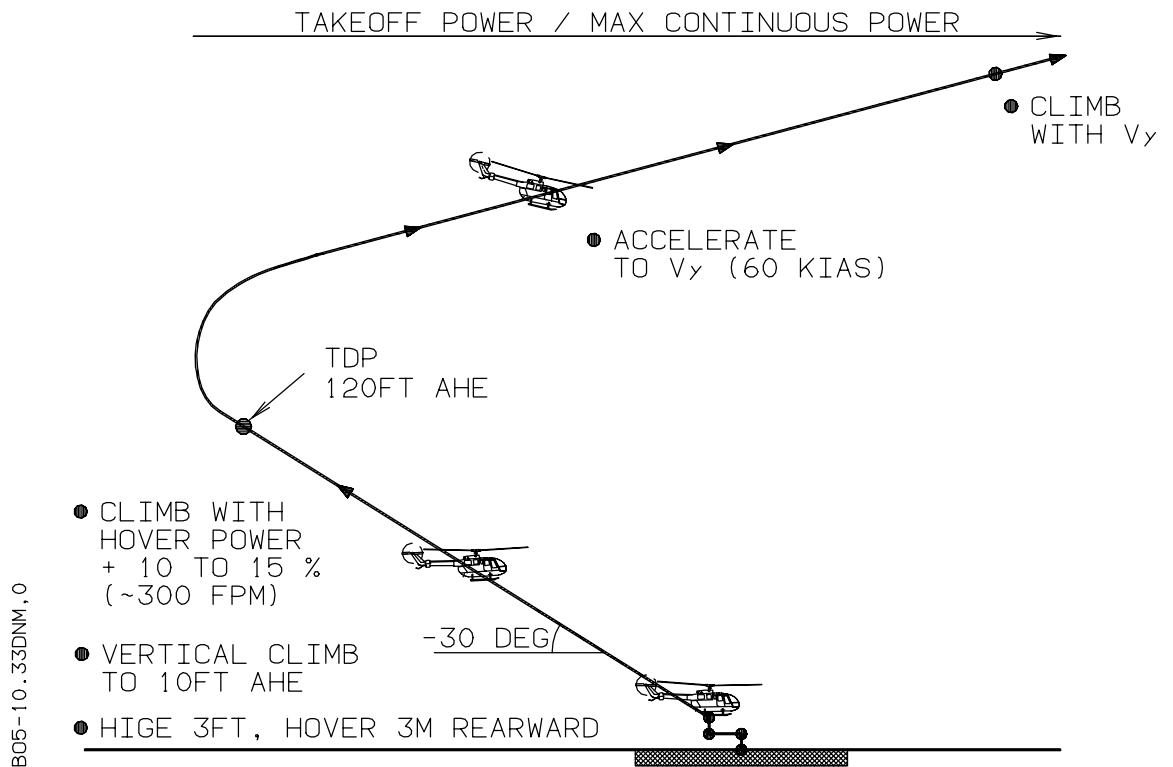


Fig. 14 VTOL - Vertical Takeoff Profile

BO5-11.4AQM,0

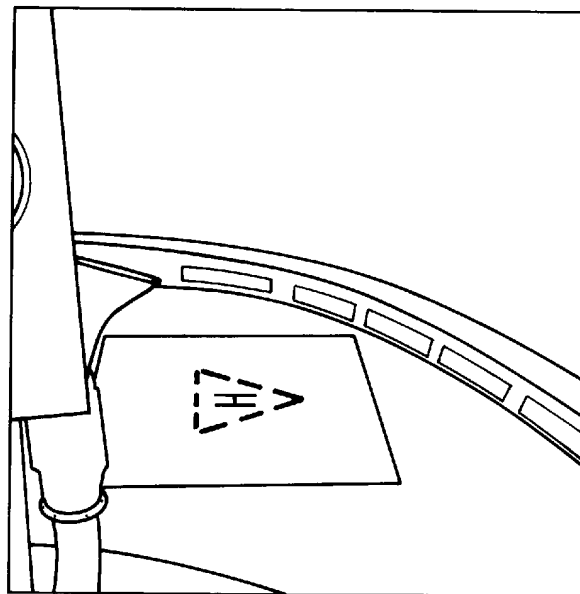


Fig. 15 VTOL - Takeoff Decision Point Sight Picture

4.2 HELIPAD VERTICAL LANDING (see Fig. 16 and 17)

- | | |
|------------------------------------|--|
| Prelanding check | – Perform |
| Anti-icing and bleed air consumers | – Off |
| Landing approach | – Initiate with 60 KIAS and 300 ft AHE, plan to arrive at: <ul style="list-style-type: none"> – <u>200 ft AHE</u> with 40 KIAS and R/D < 300 fpm – <u>150 ft AHE</u> with 30 KIAS and R/D < 300 fpm – <u>LDP (100 ft AHE)</u> with 20 KIAS and R/D < 300 fpm |

NOTE Approach airspeeds can be increased by half of the wind speed.

After passing LDP:

- | | |
|-----------------------|---|
| Speed | – Decrease slowly to arrive at a 3-ft hover above landing point |
| Slow vertical descent | – Initiate to touchdown |

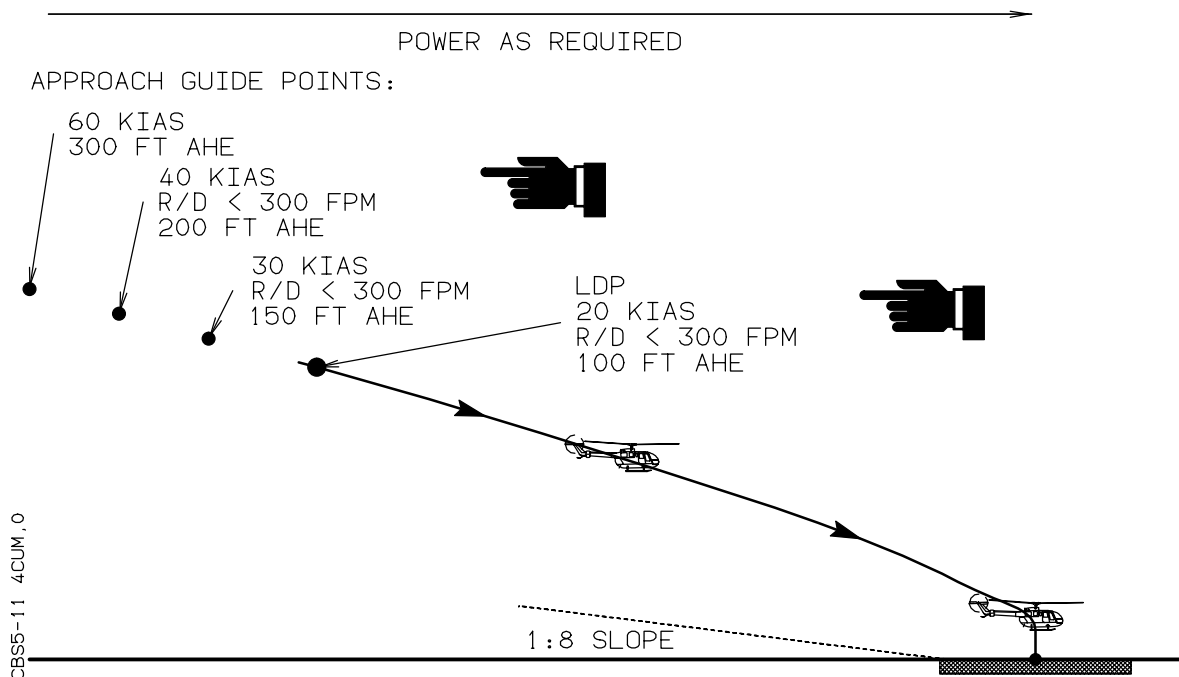


Fig. 16 VTOL - Vertical Landing Profile