



 PT. MNA SERANG	WORKING INSTRUCTION	WI/MNASRG-E&I-19-014	
	PM SOFT STARTER	Dept.	ENGINEERING
		Section	E&I
		Revision	0
		Effective Date	01-Sep-19
		Page	1 of 1

Menyimpan Parameter Tuning / Saving Tuning Parameter




Buka CB, & kunci dengan LOTO (*Open CB, & lock it with LOTO*)

Tunggu 5 menit & pastikan tegangan < 1V (*Wait for five minutes & make sure that Voltage*)

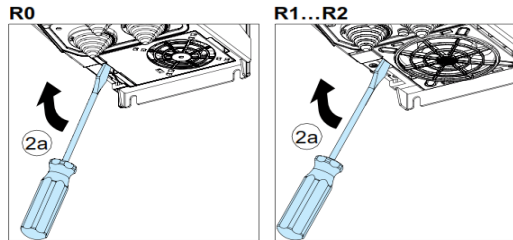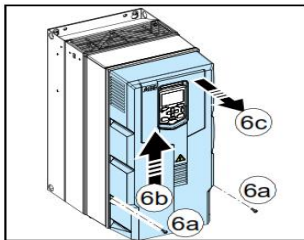

Lepaskan penutup luar SS; lepaskan sekrup pengikat (a), geser penutup ke atas (b) dan kemudian tarik keluar (*Remove the front cover of the drive; remove the fastening screws (a), move the cover to the top side (b) and then up (c).*)

Lepaskan kipas pendingin utama (*Remove the main cooling fan*)

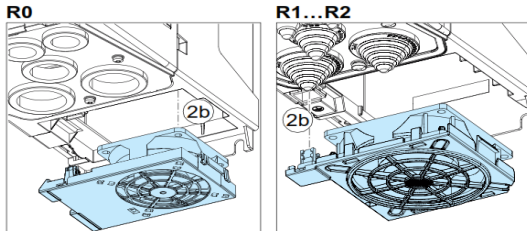

Lepaskan kipas pendingin tambahan (*Remove the auxiliary cooling fan*)

Bersihkan SS Dengan Blower (*Clean the SS with Blower*)



Bersihkan local control dengan pembersih contact & kain lembut (*Clean the local control panel with contact cleaner & soft Cloth*)

Pasang kembali kipas pendingin utama dan kipas pendingin tambahan, lalu pasang kembali tutup luar SS. (*Reinstall the main cooling fan and auxiliary cooling fan, then reinstall the front cover.*)



Catat parameter pada Soft Starter (*Note the parameter on Soft Starter Display*)

Nyalakan SS & cek arus keluaran ke motor (*Turn on the SS & check the output current from VFD to motor*)