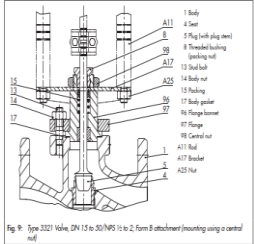
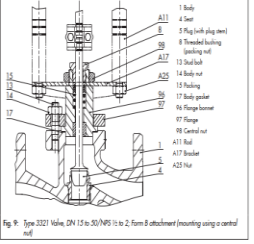
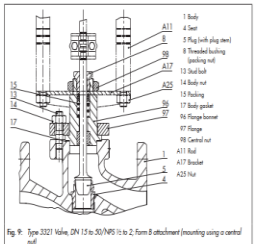
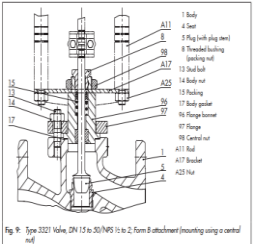


 PT. MNA SERANG	WORKING INSTRUCTION	WI-MNASRG-E&I-19-101	
		Dept.	ENGINEERING
	CONTROL VALVE REACTIVE MAINTENANCE	Section	E&I
		Revision	0
		Effective Date	
		Page	1 of 1 Page

Instruksi / Instruction	
Persiapan Reactive Maintenance / Prepare the Reactive Maintenance Process	
	Identifikasi/ Identification: Aktuator tidak bergerak sesuai instruksi. (<i>Actuator does not move on demand.</i>) Katub bocor ke atmosfer. (<i>The valve leaks to the atmo-sphere (fugitive emissions).</i>)
Siapkan peralatan dan APD (<i>Prepare equipment and APD</i>)	
Pengecekan Sinyal dan Catu Daya/ Signal and Power Supply Checking	
	
Buka penutup aktuator (<i>unblock the actuator</i>)	Cek sinyal masukan dan periksa kebocoran jalur (<i>check input signal and check pressure line for leakage</i>)
cek catu daya dan koneksinya. <i>Check the power supply and connections</i>	
Pergantian Gasket Control Valve/ Gasket Control Valve Replacement	
 Fig. 9: Type 3221 Valve, DN 15 to 50/NPS 1/2 to 2, Form B attachment (mounting using a control rail)	 Fig. 9: Type 3221 Valve, DN 15 to 50/NPS 1/2 to 2, Form B attachment (mounting using a control rail)
1. Buka bodi mur (14) secara bertahap dalam pola berselan gseling. <i>Undo the body nuts (14) gradually in a criss-cross pattern</i>	2. Angkat flange (97), kap flange(96), lepaskan dari batang stem(5) keluar bodi. <i>Lift the flange(97),flange bonnet(96),and plug with plug stem (5) off the body</i>
 Fig. 9: Type 3221 Valve, DN 15 to 50/NPS 1/2 to 2, Form B attachment (mounting using a control rail)	 Fig. 9: Type 3221 Valve, DN 15 to 50/NPS 1/2 to 2, Form B attachment (mounting using a control rail)
3. Lepaskan gasket rata(17), dengan hati-hati bersihkan muka seal di bodi valve, dan pada kap flange(96). <i>Remove the flat gasket(17). Carefully clean the sealing faces in the valve body (1) an on the flange bonnet(96).</i>	4. Masukkan gasket baru(17) ke body. Dan Pasang kap flange(96) dan flange(97) melewati stud(13) keatas bodi. <i>Place the flange bonnet (96) and the flange(97) over the studs (13) onto the body.</i>