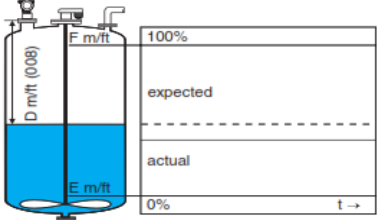
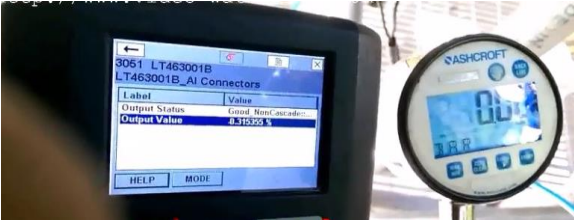
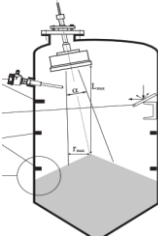
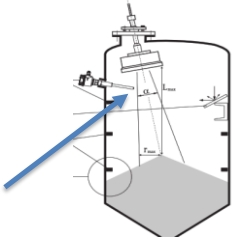


 PT. MNA SERANG	WORKING INSTRUCTION Error reading fluid level values	WI/MNASRG-E&I-19-105	
		Dept.	ENGINEERING
		Section	E&I
		Revision	0
		Effective Date	
		Page	1 of 1 page

Instruksi / <i>Instruction</i>	
Persiapan Alignment / <i>Prepare of Alignment Process</i>	
	
Siapkan peralatan dan APD (<i>Prepare equipment and APD</i>)	Kesalahan pembacaan nilai level fluida. <i>Error reading fluid level values.</i>
Pengecekan Elemen Sensor/ <i>Sensor Element Checking</i>	
	
1. Periksa dan sesuaikan parameter kalibrasi Kosong. <i>Check and adjust the Empty calibration parameter</i>	2. Periksa dan sesuaikan kalibrasi parameter penuh. <i>Check and adjust the Full calibration parameter</i>
	
3. Periksa dan sesuaikan linierisasi jika perlu <i>Check and adjust linearization if Necessary</i>	4. Lakukan koreksi panjang probe ,Konfirmasikan parameter panjang probe. <i>Carry out probe length correction Confirm probe length parameter</i>
	
5. Lakukan pemetaan seluruh probe saat tangki kosong. Konfirmasi parameter jarak. <i>Carry out mapping over entire probe while the tank is empty (Confirm distance parameter)</i>	7. Nonaktifkan pelacakan gema: Pakar → Sensor → Pelacakan gema → Evaluasi mode = Riwayat mati). <i>Deactivate echo tracking: Expert → Sensor → Echo tracking → Evaluation mode = History off</i>