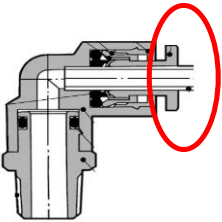
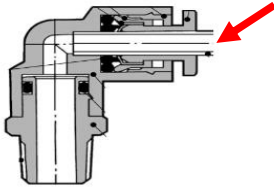
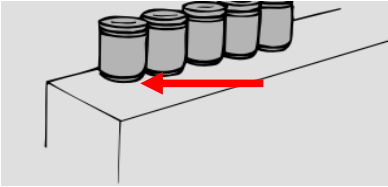
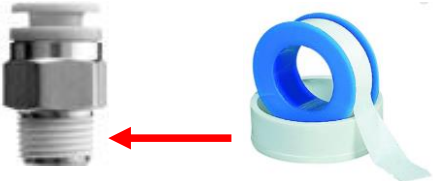
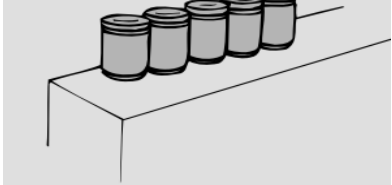


 PT. MNA SERANG	WORKING INSTRUCTION	WI/MNASRG-E&I-19-116	
		Dept.	ENGINEERING
	LEAK AIR INSTRUMENT REACTIVE MAINTENANCE	Section	E&I
		Revision	0
		Effective Date	
		Page	1 of 1

Instruksi / <i>Instruction</i>	
Persiapan dan Identifikasi Masalah/ <i>Preparation and Problem Identification</i>	
	
Siapkan peralatan dan APD (<i>Prepare equipment and APD</i>)	Pemeriksaan kebocoran pada fitting dan selang udara (<i>Checking for fitting and air tube leaking</i>)
Implementasi/ <i>Implementation</i>	
	
1. Cek kebocoran pada lokasi yang bertanda merah tekan knob dan keluarkan selang udara <i>Check for leaks at locations marked in red (press the knob shown in the red arrow and remove the air hose).</i>	2. Potong selang udara sepanjang ±2cm dan pasang kembali pada fitting tube <i>Cut the air hose ± 2cm long and put it back on the tube fitting</i>
Penggantian Fitting Selang/ <i>Replacement Fitting Tube</i>	
	
1. Cek kebocoran pada area yang di tunjuk panah merah. <i>Check for leaks in the area indicated by a red arrow.</i>	2. Lepaskan fitting tube dari bodi instrument menggunakan kunci pas. <i>Remove the tube fittings from the instrument body using the wrench.</i>
	
3. Tambahkan seal tape pada ulir. <i>Add seal tape on the thread.</i>	4. Pasang kembali pada bodi instrument. Bila masih bocor, ganti dengan fitting tube baru. <i>Put it back on the instrument body. If it still leaks, replace it with a new tube fitting.</i>