

WE RESERVE ALL RIGHTS IN THIS DOCUMENT AND IN THE INFORMATION CONTAINED THEREIN. REPRODUCTION, USE OR DISCLOSURE TO THIRD PARTIES WITHOUT EXPRESS AUTHORITY IS STRICTLY FORBIDDEN.

1		2		3		4		5		6		7		8	
A															
B															
C															
D															
E															
F															
UniSec Medium Voltage Switchgear PT MULTIMAS NABATI ASAHAN MVD-20 & MVD-21 20kV Boiler Plant SCHEMATIC DIAGRAM SBC-W INCOMING H01,H07															
00		Issued for Approval		11.01.19		YR		Checked		AW					
Ind.		Revision		Date		Name		Approved		AI					
1		2		3		4		5		6		7		8	

WE RESERVE ALL RIGHTS IN THIS DOCUMENT AND IN THE INFORMATION CONTAINED THEREIN. REPRODUCTION, USE OR DISCLOSURE TO THIRD PARTIES WITHOUT EXPRESS AUTHORITY IS STRICTLY FORBIDDEN.

	1	2	3	4	5	6	7	8						
A	SHEET INDEX								A					
	PAGE			PAGE NAME				REVISION						
	==MVD-20_MVD-21=H01&304/1			COVER SHEET				00						
	==MVD-20_MVD-21=H01&304/2			Index of Sheet				00						
	==MVD-20_MVD-21=H01&304/3			REFERENCE DESIGNATIONS				00						
	==MVD-20_MVD-21=H01&304/4			REFERENCE DESIGNATIONS				00						
	==MVD-20_MVD-21=H01&304/5			REFERENCE DESIGNATIONS				00						
	==MVD-20_MVD-21=H01&304/6			REFERENCE DESIGNATIONS				00						
	==MVD-20_MVD-21=H01&304/7			DISTRIBUTION OF AUXILIARY CIRCUITS				00						
	==MVD-20_MVD-21=H01&304/8			AUXILIARY CIRCUIT				00						
		==MVD-20_MVD-21=H01&304/9			CIRCUIT BREAKER CONTROL				00					
==MVD-20_MVD-21=H01&304/10			AUXILIARY MOTOR & RELAY				00							
==MVD-20_MVD-21=H01&304/11			DIGITAL INPUT/OUPUT RELAY				00							
==MVD-20_MVD-21=H01&304/12			SPARE CONTACT				00							
==MVD-20_MVD-21=H01&304/13			SPARE CONTACT				00							
==MVD-20_MVD-21=H01&304/14			CURRENT TRANSFOMER				00							
		==MVD-20_MVD-21=H01&304/15			VOLTAGE TRANSFORMER				00					
	==MVD-20_MVD-21=H01&304/16			LV DOOR LAYOUT				00						
	==MVD-20_MVD-21=H01&304/17			LV BOX LAYOUT				00						
	==MVD-20_MVD-21=H01&304/18			PART LIST				00						
	==MVD-20_MVD-21=H01&304/19			Terminal diagram ==MVD-20_MVD-21=H01+-XDA										
	==MVD-20_MVD-21=H01&304/20			Terminal diagram ==MVD-20_MVD-21=H01+-XDB1										
		==MVD-20_MVD-21=H01&304/21			Terminal diagram ==MVD-20_MVD-21=H01+-XDC1									
==MVD-20_MVD-21=H01&304/22			Terminal diagram ==MVD-20_MVD-21=H01+-XDC2											
==MVD-20_MVD-21=H01&304/23			Terminal diagram ==MVD-20_MVD-21=H01+-XDI											
==MVD-20_MVD-21=H01&304/24			Terminal diagram ==MVD-20_MVD-21=H01+-XDI2											
==MVD-20_MVD-21=H01&304/25			Terminal diagram ==MVD-20_MVD-21=H01+-XDI3											
==MVD-20_MVD-21=H01&304/26			Terminal diagram ==MVD-20_MVD-21=H01+-XDI6											
==MVD-20_MVD-21=H01&304/27			Terminal diagram ==MVD-20_MVD-21=H01+-XDV											
	==MVD-20_MVD-21=H01&304/28			Terminal diagram ==MVD-20_MVD-21=H01+-XDX										
E									E					
F					Date Prep.	15.11.2018	PROJECT TITLE		ABB	EPMV	Index of Sheet MVD-20 & MVD-21 20kV Boiler Plant SCHEMATIC DIAGRAM SBC-W INCOMING	Scale	NTS	= H01,H07
				Prepared	YR	MV Switchgear for MNA Serang Plant	Based on: BE318042	Customer				PT Multimas Nabati Asahan	& 304	
00	Issued for Approval	11.01.19	YR	Checked	AW			PT. ABB Sakti Industri	Drawing Nbr.	18.042-MNA-304.03		Sh.	2	
Ind.	Revision	Date	Name	Approved	AI			Customer Doc. Nbr.		Cont.	28			
	1	2	3	4	5	6	7	8						

WE RESERVE ALL RIGHTS IN THIS DOCUMENT AND IN THE INFORMATION CONTAINED THEREIN. REPRODUCTION, USE OR DISCLOSURE TO THIRD PARTIES WITHOUT EXPRESS AUTHORITY IS STRICTLY FORBIDDEN.

A	1				2				3				4				5				6				7				8											
	REFERENCE DESIGNATION OF OBJECTS IN ELECTRICAL DOCUMENTS																				-BGB5 POSITION SWITCH OF CIRCUIT-BREAKER SIGNALLING UNDERVOLTAGE RELEASE ENERGIZED																			
B	(IN COMPLIANCE WITH STANDARD IEC 81346-2 AND ABB TECHNICAL STANDARD 2NBA000001)																				-BGB6 POSITION SWITCH OF CIRCUIT-BREAKER SIGNALLING UNDERVOLTAGE RELEASE EXCLUDED MECHANICALLY																			
	DESIGNATION																				DESCRIPTION																			
B	-AA MULTIFUNCTION UNIT (CENTRAL UNIT)																				-BGB7 POSITION SWITCHES OF CIRCUIT-BREAKER ON SWITCHGEAR																			
	-BAD1,-BAD4 CAPACITIVE VOLTAGE DIVIDER LOCATED ON PHASE L1																				-BGB8...-BGB10 POSITION SWITCHES OF CIRCUIT-BREAKER																			
	-BAD2,-BAD5 CAPACITIVE VOLTAGE DIVIDER LOCATED ON PHASE L2																				-BGB11 POSITION SWITCH OF CIRCUIT-BREAKER OPERATING FOR MANUAL OPENING																			
	-BAD3,-BAD6 CAPACITIVE VOLTAGE DIVIDER LOCATED ON PHASE L3																				-BGB12 PROXIMITY SWITCH SIGNALLING CIRCUIT-BREAKER IN OPEN POSITION																			
	-BAR VOLTAGE PROTECTION RELAY																				-BGB13 PROXIMITY SWITCH SIGNALLING CIRCUIT-BREAKER IN CLOSED POSITION																			
	-BAS1 VOLTAGE SENSOR LOCATED ON PHASE L1																				-BGD POSITION SWITCH OF L.V. INSTRUMENT COMPARTMENT DOOR.																			
	-BAS2 VOLTAGE SENSOR LOCATED ON PHASE L2																				-BGD1 POSITION SWITCH OF CIRCUIT-BREAKER COMPARTMENT DOOR																			
	-BAS3 VOLTAGE SENSOR LOCATED ON PHASE L3																				-BGD2 POSITION SWITCH OF CABLE COMPARTMENT DOOR																			
	-BAT1 VOLTAGE TRANSFORMER LOCATED ON PHASE L1																				-BGE1 POSITION SWITCHES SIGNALLING EARTHING SWITCH -QCE IN OPEN POSITION																			
	-BAT2 VOLTAGE TRANSFORMER LOCATED ON PHASE L2																				-BGE2 POSITION SWITCHES SIGNALLING EARTHING SWITCH -QCE IN CLOSED POSITION																			
C	-BAT3 VOLTAGE TRANSFORMER LOCATED ON PHASE L3																				-BGE3 POSITION SWITCHES SIGNALLING EARTHING SWITCH -QCE IN OPEN POSITION AND NOT IN OPERATION (OPERATING LEVER NOT INSERTED)																			
	-BAT4 VOLTAGE TRANSFORMER IN BUSBAR COMPARTMENT LOCATED ON PHASE L1																				-BGE4 POSITION SWITCHES OF OPERATION OF EARTHING SWITCH -QCE ACTUATED BY ELECTRIC MOTOR																			
	-BAT5 VOLTAGE TRANSFORMER IN BUSBAR COMPARTMENT LOCATED ON PHASE L2																				-BGE5 POSITION SWITCHES OF OPERATION OF EARTHING SWITCH -QCE1 OR -QCE2 ACTUATED BY ELECTRIC MOTOR																			
	-BAT6 VOLTAGE TRANSFORMER IN BUSBAR COMPARTMENT LOCATED ON PHASE L3																				-BGE7 POSITION SWITCH SIGNALLING EARTHING SWITCH NOT IN MANUAL OPERATION																			
	-BCD DIFFERENTIAL PROTECTIVE RELAY																				-BGE8 POSITION SWITCHES OF EARTHING SWITCH -QCE SUPPLIED TOGETHER WITH SWITCH- DISCONNECTOR -QBS																			
	-BCF FEEDER PROTECTION RELAY																				-BGE11 POSITION SWITCHES SIGNALLING EARTHING SWITCH -QCE1 OR -QCE2 IN OPEN POSITION																			
	-BCG GENERATOR PROTECTION RELAY																				-BGE12 POSITION SWITCHES SIGNALLING EARTHING SWITCH -QCE1 OR -QCE2 IN CLOSED POSITION																			
	-BCM MOTOR PROTECTION RELAY																				-BGE13 POSITION SWITCHES SIGNALLING EARTHING SWITCH -QCE1 OR -QCE2 IN OPEN POSITION AND NOT IN OPERATION (OPERATING LEVER NOT INSERTED)																			
	-BCN NEUTRAL (RESIDUAL) CURRENT TRANSFORMER																				-BGE14, -BGE15 POSITION SWITCHES FOR OPERATION OF EARTHING SWITCH -QCE SUPPLIED TOGETHER WITH SWITCH-DISCONNECTOR -QBS, ACTUATED BY ELECTRIC MOTOR																			
	-BCP TRANSFORMER PROTECTION RELAY																				-BGF POSITION SWITCHES OF MEDIUM VOLTAGE FUSES																			
D	-BCR CURRENT PROTECTION RELAY																				-BGI1 POSITION SWITCHES SIGNALLING DISCONNECTOR -QBD IN OPEN POSITION																			
	-BCS1 CURRENT SENSOR LOCATED ON PHASE L1																				-BGI2 POSITION SWITCHES SIGNALLING DISCONNECTOR -QBD IN CLOSED POSITION																			
	-BCS2 CURRENT SENSOR LOCATED ON PHASE L2																				-BGI3 POSITION SWITCHES SIGNALLING DISCONNECTOR -QBD IN OPEN POSITION AND NOT IN OPERATION (OPERATING LEVER NOT INSERTED)																			
	-BCS3 CURRENT SENSOR LOCATED ON PHASE L3																				-BGI4 POSITION SWITCHES OF OPERATION OF DISCONNECTOR -QBD1 ACTUATED BY ELECTRIC MOTOR																			
	-BCT1 CURRENT TRANSFORMER LOCATED ON PHASE L1																				-BGI5 POSITION SWITCHES OF OPERATION OF DISCONNECTOR -QBD2 ACTUATED BY ELECTRIC MOTOR																			
	-BCT2 CURRENT TRANSFORMER LOCATED ON PHASE L2																				-BGI6 POSITION SWITCH SIGNALLING DISCONNECTOR (OR SWITCH-DISCONNECTOR) -QBD NOT IN EMERGENCY MANUAL OPERATION																			
	-BCT3 CURRENT TRANSFORMER LOCATED ON PHASE L3																				-BGI7 POSITION SWITCH SIGNALLING DICONNECTOR (OR SWITCH-DISCONNECTOR) -QBD NOT IN MANUAL OPERATION																			
	-BCT4,-BCT7 CURRENT TRANSFORMER LOCATED ON PHASE L1																				-BGI8 POSITION SWITCHES OF SWITCH-DISCONNECTOR -QBS																			
	-BCT5,-BCT8 CURRENT TRANSFORMER LOCATED ON PHASE L2																				-BGI9 POSITION SWITCHES OF OPERATION OF SWITCH-DISCONNECTOR -QBS ACTUATED BY ELECTRIC MOTOR																			
	-BCT6,-BCT9 CURRENT TRANSFORMER LOCATED ON PHASE L3																				-BGI11 POSITION SWITCHES SIGNALLING DISCONNECTOR -QBD1 IN OPEN POSITION																			
E	-BCZ DISTANCE PROTECTION RELAY																				-BGI12 POSITION SWITCHES SIGNALLING DISCONNECTOR -QBD1 IN CLOSED POSITION																			
	-BEF FREQUENCY PROTECTION RELAY																				-BGI13 POSITION SWITCHES SIGNALLING DISCONNECTOR -QBD1 IN OPEN POSITION AND NOT IN OPERATION (OPERATING LEVER NOT INSERTED)																			
	-BER SUPERVISION RELAYS																				-BGI14, -BGI15 POSITION SWITCHES OF OPERATION OF DISCONNECTOR -QBD1 ACTUATED BY ELECTRIC MOTOR																			
	-BES SYNCHRONIZING RELAY																				-BGI21 POSITION SWITCHES SIGNALLING DISCONNECTOR -QBD2 IN OPEN POSITION																			
	-BET THERMAL PROTECTION RELAY																				-BGI22 POSITION SWITCHES SIGNALLING DISCONNECTOR -QBD2 IN CLOSED POSITION																			
	-BGA1 POSITION SWITCH FOR DETECTION OF INTERNAL ARCING IN CIRCUIT-BREAKER COMPARTMENT																				-BGI23 POSITION SWITCHES SIGNALLING DISCONNECTOR -QBD2 IN OPEN POSITION AND NOT IN OPERATION (OPERATING LEVER NOT INSERTED)																			
	-BGA2 POSITION SWITCH FOR DETECTION OF INTERNAL ARCING IN BUSBAR COMPARTMENT (SINGLE BUSBAR SYSTEM) OR IN FRONT BUSBAR COMPARTMENT (DOUBLE BUSBAR SYSTEM)																				-BGI24, -BGI25 POSITION SWITCHES OF OPERATION OF DISCONNECTOR -QBD2 ACTUATED BY ELECTRIC MOTOR																			
	-BGA3 POSITION SWITCH FOR DETECTION OF INTERNAL ARCING IN CABLE COMPARTMENT																																							
	-BGA4 POSITION SWITCH FOR DETECTION OF INTERNAL ARCING IN REAR BUSBAR COMPARTMENT (DOUBLE BUSBAR SYSTEM)																																							
	F	-BGB1...-BGB3 POSITION SWITCHES OF CIRCUIT-BREAKER																																						
-BGB4 POSITION SWITCH OF CIRCUIT-BREAKER: PASSING CONTACT CLOSING MOMENTARILY WHEN THE BREAKER OPENS																																								
				Date Prep. 15.11.2018				PROJECT TITLE				ABB EPMV				REFERENCE DESIGNATIONS				Scale				NTS				= H01,H07												
				Prepared YR				MV Switchgear for MNA Serang Plant								MVD-20 & MVD-21 20kV Boiler Plant				Customer				PT Multimas Nabati Asahan				& 304												
00				Issued for Approval				11.01.19 YR				Checked AW								SCHEMATIC DIAGRAM				Drawing Nbr.				18.042-MNA-304.03				Sh. 3								
Ind.				Revision				Date				Name				Approved AI				Based on: BE318042				PT. ABB Sakti Industri				SBC-W INCOMING				Customer Doc. Nbr.				Cont. 28				
1				2				3				4				5				6				7				8												

WE RESERVE ALL RIGHTS IN THIS DOCUMENT AND IN THE INFORMATION CONTAINED THEREIN. REPRODUCTION, USE OR DISCLOSURE TO THIRD PARTIES WITHOUT EXPRESS AUTHORITY IS STRICTLY FORBIDDEN.


1		2		3		4		5		6		7		8		
A	-BGI31	POSITION SWITCHES SIGNALLING DISCONNECTOR -QBD3 IN OPEN POSITION						-CA	CAPACITORS							A
	-BGI32	POSITION SWITCHES SIGNALLING DISCONNECTOR -QBD3 IN CLOSED POSITION						-CA1	CAPACITOR FOR FRONT VENTILATOR							
	-BGI33	POSITION SWITCHES SIGNALLING DISCONNECTOR -QBD3 IN OPEN POSITION AND NOT IN OPERATION (OPERATING LEVER NOT INSERTED)						-CA2	CAPACITOR FOR REAR VENTILATOR							
	-BGI41...	POSITION SWITCHES SIGNALLING SWITCH-DISCONNECTOR -QBS CLOSED IN FEEDER POSITION						-EA1	LIGHTING LAMP LOCATED IN L.V. INSTRUMENT COMPARTMENT.							
	-BGI42	POSITION SWITCHES SIGNALLING SWITCH-DISCONNECTOR -QBS IN OPEN POSITION						-EA2	LIGHTING LAMP LOCATED IN CABLE COMPARTMENT							
	-BGI43...	POSITION SWITCHES SIGNALLING SWITCH-DISCONNECTOR -QBS CLOSED IN EARTH POSITION						-EA3	LIGHTING LAMP LOCATED IN OPERATING MECHANISM ENCLOSURE							
B	-BGI42	POSITION SWITCHES SIGNALLING SWITCH-DISCONNECTOR -QBS IN OPEN POSITION						-EA4	LIGHTING LAMP LOCATED IN CIRCUIT BREAKER COMPARTIMENT							B
	-BGI51	POSITION SWITCHES SIGNALLING DISCONNECTOR -QBD5 CLOSED IN FEEDER POSITION						-EB1	HEATER LOCATED IN CABLE COMPARTMENT							
	-BGI52	POSITION SWITCHES SIGNALLING DISCONNECTOR -QBD5 IN OPEN POSITION						-EB2	HEATER LOCATED IN CIRCUIT-BREAKER COMPARTMENT							
	-BGI53	POSITION SWITCHES SIGNALLING DISCONNECTOR -QBD5 CLOSED IN EARTH POSITION						-EB3	HEATER LOCATED IN MOTOR CABINET							
	-BGK	POSITION SWITCH OF KEY LOCK						-EB4	HEATER FOR VENTILATION TEST							
	-BGL1	POSITION SWITCH OF ELECTROMECHANICAL LOCK -RLE1						-EB5	HEATER LOCATED IN L.V. INSTRUMET COMPARTMENT.							
C	-BGS1...-BGS4	POSITION SWITCHES OF CIRCUIT-BREAKER SPRINGS						-EB7	HEATERS LOCATED IN LEFT SIDE OF THE OPERATING MECHANISM ENCLOSURE							C
	-BGS5	PROXIMITY SWITCH SIGNALLING SPRINGS IN CHARGED POSITION						-EB8	HEATERS LOCATED IN RIGHT SIDE OF THE OPERATING MECHANISM ENCLOSURE							
	-BGT1	POSITION SWITCHES ON TRUCK SIGNALLING TRUCK IN SERVICE POSITION						-FA1	SURGE ARRESTER LOCATED ON PHASE L1							
	-BGT2	POSITION SWITCHES ON TRUCK SIGNALLING TRUCK IN TEST POSITION						-FA2	SURGE ARRESTER LOCATED ON PHASE L2							
	-BGT3	POSITION SWITCH ON TRUCK SIGNALLING TRUCK NOT IN ISOLATING TRAVEL POSITION						-FA3	SURGE ARRESTER LOCATED ON PHASE L3							
	-BGT4	POSITION SWITCHES ON SWITCHGEAR SIGNALLING TRUCK IN SERVICE POSITION						-FCD	FUSE-DISCONNECTORS FOR PROTECTION OF AUXILIARY CIRCUITS							
D	-BGT5	POSITION SWITCHES ON SWITCHGEAR SIGNALLING TRUCK IN TEST POSITION						-FCF1	MEDIUM VOLTAGE FUSE LOCATED ON PHASE L1							D
	-BGT6	POSITION SWITCHES SIGNALLING V.T. TRUCK IN SERVICE POSITION						-FCF2	MEDIUM VOLTAGE FUSE LOCATED ON PHASE L2							
	-BGT7	POSITION SWITCHES SIGNALLING V.T. TRUCK IN TEST POSITION						-FCF3	MEDIUM VOLTAGE FUSE LOCATED ON PHASE L3							
	-BGT8	POSITION SWITCHES SIGNALLING EARTHING TRUCK IN SERVICE POSITION						-FCM1	MINIATURE CIRCUIT-BREAKER FOR PROTECTION OF SPRINGS CHARGING MOTOR ON MAIN CIRCUIT-BREAKER							
	-BGT11	PROXIMITY SWITCH SIGNALLING TRUCK IN SERVICE POSITION						-FCM2...-FCM10	MINIATURE CIRCUIT-BREAKERS FOR PROTECTION OF AUXILIARY CIRCUITS							
	-BGT12	PROXIMITY SWITCH SIGNALLING TRUCK IN TEST POSITION						-FCM11	MINIATURE CIRCUIT-BREAKER FOR PROTECTION OF VENTILATOR -MV1							
E	-BGV1	POSITION SWITCH OF FRONT VENTILATOR						-FCM12	MINIATURE CIRCUIT-BREAKER FOR PROTECTION OF VENTILATOR -MV2							E
	-BGV2	POSITION SWITCH OF REAR VENTILATOR						-FCM13	MINIATURE CIRCUIT-BREAKER FOR PROTECTION OF VENTILATOR -MV3							
	-BM	HYGROSTAT						-FCT	THERMAL OVERLOAD RELEASES							
	-BPA4	PRESSURE SWITCH LOCATED IN CABLE COMPARTMENT FOR DETECTION OF INTERNAL ARCING						-GA	GENERATORS							
	-BPA5	PRESSURE SWITCH LOCATED IN CIRCUIT-BREAKER OR IN UPPER VT COMPARTMENT FOR DETECTION OF INTERNAL ARCING						-GQ1	FRONT VENTILATOR							
	-BPA6	PRESSURE SWITCH LOCATED IN BUSBAR OR IN BUSBAR AND CIRCUIT-BREAKER COMPARTMENT FOR DETECTION OF INTERNAL ARCING						-GQ2	REAR VENTILATOR							
F	-BPA7	PRESSURE SWITCH LOCATED IN VOLTAGE TRANSFORMER ISOLATING COMPARTMENT FOR DETECTION OF INTERNAL ARCING						-GQ3	VENTILATOR LOCATED ON CIRCUIT-BREAKER TRUCK							F
	-BPS1	PRESSURE SWITCH LOCATED ON CIRCUIT-BREAKER OR ON POLE OF PHASE L1 OF CIRCUIT-BREAKER						-KFA1	AUXILIARY RELAY SIGNALLING LOW GAS PRESSURE							
	-BPS2	PRESSURE SWITCH LOCATED ON CIRCUIT-BREAKER POLE OF PHASE L2						-KFA2	AUXILIARY RELAY SIGNALLING INSUFFICIENT GAS PRESSURE							
	-BPS3	PRESSURE SWITCH LOCATED ON CIRCUIT-BREAKER POLE OF PHASE L3						-KFA3...-KFA9	AUXILIARY RELAYS OR CONTACTORS							
	-BR	FLAME DETECTORS, SMOKE DETECTORS						-KFC	CLOSING RELAYS OR CONTACTORS							
	-BT	THERMOSTAT						-KFI	INTEGRATED CIRCUITS							
	-BT1	THERMOSTAT FOR DE-ENERGIZATION OF VENTILATORS						-KFL	LOCKOUT RELAY							
	-BT2	THERMOSTAT FOR ENERGIZATION OF VENTILATORS						-KFM	MICROPROCESSORS							
	-BT3	THERMOSTAT SIGNALLING HIGH TEMPERATURE ALARM						-KFN	ANTIPUMPING RELAYS							
	-BU	BUCHHOLZ RELAY						-KFO	OPENING RELAYS OR CONTACTORS							
	-BX1	UNIT WITH SENSORS FOR DETECTION OF INTERNAL ARCING						-KFP	PROGRAMMABLE LOGIC CONTROLLERS (PLC)							
	-BX2	ADDITIONAL CURRENT SENSING UNIT FOR DETECTION OF INTERNAL ARCING						-KFR	RECLOSING RELAYS							
	-BZ,-BZ4	MULTIFUNCTION SENSORS						-KFS	SYNCHRONIZING DEVICES							
	-BZ1	COMBINED CURRENT AND VOLTAGE SENSOR, LOCATED ON PHASE L1						-KFT	AUXILIARY TIME RELAYS, DELAY ELEMENTS							
	-BZ2	COMBINED CURRENT AND VOLTAGE SENSOR, LOCATED ON PHASE L2						-KFZ	CONTROLLERS							
	-BZ3	COMBINED CURRENT AND VOLTAGE SENSOR, LOCATED ON PHASE L3						-MBC	CLOSING RELEASE OF CIRCUIT-BREAKER							
								-MAD	MOTOR FOR ELECTRICAL OPERATION OF DISCONNECTOR -QBD							
								-MAD1	MOTOR FOR ELECTRICAL OPERATION OF DICONNECTOR -QBD1							
								-MAD2	MOTOR FOR ELECTRICAL OPERATION OF DICONNECTOR -QBD2							
								-MAD9	MOTOR FOR ELECTRICAL OPERATION OF SWITCH-DISCONNECTOR -QBS							
				Date Prep.	15.11.2018	PROJECT TITLE MV Switchgear for MNA Serang Plant		ABB	EPMV	REFERENCE DESIGNATIONS MVD-20 & MVD-21 20kV Boiler Plant		Scale	NTS		= H01,H07	
				Prepared	YR							Customer	PT Multimas Nabati Asahan		& 304	
00	Issued for Approval	11.01.19	YR	Checked	AW			PT. ABB Sakti Industri		SCHEMATIC DIAGRAM SBC-W INCOMING		Drawing Nbr.	18.042-MNA-304.03		Sh. 4	
Ind.	Revision	Date	Name	Approved	AI	Based on:	BE318042					Customer Doc. Nbr.			Cont. 28	
1		2		3		4		5		6		7		8		

WE RESERVE ALL RIGHTS IN THIS DOCUMENT AND IN THE INFORMATION CONTAINED THEREIN. REPRODUCTION, USE OR DISCLOSURE TO THIRD PARTIES WITHOUT EXPRESS AUTHORITY IS STRICTLY FORBIDDEN.


A	-MAE	MOTOR FOR ELECTRICAL OPERATION OF EARTHING SWITCH -QCE						-QBH	MANUAL CIRCUIT-BREAKERS							
	-MAE1	MOTOR FOR ELECTRICAL OPERATION OF EARTHING SWITCH -QCE1 OR -QCE2						-QBL	LINKS							
	-MAE8	MOTOR FOR ELECTRICAL OPERATION OF EARTHING SWITCH -QCE SUPPLIED TOGETHER WITH SWITCH-DISCONNECTOR -QBS						-QBM	MINIATURE SWITCH-DISCONNECTORS							
	-MAS	MOTOR FOR CIRCUIT-BREAKER SPRINGS CHARGING						-QBS	SWITCH-DISCONNECTORS							
	-MAT	MOTOR FOR ELECTRICAL OPERATION OF TRUCK RACKING-IN/OUT						-QBT	TRUCK							
	-MBC	CLOSING RELEASE OF CIRCUIT-BREAKER						-QCA	EARTHING SWITCH FOR ELIMINATION OF INTERNAL ARCING							
	-MBC4	CLOSING RELEASE OF SWITCH-DISCONNECTOR -QBS						-QCE	EARTHING SWITCH							
	-MBO1	FIRST OPENING RELEASE OF CIRCUIT-BREAKER						-QCE1	EARTHING SWITCH OF BUSBARS (SINGLE BUSBAR SYSTEM) OR OF FRONT BUSBARS (DOUBLE BUSBAR SYSTEM)							
	-MBO2	SECOND OPENING RELEASE OF CIRCUIT-BREAKER						-QCE2	EARTHING SWITCH OF REAR BUSBARS (DOUBLE BUSBAR SYSTEM)							
	-MBO3	OPENING SOLENOID FOR OVERCURRENT RELEASE OF CIRCUIT-BREAKER OR INDIRECT OVERCURRENT RELEASE ON CIRCUIT-BREAKER						-QQ	CLUTCHES							
B	-MBO4	OPENING RELEASE OF SWITCH-DISCONNECTOR -QBS						-RAA	ANTIFERRORESONANCE RESISTOR							
	-MBU	UNDERVOLTAGE RELEASE OF CIRCUIT-BREAKER						-RAD	DIODES							
	-PFB	BLUE SIGNAL LAMPS						-RAI	INDUCTORS							
	-PFF	FLAG RELAYS						-RAR	RESISTORS							
	-PFG	GREEN SIGNAL LAMPS						-RF	FILTERS							
C	-PFR	RED SIGNAL LAMPS						-RLE1	ELECTROMECHANICAL LOCK PREVENTING CIRCUIT-BREAKER CLOSING							
	-PFS	SHORT CIRCUIT INDICATORS						-RLE2	ELECTROMECHANICAL LOCK PREVENTING TRUCK RACKING-IN/OUT							
	-PFV	VOLTAGE INDICATORS						-RLE3	ELECTROMECHANICAL LOCK PREVENTING INSERTION OF LEVER FOR CLOSING OPERATION OF EARTHING SWITCH -QCE							
	-PFV1	VOLTAGE INDICATORS ON FEEDER SIDE						-RLE4	ELECTROMECHANICAL LOCK PREVENTING THE DOOR OPENING OPERATION							
	-PFV2	VOLTAGE INDICATORS ON BUSBAR SIDE						-RLE5	ELECTROMECHANICAL LOCK PREVENTING OPERATION OF DISCONNECTOR -QBD							
	-PFW	WHITE SIGNAL LAMPS						-RLE6	ELECTROMECHANICAL LOCK PREVENTING INSERTION OF LEVER FOR CLOSING OPERATION OF DISCONNECTOR -QBD1							
	-PFX	CROSS INDICATORS, ELECTROMECHANICAL INDICATORS						-RLE7	ELECTROMECHANICAL LOCK PREVENTING INSERTION OF LEVER FOR CLOSING OPERATION OF DISCONNECTOR -QBD2							
	-PFY	YELLOW SIGNAL LAMPS						-RLE8	ELECTROMECHANICAL LOCK PREVENTING INSERTION OF LEVER FOR CLOSING OPERATION OF EARTHING SWITCH -QCE1 OR -QCE2							
	-PGA	AMMETERS						-RLE9	ELECTROMECHANICAL LOCK PREVENTING OPERATION OF SWITCH-DISCONNECTOR -QBS							
	-PGC	COUNTERS						-RLE11	ELECTROMECHANICAL LOCK PREVENTING INSERTION OF LEVER FOR OPERATION OF DISCONNECTOR -QBD4							
D	-PGF	FREQUENCYMETERS						-RLE12	ELECTROMECHANICAL LOCK PREVENTING INSERTION OF LEVER FOR OPERATION OF DISCONNECTOR -QBD5							
	-PGH	HOURMETERS						-SFA	AMMETRIC SWITCHES							
	-PGI	PROTECTION AND CONTROL UNIT: HUMAN MACHINE INTERFACE						-SFC	CONTROL SWITCHES, CLOSING PUSH-BUTTONS							
	-PGI1	HUMAN MACHINE INTERFACE OF ELECTRONIC CONTROLLED CIRCUIT-BREAKER (ON CIRCUIT-BREAKER)						-SFL	LOCKING CONTACTS							
	-PGI2	HUMAN MACHINE INTERFACE FOR ELECTRONIC CONTROLLED CIRCUIT-BREAKER (ON SWITCHGEAR)						-SFO	OPENING PUSH-BUTTONS							
	-PGJ	ACTIVE ENERGY METERS						-SFR	RESET PUSH-BUTTONS							
	-PGK	REACTIVE ENERGY METERS						-SFS	SELECTOR SWITCHES							
	-PGM	MULTIFUNCTION INDICATORS						-SFT	TEST PUSH-BUTTONS							
	-PGP	POWER-FACTOR METERS						-SFU	UNLOCKING PUSH-BUTTONS							
	-PGQ	VARMETERS						-SFV	VOLTMETRIC SWITCHES							
E	-PGS	SYNCHRONOSCOPES						-TA	POWER TRANSFORMERS							
	-PGV	VOLTMETERS						-TB	CONVERTER							
	-PGW	WATTMETERS						-TB1	RECTIFIER FOR FIRST OPENING RELEASE							
	-PJ	ACOUSTICAL SIGNAL DEVICES (BELLS, SIRENS)						-TB2	RECTIFIER FOR SECOND OPENING RELEASE							
	-QAB	CIRCUIT-BREAKERS						-TB3	RECTIFIER FOR CLOSING RELEASE							
	-QAC	CONTACTORS (FOR POWER)						-TB4	RECTIFIER FOR ELECTROMECHANICAL LOCK PREVENTING CIRCUIT-BREAKER CLOSING							
	-QBD	DISCONNECTORS						-TB5	RECTIFIER FOR ELECTROMECHANICAL LOCK PREVENTING TRUCK RACKING-IN/OUT							
	-QBD1	FRONT BUSBAR DISCONNECTORS (DOUBLE BUSBAR SYSTEM)						-TB6	RECTIFIER FOR UNDERVOLTAGE RELEASE							
	-QBD2	REAR BUSBAR DISCONNECTORS (DOUBLE BUSBAR SYSTEM)						-TB7	ERECTIFIER FOR INDIRECT OVERCURRENT RELEASE ON CIRCUIT-BREAKER							
	-QBD3	FEEDER DISCONNECTORS (DOUBLE BUSBAR SYSTEM)														
-QBD4	TWO-WAY DISCONNECTOR															
-QBD5	TWO-WAY DISCONNECTOR ON BUSBAR RISER															
F					Date Prep.	15.11.2018	PROJECT TITLE MV Switchgear for MNA Serang Plant		ABB	EPMV	REFERENCE DESIGNATIONS MVD-20 & MVD-21 20kV Boiler Plant		Scale	NTS		= H01,H07
					Prepared	YR							Customer	PT Multimas Nabati Asahan		& 304
	00	Issued for Approval	11.01.19	YR	Checked	AW			PT. ABB Sakti Industri		SCHEMATIC DIAGRAM SBC-W INCOMING		Drawing Nbr.	18.042-MNA-304.03		Sh. 5
	Ind.	Revision	Date	Name	Approved	AI	Based on:	BE318042					Customer Doc. Nbr.			Cont. 28
1		2		3		4		5		6		7		8		

WE RESERVE ALL RIGHTS IN THIS DOCUMENT AND IN THE INFORMATION CONTAINED THEREIN. REPRODUCTION, USE OR DISCLOSURE TO THIRD PARTIES WITHOUT EXPRESS AUTHORITY IS STRICTLY FORBIDDEN.


A	-TFA				ACTIVE POWER TRANSDUCERS				-XDI1	TERMINAL BLOCK FOR INTERCONNECTIONS OF CONTROL CIRCUITS				A									
	-TFC				CURRENT TRANSDUCERS					-XDI2	TERMINAL BLOCK FOR INTERCONNECTIONS OF CIRCUITS OF MOTOR FOR CIRCUIT-BREAKER SPRINGS CHARGING												
	-TFF				FREQUENCY TRANSDUCERS				-XDI3		TERMINAL BLOCK FOR INTERCONNECTIONS OF CIRCUITS OF MOTOR FOR SWITCH-DISCONNECTOR OPERATION												
	-TFJ				ACTIVE ENERGY TRANSDUCERS					-XDI4	TERMINAL BLOCK FOR INTERCONNECTIONS OF A.C. AUXILIARY CIRCUITS												
	-TFK				REACTIVE ENERGY TRANSDUCERS				-XDI6		TERMINAL BLOCK FOR INTERCONNECTION (CONNECTION BETWEEN PANELS) OF VOLTAGE CIRCUITS												
	-TFM				MULTIFUNCTION TRANSDUCERS					-XDI7	TERMINAL BLOCK FOR INTERCONNECTION OF MOD-BUS												
	-TFP				POWER-FACTOR TRANSDUCERS				-XDI8		TERMINAL BLOCK FOR INTERCONNECTIONS OF CURRENT CIRCUITS												
	-TFQ				REACTIVE POWER TRANSDUCERS					-XDI9	TERMINAL BLOCK FOR SPECIAL USE												
	-TFS				SIGNAL CONVERTERS				-XDJ		TERMINAL BLOCK FOR AUXILIARY CIRCUITS OF DISCONNECTORS -QBD												
	-TFV				VOLTAGE TRANSDUCERS					-XDJ1	TERMINAL BLOCK FOR AUXILIARY CIRCUITS OF SWITCH-DISCONNECTOR -QBS												
B	-WA				BUSBARS				-XDM		SEALABLE TERMINAL BLOCK FOR MEASUREMENT				B								
	-WBC				POWER CABLES					-XDS	CURRENT SOCKETS												
	-WE				EARTHING CABLES FOR L.V. INSTRUMENT COMPARTMENT.				-XDT		TERMINAL BLOCK FOR POSITION CONTACTS OF TRUCK AND OF CONNECTOR -XDB												
	-WGC				CONTROL CABLES					-XDU	CONNECTOR FOR ISOLATION OF CIRCUITS OF LOWER VOLTAGE TRANSFORMER TRUCK												
	-WGS				COMMUNICATION CABLES (SHIELDED TWISTED PAIRS)				-XDU1		TERMINAL BLOCK FOR CIRCUITS OF LOWER VOLTAGE TRANSFORMER TRUCK												
	-WH				OPTICAL FIBRES					-XDV	TERMINAL BLOCK FOR CIRCUITS OF VOLTAGE TRANSFORMERS												
	-XDA				TERMINAL BLOCK FOR CIRCUITS OF CURRENT TRANSFORMERS				-XDV1		CONNECTOR FOR CIRCUITS OF VOLTAGE TRANSFORMERS LOCATED ON PHASE L1												
	-XDA1				CONNECTOR FOR CIRCUITS OF CURRENT TRANSFORMERS LOCATED ON PHASE L1					-XDV2	CONNECTOR FOR CIRCUITS OF VOLTAGE TRANSFORMERS LOCATED ON PHASE L2												
	-XDA2				CONNECTOR FOR CIRCUITS OF CURRENT TRANSFORMERS LOCATED ON PHASE L2				-XDV3		CONNECTOR FOR CIRCUITS OF VOLTAGE TRANSFORMERS LOCATED ON PHASE L3												
	-XDA3				CONNECTOR FOR CIRCUITS OF CURRENT TRANSFORMERS LOCATED ON PHASE L3					-XDV4	CONNECTOR FOR CIRCUITS OF ANTIFERRORESONANCE RESISTOR												
	-XDA5				CONNECTOR FOR CIRCUITS OF NEUTRAL (RESIDUAL) CURRENT TRANSFORMER				-XDX		SUPPORT TERMINAL BLOCK												
	-XDB				CONNECTOR FOR ISOLATION OF CIRCUIT-BREAKER (OR UPPER VOLTAGE TRANSFORMER TRUCK) AUXILIARY CIRCUITS					-XE1	EARTHING TERMINAL BLOCKS FOR LV COMPARTMENT, LEFT SIDE												
	-XDB1				CONNECTOR FOR AUXILIARY CIRCUITS OF CIRCUIT-BREAKER (OR UPPER VOLTAGE TRANSFORMER TRUCK)				-XE2		EARTHING TERMINAL BLOCKS FOR LV COMPARTMENT, RIGHT SIDE												
	-XDB2				CONNECTOR FOR ADDITIONAL AUXILIARY CIRCUITS OF CIRCUIT-BREAKER					-XE5	EARTHING TERMINAL BLOCKS FOR MV COMPARTMENT, VOLTAGE INDICATOR SIDE												
	-XDB10...-XDB89				CONNECTOR FOR CIRCUIT-BREAKER INTERNAL CIRCUITS				-XE6		EARTHING TERMINAL BLOCKS FOR MV COMPARTMENT, REAR BOTTOM SIDE												
	-XDB7				CONNECTOR FOR TRUCK POSITION CONTACTS					-XE7	EARTHING TERMINAL BLOCKS FOR MV COMPARTMENT, LEFT SIDE												
	-XDB91				CONNECTOR FOR OPENING RELEASE CIRCUITS OF SWITCH-DISCONNECTOR				-XE8		EARTHING TERMINAL BLOCKS FOR MV COMPARTMENT, FRONT BOTTOM SIDE												
	-XDB92				CONNECTOR FOR CLOSING RELEASE CIRCUITS OF SWITCH-DISCONNECTOR					-XE9	EARTHING TERMINAL BLOCK FOR TRANSFORMERS IN BUSBAR COMPARTMENT												
	-XDB93				CONNECTOR FOR POSITION SWITCHES OF SWITCH-DISCONNECTOR																		
	-XDB95				CONNECTOR FOR CIRCUITS OF EARTHING SWITCH LOCKING MAGNET																		
D	-XDC				CUSTOMER TERMINAL BLOCK																		
	-XDC1				CUSTOMER TERMINAL BLOCK FOR AUXILIARY CIRCUITS OF CIRCUIT BREAKER																		
	-XDC2				CUSTOMER TERMINAL BLOCK FOR AUXILIARY CIRCUITS OF SWITCH-DISCONNECTOR																		
	-XDC3				CUSTOMER TERMINAL BLOCK FOR AUXILIARY CIRCUITS OF PROTECTION RELAY AND MULTIFUNCTION UNIT																		
	-XDC4				CUSTOMER TERMINAL BLOCK FOR AUXILIARY CIRCUITS OF VOLTAGE TRANSFORMERS																		
	-XDC5				CUSTOMER TERMINAL BLOCK FOR AUXILIARY CIRCUITS OF MINIATURE CIRCUIT BREAKER																		
	-XDE				TERMINAL BLOCK FOR AUXILIARY CIRCUITS OF EARTHING SWITCH -QCE																		
	-XDE1				TERMINAL BLOCK FOR INTERNAL CIRCUITS OF EARTHING SWITCH -QCE																		
	-XDE2				TERMINAL BLOCK FOR AUXILIARY CIRCUITS OF EARTHING SWITCH -QCE1 OR -QCE2																		
	-XDE3				TERMINAL BLOCK FOR INTERNAL CIRCUITS OF EARTHING SWITCH -QCE1 OR -QCE2																		
	-XDF				TERMINAL BLOCK FOR AUXILIARY CIRCUITS OF FORCED COOLING VENTILATORS																		
	-XDF1				CONNECTOR FOR ISOLATION OF CIRCUITS OF FRONT VENTILATOR																		
	-XDF2				CONNECTOR FOR REAR VENTILATOR CIRCUITS																		
	-XDF3				CONNECTOR FOR FRONT VENTILATOR CIRCUITS																		
	-XDH				TERMINAL BLOCK FOR VARIOUS CIRCUITS (HEATERS, POSITION SWITCHES DETECTING INTERNAL ARCING, ETC.)																		
	-XDI				TERMINAL BLOCK FOR INTERCONNECTION (CONNECTION BETWEEN PANELS)																		
F					Date Prep.	15.11.2018	PROJECT TITLE		ABB		EPMV	REFERENCE DESIGNATIONS		Scale	NTS		= H01,H07						
					Prepared	YR	MV Switchgear for MNA Serang Plant			MVD-20 & MVD-21 20kV Boiler Plant		Customer	PT Multimas Nabati Asahan		& 304								
	00	Issued for Approval	11.01.19	YR	Checked	AW			PT. ABB Sakti Industri		SCHEMATIC DIAGRAM		Drawing Nbr.	18.042-MNA-304.03		Sh. 6							
	Ind.	Revision	Date	Name	Approved	AI	Based on: BE318042				SBC-W INCOMING		Customer Doc. Nbr.			Cont. 28							
1			2			3			4			5			6			7			8		

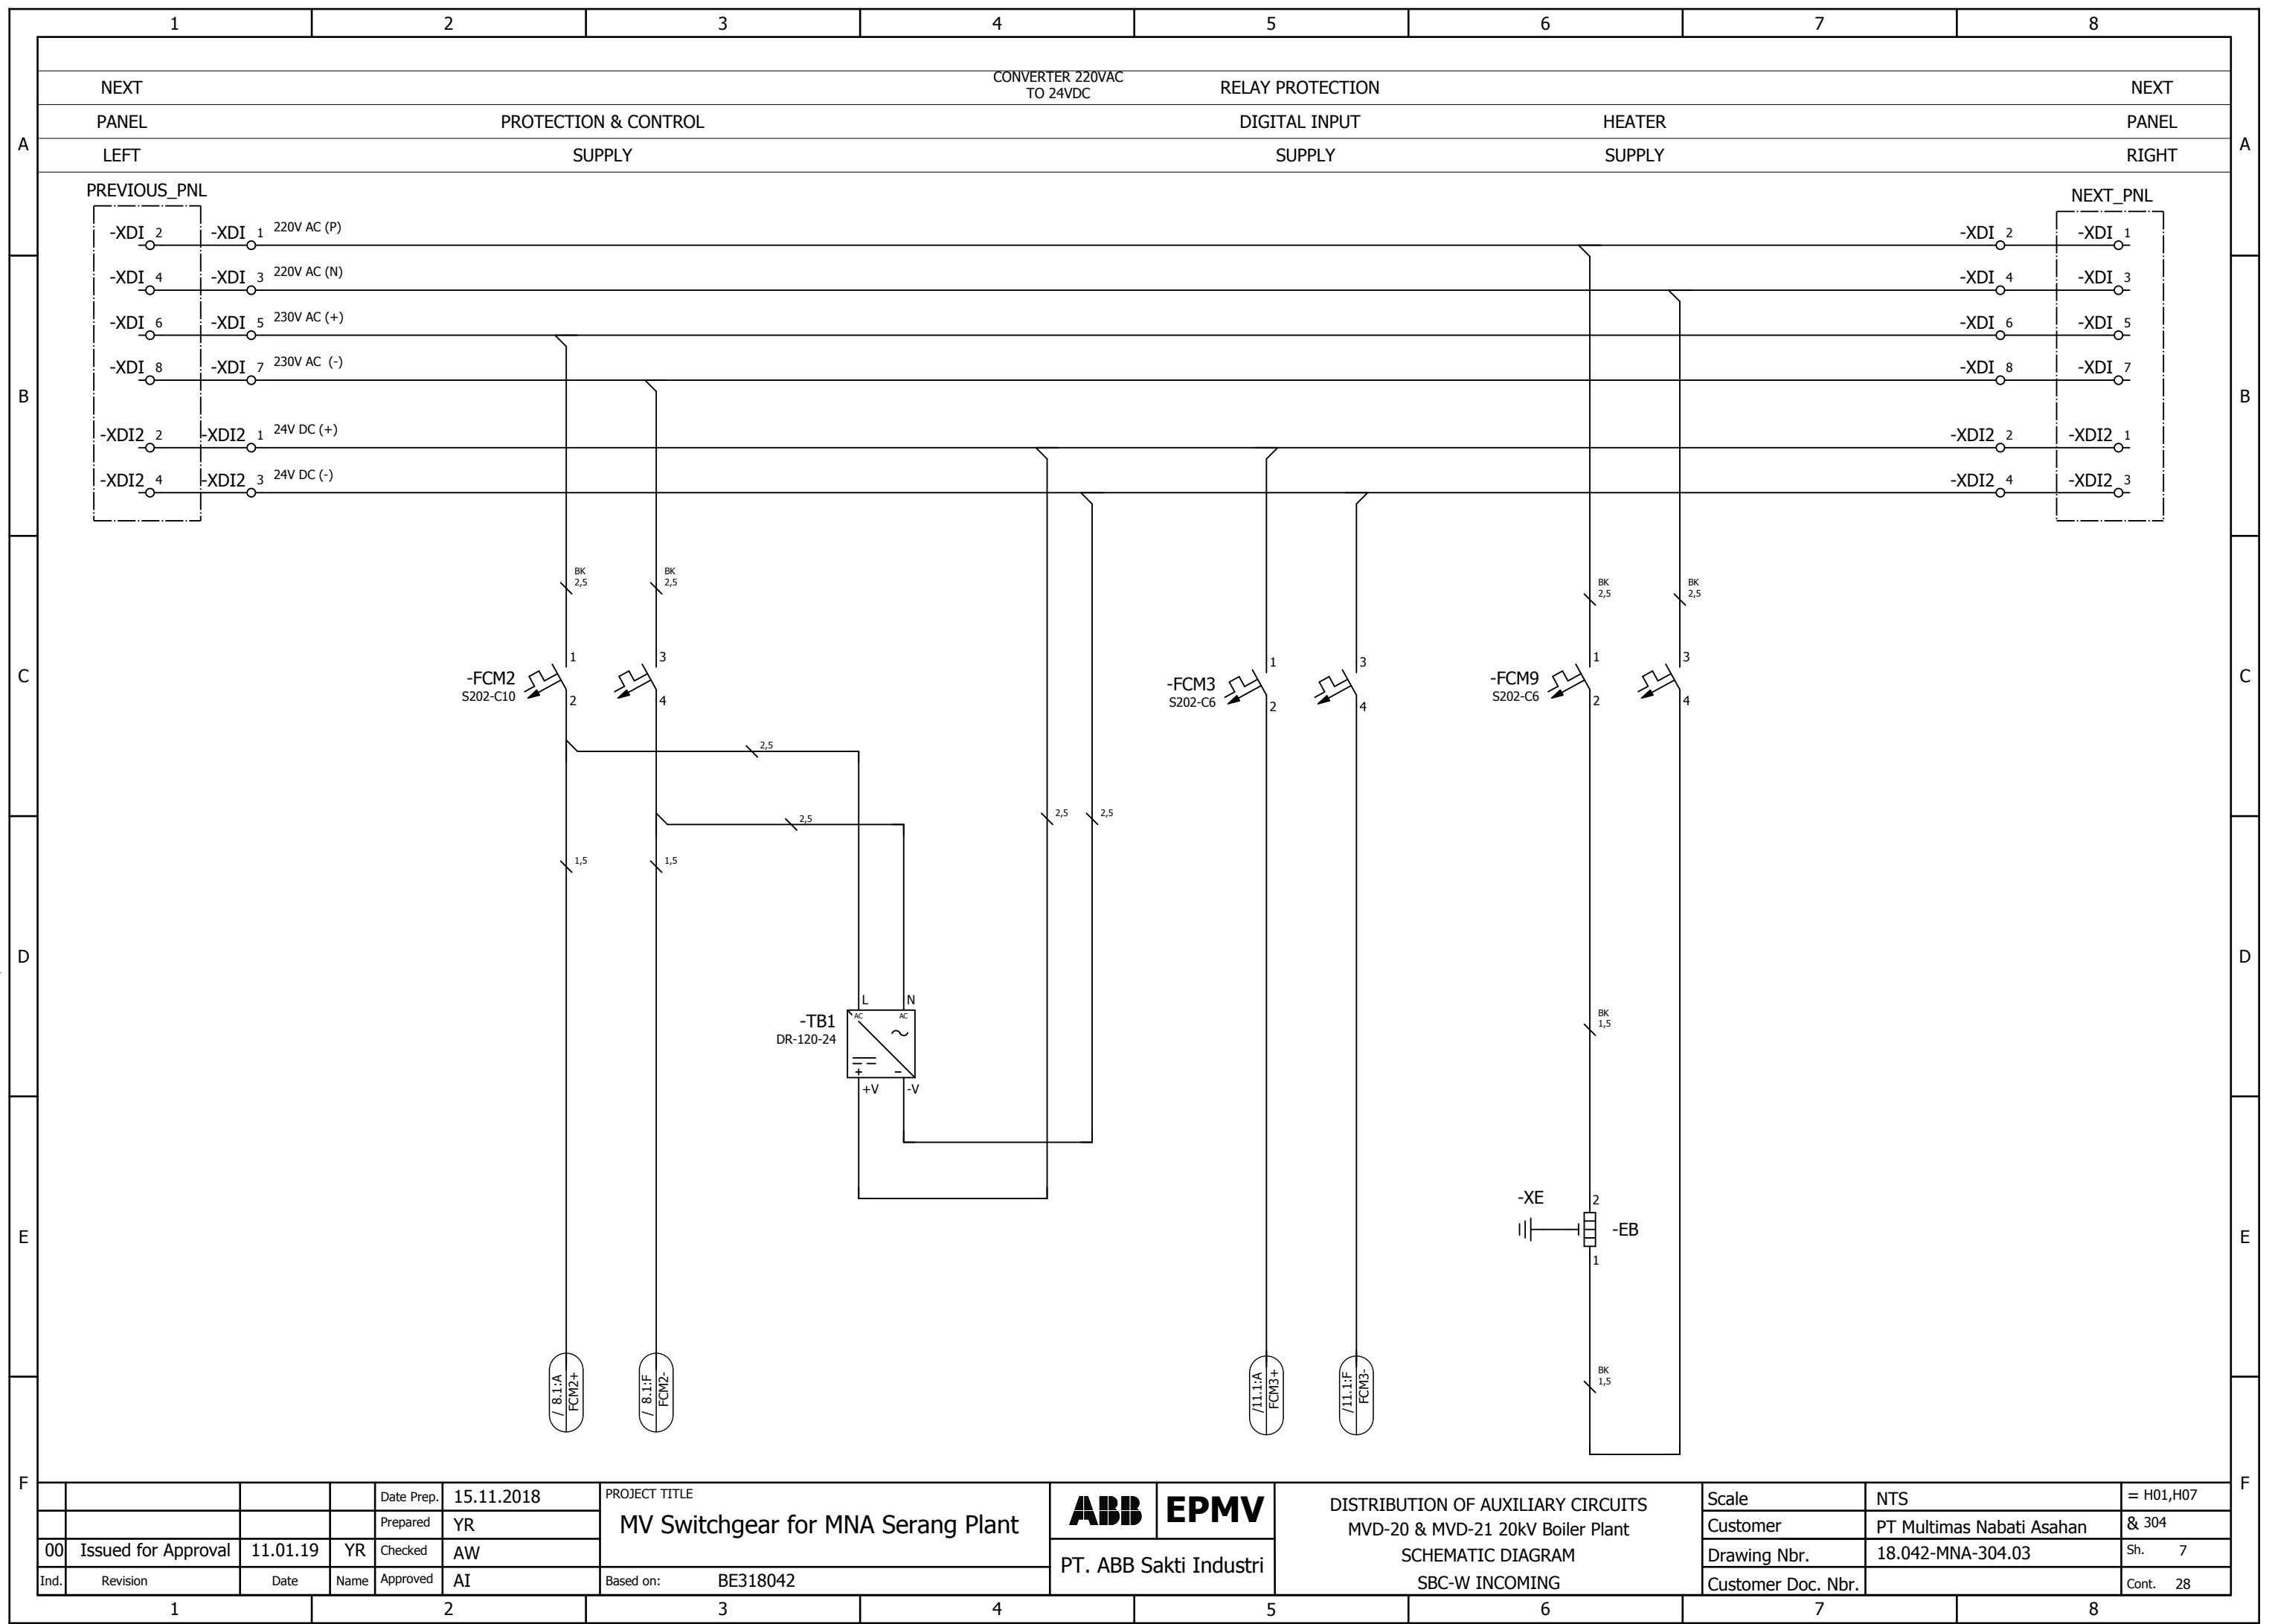

WE RESERVE ALL RIGHTS IN THIS DOCUMENT AND IN THE INFORMATION CONTAINED THEREIN. REPRODUCTION, USE OR DISCLOSURE TO THIRD PARTIES WITHOUT EXPRESS AUTHORITY IS STRICTLY FORBIDDEN.

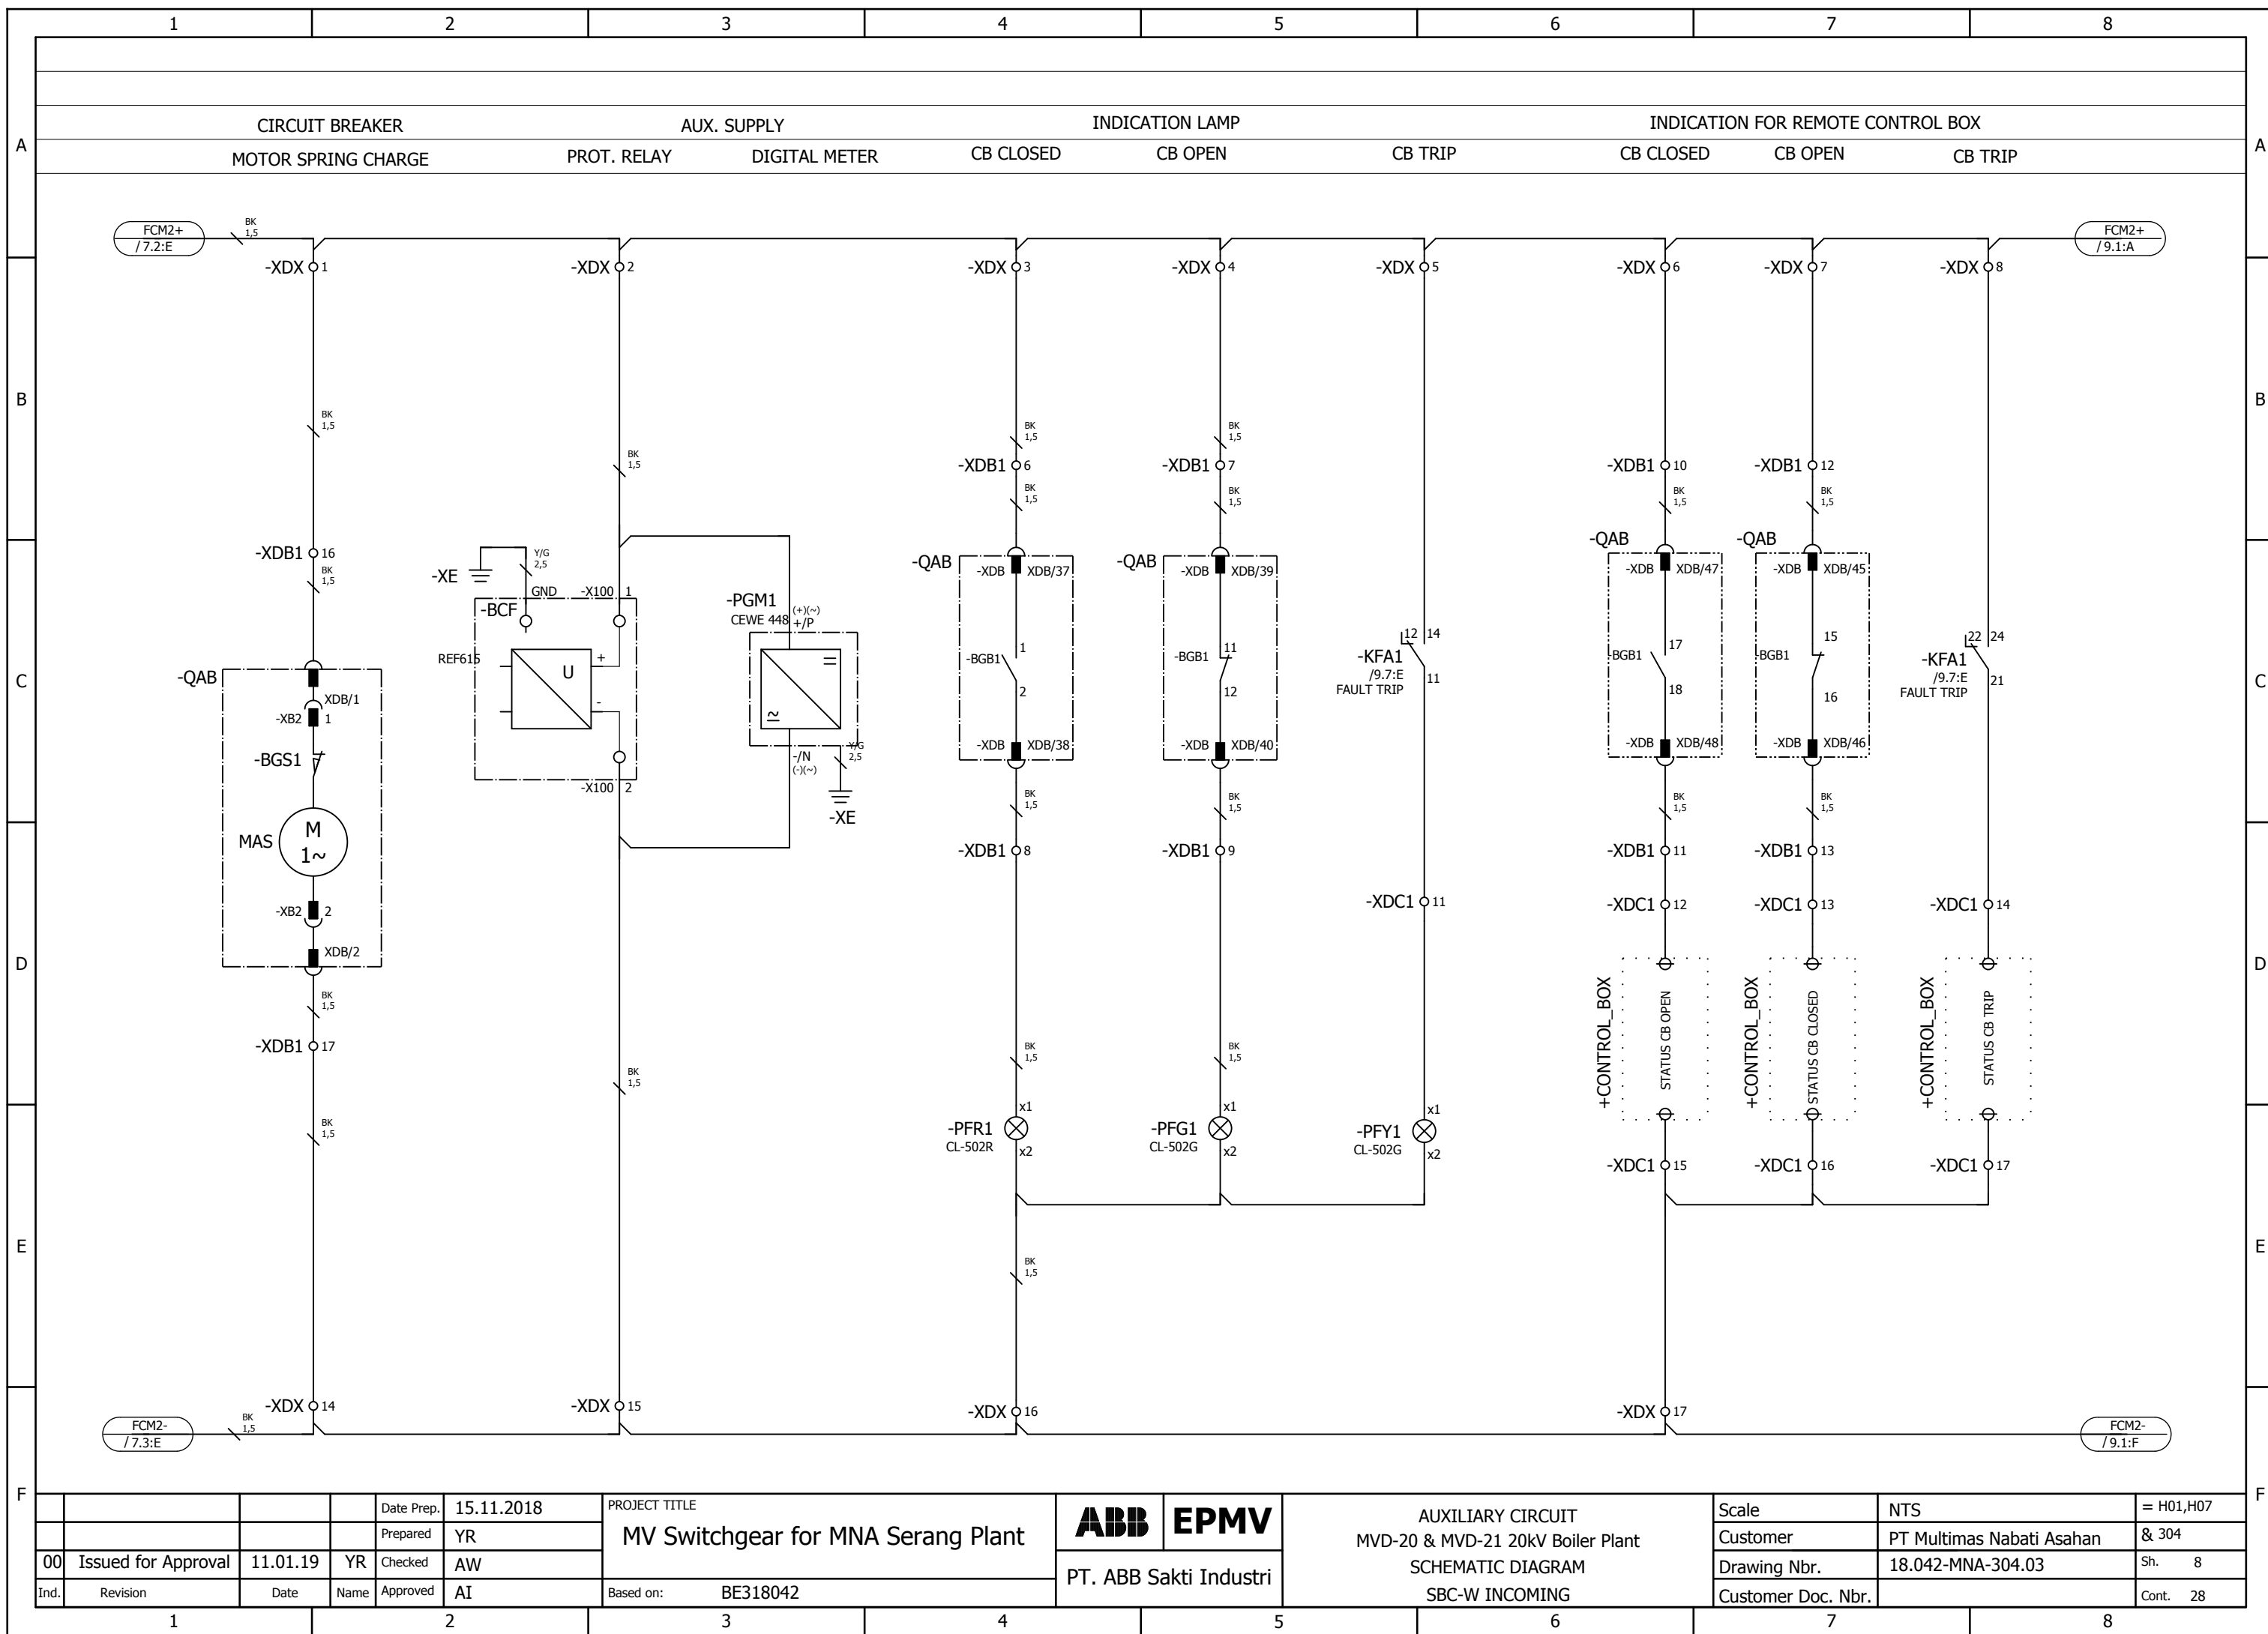


WE RESERVE ALL RIGHTS IN THIS DOCUMENT AND IN THE INFORMATION CONTAINED THEREIN. REPRODUCTION, USE OR DISCLOSURE TO THIRD PARTIES WITHOUT EXPRESS AUTHORITY IS STRICTLY FORBIDDEN.

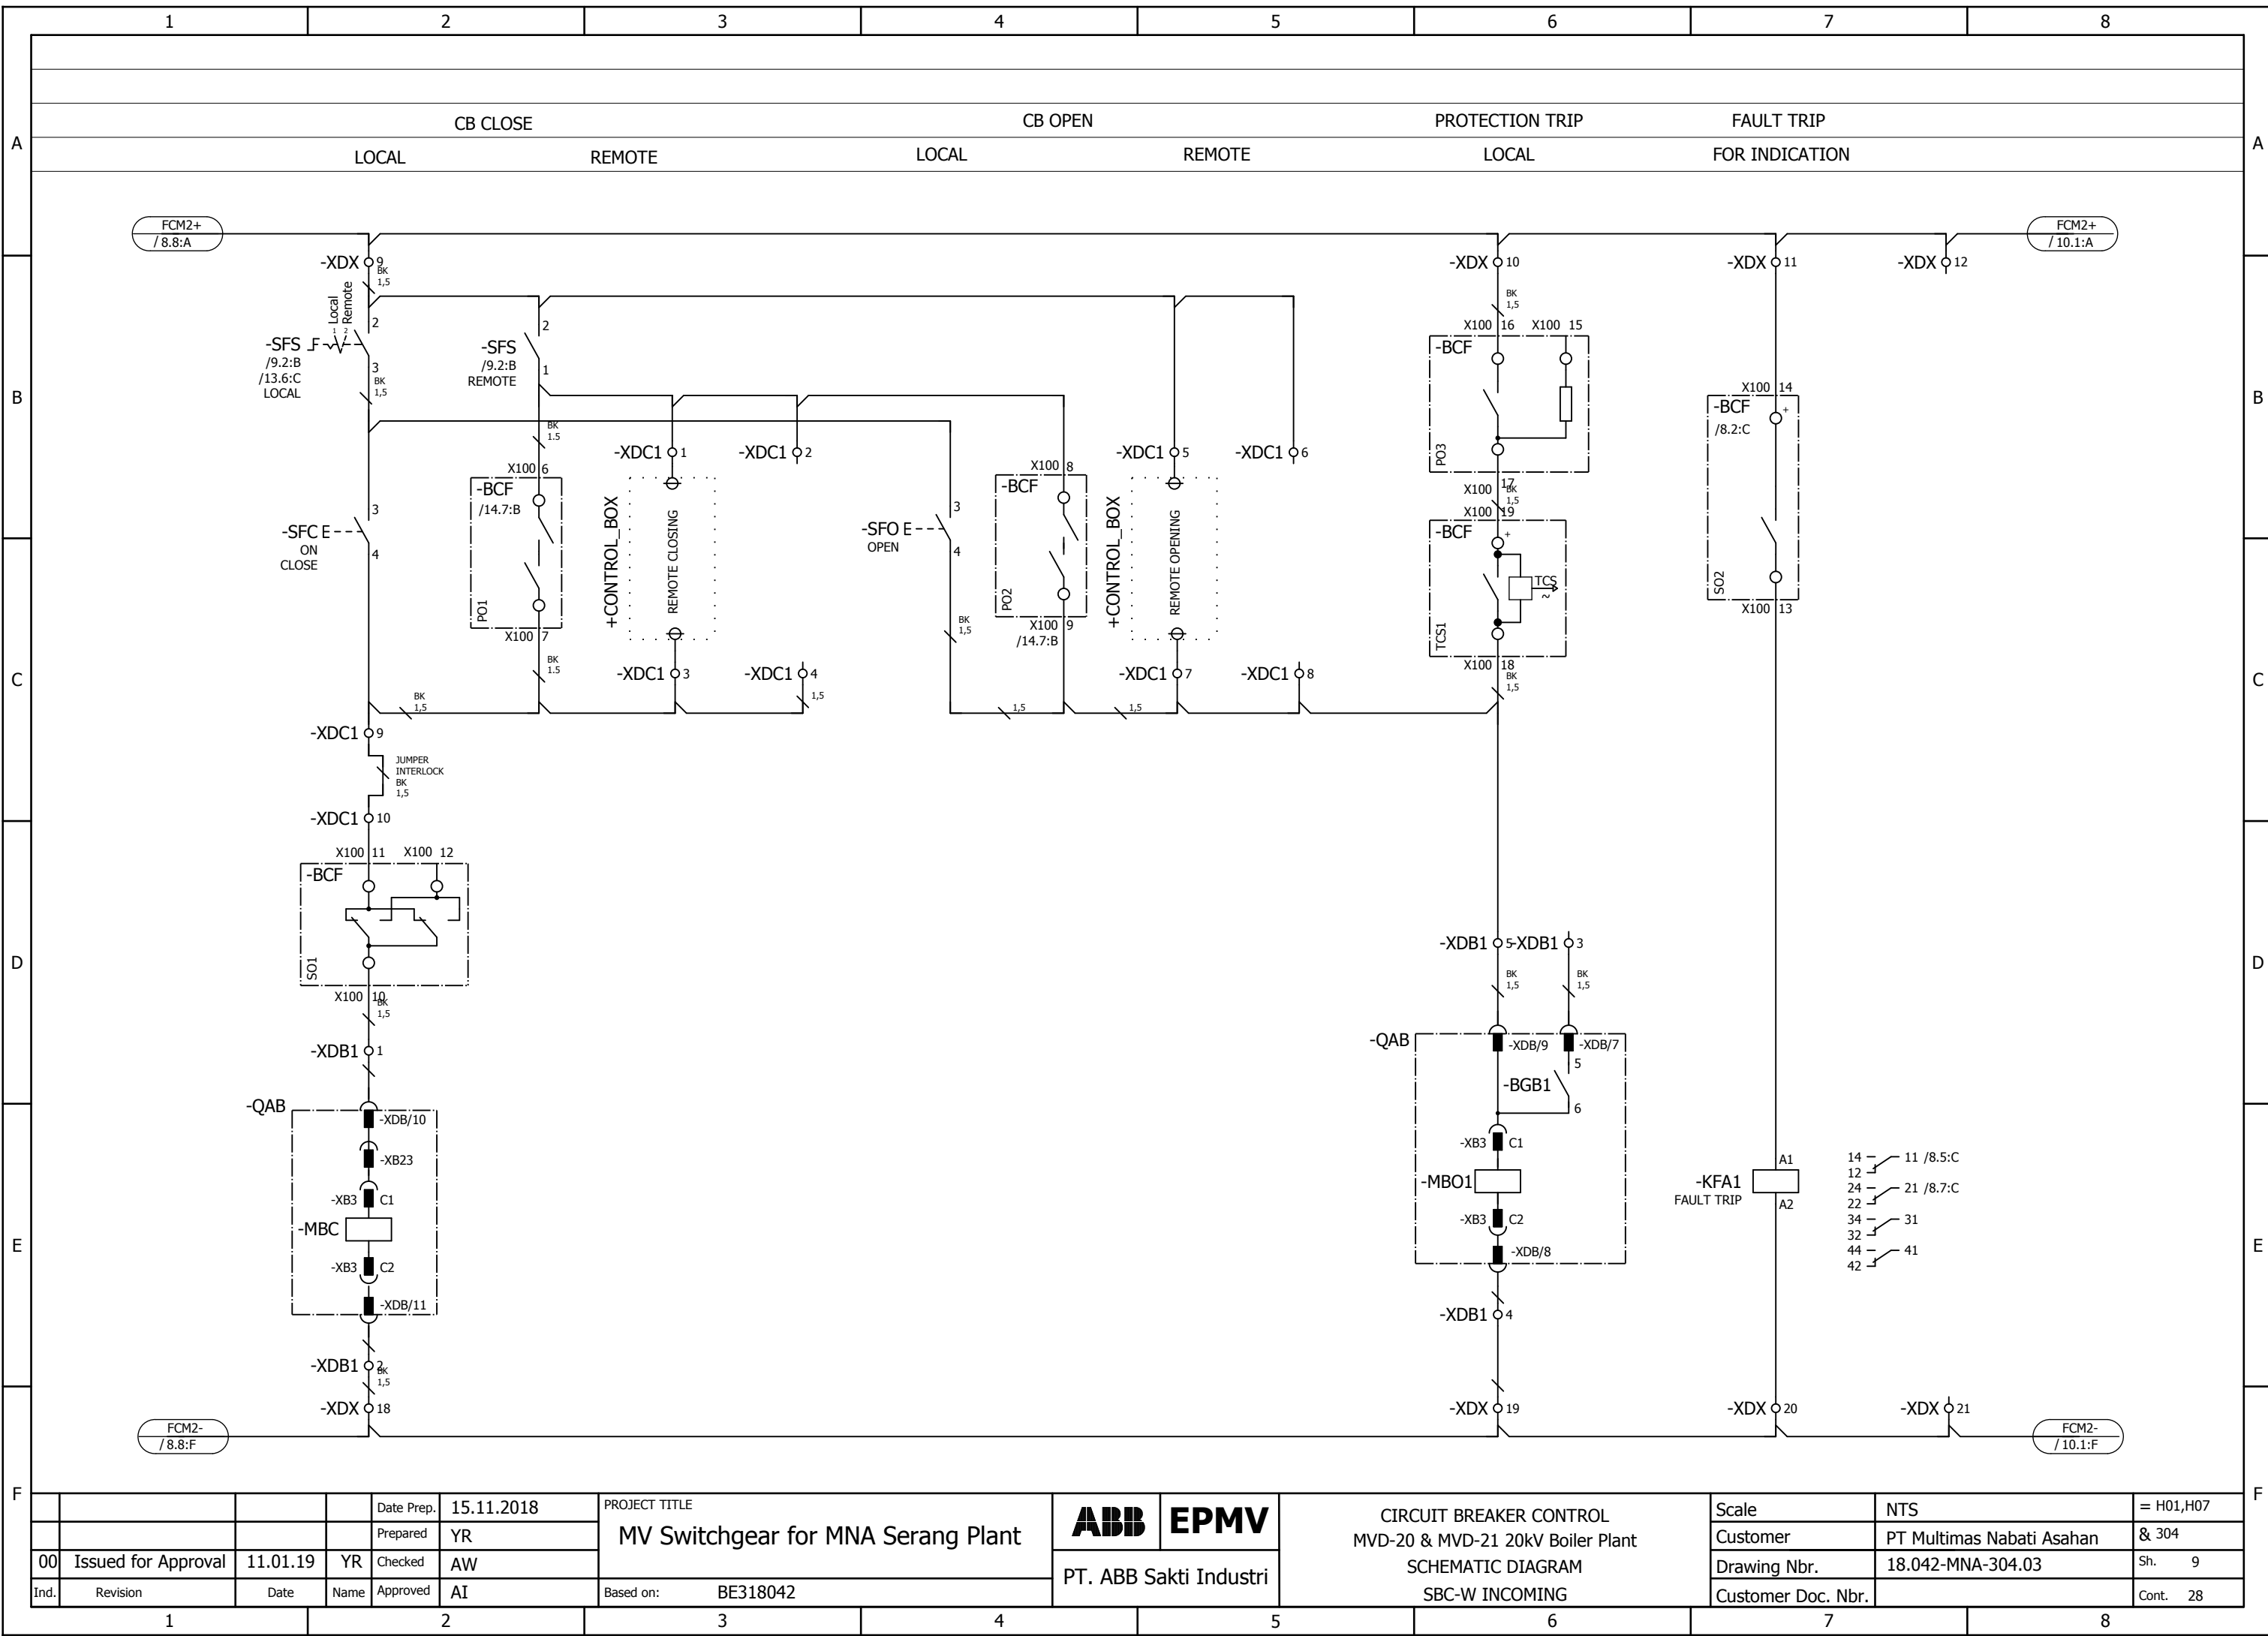


				Date Prep.	15.11.2018	PROJECT TITLE MV Switchgear for MNA Serang Plant	ABB	EPMV	AUXILIARY MOTOR & RELAY MVD-20 & MVD-21 20kV Boiler Plant SCHEMATIC DIAGRAM SBC-W INCOMING	Scale	NTS	= H01,H07
				Prepared	YR					Customer	PT Multimas Nabati Asahan	& 304
00	Issued for Approval	11.01.19	YR	Checked	AW		Drawing Nbr.	18.042-MNA-304.03		Sh. 10		
Ind.	Revision	Date	Name	Approved	AI	Based on:	BE318042	Customer Doc. Nbr.			Cont. 28	
						PT. ABB Sakti Industri						


WE RESERVE ALL RIGHTS IN THIS DOCUMENT AND IN THE INFORMATION CONTAINED THEREIN. REPRODUCTION, USE OR DISCLOSURE TO THIRD PARTIES WITHOUT EXPRESS AUTHORITY IS STRICTLY FORBIDDEN.

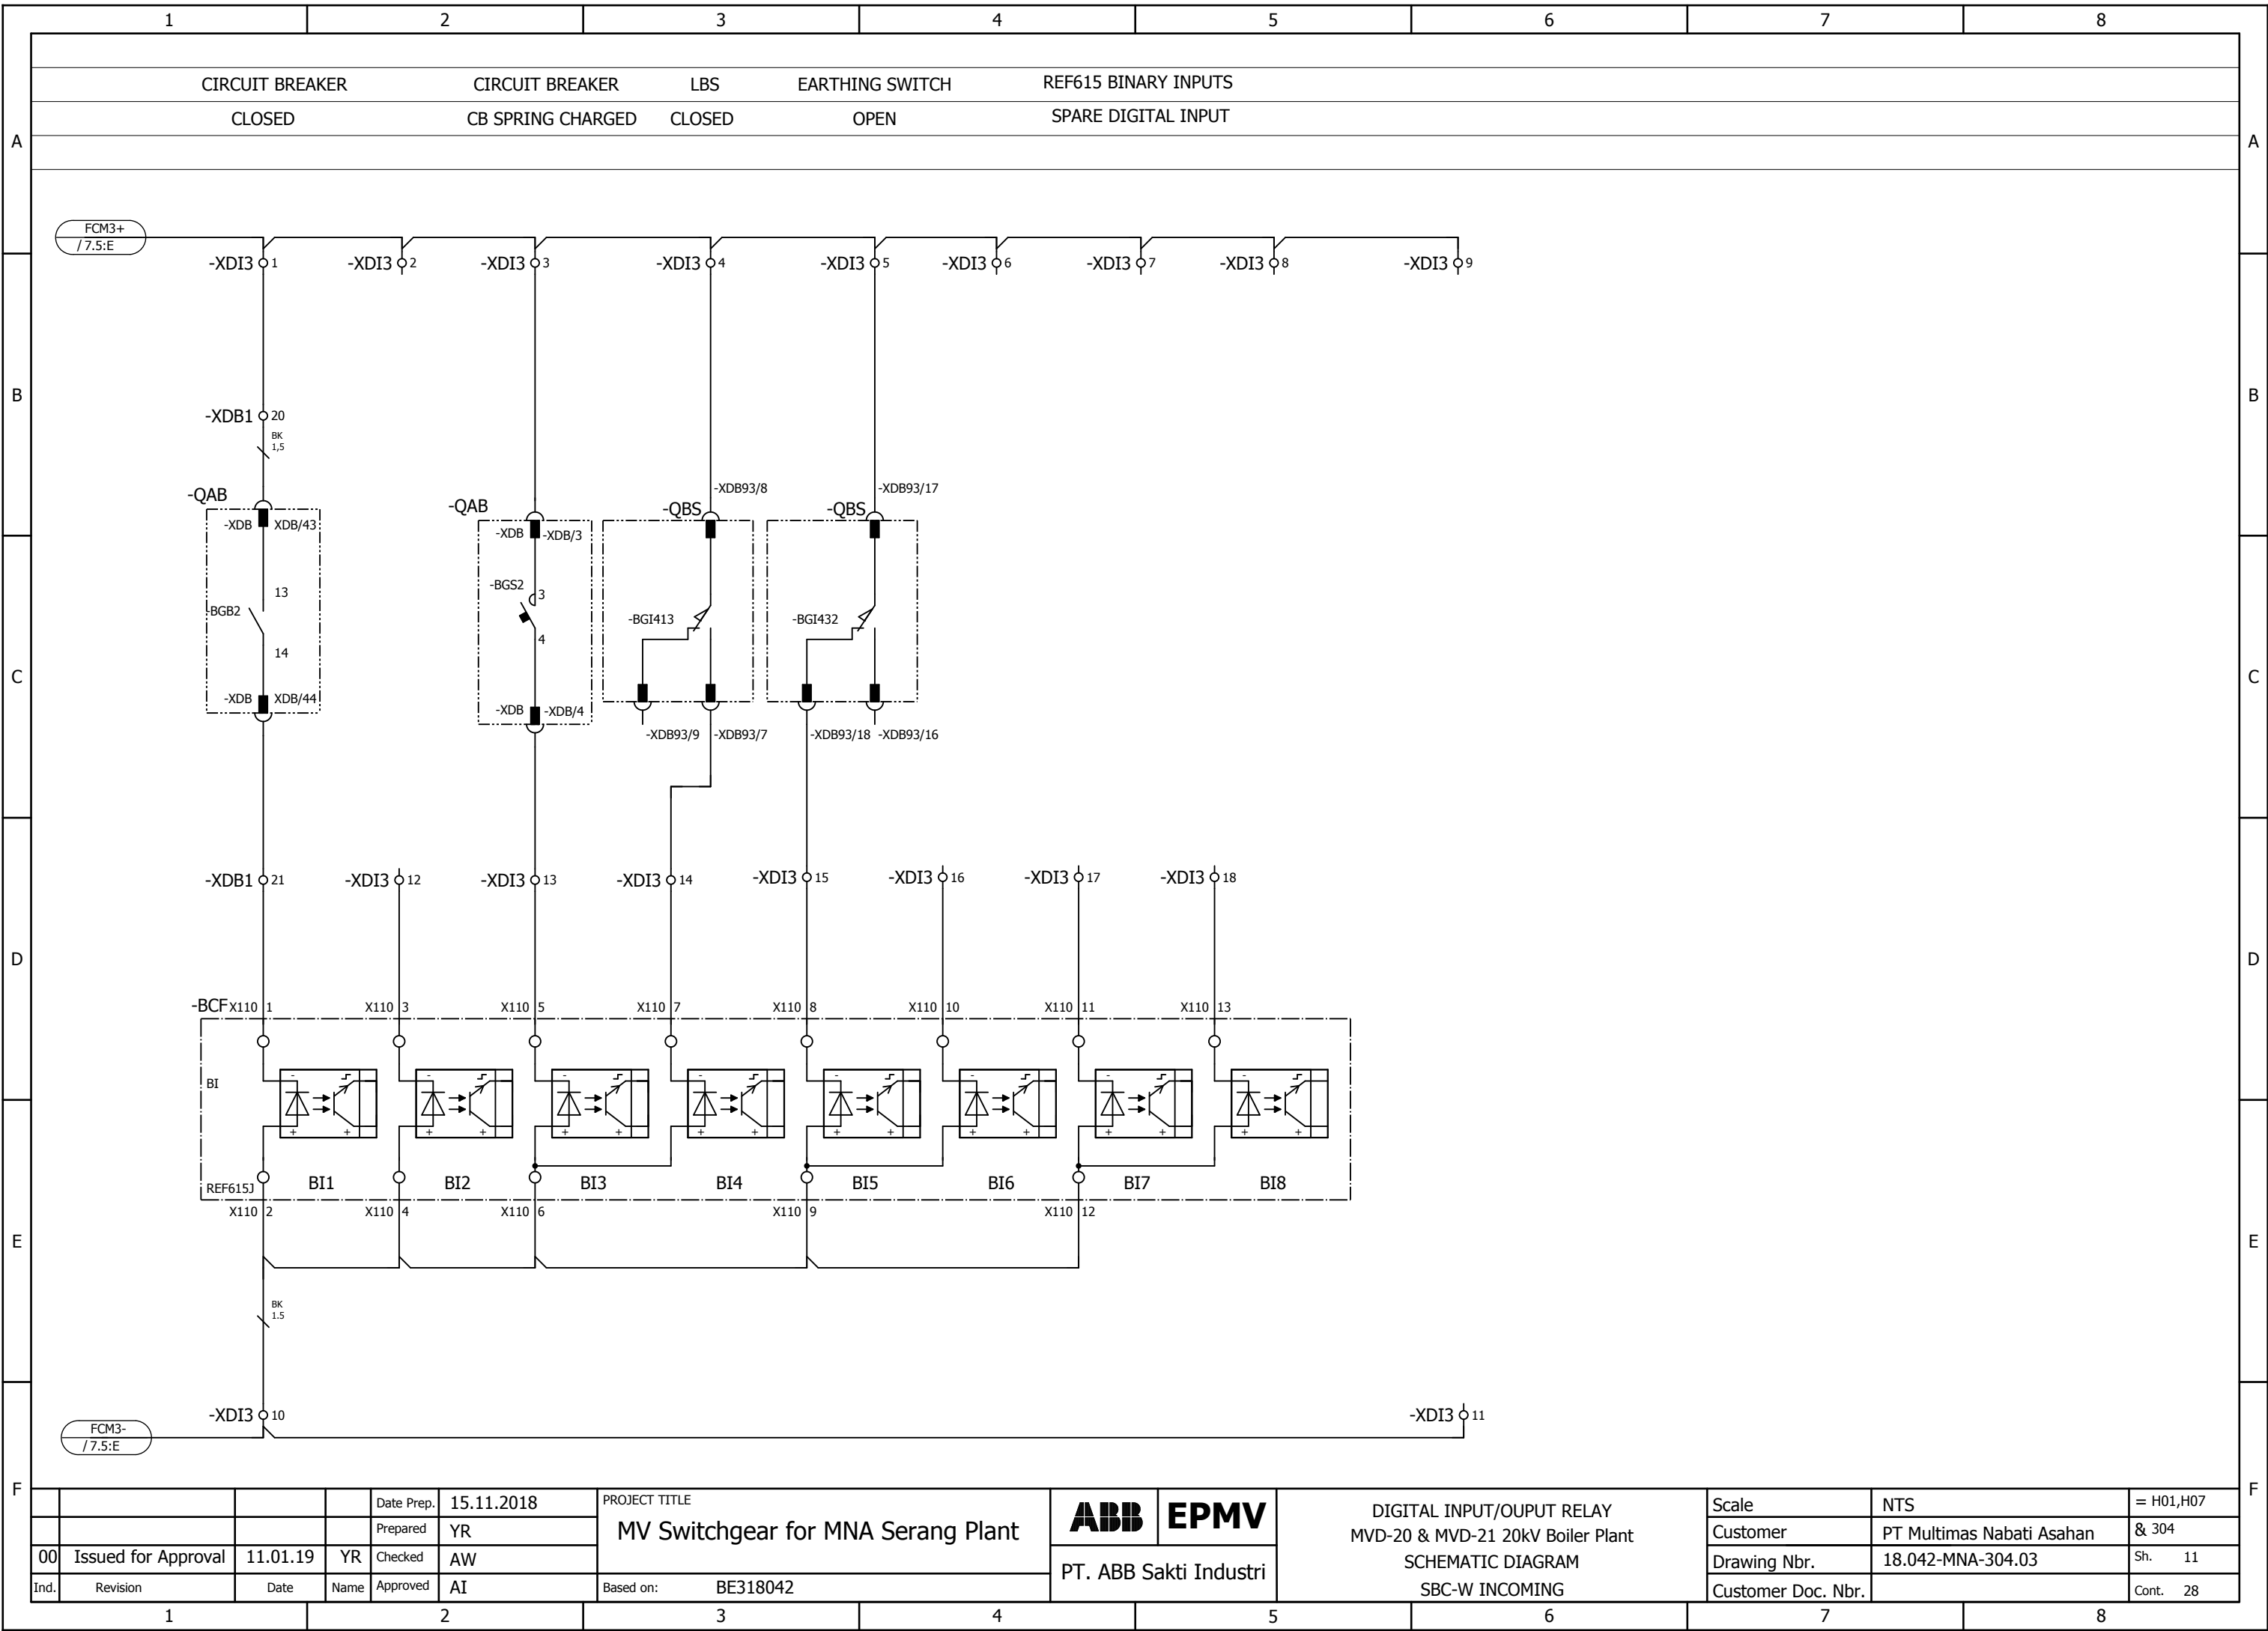


WE RESERVE ALL RIGHTS IN THIS DOCUMENT AND IN THE INFORMATION CONTAINED THEREIN. REPRODUCTION, USE OR DISCLOSURE TO THIRD PARTIES WITHOUT EXPRESS AUTHORITY IS STRICTLY FORBIDDEN.

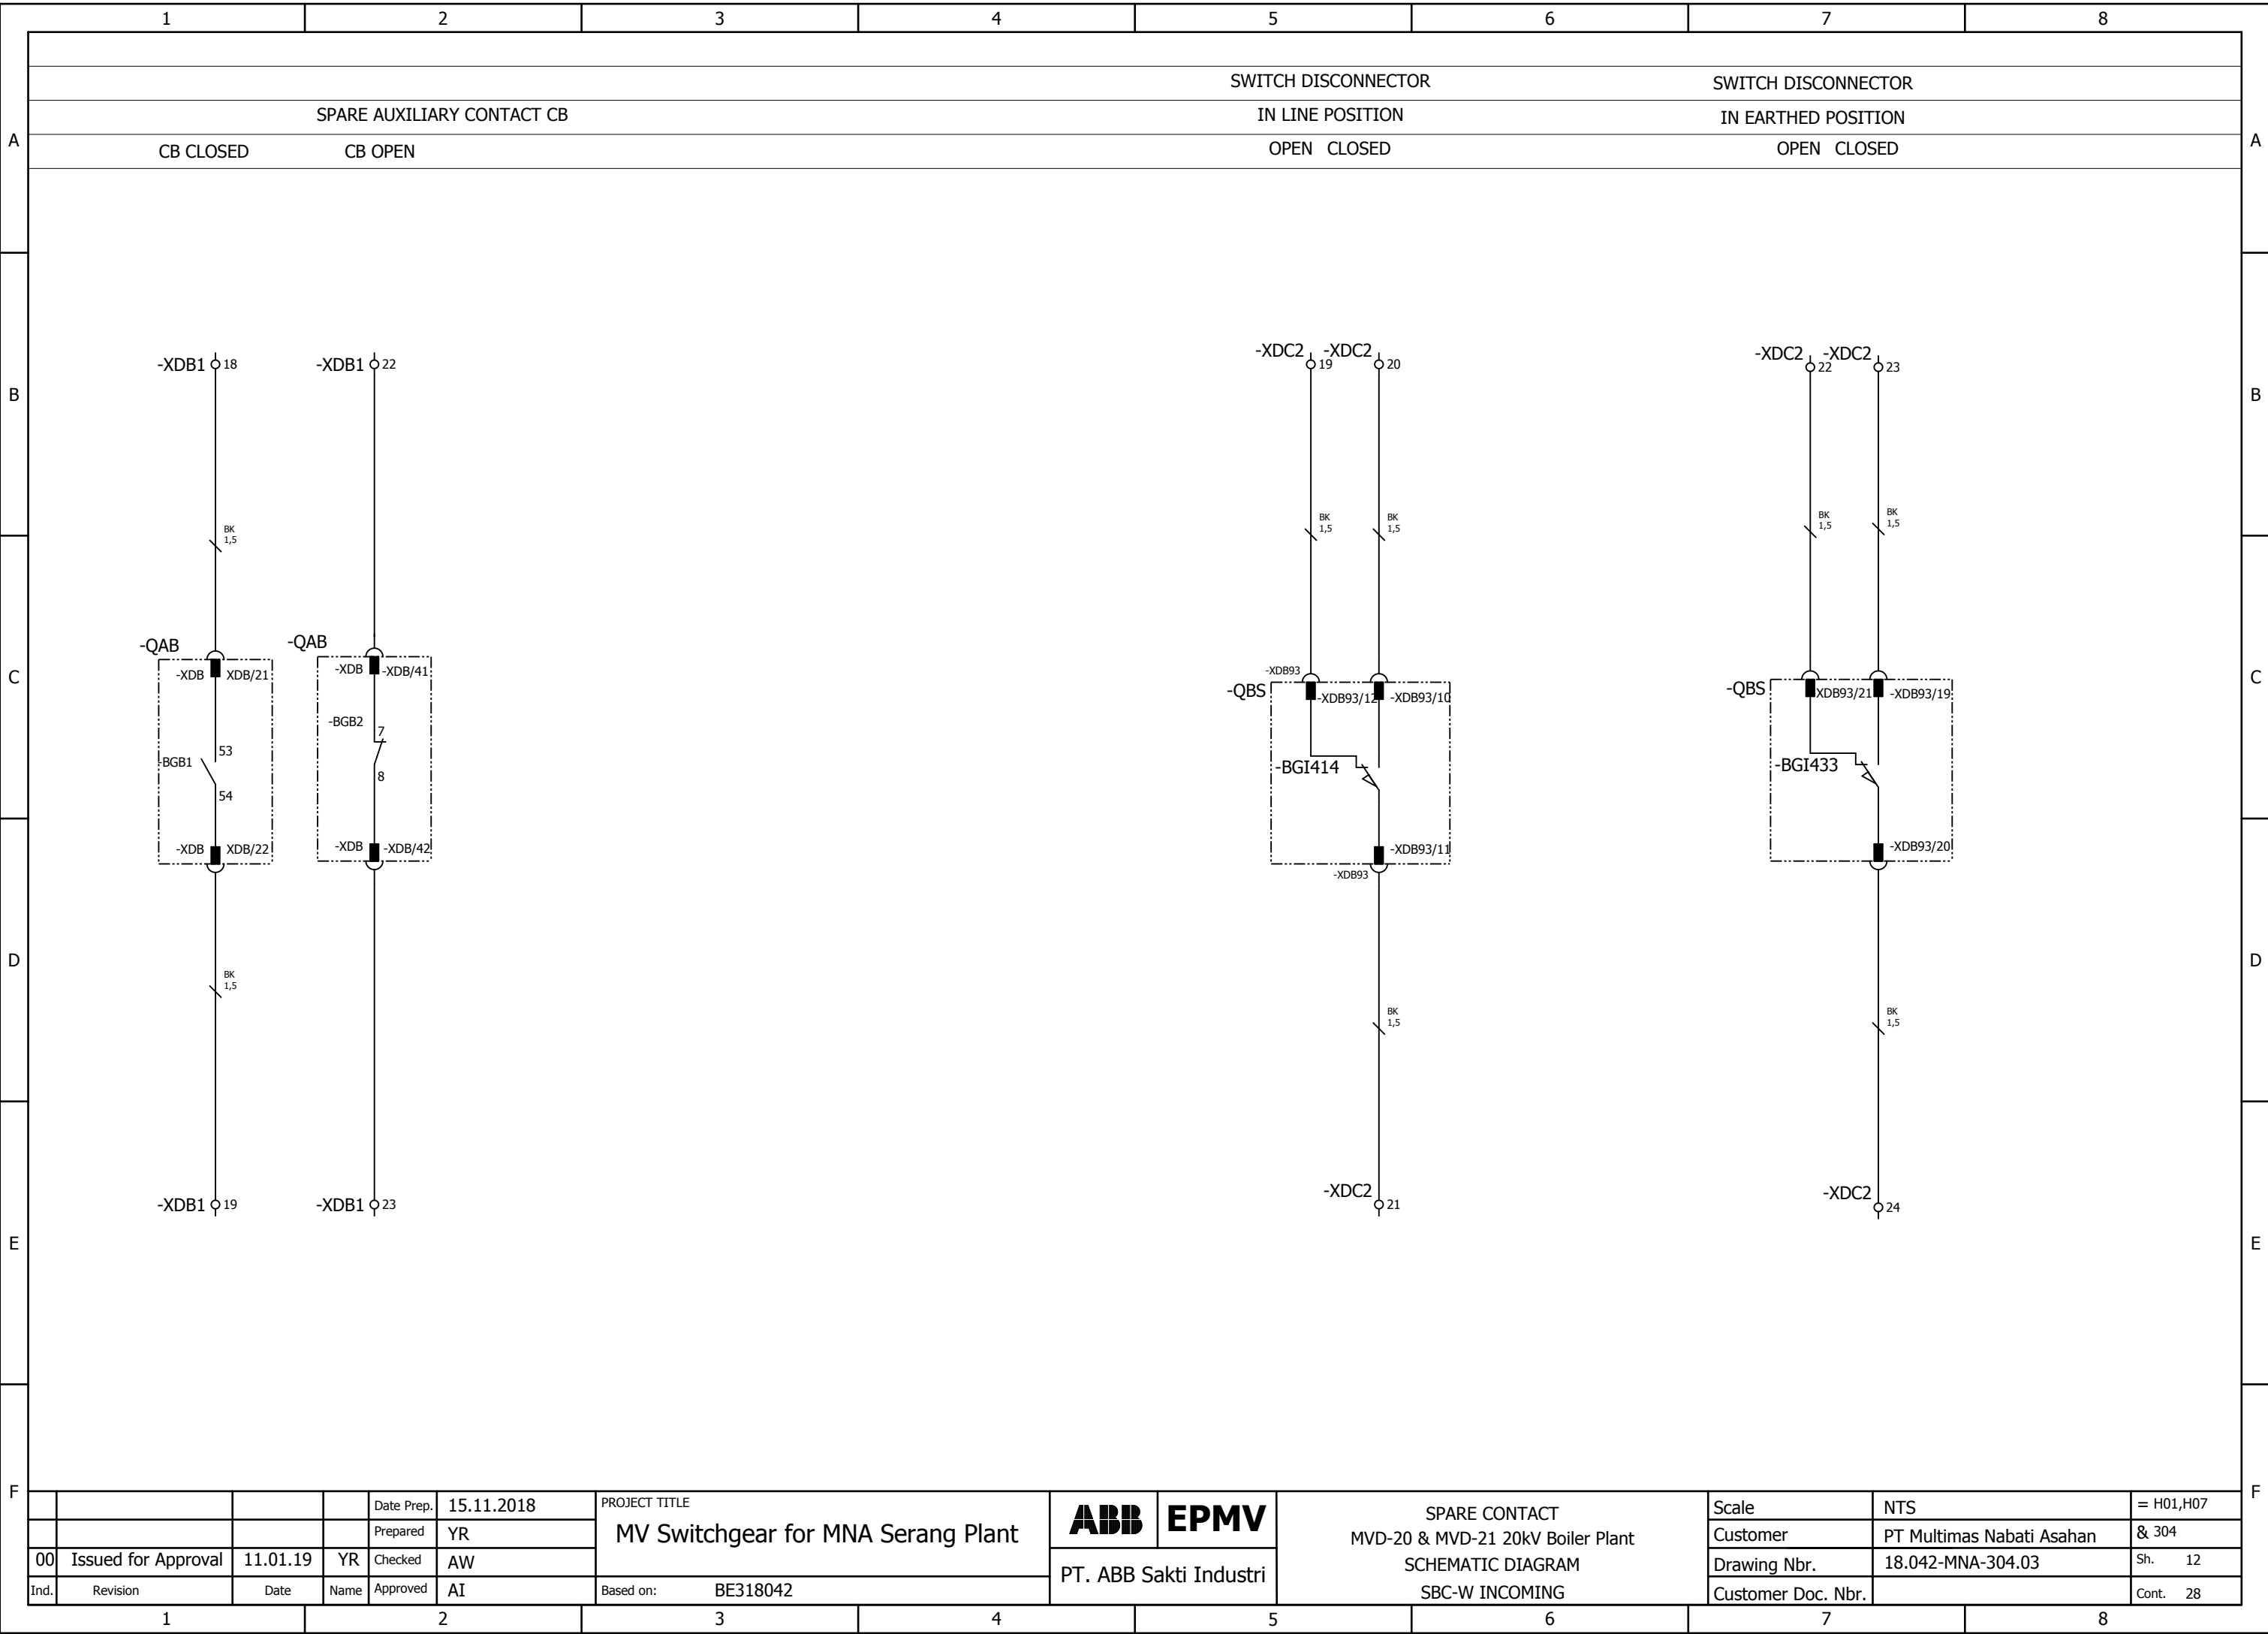


WE RESERVE ALL RIGHTS IN THIS DOCUMENT AND IN THE INFORMATION CONTAINED THEREIN. REPRODUCTION, USE OR DISCLOSURE TO THIRD PARTIES WITHOUT EXPRESS AUTHORITY IS STRICTLY FORBIDDEN.

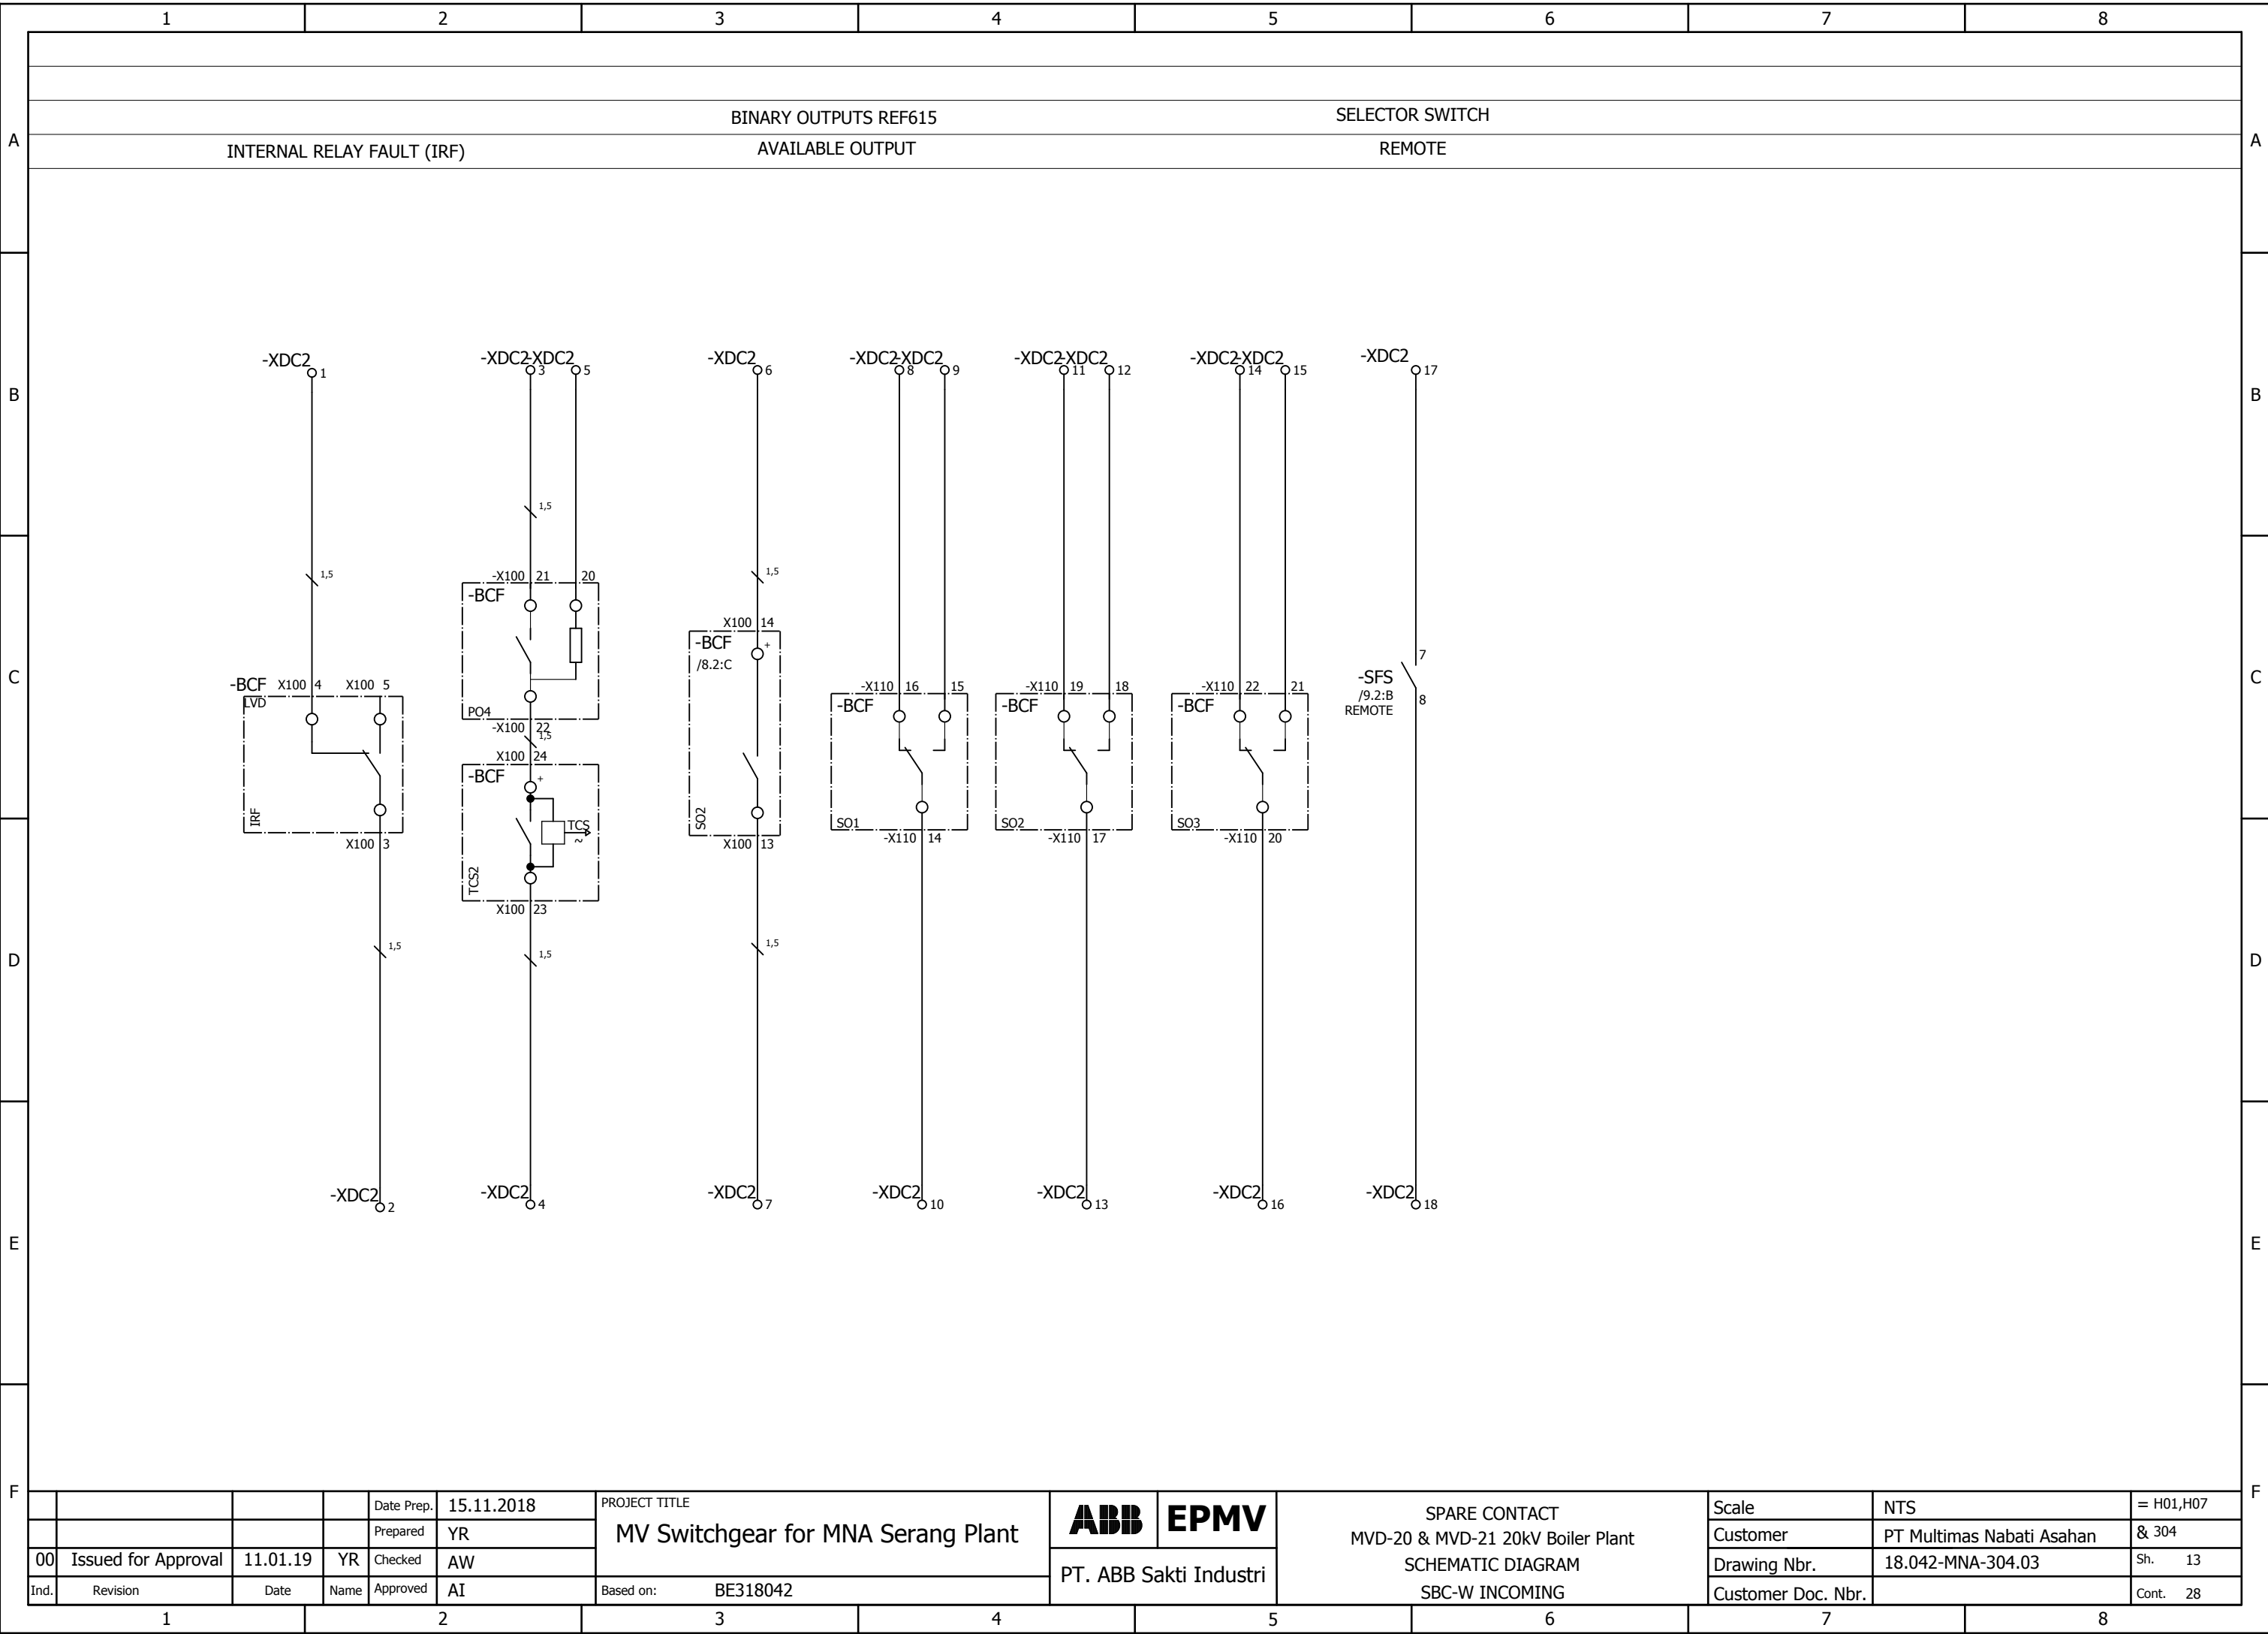

WE RESERVE ALL RIGHTS IN THIS DOCUMENT AND IN THE INFORMATION CONTAINED THEREIN. REPRODUCTION, USE OR DISCLOSURE TO THIRD PARTIES WITHOUT EXPRESS AUTHORITY IS STRICTLY FORBIDDEN.

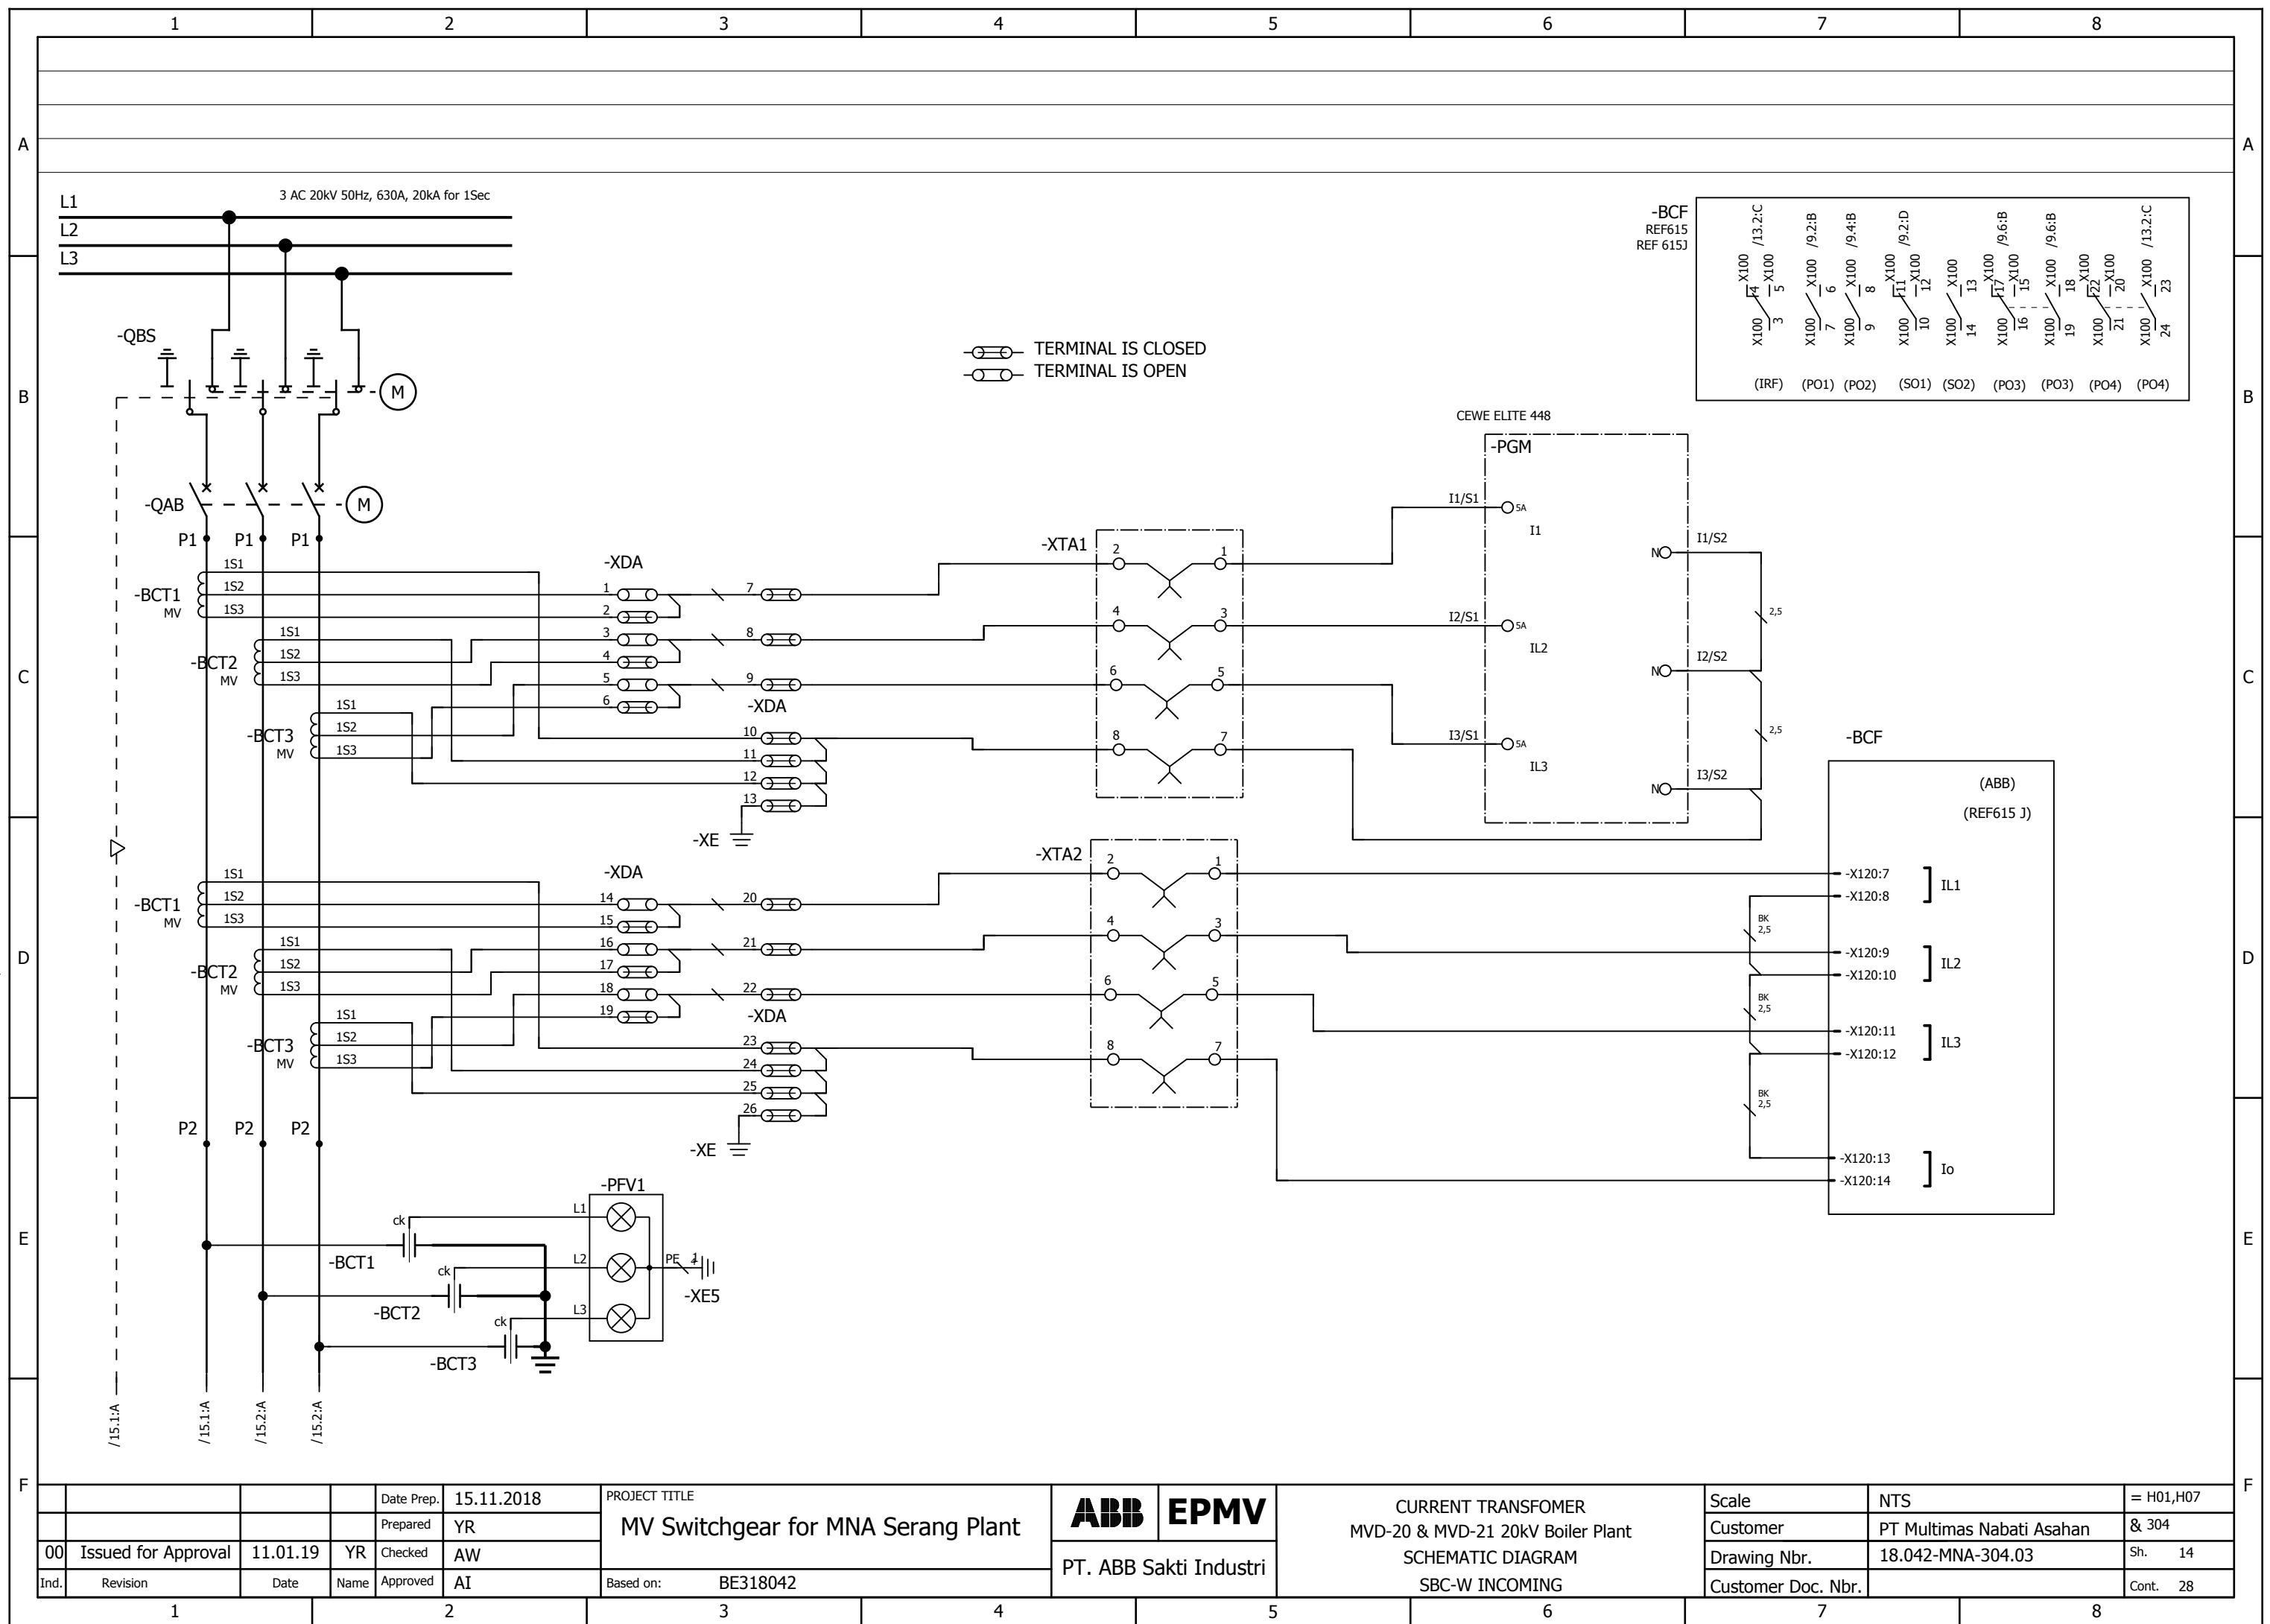

WE RESERVE ALL RIGHTS IN THIS DOCUMENT AND IN THE INFORMATION CONTAINED THEREIN. REPRODUCTION, USE OR DISCLOSURE TO THIRD PARTIES WITHOUT EXPRESS AUTHORITY IS STRICTLY FORBIDDEN.

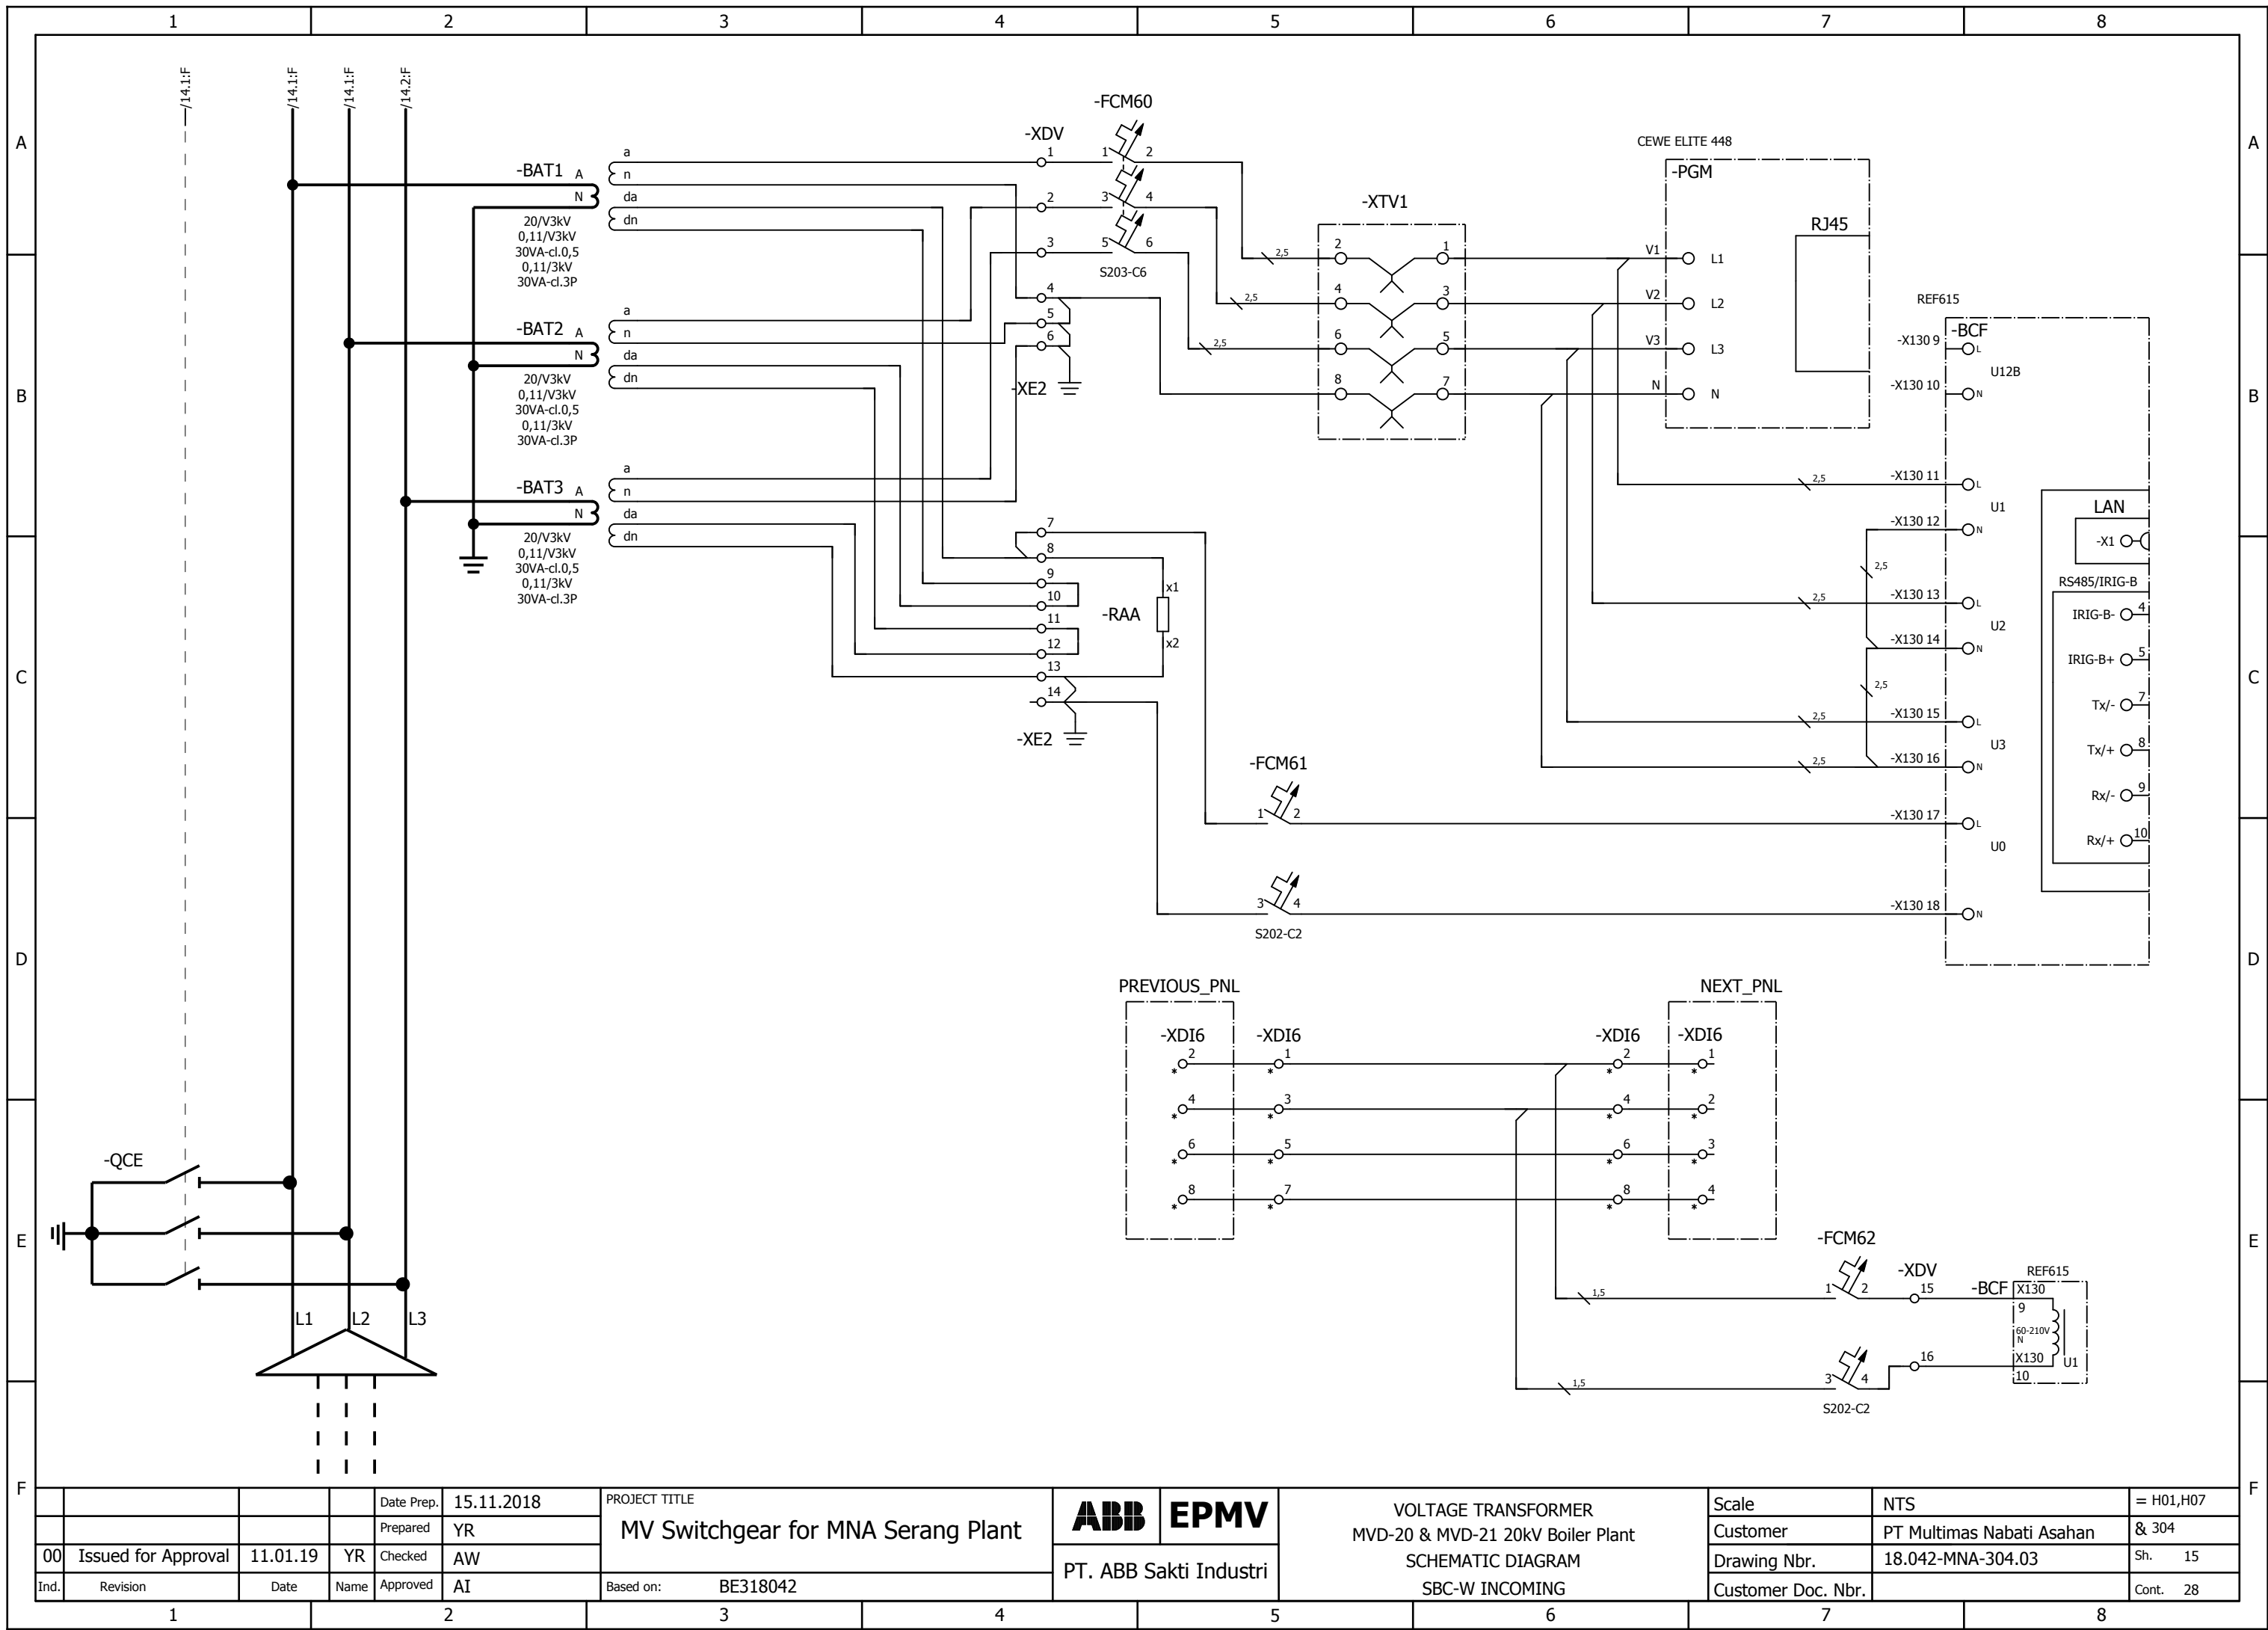

				Date Prep.	15.11.2018
				Prepared	YR
00	Issued for Approval	11.01.19	YR	Checked	AW
Ind.	Revision	Date	Name	Approved	AI

PROJECT TITLE	
MV Switchgear for MNA Serang Plant	
Based on:	BE318042

ABB	EPMV
PT. ABB Sakti Industri	

VOLTAGE TRANSFORMER
MVD-20 & MVD-21 20kV Boiler Plant
SCHEMATIC DIAGRAM
SBC-W INCOMING

Scale	NTS	= H01,H07
Customer	PT Multimas Nabati Asahan	& 304
Drawing Nbr.	18.042-MNA-304.03	Sh. 15
Customer Doc. Nbr.		Cont. 28

No.	EQUIPMENT DESCRIPTION	ENGRAVING
1	-SFS (LOCAL-OFF-REMOTE SELECTOR SWITCH, K&N)	-SFS, LOCAL-OFF-REMOTE
2	-SFC (PUSH BUTTON CB CLOSE, GREEN, ABB)	-SFC, CB CLOSE
3	-SFO (PUSH BUTTON CB OPEN, RED, ABB)	-SFO, CB OPEN
4	-PFY1 (LAMP INDICATION FOR CB TRIP, YELLOW, ABB)	-PFY1, CB TRIP
5	-PFR1 (LAMP INDICATION FOR CB CLOSE, RED, ABB)	-PFR1, CB CLOSE
6	-PFG1 (LAMP INDICATION FOR CB OPEN, GREEN, ABB)	-PFG1, CB OPEN
7	-PGJ (DIGITAL MEASUREMENT, CEWE 448)	-PGJ, DIGITAL MEASUREMENT
8	-BCF (FEEDER PROTECTION RELAY, REF615J, ABB)	-BCF, RELAY PROTECTION
9	-XTA1, XTA2 (TEST BLOCK , YONGSUNG)	-XTA, CURRENT TEST BLOCK
10	-XTV1 (TEST BLOCK , YONGSUNG)	-XTV, VOLTAGE TEST BLOCK

No.	EQUIPMENT DESCRIPTION	ENGRAVING
1	-FCM2 (MCB 2P, 10A, S202-C10, ABB)	-FCM2, FOR PROTECTION & CONTROL
2	-FCM3 (MCB 2P,6A, S202-C6, ABB)	-FCM3, FOR AUXILIARY SUPPLY 24VDC
3	-FCM9 (MCB 2P, 6A, S202-C6, ABB)	-FCM9, FOR SPACE HEATER
4	-FCM60 (MCB 3P, S203-C6, ABB)	-FCM60, FOR VOLTAGE TRANSFORMER
5	-FCM61 (MCB 2P, S203-C2, ABB)	-FCM61, FOR RESIDUAL VOLTAGE
6	-KFA1 (AUX RELAY, REL-IR4/L, PHOENIX)	-KFAI, FOR TRIP FAULT
7	-TB1 (CONVERTER, DR-120-24, MEANWELL)	-TB1, CONVERTER 230VAC TO 24VDC

Carry over: 0.00

TAG ID	DESCRIPTION	MANUFACTUR/BRAND	PART NUMBER	QUANTITY	REMARKS
-BCF	Feeder Management Relay HBFJAEAGABC1ANA11G	ABB	REF615J HBFJAEAGABC1ANA11G	2	/8.2:C;/15.7:B
-EB	HEATER 230VAC, 50W	SANYANG	CDXN010033P0009	1	/7.6:E
-FCM2	MCB S202-C10 MCB. 2P, 10A	ABB	2CDS252001R0104	1	/7.2:C
-FCM3;-FCM9	MCB S202-C6 MCB. 2P, 6A	ABB	2CDS252001R0064	2	/7.5:C;/7.6:C
-FCM60	MCB S203-C6 MCB. 3P, 6A	ABB	2CDS253001R0064	1	/15.4:A
-FCM61;-FCM62	MCB S202-C2 MCB. 2P, 2A	ABB	2CDS252001R0024	2	/15.5:D;/15.7:E
-KFA1	Auxiliary Relay 230AC 4COS	PHOENIX	1YRA3DL266230001	1	/9.7:E
-PGF1	PILOT LIGHT GREEN #CL-523G#230VAC CL-523G	ABB	1SFA619402R5232	1	/8.5:E
-PFR1	PILOT LIGHT RED #CL-523R#230VAC CL-523R	ABB	1SFA619402R5231	1	/8.4:E
-PFY1	PILOT LIGHT YELLOW #CL-523Y#230VAC CL-523Y	ABB	1SFA619402R5233	1	/8.6:E
-PGM1	POWER METER CEWE 448 Class : 0.5s; CT Input : 1A; VT Input : 57.7-240V (L-N); Aux. Voltage: 80-300VAC/DC	CEWE	1YRA4EA0350001	1	/8.3:C
-SFC	PUSH BUTTON, YW1B-M1E10-G GREEN COLOUR	IDEC	1YRA3DA14700001	1	/9.2:B
-SFO	PUSH BUTTON, YW1B-M1E10-R RED COLOUR	IDEC	1YRA3DA14700002	1	/9.4:B
-SFS	LOCAL/REMOTE Selector Switch Type : S0-CA10-A723-600-E; 4NC (for LOCAL Position) & 4NO (for REMOTE Position)	K&N	1YRA3DA17940011	1	/9.2:B
-TB1	Voltage Input : 85-264 VAC/120-370V DC Voltage Output : 24 VDC, 5A	MEANWELL	DR-120-24	1	/7.3:D
-XTA1;-XTA2	Current Test Block Rated Current : 10A, 250V; Mounting : Flush Mounting	YONGSUNG	YSCTT-04C	2	/14.4:B;/14.4:D
-XTV1	Voltage Test Block Rated Current : 10A, 250V; Mounting : Flush Mounting	YONGSUNG	YSPTT-04C	1	/15.5:A

				Date Prep.	15.11.2018	PROJECT TITLE MV Switchgear for MNA Serang Plant	ABB	EPMV	PART LIST MVD-20 & MVD-21 20kV Boiler Plant SCHEMATIC DIAGRAM SBC-W INCOMING	Scale	NTS	= H01,H07
				Prepared	YR					Customer	PT Multimas Nabati Asahan	& 304
00	Issued for Approval	11.01.19	YR	Checked	AW		Drawing Nbr.	18.042-MNA-304.03		Sh. 18		
Ind.	Revision	Date	Name	Approved	AI	Based on:	BE318042	Customer Doc. Nbr.		Cont. 28		
							PT. ABB Sakti Industri					

[illegible]

[illegible]

[illegible]

[illegible]

[illegible]

[illegible]

[illegible]

[illegible]

[illegible]

F										E										D										C										B										A									