PANEL C REFERENCE OUTLINE - GORE 20

MOUTH APPLIQUE - GORE 20 PIECE - 1:1 - PRINT AT 100 %

apply to panel C BEFORE gore assembly - full crescent 5.09 x 1.19 m across gores 20/1/2

MOUTH PIECE - GORE 20

CALIBRATION LINE - must measure 500 mm at 1:1 (ticks every 100 mm)

black ripstop - solid = CUT
crescent edges EXACT: hot-cut, zigzag applique - NO allowance
one seam-end extension (25 mm) - caught in the gore fell - do NOT zigzag it
red dotted = gore-seam sew line (align to panel edges)

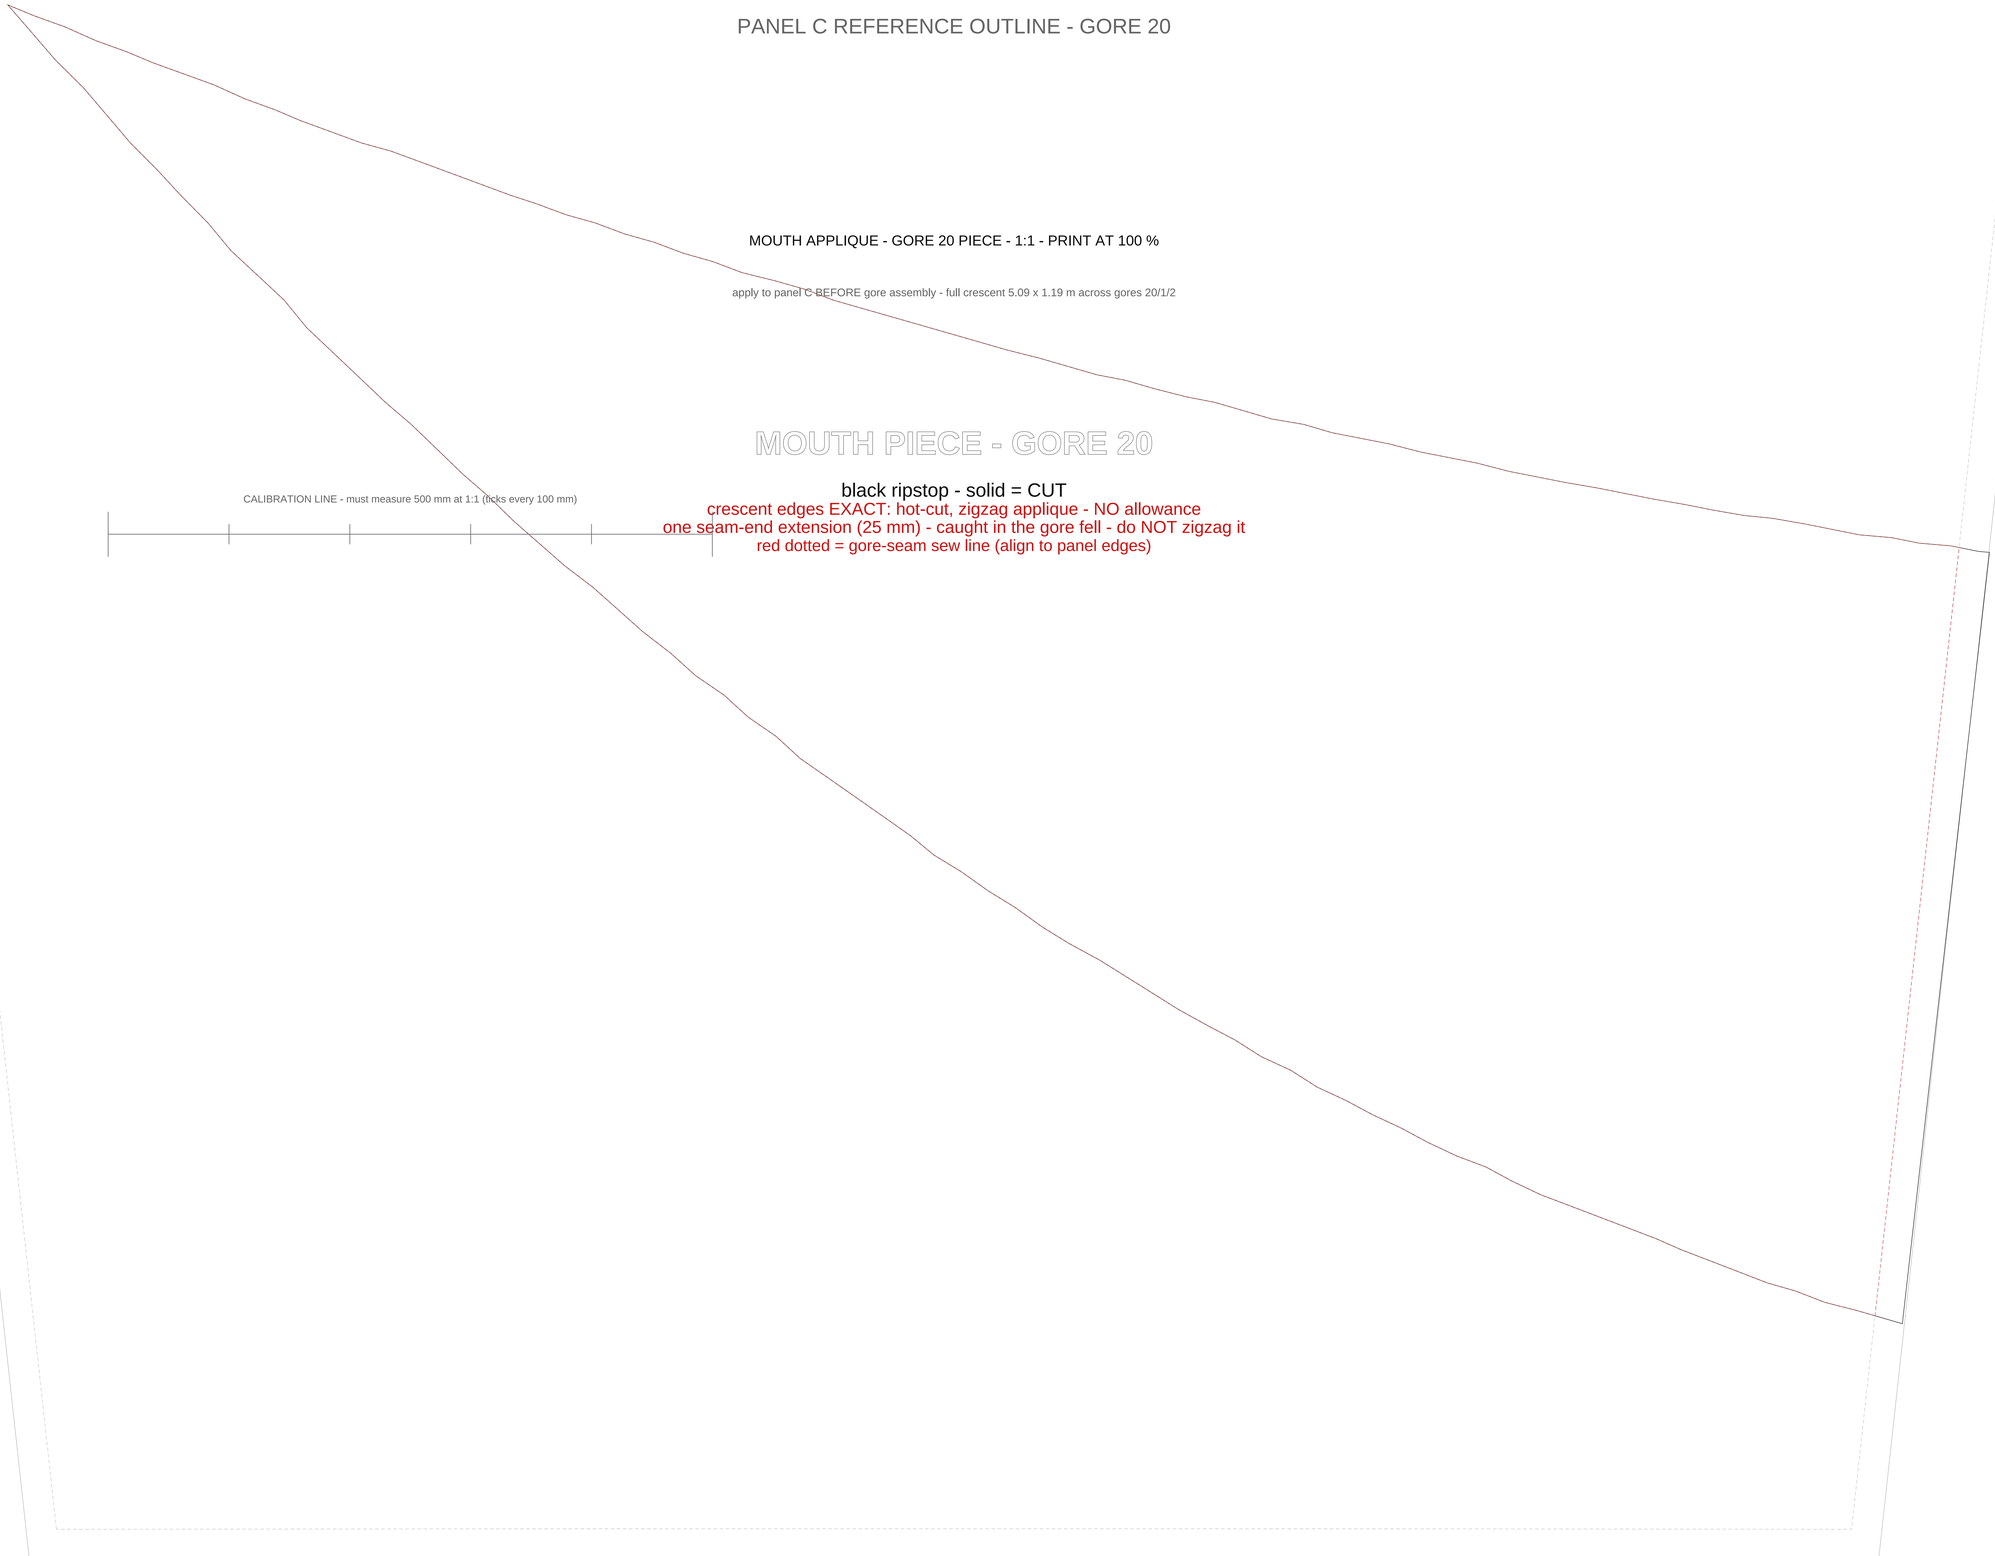

PANEL C REFERENCE OUTLINE - GORE 1

MOUTH APPLIQUE - GORE 1 PIECE - 1:1 - PRINT AT 100 %

apply to panel C BEFORE gore assembly - full crescent 5.09 x 1.19 m across gores 20/1/2

CALIBRATION LINE - must measure 500 mm at 1:1 (ticks every 100 mm)

black ripstop - solid = CUT
crescent edges EXACT: hot-cut, zigzag applique - NO allowance
both seam-end extensions (25 mm) - caught in the gore fells - do NOT zigzag them
red dotted = gore-seam sew line (align to panel edges)

PANEL C REFERENCE OUTLINE - GORE 2

MOUTH APPLIQUE - GORE 2 PIECE - 1:1 - PRINT AT 100 %

apply to panel C BEFORE gore assembly - full crescent 5.09 x 1.19 m across gores 20/1/2

MOUTH PIECE - GORE 2

CALIBRATION LINE - must measure 500 mm at 1:1 (ticks every 100 mm)

black ripstop - solid = CUT
crescent edges EXACT: hot-cut, zigzag applique - NO allowance
one seam-end extension (25 mm) - caught in the gore fell - do NOT zigzag it
red dotted = gore-seam sew line (align to panel edges)