


TURNING VENTS - PLACEMENT & OVERVIEW (NOT 1:1)

overlap construction on this envelope - seams 15/16 & 16/17, rows i-J - left side, face up

exact shapes, triangle sew lines, fold callouts and port are
ON THE MASTER PANEL i / PANEL J PATTERNS.

This sheet only fixes WHERE the vents go on the alien design:
seams 15/16 & 16/17 (flanking gore 16), rows i-J.

Y loops (pulleys) and Z loops (guide rings) per the
layout diagram, relocated to gores 15-17.

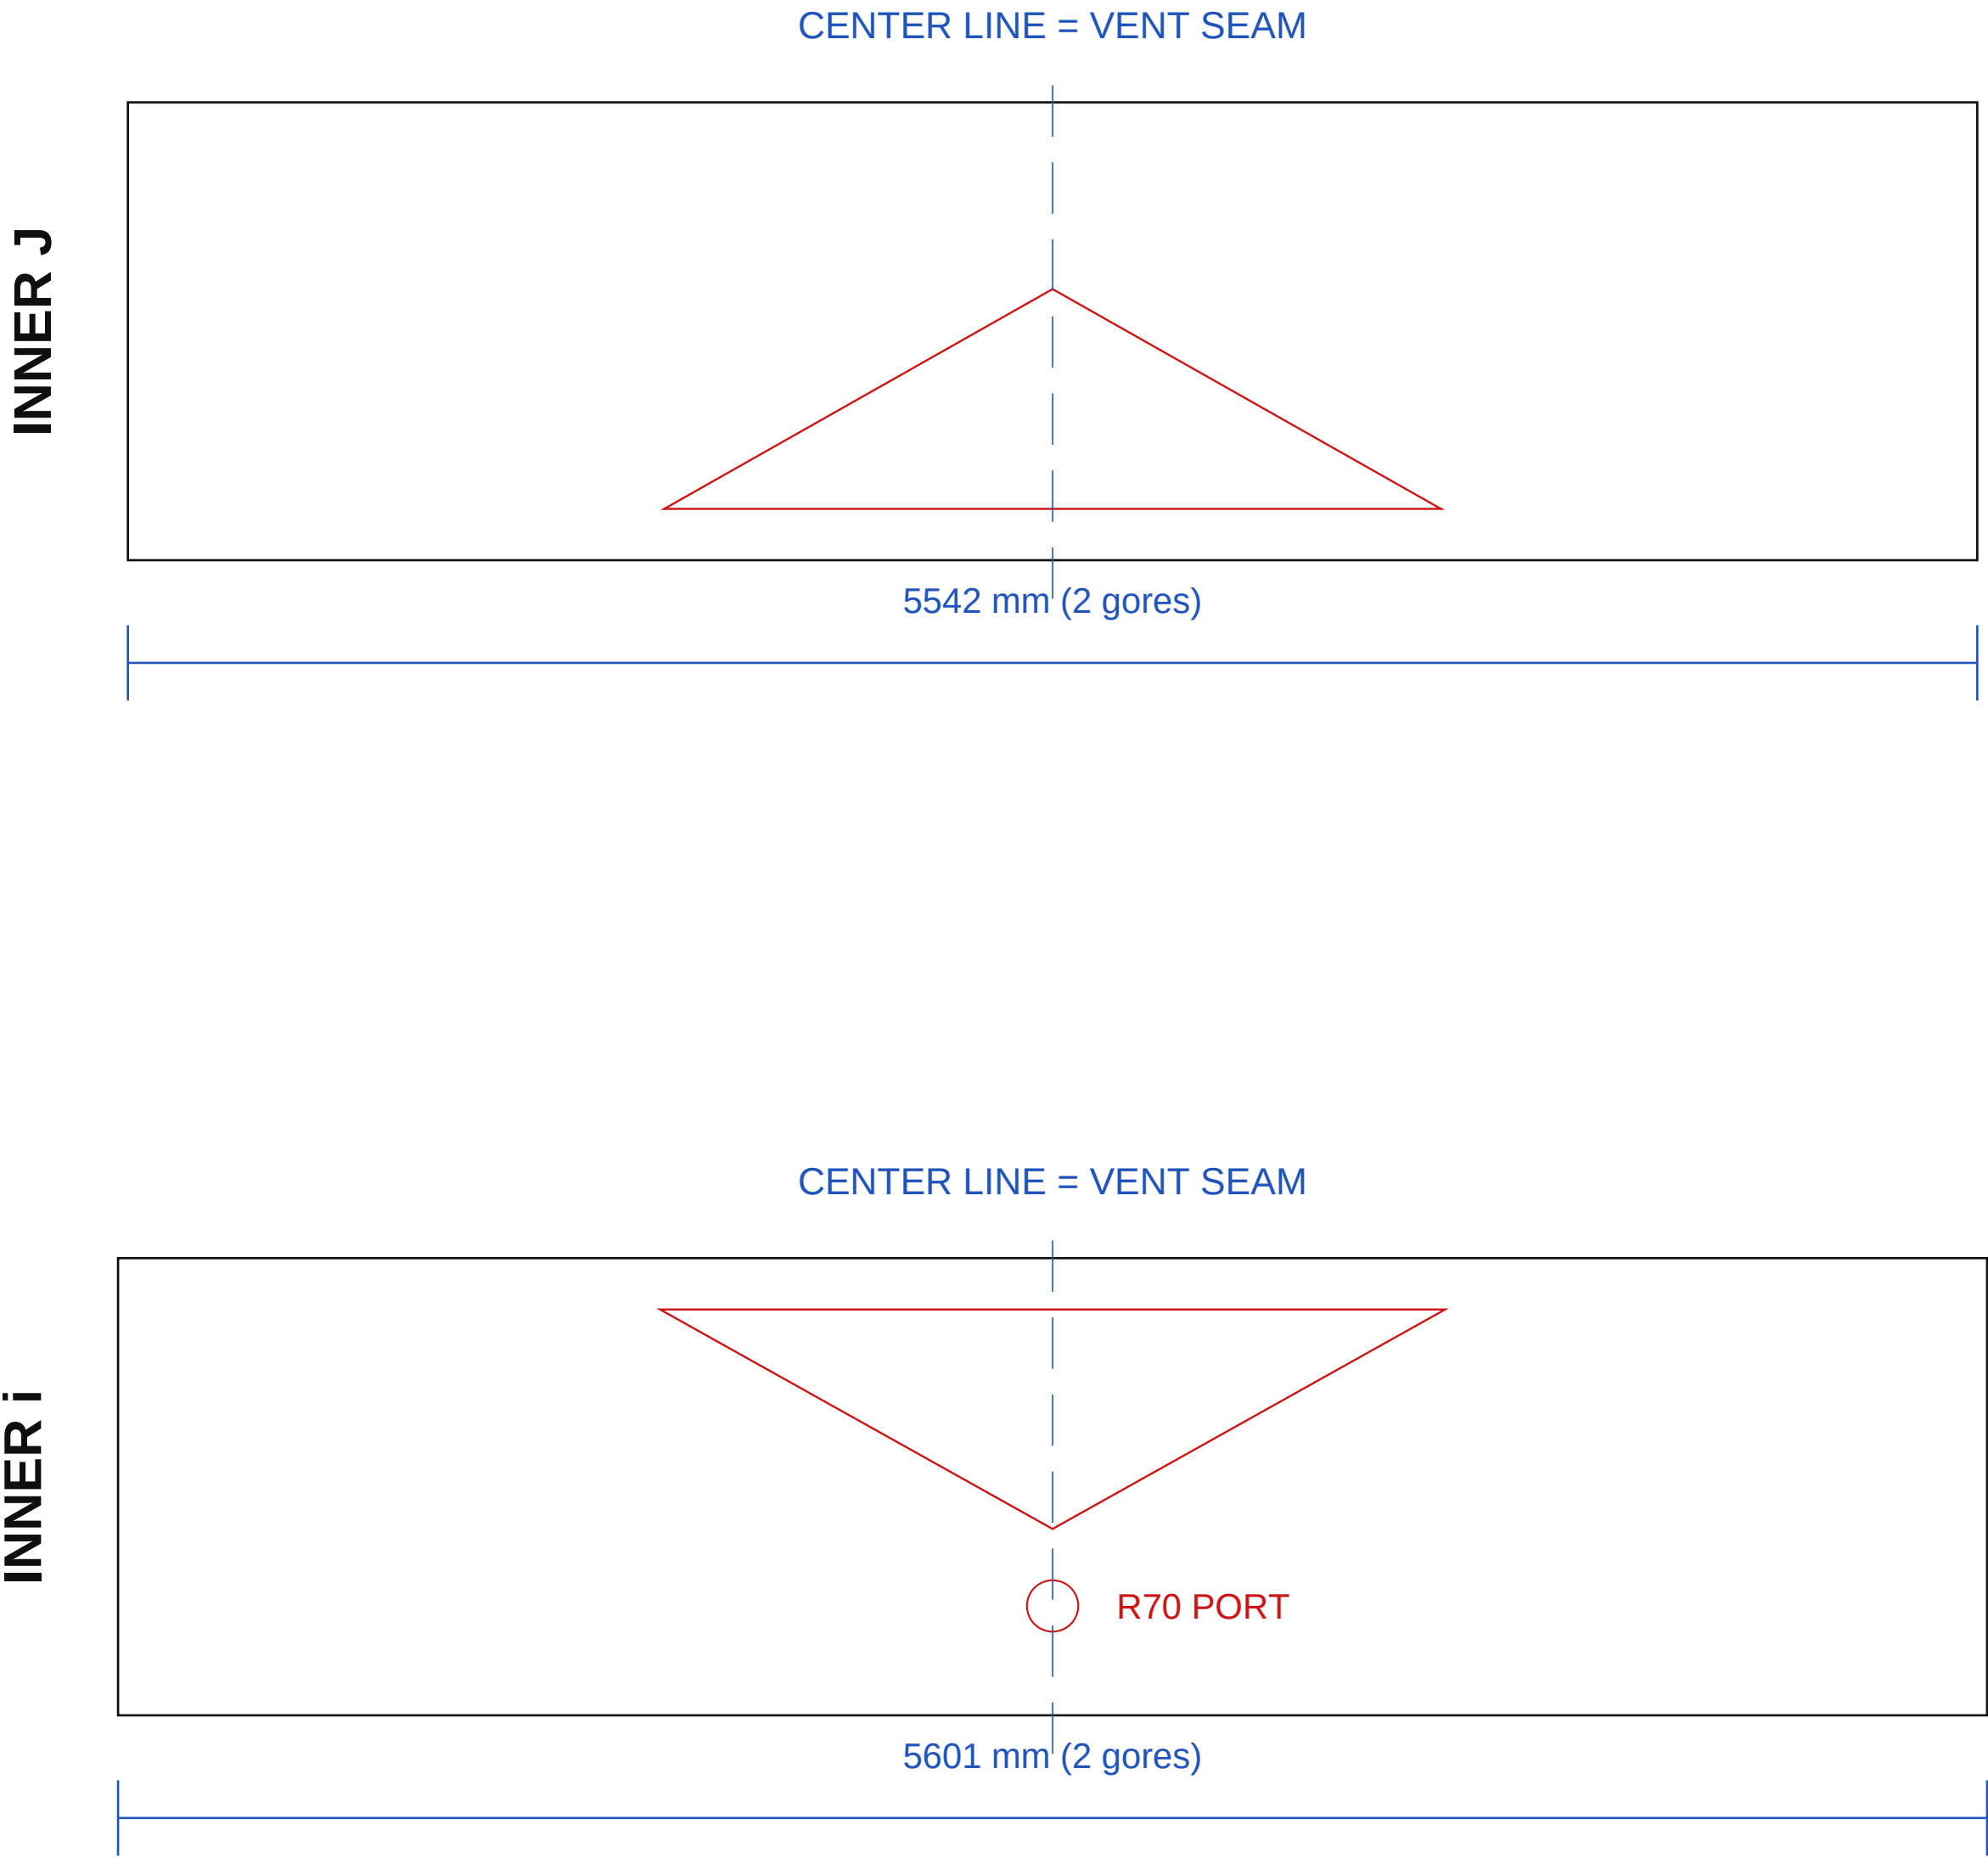

TURNING VENTS - ASSEMBLY

- 1. Cut 2x vent-marked PANEL J and 2x vent-marked PANEL i for the inner layer, plus the standard outer i/J panels.
- 2. Hem both lip edges per the DOUBLE FOLD OVER TAPE callouts (25 mm tape, twin-stitch). J lip lies OUTSIDE i, 70 mm overlap.
- 3. Hot-cut the R70 vent-line port in inner panel i (semicircle at the panel bottom); bind and fit the guide grommet.
- 4. Align each inner unit's CENTER LINE to its gore seam: vent 1 on seam 15/16, vent 2 on seam 16/17.
- 5. Sew inner J to the outer envelope along the apex-up TRIANGLE SEW LINE; twin-needle, bar-tack the apex.
- 6. Sew inner i along the vee-down TRIANGLE SEW LINE; bar-tack apex and base corners.
- 7. Close the side and row seams into the gore fells; keep the 70 mm lip overlap free to open.
- 8. Rig vent lines through the R70 ports to the Y-pulley loops and Z guide rings; pull to open, release to self-seal. Test both on the ground.

master panel data: J 5542 x 1372 mm, i 5601 x 1370 mm per 2-gore unit (finished)