

## 3.8 IC-level interfaces

General housekeeping performance specifications are split into three functional categories as defined within its block diagram (Figure 3-11).

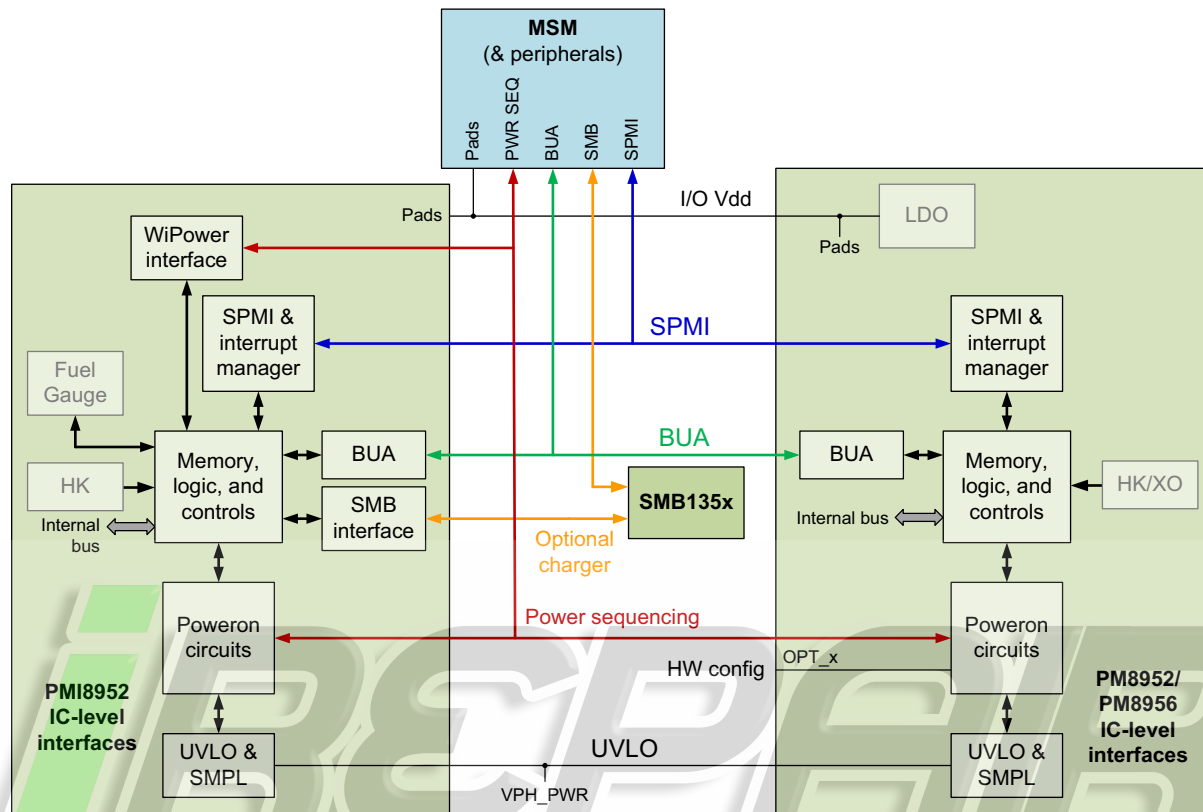


Figure 3-11 IC-level interfaces functional block diagram

### 3.8.1 Poweron circuits and power sequences

The PMI8952 complements the PM8952/PM8956 to meet the system's power management needs. Power sequencing details are shared between the two ICs, so this topic is addressed in the *PM8952/PM8956 + PMI8952 Power Management IC Design Guidelines/training Slides* (80-NT390-5), including:

- Poweron circuit block diagrams and descriptions
- Types of triggers and turn on and off trigger events
- Power sequencing and detailed descriptions
  - Concise summary: Dedicated circuits continuously monitor several events that might trigger a poweron sequence. If any of these events occur, the PMIC circuits are powered on, the handset's available power sources are determined, the correct source is enabled, and the modem IC is taken out of reset.