




SOLIS SIGNAL BLOCK DIAGRAM


(VIETMOBILE.VN)

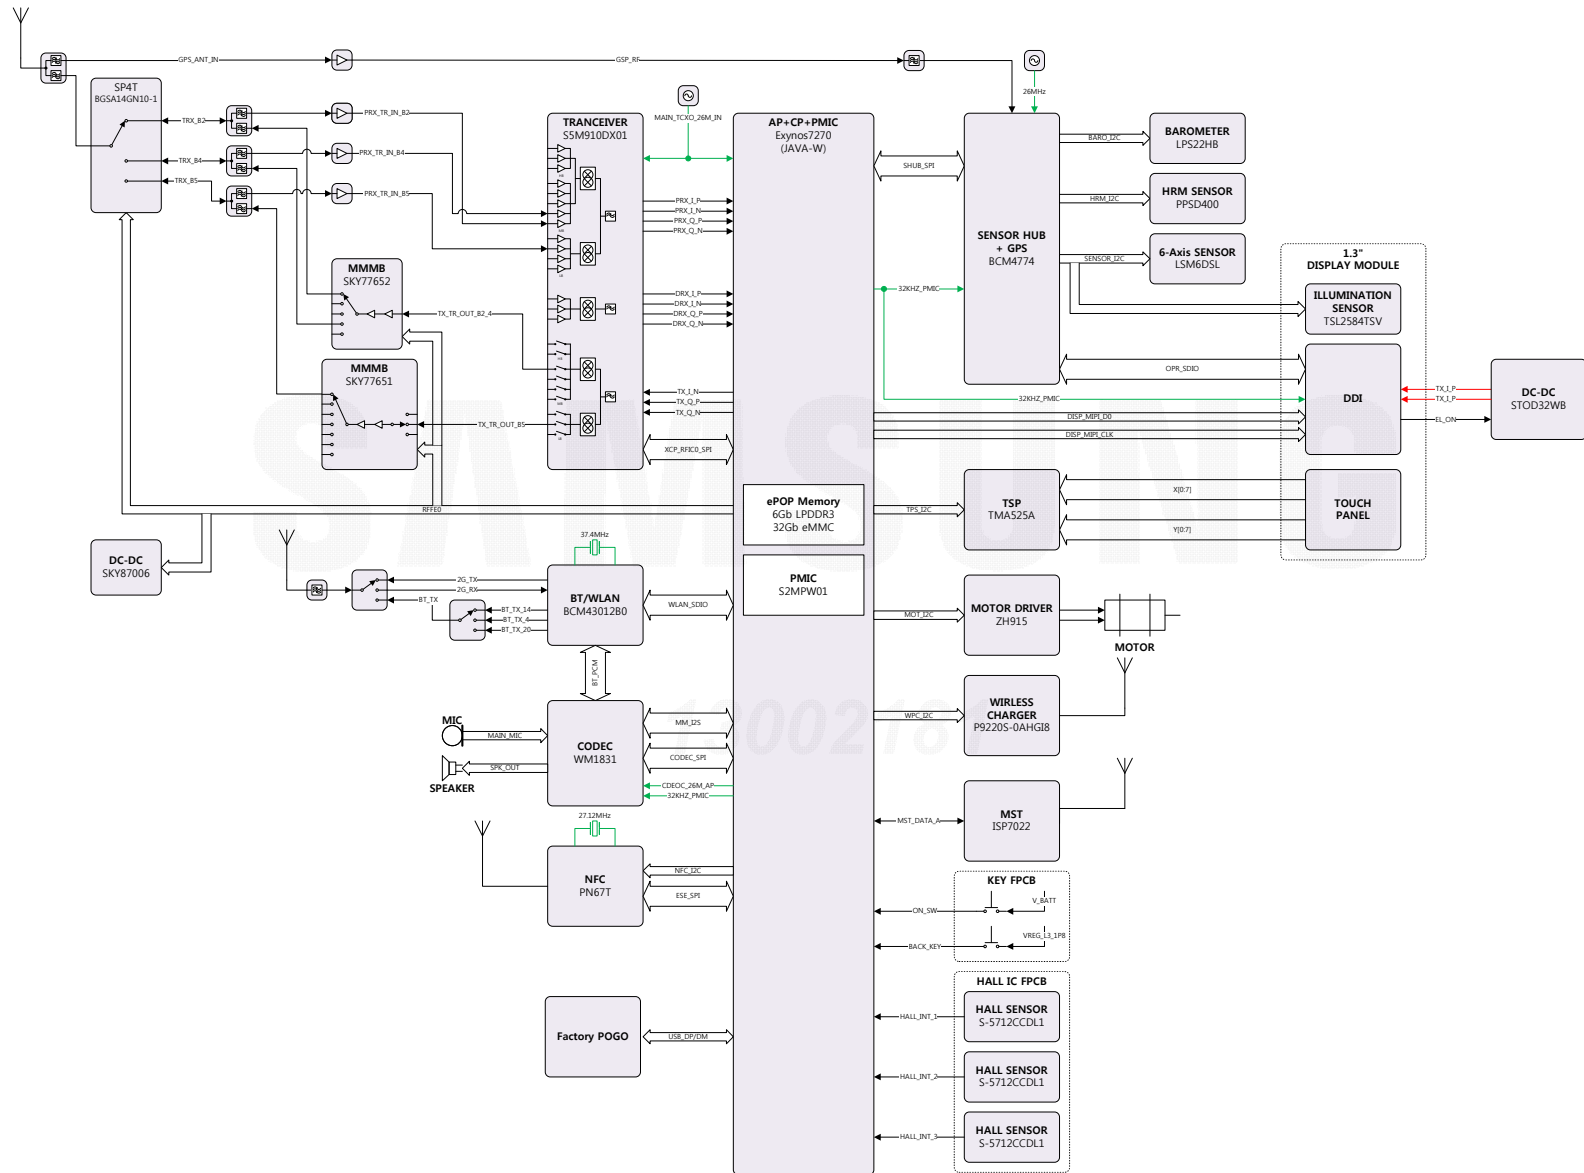

(VIETMOBILE.VN)

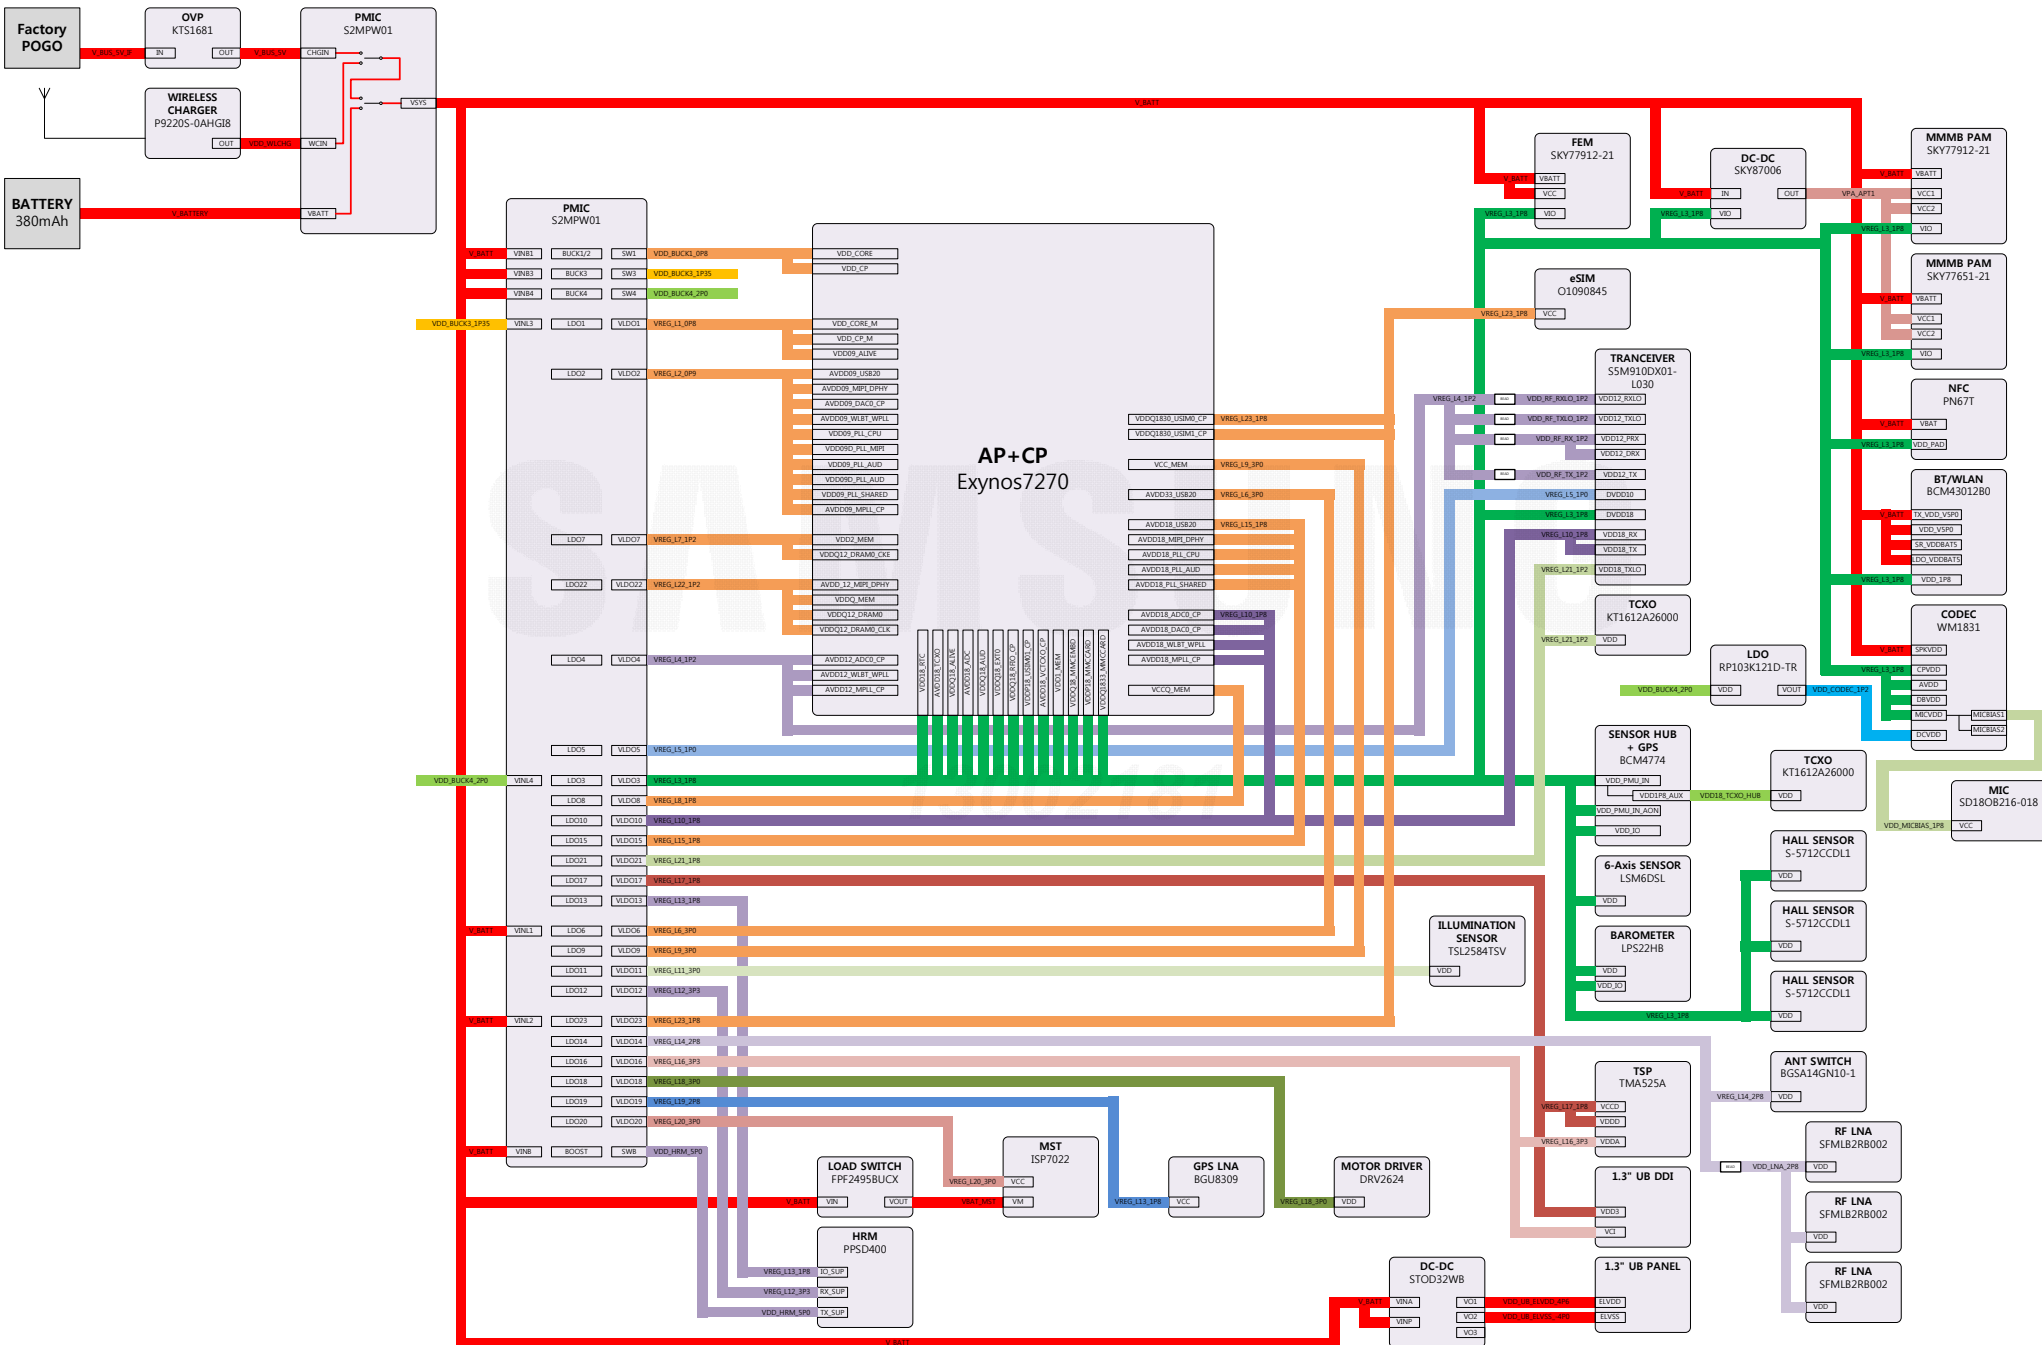


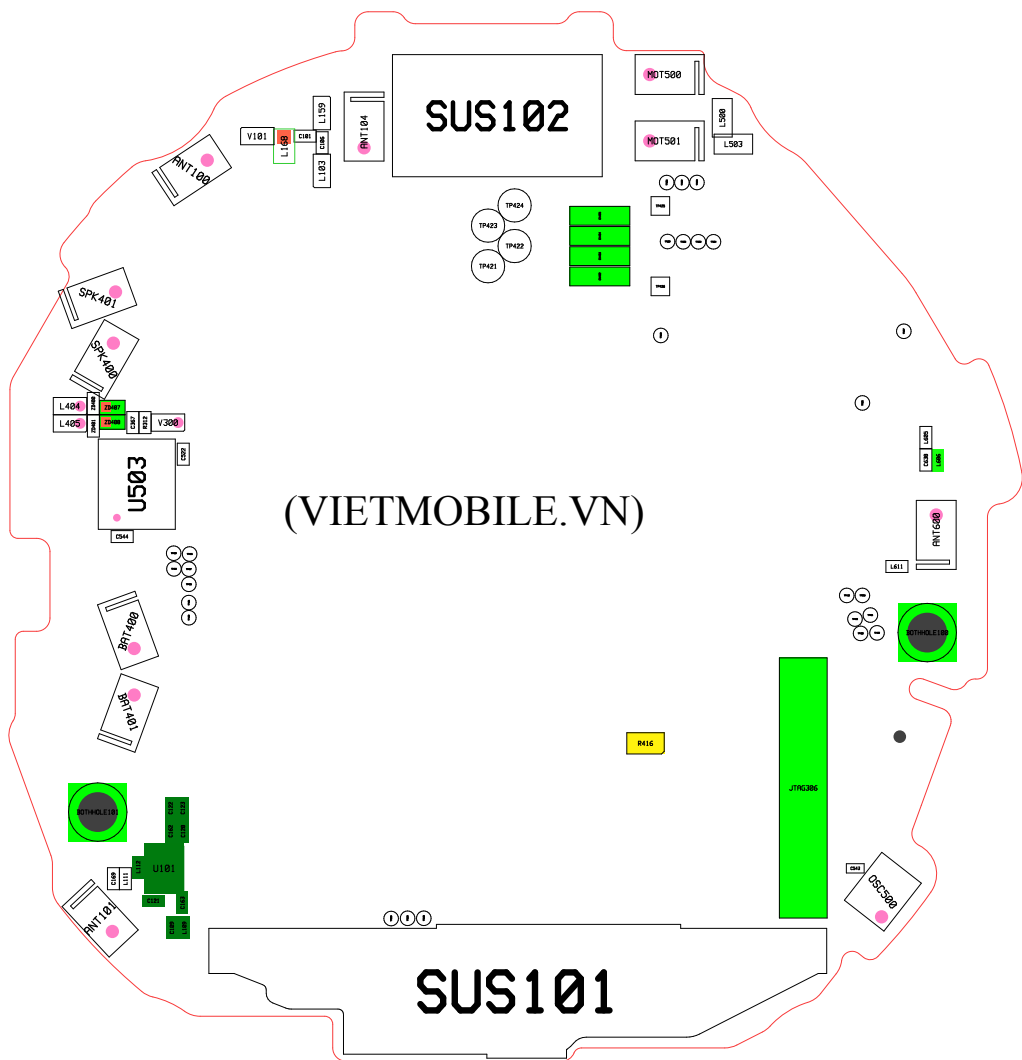

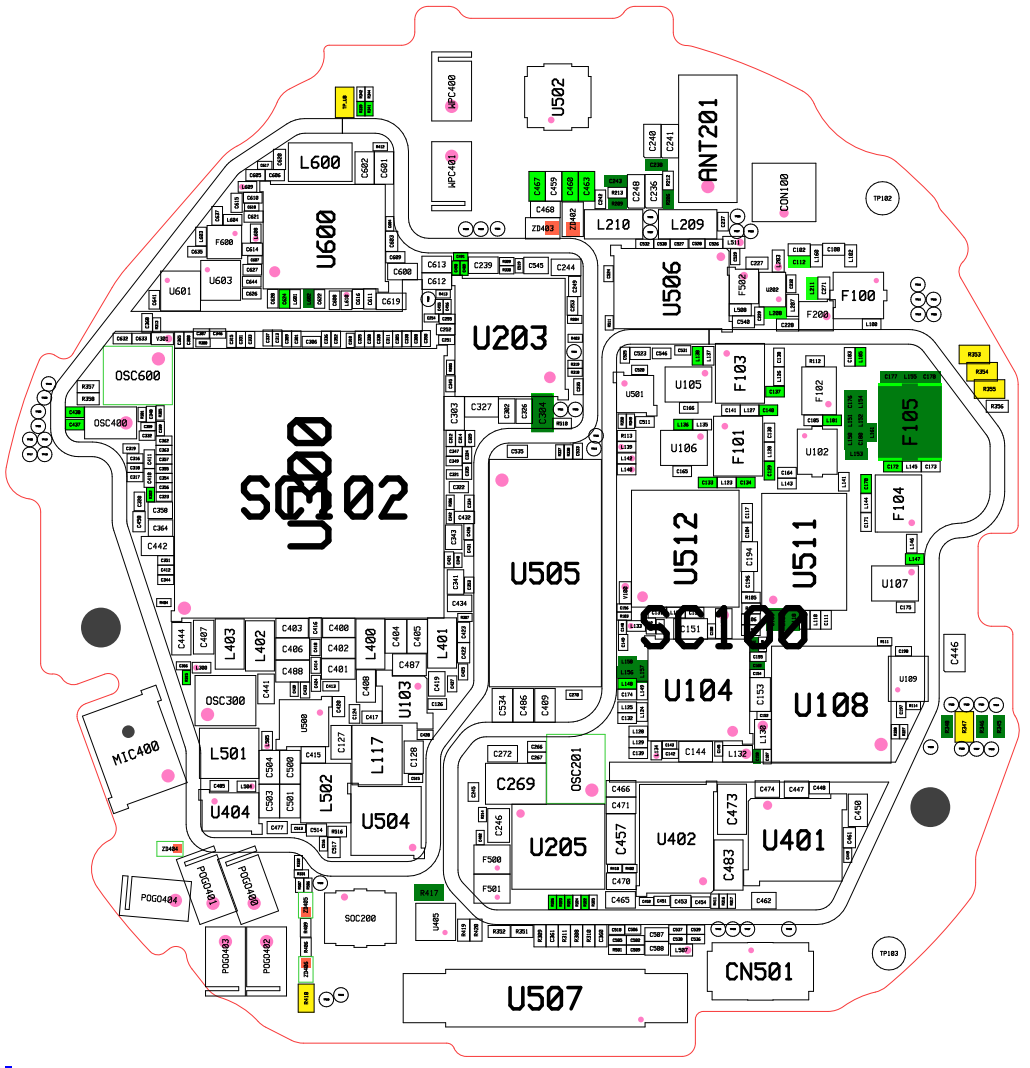

8. Level 3 Repair

8-3. Flow chart of Trouble shooting.

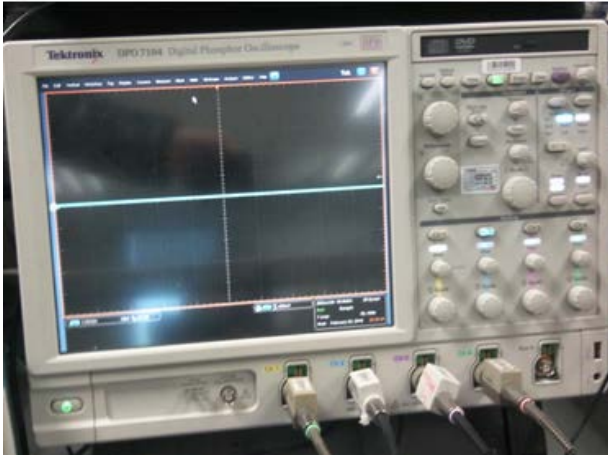


Oscilloscope



Digital Multimeter



Power Supply

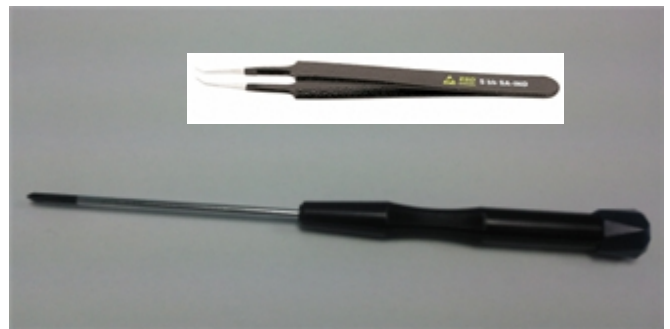


Y/+ driver, ESD Safe Tweezer




Soldering iron

8. Level 3 Repair



8-4-1. Power On

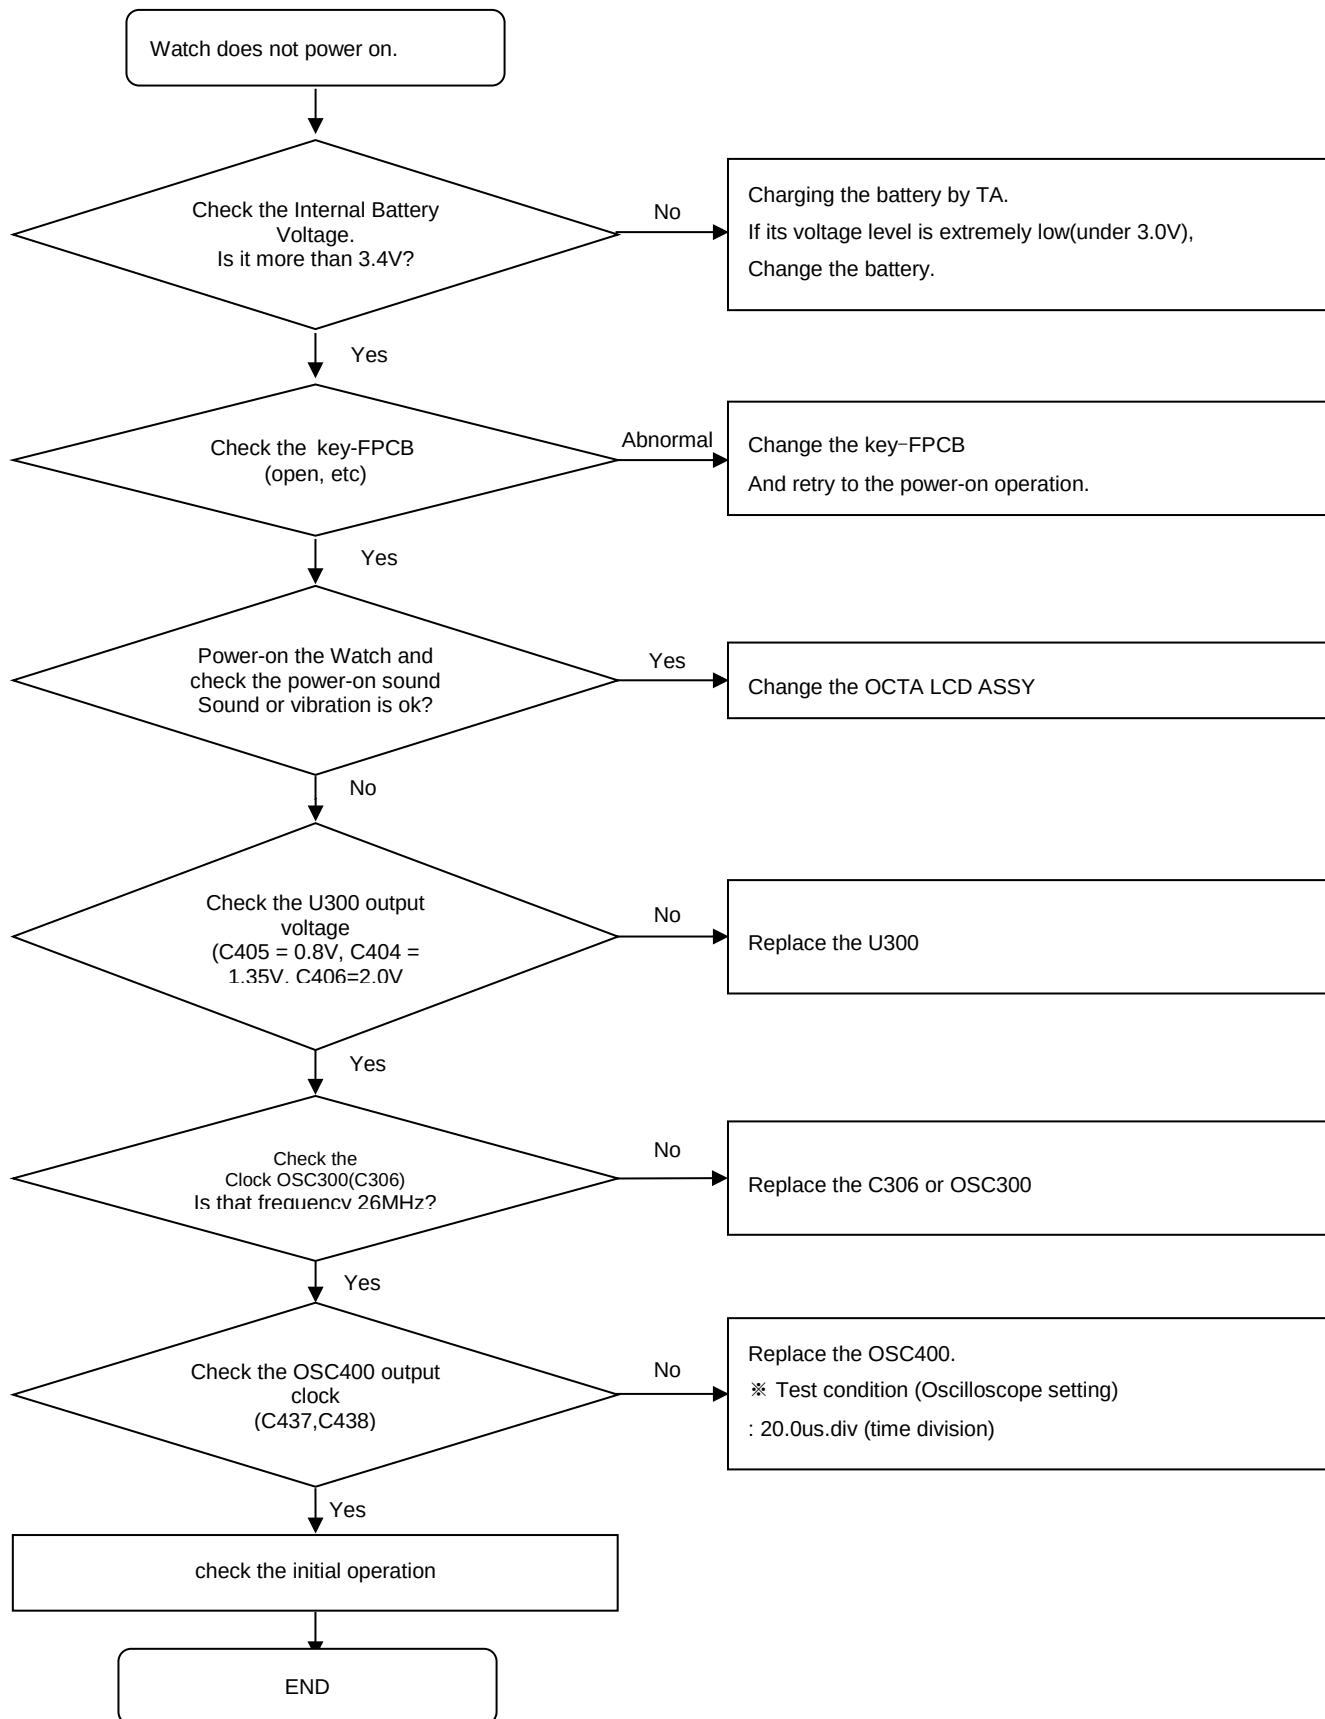

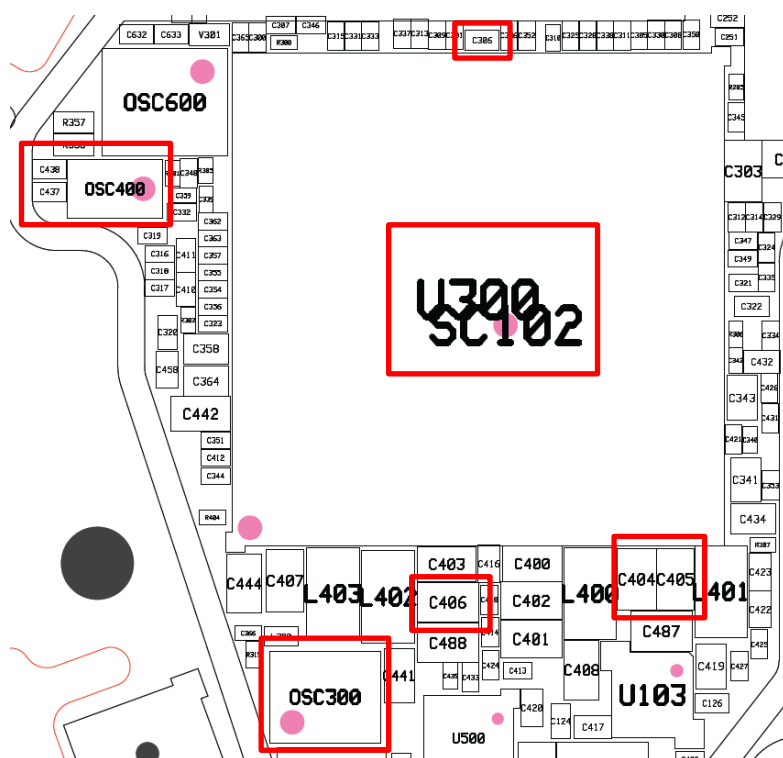



8. Level 3 Repair

8-4-2. Initial (Lock up)

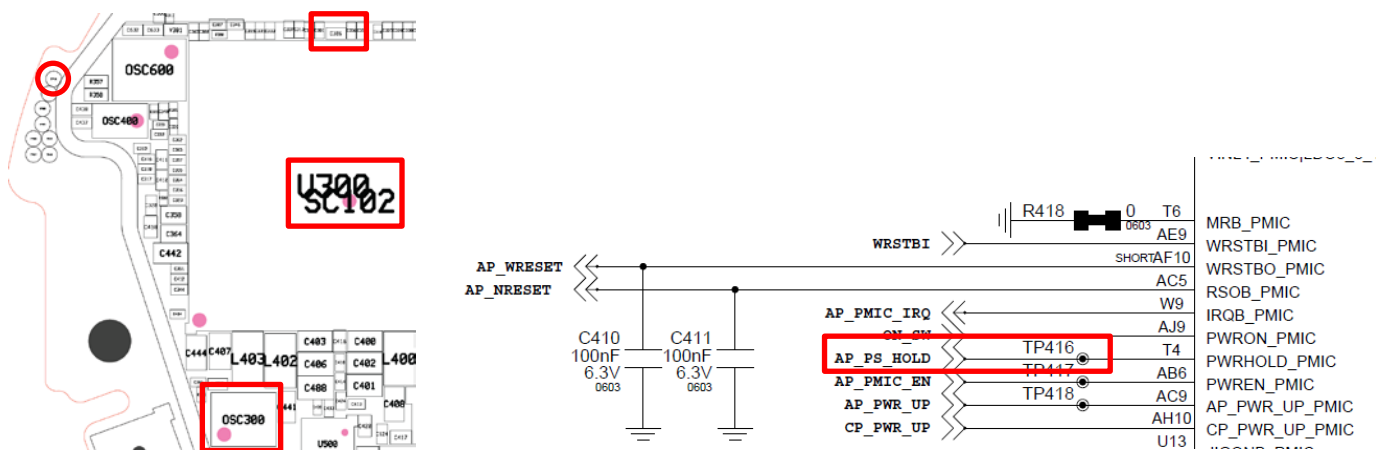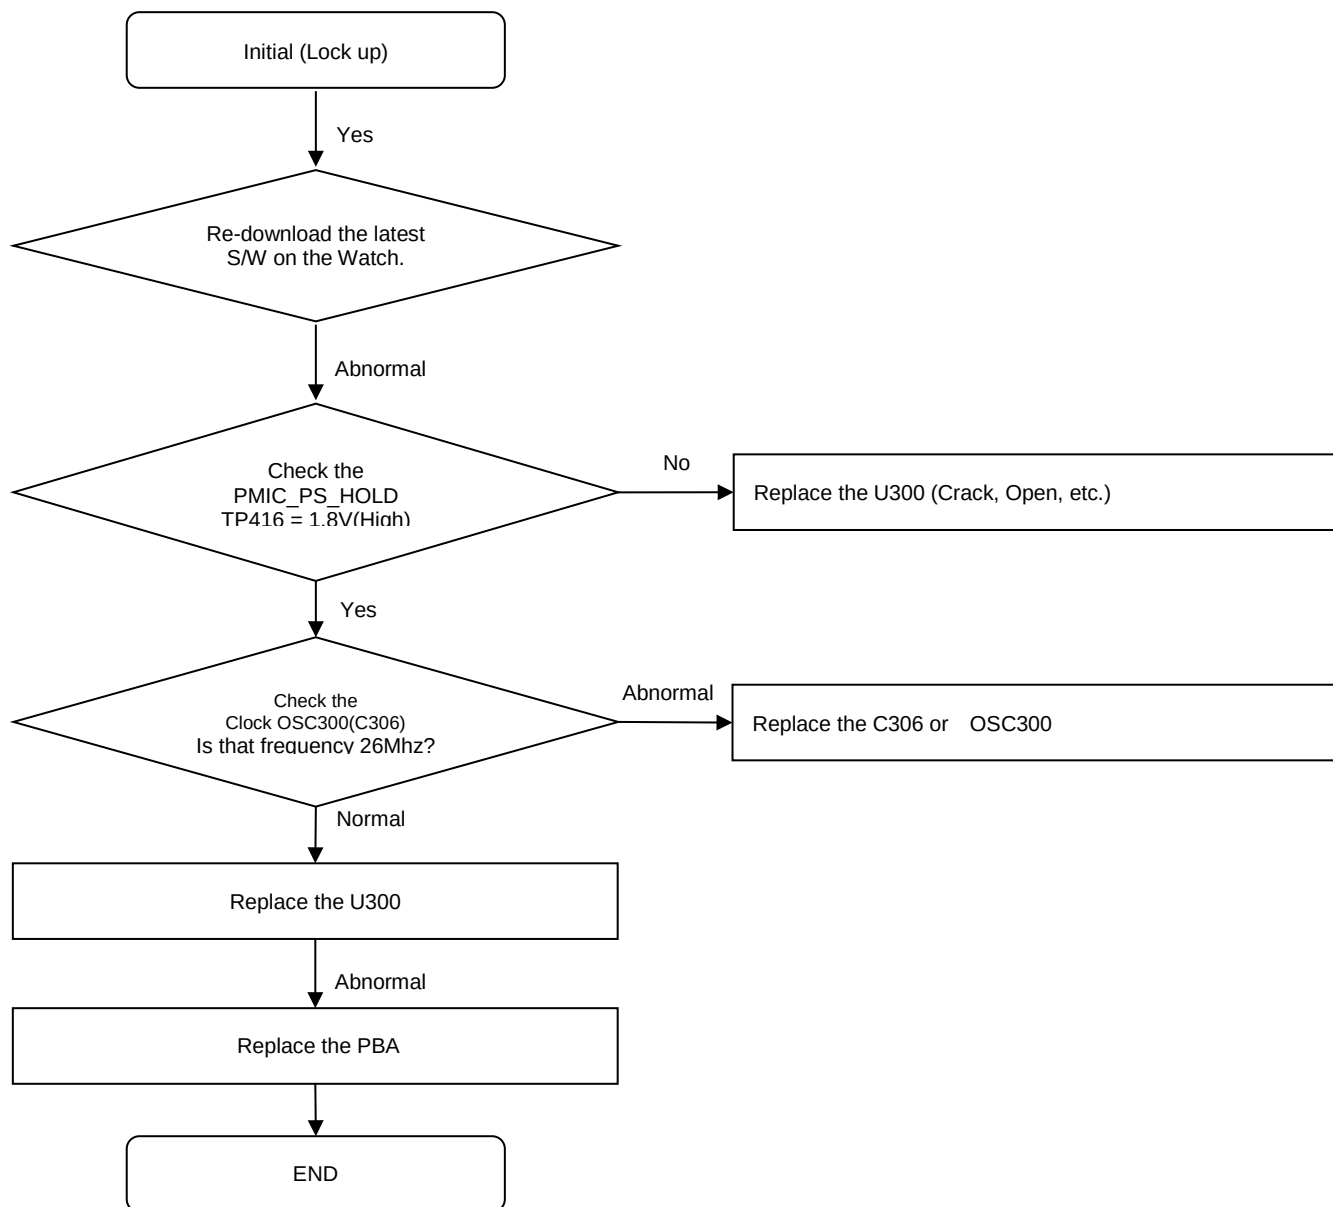


8. Level 3 Repair

8-4-3. Charging Part

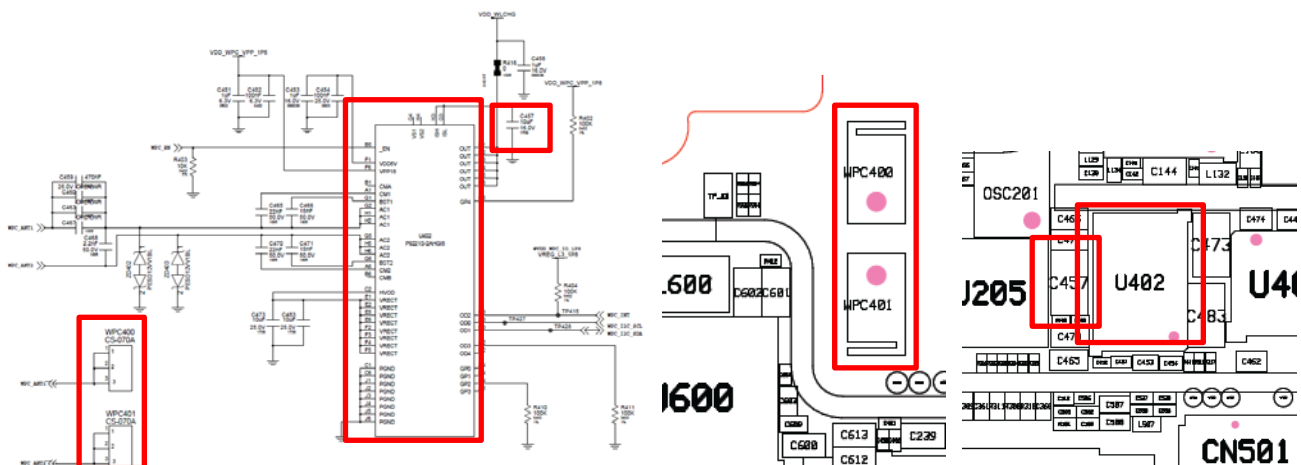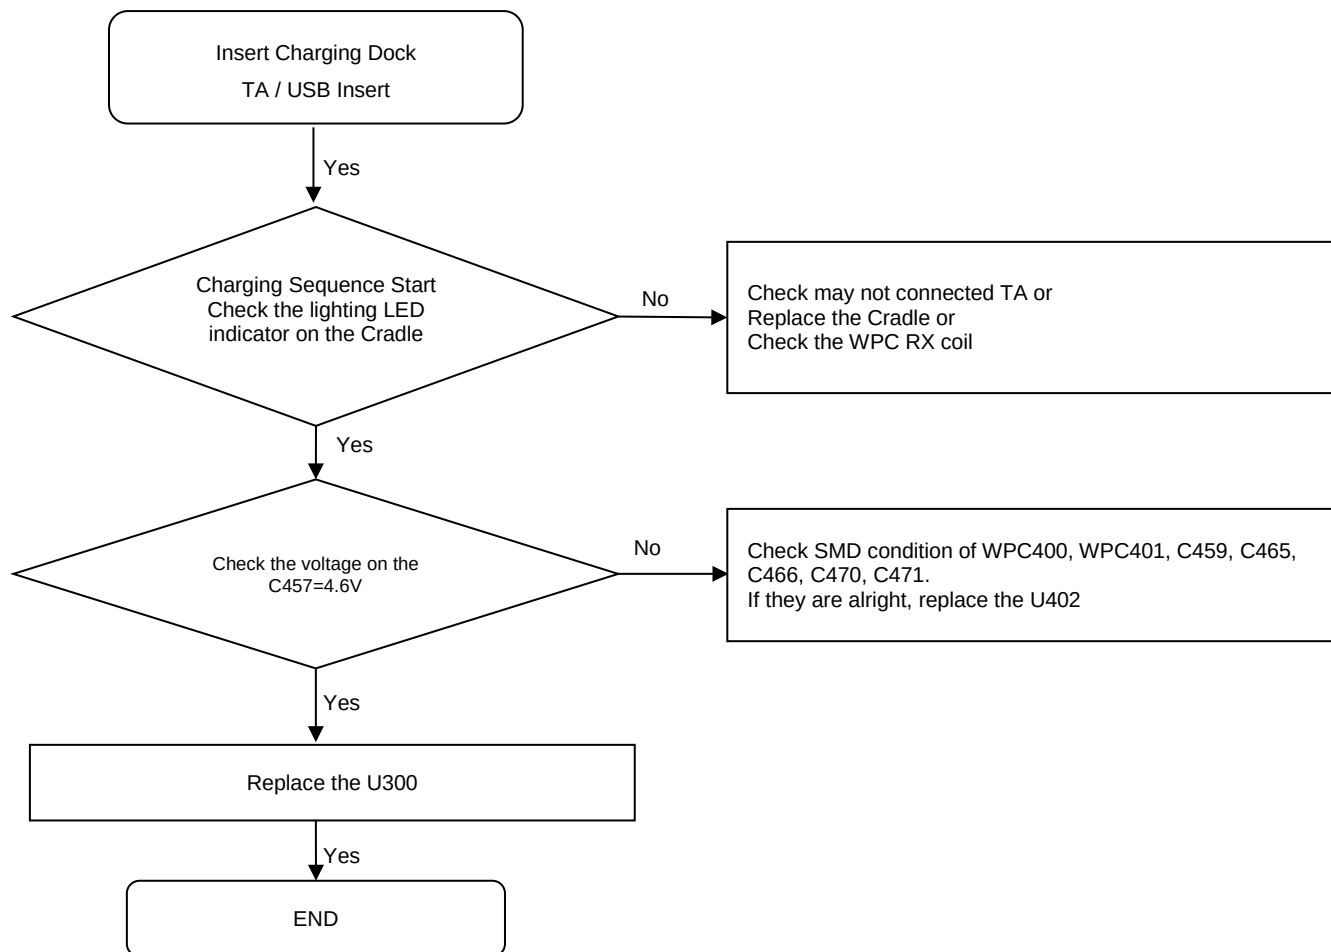


8. Level 3 Repair

8-4-4. BT/WIFI


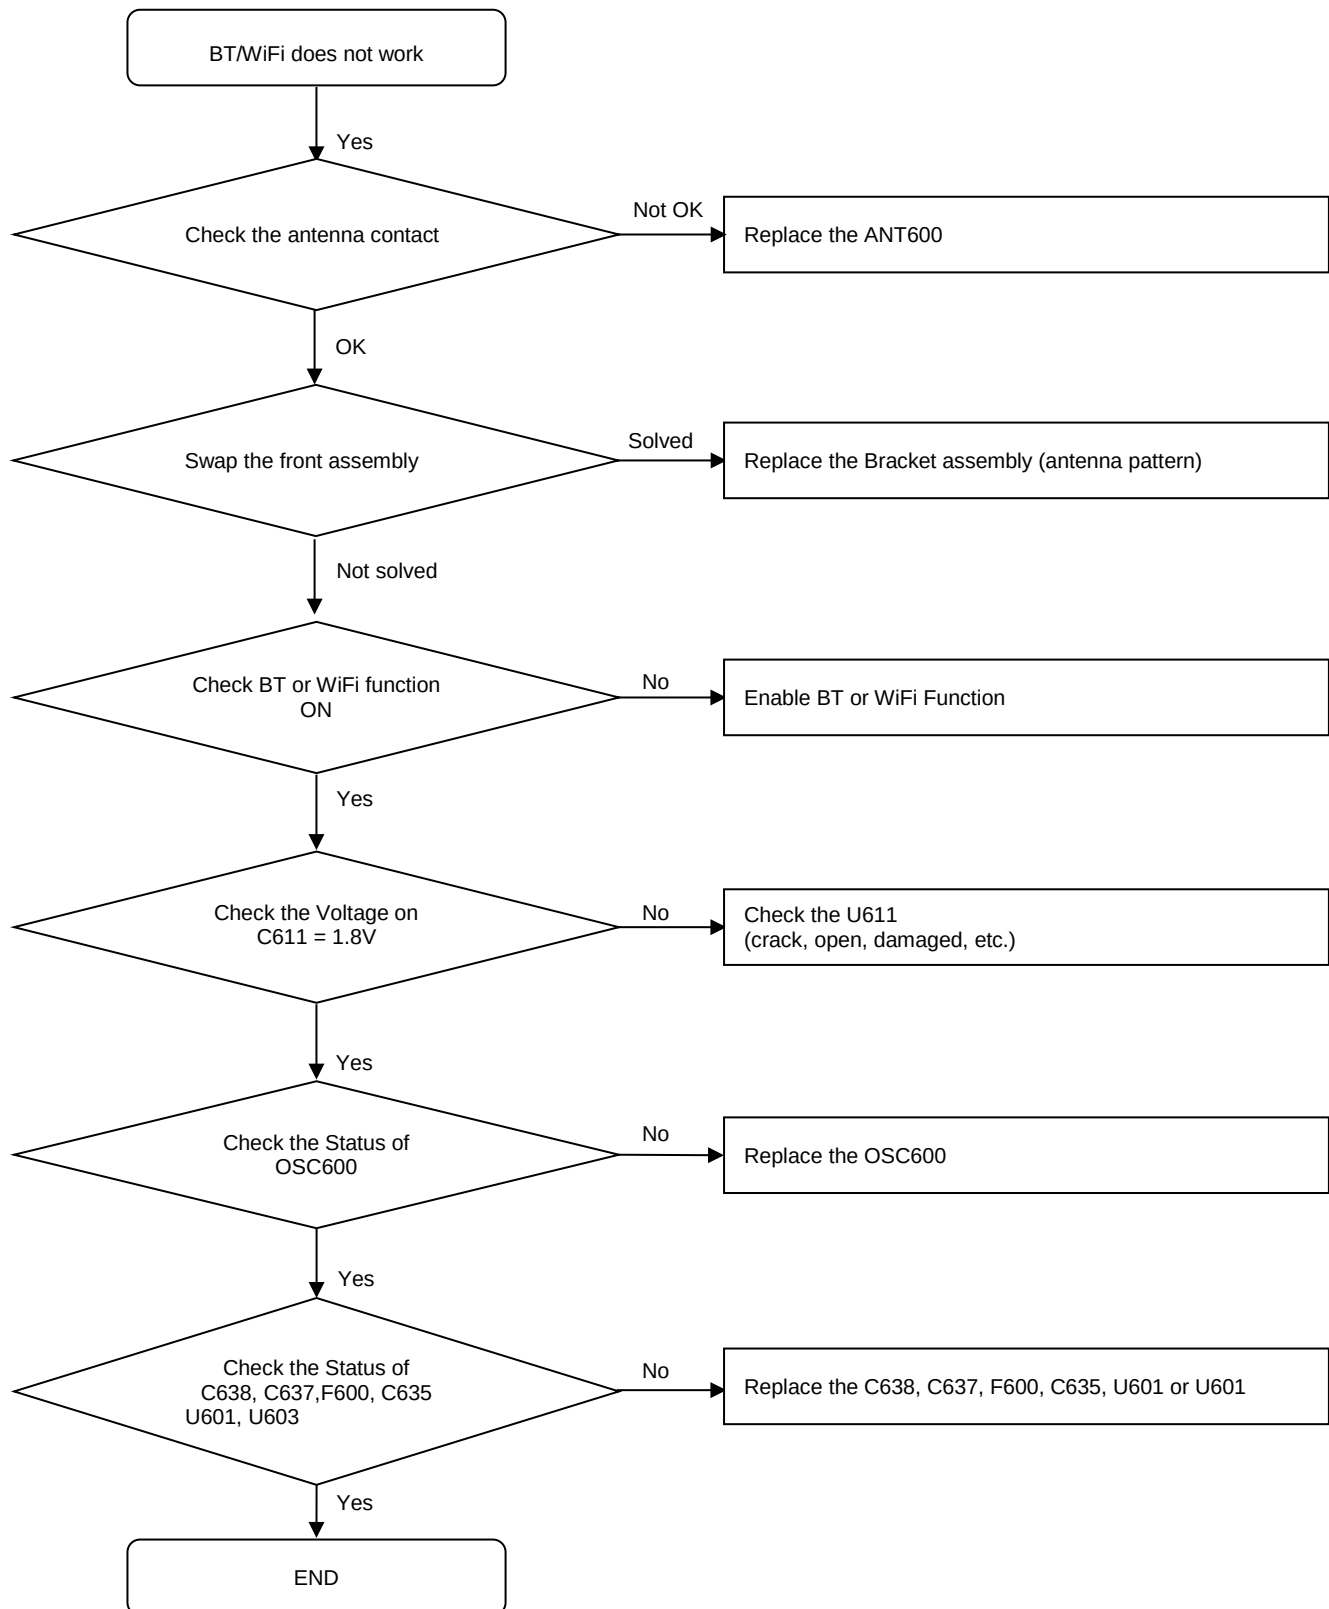


8. Level 3 Repair

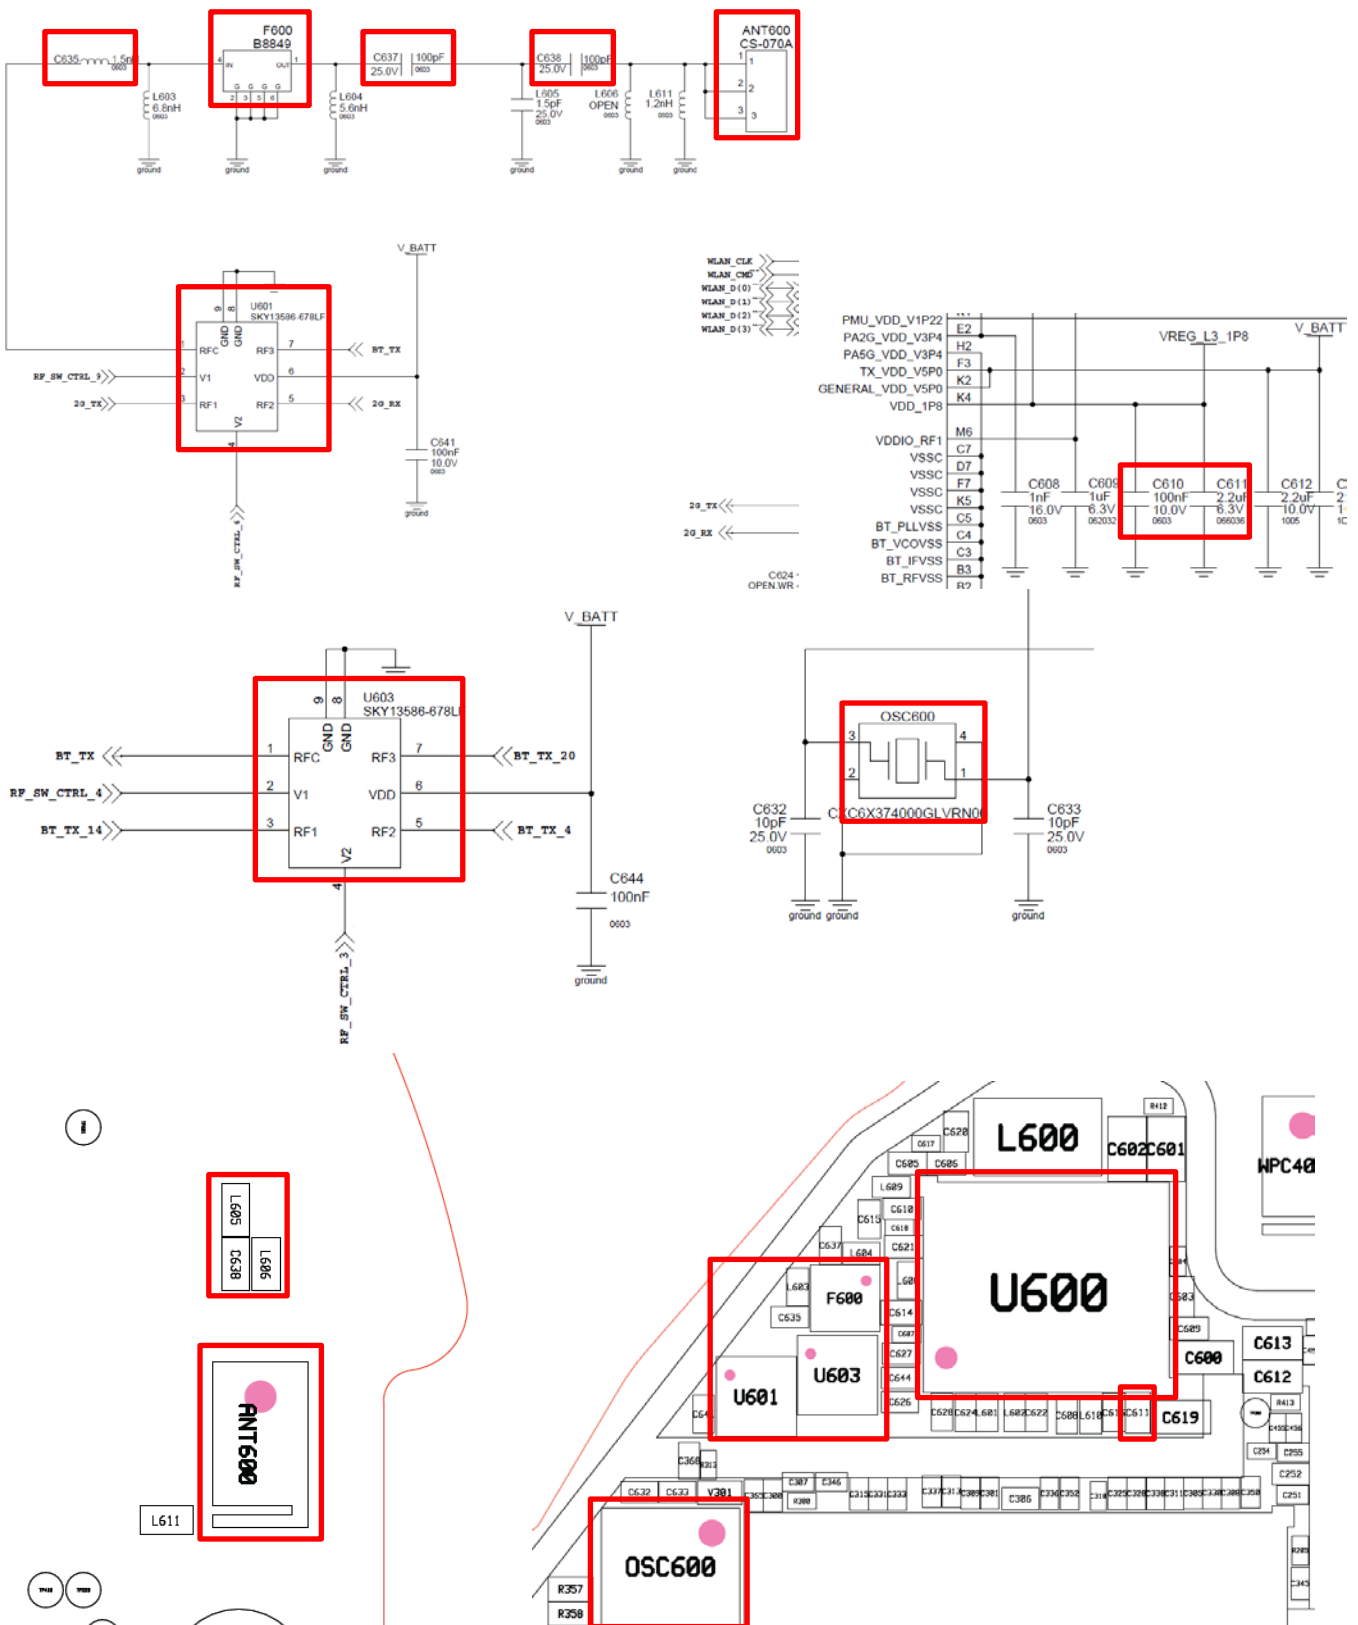


8. Level 3 Repair

8-4-5 MOTOR


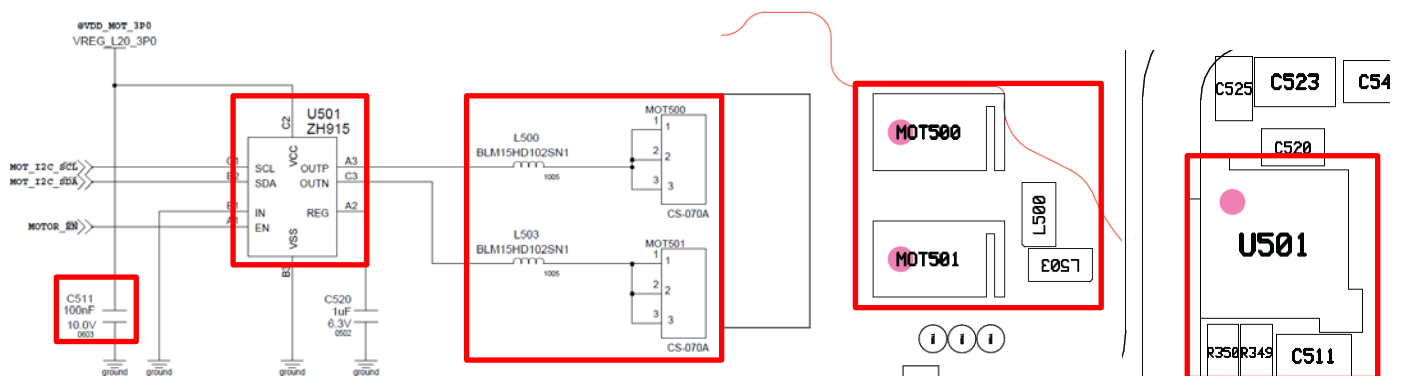
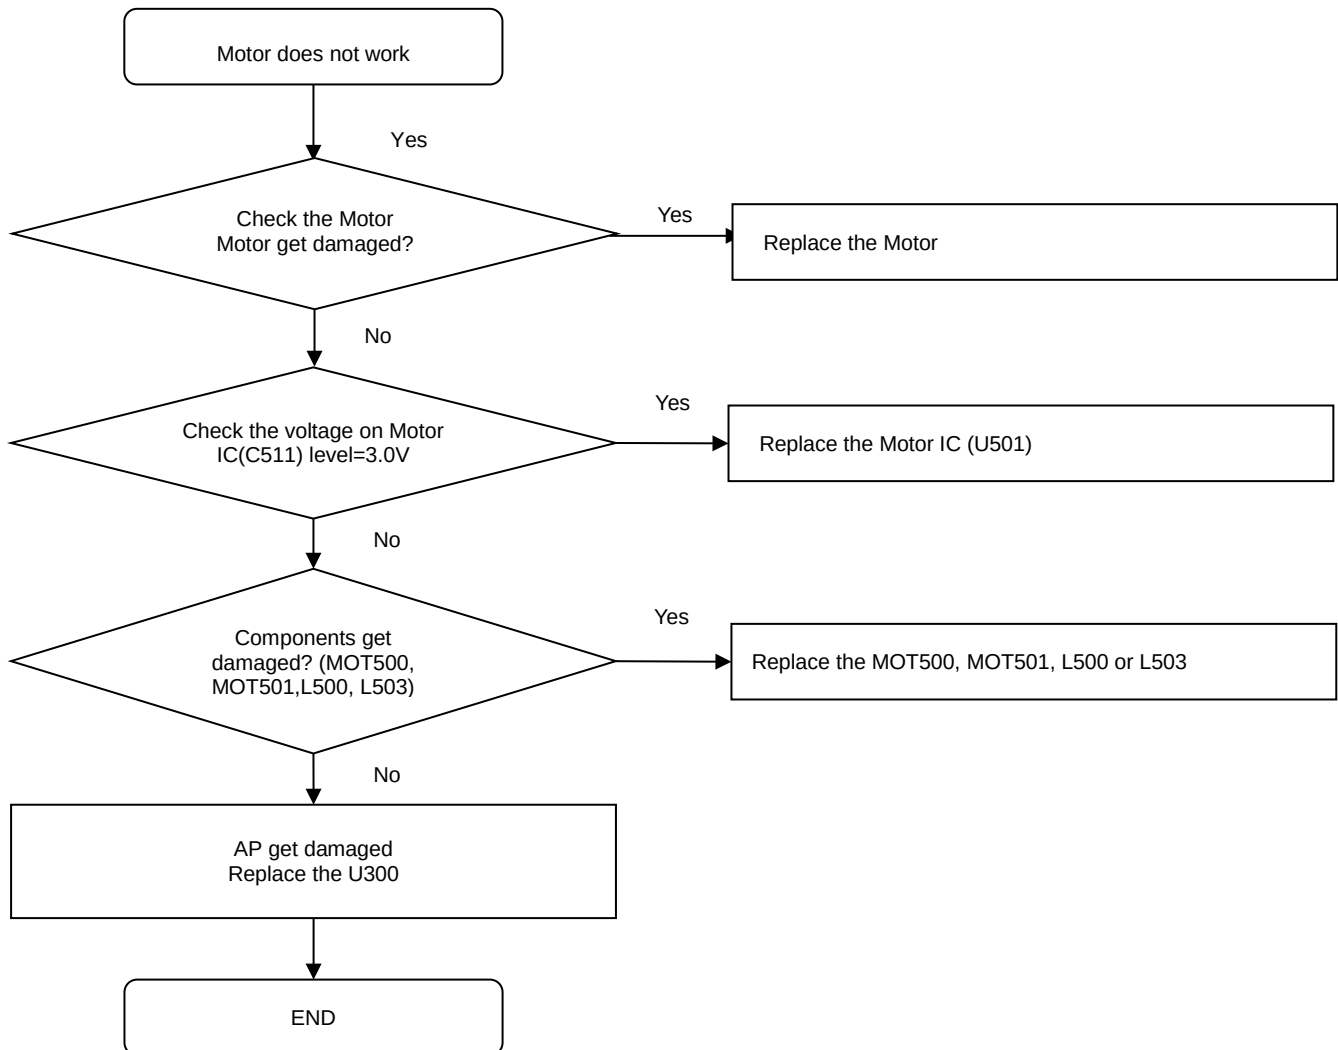


8. Level 3 Repair

8-4-6 UB(Display part)

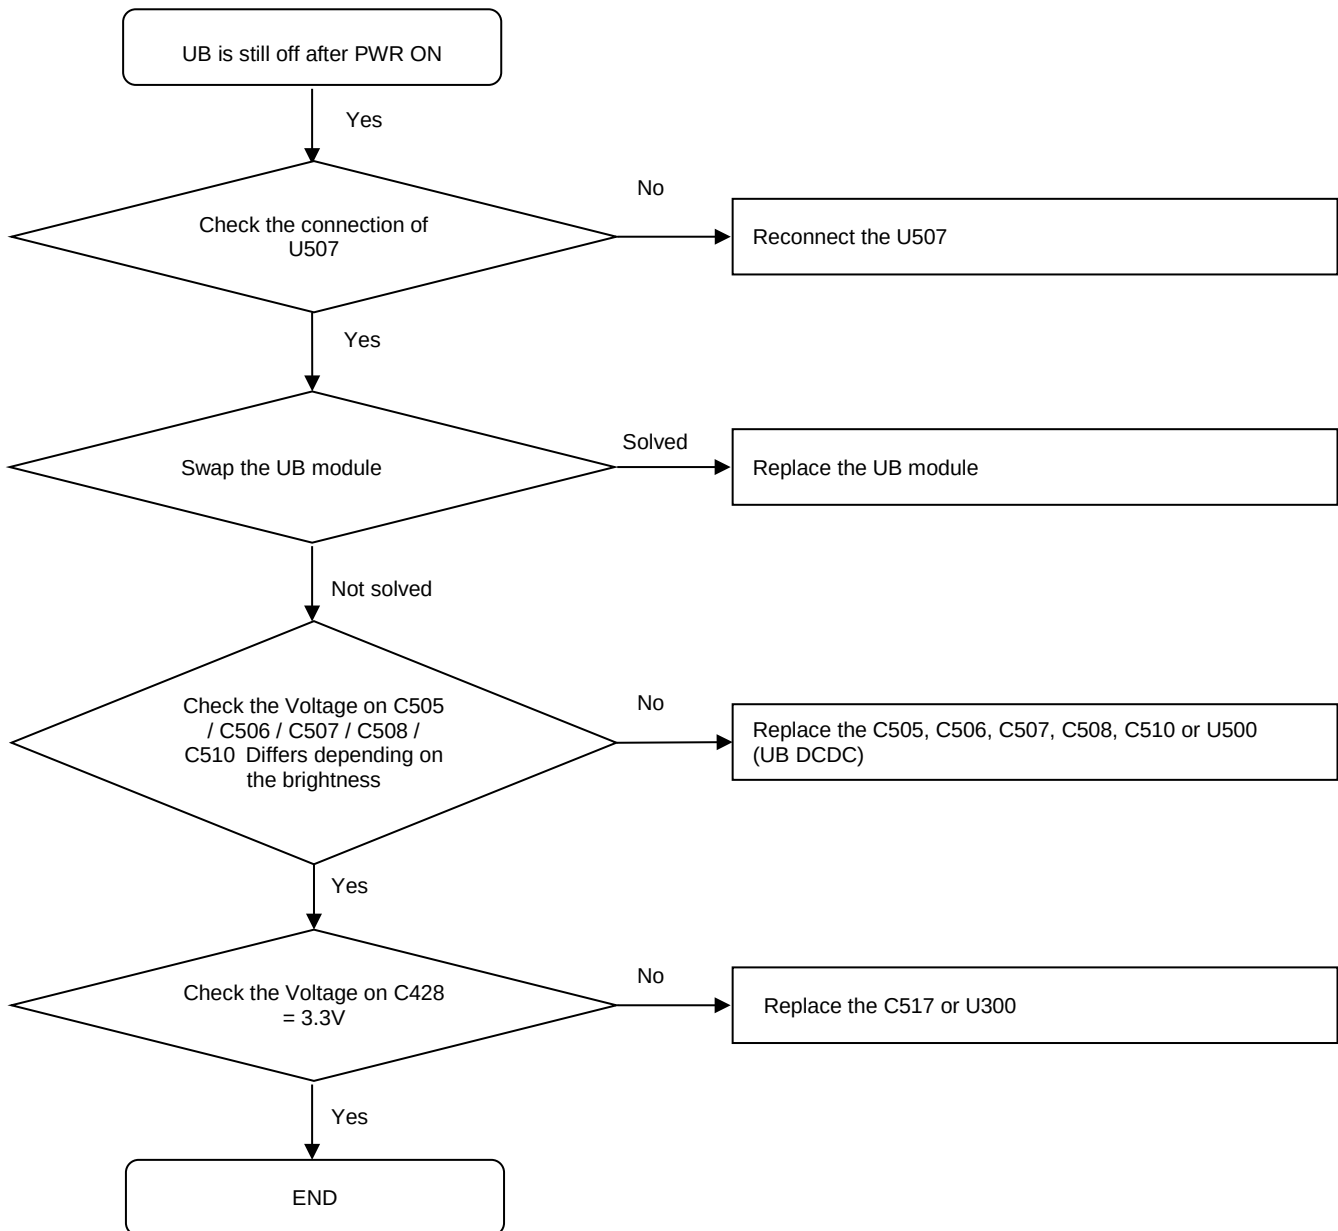

8. Level 3 Repair

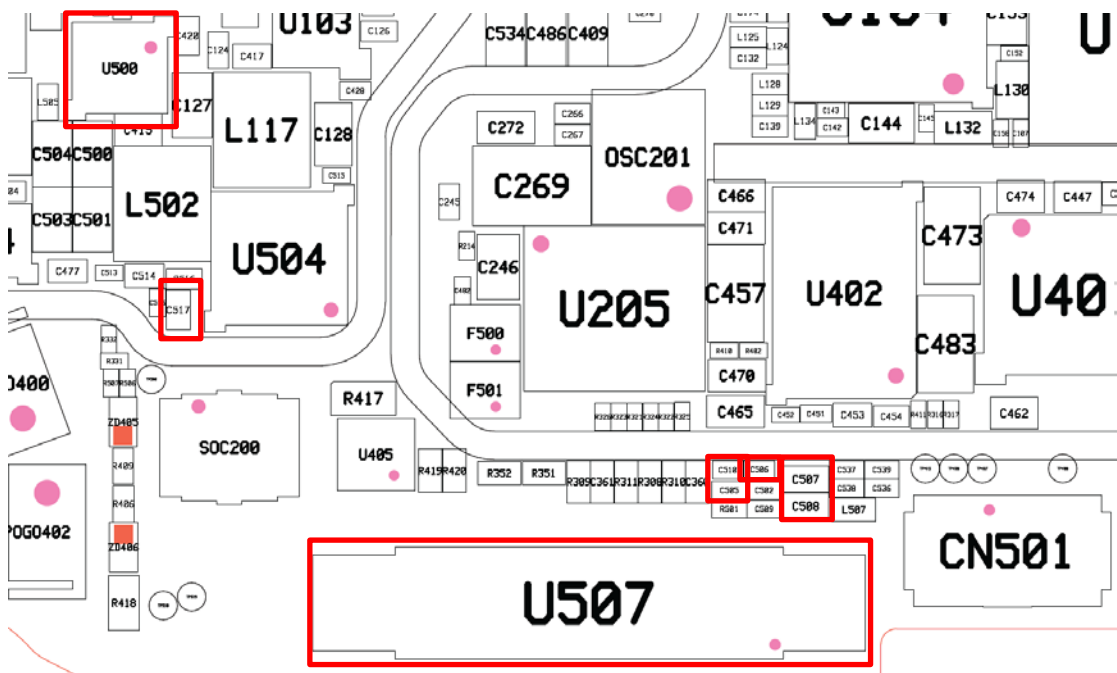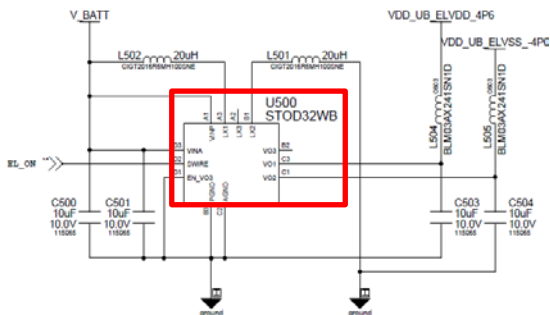
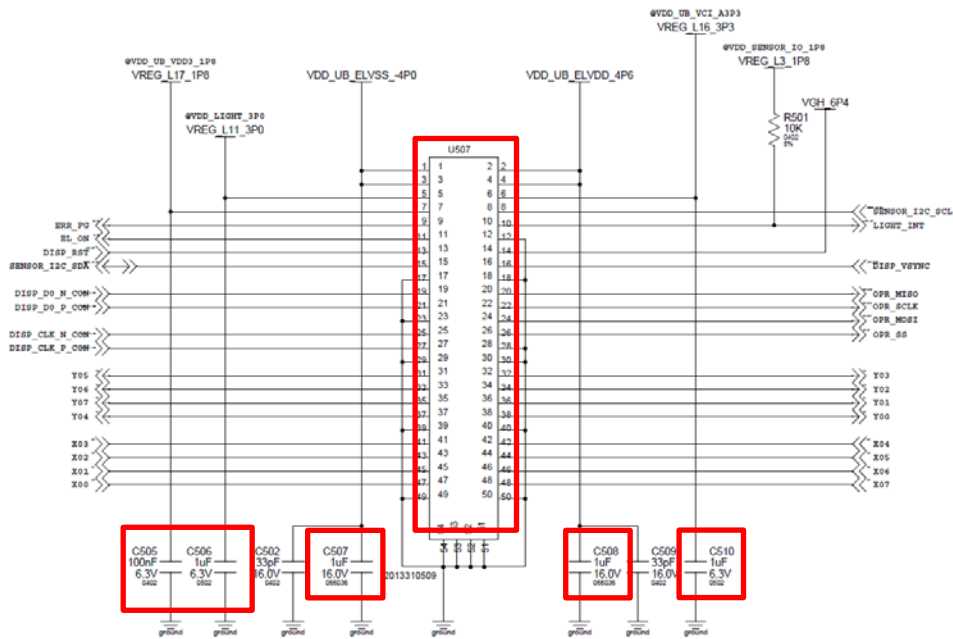


Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.


8. Level 3 Repair

8-4-7 TSP

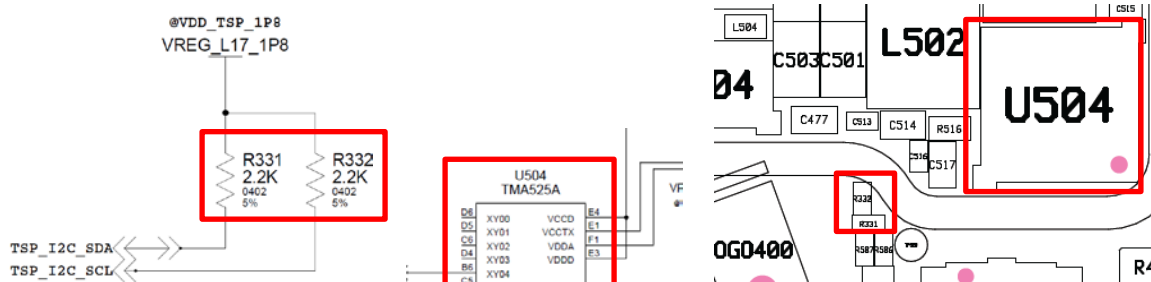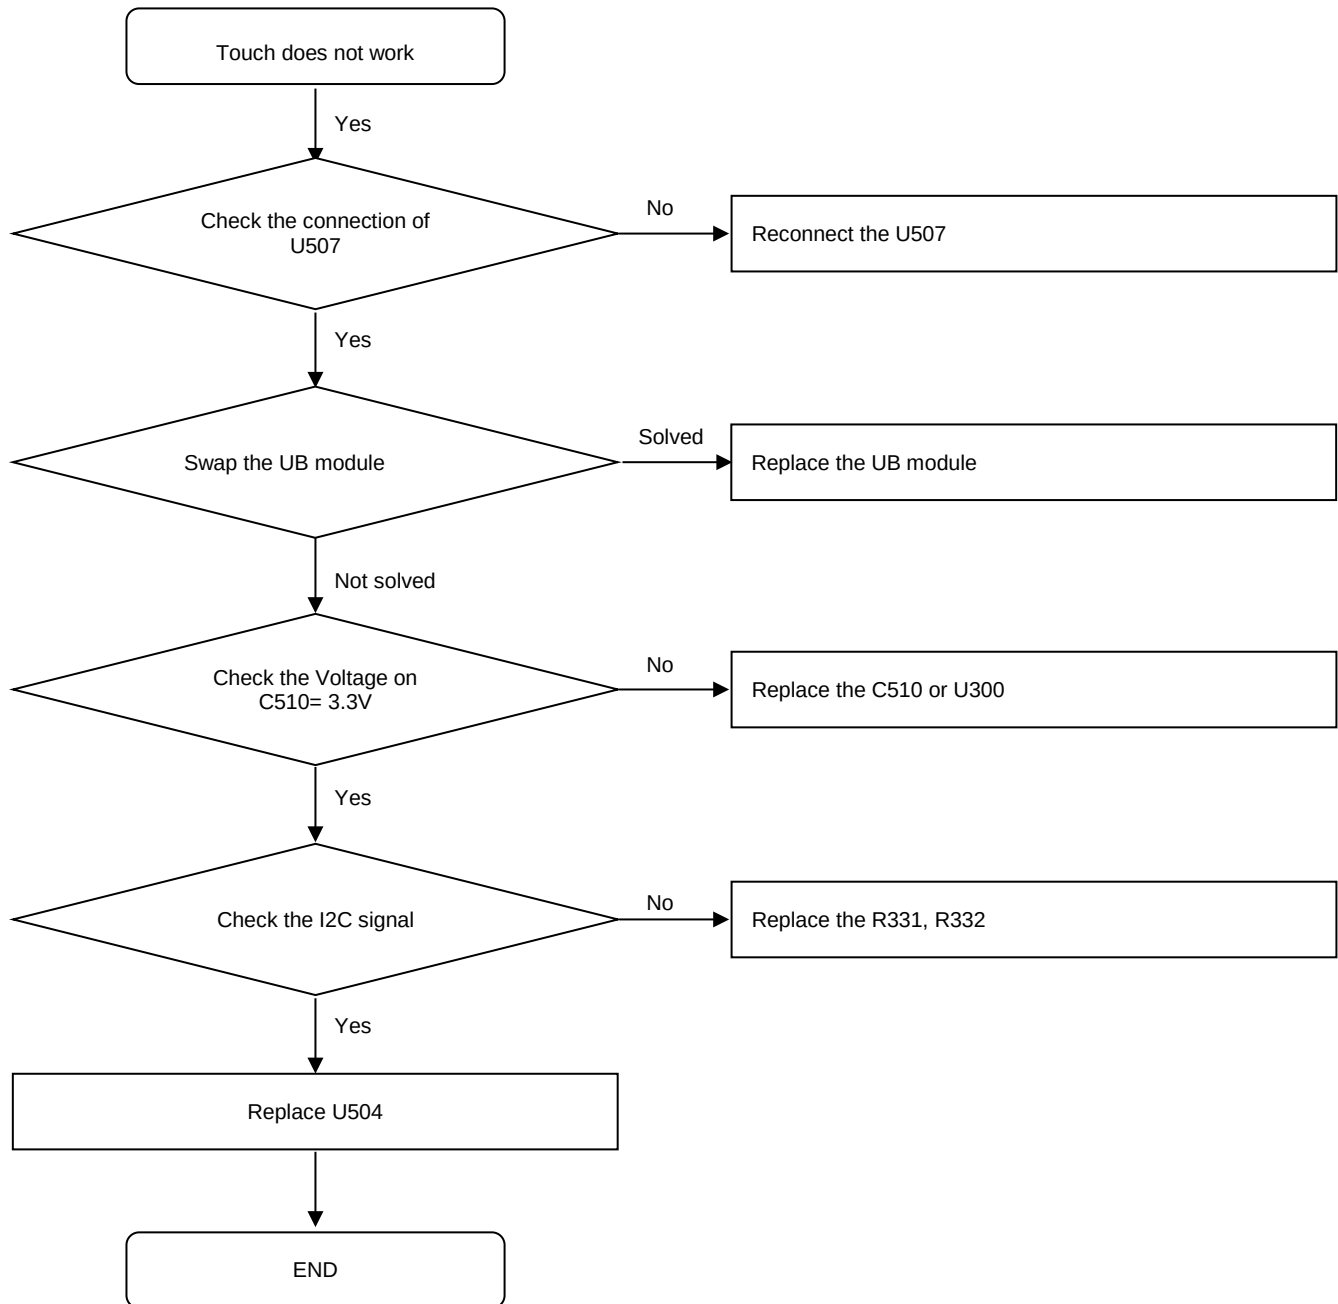


8. Level 3 Repair

8-4-8 GPS

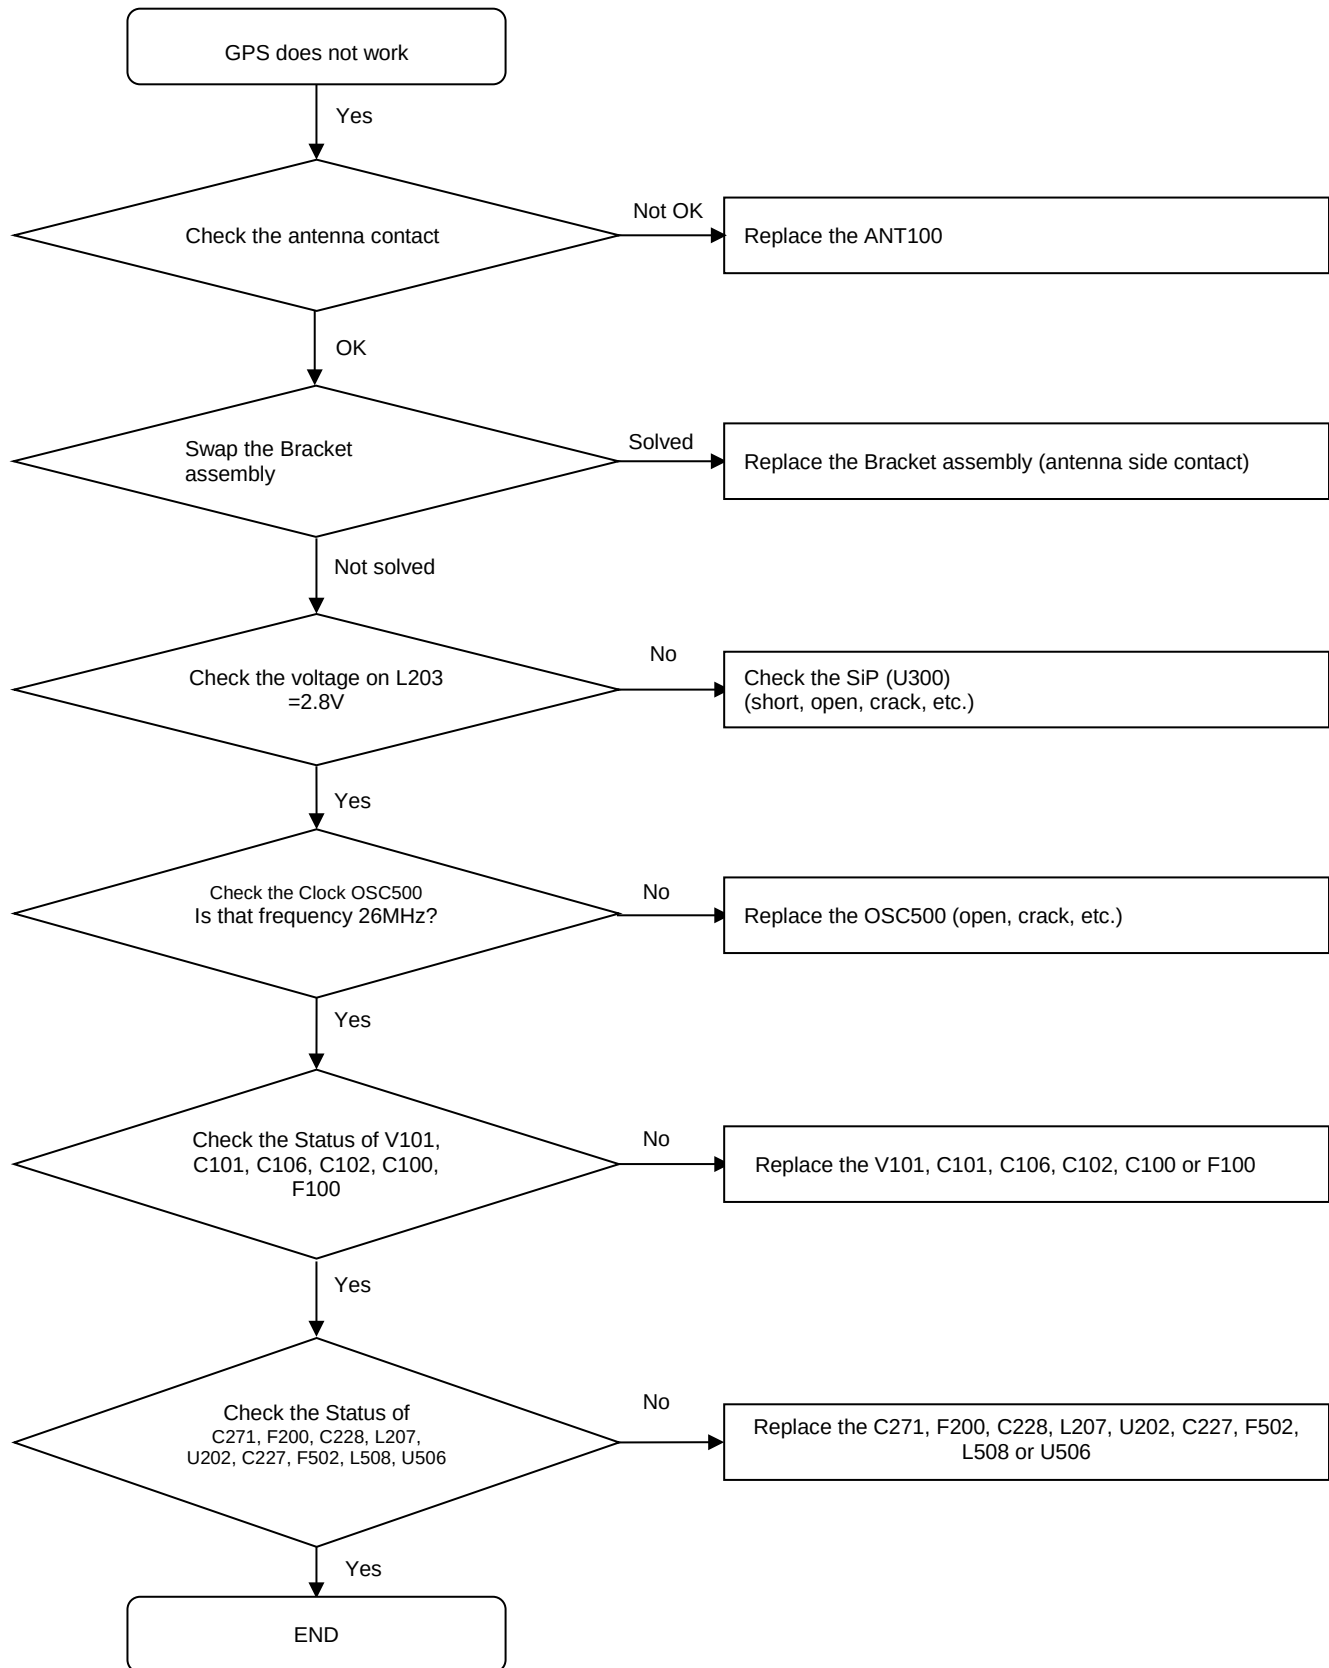


8. Level 3 Repair

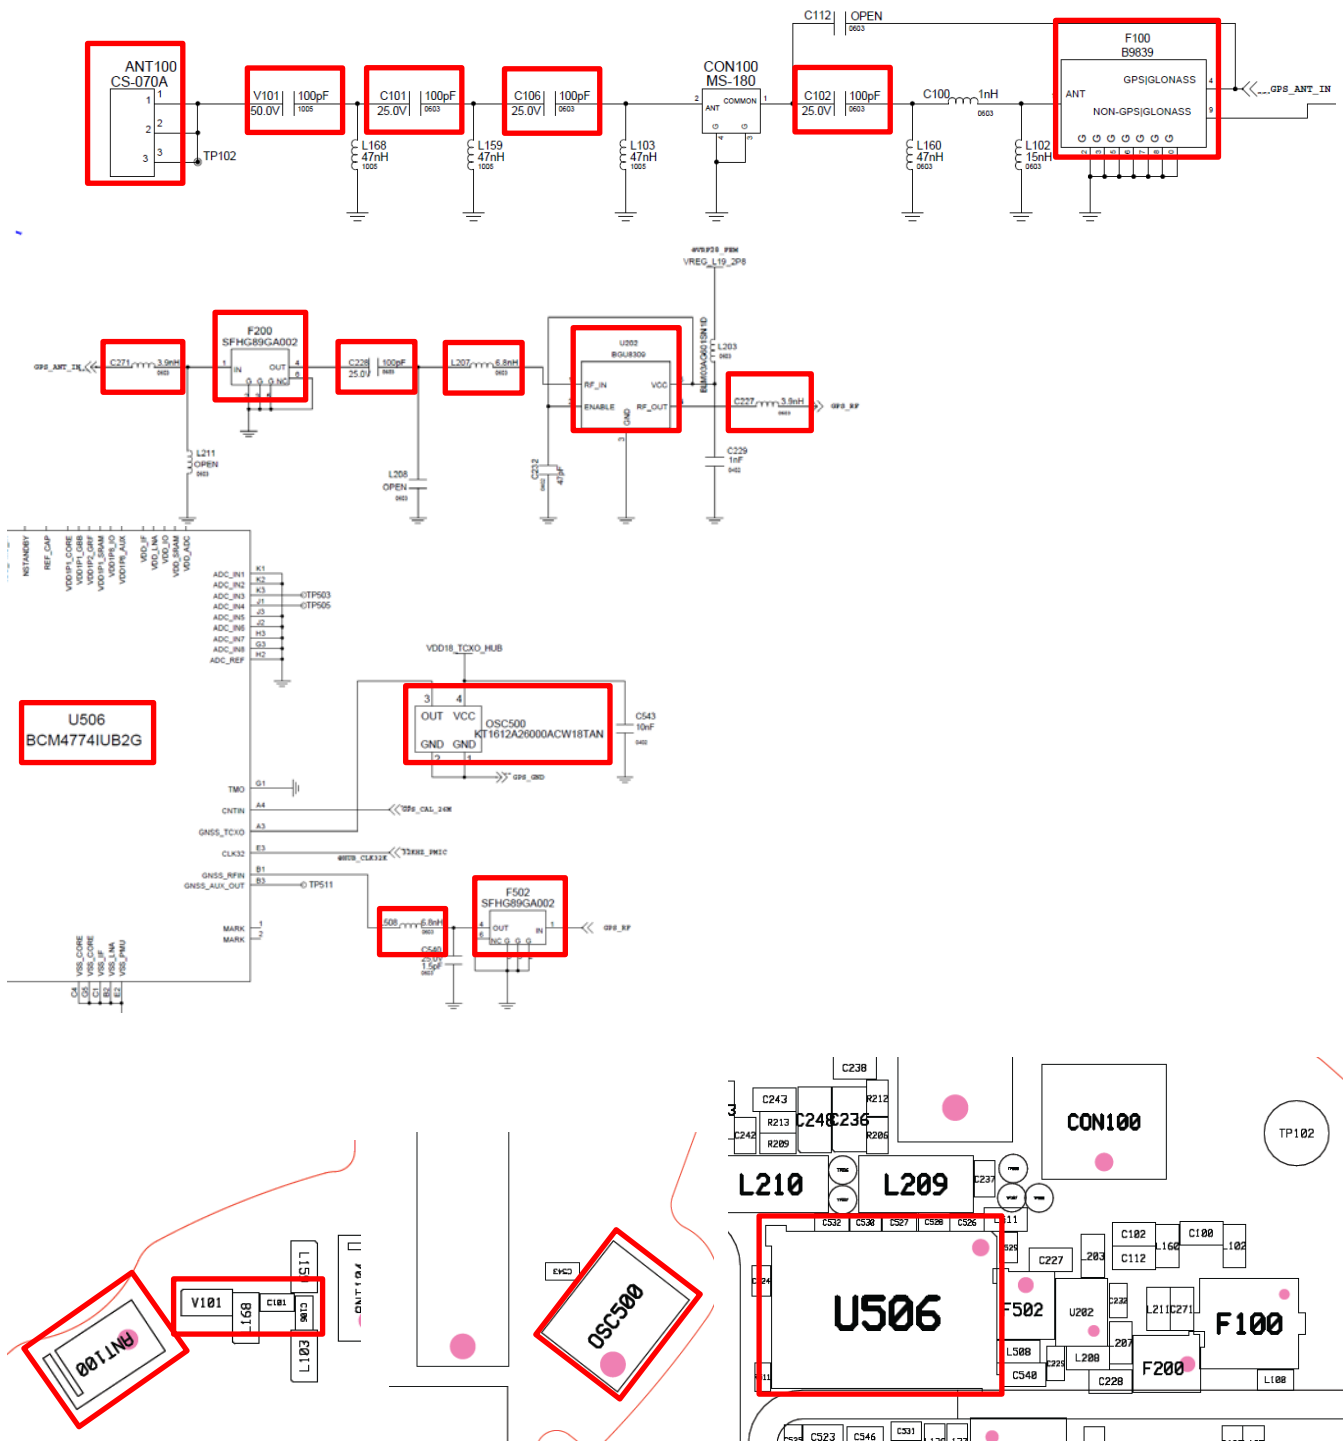


8. Level 3 Repair

8-4-9 Sensor

8-4-9-1 HRM Sensor


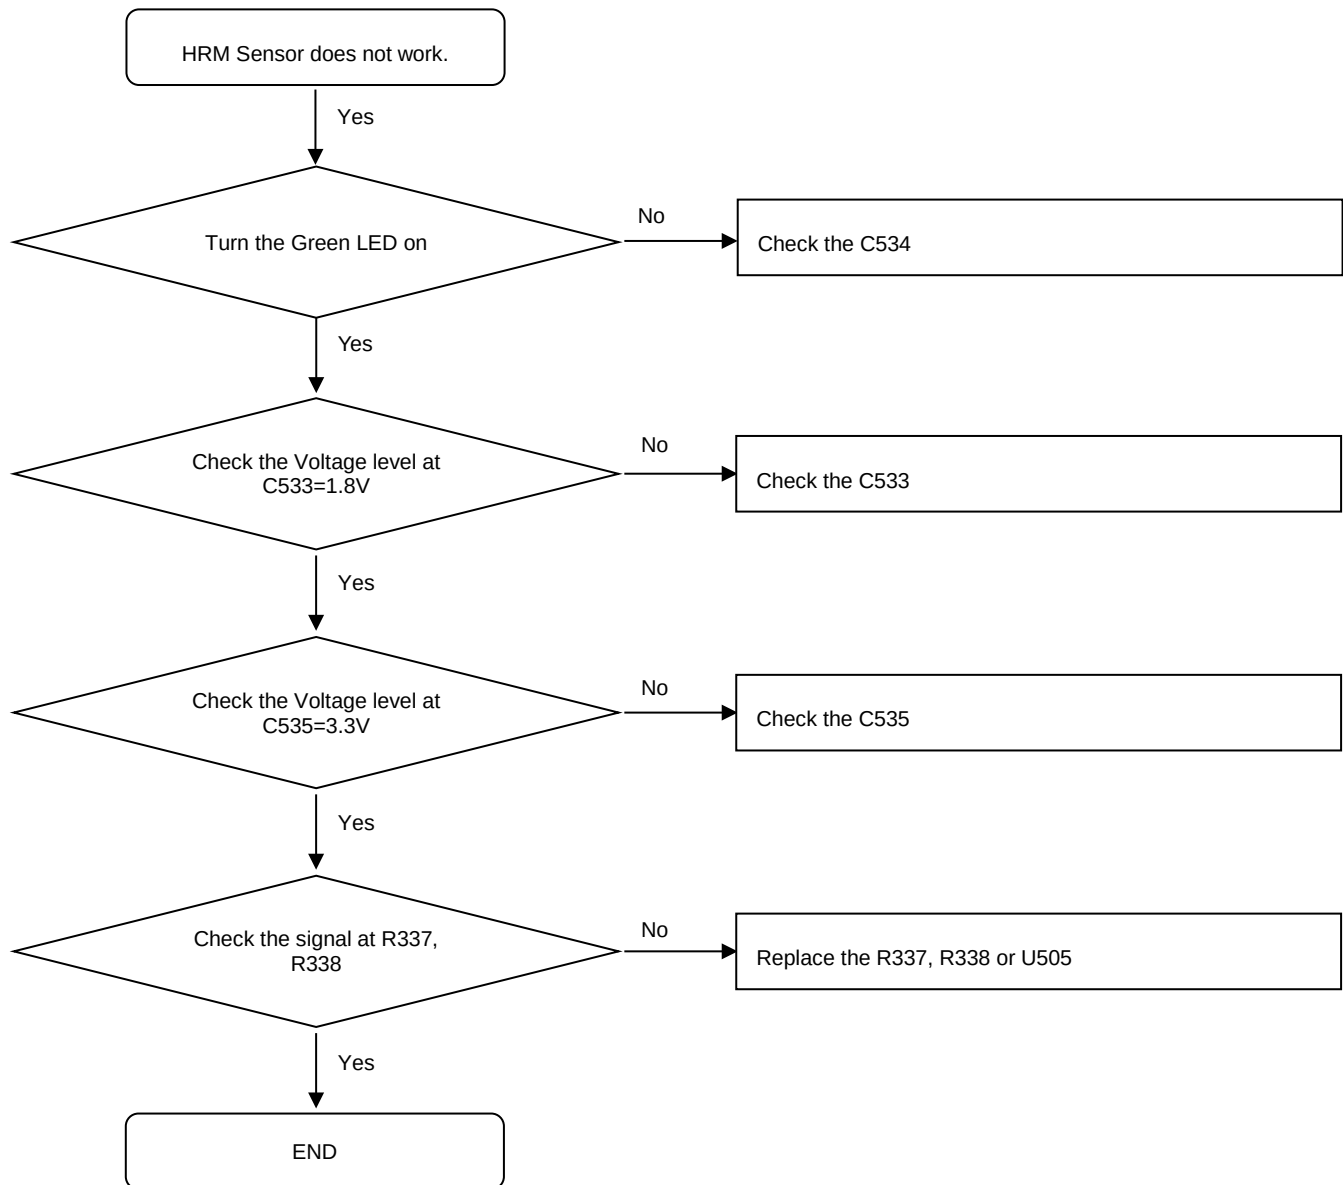


8. Level 3 Repair

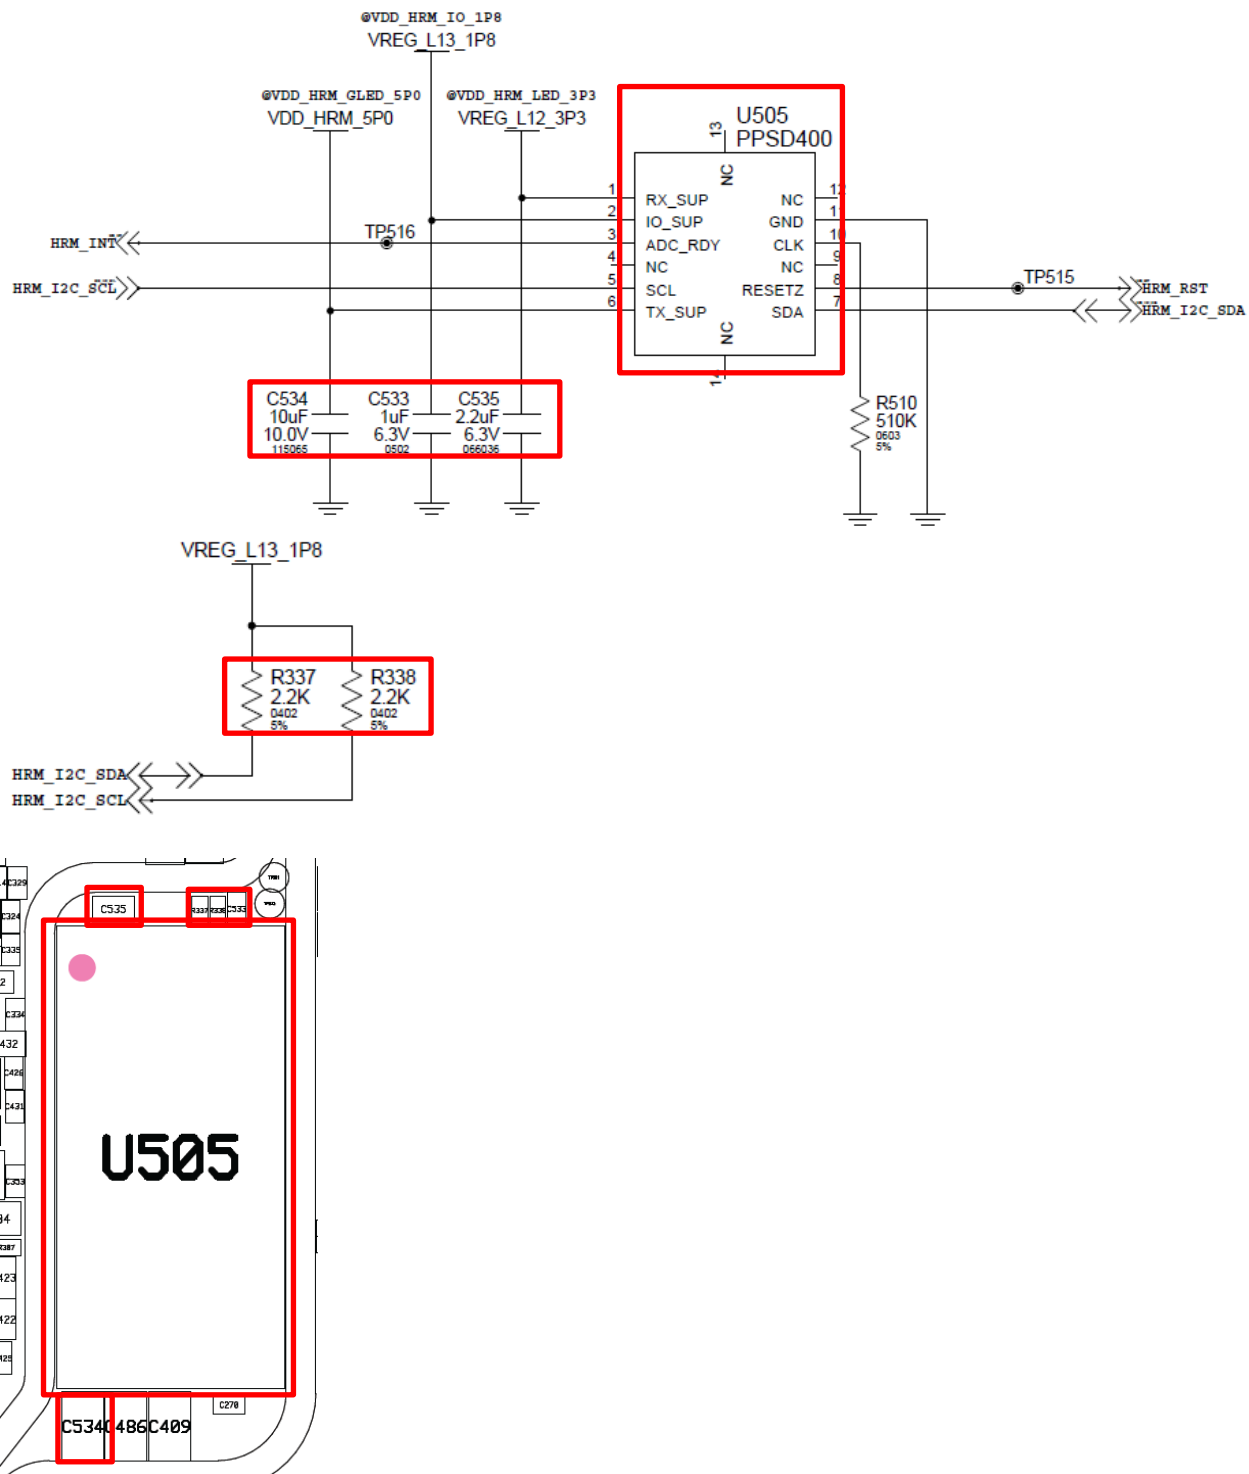



8. Level 3 Repair

8-4-9-2 6-Axis Sensor

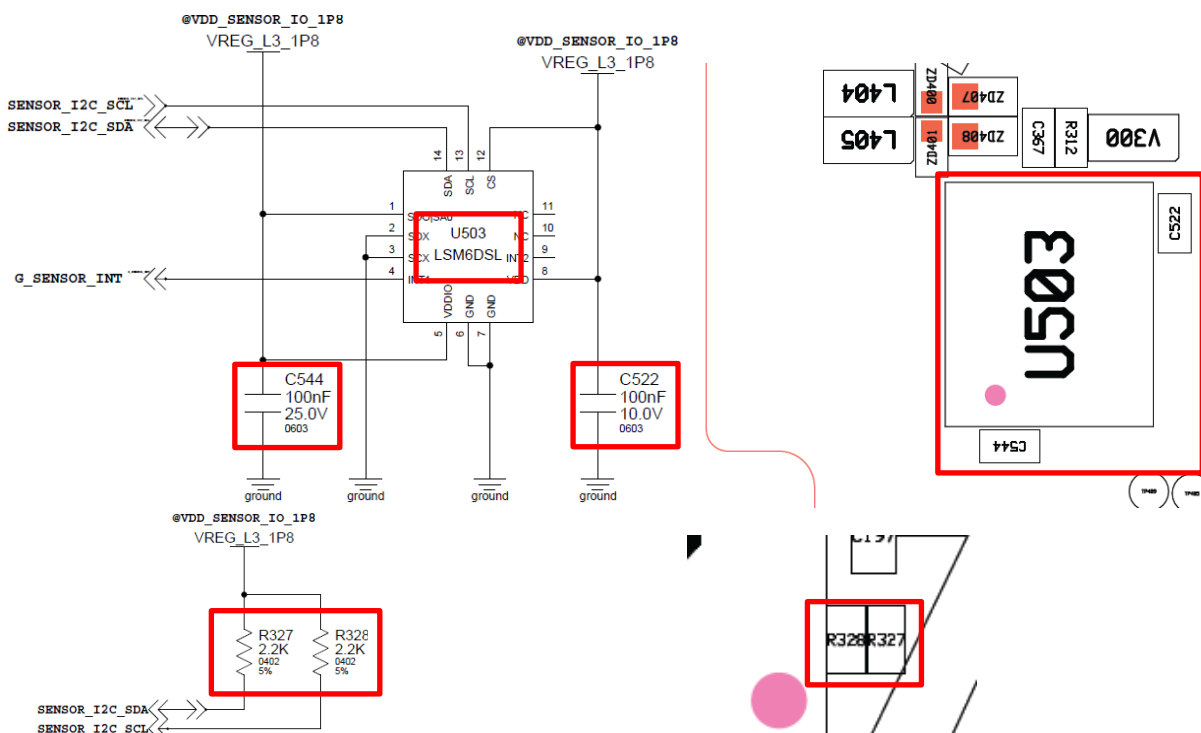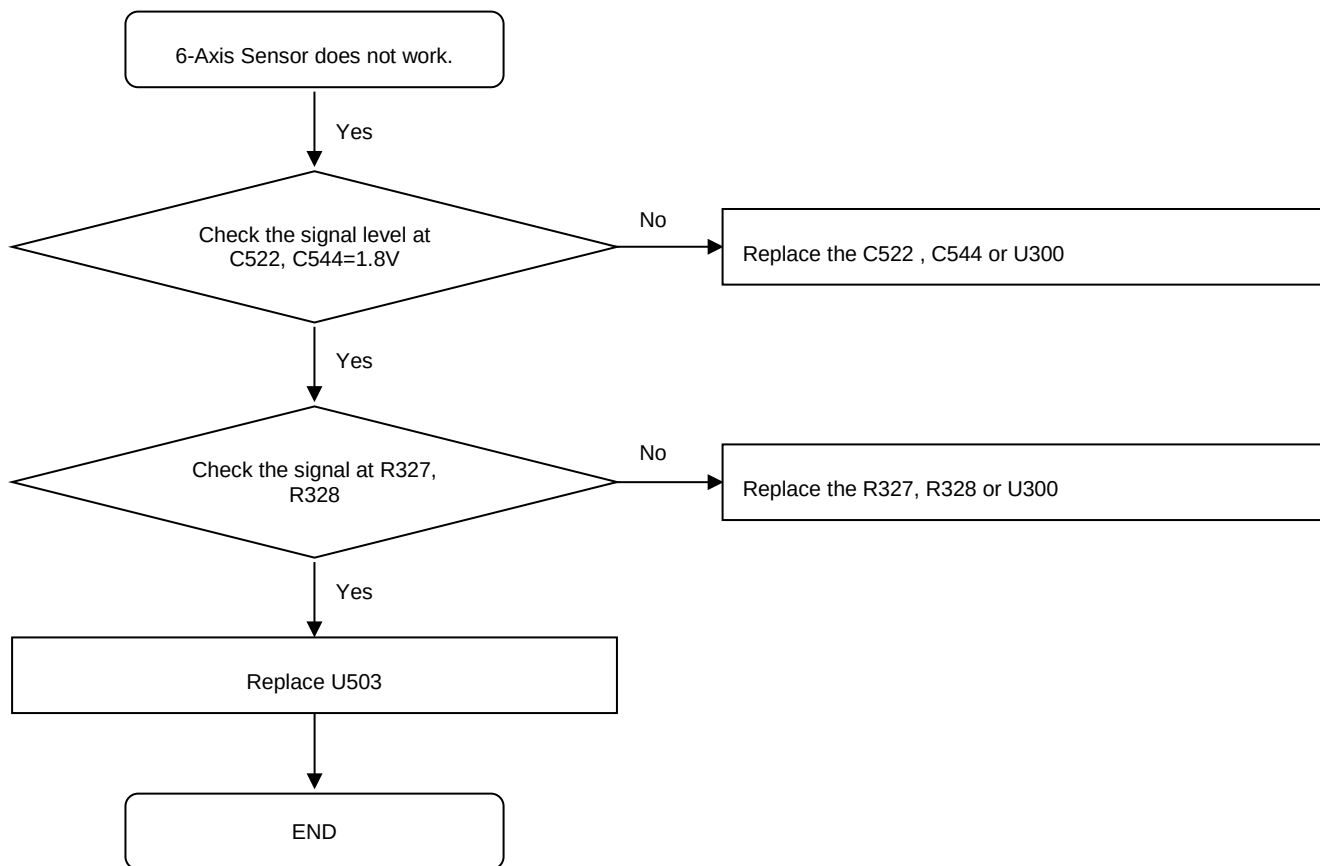


8. Level 3 Repair

8-4-9-3 Barometer

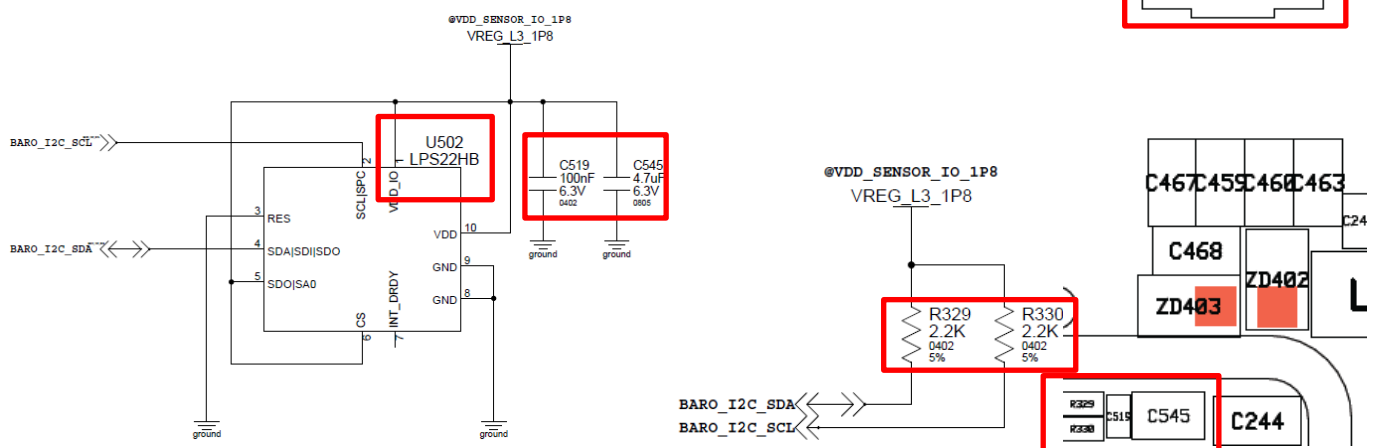
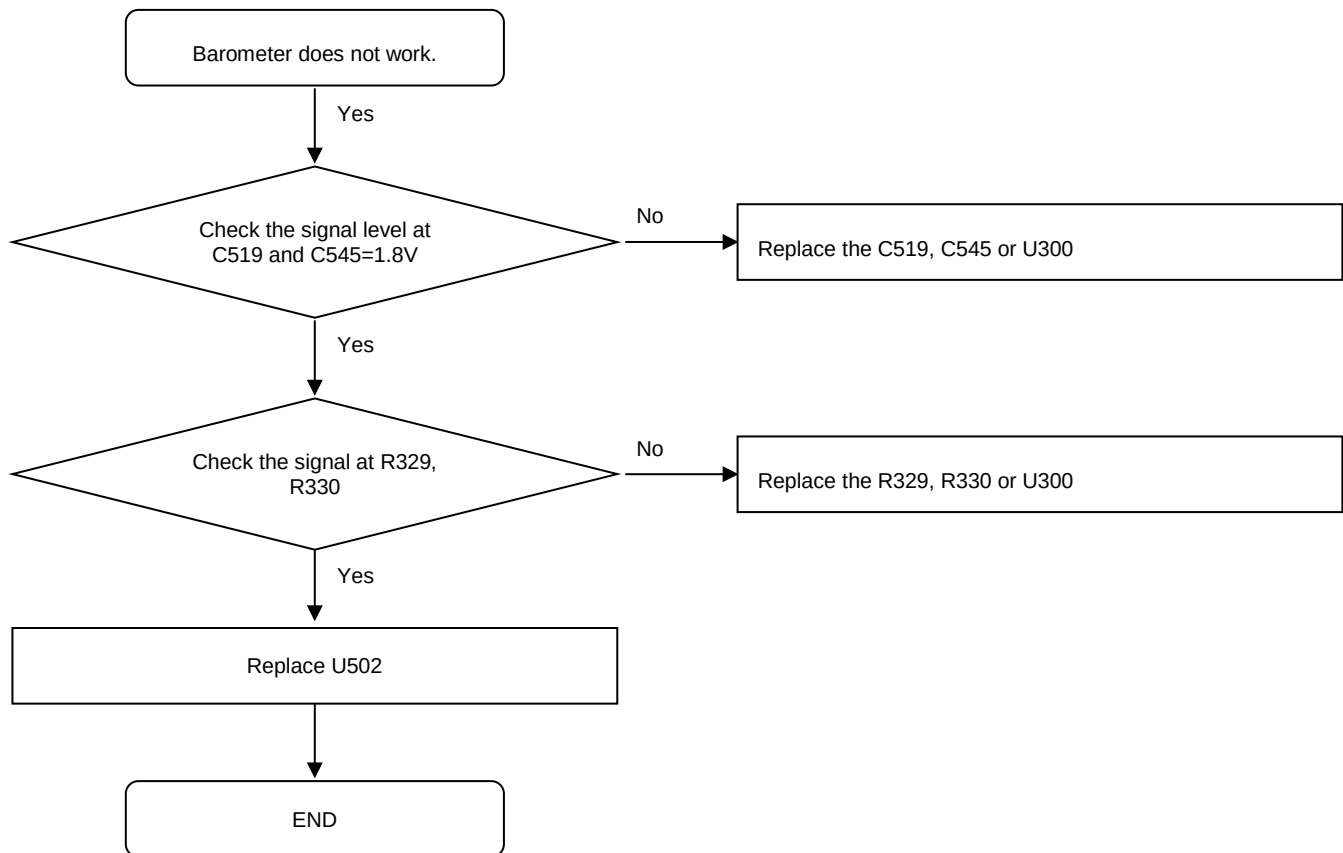


8. Level 3 Repair

8-4-10 Microphone Part

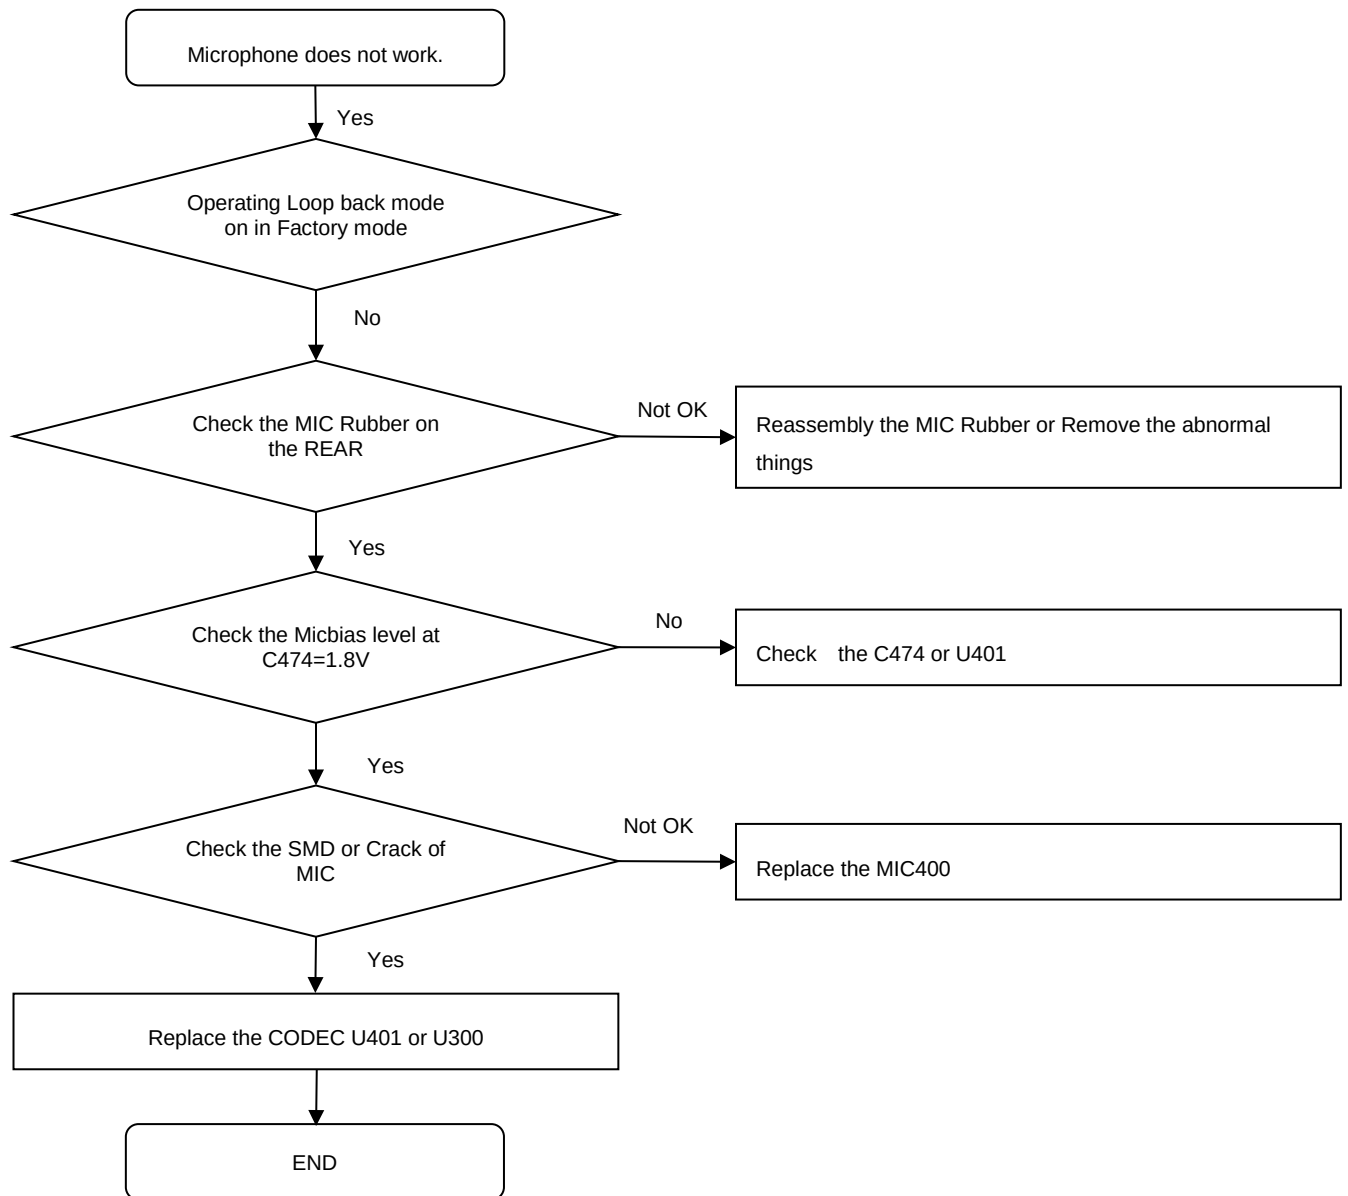


8. Level 3 Repair

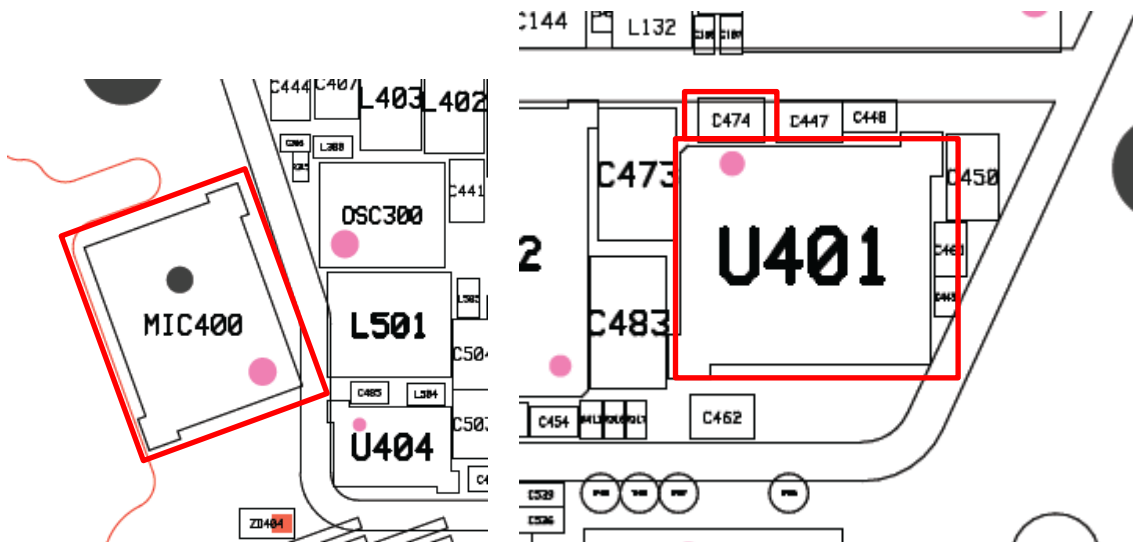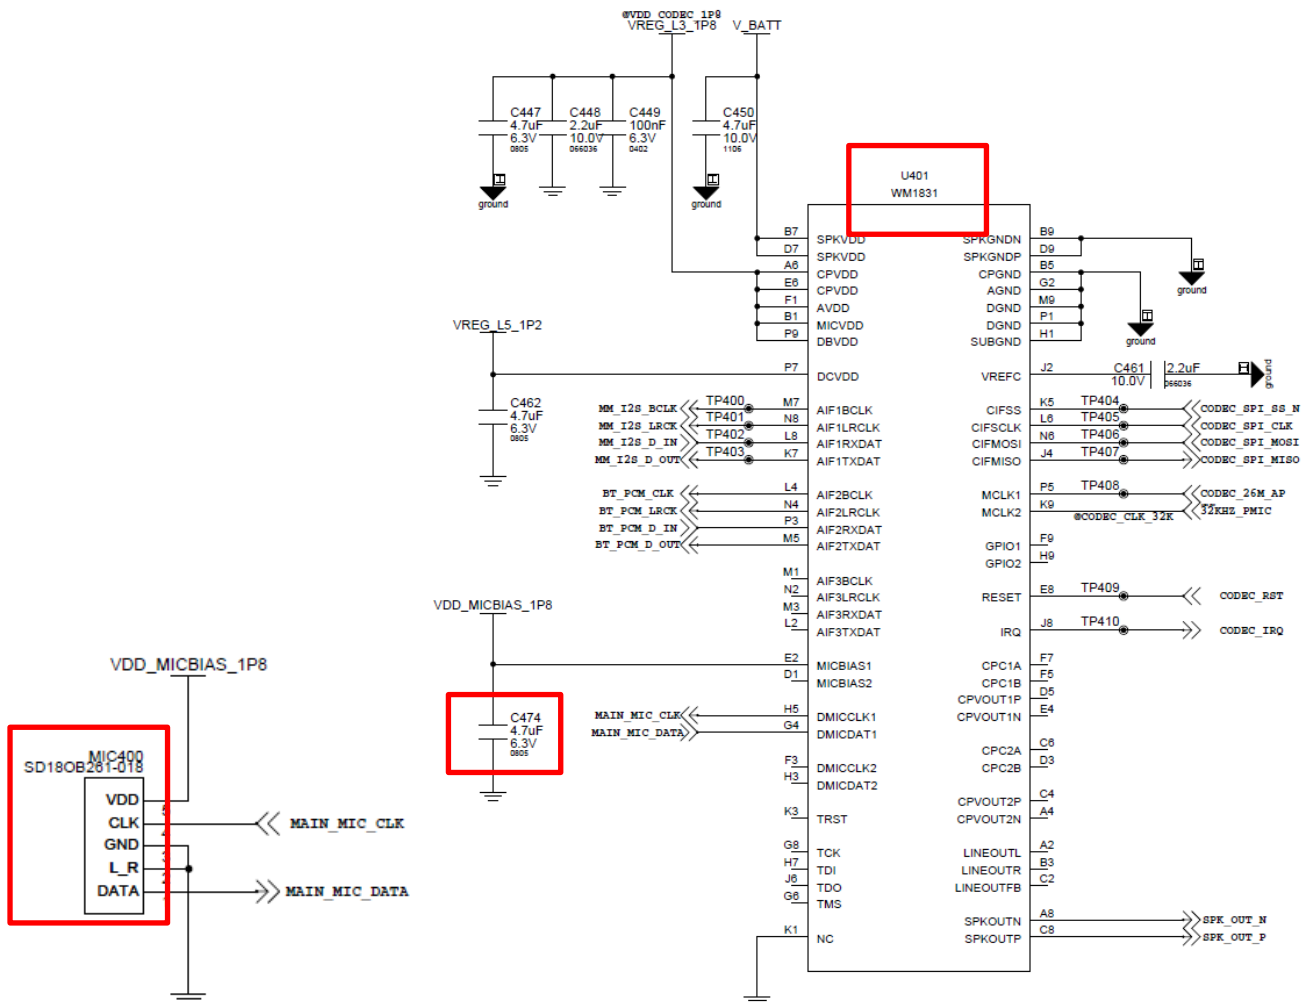


8. Level 3 Repair

8-4-11 Speaker Part

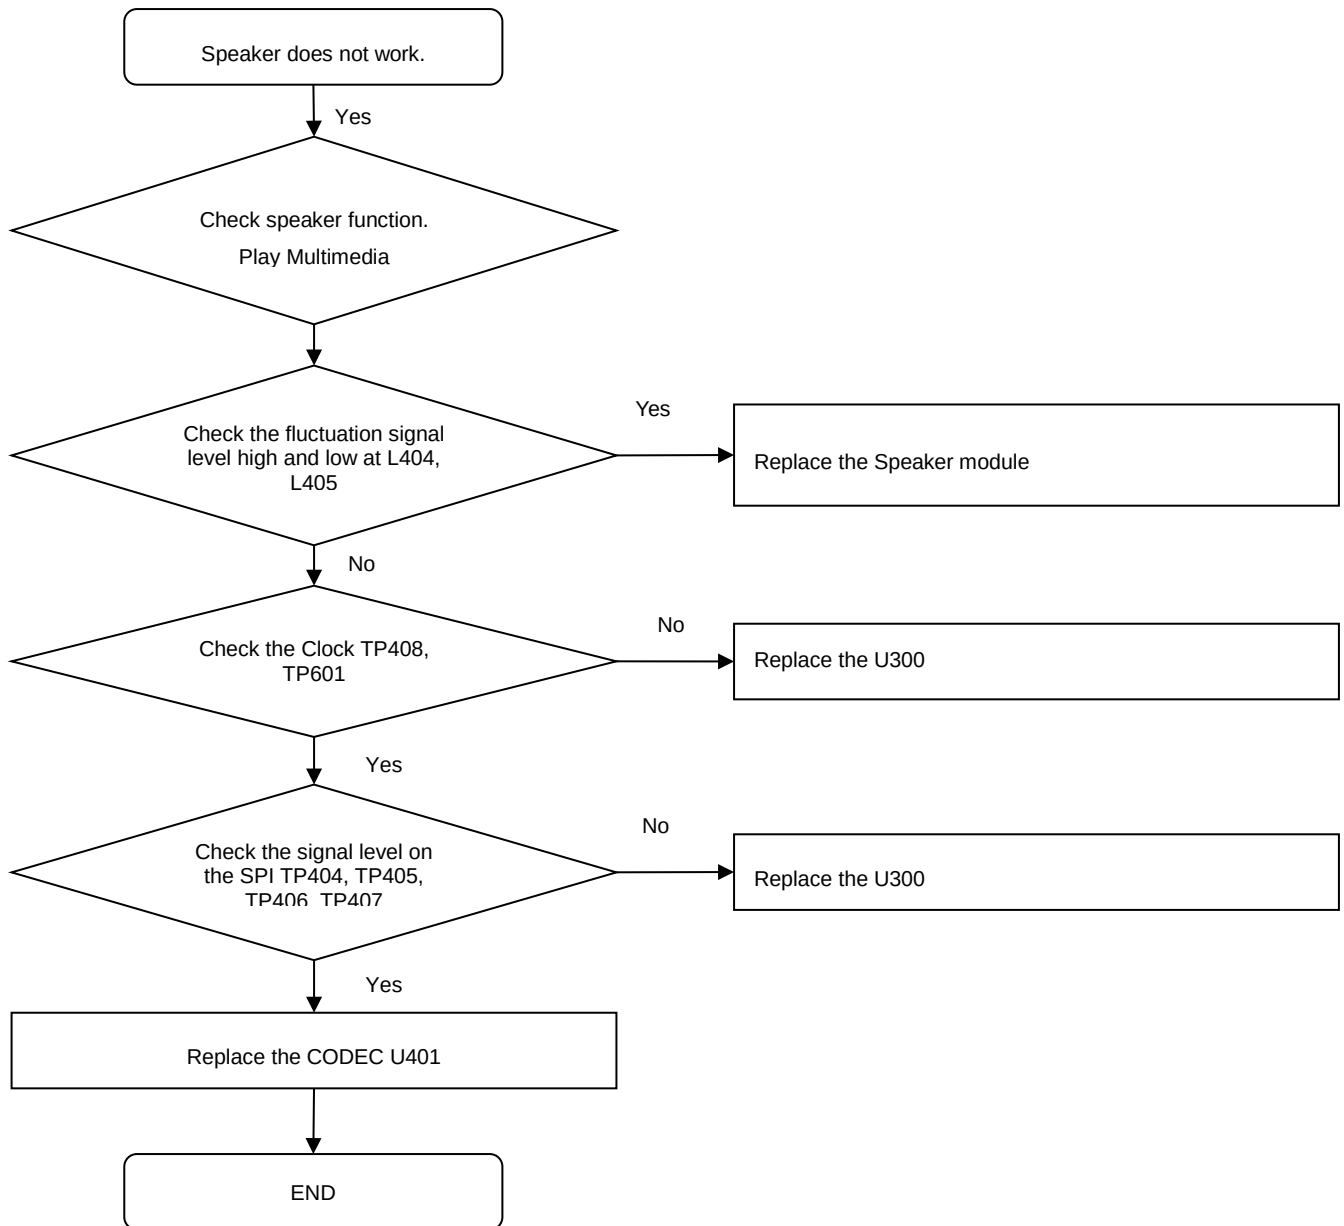

8. Level 3 Repair

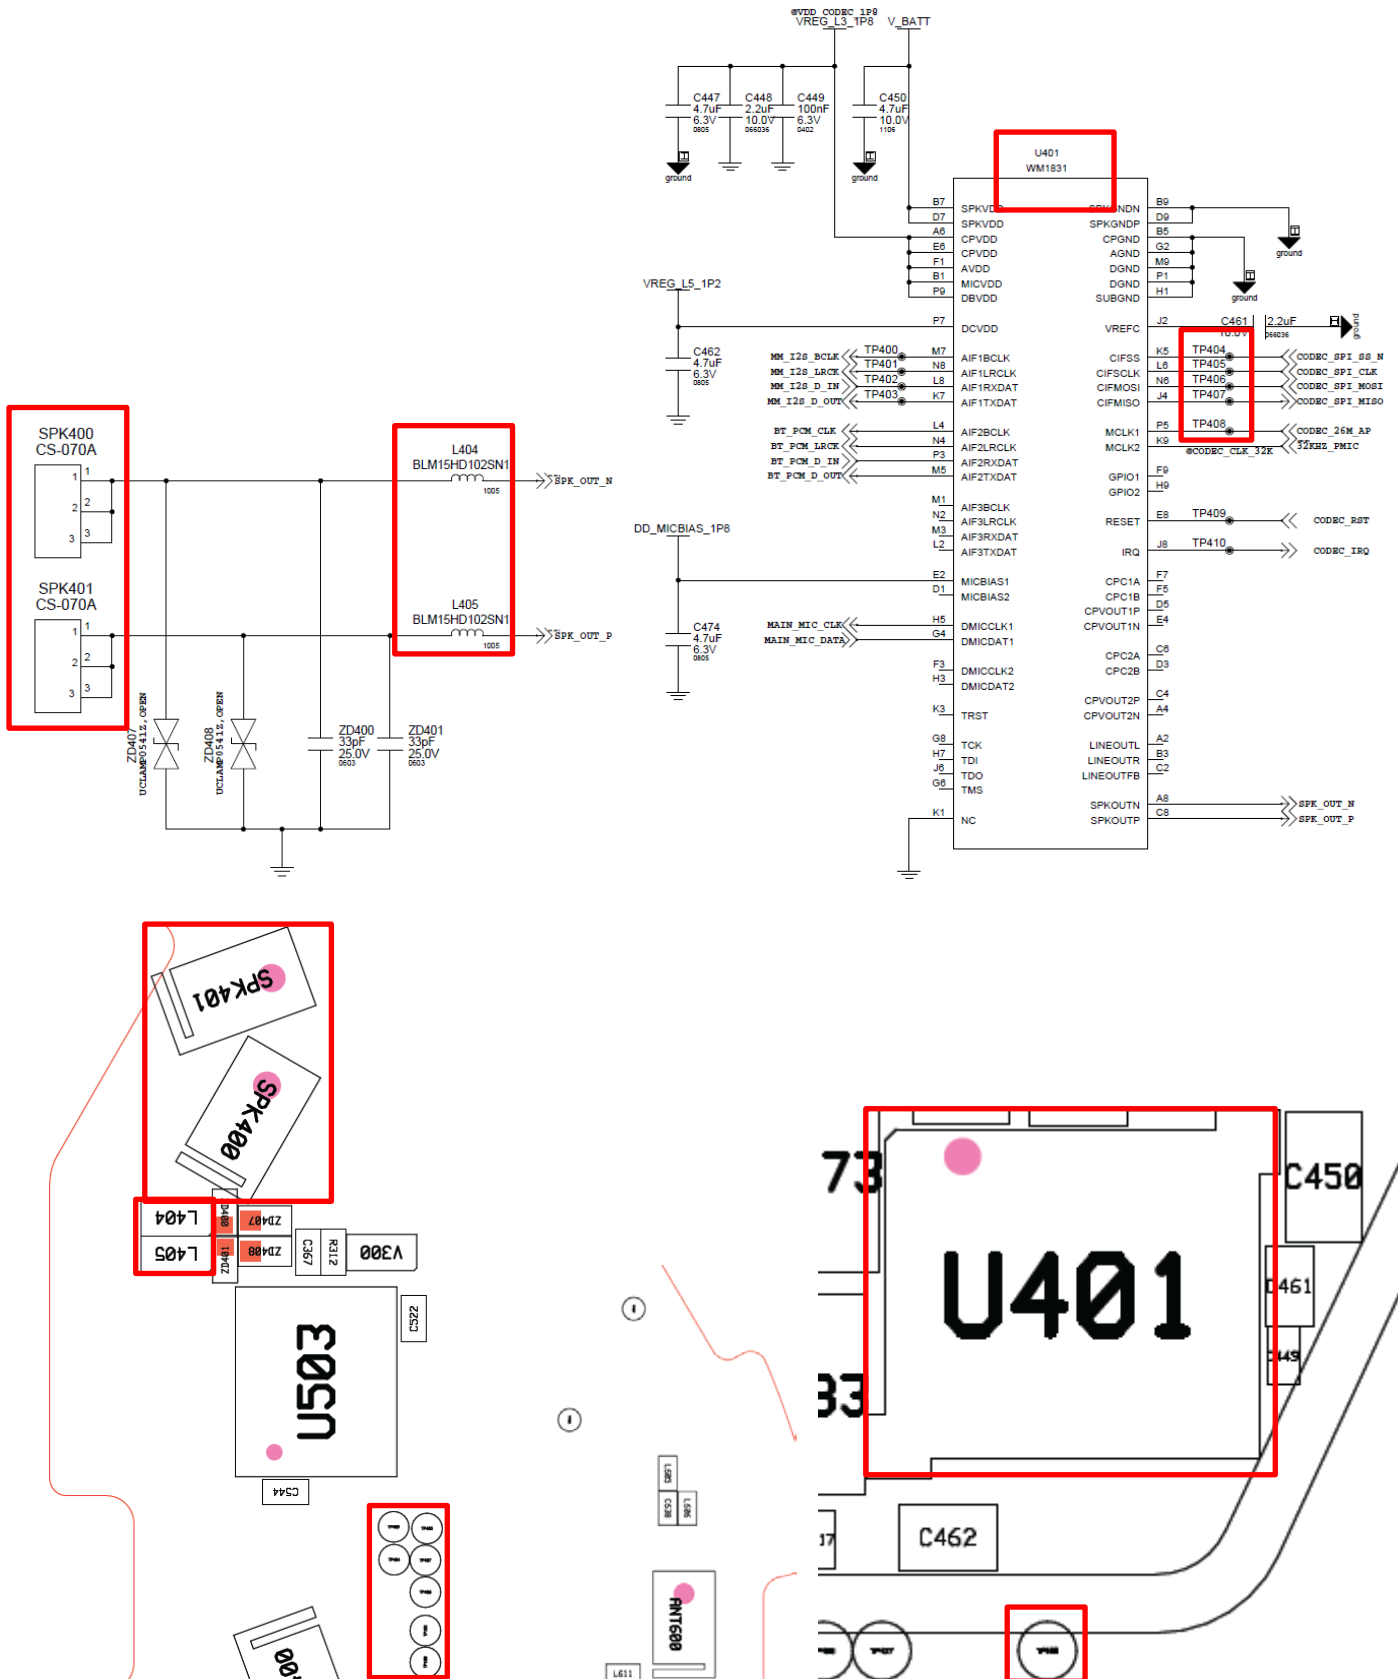


Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

8. Level 3 Repair

8-4-12 RX (W2/W4/W5_B2/B4/B5)

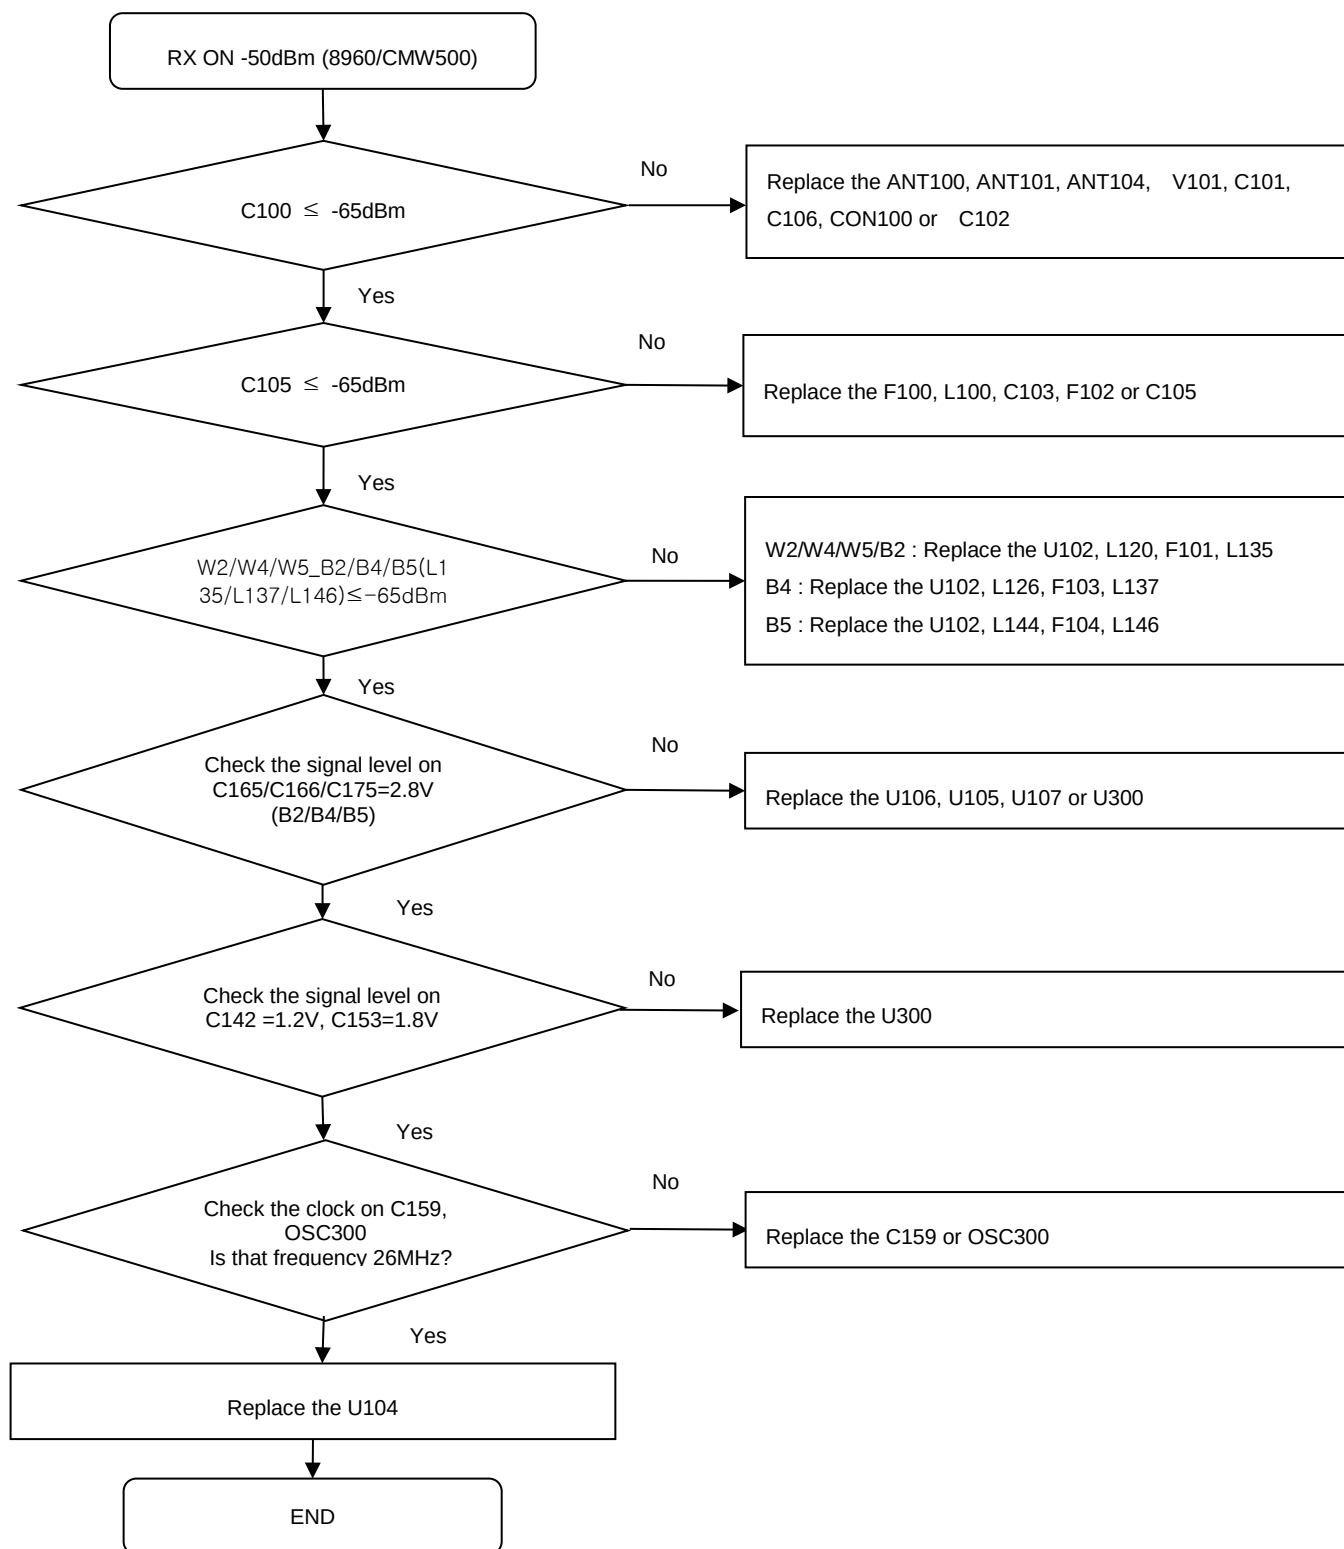

8. Level 3 Repair

8-4-13 TX (W2/W4/W5_B2/B4/B5)

