

SAMSUNG

Mobile Device


SM-C5010

SM-C5018 Common

SERVICE Manual

Mobile Device

CONTENTS

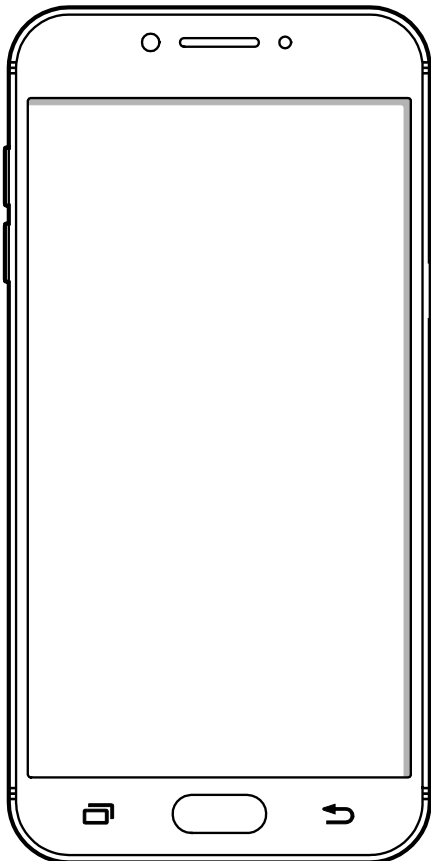


1. Safety Precautions
2. Specification
3. Product Function
4. Exploded View and Parts list
5. MAIN Electrical Parts List
6. Level 1 Repair
7. Level 2 Repair
8. Level 3 Repair
9. Reference data

Notice: All functionality, features, specifications, and other product information provided in this document, including but not limited to, benefits, design, pricing, components, performance, availability, and capabilities of the product are subject to change without notice. Samsung reserves the right to alter this document or the product described herein at anytime, without obligation to provide notification of such changes.

SAMSUNG

4. Exploded View and Parts List

4-1. Cellular phone Exploded View

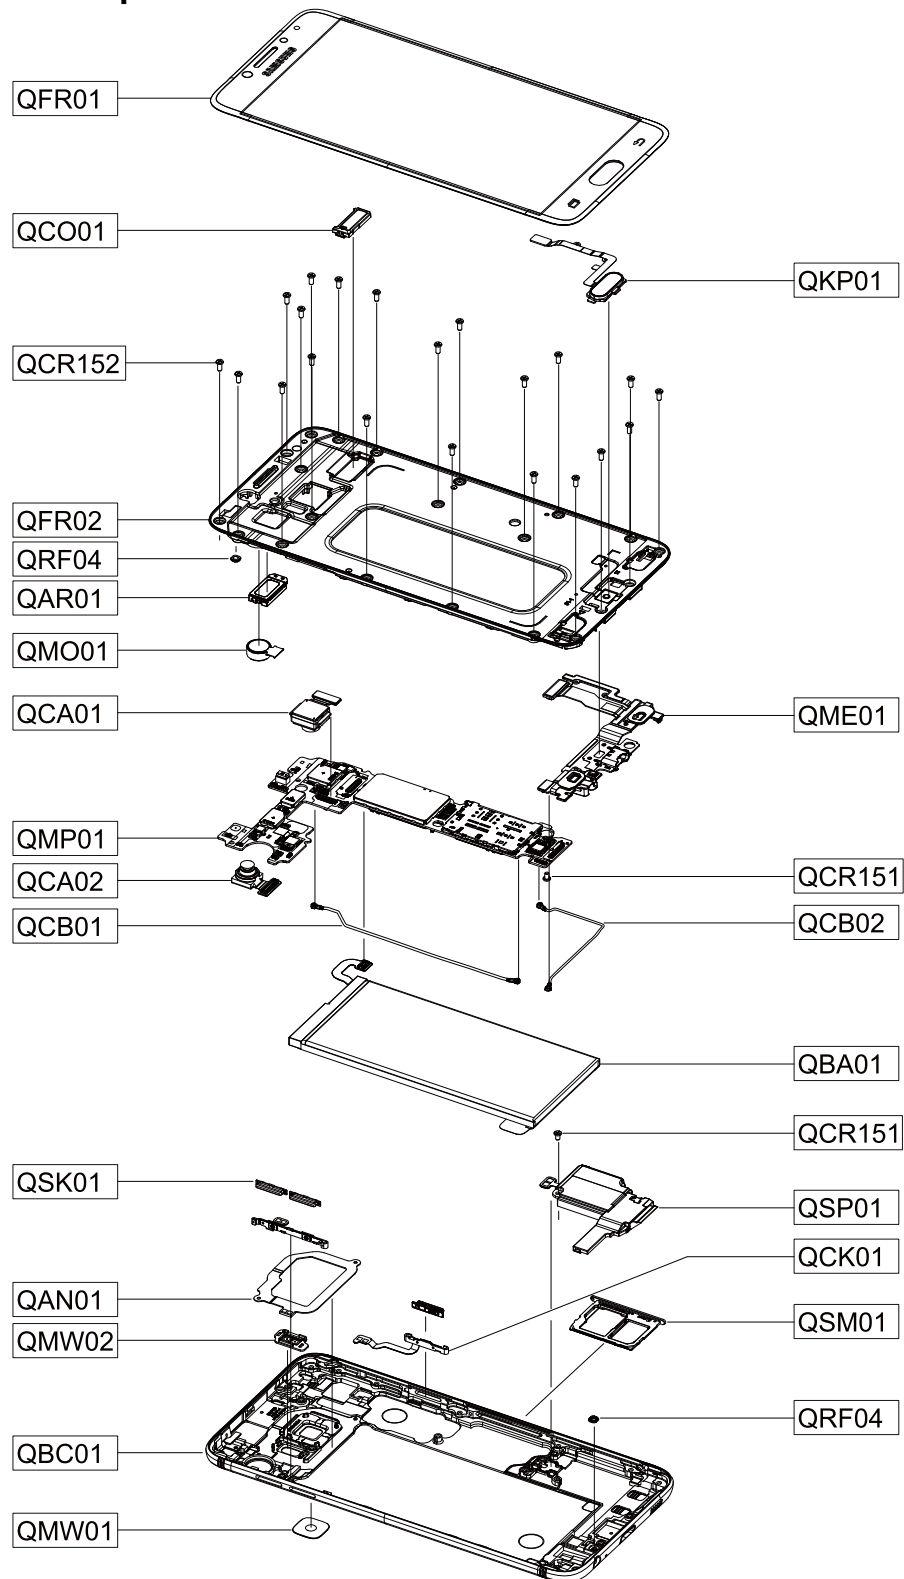

※ SVC REPAIR TAPE
QRT01, QRT02, QRT03
QRT04, QRT05, QRT06

Design LOC	Description	Material	中文品名
QAR01	AUDIO-RECEIVER	3009-001705	听筒
QCR151	SCREW-MACHINE	6001-001695	螺丝
QCR152	SCREW-MACHINE	6001-003226	螺丝
QRT05	TAPE SPONGE-HR	GH02-13916A	胶贴
QRT01	TAPE SPONGE-MAIN WINDOW TOP	GH02-13927A	主屏胶贴-上
QRT02	TAPE SPONGE-MAIN WINDOW BTM	GH02-13928A	主屏胶贴-下
QRT03	TAPE SPONGE-OCTA CU SHEET	GH02-13929A	胶贴-OCTA CU 片
QMO01	MOTOR LINEAR VIBRATION-SM_G890A	GH31-00728A	阵子 (马达)
QCB02	CBF COAXIAL CABLE-SM-C5010 67.5MM	GH39-01904A	连接线
QCB01	CBF COAXIAL CABLE-SM-C5010 85MM	GH39-01905A	连接线
QAN01	ANTENNA-NFC_SM-C5010	GH42-05912A	NFC 天线
QBA01	INCELL BATTERY PACK-EB-BC500ABE,2600MAH	GH43-04613A	电池
QCK01	KEY FPCB-POWER(SM-C5000)	GH59-14667A	按键 FPCB
QCO01	COVER-LCD CONN CAP	GH63-13875A	LCD 连接器
QMW02	WINDOW DISPLAY-FLASH	GH64-05779A	闪光灯
QMW01	WINDOW DISPLAY-CAM	GH64-06090A	摄像头保护镜面
QRT04	A/S-OCTA COVER PANEL	GH81-14410A	胶贴
QRT06	A/S-SUB PBA TAPE	GH81-14428A	副 PBA 胶贴
QMP01	SVC PBA-MAIN,SM-C5010ZDACHC	GH82-14098A	主板
QFR02	SVC CASE ASSY-FRONT(GOLD)	GH82-14099A	前壳
QRE01	A/S ASSY-REAR_C5010(ZD)_CHC	GH82-14126A	后壳
QAR01	ASSY SPEAKER-MODULE(SM-C5010)	GH96-10531A	扬声器模块
QME01	ASSY SUB PBA-SM-C5010	GH96-10542A	副 PBA
QCA01	ASSY CAMERA-MAIN_16M_1/3.1"_C5010	GH96-10596A	主摄像头
QKP01	HOME KEY ASSY-SM-C5010_GOLD	GH96-10597A	主屏幕键
QCA02	ASSY CAMERA-MODULE_VT_16M_1/3.1"_C5010	GH96-10664A	摄像头模块
QFR01	SVC LCD ASSY-OCTA,(SVC/E/GOLD),SM-C5010	GH97-20450A	LCD 屏
QRF04	ASSY RUBBER-MIC	GH98-37607A	橡胶垫-麦克
QSK01	ASSY KEY-SIDE	GH98-40776A	侧键
QSM01	ASSY DECO-SIM TRAY	GH98-41150A	卡托

5. MAIN Electrical Parts List

Parts Code	Design Loc	Description
0201-002973	-	ADHESIVE-TIM
0202-002125	R1011	SOLDER-SHORT
0202-002125	R3000	SOLDER-SHORT
0202-002125	R4055	SOLDER-SHORT
0202-002125	R4065	SOLDER-SHORT
0404-001250	D5000	DIODE-SCHOTTKY
0404-001250	D6001	DIODE-SCHOTTKY
0404-001782	D3000	DIODE-SCHOTTKY
0406-001459	D6000	DIODE-TVS
0406-001459	D6002	DIODE-TVS
0406-001459	ZD8000	DIODE-TVS
0406-001459	ZD8001	DIODE-TVS
0406-001505	D5002	DIODE-TVS
0406-001592	ZD5003	DIODE-TVS
0406-001592	ZD5004	DIODE-TVS
0406-001592	ZD5005	DIODE-TVS
0406-001592	ZD5006	DIODE-TVS
0406-001592	ZD5018	DIODE-TVS
0406-001592	ZD5019	DIODE-TVS
0406-001592	ZD5020	DIODE-TVS
0406-001592	ZD5021	DIODE-TVS
0406-001592	ZD5022	DIODE-TVS
0406-001592	ZD5023	DIODE-TVS
0406-001592	ZD6006	DIODE-TVS
0406-001592	ZD6007	DIODE-TVS
0406-001592	ZD6013	DIODE-TVS
0406-001592	ZD6020	DIODE-TVS
0406-001592	ZD7004	DIODE-TVS
0406-001592	ZD7005	DIODE-TVS
0406-001592	ZD7008	DIODE-TVS
0406-001623	ZD5017	DIODE-TVS
0406-001675	ZD5001	DIODE-TVS
0406-001682	ZD5016	DIODE-TVS
0406-001682	ZD6014	DIODE-TVS
0406-001682	ZD6015	DIODE-TVS
0406-001709	ZD6000	DIODE-TVS
0406-001709	ZD6005	DIODE-TVS
0406-001709	ZD6012	DIODE-TVS

5. MAIN Electrical Parts List

0406-001717	ZD5002	DIODE-TVS
0406-001717	ZD5007	DIODE-TVS
0406-001717	ZD5008	DIODE-TVS
0406-001717	ZD5009	DIODE-TVS
0406-001717	ZD5011	DIODE-TVS
0406-001717	ZD5012	DIODE-TVS
0406-001717	ZD5013	DIODE-TVS
0406-001717	ZD5014	DIODE-TVS
0406-001717	ZD5015	DIODE-TVS
0406-001717	ZD6008	DIODE-TVS
0406-001717	ZD6009	DIODE-TVS
0406-001717	ZD7009	DIODE-TVS
0406-001717	ZD7010	DIODE-TVS
0406-001759	ZD6018	DIODE-TVS
0406-001759	ZD6019	DIODE-TVS
0505-002088	Q5001	FET-SILICON
0505-002088	TR6000	FET-SILICON
0505-002388	Q5000	FET-SILICON
0601-001905	LED5001	LED
0601-003575	LED5000	LED
0903-002171	U7002	IC-MICROCONTROLLER
1001-001655	U5013	IC-ANALOG SWITCH
1001-001911	U1012	IC-RF SWITCH
1001-001911	U2007	IC-RF SWITCH
1001-001913	U1005	IC-RF SWITCH
1001-001992	U1007	IC-RF SWITCH
1001-001999	U2003	IC-RF SWITCH
1001-002040	U1006	IC-RF SWITCH
1003-002415	U7005	IC-MOTOR DRIVER
1108-000624	UME4000	IC-MCP
1201-003777	PAM1001	IC-POWER AMP
1201-003786	U3001	IC-GPS AMP
1201-003793	U1002	IC-IF/RF AMP
1201-003793	U1003	IC-IF/RF AMP
1201-003795	U1009	IC-IF/RF AMP
1201-004091	U1000	IC-POWER AMP
1201-004099	U8049	IC-AUDIO AMP
1203-008249	U7011	IC-POSI.FIXED REG.
1203-008250	U3009	IC-POSI.FIXED REG.

5. MAIN Electrical Parts List

1203-008250	U3010	IC-POSI.FIXED REG.
1203-008250	U7001	IC-POSI.FIXED REG.
1203-008250	U7007	IC-POSI.FIXED REG.
1203-008251	U6005	IC-POSI.FIXED REG.
1203-008251	U7004	IC-POSI.FIXED REG.
1203-008251	U7016	IC-POSI.FIXED REG.
1203-008251	U8000	IC-POSI.FIXED REG.
1203-008326	U7003	IC-POSI.FIXED REG.
1203-008379	U2013	IC-POWER SUPERVISOR
1203-008395	U6009	IC-POSI.FIXED REG.
1203-008603	U5006	IC-MULTI REG.
1203-008698	U5001	IC-BATTERY
1203-008717	U7014	IC-DC/DC CONVERTER
1203-008791	U5008	IC-POWER SUPERVISOR
1203-008819	U5000	IC-POWER SUPERVISOR
1203-008830	U6003	IC-VOL. DETECTOR
1203-008864	U7000	IC-POSI.FIXED REG.
1203-008864	U7013	IC-POSI.FIXED REG.
1205-005037	U6007	IC-COMM. CONTROLLER
1205-005106	U5012	IC-SWITCH
1205-005142	U3004	IC-WIFI
1205-005228	U1011	IC-TRANSCIEVER
1205-005652	U6002	IC-POWER DRIVER
1205-005680	U3011	IC-NFC/RFID
1205-005714	UCP4000	IC-MODEM
1205-005750	U8047	IC-CODEC
1209-002344	U7008	IC-ACCEL./GYRO SENSOR
1209-002401	U7006	IC-MAGNETIC SENSOR
1209-002474	U7009	IC-OPTICS SENSOR
1404-001664	TH4000	THERMISTOR-NTC
1404-001664	TH5001	THERMISTOR-NTC
1404-001724	TH2000	THERMISTOR-NTC
1405-001395	V1000	VARISTOR
1405-001395	V1001	VARISTOR
1405-001395	V1002	VARISTOR
1405-001395	V3000	VARISTOR
1405-001403	V2000	VARISTOR
1405-001403	V2001	VARISTOR
1405-001403	V2007	VARISTOR

5. MAIN Electrical Parts List

1405-001403	V2008	VARISTOR
1405-001403	V7001	VARISTOR
1405-001403	V7002	VARISTOR
1405-001420	V3001	VARISTOR
1405-001420	V3002	VARISTOR
2007-001284	R6001	R-CHIP
2007-001284	R6008	R-CHIP
2007-003015	R6050	R-CHIP
2007-003015	R6051	R-CHIP
2007-007107	R2000	R-CHIP
2007-007107	R4036	R-CHIP
2007-007136	R3014	R-CHIP
2007-007741	R4047	R-CHIP
2007-007741	R4048	R-CHIP
2007-007741	R4069	R-CHIP
2007-007741	R4095	R-CHIP
2007-007741	R5010	R-CHIP
2007-007741	R5017	R-CHIP
2007-007741	R5026	R-CHIP
2007-007741	R5027	R-CHIP
2007-007741	R5028	R-CHIP
2007-007741	R5035	R-CHIP
2007-007741	R6025	R-CHIP
2007-007741	R7015	R-CHIP
2007-008047	R1001	R-CHIP
2007-008047	R1002	R-CHIP
2007-008420	R4010	R-CHIP
2007-008420	R4064	R-CHIP
2007-008420	R5069	R-CHIP
2007-008420	R5098	R-CHIP
2007-008486	R5000	R-CHIP
2007-008531	R6047	R-CHIP
2007-008531	R6048	R-CHIP
2007-008766	R4003	R-CHIP
2007-008774	R5070	R-CHIP
2007-008774	R5071	R-CHIP
2007-008774	R5072	R-CHIP
2007-009111	R7020	R-CHIP
2007-009155	R5002	R-CHIP

5. MAIN Electrical Parts List

2007-009155	R5006	R-CHIP
2007-009155	R5013	R-CHIP
2007-009157	R3003	R-CHIP
2007-009157	R5012	R-CHIP
2007-009157	R5015	R-CHIP
2007-009157	R5023	R-CHIP
2007-009157	R5040	R-CHIP
2007-009157	R6019	R-CHIP
2007-009157	R6020	R-CHIP
2007-009157	R6021	R-CHIP
2007-009157	R6037	R-CHIP
2007-009157	R7002	R-CHIP
2007-009158	R5099	R-CHIP
2007-009158	R7000	R-CHIP
2007-009182	R7016	R-CHIP
2007-009201	R1000	R-CHIP
2007-009212	R3002	R-CHIP
2007-009212	R6017	R-CHIP
2007-009212	R6018	R-CHIP
2007-009212	R6029	R-CHIP
2007-009212	R6049	R-CHIP
2007-009212	R8018	R-CHIP
2007-009315	R5007	R-CHIP
2007-009315	R5008	R-CHIP
2007-009315	R5088	R-CHIP
2007-009315	R5089	R-CHIP
2007-009315	R5090	R-CHIP
2007-009315	R5091	R-CHIP
2007-009315	R5092	R-CHIP
2007-009315	R5093	R-CHIP
2007-009315	R5094	R-CHIP
2007-009315	R5095	R-CHIP
2007-009352	R4028	R-CHIP
2007-009352	R4070	R-CHIP
2007-009352	R6012	R-CHIP
2007-009352	R7010	R-CHIP
2007-009352	R7013	R-CHIP
2007-009408	R4006	R-CHIP
2007-009408	R4011	R-CHIP

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

5. MAIN Electrical Parts List

2007-009408	R4012	R-CHIP
2007-009408	R4014	R-CHIP
2007-009408	R4015	R-CHIP
2007-009408	R4016	R-CHIP
2007-009408	R4017	R-CHIP
2007-009408	R4018	R-CHIP
2007-009408	R4019	R-CHIP
2007-009408	R4020	R-CHIP
2007-009408	R4021	R-CHIP
2007-009408	R4026	R-CHIP
2007-009408	R4027	R-CHIP
2007-009408	R4029	R-CHIP
2007-009408	R4030	R-CHIP
2007-009408	R4033	R-CHIP
2007-009408	R4034	R-CHIP
2007-009408	R4040	R-CHIP
2007-009408	R7006	R-CHIP
2007-009408	R7009	R-CHIP
2007-009408	R7011	R-CHIP
2007-009408	R7012	R-CHIP
2007-009410	R1005	R-CHIP
2007-009766	R5081	R-CHIP
2007-009805	R1004	R-CHIP
2007-009805	R3004	R-CHIP
2007-009920	R4013	R-CHIP
2007-009920	R4066	R-CHIP
2007-009920	R4067	R-CHIP
2007-009924	R8001	R-CHIP
2007-009969	R8019	R-CHIP
2007-010029	R6009	R-CHIP
2007-010029	R6026	R-CHIP
2007-010202	R5016	R-CHIP
2007-010202	R6022	R-CHIP
2007-010233	R4038	R-CHIP
2007-010685	R6002	R-CHIP
2007-010685	R8000	R-CHIP
2007-010685	R8006	R-CHIP
2007-010856	R5034	R-CHIP
2007-011763	R4063	R-CHIP

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

5. MAIN Electrical Parts List

2203-000233	C3083	C-CER,CHIP
2203-000233	C3089	C-CER,CHIP
2203-000725	C7034	C-CER,CHIP
2203-000854	C6005	C-CER,CHIP
2203-001239	C3085	C-CER,CHIP
2203-001239	C3086	C-CER,CHIP
2203-003054	C2002	C-CER,CHIP
2203-005288	C3002	C-CER,CHIP
2203-005344	C5113	C-CER,CHIP
2203-005682	C1007	C-CER,CHIP
2203-005682	C1017	C-CER,CHIP
2203-005682	C1018	C-CER,CHIP
2203-005682	C1020	C-CER,CHIP
2203-005682	C1029	C-CER,CHIP
2203-005682	C1054	C-CER,CHIP
2203-005682	C1057	C-CER,CHIP
2203-005682	C1076	C-CER,CHIP
2203-005682	C1092	C-CER,CHIP
2203-005682	C1124	C-CER,CHIP
2203-005682	C1226	C-CER,CHIP
2203-005682	C1344	C-CER,CHIP
2203-005682	C2005	C-CER,CHIP
2203-005682	C2024	C-CER,CHIP
2203-005682	C2028	C-CER,CHIP
2203-005682	C2031	C-CER,CHIP
2203-005682	C2032	C-CER,CHIP
2203-005682	C2039	C-CER,CHIP
2203-005682	C2040	C-CER,CHIP
2203-005682	C2043	C-CER,CHIP
2203-005682	C2044	C-CER,CHIP
2203-005682	C3040	C-CER,CHIP
2203-005682	C3054	C-CER,CHIP
2203-005682	C3082	C-CER,CHIP
2203-005682	C3091	C-CER,CHIP
2203-005682	C5064	C-CER,CHIP
2203-005682	C5092	C-CER,CHIP
2203-005682	C5118	C-CER,CHIP
2203-005682	C6085	C-CER,CHIP
2203-005682	C6086	C-CER,CHIP

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

5. MAIN Electrical Parts List

2203-005682	C7158	C-CER,CHIP
2203-005682	C7159	C-CER,CHIP
2203-005682	C7163	C-CER,CHIP
2203-005682	C7170	C-CER,CHIP
2203-005682	C7171	C-CER,CHIP
2203-005719	C1033	C-CER,CHIP
2203-005719	C1034	C-CER,CHIP
2203-005719	C1041	C-CER,CHIP
2203-005719	C1354	C-CER,CHIP
2203-005719	C2070	C-CER,CHIP
2203-005725	C1011	C-CER,CHIP
2203-005725	C1055	C-CER,CHIP
2203-005725	C1221	C-CER,CHIP
2203-005725	C1223	C-CER,CHIP
2203-005725	C1229	C-CER,CHIP
2203-005725	C1338	C-CER,CHIP
2203-005725	C5110	C-CER,CHIP
2203-005725	C5111	C-CER,CHIP
2203-005727	C1021	C-CER,CHIP
2203-005729	C1030	C-CER,CHIP
2203-005731	C3025	C-CER,CHIP
2203-005731	C3033	C-CER,CHIP
2203-005731	C3034	C-CER,CHIP
2203-005731	C6063	C-CER,CHIP
2203-005731	C6064	C-CER,CHIP
2203-005731	C6089	C-CER,CHIP
2203-005731	C6090	C-CER,CHIP
2203-005731	C7029	C-CER,CHIP
2203-005732	C6059	C-CER,CHIP
2203-005732	C6062	C-CER,CHIP
2203-005732	C8003	C-CER,CHIP
2203-005732	C8011	C-CER,CHIP
2203-005732	C8025	C-CER,CHIP
2203-005732	C8037	C-CER,CHIP
2203-005732	C8043	C-CER,CHIP
2203-005732	C8049	C-CER,CHIP
2203-005732	C8067	C-CER,CHIP
2203-005734	C6070	C-CER,CHIP
2203-005734	C6071	C-CER,CHIP

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

5. MAIN Electrical Parts List

2203-005734	C6087	C-CER,CHIP
2203-005736	C1004	C-CER,CHIP
2203-005736	C1005	C-CER,CHIP
2203-005736	C1009	C-CER,CHIP
2203-005736	C1010	C-CER,CHIP
2203-005736	C1024	C-CER,CHIP
2203-005736	C1062	C-CER,CHIP
2203-005736	C1064	C-CER,CHIP
2203-005736	C1075	C-CER,CHIP
2203-005736	C1078	C-CER,CHIP
2203-005736	C1119	C-CER,CHIP
2203-005736	C1186	C-CER,CHIP
2203-005736	C1187	C-CER,CHIP
2203-005736	C1206	C-CER,CHIP
2203-005736	C1207	C-CER,CHIP
2203-005736	C1235	C-CER,CHIP
2203-005736	C1236	C-CER,CHIP
2203-005736	C1340	C-CER,CHIP
2203-005736	C1342	C-CER,CHIP
2203-005736	C1345	C-CER,CHIP
2203-005736	C1346	C-CER,CHIP
2203-005736	C1358	C-CER,CHIP
2203-005736	C2009	C-CER,CHIP
2203-005736	C2010	C-CER,CHIP
2203-005736	C2029	C-CER,CHIP
2203-005736	C3003	C-CER,CHIP
2203-005736	C3008	C-CER,CHIP
2203-005736	C3010	C-CER,CHIP
2203-005736	C3011	C-CER,CHIP
2203-005736	C3013	C-CER,CHIP
2203-005736	C3014	C-CER,CHIP
2203-005736	C3037	C-CER,CHIP
2203-005736	C3039	C-CER,CHIP
2203-005736	C3041	C-CER,CHIP
2203-005736	C3150	C-CER,CHIP
2203-005736	C3153	C-CER,CHIP
2203-005736	C3154	C-CER,CHIP
2203-005736	C5068	C-CER,CHIP
2203-005739	C1002	C-CER,CHIP

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

5. MAIN Electrical Parts List

2203-005777	C1000	C-CER,CHIP
2203-005777	C1039	C-CER,CHIP
2203-005777	C1044	C-CER,CHIP
2203-005777	C1068	C-CER,CHIP
2203-005777	C1200	C-CER,CHIP
2203-005777	C1205	C-CER,CHIP
2203-005777	C1208	C-CER,CHIP
2203-005777	C1215	C-CER,CHIP
2203-005777	C1348	C-CER,CHIP
2203-005777	C3021	C-CER,CHIP
2203-005777	C3023	C-CER,CHIP
2203-005789	C1220	C-CER,CHIP
2203-005789	C1347	C-CER,CHIP
2203-005789	C2019	C-CER,CHIP
2203-005789	C2025	C-CER,CHIP
2203-005792	C1006	C-CER,CHIP
2203-005792	C1012	C-CER,CHIP
2203-005792	C1045	C-CER,CHIP
2203-005792	C1050	C-CER,CHIP
2203-005792	C1204	C-CER,CHIP
2203-005792	C1349	C-CER,CHIP
2203-005806	C3022	C-CER,CHIP
2203-005806	C4119	C-CER,CHIP
2203-005806	C5049	C-CER,CHIP
2203-005806	C5063	C-CER,CHIP
2203-006187	C1016	C-CER,CHIP
2203-006187	C1022	C-CER,CHIP
2203-006187	C1027	C-CER,CHIP
2203-006194	C3004	C-CER,CHIP
2203-006194	C3005	C-CER,CHIP
2203-006194	C3006	C-CER,CHIP
2203-006194	C3009	C-CER,CHIP
2203-006194	C3012	C-CER,CHIP
2203-006194	C3015	C-CER,CHIP
2203-006194	C6067	C-CER,CHIP
2203-006305	C3031	C-CER,CHIP
2203-006305	C3032	C-CER,CHIP
2203-006348	C6013	C-CER,CHIP
2203-006399	C7039	C-CER,CHIP

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

5. MAIN Electrical Parts List

2203-006399	C7041	C-CER,CHIP
2203-006399	C7157	C-CER,CHIP
2203-006399	C7166	C-CER,CHIP
2203-006400	C1104	C-CER,CHIP
2203-006400	C2016	C-CER,CHIP
2203-006400	C3111	C-CER,CHIP
2203-006400	C6065	C-CER,CHIP
2203-006400	C8001	C-CER,CHIP
2203-006401	C6004	C-CER,CHIP
2203-006401	C6012	C-CER,CHIP
2203-006410	C7172	C-CER,CHIP
2203-006410	C7173	C-CER,CHIP
2203-006423	C1014	C-CER,CHIP
2203-006423	C1015	C-CER,CHIP
2203-006423	C1035	C-CER,CHIP
2203-006423	C1059	C-CER,CHIP
2203-006423	C1071	C-CER,CHIP
2203-006423	C1072	C-CER,CHIP
2203-006423	C1073	C-CER,CHIP
2203-006423	C1074	C-CER,CHIP
2203-006423	C1083	C-CER,CHIP
2203-006423	C1084	C-CER,CHIP
2203-006423	C1101	C-CER,CHIP
2203-006423	C1103	C-CER,CHIP
2203-006423	C1197	C-CER,CHIP
2203-006423	C1209	C-CER,CHIP
2203-006423	C3065	C-CER,CHIP
2203-006423	C4000	C-CER,CHIP
2203-006423	C4001	C-CER,CHIP
2203-006423	C4002	C-CER,CHIP
2203-006423	C4003	C-CER,CHIP
2203-006423	C4015	C-CER,CHIP
2203-006423	C4016	C-CER,CHIP
2203-006423	C4019	C-CER,CHIP
2203-006423	C4023	C-CER,CHIP
2203-006423	C4025	C-CER,CHIP
2203-006423	C4026	C-CER,CHIP
2203-006423	C4029	C-CER,CHIP
2203-006423	C4031	C-CER,CHIP

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

5. MAIN Electrical Parts List

2203-006423	C4032	C-CER,CHIP
2203-006423	C4035	C-CER,CHIP
2203-006423	C4039	C-CER,CHIP
2203-006423	C4040	C-CER,CHIP
2203-006423	C4041	C-CER,CHIP
2203-006423	C4048	C-CER,CHIP
2203-006423	C4049	C-CER,CHIP
2203-006423	C4050	C-CER,CHIP
2203-006423	C4051	C-CER,CHIP
2203-006423	C4052	C-CER,CHIP
2203-006423	C4053	C-CER,CHIP
2203-006423	C4054	C-CER,CHIP
2203-006423	C4055	C-CER,CHIP
2203-006423	C4056	C-CER,CHIP
2203-006423	C4057	C-CER,CHIP
2203-006423	C4058	C-CER,CHIP
2203-006423	C4059	C-CER,CHIP
2203-006423	C4060	C-CER,CHIP
2203-006423	C4061	C-CER,CHIP
2203-006423	C4062	C-CER,CHIP
2203-006423	C4065	C-CER,CHIP
2203-006423	C4066	C-CER,CHIP
2203-006423	C4071	C-CER,CHIP
2203-006423	C4072	C-CER,CHIP
2203-006423	C4074	C-CER,CHIP
2203-006423	C4083	C-CER,CHIP
2203-006423	C4084	C-CER,CHIP
2203-006423	C4085	C-CER,CHIP
2203-006423	C4086	C-CER,CHIP
2203-006423	C4087	C-CER,CHIP
2203-006423	C4088	C-CER,CHIP
2203-006423	C4090	C-CER,CHIP
2203-006423	C4091	C-CER,CHIP
2203-006423	C4092	C-CER,CHIP
2203-006423	C4107	C-CER,CHIP
2203-006423	C4108	C-CER,CHIP
2203-006423	C4110	C-CER,CHIP
2203-006423	C4111	C-CER,CHIP
2203-006423	C4131	C-CER,CHIP

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

5. MAIN Electrical Parts List

2203-006423	C4133	C-CER,CHIP
2203-006423	C4137	C-CER,CHIP
2203-006423	C4140	C-CER,CHIP
2203-006423	C4144	C-CER,CHIP
2203-006423	C4146	C-CER,CHIP
2203-006423	C4147	C-CER,CHIP
2203-006423	C4148	C-CER,CHIP
2203-006423	C5023	C-CER,CHIP
2203-006423	C5039	C-CER,CHIP
2203-006423	C5062	C-CER,CHIP
2203-006423	C5087	C-CER,CHIP
2203-006423	C5088	C-CER,CHIP
2203-006423	C7006	C-CER,CHIP
2203-006423	C7008	C-CER,CHIP
2203-006423	C7010	C-CER,CHIP
2203-006423	C7011	C-CER,CHIP
2203-006423	C7012	C-CER,CHIP
2203-006423	C7016	C-CER,CHIP
2203-006423	C7033	C-CER,CHIP
2203-006423	C7037	C-CER,CHIP
2203-006423	C8007	C-CER,CHIP
2203-006423	C8009	C-CER,CHIP
2203-006423	C8012	C-CER,CHIP
2203-006423	C8065	C-CER,CHIP
2203-006423	C8066	C-CER,CHIP
2203-006426	C8002	C-CER,CHIP
2203-006562	C5029	C-CER,CHIP
2203-006562	C6014	C-CER,CHIP
2203-006562	C6049	C-CER,CHIP
2203-006562	C6093	C-CER,CHIP
2203-006562	C6094	C-CER,CHIP
2203-006562	C7003	C-CER,CHIP
2203-006562	C7004	C-CER,CHIP
2203-006562	C7013	C-CER,CHIP
2203-006562	C7023	C-CER,CHIP
2203-006562	C7036	C-CER,CHIP
2203-006562	C7040	C-CER,CHIP
2203-006562	C7148	C-CER,CHIP
2203-006562	C8036	C-CER,CHIP

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

5. MAIN Electrical Parts List

2203-006604	C1070	C-CER,CHIP
2203-006604	C1196	C-CER,CHIP
2203-006604	C5090	C-CER,CHIP
2203-006611	C3030	C-CER,CHIP
2203-006642	C3081	C-CER,CHIP
2203-006648	C3019	C-CER,CHIP
2203-006648	C5060	C-CER,CHIP
2203-006648	C6000	C-CER,CHIP
2203-006665	C2069	C-CER,CHIP
2203-006674	C1023	C-CER,CHIP
2203-006707	C1085	C-CER,CHIP
2203-006707	C1087	C-CER,CHIP
2203-006707	C3044	C-CER,CHIP
2203-006839	C1032	C-CER,CHIP
2203-006839	C1038	C-CER,CHIP
2203-006839	C1040	C-CER,CHIP
2203-006839	C1082	C-CER,CHIP
2203-006839	C3035	C-CER,CHIP
2203-006839	C4126	C-CER,CHIP
2203-006839	C4127	C-CER,CHIP
2203-006839	C5030	C-CER,CHIP
2203-006839	C5032	C-CER,CHIP
2203-006839	C5059	C-CER,CHIP
2203-006839	C7020	C-CER,CHIP
2203-006841	C6003	C-CER,CHIP
2203-006872	C7167	C-CER,CHIP
2203-007143	C6002	C-CER,CHIP
2203-007194	C3109	C-CER,CHIP
2203-007240	C4011	C-CER,CHIP
2203-007240	C4012	C-CER,CHIP
2203-007240	C4095	C-CER,CHIP
2203-007240	C4106	C-CER,CHIP
2203-007240	C4150	C-CER,CHIP
2203-007269	C7032	C-CER,CHIP
2203-007269	C7060	C-CER,CHIP
2203-007270	C2001	C-CER,CHIP
2203-007271	C6029	C-CER,CHIP
2203-007271	C8013	C-CER,CHIP
2203-007279	C5103	C-CER,CHIP

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

5. MAIN Electrical Parts List

2203-007317	C2000	C-CER,CHIP
2203-007317	C3020	C-CER,CHIP
2203-007317	C4067	C-CER,CHIP
2203-007317	C4130	C-CER,CHIP
2203-007317	C4132	C-CER,CHIP
2203-007317	C5026	C-CER,CHIP
2203-007317	C5089	C-CER,CHIP
2203-007317	C7021	C-CER,CHIP
2203-007317	C7051	C-CER,CHIP
2203-007317	C7149	C-CER,CHIP
2203-007317	C8014	C-CER,CHIP
2203-007317	C8015	C-CER,CHIP
2203-007317	C8016	C-CER,CHIP
2203-007317	C8017	C-CER,CHIP
2203-007317	C8023	C-CER,CHIP
2203-007317	C8035	C-CER,CHIP
2203-007391	C1069	C-CER,CHIP
2203-007391	C2013	C-CER,CHIP
2203-007391	C2034	C-CER,CHIP
2203-007391	C3016	C-CER,CHIP
2203-007391	C3017	C-CER,CHIP
2203-007391	C4143	C-CER,CHIP
2203-007391	C4145	C-CER,CHIP
2203-007393	C5050	C-CER,CHIP
2203-007449	C1025	C-CER,CHIP
2203-007449	C1081	C-CER,CHIP
2203-007449	C3042	C-CER,CHIP
2203-007449	C3066	C-CER,CHIP
2203-007449	C3068	C-CER,CHIP
2203-007449	C3072	C-CER,CHIP
2203-007449	C3079	C-CER,CHIP
2203-007449	C3080	C-CER,CHIP
2203-007449	C4007	C-CER,CHIP
2203-007449	C4017	C-CER,CHIP
2203-007449	C4018	C-CER,CHIP
2203-007449	C4024	C-CER,CHIP
2203-007449	C4028	C-CER,CHIP
2203-007449	C4030	C-CER,CHIP
2203-007449	C4063	C-CER,CHIP

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

5. MAIN Electrical Parts List

2203-007449	C4075	C-CER,CHIP
2203-007449	C4089	C-CER,CHIP
2203-007449	C4097	C-CER,CHIP
2203-007449	C4098	C-CER,CHIP
2203-007449	C4115	C-CER,CHIP
2203-007449	C4134	C-CER,CHIP
2203-007449	C4135	C-CER,CHIP
2203-007449	C4136	C-CER,CHIP
2203-007449	C4138	C-CER,CHIP
2203-007449	C4139	C-CER,CHIP
2203-007449	C4141	C-CER,CHIP
2203-007449	C4142	C-CER,CHIP
2203-007449	C5004	C-CER,CHIP
2203-007449	C5005	C-CER,CHIP
2203-007449	C5006	C-CER,CHIP
2203-007449	C5007	C-CER,CHIP
2203-007449	C5009	C-CER,CHIP
2203-007449	C5011	C-CER,CHIP
2203-007449	C5012	C-CER,CHIP
2203-007449	C5015	C-CER,CHIP
2203-007449	C5019	C-CER,CHIP
2203-007449	C5021	C-CER,CHIP
2203-007449	C5022	C-CER,CHIP
2203-007449	C5025	C-CER,CHIP
2203-007449	C5027	C-CER,CHIP
2203-007449	C5028	C-CER,CHIP
2203-007449	C5033	C-CER,CHIP
2203-007449	C5082	C-CER,CHIP
2203-007449	C5083	C-CER,CHIP
2203-007449	C6009	C-CER,CHIP
2203-007449	C6010	C-CER,CHIP
2203-007449	C6050	C-CER,CHIP
2203-007449	C6066	C-CER,CHIP
2203-007449	C6068	C-CER,CHIP
2203-007449	C7000	C-CER,CHIP
2203-007449	C7001	C-CER,CHIP
2203-007449	C7002	C-CER,CHIP
2203-007449	C7005	C-CER,CHIP
2203-007449	C7015	C-CER,CHIP

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

5. MAIN Electrical Parts List

2203-007449	C7022	C-CER,CHIP
2203-007449	C7024	C-CER,CHIP
2203-007449	C7025	C-CER,CHIP
2203-007449	C7038	C-CER,CHIP
2203-007449	C7161	C-CER,CHIP
2203-007449	C7162	C-CER,CHIP
2203-007449	C8000	C-CER,CHIP
2203-007449	C8021	C-CER,CHIP
2203-007449	C8026	C-CER,CHIP
2203-007449	C8027	C-CER,CHIP
2203-007449	C8028	C-CER,CHIP
2203-007449	C8029	C-CER,CHIP
2203-007449	C8030	C-CER,CHIP
2203-007449	C8038	C-CER,CHIP
2203-007449	C8063	C-CER,CHIP
2203-007449	C8064	C-CER,CHIP
2203-007456	C1212	C-CER,CHIP
2203-007474	C4073	C-CER,CHIP
2203-007634	C6006	C-CER,CHIP
2203-007693	C5013	C-CER,CHIP
2203-007775	C2003	C-CER,CHIP
2203-007775	C3026	C-CER,CHIP
2203-007775	C3036	C-CER,CHIP
2203-007775	C3038	C-CER,CHIP
2203-007775	C5034	C-CER,CHIP
2203-007775	C5035	C-CER,CHIP
2203-007775	C5036	C-CER,CHIP
2203-007775	C5037	C-CER,CHIP
2203-007775	C5038	C-CER,CHIP
2203-007775	C5040	C-CER,CHIP
2203-007775	C5042	C-CER,CHIP
2203-007775	C5044	C-CER,CHIP
2203-007775	C6007	C-CER,CHIP
2203-007781	C7030	C-CER,CHIP
2203-007781	C7031	C-CER,CHIP
2203-007781	C7146	C-CER,CHIP
2203-007781	C8004	C-CER,CHIP
2203-007795	C7154	C-CER,CHIP
2203-007795	C8006	C-CER,CHIP

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

5. MAIN Electrical Parts List

2203-007795	C8010	C-CER,CHIP
2203-007795	C8018	C-CER,CHIP
2203-007795	C8019	C-CER,CHIP
2203-007796	C3070	C-CER,CHIP
2203-007796	C3071	C-CER,CHIP
2203-007796	C7014	C-CER,CHIP
2203-007796	C7035	C-CER,CHIP
2203-007796	C7064	C-CER,CHIP
2203-008123	C4038	C-CER,CHIP
2203-008123	C5055	C-CER,CHIP
2203-008123	C5056	C-CER,CHIP
2203-008158	C5048	C-CER,CHIP
2203-008199	C4100	C-CER,CHIP
2203-008199	C4105	C-CER,CHIP
2203-008242	C5065	C-CER,CHIP
2203-008242	C5066	C-CER,CHIP
2203-008242	C7026	C-CER,CHIP
2203-008242	C7151	C-CER,CHIP
2203-008242	C8008	C-CER,CHIP
2203-008242	C8022	C-CER,CHIP
2203-008242	C8024	C-CER,CHIP
2203-008394	C3057	C-CER,CHIP
2203-008572	C5003	C-CER,CHIP
2203-008572	C5014	C-CER,CHIP
2203-008860	C3074	C-CER,CHIP
2203-008860	C3075	C-CER,CHIP
2203-008860	C3076	C-CER,CHIP
2203-008860	C5047	C-CER,CHIP
2203-008860	C5054	C-CER,CHIP
2203-008860	C5080	C-CER,CHIP
2203-008860	C7007	C-CER,CHIP
2203-008860	C7009	C-CER,CHIP
2203-008860	C7027	C-CER,CHIP
2203-009076	C7152	C-CER,CHIP
2203-009167	C3084	C-CER,CHIP
2203-009167	C3088	C-CER,CHIP
2203-009537	C3000	C-CER,CHIP
2203-009618	C5045	C-CER,CHIP
2203-009732	C8031	C-CER,CHIP

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

5. MAIN Electrical Parts List

2203-009733	C1037	C-CER,CHIP
2203-009733	C1125	C-CER,CHIP
2203-009733	C3001	C-CER,CHIP
2203-009733	C3007	C-CER,CHIP
2203-009733	C3018	C-CER,CHIP
2203-009733	C3073	C-CER,CHIP
2203-009733	C5024	C-CER,CHIP
2203-009733	C5046	C-CER,CHIP
2203-009733	C5051	C-CER,CHIP
2203-009733	C5114	C-CER,CHIP
2203-009733	C7050	C-CER,CHIP
2203-009733	C8005	C-CER,CHIP
2203-009812	C5002	C-CER,CHIP
2203-009858	C5079	C-CER,CHIP
2203-009859	C5031	C-CER,CHIP
2203-009859	C5112	C-CER,CHIP
2203-009859	C6027	C-CER,CHIP
2703-002309	L7001	INDUCTOR-SMD
2703-002309	L7002	INDUCTOR-SMD
2703-002649	L1000	INDUCTOR-SMD
2703-002649	L1008	INDUCTOR-SMD
2703-002649	L1042	INDUCTOR-SMD
2703-002649	L3001	INDUCTOR-SMD
2703-002901	L1051	INDUCTOR-SMD
2703-002901	L2009	INDUCTOR-SMD
2703-002903	L2007	INDUCTOR-SMD
2703-002903	L2011	INDUCTOR-SMD
2703-002903	L5010	INDUCTOR-SMD
2703-002907	L1005	INDUCTOR-SMD
2703-002907	L1026	INDUCTOR-SMD
2703-002907	L1040	INDUCTOR-SMD
2703-002907	L3011	INDUCTOR-SMD
2703-002955	L3020	INDUCTOR-SMD
2703-002958	L1034	INDUCTOR-SMD
2703-002958	L1036	INDUCTOR-SMD
2703-002961	L1032	INDUCTOR-SMD
2703-002999	L1004	INDUCTOR-SMD
2703-002999	L1009	INDUCTOR-SMD
2703-002999	L1015	INDUCTOR-SMD

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

5. MAIN Electrical Parts List

2703-004013	L1014	INDUCTOR-SMD
2703-004013	L1019	INDUCTOR-SMD
2703-004013	L1043	INDUCTOR-SMD
2703-004013	L1044	INDUCTOR-SMD
2703-004013	L3007	INDUCTOR-SMD
2703-004014	L1018	INDUCTOR-SMD
2703-004014	L3015	INDUCTOR-SMD
2703-004032	L1013	INDUCTOR-SMD
2703-004032	L1016	INDUCTOR-SMD
2703-004032	L1017	INDUCTOR-SMD
2703-004032	L1024	INDUCTOR-SMD
2703-004032	L1027	INDUCTOR-SMD
2703-004032	L1038	INDUCTOR-SMD
2703-004032	L1048	INDUCTOR-SMD
2703-004032	L1054	INDUCTOR-SMD
2703-004034	L1022	INDUCTOR-SMD
2703-004034	L2004	INDUCTOR-SMD
2703-004034	L3022	INDUCTOR-SMD
2703-004035	L1012	INDUCTOR-SMD
2703-004035	L1087	INDUCTOR-SMD
2703-004035	L2006	INDUCTOR-SMD
2703-004037	L1002	INDUCTOR-SMD
2703-004037	L1047	INDUCTOR-SMD
2703-004037	L2005	INDUCTOR-SMD
2703-004037	L2014	INDUCTOR-SMD
2703-004037	L2015	INDUCTOR-SMD
2703-004037	L2016	INDUCTOR-SMD
2703-004037	L2017	INDUCTOR-SMD
2703-004038	L1030	INDUCTOR-SMD
2703-004038	L1031	INDUCTOR-SMD
2703-004038	L1041	INDUCTOR-SMD
2703-004038	L2001	INDUCTOR-SMD
2703-004038	L2002	INDUCTOR-SMD
2703-004259	L1073	INDUCTOR-SMD
2703-004290	L1021	INDUCTOR-SMD
2703-004328	L1020	INDUCTOR-SMD
2703-004328	L1029	INDUCTOR-SMD
2703-004328	L1035	INDUCTOR-SMD
2703-004328	L1084	INDUCTOR-SMD

5. MAIN Electrical Parts List

2703-004328	L2013	INDUCTOR-SMD
2703-004364	L1010	INDUCTOR-SMD
2703-004364	L1039	INDUCTOR-SMD
2703-004364	L2003	INDUCTOR-SMD
2703-004364	L3024	INDUCTOR-SMD
2703-004597	L6019	INDUCTOR-SMD
2703-004597	L6020	INDUCTOR-SMD
2703-004764	L1049	INDUCTOR-SMD
2703-004764	L1050	INDUCTOR-SMD
2703-004764	L1055	INDUCTOR-SMD
2703-004764	L1080	INDUCTOR-SMD
2703-004862	L1003	INDUCTOR-SMD
2703-004862	L1011	INDUCTOR-SMD
2703-004862	L1090	INDUCTOR-SMD
2703-004862	L1091	INDUCTOR-SMD
2703-004911	L1075	INDUCTOR-SMD
2703-005058	L1001	INDUCTOR-SMD
2703-005058	L1025	INDUCTOR-SMD
2703-005058	L1028	INDUCTOR-SMD
2703-005058	L1052	INDUCTOR-SMD
2703-005058	L1053	INDUCTOR-SMD
2703-005058	L1056	INDUCTOR-SMD
2703-005058	L3008	INDUCTOR-SMD
2703-005058	L3012	INDUCTOR-SMD
2703-005066	L8004	INDUCTOR-SMD
2703-005087	L1033	INDUCTOR-SMD
2703-005101	L2000	INDUCTOR-SMD
2703-005117	L7007	INDUCTOR-SMD
2703-005117	L7012	INDUCTOR-SMD
2703-005118	L7006	INDUCTOR-SMD
2703-005136	L5011	INDUCTOR-SMD
2703-005136	L5014	INDUCTOR-SMD
2703-005228	L8001	INDUCTOR-SMD
2703-005228	L8002	INDUCTOR-SMD
2703-005339	L5005	INDUCTOR-SMD
2703-005339	L5006	INDUCTOR-SMD
2703-005339	L5013	INDUCTOR-SMD
2703-005505	L5002	INDUCTOR-SMD
2703-005505	L5004	INDUCTOR-SMD

5. MAIN Electrical Parts List

2703-005509	L5007	INDUCTOR-SMD
2703-005509	L5008	INDUCTOR-SMD
2703-005555	L3005	INDUCTOR-SMD
2703-005555	L3013	INDUCTOR-SMD
2801-005300	OSC5000	CRYSTAL-SMD
2801-005323	OSC3000	CRYSTAL-SMD
2901-001690	C4014	FILTER-EMI SMD
2901-001690	C4151	FILTER-EMI SMD
2901-001786	F7003	FILTER-EMI/ESD
2901-001786	F7005	FILTER-EMI/ESD
2901-001786	F7006	FILTER-EMI/ESD
2901-001786	F7008	FILTER-EMI/ESD
2901-001786	F7009	FILTER-EMI/ESD
2901-001786	F7012	FILTER-EMI/ESD
2901-001786	F7013	FILTER-EMI/ESD
2901-001786	U7015	FILTER-EMI/ESD
2904-002260	F1003	FILTER-SAW
2904-002266	F1008	FILTER-SAW
2904-002356	F3003	FILTER SAW GPS
2904-002356	U3000	FILTER SAW GPS
2904-002357	F2003	FILTER-SAW
2904-002360	F3000	FILTER SAW WIFI
2904-002363	U1004	FILTER-SAW
2904-002367	F1005	FILTER-SAW
2910-000352	F1006	DUPLEXER-SAW
2910-000386	F1001	DUPLEXER-SAW
2911-000308	U3005	DUPLEXER FEM WIFI
2911-000422	F1000	DUPLEXER-FEM
2911-000438	F2001	DUPLEXER-FEM
3003-001236	MIC8000	MIC MEMS
3301-002078	L8009	BEAD-SMD
3301-002122	L8010	BEAD-SMD
3301-002122	L8011	BEAD-SMD
3301-002223	L7013	BEAD-SMD
3301-002223	L7014	BEAD-SMD
3301-002223	L8005	BEAD-SMD
3301-002223	L8006	BEAD-SMD
3301-002236	L1092	BEAD-SMD
3301-002236	L2012	BEAD-SMD

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

5. MAIN Electrical Parts List

3301-002238	L3010	BEAD-SMD
3301-002242	L6011	BEAD-SMD
3301-002242	L6012	BEAD-SMD
3301-002279	L3000	BEAD-SMD
3301-002309	L8000	BEAD-SMD
3301-002309	L8003	BEAD-SMD
3301-002312	L7000	BEAD-SMD
3301-002312	L7008	BEAD-SMD
3301-002312	L7010	BEAD-SMD
3301-002331	L5000	BEAD-SMD
3301-002331	L5015	BEAD-SMD
3301-002335	L6000	BEAD-SMD
3301-002335	L6001	BEAD-SMD
3301-002335	L6013	BEAD-SMD
3301-002335	L6014	BEAD-SMD
3301-002335	L6015	BEAD-SMD
3301-002335	L6018	BEAD-SMD
3301-002335	L8007	BEAD-SMD
3301-002335	L8012	BEAD-SMD
3301-002335	L8013	BEAD-SMD
3301-002335	L8014	BEAD-SMD
3705-001937	RFS1001	CONNECTOR-COAXIAL
3705-001937	RFS1002	CONNECTOR-COAXIAL
3705-001937	RFS1003	CONNECTOR-COAXIAL
3705-001937	RFS1004	CONNECTOR-COAXIAL
3709-001891	SIM5000	CONNECTOR-CARD EDGE
3711-007107	HDC7001	SOCKET-BOARD TO BOARD
3711-008508	HDC7000	HEADER-BOARD TO BOARD
3711-008847	BTC5000	CONNECTOR-BATTERY
3711-008995	HDC7002	HEADER-BOARD TO BOARD
3711-009058	HDC5001	HEADER-BOARD TO BOARD
3711-009073	HDC6000	HEADER-BOARD TO BOARD
3712-001621	ANT2004	CONNECTOR-TERMINAL
3712-001621	ANT2005	CONNECTOR-TERMINAL
3712-001621	ANT2006	CONNECTOR-TERMINAL
3712-001621	ANT2008	CONNECTOR-TERMINAL
3712-001621	ANT2016	CONNECTOR-TERMINAL
3712-001621	ANT3007	CONNECTOR-TERMINAL
3712-001621	ANT6004	CONNECTOR-TERMINAL

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

5. MAIN Electrical Parts List

3712-001621	ANT6005	CONNECTOR-TERMINAL
3712-001621	ANT6006	CONNECTOR-TERMINAL
3712-001621	ANT6007	CONNECTOR-TERMINAL
3712-001621	ANT6008	CONNECTOR-TERMINAL
3712-001626	ANT3005	CONNECTOR-TERMINAL
3712-001626	ANT3006	CONNECTOR-TERMINAL
3712-001626	ANT7000	CONNECTOR-TERMINAL
3712-001626	ANT7001	CONNECTOR-TERMINAL
3712-001626	ANT8000	CONNECTOR-TERMINAL
3712-001626	ANT8001	CONNECTOR-TERMINAL
3712-001626	ANT8002	CONNECTOR-TERMINAL
3712-001626	ANT8003	CONNECTOR-TERMINAL
3712-001634	ANT1000	CONNECTOR-TERMINAL
3712-001634	ANT1001	CONNECTOR-TERMINAL
3712-001634	ANT1002	CONNECTOR-TERMINAL
3712-001634	ANT2000	CONNECTOR-TERMINAL
3712-001634	ANT2013	CONNECTOR-TERMINAL
3712-001634	ANT2014	CONNECTOR-TERMINAL
3712-001634	ANT3000	CONNECTOR-TERMINAL
3712-001634	ANT3001	CONNECTOR-TERMINAL
3712-001634	ANT3003	CONNECTOR-TERMINAL
4709-002150	F3002	COUPLER-DIRECTION
4709-002193	F1002	COUPLER-DIRECTION
4709-002278	F1007	BALUN
4709-002285	F3005	FREQ-DISTRIBUTER
4709-002351	F3001	FREQ-DISTRIBUTER
GH02-13923A	-	TAPE SPONGE-SHEILD CAN
GH41-05211A	-	PCB MAIN-SM-C5010
GH60-00009A	CON2002	CLIP-SM-G935A
GH60-00009A	CON2006	CLIP-SM-G935A
GH60-00009A	CON2009	CLIP-SM-G935A
GH60-00010A	CON2007	CLIP-SM_G930F
GH60-00010A	CON2010	CLIP-SM_G930F
GH62-00040A	GA7000	PAD GAP-SMD GASKET (SM-G925F)
GH62-00040A	GA7001	PAD GAP-SMD GASKET (SM-G925F)
GH62-00040A	GA7002	PAD GAP-SMD GASKET (SM-G925F)
GH62-00040A	GA7003	PAD GAP-SMD GASKET (SM-G925F)
GH63-12874A	SC2	SHIELD-BOT APT
GH63-13863A	SC6000	SHIELD-COVER_PMIC

5. MAIN Electrical Parts List

GH63-13865A	SC6002	SHIELD-COVER_RF
GH63-13867A	SC6001	SHIELD-TOP-AP
GH63-13868A	SC6006	SHIELD-CAN WIFI
GH63-13869A	SC6003	SHIELD-CAN_SLAVE CHARGER
GH63-13870A	SC6005	SHIELD-CAN_IF PMIC
GH63-13871A	SC6004	SHIELD-CAN_ DCDC

Please consult the GSPN website (Samsung Portal) for the most recent version of the product's part list.

2. Specification

2-1. CDMA & GPS General Specification

ITEM	CDMA	GPS
Tx Freq. range	824.04~848.97MHz	-
Rx Freq. range	869.04~893.97MHz	1575.42MHz
Channel Bandwidth	1.23MHz	2MHz
Channel Spacing	30KHz	Not Used
Number of Channel	832	1
Duplex Separation	45MHz	-
In/Output Impedance	50Ohm	50Ohm
Tx Local Frequency	$F_{Tx} * 1.6666$	-
Rx Local Frequency	$F_{Rx} * 2$	$F_{Rx} * 2$
TCXO Frequency	19.2MHz	19.2MHz
Freq. Stability	(FRX-45MHz)±300Hz	-
Operating Temperature	-30℃ ~ +60℃	-30℃ ~ +60℃

2. Specification

Item		GSM 850	EGSM 900	DCS1800	PCS1900
Freq. Band[MHz] Uplink/Downlink		824~849 869~894	880~915 925~960	1710~1785 1805~1880	1850~1910 1930~1990
ARFCN range		128~251	0~124 & 975~1023	512~885	512~810
Tx/Rx spacing		45MHz	45MHz	95MHz	80MHz
Mod. Bit rate/ Bit Period		270.833kbps 3.692us	270.833kbps 3.692us	270.833kbps 3.692us	270.833kbps 3.692us
Time Slot Period/ Frame Period		576.9us 4.615ms	576.9us 4.615ms	576.9us 4.615ms	576.9us 4.615ms
Modulation	GSM/ GPRS	0.3GMSK	0.3GMSK	0.3GMSK	0.3GMSK
MS Power		33dBm ~5dBm	33dBm ~5dBm	30dBm ~0dBm	30dBm ~0dBm
Power Class		5pcl ~ 19pcl	5pcl ~ 19pcl	0pcl ~ 15pcl	0pcl ~ 15pcl
Sensitivity		-102dBm	-102dBm	-100dBm	-100dBm
TDMA Mux		8	8	8	8
Cell Radius		35Km	35Km	2Km	2Km

2. Specification

2-2. GSM Tx Power Class

TX Power control level	GSM850	TX Power control level	EGSM900	TX Power control level	DCS1800	TX Power control level	PCS1900
5	33±2 dBm	5	33±2 dBm	0	30±3 dBm	0	30±3 dBm
6	31±2 dBm	6	31±2 dBm	1	28±3 dBm	1	28±3 dBm
7	29±2 dBm	7	29±2 dBm	2	26±3 dBm	2	26±3 dBm
8	27±2 dBm	8	27±2 dBm	3	24±3 dBm	3	24±3 dBm
9	25±2 dBm	9	25±2 dBm	4	22±3 dBm	4	22±3 dBm
10	23±2 dBm	10	23±2 dBm	5	20±3 dBm	5	20±3 dBm
11	21±2 dBm	11	21±2 dBm	6	18±3 dBm	6	18±3 dBm
12	19±2 dBm	12	19±2 dBm	7	16±3 dBm	7	16±3 dBm
13	17±2 dBm	13	17±2 dBm	8	14±3 dBm	8	14±3 dBm
14	15±2 dBm	14	15±2 dBm	9	12±4 dBm	9	12±4 dBm
15	13±2 dBm	15	13±2 dBm	10	10±4 dBm	10	10±4 dBm
16	11±3 dBm	16	11±3 dBm	11	8±4 dBm	11	8±4 dBm
17	9±3 dBm	17	9±3 dBm	12	6±4 dBm	12	6±4 dBm
18	7±3 dBm	18	7±3 dBm	13	4±4 dBm	13	4±4 dBm
19	5±3 dBm	19	5±3 dBm	14	2±5 dBm	14	2±5 dBm
				15	0±5 dBm	15	0±5 dBm

2. Specification

2-3. WCDMA General Specification

	WCDMA2100	WCDMA1900	WCDMA850	WCDMA900
Freq. Band[MHz] Uplink/Downlink	1922~1977 2112~2167	1852~1907 1932~1987	824~849 869~894	880~915 925~960
ARFCN range	UL: 9612~9888 DL: 10562~10838	UL: 9262~9538 DL: 9662~9938	UL: 4132~4233 DL: 4357~4458	UL: 2712~2863 DL: 2937~3088
Tx/Rx spacing	190MHz	80MHz	45MHz	45MHz
Mod. Bit rate/ Bit Period	3.84 Mcps	3.84 Mcps	3.84 Mcps	3.84 Mcps
Time Slot Period/Frame Period	FrameLength:10ms Slotlength:0.667ms	FrameLength:10ms Slotlength:0.667ms	FrameLength:10ms Slotlength:0.667ms	FrameLength:10ms Slotlength:0.667ms
Modulation	QPSK/HQPSK	QPSK/HQPSK	QPSK/HQPSK	QPSK/HQPSK
MS Power	24dBm~-50dBm	24dBm~-50dBm	24dBm~-50dBm	24dBm~-50dBm
Power Class	3(max+24dBm)	3(max+24dBm)	3(max+24dBm)	3(max+24dBm)
Sensitivity	-106.7dBm	-106.7dBm	-106.7dBm	-106.7dBm
TDMA Mux	8	8	8	8
Cell Radius	2Km	2Km	2Km	2Km

2. Specification

2-4. TD-SCDMA General Specification

	Band34	Band39
Freq. Band[MHz] Uplink/Downlink	2010~2025	1880~1920
ARFCN range	10054~10121	9404~9596
Tx/Rx spacing	/	/
TCXO Frequency	19.2MHz	19.2MHz
Modulation	QPSK/16-QAM	QPSK/16-QAM
MS Power	-49dBm~ 25dBm	-49dBm~ 25dBm
Power Class	2 (max: 24 +1/-3dBm)	2 (max: 24 +1/-3dBm)
Sensitivity	-108dBm/1.28MHz	-108dBm/1.28MHz
Cell Radius	>10Km	>10Km
In/Output Impedance	50Ω	50Ω
Operating Temperature	-30℃ ~ +60℃	-30℃ ~ +60℃

2. Specification

2-5. LTE General Specification(FDD)

	Band1 (FDD)	Band3 (FDD)	Band5 (FDD)	Band7 (FDD)	Band8 (FDD)
Freq. Band[MHz] UL/DL	1920~1980 2110~2170	1710~1785 1805~1880	824~849 869~894	2500~2570 2620~2690	880~915 925~960
ARFCN range UL/DL	18000~18599 0~599	19200~19949 1200~1949	20400~20649 2400~2649	20750~20449 2750~3449	21450~21799 3450~3799
Tx/Rx spacing	190MHz	95MHz	45MHz	120MHz	45MHz
TCXO Frequency	19.2MHz	19.2MHz	19.2MHz	19.2MHz	19.2MHz
Modulation	QPSK/16-QAM/64-QAM	QPSK/16-QAM/64-QAM	QPSK/16-QAM/64-QAM	QPSK/16-QAM/64-QAM	QPSK/16-QAM/64-QAM
MS Power	-40dBm~ 25dBm	-40dBm~ 25dBm	-40dBm~ 25dBm	-40dBm~ 25dBm	-40dBm~ 25dBm
Power Class	3 (max: 23 ±2dBm)	3 (max: 23 ±2dBm)	3 (max: 23 ±2dBm)	3 (max: 23 ±2dBm)	3 (max: 23 ±2dBm)
Sensitivity	-100 (BW : 5 MHz) -97 (BW : 10 MHz) -95.2 (BW : 15MHz) -94 (BW : 20MHz)	-101.7 (BW : 1.4MHz) -98.7(BW : 3MHz) -97 (BW : 5 MHz) -94 (BW : 10 MHz) -92.2 (BW : 15MHz) -91 (BW : 20MHz)	- 105.7 (BW : 1.4MHz) -103.7(BW : 3MHz) -102 (BW : 5 MHz) -99 (BW : 10 MHz)	-98 (BW : 5 MHz) -95 (BW : 10 MHz) -93.2 (BW : 15MHz) -92 (BW : 20MHz)	- 105.7 (BW : 1.4MHz) -103.7(BW : 3MHz) -102 (BW : 5 MHz) -99 (BW : 10 MHz) -97 (BW : 15MHz) -96 (BW : 20MHz)
Cell Radius	>5Km	>5Km	>5Km	>5Km	>5Km
In/Output Impedance	50Ω	50Ω	50Ω	50Ω	50Ω
Operating Temperature	-30℃ ~ +60℃	-30℃ ~ +60℃	-30℃ ~ +60℃	-30℃ ~ +60℃	-30℃ ~ +60℃

2. Specification

2-6. LTE General Specification(TDD)

	Band38 (TDD)	Band39 (TDD)	Band40 (TDD)	Band41 (TDD)
Freq. Band[MHz] Uplink/Downlink	2570~2620	1880~1920	2300~2400	2555~2655
ARFCN range	37750~38249	38250~38649	38650~39649	40240~41240
Tx/Rx spacing	/	/	/	/
TCXO Frequency	19.2MHz	19.2MHz	19.2MHz	19.2MHz
Modulation	QPSK/16-QAM/64-QAM	QPSK/16-QAM/64-QAM	QPSK/16-QAM/64-QAM	QPSK/16-QAM/64-QAM
MS Power	-40dBm~ 25dBm	-40dBm~ 25dBm	-40dBm~ 25dBm	-40dBm~ 25dBm
Power Class	3 (max: 23 ±2dBm)	3 (max: 23 ±2dBm)	3 (max: 23 ±2dBm)	3 (max: 23 ±2dBm)
Sensitivity	-100 (BW:5 MHz) -97 (BW:10 MHz) -95.2 (BW:15MHz) -94 (BW:20MHz)	-100 (BW:5 MHz) -97 (BW:10 MHz) -95.2 (BW:15MHz) -94 (BW:20MHz)	-100 (BW:5 MHz) -97 (BW:10 MHz) -95.2 (BW:15MHz) -94 (BW:20MHz)	-99 (BW:5 MHz) -96 (BW:10 MHz) -94.2 (BW15MHz) -93 (BW:20MHz)
Cell Radius	>5Km	>5Km	>5Km	>5Km
In/Output Impedance	50Ω	50Ω	50Ω	50Ω
Operating Temperature	-30℃ ~ +60℃	-30℃ ~ +60℃	-30℃ ~ +60℃	-30℃ ~ +60℃

3. Operation Instruction and Installation

Main Function

Item	Description
OS	Android M OS
RF	GSM850/900/1800/1900, CDMA, WCDMA(1/2/5/8), TDS(34/39), FDD(1/3/5/7/8)TDD(38/39/40/41)
Battery	3000mAh
Base Band	MSM8953 OCTA A53 2.2GHz
Other RF	GPS, Glonass, Beidou, BT4.2, USB 2.0, WIFI 802.11 a/b/g/n, NFC
Camera	F : 16M FF F1.9 R : 16M PDAF F1.9 w/Dual LED Flash
LCD	5.2" super AMOLED, 1920*1080(FHD)
RAM	4GB
Sensor	Proxi+RGB / Accel / Gyro, Magnetic / FPS
Accessory	Charger: 5V/2A or 9V/1.67A Data cable: 2.8pi, 1.2m

9. Reference Abbreviate

Reference Abbreviate

- **AAC**: Advanced Audio Coding.
- **AVC** : Advanced Video Coding.
- **BER** : Bit Error Rate
- **BPSK**: Binary Phase Shift Keying
- **CA** : Conditional Access
- **CDM** : Code Division Multiplexing
- **C/I** : Carrier to Interference
- **DMB** : Digital Multimedia Broadcasting
- **EN** : European Standard
- **ES** : Elementary Stream
- **ETSI**: European Telecommunications Standards Institute
- **MPEG**: Moving Picture Experts Group
- **PN** : Pseudo-random Noise
- **PS** : Pilot Symbol
- **QPSK**: Quadrature Phase Shift Keying
- **RS** : Reed-Solomon
- **SI** : Service Information
- **TDM** : Time Division Multiplexing
- **TS** : Transport Stream

1. Safety Precautions

1-1. Repair Precaution

Before attempting any repair or detailed tuning, shield the device from RF noise or static electricity discharges.

Use only demagnetized tools that are specifically designed for small electronic repairs, as most electronic parts are sensitive to electromagnetic forces.

Use only high quality screwdrivers when servicing products. Low quality screwdrivers can easily damage the heads of screws.

Use only conductor wire of the properly gauge and insulation for low resistance, because of the low margin of error of most testing equipment.

We recommend 22-gauge twisted copper wire.

Hand-soldering is not recommended, because printed circuit boards (PCBs) can be easily damaged, even with relatively low heat. Never use a soldering iron with a power rating of more than 100 watts and use only lead-free solder with a melting point below 250°C (482°F).

Prior to disassembling the battery charger for repair, ensure that the AC power is disconnected. Always use the replacement parts that are registered in the SEC system. Third-party replacement parts may not function properly.

1. Safety Precautions

1-2. ESD(Electrostatically Sensitive Devices) Precaution

Many semiconductors and ESDs in electronic devices are particularly sensitive to static discharge and can be easily damaged by it. We recommend protecting these components with conductive anti-static bags when you store or transport them.

Always use an anti-static strap or wristband and remove electrostatic buildup or dissipate static electricity from your body before repairing ESDs.

Ensure that soldering irons have AC adapter with ground wires and that the ground wires are properly connected.

Use only desoldering tools with plastic tips to prevent static discharge.

Properly shield the work environment from accidental electrostatic discharge before opening packages containing ESDs.

The potential for static electricity discharge may be increased in low humidity environments, such as air-conditioned rooms. Increase the airflow to the working area to decrease the chance of accidental static electricity discharges.

6. Level 1 Repair

6-1. S/W installation

6-1-1. Required items in order to install S/W

- Installation program: Downloader Program ([Odin3 v3.12.5.exe](#))
- Mobile Phone
- Data Cable
- Mobile device specific S/W: Binary files

✕ Settings




Data Cable : GH39-01886A

6. Level 1 Repair

6-1-2. S/W Installation Program (Downloader program)

- Open up the S/W Installation Program by executing the "**Odin3 v3.12.5.exe**"

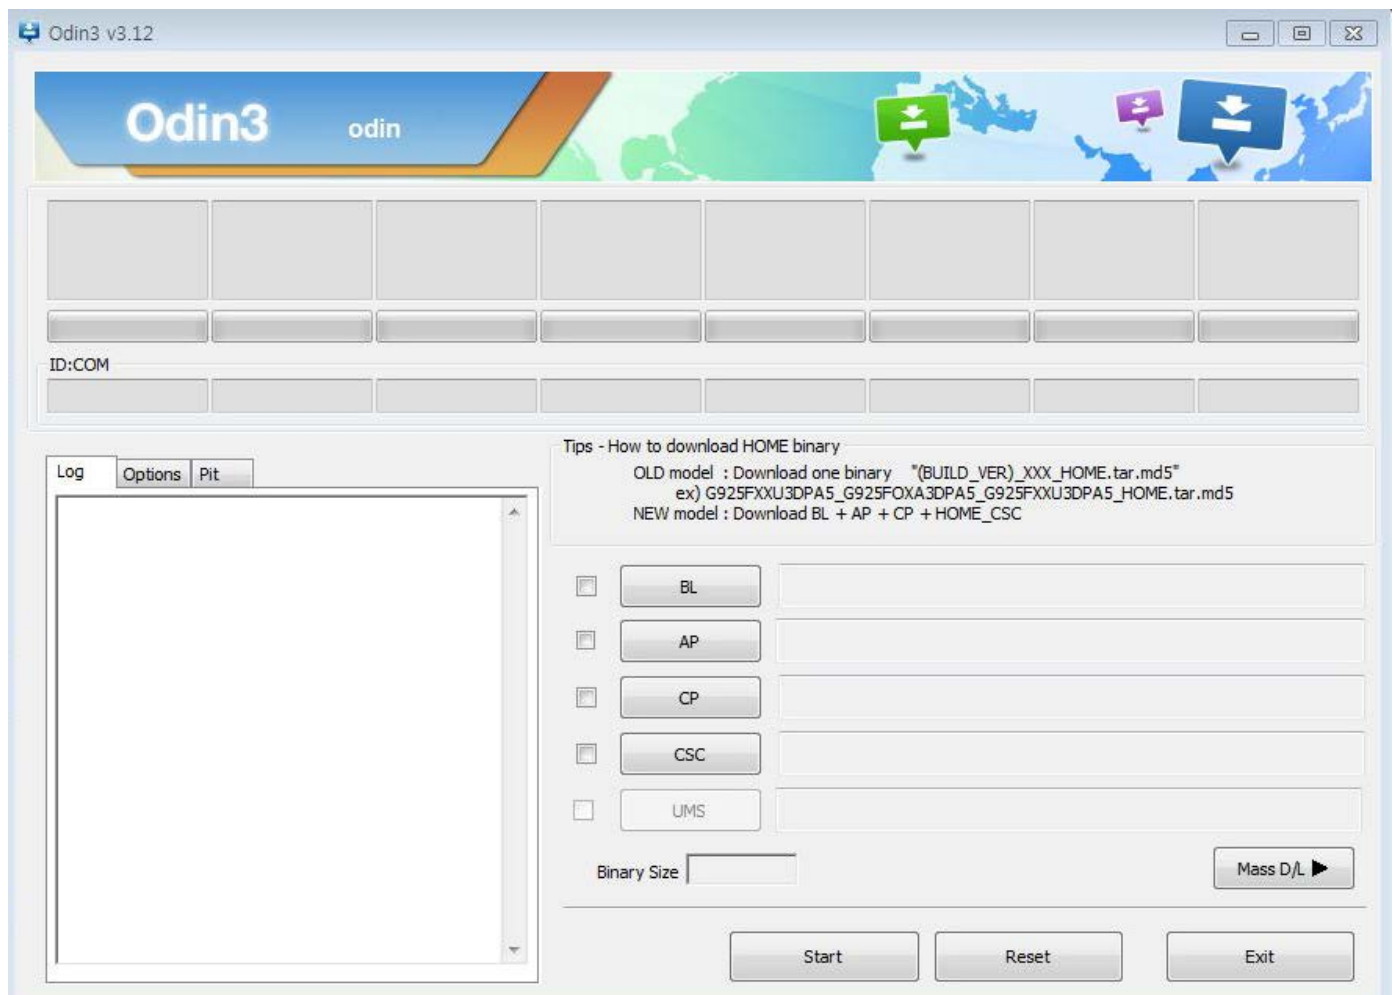


6. Level 1 Repair

1. Enable the check mark by click on the following options,

- Check Auto Reboot, Re-Partition, and F. Reset Time-
- Check PIT
- Check Nand Erase All
- Check BL, AP, CP, and CSC Files


* Note : "Odin v3.12 or above" checks MD5 checksum just after file selection.

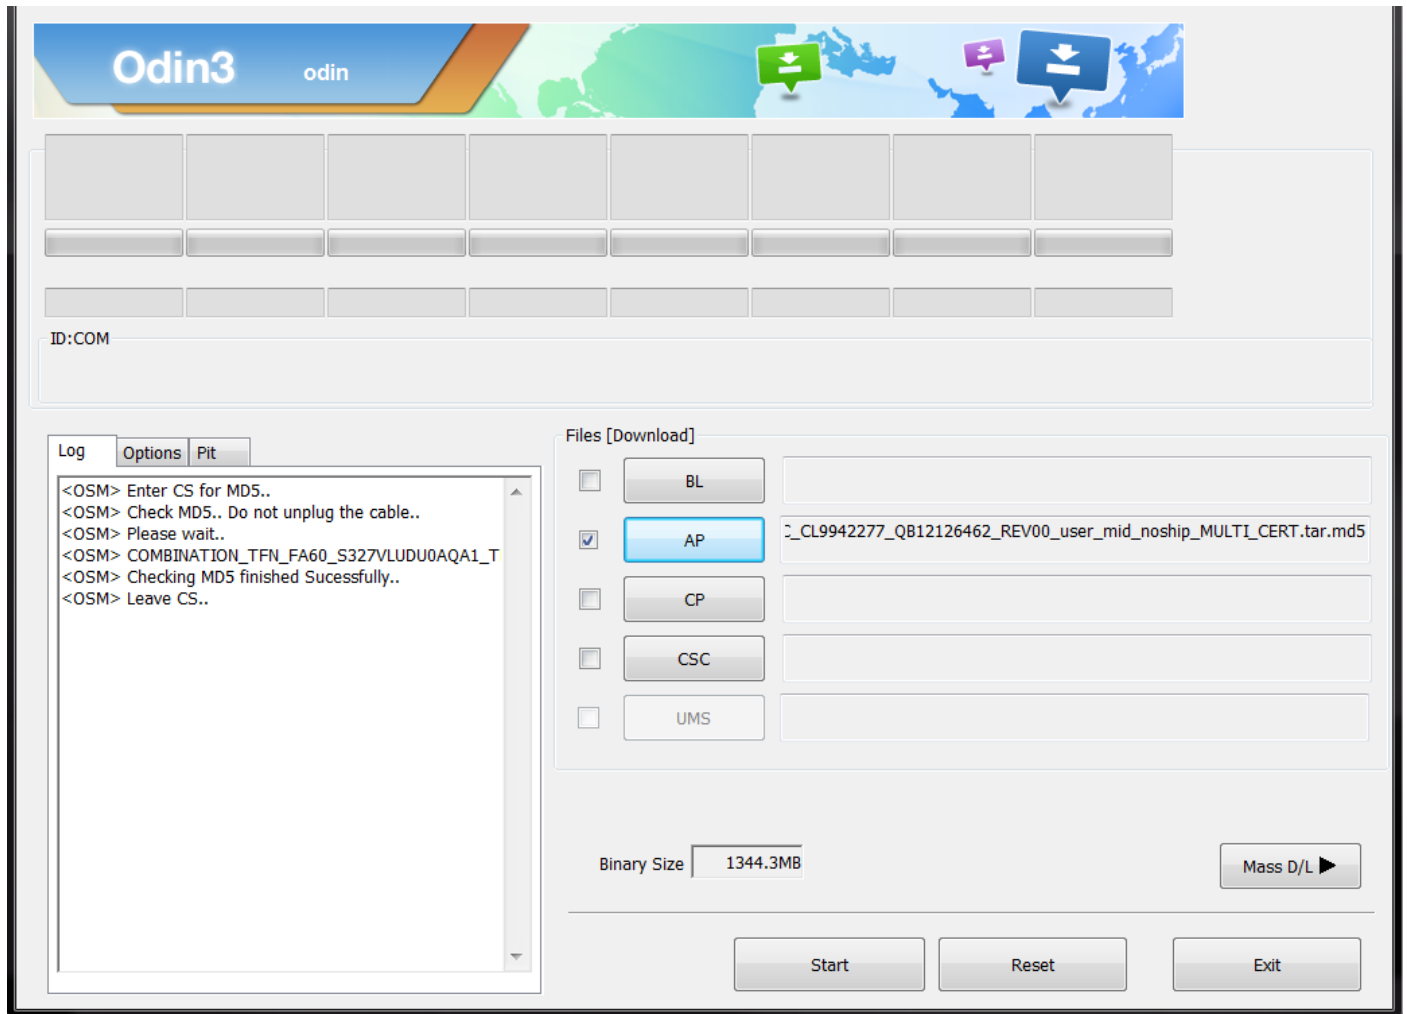

6. Level 1 Repair

2. Enter into Download Mode


- Enter into Download Mode by pressing Home button, Volume Down button and Power On/Off Button simultaneously followed by pressing Volume up button as a direction of the phone.

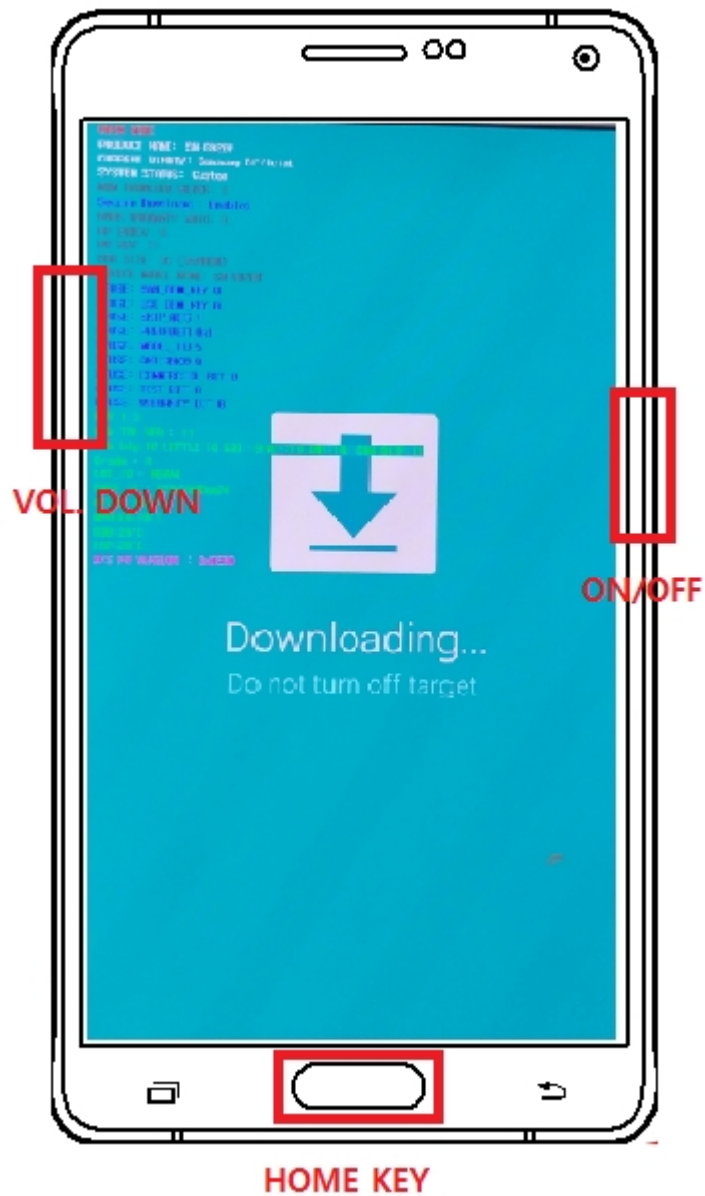

6. Level 1 Repair


3. Connect the device to PC via Data Cable.

Make sure that the one of communication ports [ID:COM] box is highlighted in sky blue. The device is now connected with the PC and ready to download the binary files in it.

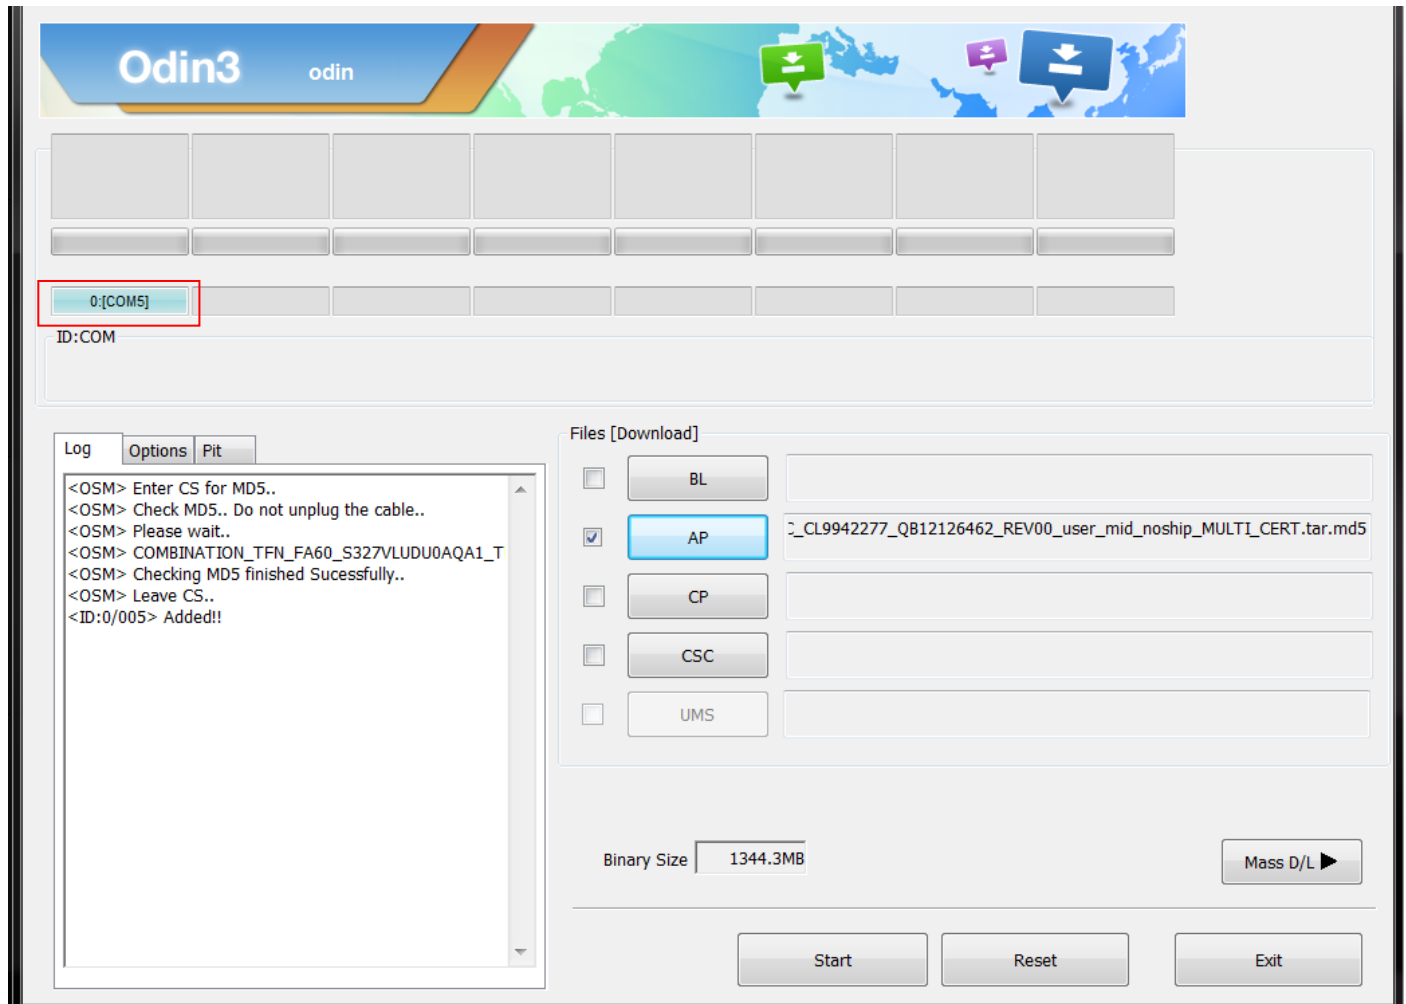

6. Level 1 Repair

4. Start downloading the binary files into the device by clicking Start button on the screen. The green colored "PASS!" sign will appear on the upper-left box if the binary files have been successfully downloaded into the device.

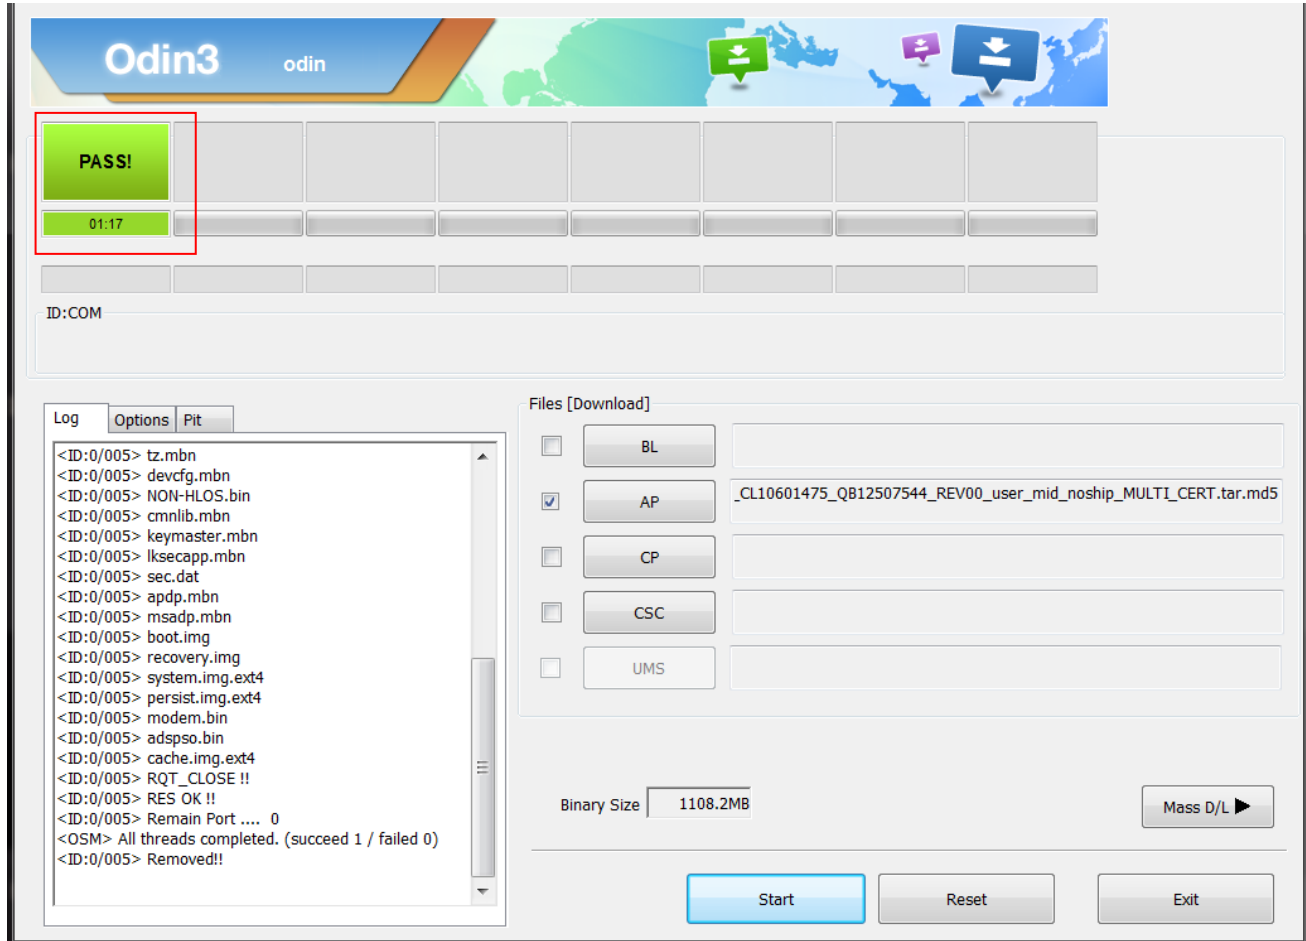

5. Disconnect the device from the Data cable.
6. Once the device boots up, you can check the version of the binary file or name by pressing the following code in sequence;
***#1234#**

You can perform Factory Reset by Settings → Accounts → Backup and reset


6. Level 1 Repair

6-2 IMEI writing

6-2-1 Preparation

- New IMEI writing Program has been released.
- Supported Model : Models which CAB files are uploaded on HHPsvc INI File category, instead of ini file.
- Refer to below IMEI writing procedure.

- H/W

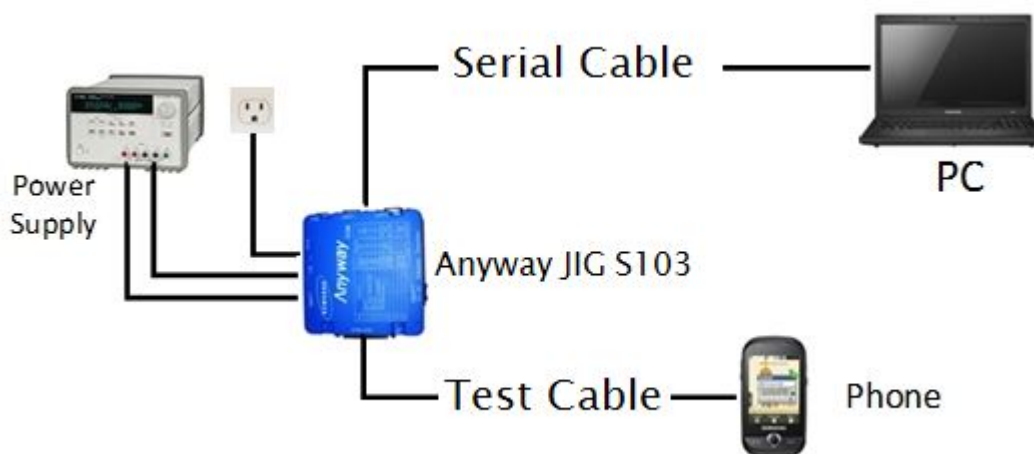


- S/W

① Library Install	To use Daseul, library files should be installed. Refer to SVC Bulletin “(11-82) Daseul (New IMEI writing Program) Library Install guide_rev1.0”
② Launcher	DASEUL_SVC_Launcher_v3_0_25 or higher -Uploaded on HHPsvc Notice
③ Runtime File	1. DASEUL_Runtime_Ver_3.1.139.0.CAB or higher -Uploaded on HHPsvc Notice 2. Make 'ModelName' folder at the same position with launcher & Runtime file.
④ Model File	Copy Model File under the 'Model Name' folder


6. Level 1 Repair

6-2-2 IMEI writing Process


1. Run DASEUL_SVC_Launcher_v3.0.10.exe




2. Select Service Mode

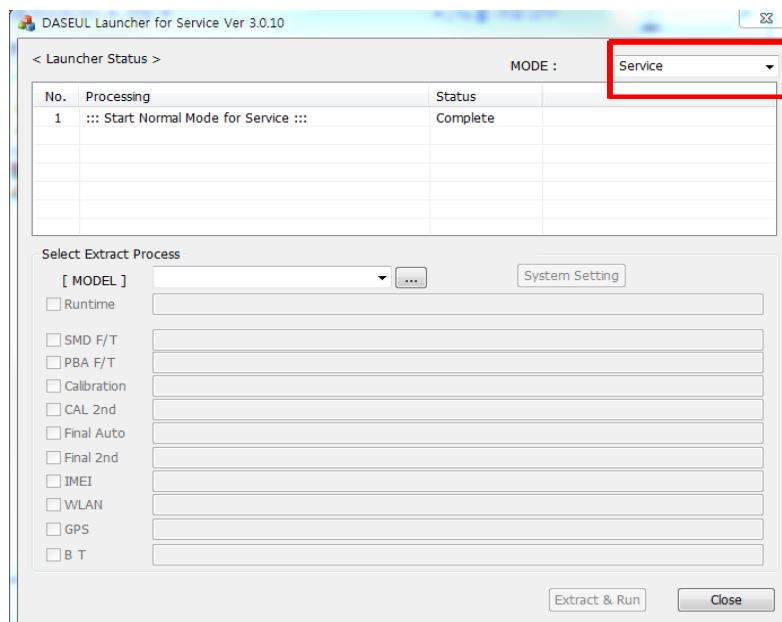

3. Click and Select folder where the Launcher exists

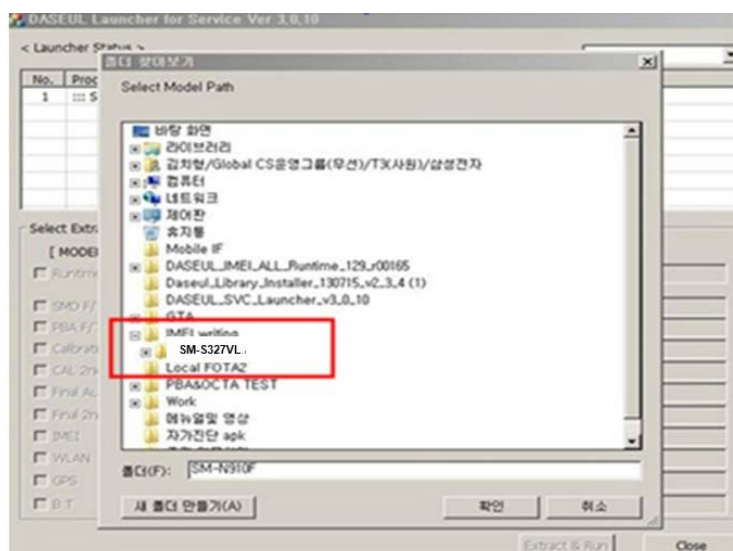

4. Select Model



DASEUL Launcher for Service Ver 3.0.10

< Launcher Status > MODE : Service

No.	Processing	Status
1	K8 Program	Complete
2	Remove Old Files (0 Files)	Complete
3	Extracting DASEUL_Runtime_Ver_3.1.129.0.CAB File	...ing

Select Extract Process: C:\Users\WChi-Hyeong\Desktop\W3ME1

[MODEL] SM-S327VL

☐ Runtime DASEUL_Runtime_Ver_3.1.129.0.CAB

☐ SMD F/T

☐ SBA F/T

☐ Calibration

☐ CAL 2nd

☐ Final Auto

☐ Final Ind

☒ W3ME1

☐ W3A

☐ OPS


☐ B.T

System Setting

Extract & Run Close


6. Level 1 Repair

6. Check IMEI Write / IMEI Check and click IMEI SVC & Repair Option.

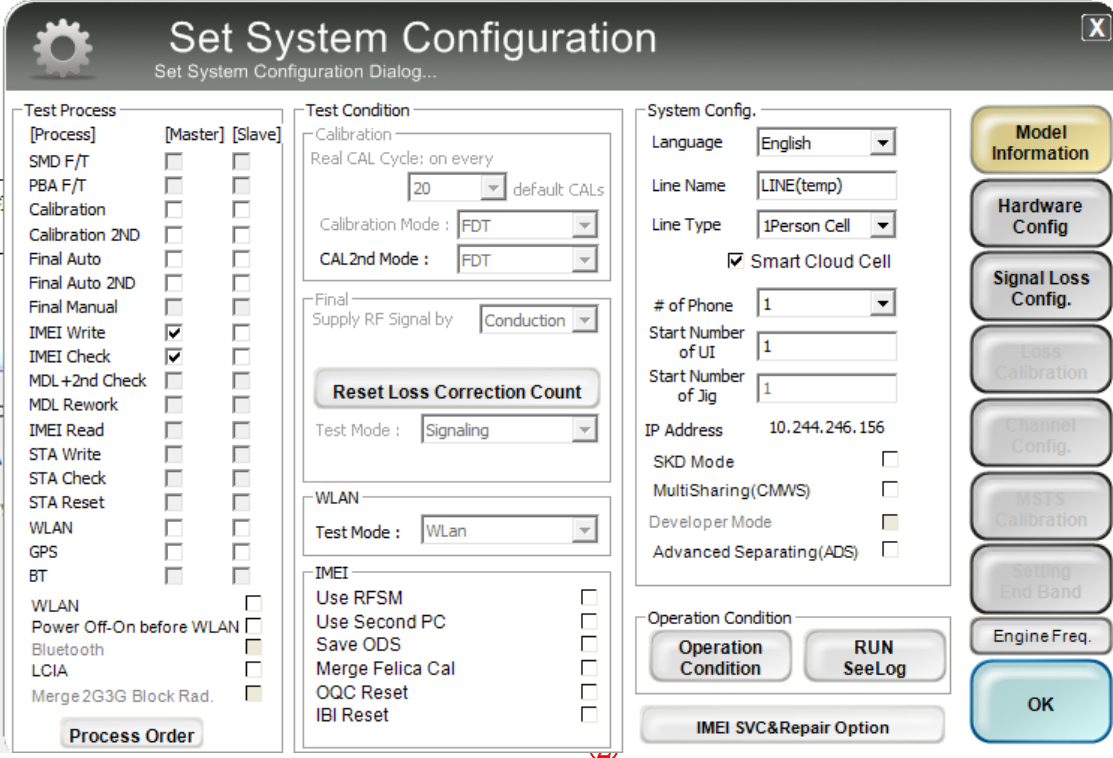

The 'Set System Configuration' dialog box is divided into several sections. On the left, the 'Test Process' section has a list of items with checkboxes for [Master] and [Slave] modes. 'IMEI Write' and 'IMEI Check' are checked under the [Master] column. The 'Test Condition' section includes 'Calibration' (Real CAL Cycle: on every 20, Calibration Mode: FDT, CAL2nd Mode: FDT), 'Final' (Supply RF Signal by: Conduction, Test Mode: Signaling), 'WLAN' (Test Mode: Wlan), and 'IMEI' (Use RFSM, Use Second PC, Save ODS, Merge Felica Cal, OQC Reset, IBI Reset). The 'System Config.' section includes 'Language' (English), 'Line Name' (LINE(temp)), 'Line Type' (1Person Cell), 'Smart Cloud Cell' (checked), '# of Phone' (1), 'Start Number of UI' (1), 'Start Number of Jig' (1), 'IP Address' (10.244.246.156), 'SKD Mode', 'MultiSharing(CMWS)', 'Developer Mode', and 'Advanced Separating(ADS)'. On the right, there are buttons for 'Model Information', 'Hardware Config', 'Signal Loss Config.', 'Loss Calibration', 'Channel Config.', 'MSTS Calibration', 'Setting End Band', 'Engine Freq.', and 'OK'. At the bottom, there are buttons for 'Operation Condition', 'RUN SeeLog', and 'IMEI SVC&Repair Option'.


7. Check SVC , User Ticket No and click OK

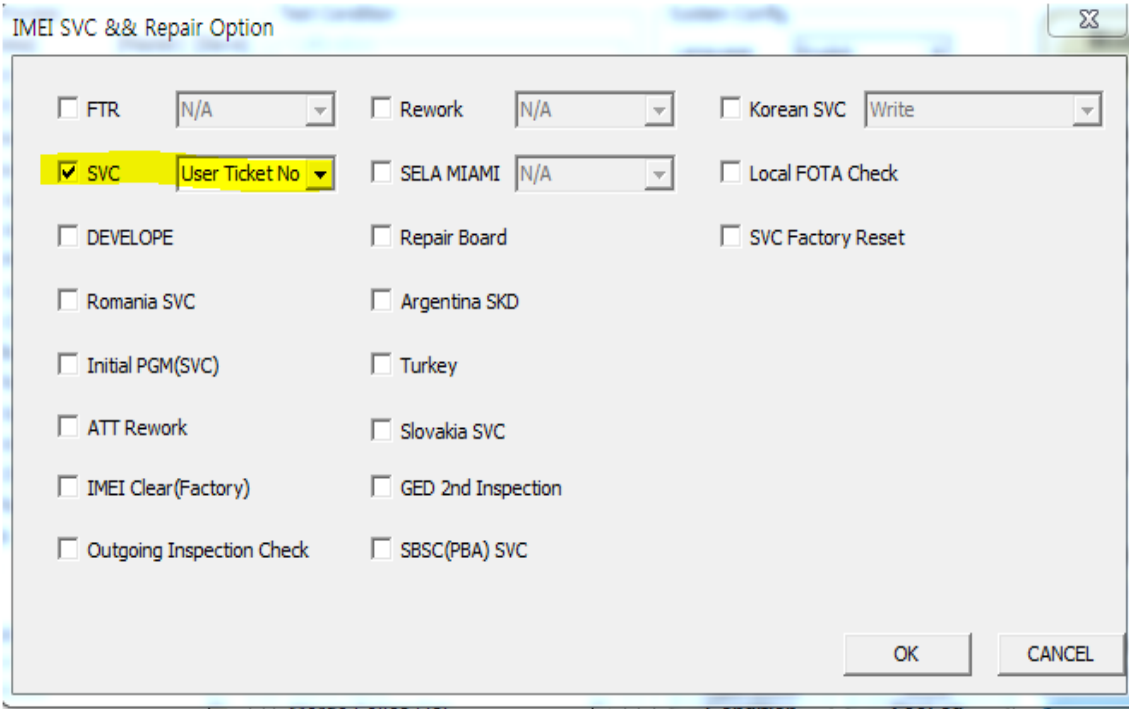

The 'IMEI SVC && Repair Option' dialog box contains several checkboxes and dropdown menus. The 'SVC' checkbox is checked, and the 'User Ticket No' dropdown is selected. Other options include 'FTR' (N/A), 'Rework' (N/A), 'Korean SVC' (Write), 'SELA MIAMI' (N/A), 'Local FOTA Check', 'DEVELOPE', 'Repair Board', 'SVC Factory Reset', 'Romania SVC', 'Argentina SKD', 'Initial PGM(SVC)', 'Turkey', 'ATT Rework', 'Slovakia SVC', 'IMEI Clear(Factory)', 'GED 2nd Inspection', 'Outgoing Inspection Check', and 'SBSC(PBA) SVC'. At the bottom, there are 'OK' and 'CANCEL' buttons.

6. Level 1 Repair


8. Click Hardware Config

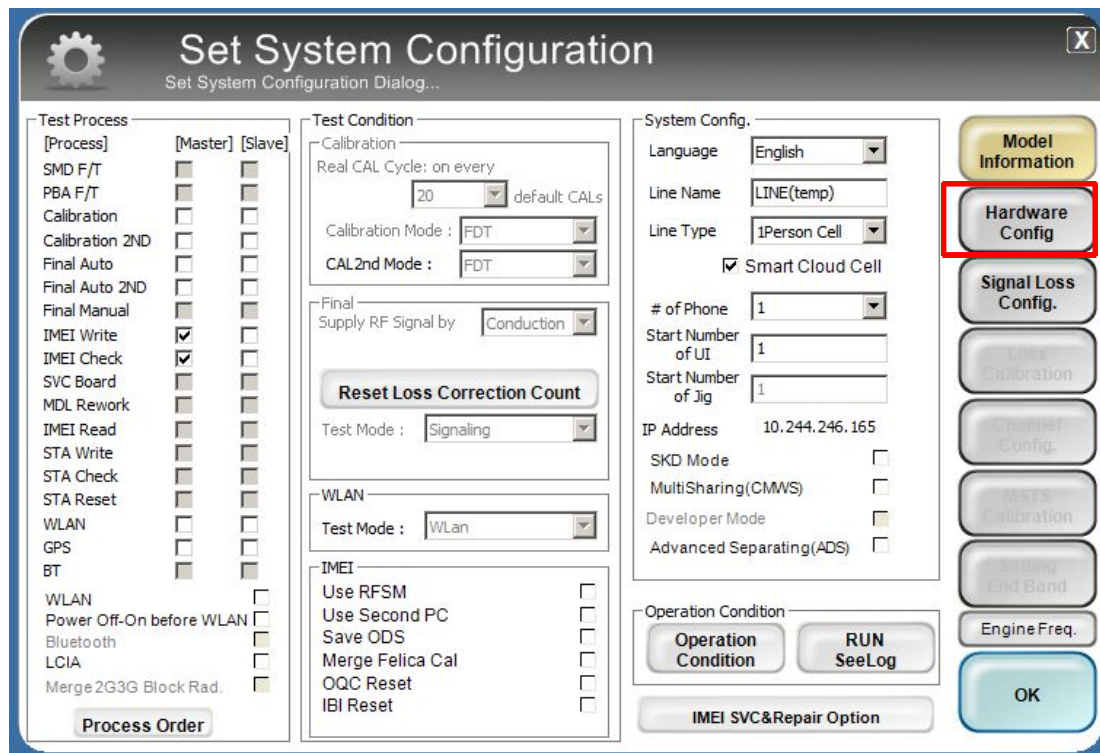

The 'Set System Configuration' dialog box is shown with the 'Hardware Config' button highlighted in red. The dialog is divided into several sections:

- Test Process:** A list of test processes with checkboxes for [Process], [Master], and [Slave].
- Test Condition:** Includes 'Calibration' (Real CAL Cycle, Calibration Mode, CAL2nd Mode), 'Final Supply RF Signal by' (Conduction), 'WLAN' (Test Mode), and 'IMEI' (Use RFSM, Use Second PC, Save ODS, Merge Felica Cal, OQC Reset, IBI Reset).
- System Config.:** Includes 'Language' (English), 'Line Name' (LINE(temp)), 'Line Type' (1Person Cell), 'Smart Cloud Cell' (checked), '# of Phone' (1), 'Start Number of UI' (1), 'Start Number of Jig' (1), 'IP Address' (10.244.246.165), 'SKD Mode', 'MultiSharing(CMWS)', 'Developer Mode', and 'Advanced Separating(ADS)'.
- Operation Condition:** Includes 'Operation Condition' and 'RUN SeeLog' buttons.
- Model Information:** A vertical stack of buttons: 'Model Information' (highlighted), 'Hardware Config' (highlighted in red), 'Signal Loss Config.', 'Loss Calibration', 'Channel Config.', 'MSTS Calibration', 'Setting End Band', 'Engine Freq.', and 'OK'.

9. Click Port Setting

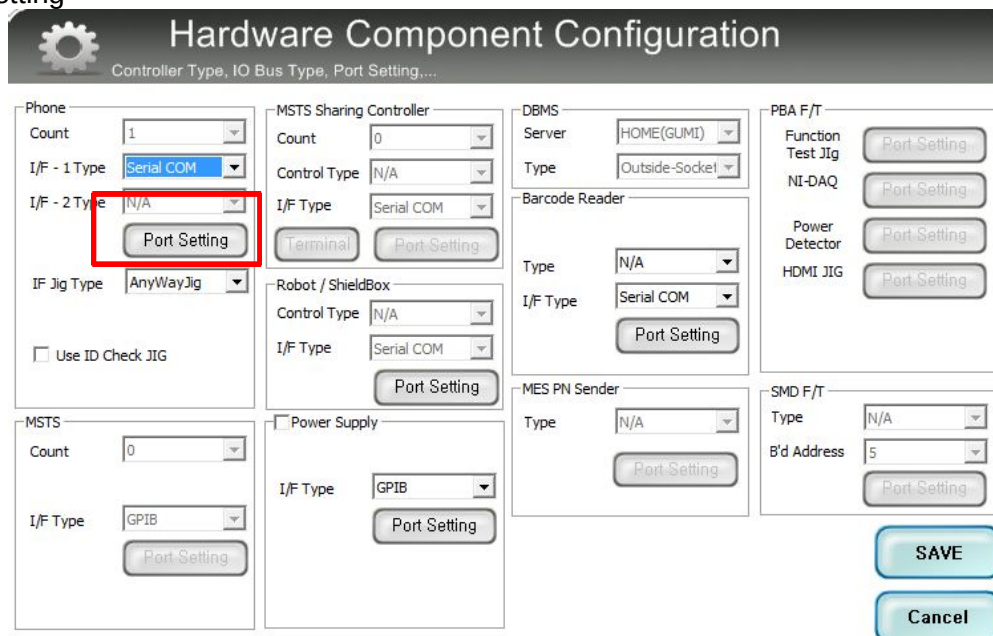


The 'Hardware Component Configuration' dialog box is shown with the 'Port Setting' button highlighted in red. The dialog is divided into several sections:

- Phone:** Includes 'Count' (1), 'I/F - 1 Type' (Serial COM), 'I/F - 2 Type' (N/A), 'IF Jig Type' (AnyWayJig), and 'Use ID Check JIG' (unchecked).
- MSTS:** Includes 'Count' (0) and 'I/F Type' (GPIB).
- MSTS Sharing Controller:** Includes 'Count' (0), 'Control Type' (N/A), 'I/F Type' (Serial COM), and 'Terminal' button.
- Robot / ShieldBox:** Includes 'Control Type' (N/A), 'I/F Type' (Serial COM), and 'Port Setting' button.
- Power Supply:** Includes 'I/F Type' (GPIB) and 'Port Setting' button.
- DBMS:** Includes 'Server' (HOME(GUMI)), 'Type' (Outside-Socket), and 'Barcode Reader' (Type: N/A, I/F Type: Serial COM, Port Setting button).
- MES PN Sender:** Includes 'Type' (N/A) and 'Port Setting' button.
- PBA F/T:** Includes 'Function Test Jig' (Port Setting button), 'NI-DAQ' (Port Setting button), 'Power Detector' (Port Setting button), and 'HDMI JIG' (Port Setting button).
- SMD F/T:** Includes 'Type' (N/A), 'B'd Address' (5), and 'Port Setting' button.
- Buttons:** 'SAVE' and 'Cancel' buttons at the bottom right.

6. Level 1 Repair


10. Select Port Number and SAVE

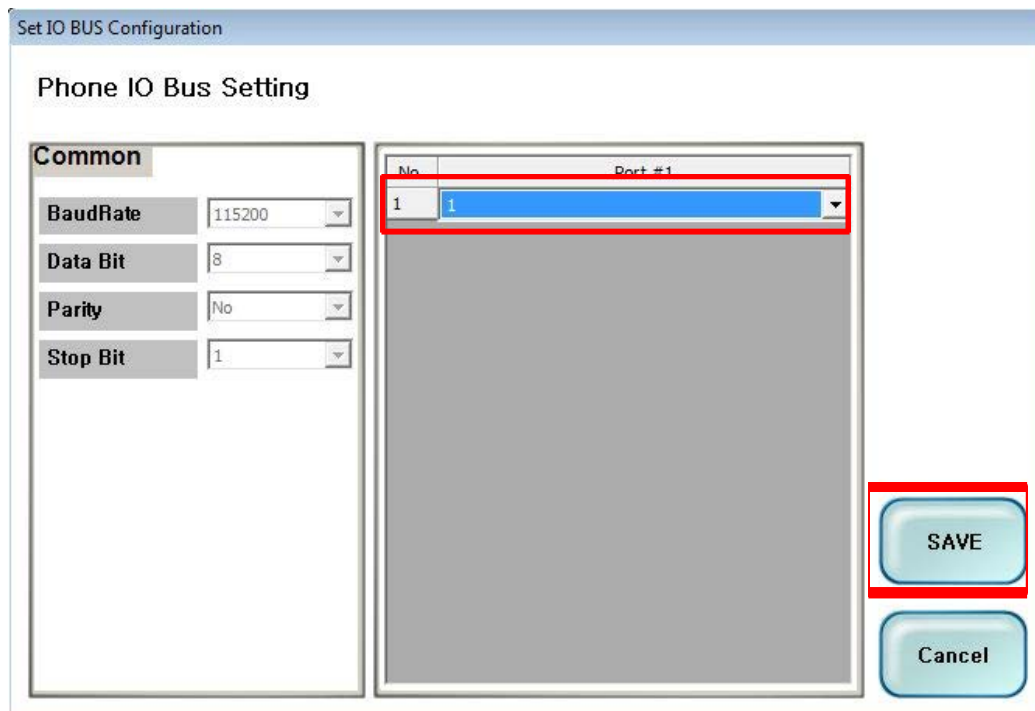

The image shows a 'Set IO BUS Configuration' dialog box with a 'Phone IO Bus Setting' section. On the left, under the 'Common' tab, are four settings: BaudRate (115200), Data Bit (8), Parity (No), and Stop Bit (1). On the right, there is a table with two columns: 'No.' and 'Port #1'. The first row of the table is highlighted with a red box, showing '1' in the 'No.' column and '1' in the 'Port #1' column. Below the table, there are two buttons: 'SAVE' and 'Cancel'. The 'SAVE' button is highlighted with a red box.

No.	Port #1
1	1


11. Click OK to proceed

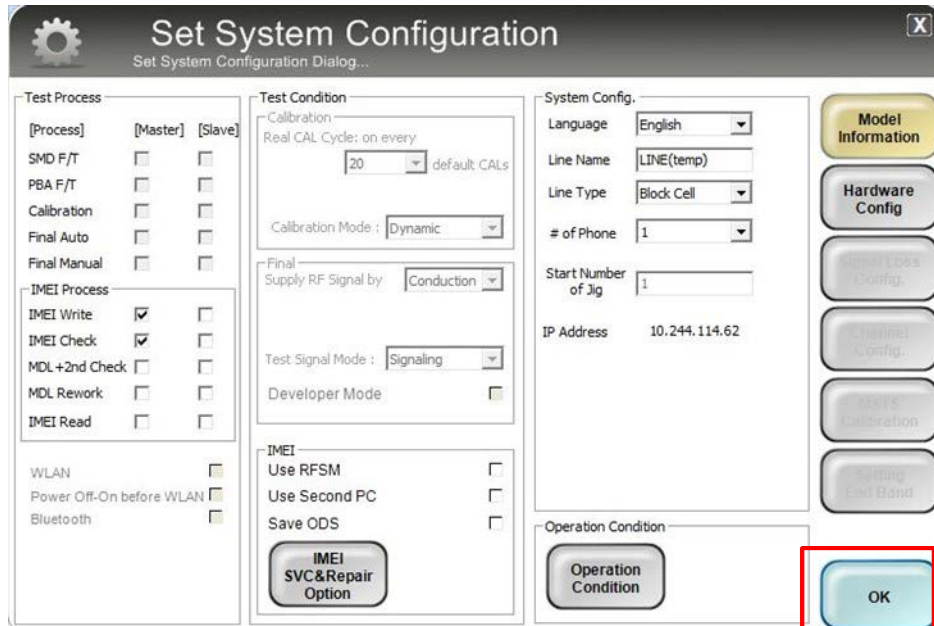


The image shows a 'Set System Configuration' dialog box. It has several sections: 'Test Process' with checkboxes for [Process], [Master], and [Slave]; 'Test Condition' with a 'Calibration' section (Real CAL Cycle: on every 20, default CALs, Calibration Mode: Dynamic) and a 'Final' section (Supply RF Signal by: Conduction, Test Signal Mode: Signaling, Developer Mode); 'System Config.' with fields for Language (English), Line Name (LINE(temp)), Line Type (Block Cell), # of Phone (1), Start Number of Jig (1), and IP Address (10.244.114.62); and 'Operation Condition' with a button labeled 'Operation Condition'. On the right side, there is a vertical stack of buttons: 'Model Information', 'Hardware Config', 'Signal Loss Config.', 'Channel Config.', 'Test Calibration', and 'Setting Test Band'. At the bottom right, there is a button labeled 'OK' which is highlighted with a red box.

6. Level 1 Repair

12. Click Model Info and OK when pop-up shows

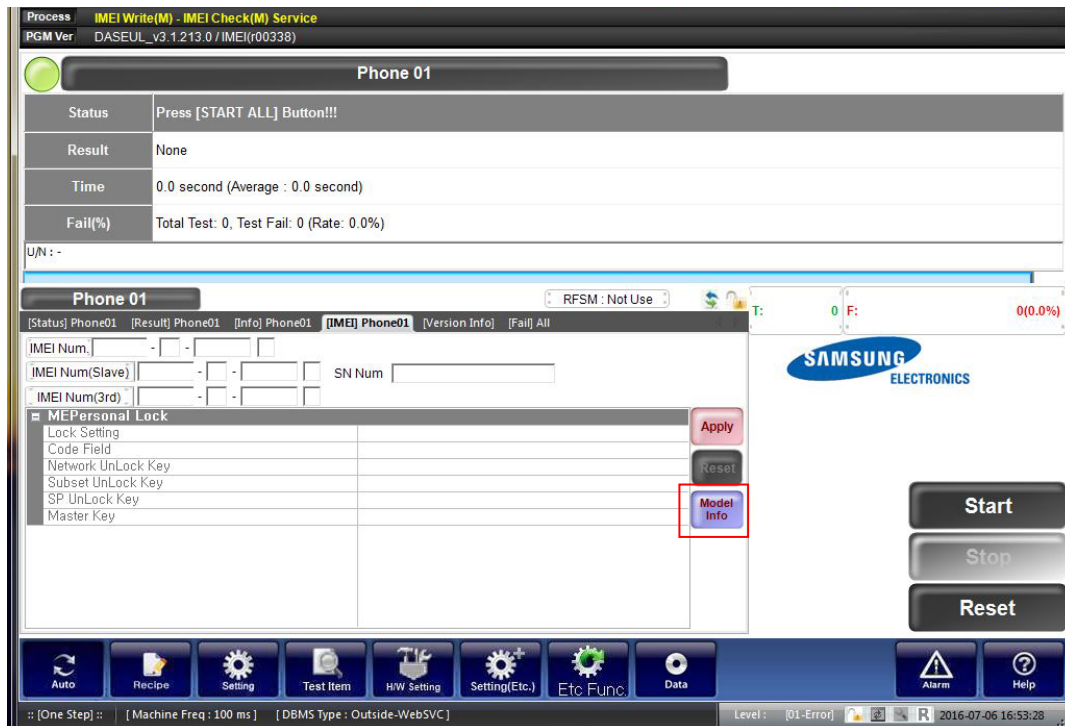

13. Click OK

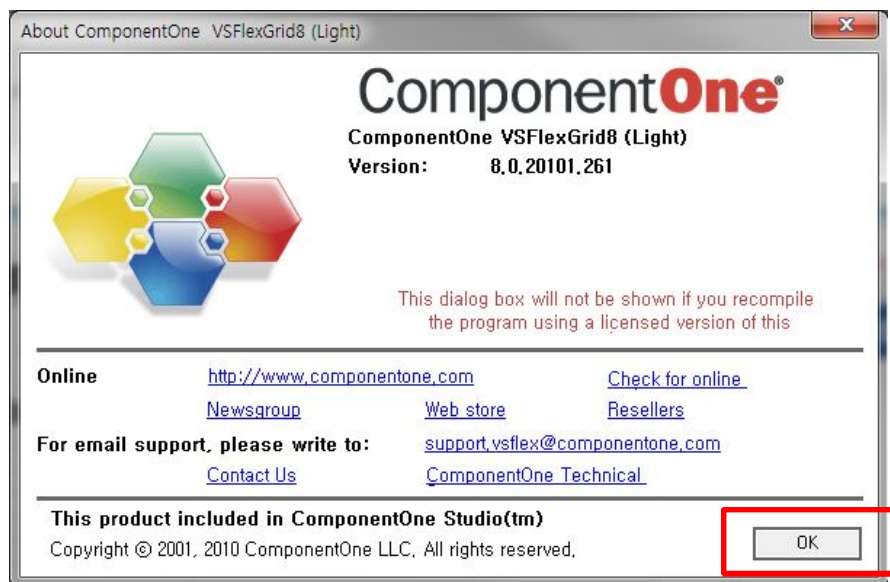

6. Level 1 Repair

14. Input SKU_CODE and BUYER, then click Save button.

※ Refer to HHPsvc→IMEI Review to check SKU Code and buyer

IMEI Writing Items

CSC

PDA

Software2

LPD

Contents

DMB

SKU_CODE

BUYER

Material_Code

Boot

Factory Software

Model name

Model name

Model name

TFN

☐ FactoryReset+Check

☐ Pre Product

☐ 2nd Func Test (AT&T)

☐ Lock Write (OQC)

☒ 2nd Check after Pwr Reset

☐ Use Fulltest(SW Verification)

☐ Wait for Reboot in SVC Check

MDL Rework

☐ Main Repair

☐ Sub PBA Repair(Grip)

☐ SMD Test NV Write

☐ WIFI Addr. Init

STA Option

☐ Don't DB Upload

☐ Packing Rework

☐ Tizen Download

☐ Android Download

☐ High Speed Boot Skip

☐ S-PEN is not inserted(Seed)

☐ Recent List Check(OQC&IBI)

☐ Check IMEI Dupli [RB]


Save

Load


Cancel

6. Level 1 Repair

15. Input IMEI Number and click Apply

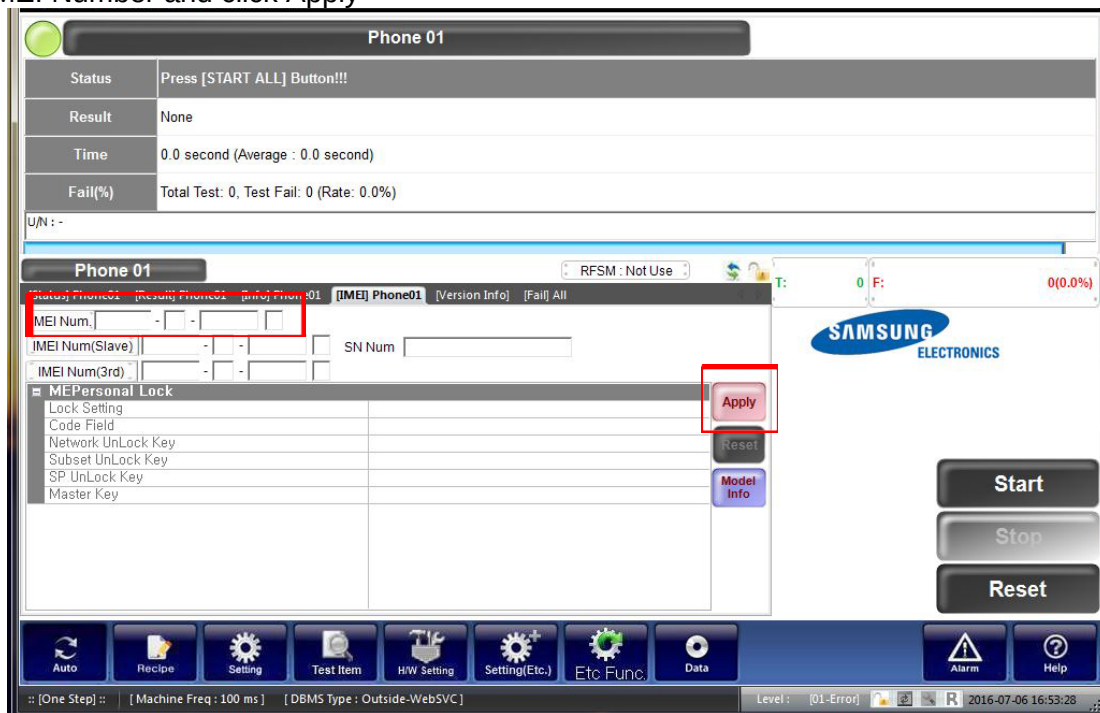

16. ① Click Start, and input IMEI writing ID and Password → ② input Ticket No

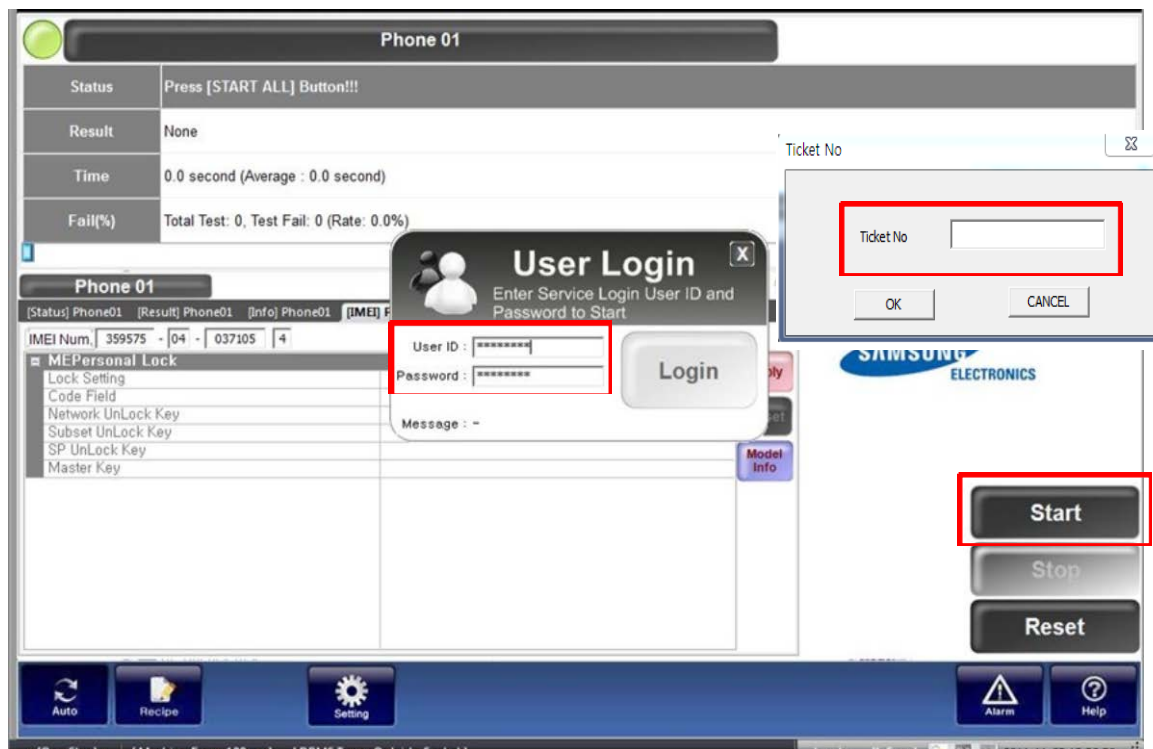


6. Level 1 Repair

17. Connect the phone to Anyway JIG


※ When you connect the phone, the phone should be turned off.

After connecting the phone, the phone will be booted automatically.

18. IMEI Writing Proceeding

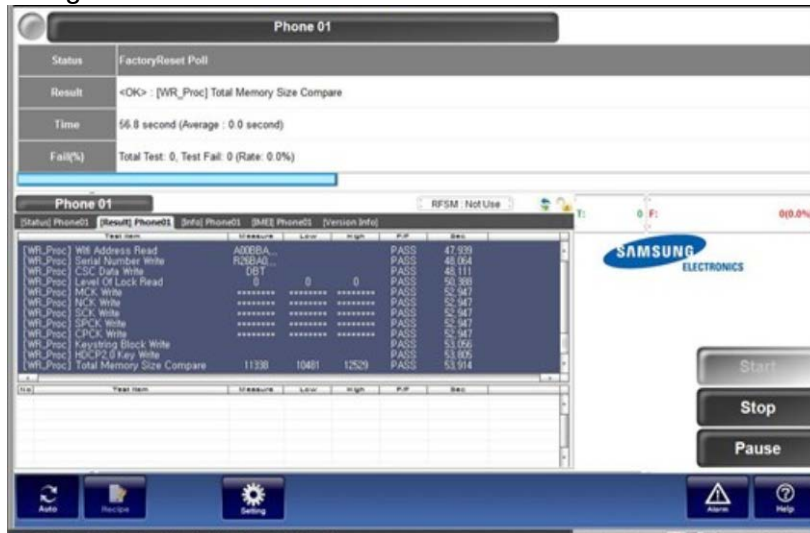

19. IMEI Writing Success

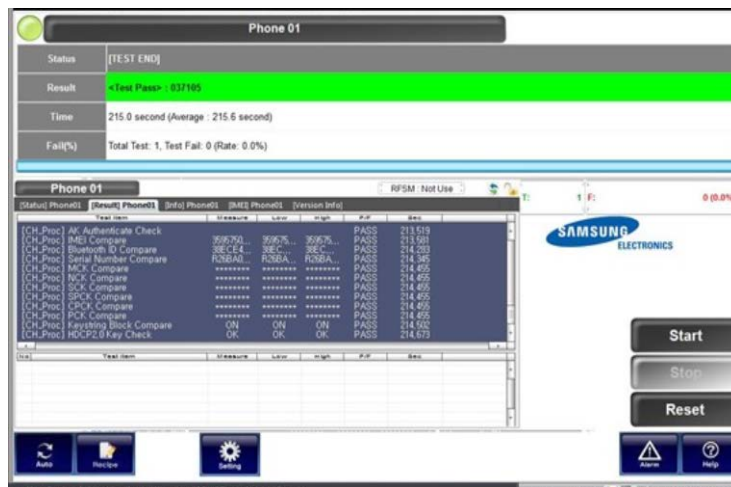

6. Level 1 Repair

6-3 RF Calibration

6-3-1. Required items in order to calibrate RF

- Installation program: RF Calibration Program
 - Daseul_Launcher_vx.x.xx.exe
 - Daseul_CAL_ALL_Runtime_x.x.xxx.x.CAB
 - Model File

: Slave: SM-C5010_OPEN_CALIBRATION_Ver_3.1.268.2TJ03_S

: Master: SM-C5010_OPEN_CALIBRATION_Ver_3.1.268.2TJ03_M

※ It is required to use the latest program.

- SM-C5010 Mobile Phone
- R&S CMW500
- E3632A Power Supply
- GPIB Cable (2ea)
- JIG BOX (Anyway S103)
- IF Cable (GH81-11962W)
- Adapter (GH81-11888K)
- UART Serial Cable
- RF Cable (GH81-11962U) 3EA
- 1.35ΦRF Cable (GH81-11962M 3ea)
- Divider Cable (GH81-11962B 1EA)


• Table of test cables

IF Cable	GH81-11962W			
	USB C type			
RF Cable (Manual)	GH81-11962M	GH81-11962U		
	1.2T, 102mm 3ea 	SMAP, 300mm 3ea 		
4 Port Divider	GH81-11962A	GH81-11962B	GH81-11962E	
	Divider 1ea 	Divider Cable 1ea 	50Ω terminator 1ea 	

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.


6. Level 1 Repair

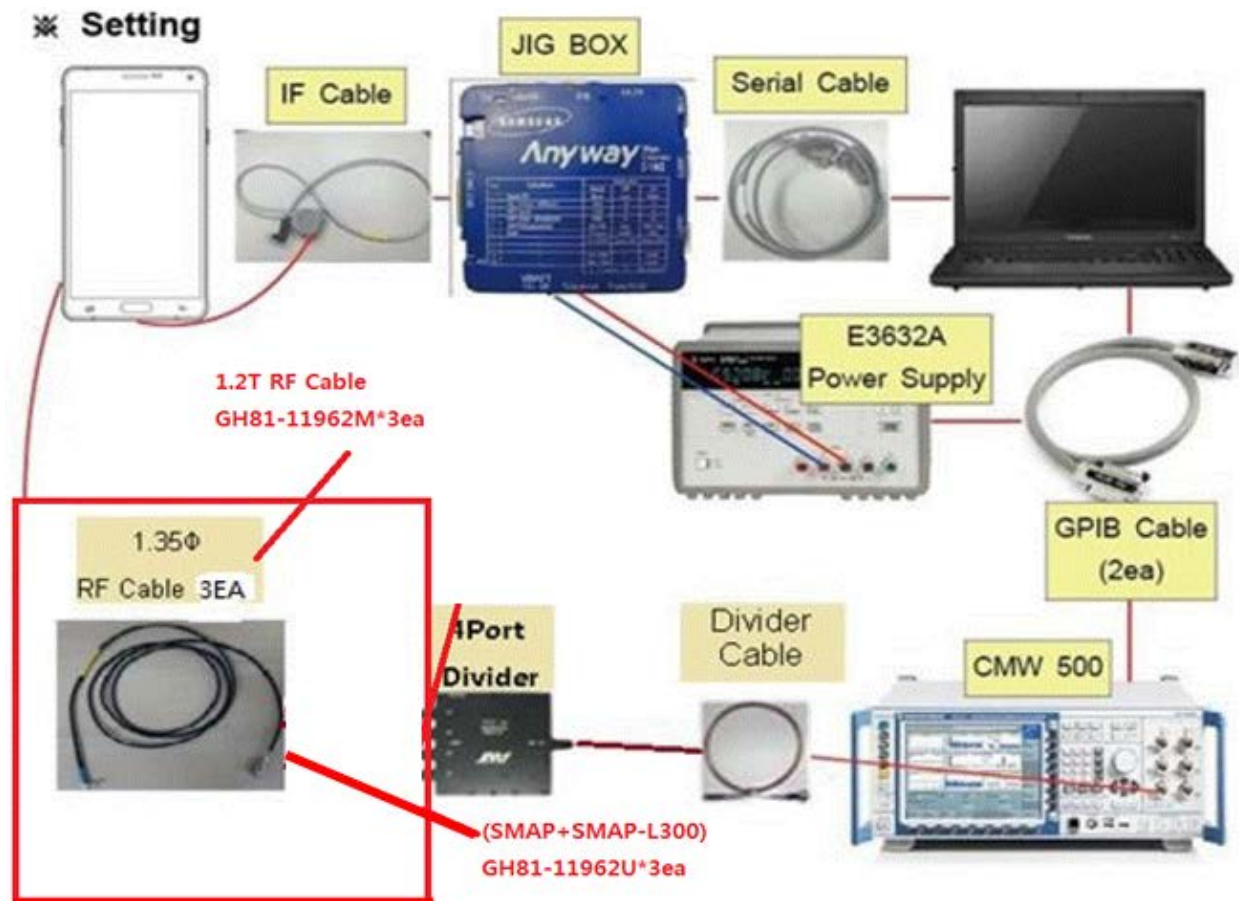


6. Level 1 Repair

6-3-2. RF Calibration Program

1. Run the RF Calibration Program Launcher, 'DASEUL_Launcher_vx.x.xx.exe'.

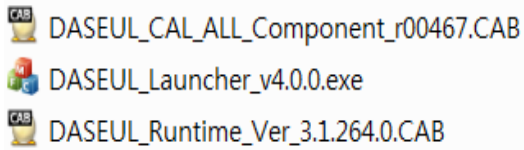


2. Check the 'Calibration' option and Click 'Extract & Run'.

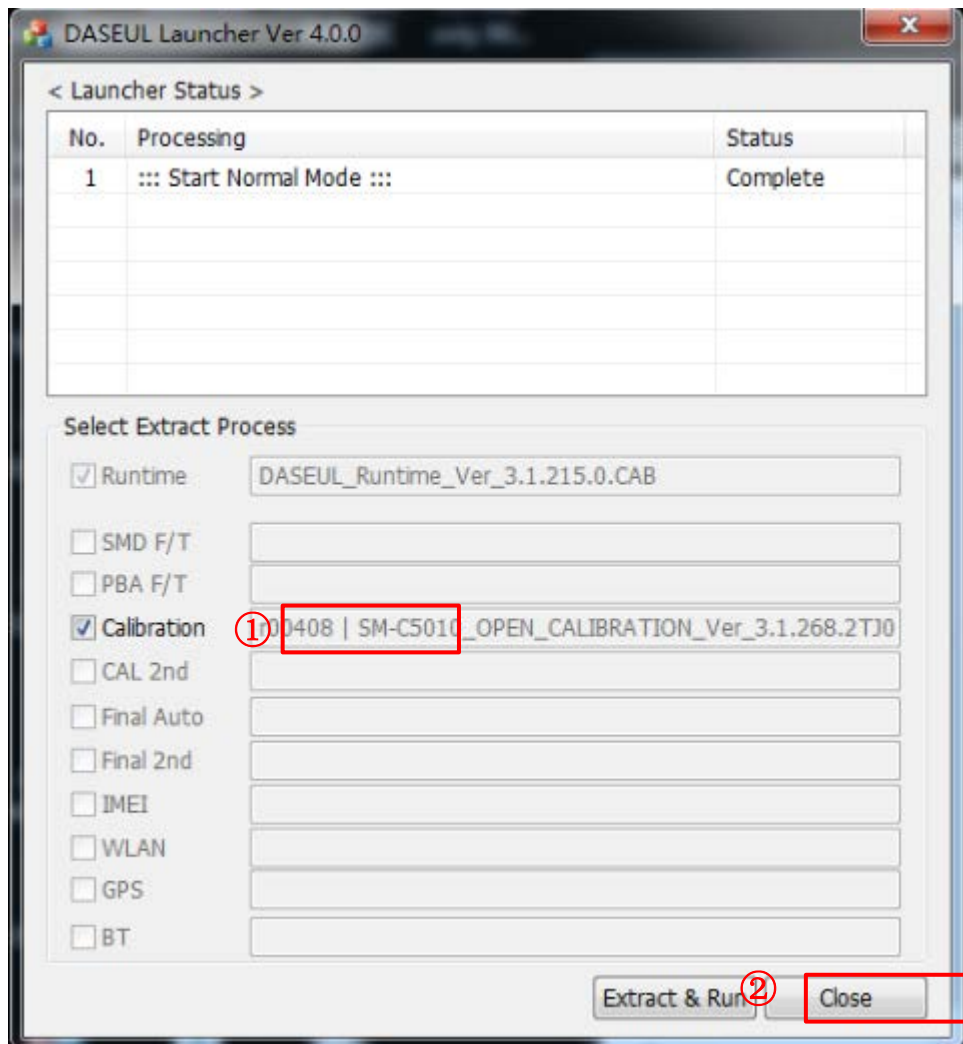

6. Level 1 Repair

3. Check the 'CAL' and open the [model file](#), then select 'Start' button. [SM-C5010]

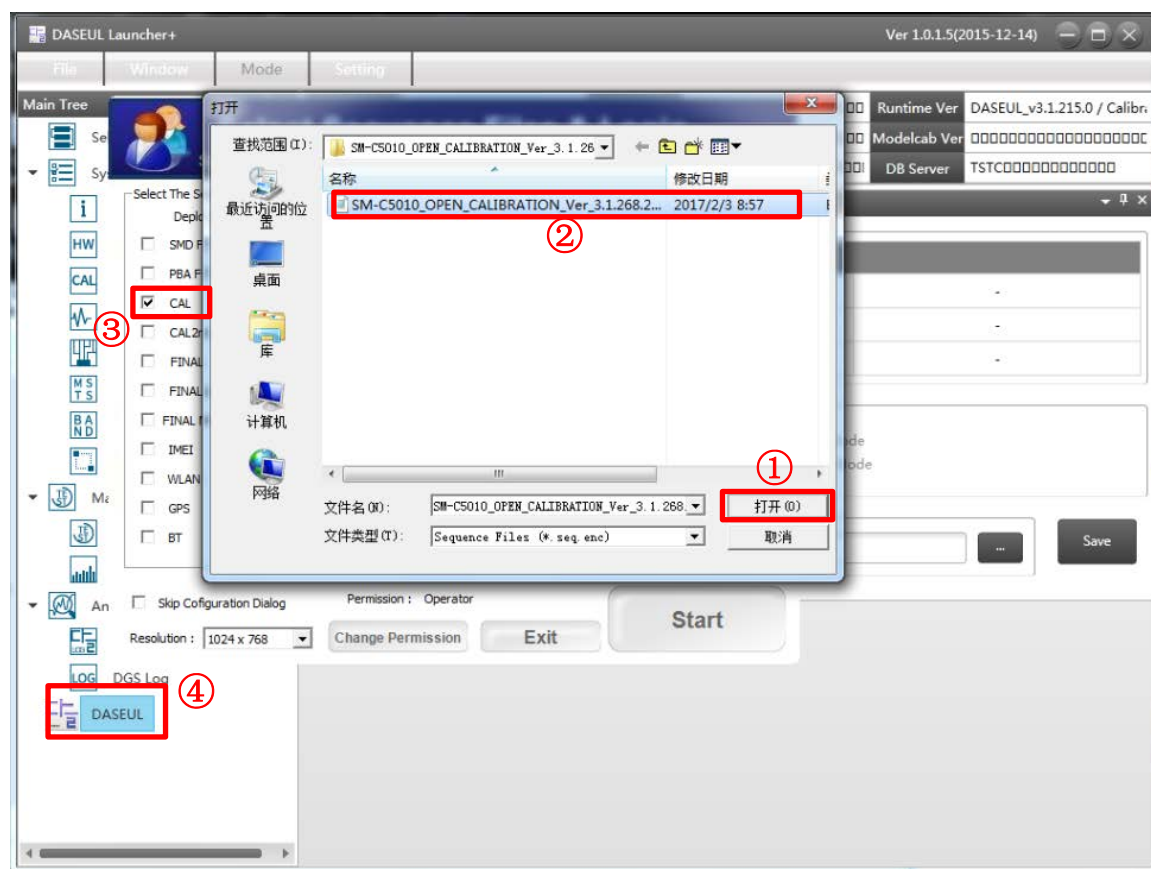

6. Level 1 Repair

4. Change the Line Type to 'Block Cell' and disable 'Smart Cloud Cell'.

Set System Configuration
Set System Configuration Dialog...

Test Process

[Process]	[Master]	[Slave]
SMD F/T	☐	☐
PBA F/T	☐	☐
Calibration	☒	☐
Calibration 2ND	☐	☐
Final Auto	☐	☐
Final Auto 2ND	☐	☐
Final Manual	☐	☐
IMEI Write	☐	☐
IMEI Check	☐	☐
MDL+2nd Check	☐	☐
MDL Rework	☐	☐
IMEI Read	☐	☐
STA Write	☐	☐
STA Check	☐	☐
STA Reset	☐	☐
WLAN	☐	☐
GPS	☐	☐
BT	☐	☐
WLAN	☐	☐
Power Off-On before WLAN	☐	☐
Bluetooth	☐	☐
LCIA	☐	☐
Merge 2G3G Block Rad.	☐	☐

Test Condition

Calibration
Real CAL Cycle: on every 20 default CALs

Calibration Mode : FDT
CAL2nd Mode : FDT

Final
Supply RF Signal by Conduction

Reset Loss Correction Count

Test Mode : Signaling

WLAN
Test Mode : WLAN

IMEI
Use RFSM
Use Second PC
Save ODS
Merge Felica Cal
OQC Reset
IBI Reset

System Config.

Language : English
Line Name : LINE(temp)
Line Type : Block Cell
☐ Smart Cloud Cell

of Phone : 1
Start Number of UI : 1
Start Number of Jig : 1
IP Address : 10.244.247.23

SKD Mode
MultiSharing(CMWS)
Developer Mode
Advanced Separating(ADS)

Operation Condition

Operation Condition **RUN SeeLog**


IMEI SVC&Repair Option

Model Information
Hardware Config
Signal Loss Config.
Loss Calibration
Channel Config.
MSTS Calibration
Setting End Band
Engine Freq.
OK


Process Order

6. Level 1 Repair

5. Set the GPIB address of MSTS(CMW500) and Power Supply(E3632A) to enter 'Hardware Config' and 'Save'. (Check the GPIB address of equipments in advance)

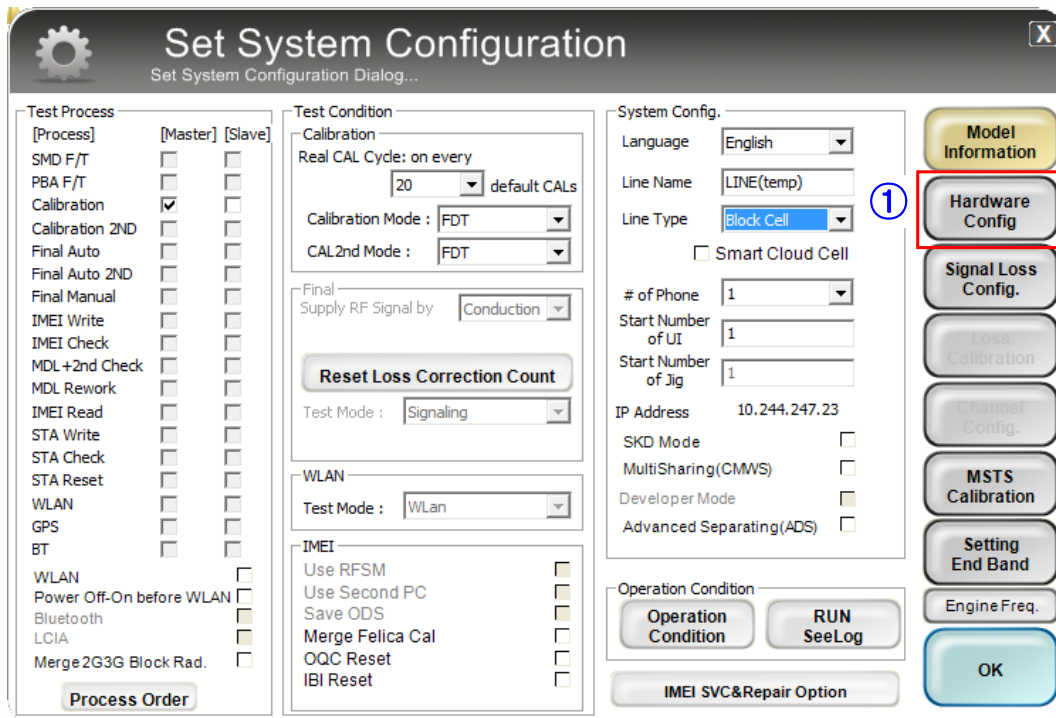


The 'Set System Configuration' dialog box is shown. It has a title bar with a gear icon and a close button. The main area is divided into several sections: 'Test Process' on the left with checkboxes for [Process], [Master], and [Slave]; 'Test Condition' in the top middle with fields for Calibration (Real CAL Cycle: on every 20, default CALs), Calibration Mode (FDT), and CAL2nd Mode (FDT); 'System Config.' on the right with fields for Language (English), Line Name (LINE(temp)), Line Type (Block Cell), # of Phone (1), Start Number of UI (1), Start Number of Jig (1), IP Address (10.244.247.23), SKD Mode, MultiSharing(CMWS), Developer Mode, and Advanced Separating(ADS); and a 'Model Information' section on the far right with buttons for Hardware Config, Signal Loss Config., Loss Calibration, Channel Config., MSTS Calibration, Setting End Band, Engine Freq., and OK. A red box highlights the 'Hardware Config' button, and a blue circle with the number 1 is next to it. There are also buttons for 'Reset Loss Correction Count', 'Test Mode' (Signaling), 'WLAN' (Test Mode: WLAN), 'IMEI' (Use RFSM, Use Second PC, Save ODS, Merge Felica Cal, OQC Reset, IBI Reset), 'Operation Condition', 'RUN SeeLog', and 'IMEI SVC&Repair Option'.

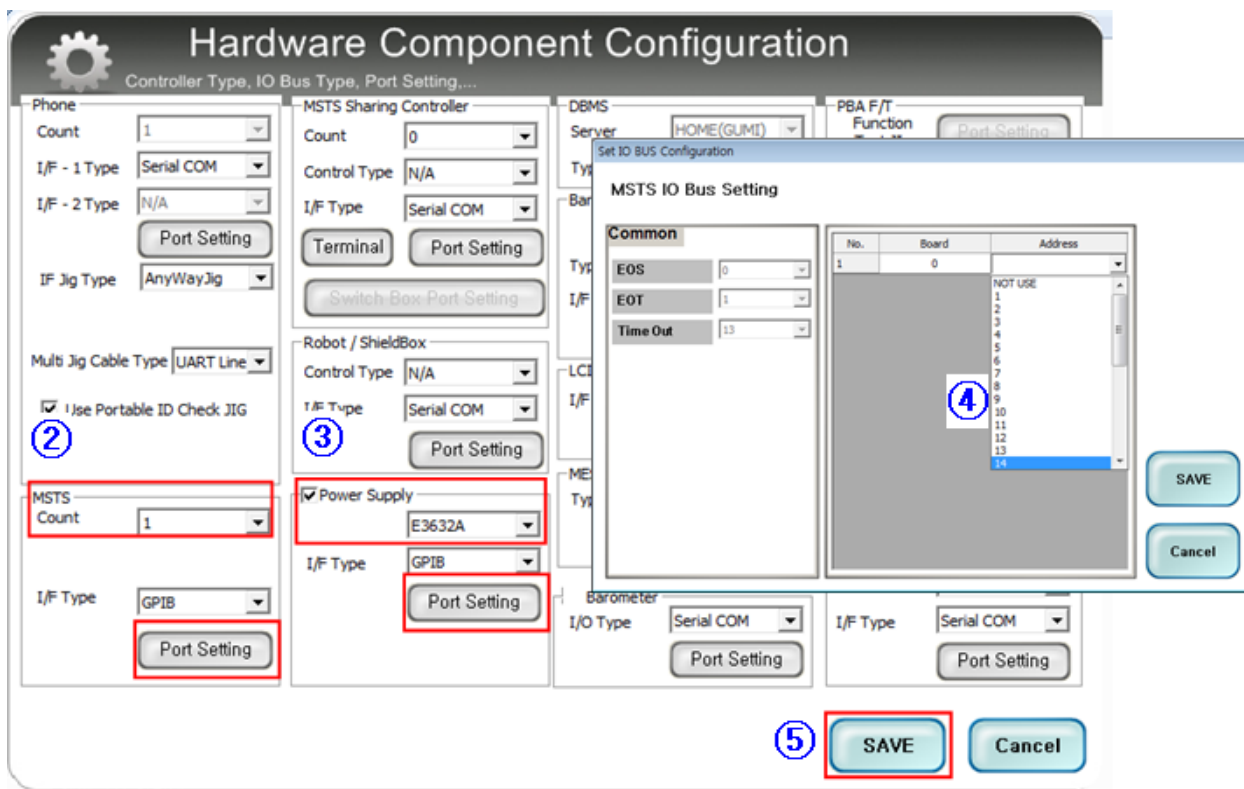

The 'Hardware Component Configuration' dialog box is shown. It has a title bar with a gear icon and a close button. The main area is divided into several sections: 'Phone' on the left with fields for Count (1), I/F - 1 Type (Serial COM), I/F - 2 Type (N/A), I/F Jig Type (AnyWayJig), Multi Jig Cable Type (UART Line), and a checkbox for 'Use Portable ID Check JIG'; 'MSTS Sharing Controller' in the top middle with fields for Count (0), Control Type (N/A), I/F Type (Serial COM), and buttons for Terminal, Port Setting, and Switch Box Port Setting; 'Robot / ShieldBox' in the bottom middle with fields for Control Type (N/A), I/F Type (Serial COM), and a button for Port Setting; 'Power Supply' in the bottom middle with a checked checkbox, fields for Count (1), I/F Type (GPIB), and a button for Port Setting; 'DBMS' on the right with fields for Server (HOME(GUMI)), Type, and Bar; 'MSTS IO Bus Setting' in the bottom right with a table for No., Board, and Address, and buttons for SAVE and Cancel; and a 'Barometer' section at the bottom with fields for I/O Type (Serial COM) and I/F Type (Serial COM), and buttons for Port Setting and SAVE. A red box highlights the 'Power Supply' section, and a blue circle with the number 2 is next to the 'Use Portable ID Check JIG' checkbox. A blue circle with the number 3 is next to the 'Port Setting' button for the 'Robot / ShieldBox' section. A blue circle with the number 4 is next to the 'SAVE' button in the 'MSTS IO Bus Setting' section. A blue circle with the number 5 is next to the 'SAVE' button at the bottom of the dialog.

6. Level 1 Repair

6. Press 'OK' to start RF Calibration after completing all settings.

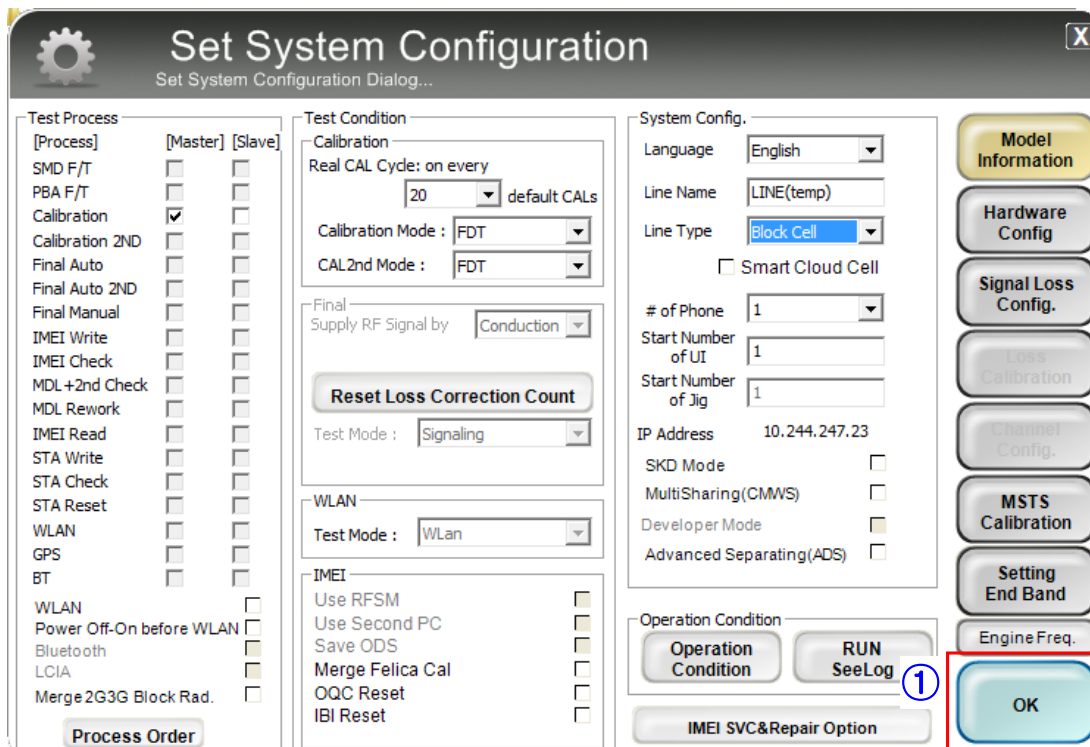

The 'Set System Configuration' dialog box is shown with various settings. The 'Test Process' tab is active, showing a list of test items. The 'Test Condition' tab is also visible, showing 'Calibration' settings. The 'System Config.' tab is active, showing 'Language' set to English, 'Line Name' as LINE(temp), and 'Line Type' as Block Cell. The 'Operation Condition' tab is also visible, showing 'Operation Condition' and 'RUN SeeLog' buttons. The 'OK' button is highlighted with a red box and a circled '1'.

Test Process

[Process]	[Master]	[Slave]
SMD F/T	☐	☐
PBA F/T	☐	☐
Calibration	☒	☐
Calibration 2ND	☐	☐
Final Auto	☐	☐
Final Auto 2ND	☐	☐
Final Manual	☐	☐
IMEI Write	☐	☐
IMEI Check	☐	☐
MDL+2nd Check	☐	☐
MDL Rework	☐	☐
IMEI Read	☐	☐
STA Write	☐	☐
STA Check	☐	☐
STA Reset	☐	☐
WLAN	☐	☐
GPS	☐	☐
BT	☐	☐
WLAN	☐	☐
Power Off-On before WLAN	☐	☐
Bluetooth	☐	☐
LCIA	☐	☐
Merge2G3G Block Rad.	☐	☐

Test Condition

Calibration
Real CAL Cycle: on every 20 default CALs
Calibration Mode: FDT
CAL2nd Mode: FDT

Final
Supply RF Signal by: Conduction

Reset Loss Correction Count

Test Mode: Signaling

WLAN
Test Mode: WLAN

IMEI
Use RFSM
Use Second PC
Save ODS
Merge Felica Cal
OQC Reset
IBI Reset

System Config.

Language: English
Line Name: LINE(temp)
Line Type: Block Cell
☐ Smart Cloud Cell

of Phone: 1
Start Number of UI: 1
Start Number of Jig: 1

IP Address: 10.244.247.23


SKD Mode
MultiSharing(CMWS)
Developer Mode
Advanced Separating(ADS)

Operation Condition

Operation Condition
RUN SeeLog
IMEI SVC&Repair Option

Model Information
Hardware Config.
Signal Loss Config.
Loss Calibration
Channel Config.
MSTS Calibration
Setting End Band
Engine Freq.

OK

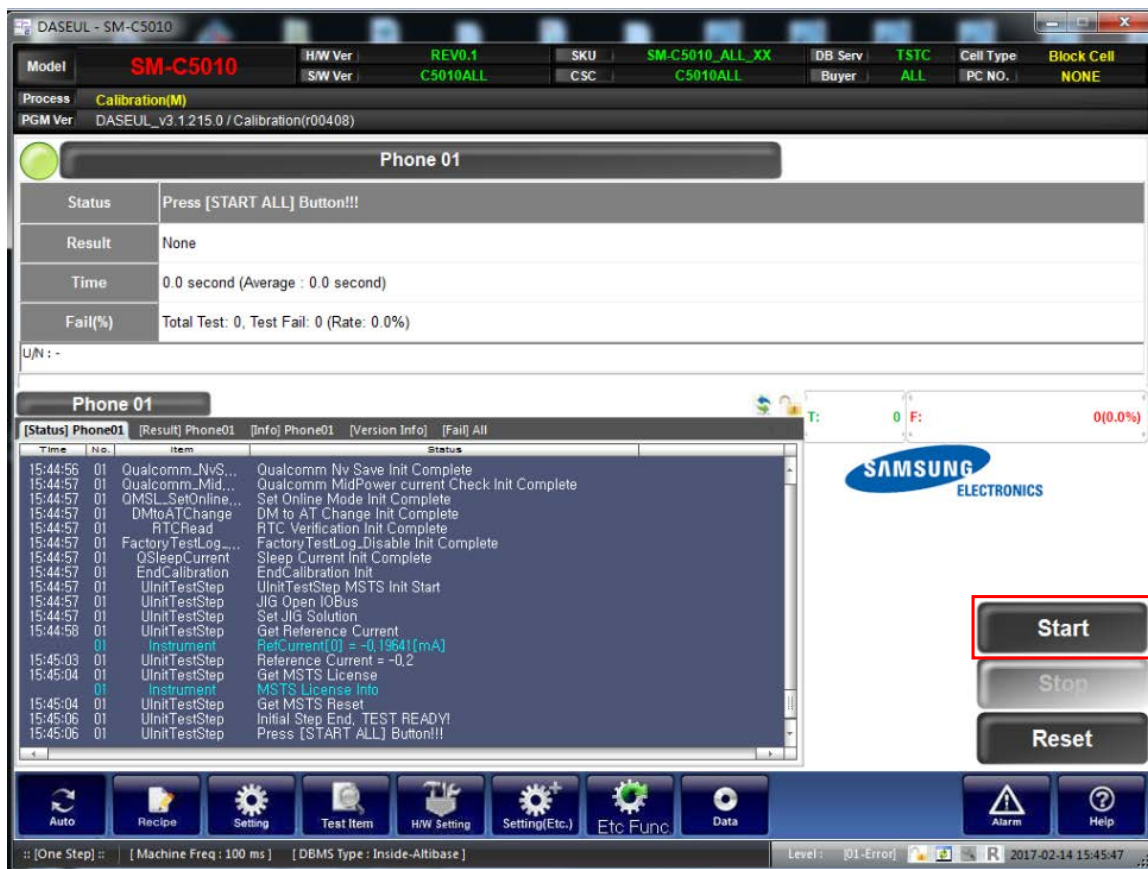

The 'DASEUL - SM-C5010' calibration screen is shown. It displays various test results and a list of test items. The 'Start' button is highlighted with a red box.

Model SM-C5010 **HW Ver** REV0.1 **SKU** SM-C5010_ALL_XX **IDB Serv** TSTC **Cell Type** Block Cell
SW Ver C5010ALL **CSC** C5010ALL **Buyer** ALL **PC NO.** NONE

Process Calibration(M)
PGM Ver DASEUL_v3.1.215.0 / Calibration(r00408)

Phone 01

Status: Press [START ALL] Button!!!
Result: None
Time: 0.0 second (Average : 0.0 second)
Fail(%): Total Test: 0, Test Fail: 0 (Rate: 0.0%)

U/N: -

Phone 01

[Status]	[Phone01]	[Result]	[Phone01]	[Info]	[Phone01]	[Version Info]	[Fail]	All
15:44:56	01	Qualcomm_NvS...	Qualcomm Nv Save Init Complete					
15:44:57	01	Qualcomm_Mid...	Qualcomm MidPower current Check Init Complete					
15:44:57	01	QMSL_SetOnline...	Set Online Mode Init Complete					
15:44:57	01	DMtoATChange	DM to AT Change Init Complete					
15:44:57	01	RTCTRead	RTC Verification Init Complete					
15:44:57	01	FactoryTestLog...	FactoryTestLog_Disable Init Complete					
15:44:57	01	OSleepCurrent	Sleep Current Init Complete					
15:44:57	01	EndCalibration	EndCalibration Init					
15:44:57	01	UlnitTestStep	UlnitTestStep MSTS Init Start					
15:44:57	01	UlnitTestStep	JIG Open IOBus					
15:44:57	01	UlnitTestStep	Set JIG Solution					
15:44:58	01	UlnitTestStep	Get Reference Current					
15:45:03	01	Instrument	RefCurrent(0) = -0.19541(mA)					
15:45:04	01	UlnitTestStep	Reference Current = -0.2					
15:45:04	01	Instrument	MSTS License Info					
15:45:04	01	UlnitTestStep	Get MSTS Reset					
15:45:06	01	UlnitTestStep	Initial Step End, TEST READY!					
15:45:06	01	UlnitTestStep	Press [START ALL] Button!!!					

Start
Stop
Reset

SAMSUNG ELECTRONICS


Auto Recipe Setting Test Item HW Setting Setting(Etc.) Etc Func Data

Level: 01-Error

2017-02-14 15:45:47



7.2 级维修

7-1. 后盖上的组件

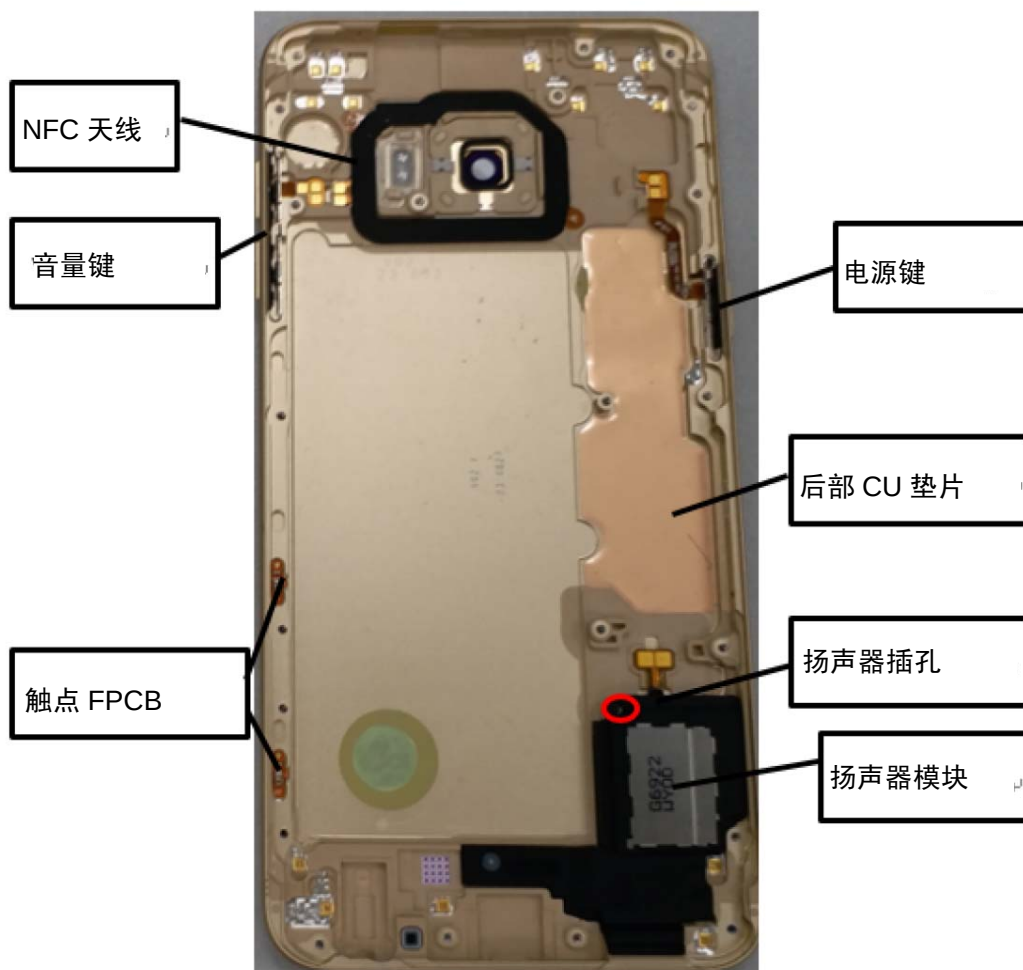

7.2 级维修

7-2. 必要工具

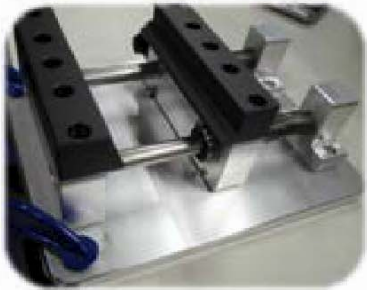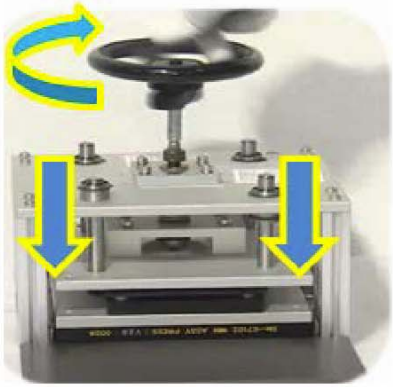
	
镊子/拆卸棒/螺丝刀	防静电手套
	
棉签	酒精
	
OCTA 拆卸架	OCTA 拆卸上部
	
加热箱	OCTA 安装工装

7.2 级维修

7-4. 拆卸

1

从设备上拆下 SIM 卡托

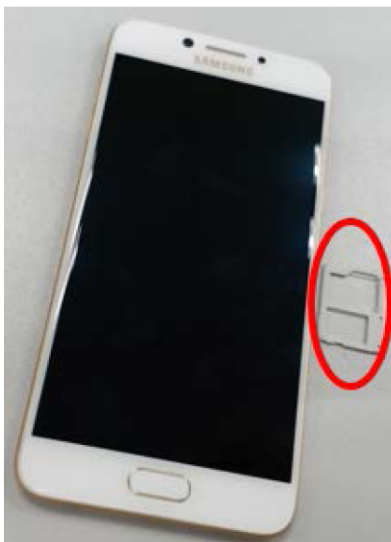

2

将设备放入保温箱（设定值：80℃）
5 分钟。




※ 小心

※ 小心

3

使用后盖拆卸架从设备上拆卸后盖。

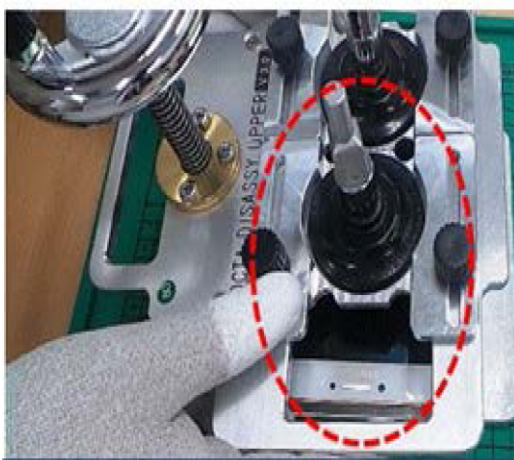

4

拆卸后部螺钉（18 个）。



※ 小心

※ 小心

7.2 级维修

5

拆卸前部和后部组件。



6

从 PBA 上拆卸同轴电缆。



※ 小心

※ 小心

1) 不要使用尖锐的工具。

7

拧下 PBA 上的螺钉。



8

从 PBA 上分离 4 个连接器。



※ 小心

※ 小心

7.2 级维修

9

从托架上拆卸主 PBA。



10

从托架上拆卸主屏幕键。



※ 小心


1) 小心不要损坏 FPCB。

※ 小心

1) 小心不要损坏 FPCB。


11

拆卸副 PBA。

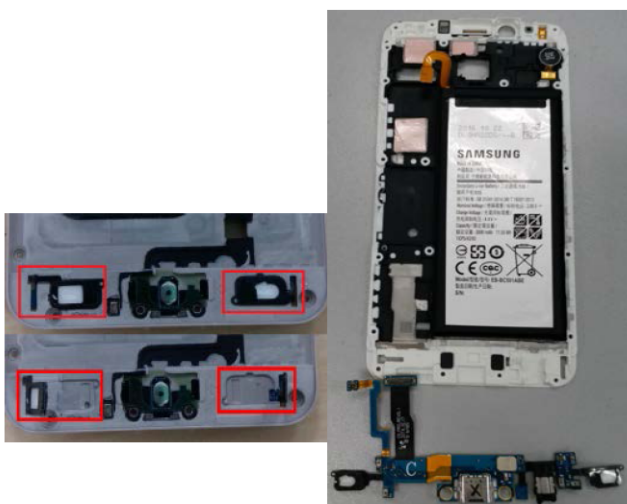

12

拆卸主摄像头和 VT 摄像头

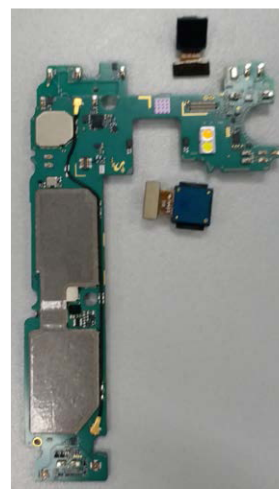

※ 小心

1) 小心不要损坏 LED FPCB。

※ 小心

7. 2 级维修

13 从托架上拆卸听筒、电机、电池。



14 从后部拆卸扬声器。



※ 小心



15 拆卸完成。



※ 小心

7.2 级维修

7-5. 组装

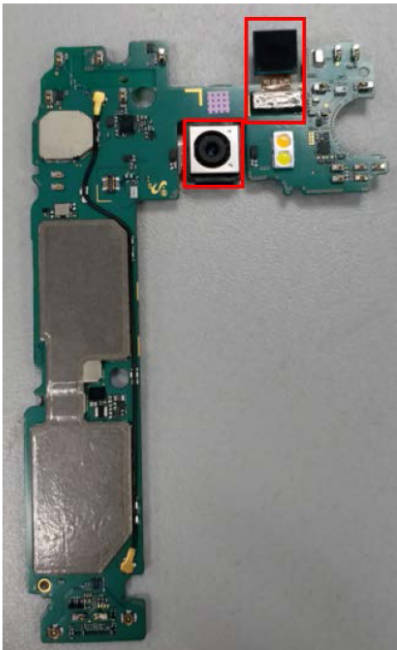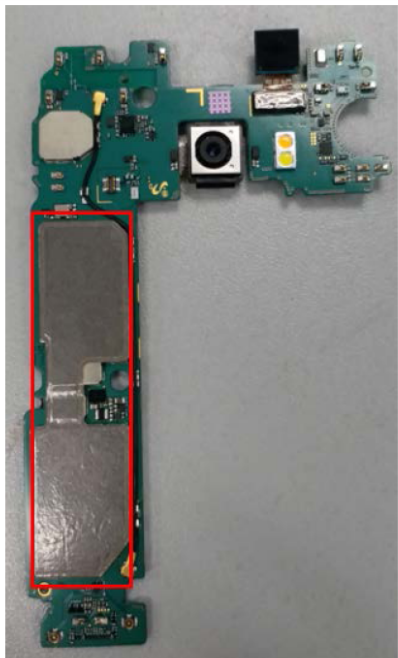1 将听筒、电机和电池组装到托架上。 	2 将副 PBA 组装到托架上。 
※ 小心	※ 小心
3 将主摄像头和 VT 摄像头组装到主 PBA 上。 	4 将 2 条同轴电缆组装到主 PBA 上。 
※ 小心	※ 小心 1) 不要使用尖锐的工具

7.2 级维修

5

将主屏幕键组装到托架上。



6

将主 PBA 组装到托架上，并将 4 个连接器连接好。



※ 小心

※ 小心

7

将 1 个螺钉组装到主 PBA 上。



※ 小心

8

将 2 条同轴电缆组装到主 PBA 上。



※ 小心

7.2 级维修

9

将扬声器组装到后部。



10

组装托架组件和后部组件，并将 21 个螺钉组装到后部。




※ 小心

※ 小心

11

组装 OCTA 和 SIM 卡托。

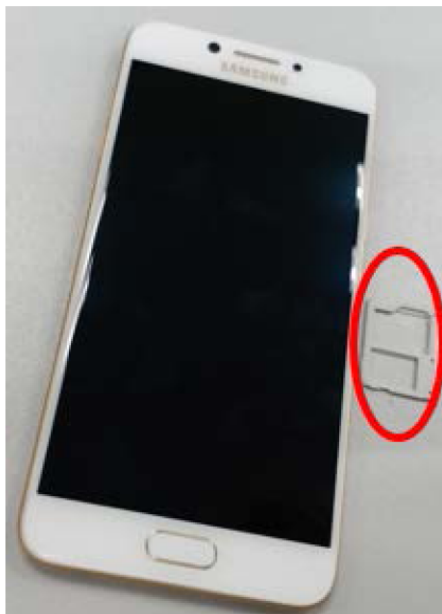

12


使用 OCTA 按压工装按压设备 (1N, 1 分钟)。





※ 小心

※ 小心

SM-C5010 Block Digram

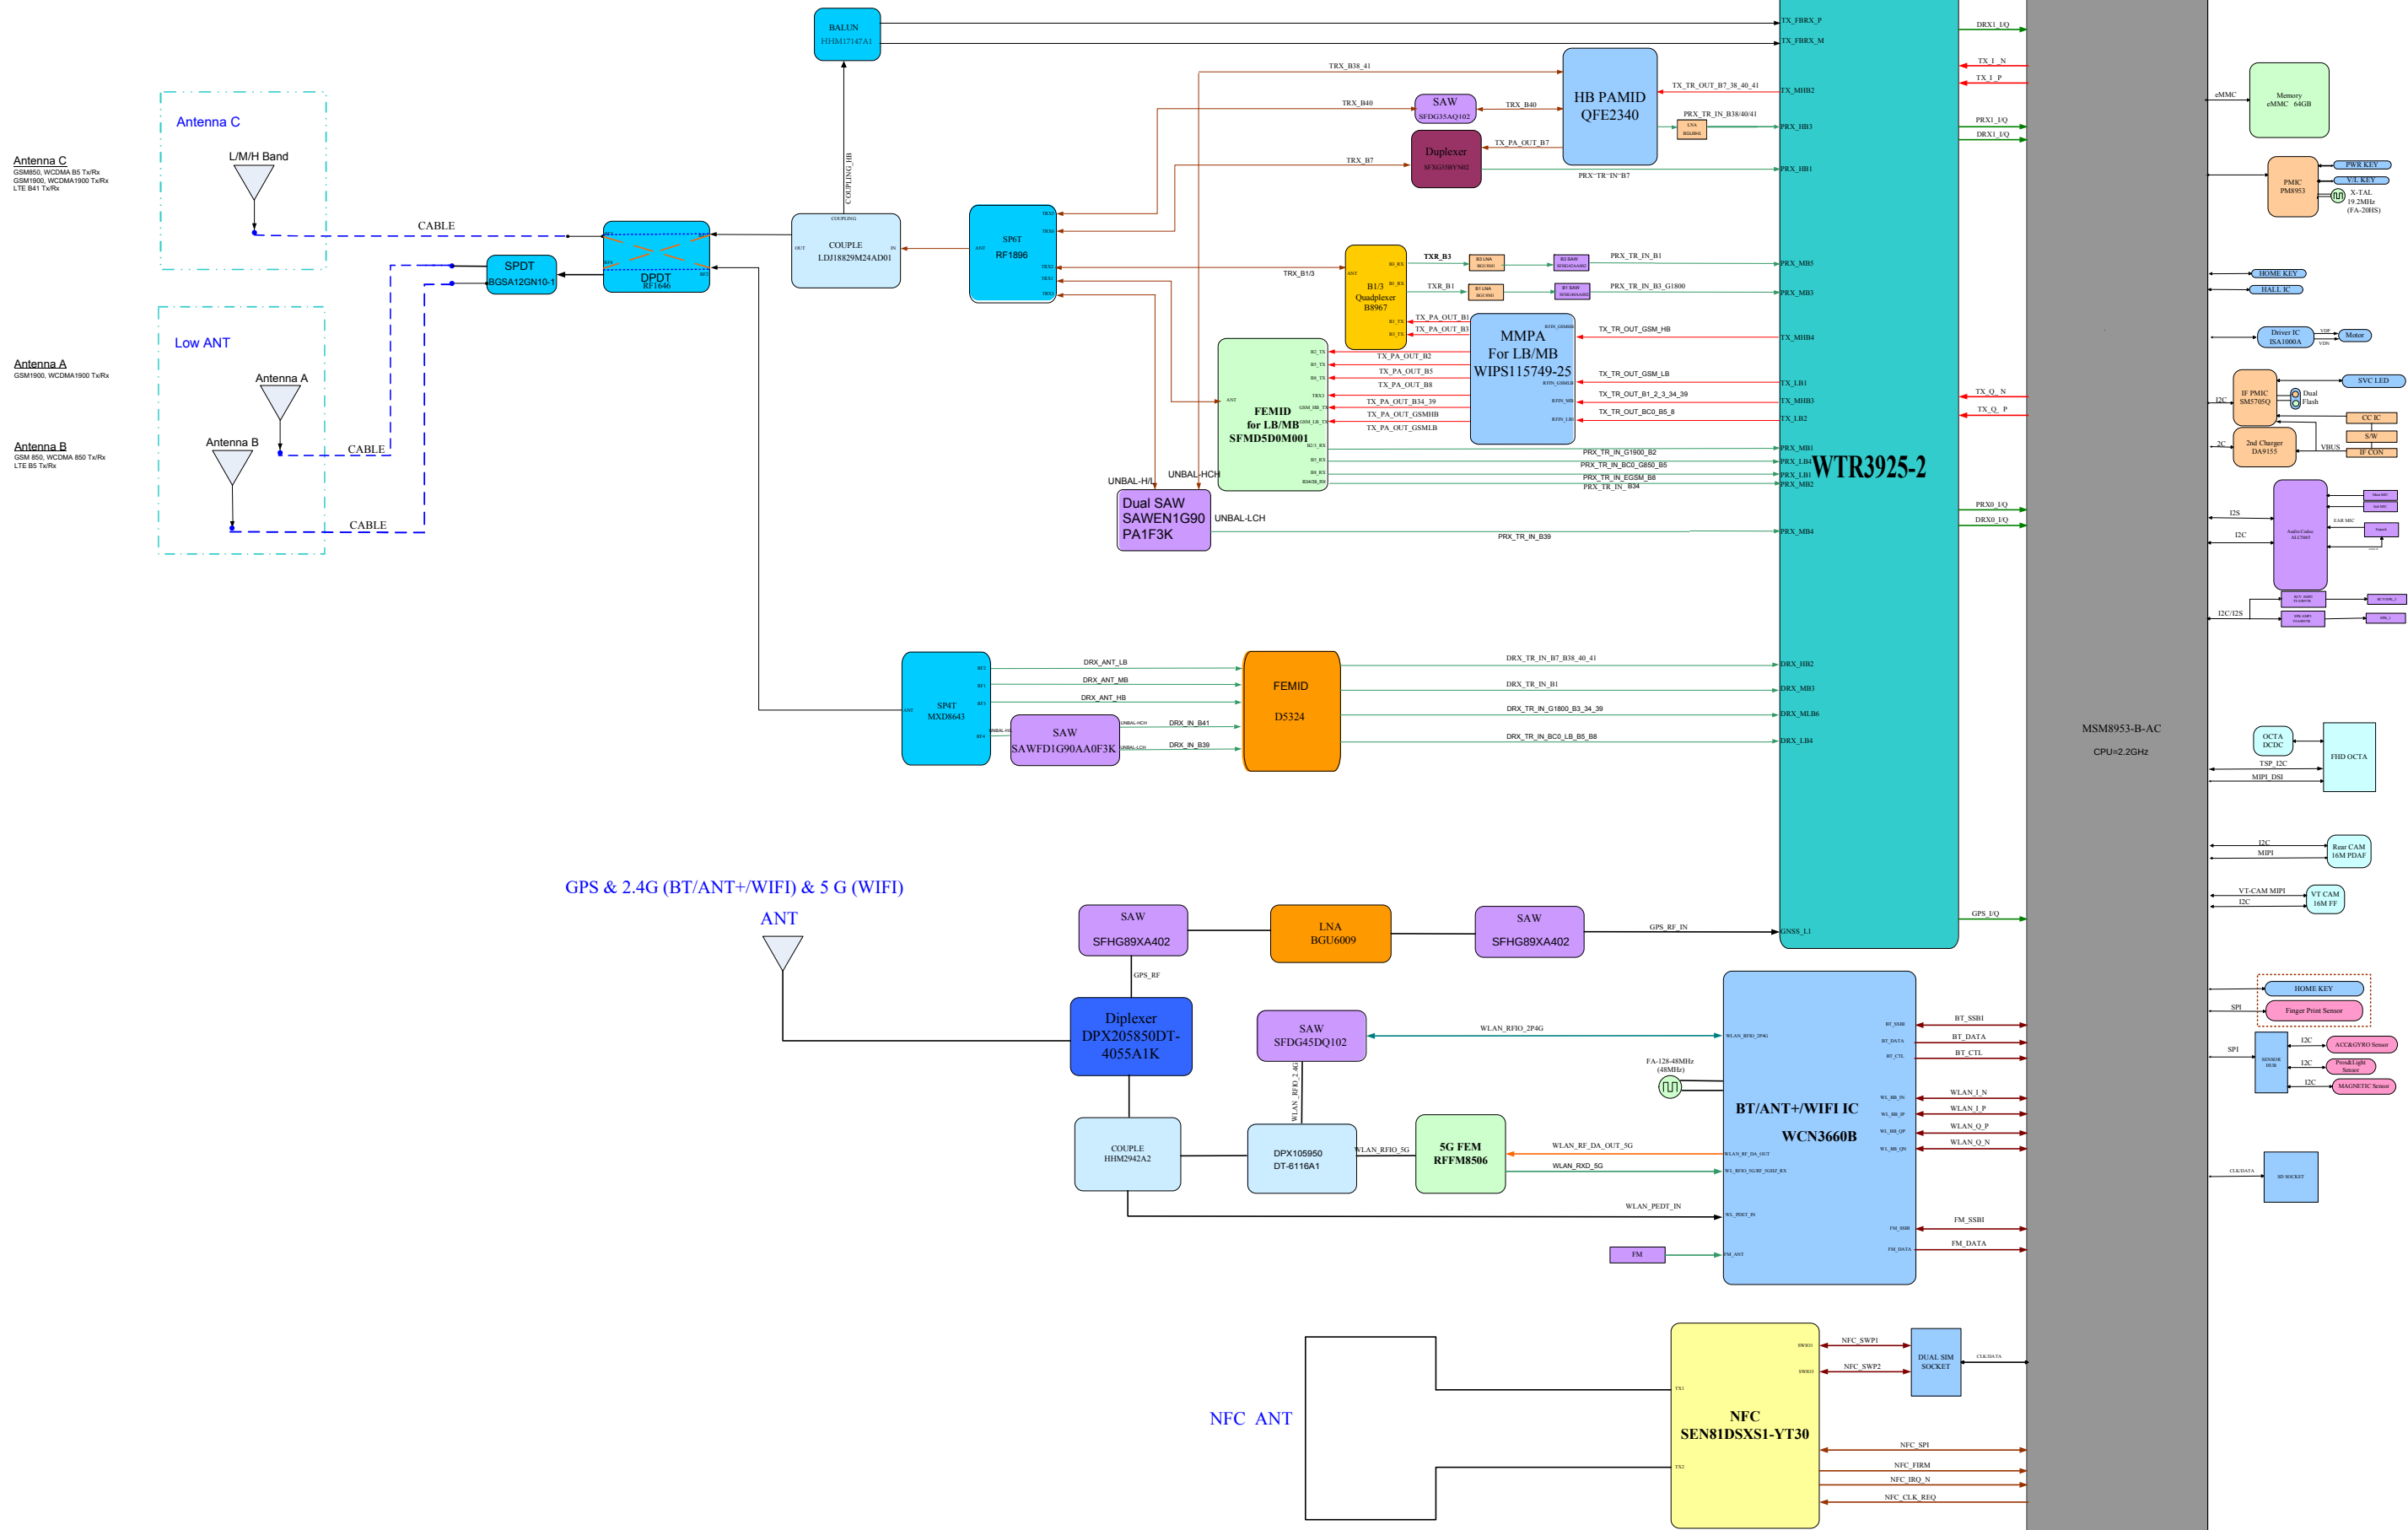


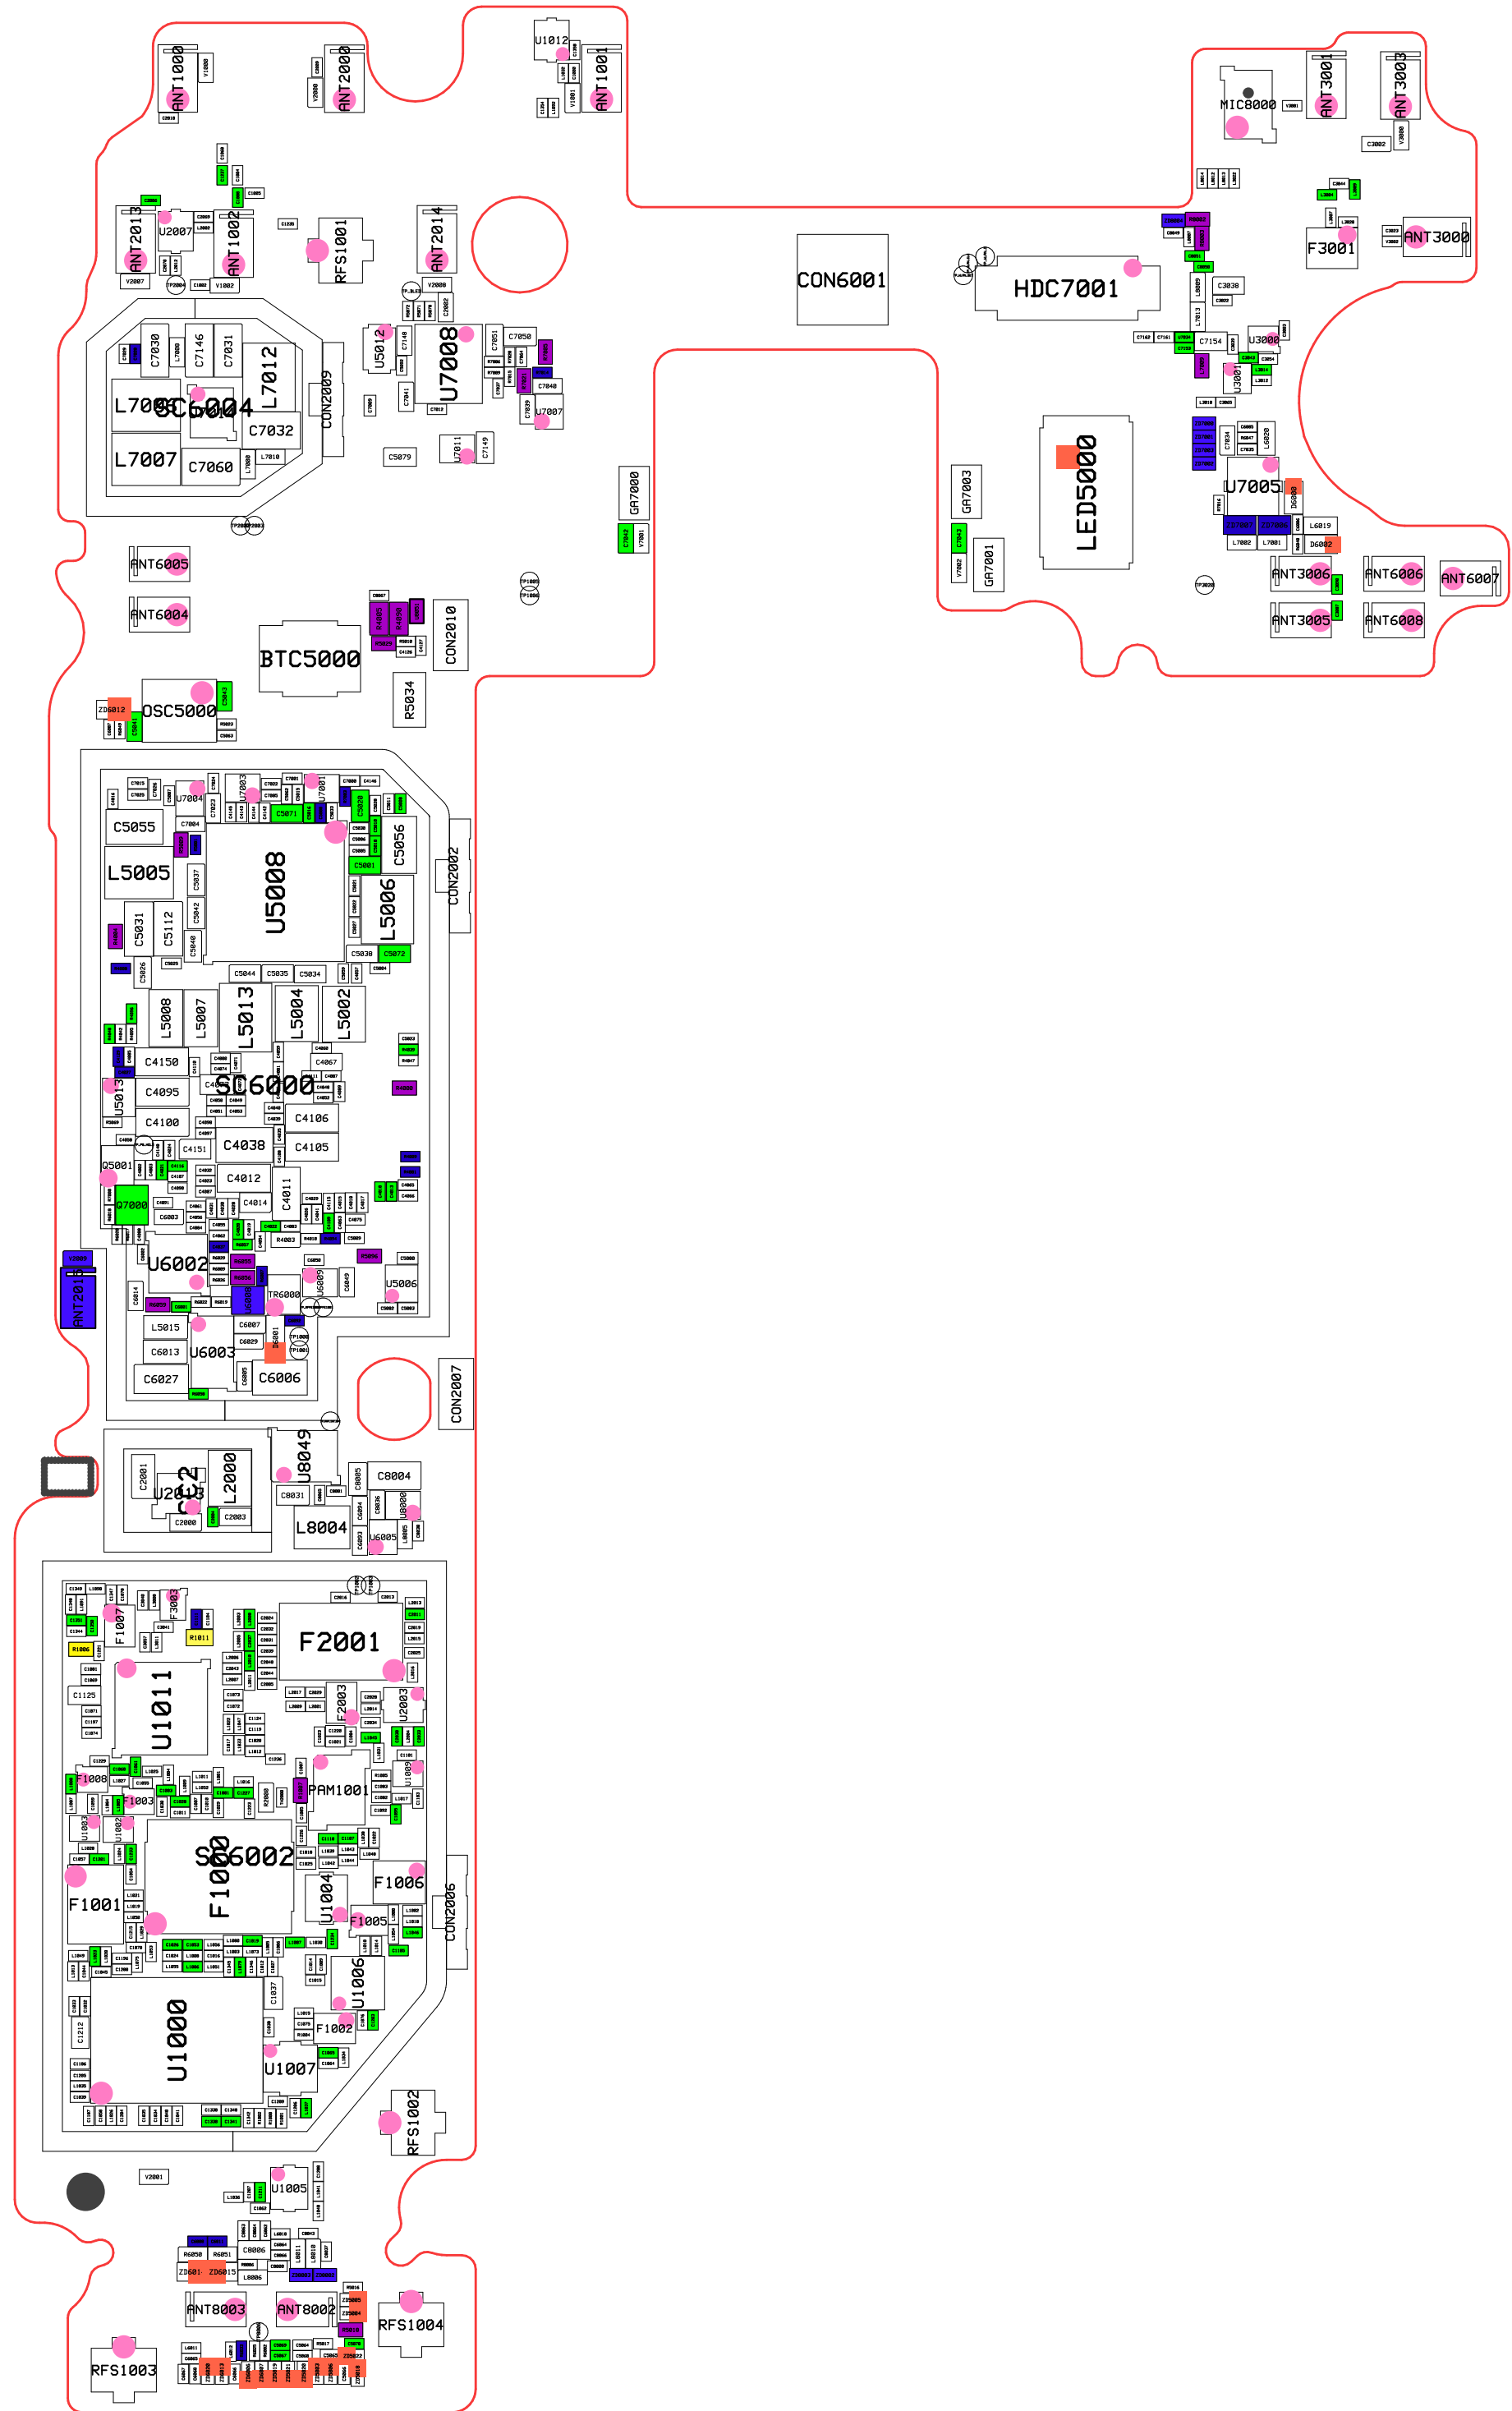

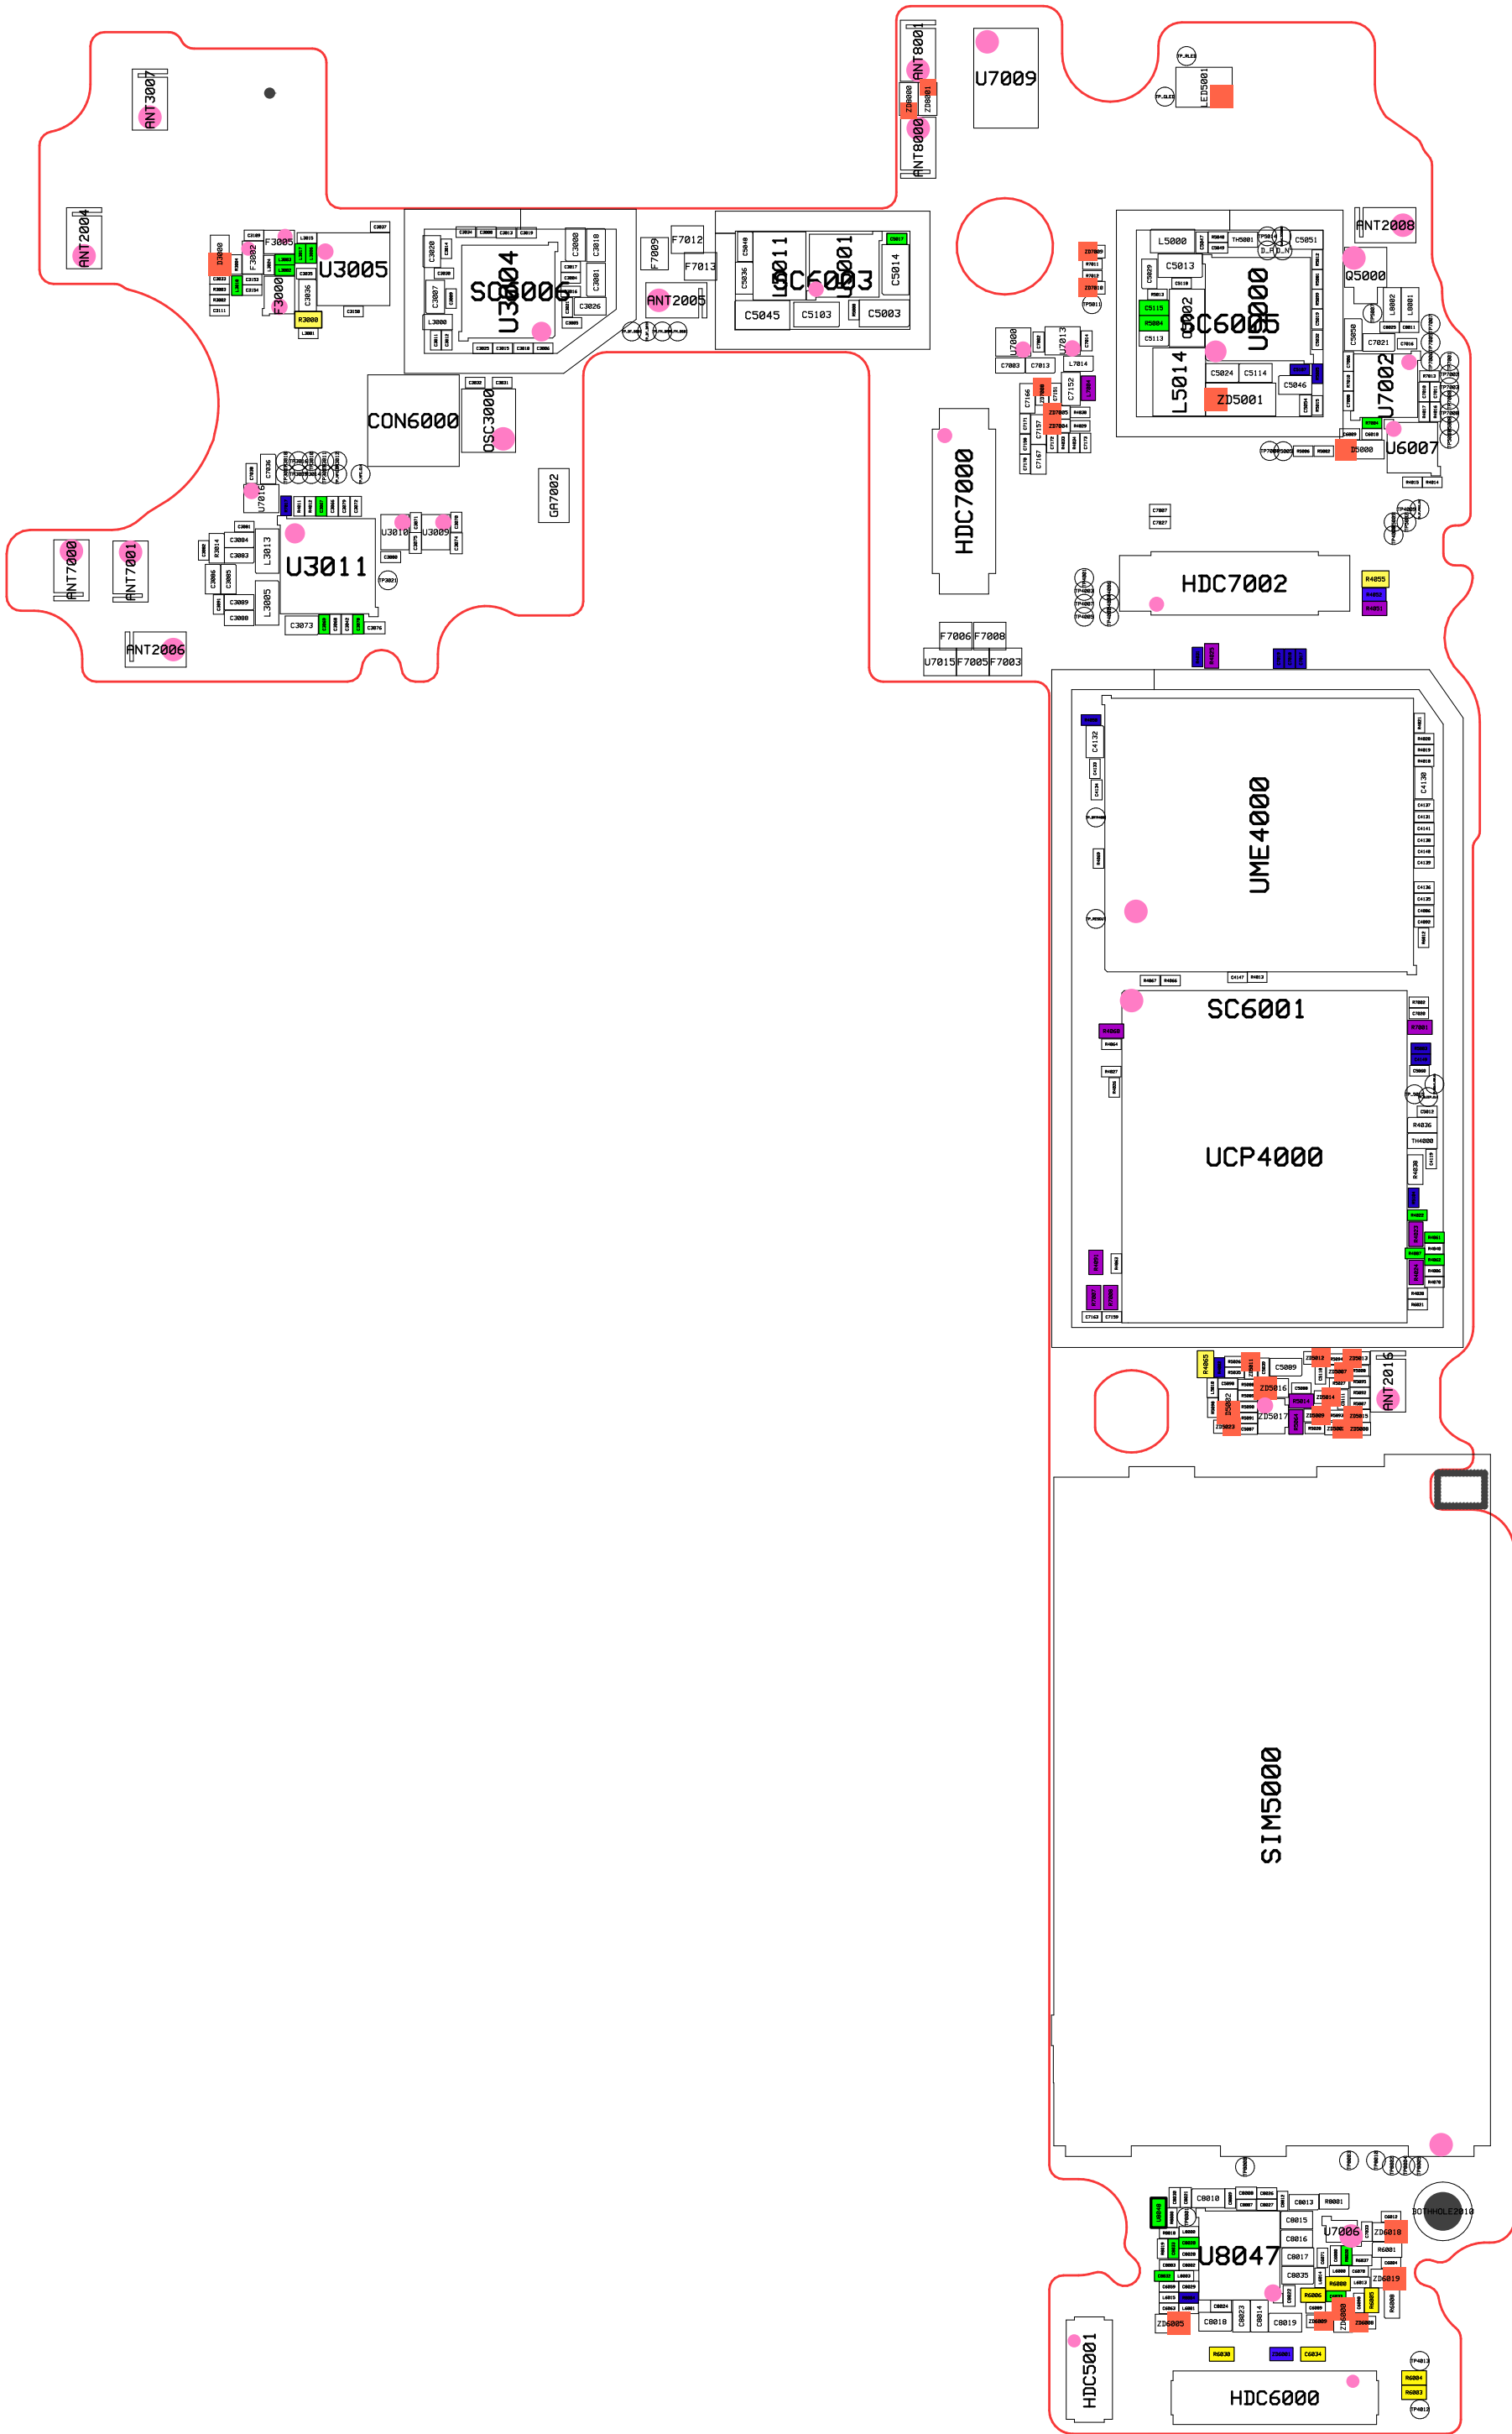

8. Level 3 Repair

8-3. Flow Chart of Troubleshooting

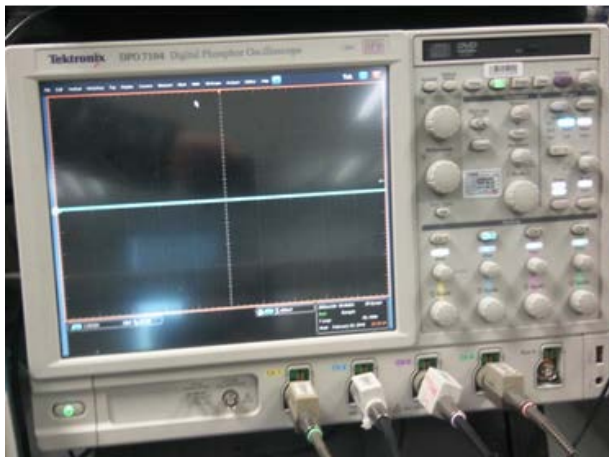


Oscilloscope




Digital Multimeter



Power Supply

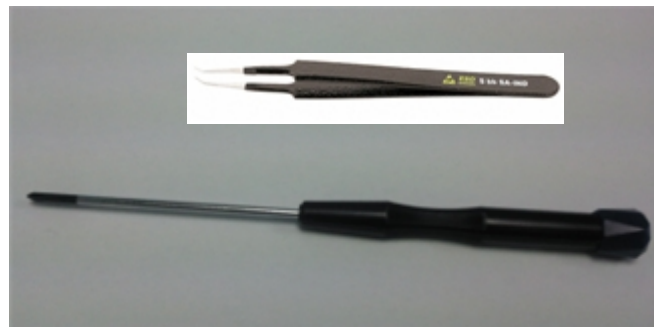

+ driver, ESD Safe Tweezer

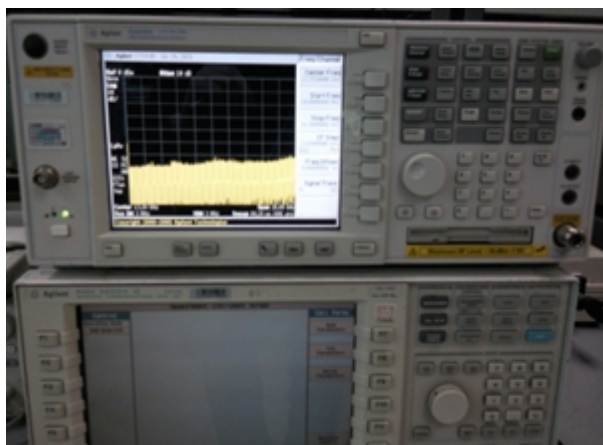


8960 & Spectrum Analyzer



Soldering iron


8. Level 3 Repair

8-4-1. Power On

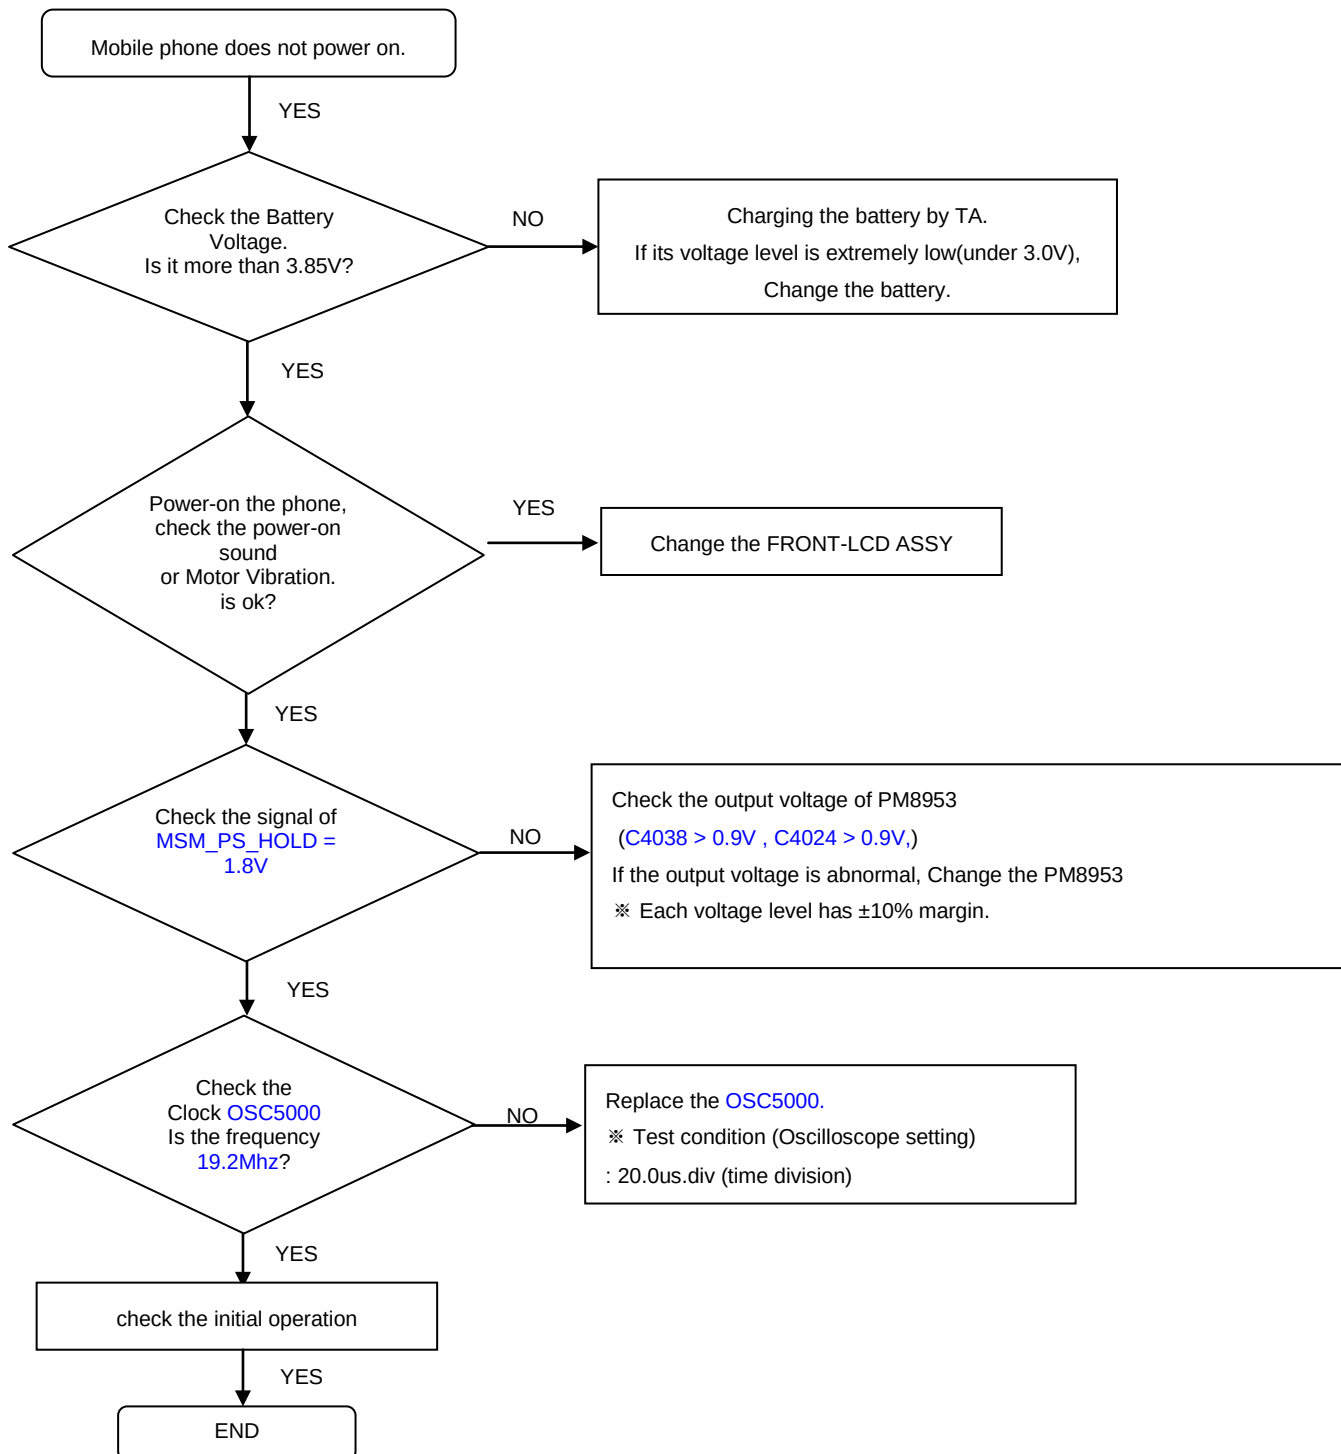


8. Level 3 Repair

8-4-2. Initial

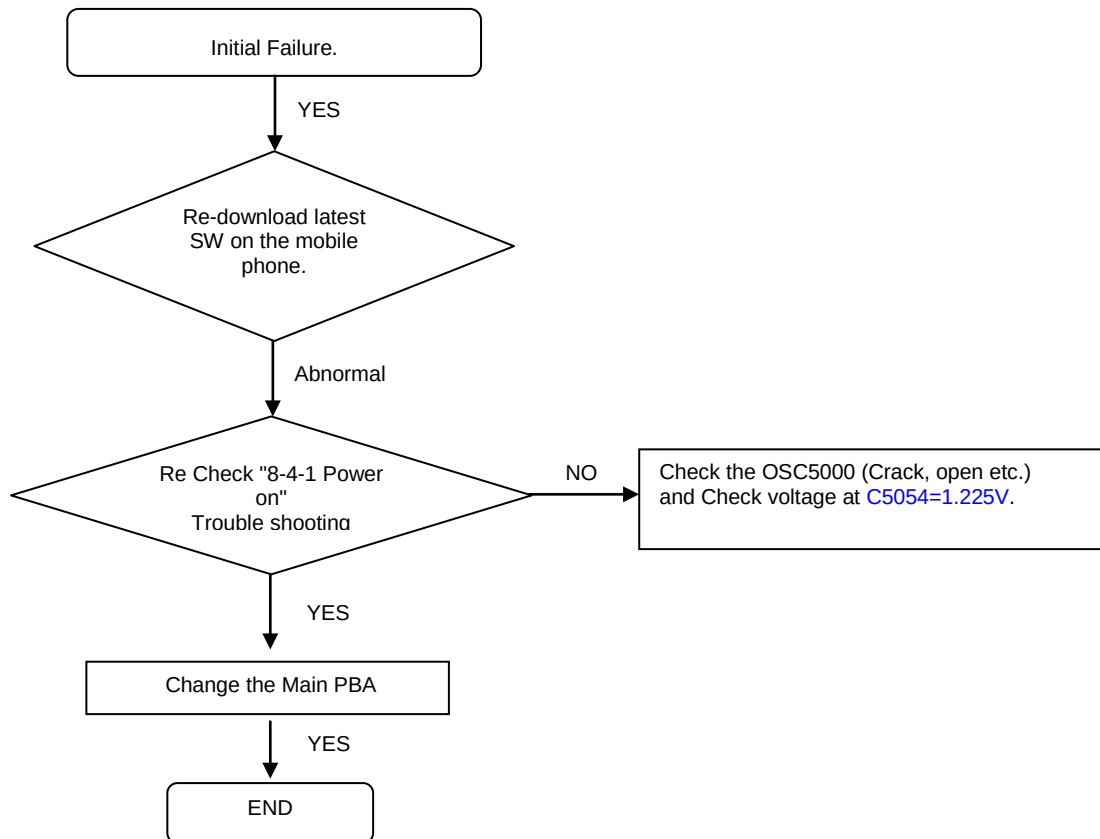


8. Level 3 Repair

8-4-3. No Service

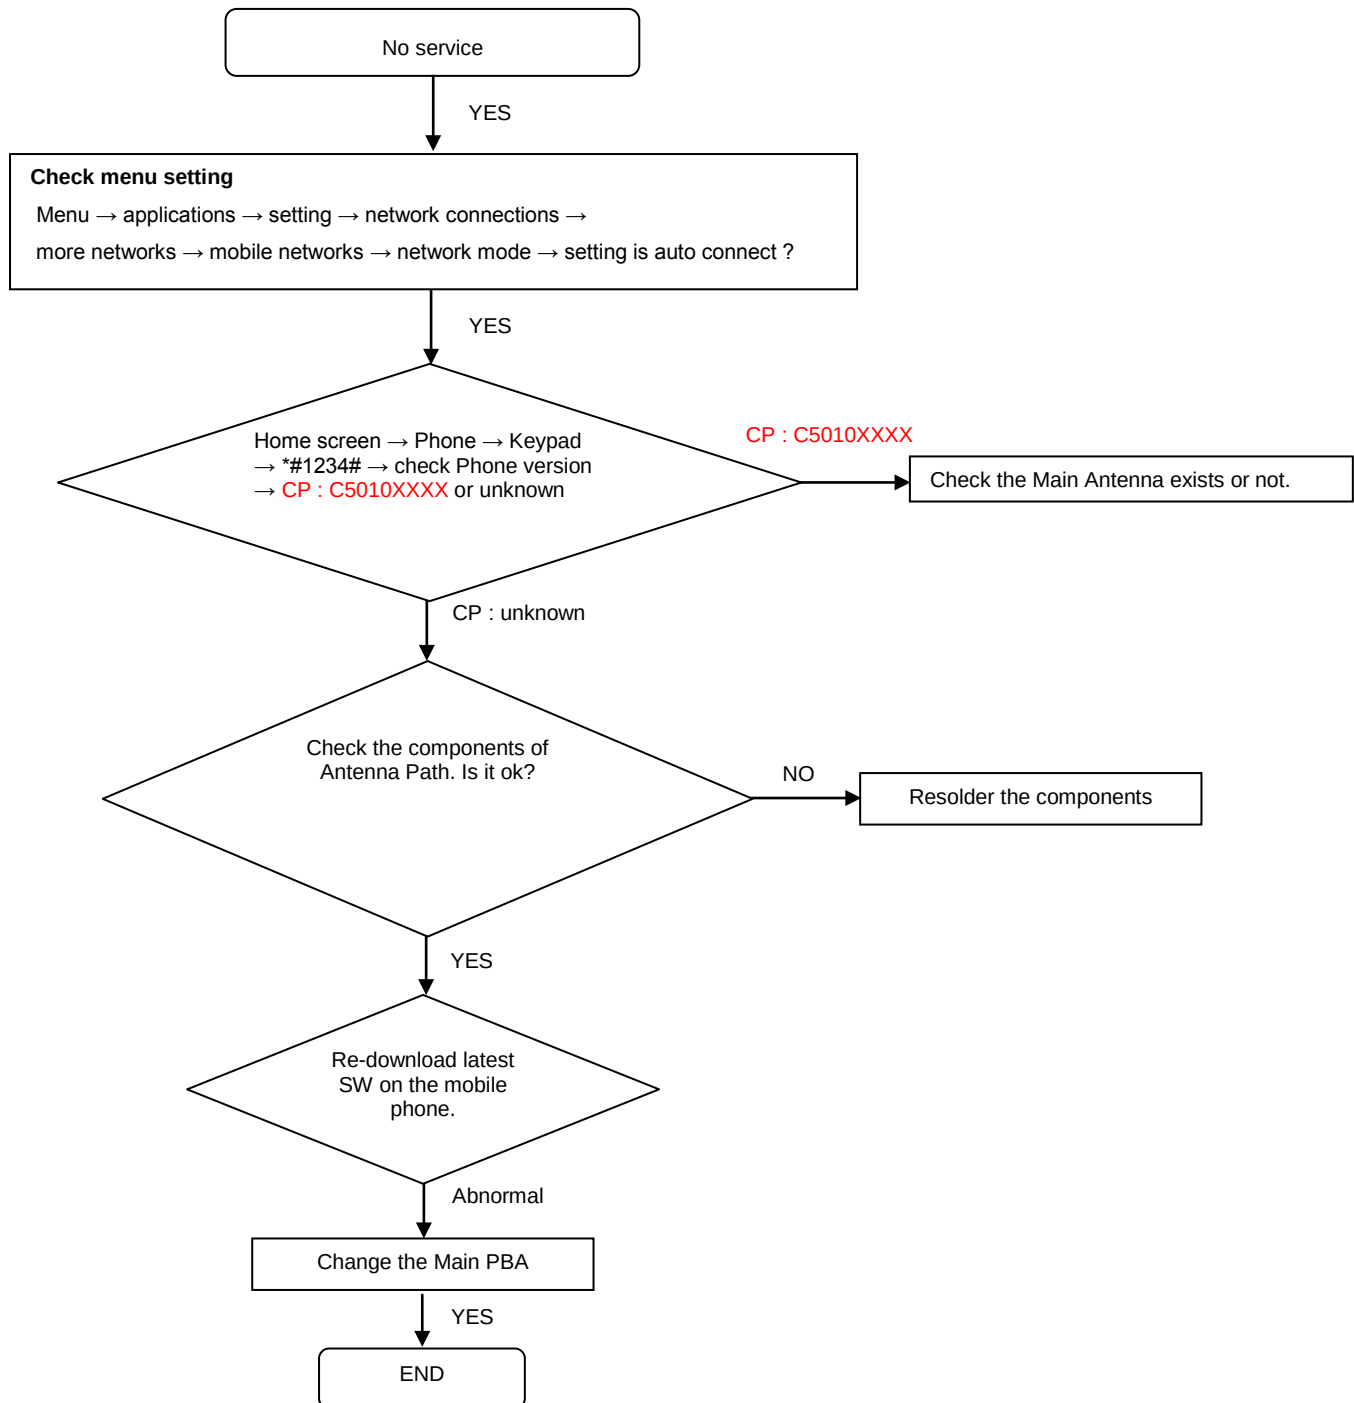


8. Level 3 Repair

8-4-4. Sim Part

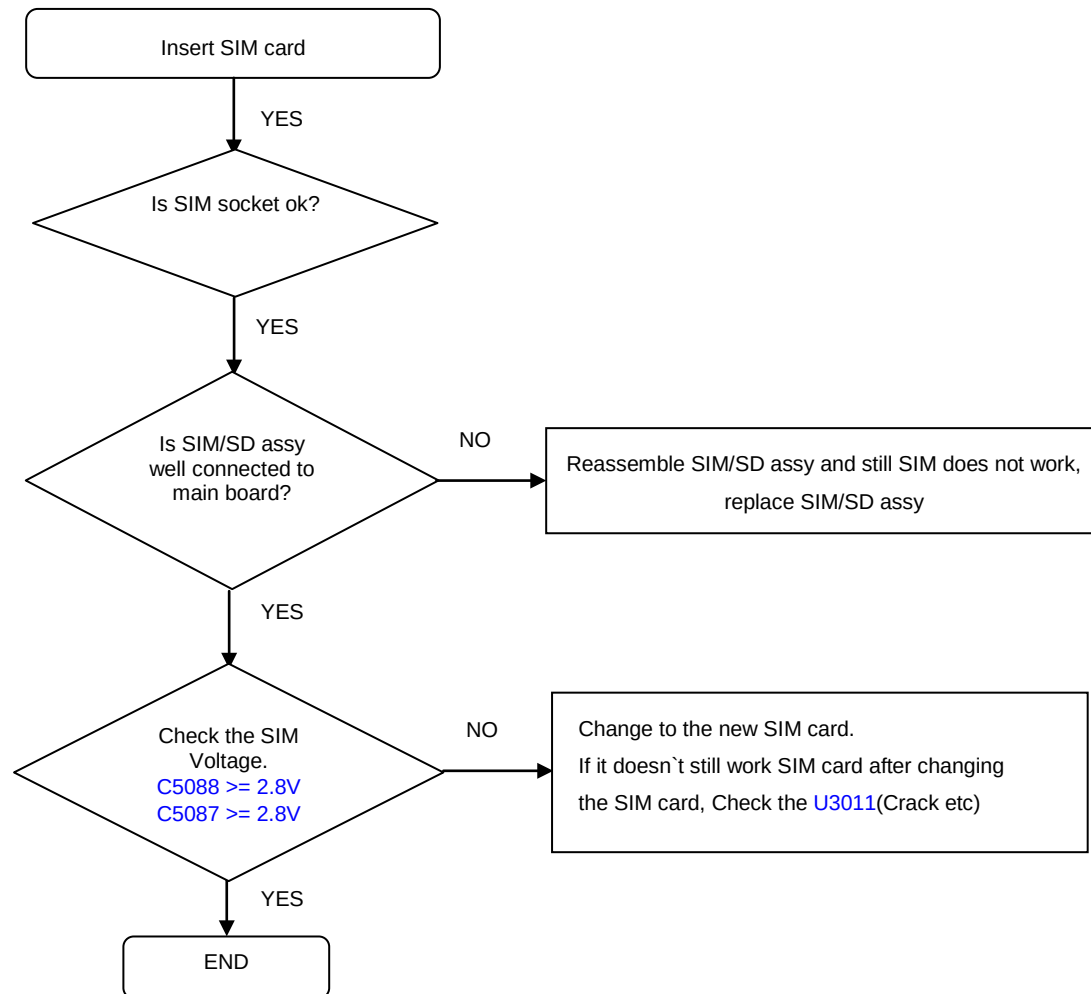


8. Level 3 Repair

8-4-5. Microphone Part

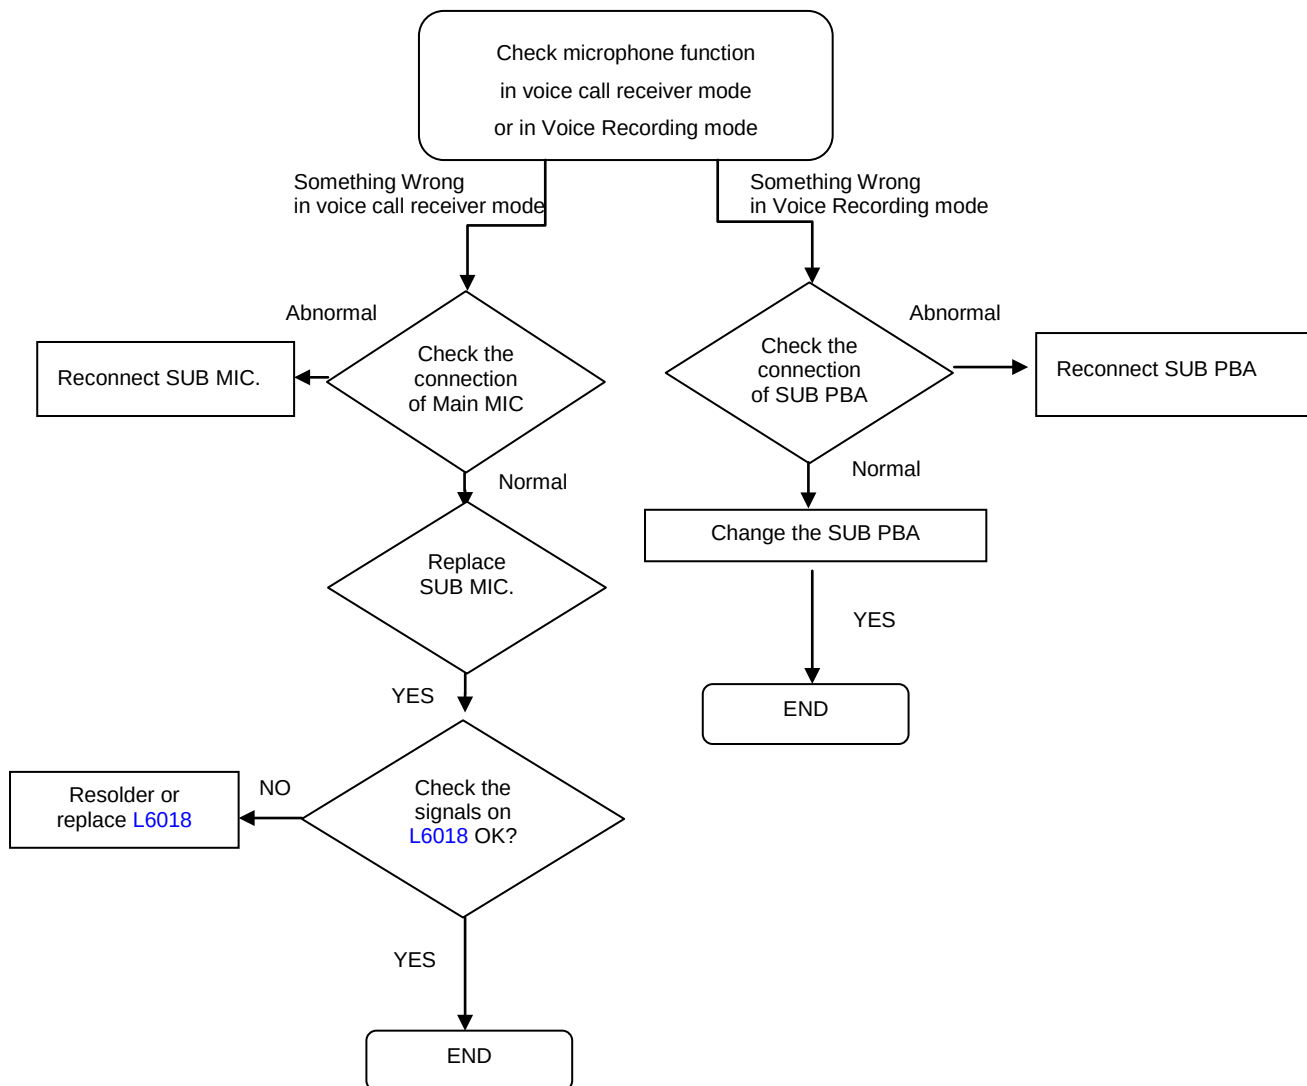


8. Level 3 Repair

8-4-6. Speaker Part

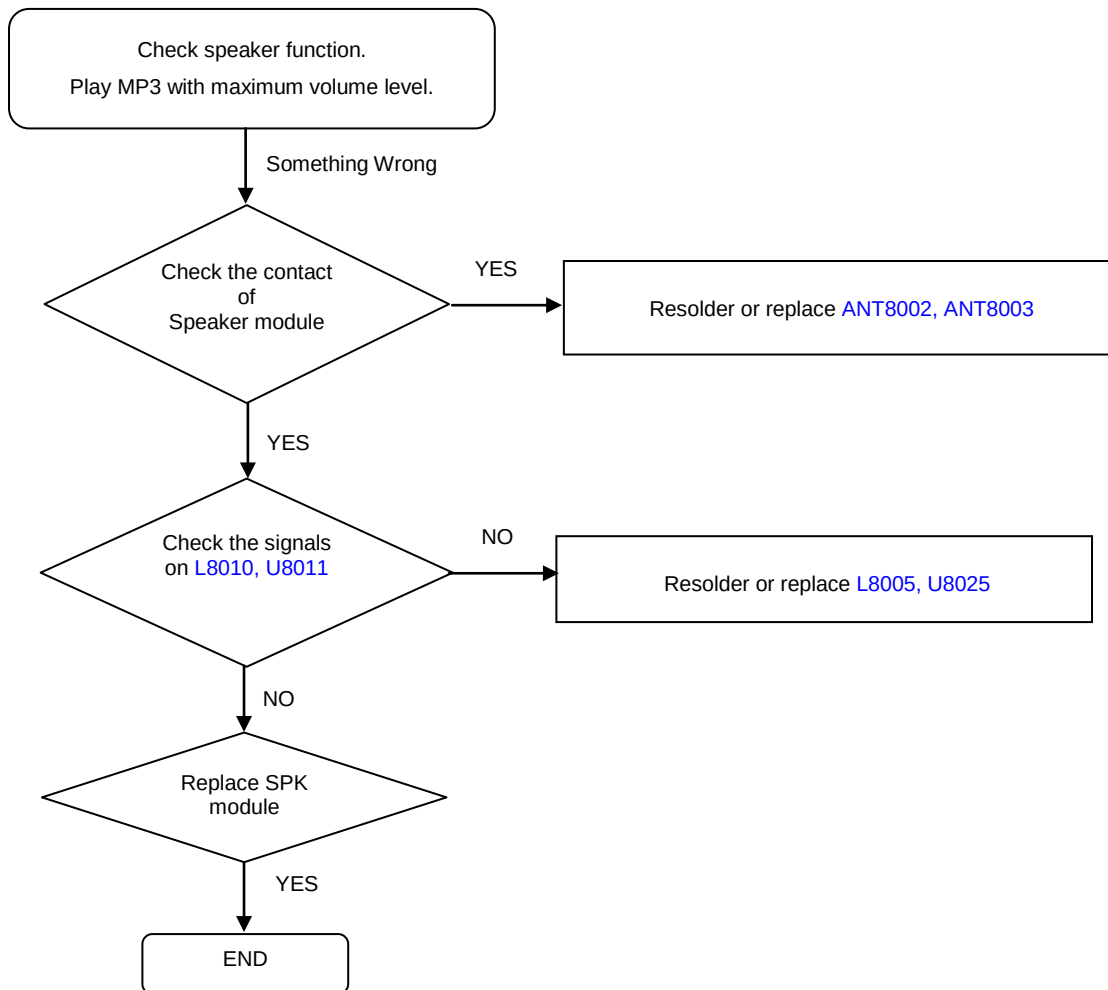


8. Level 3 Repair

8-4-7. Receiver Part

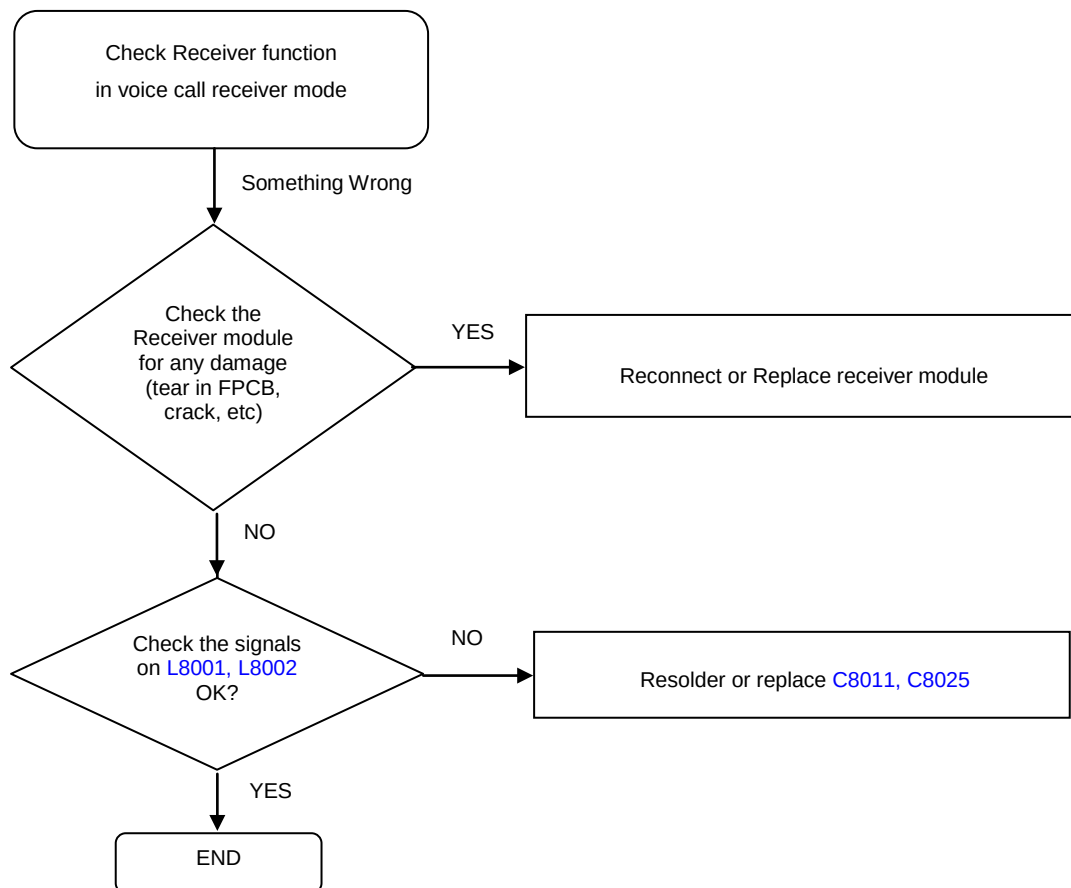


8. Level 3 Repair

8-4-8. OCTA

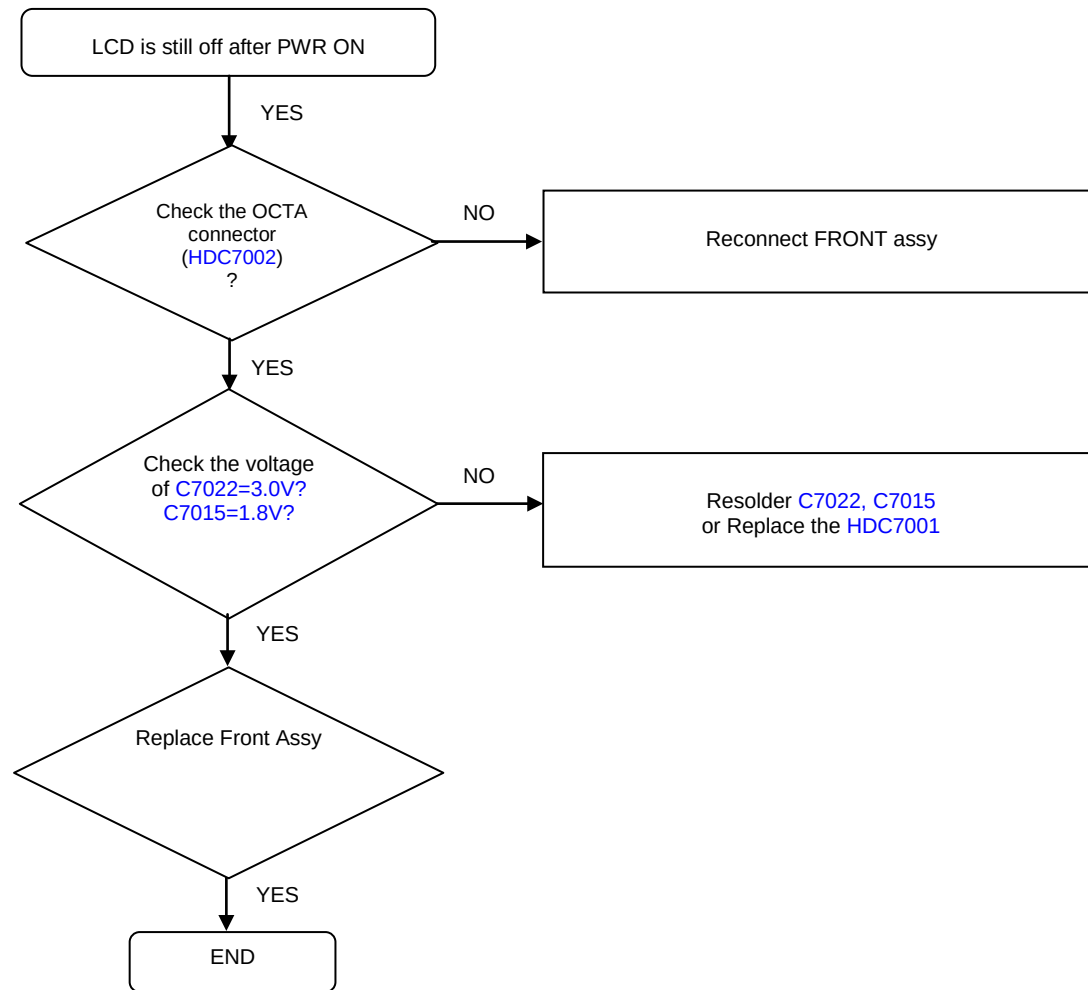


8. Level 3 Repair

8-4-9. 16M CAMERA

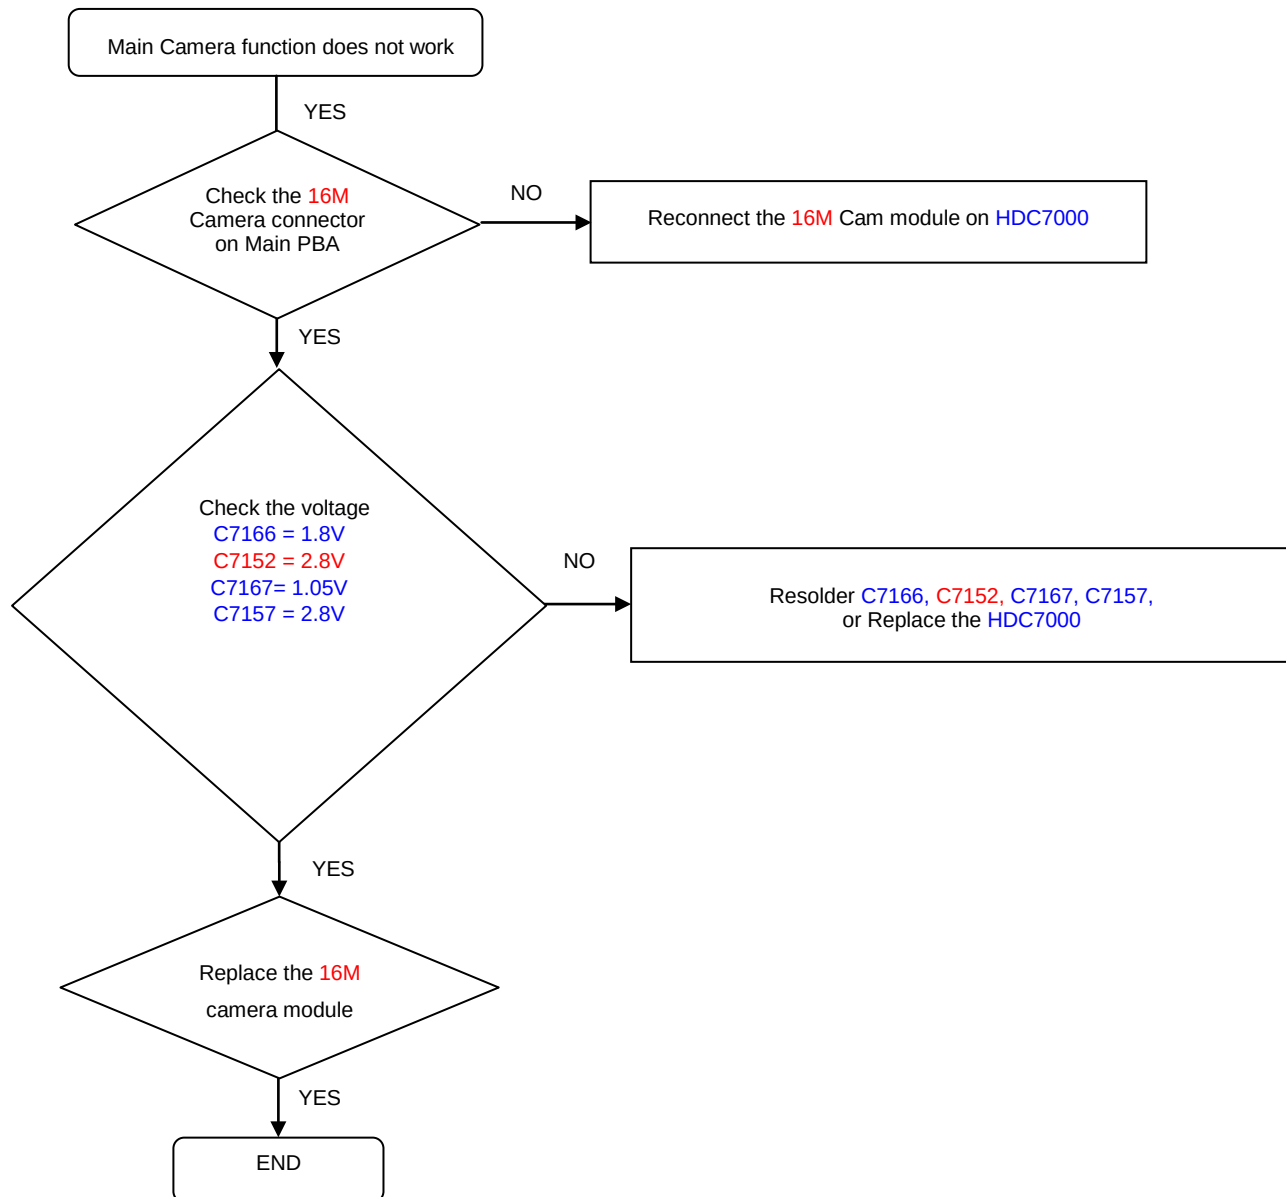


8. Level 3 Repair

8-4-10. 16M VT CAMERA

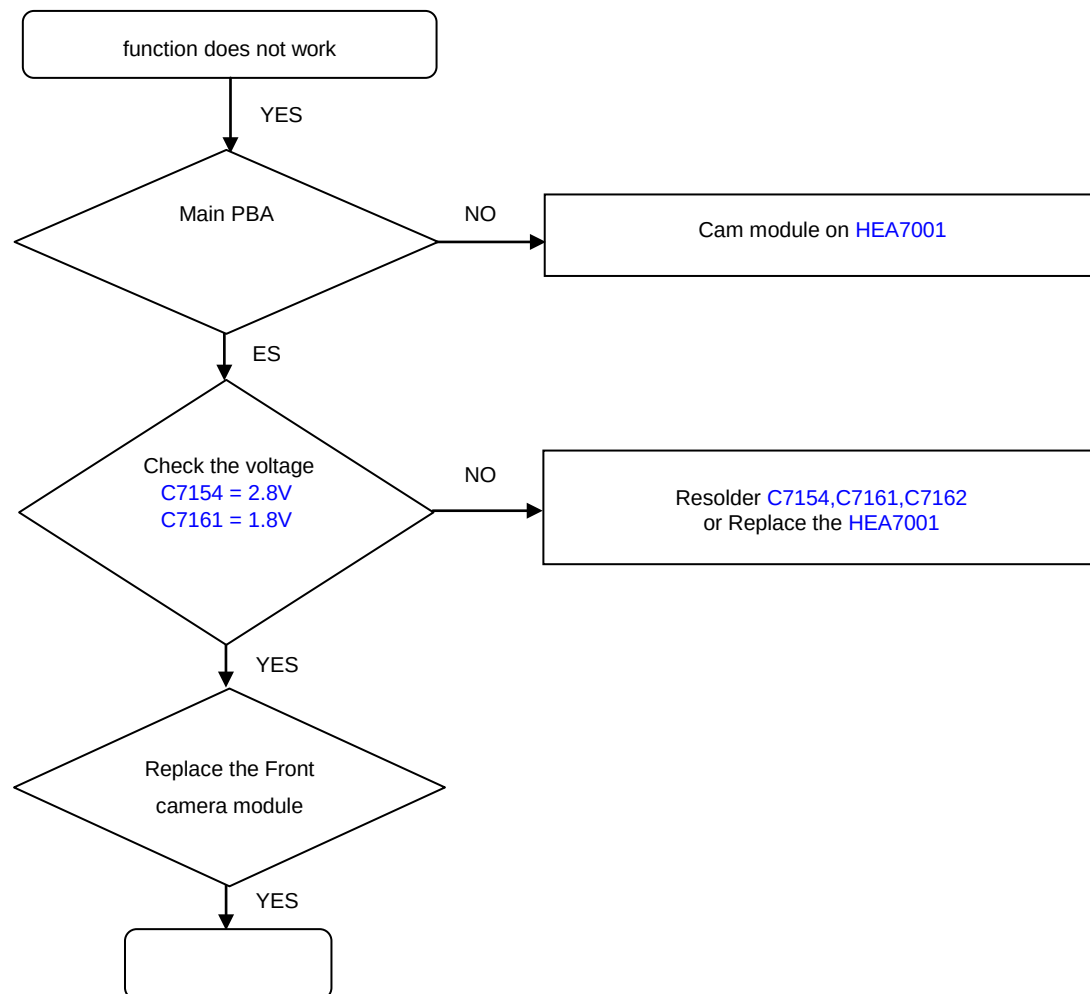

8. Level 3 Repair


8-4-11. RF Section(LTE,WCDMA,TDSCDMA,CDMA,GSM)

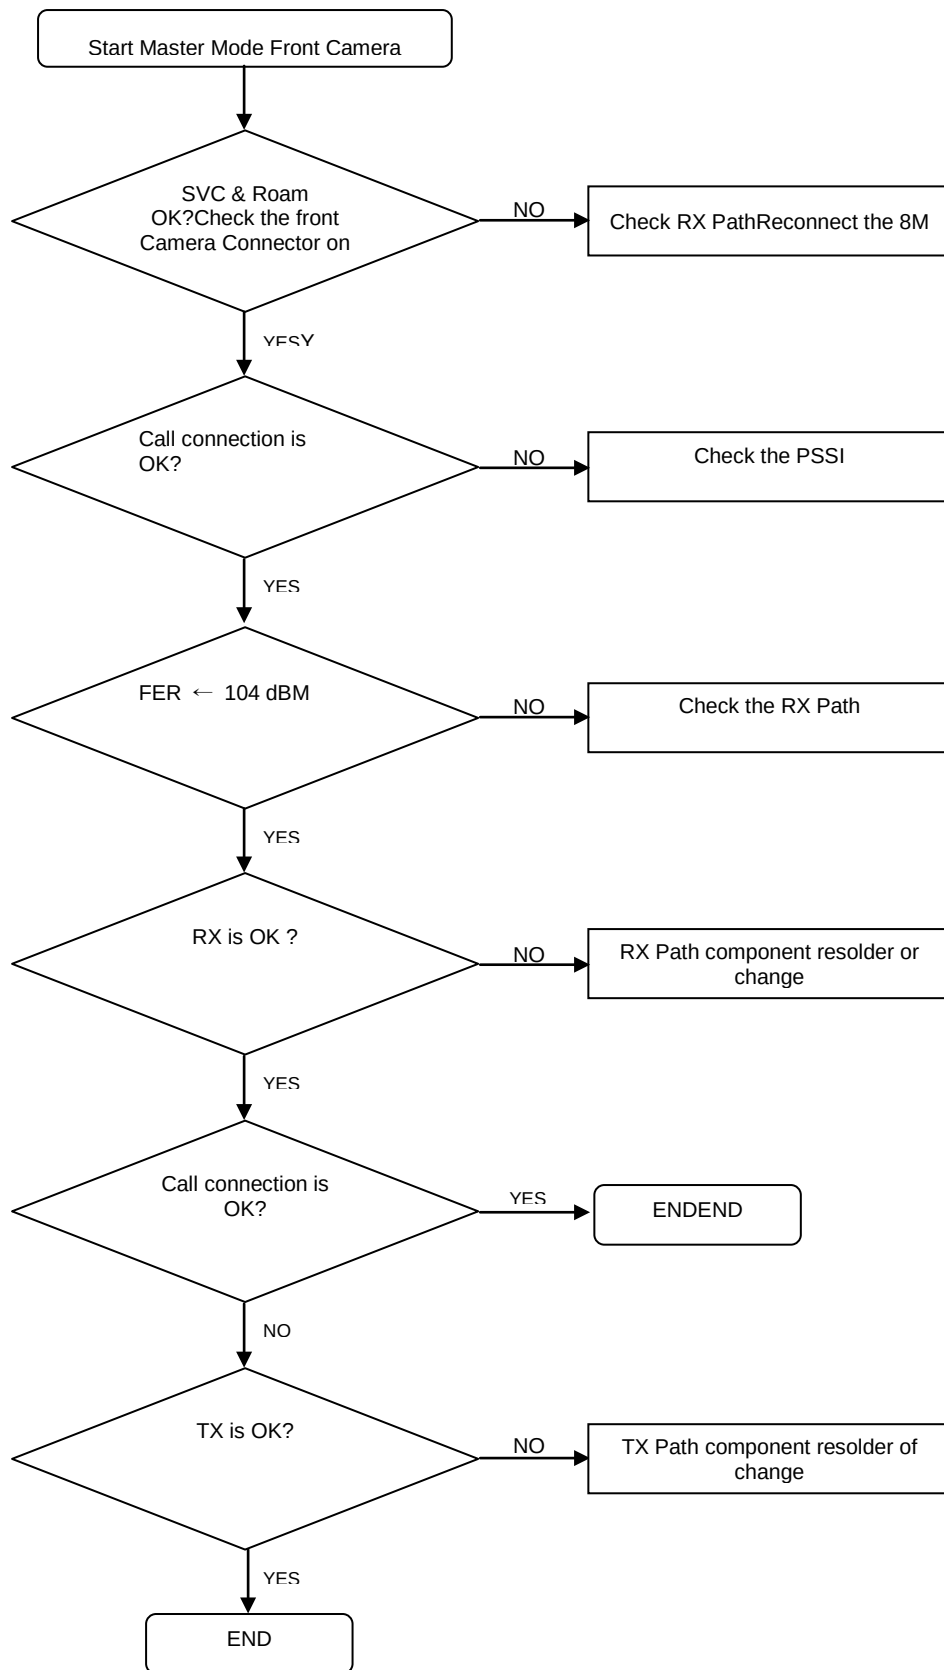


8. Level 3 Repair

8-4-12. RF Section(WLAN / BT)

- WLAN RX

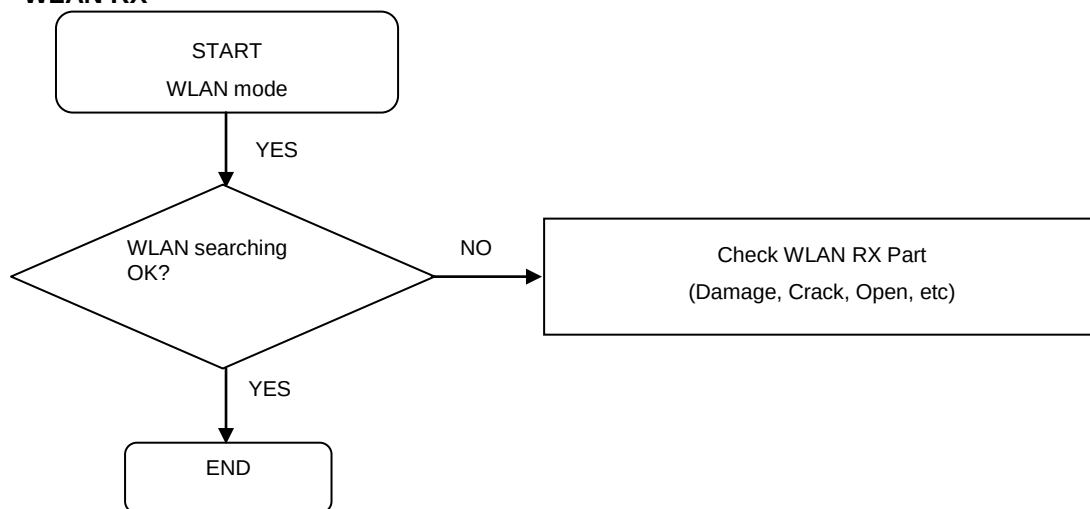


- WLAN TX

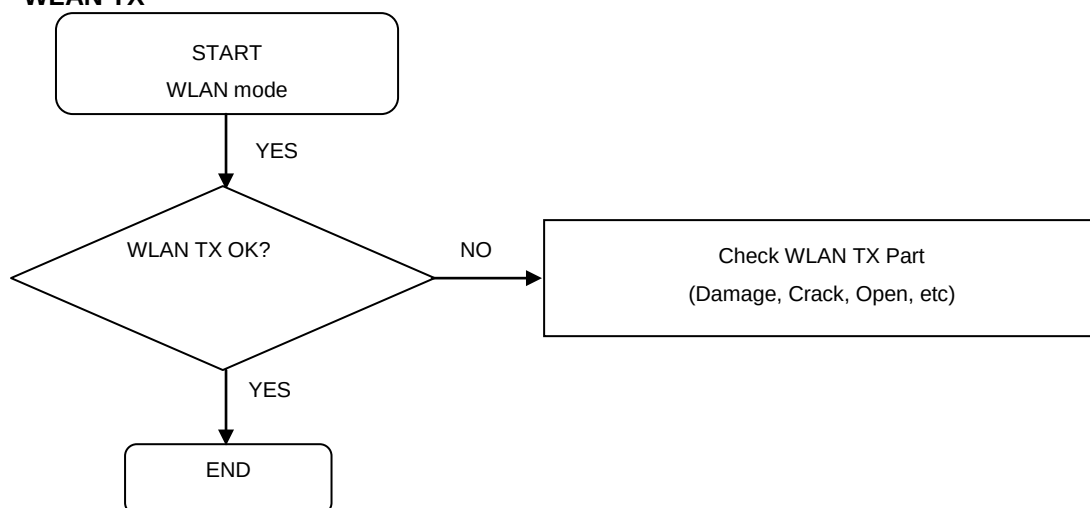


8. Level 3 Repair

- BT

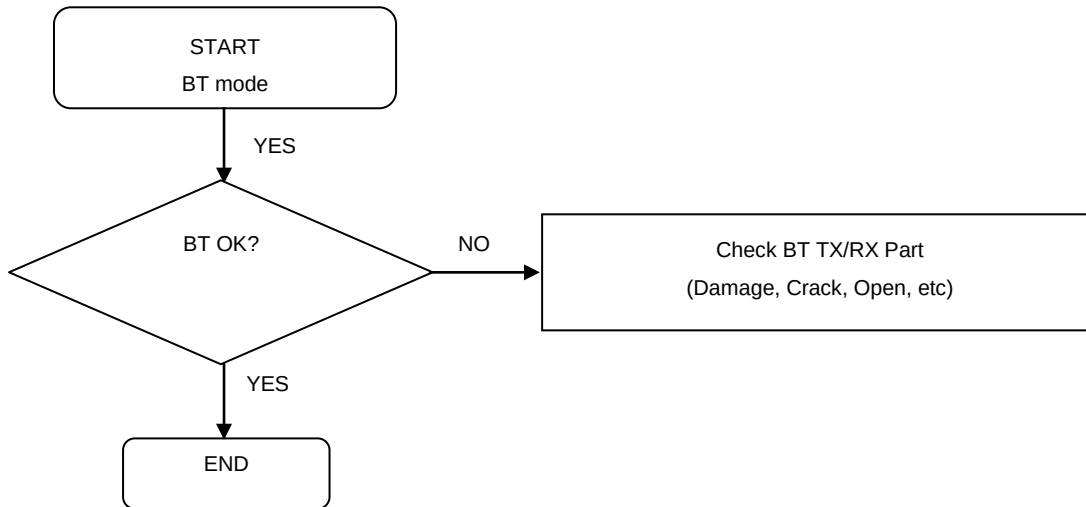


- GPS

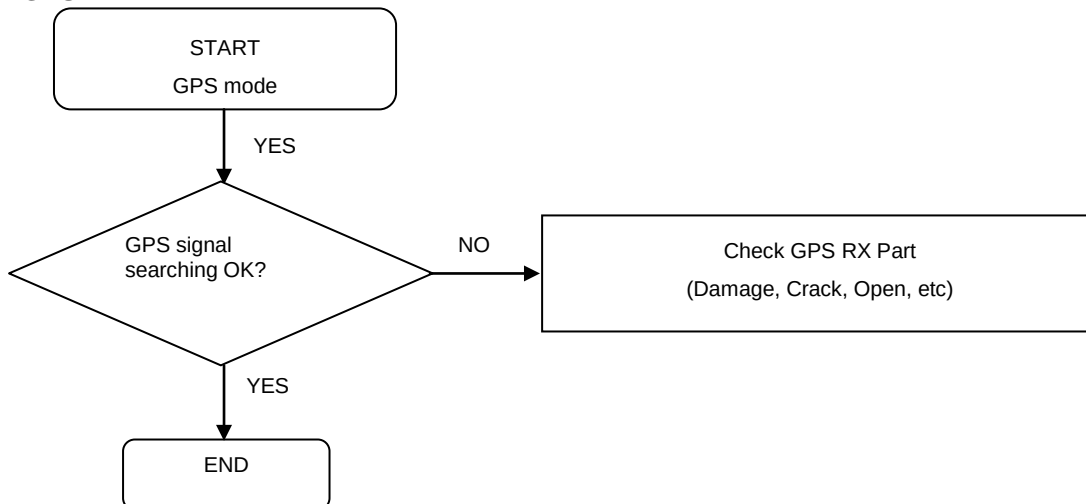


8. Level 3 Repair

8-4-13. FM RADIO

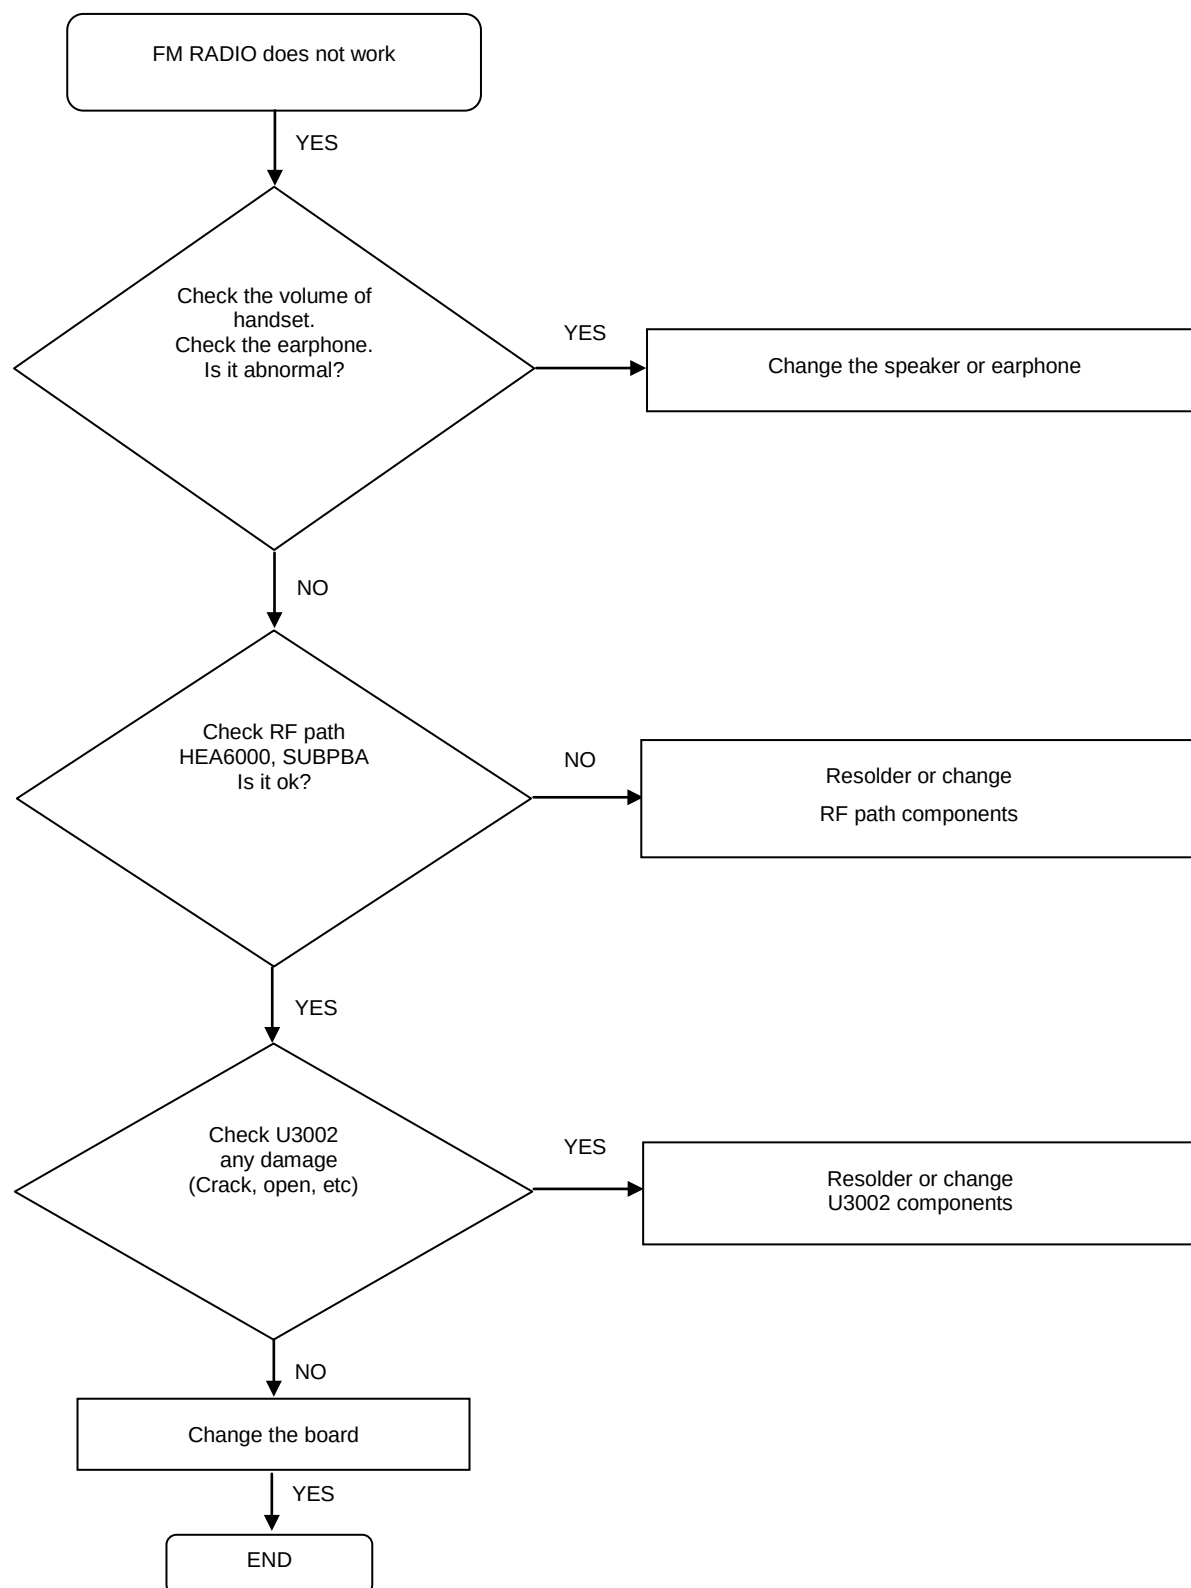

8. Level 3 Repair

8-4-14. NFC

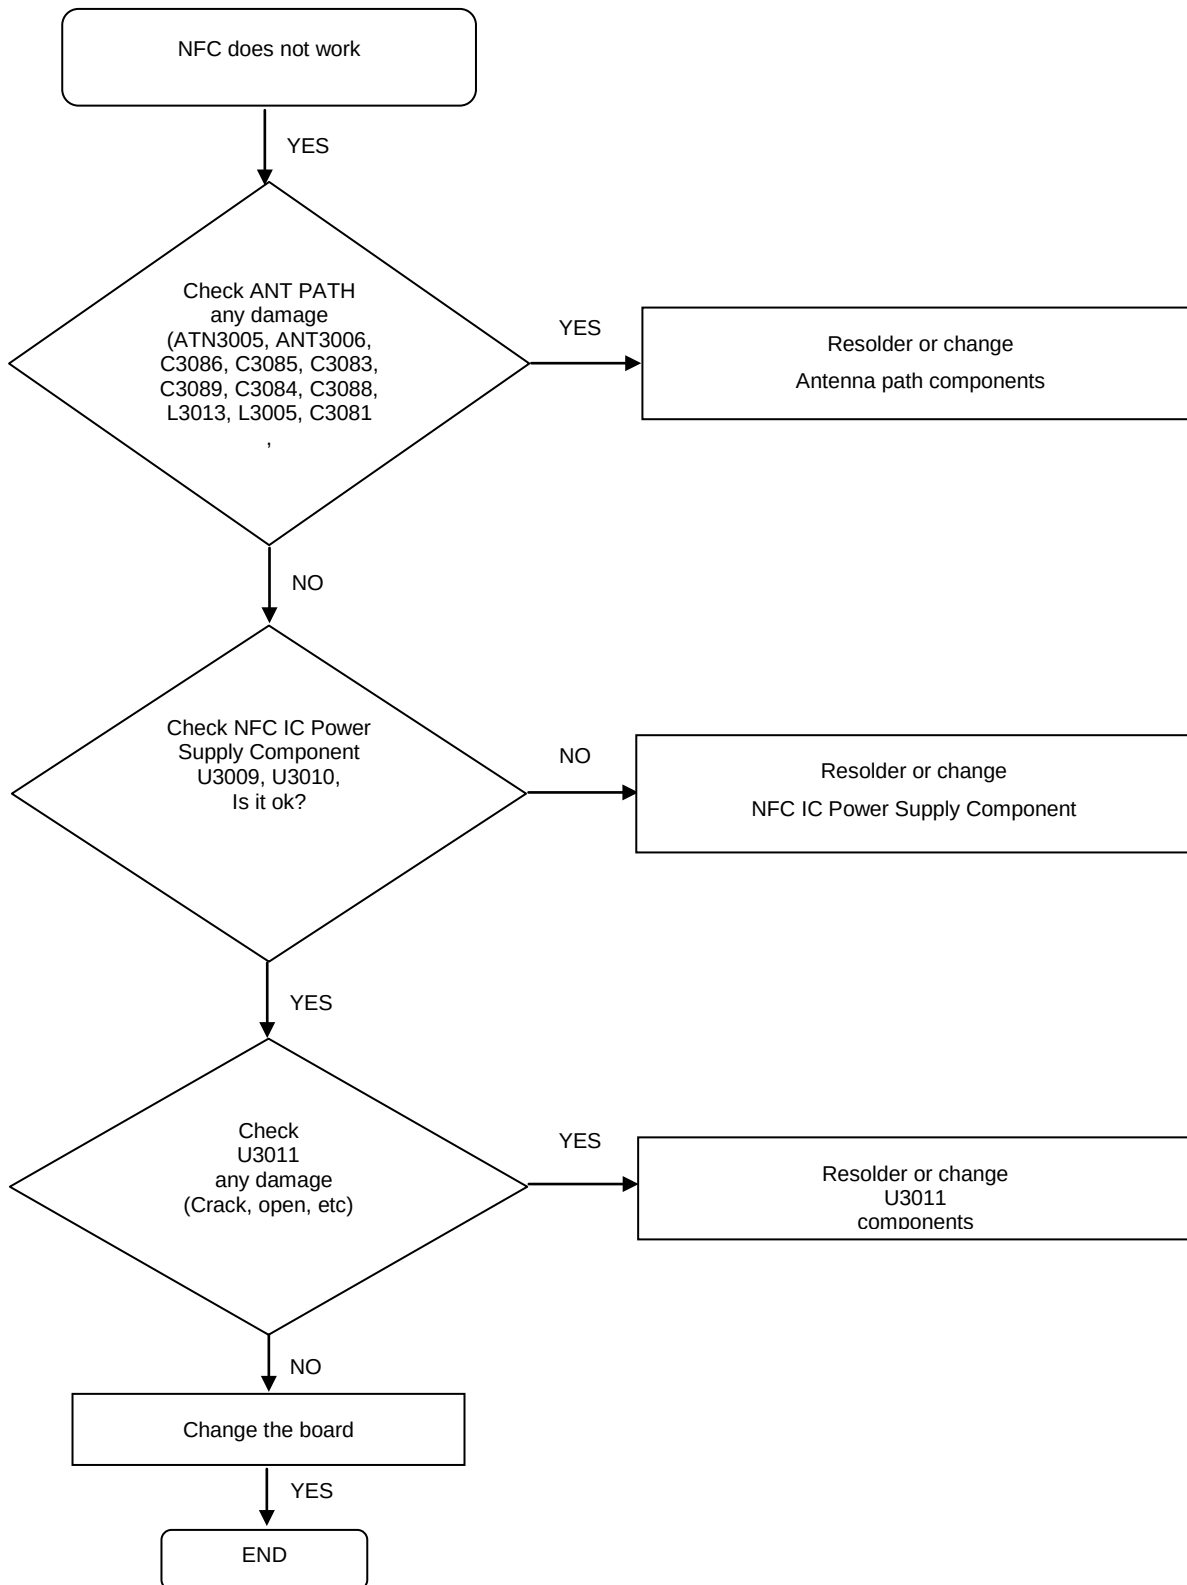

UCP3000

[illegible]