



8. Level 3 Repair

8-1. Components Layout

Main PBA Top

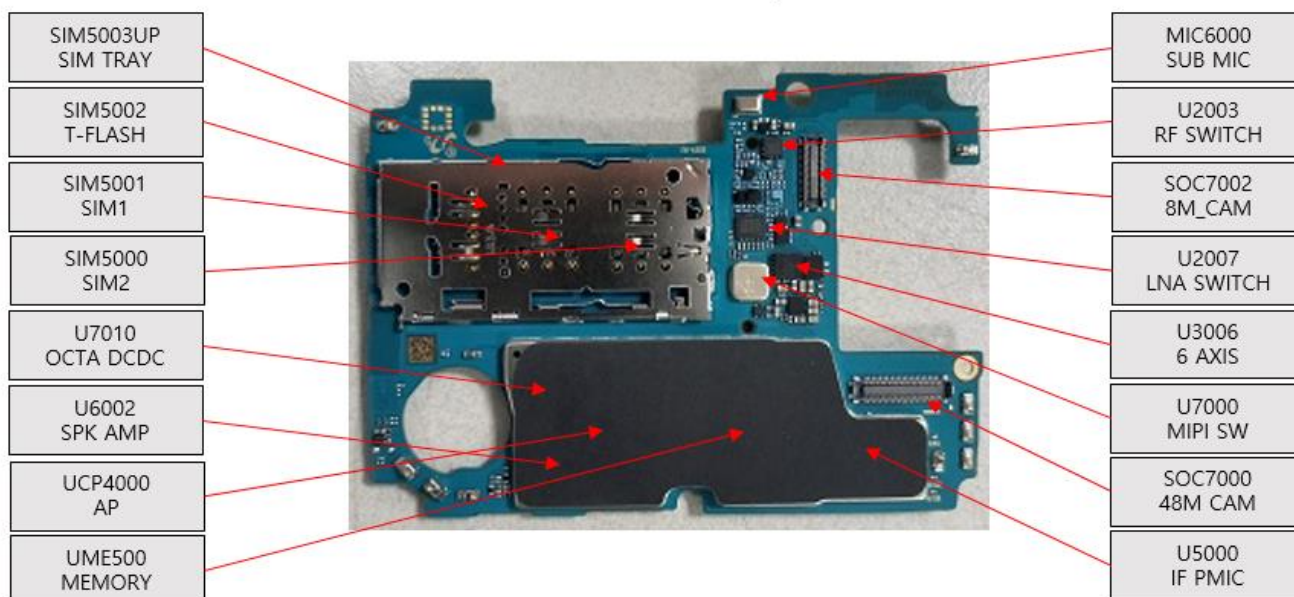


Main PBA Bot

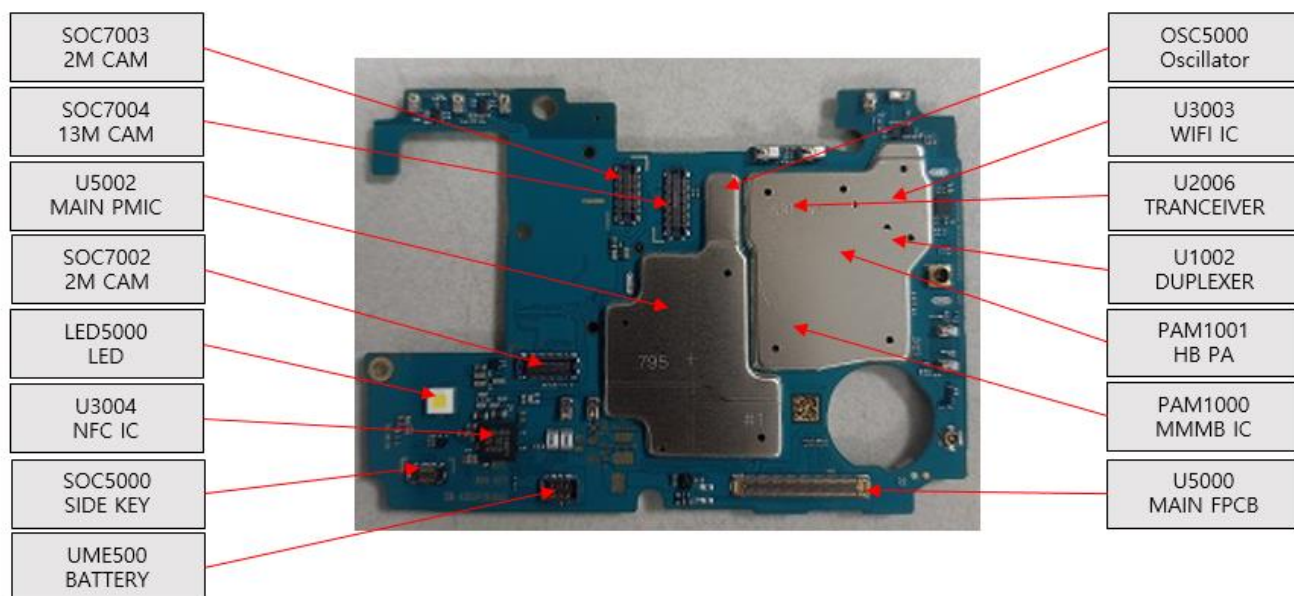



SM-A225F_REV01 Block Diagram (BB)

SM-A225F/M
Common

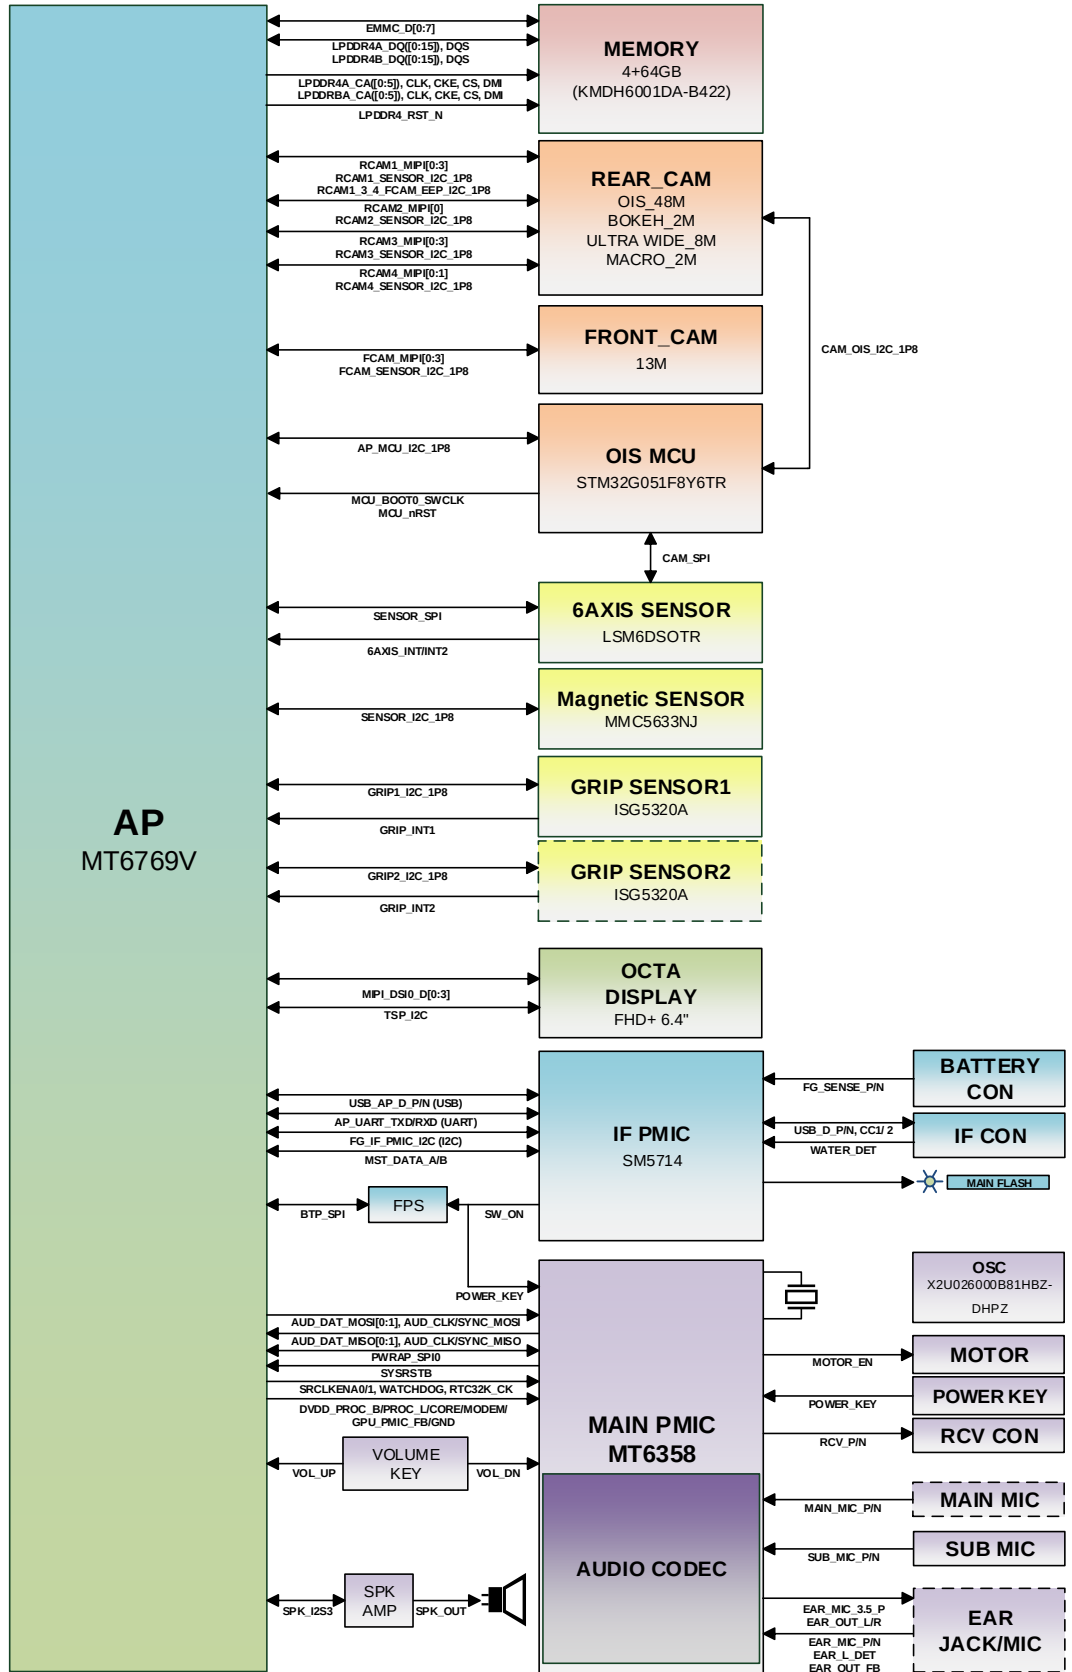

SM-A225F_RF

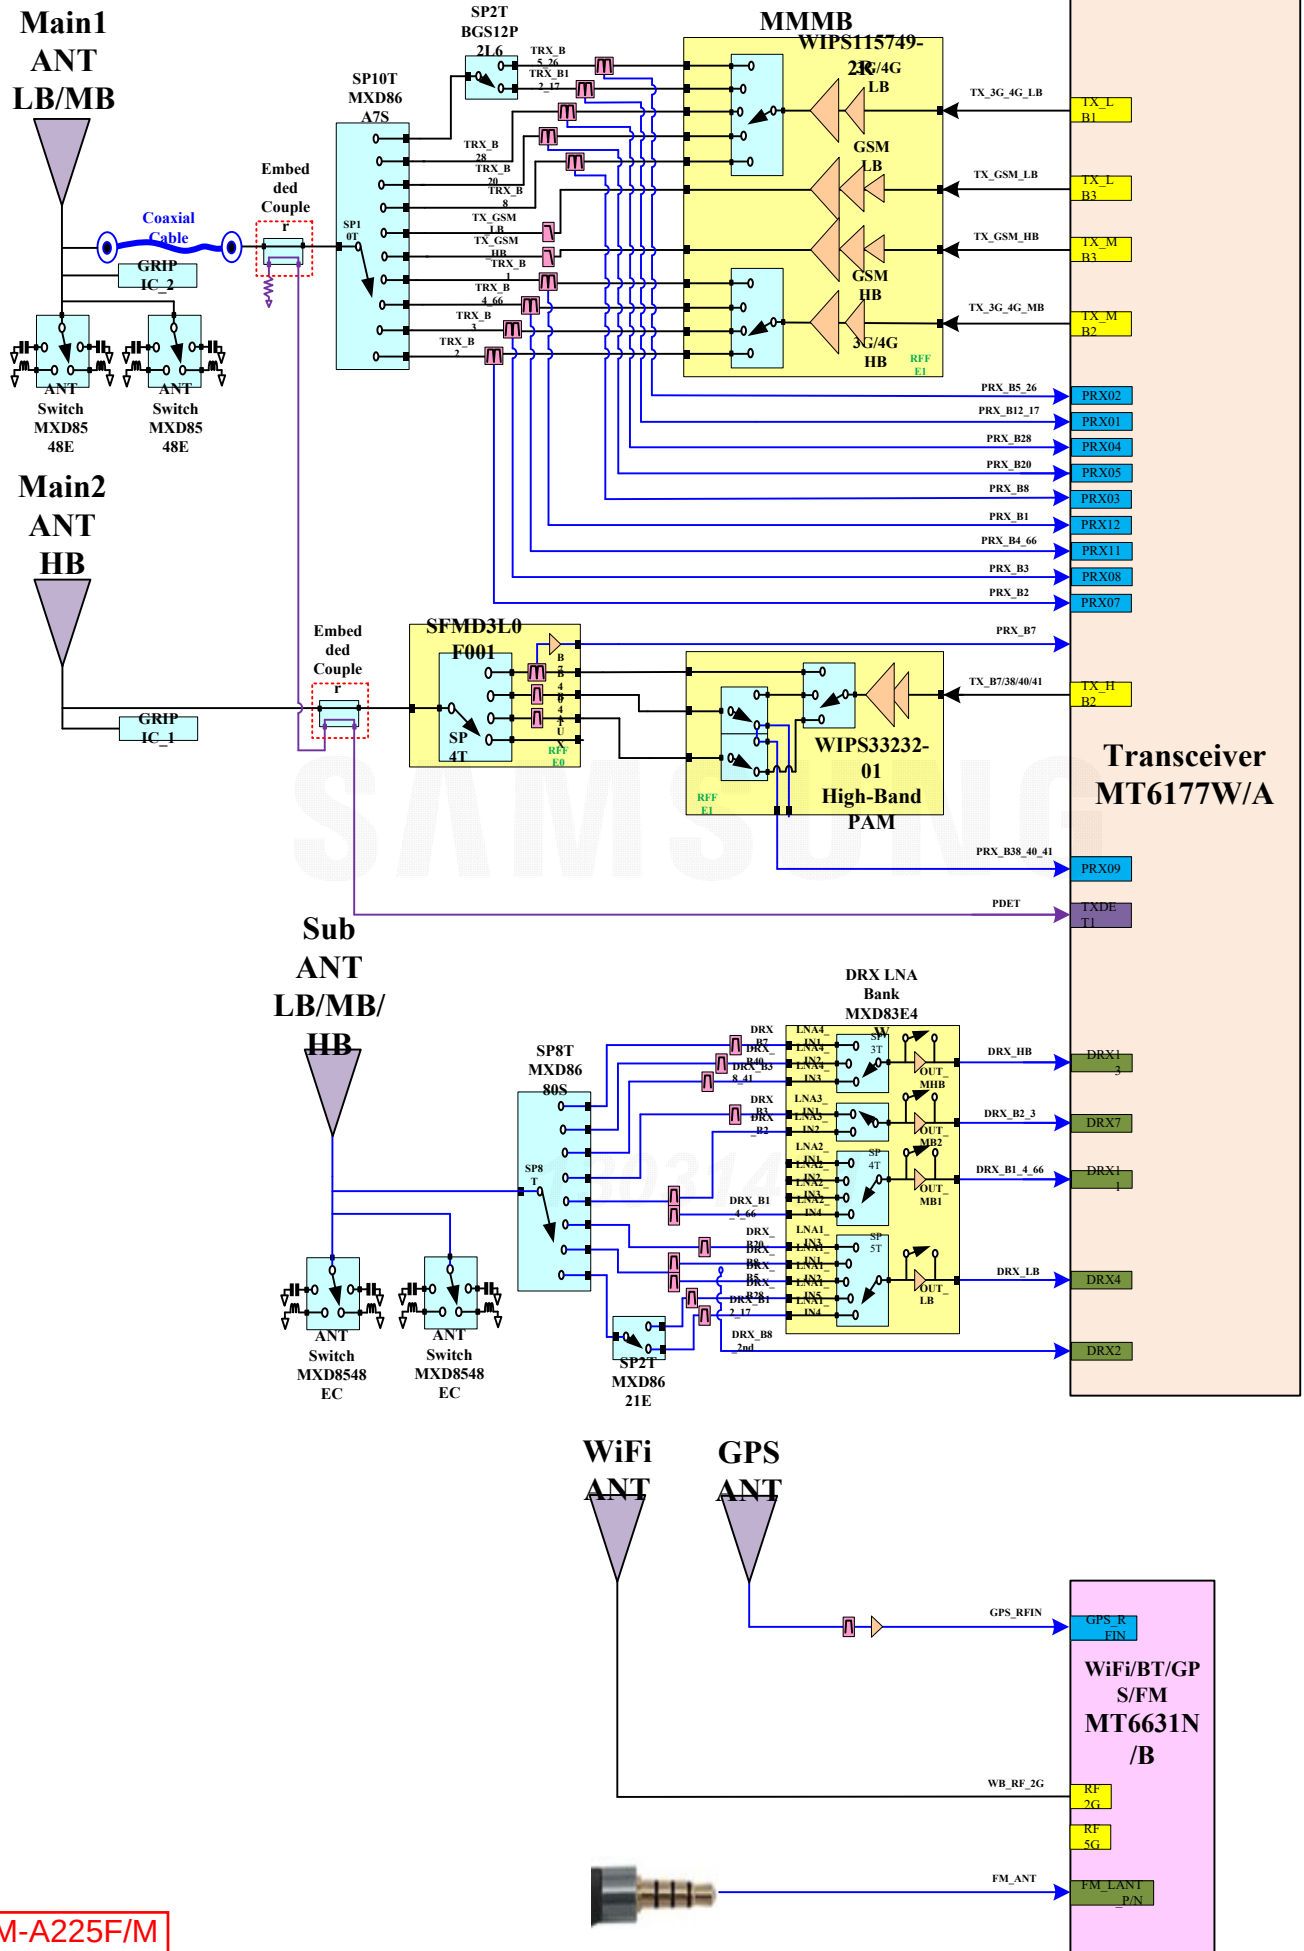

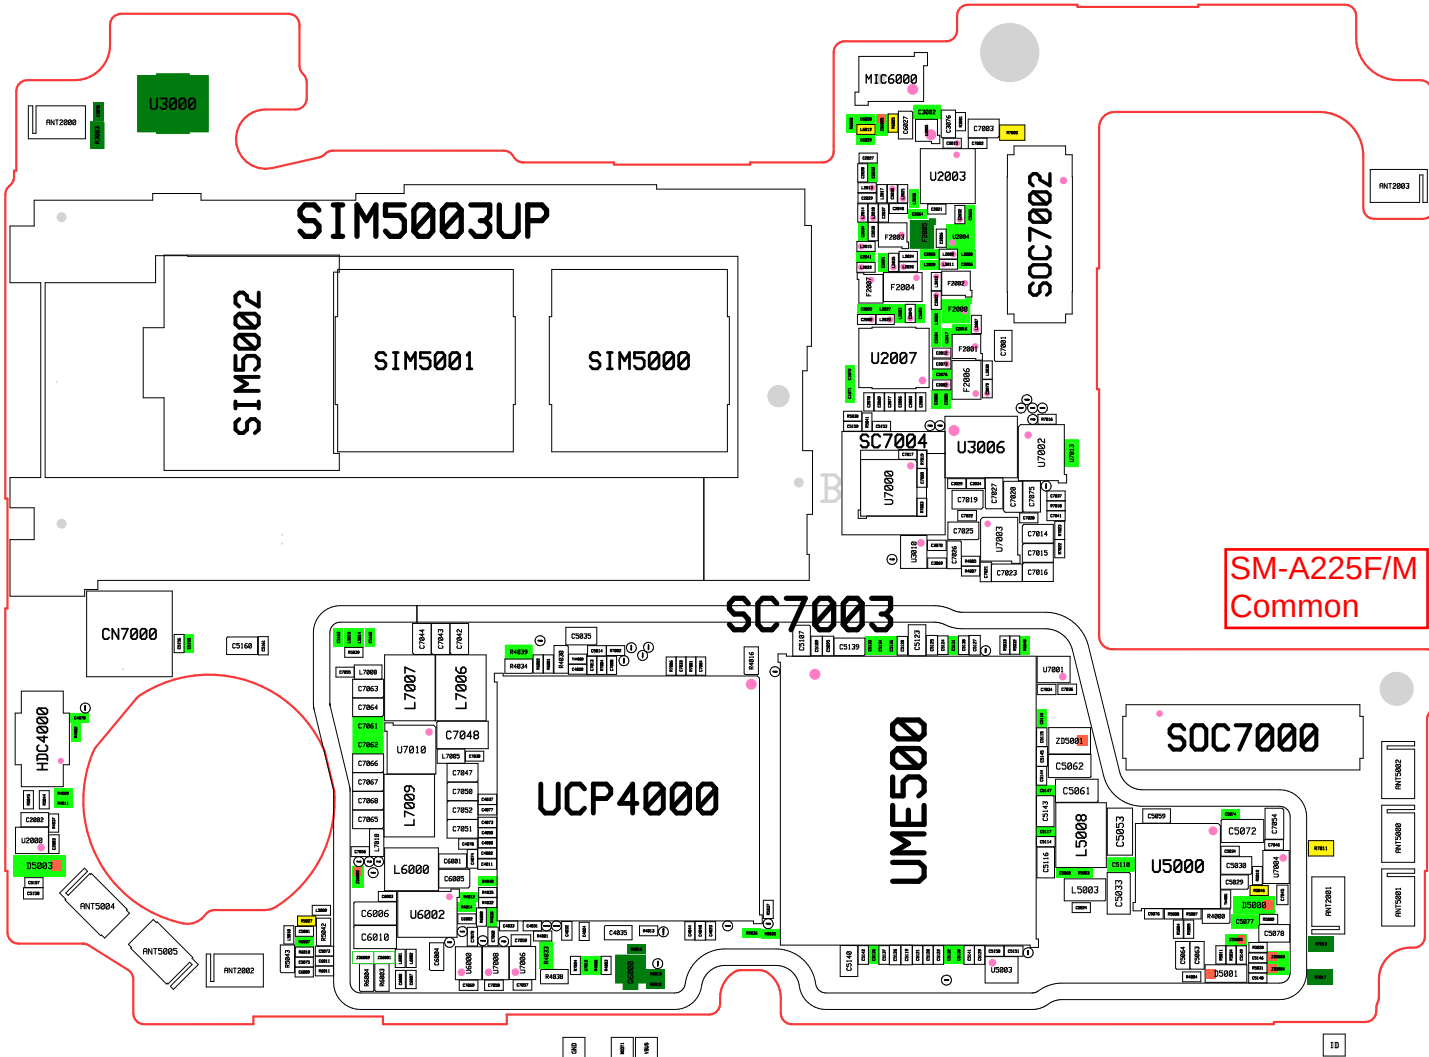

SM-A225F/M
Common

BH7000

LEJ5000

SOC5000

SOC7001

SOC5001

SOC7003

SOC7004

SOC7000

U5002

SOC7001

PAM1000

SOC6000

CN7001

U3003

U2006

U1002

U2001

RFS1000

PNT1001

PNT1002

RFS1001

PNT2004

PNT2005

PNT2006

PNT2003

U3000

U3001

U3002

U3003

U3004

U3005

U3006

U3007

U3008

U3009

U3010

U3011

U3012

U3013

U3014

U3015

U3016

U3017

U3018

U3019

U3020

U3021

U3022

U3023

U3024

U3025

U3026

U3027

U3028

U3029

U3030

U3031

U3032

U3033

U3034

U3035

U3036

U3037

U3038

U3039

U3040

U3041

U3042

U3043

U3044

U3045

U3046

U3047

U3048

U3049

U3050

U3051

U3052

U3053

U3054

U3055

U3056

U3057

U3058

U3059

U3060

U3061

U3062

U3063

U3064

U3065

U3066

U3067

U3068

U3069

U3070

U3071

U3072

U3073

U3074

U3075

U3076

U3077

U3078

U3079

U3080

U3081

U3082

U3083

U3084

U3085

U3086

U3087

U3088

U3089

U3090

U3091

U3092

U3093

U3094

U3095

U3096

U3097

U3098

U3099

U3100

U3101

U3102

U3103

U3104

U3105

U3106

U3107

U3108

U3109

U3110

U3111

U3112

U3113

U3114

U3115

U3116

U3117

U3118

U3119

U3120

U3121

U3122

U3123

U3124

U3125

U3126

U3127

U3128

U3129

U3130

U3131

U3132

U3133

U3134

U3135

U3136

U3137

U3138

U3139

U3140

U3141

U3142

U3143

U3144

U3145

U3146

U3147

U3148

U3149

U3150

U3151

U3152

U3153

U3154

U3155

U3156

U3157

U3158

U3159

U3160

U3161

U3162

U3163

U3164

U3165

U3166

U3167

U3168

U3169

U3170

U3171

U3172

U3173

U3174

U3175

U3176

U3177

U3178

U3179

U3180

U3181

U3182

U3183

U3184

U3185

U3186

U3187

U3188

U3189

U3190

U3191

U3192

U3193

U3194

U3195

U3196

U3197

U3198

U3199

U3200

U3201

U3202

U3203

U3204

U3205

U3206

U3207

U3208

U3209

U3210

U3211

U3212

U3213

U3214

U3215

U3216

U3217

U3218

U3219

U3220

U3221

U3222

U3223

U3224

U3225

U3226

U3227

U3228

U3229

U3230

U3231

U3232

U3233

U3234

U3235

U3236

U3237

U3238

U3239

U3240

U3241

U3242

U3243

U3244

U3245

U3246

U3247

U3248

U3249

U3250

U3251

U3252

U3253

U3254

U3255

U3256

U3257

U3258

U3259

U3260

U3261

U3262

U3263

U3264

U3265

U3266

U3267

U3268

U3269

U3270

U3271

U3272

U3273

U3274

U3275

U3276

U3277

U3278

U3279

U3280

U3281


U3282

U3283

U3284

8. Level 3 Repair

8-3. Flow chart of Troubleshooting.

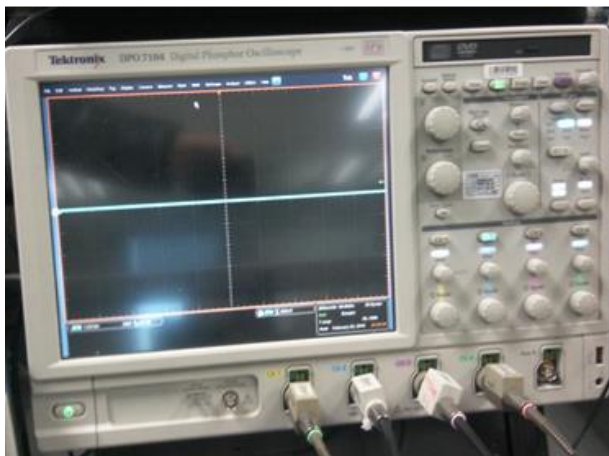

Oscilloscope




Digital Multimeter



Power Supply



+ driver, ESD Safe Tweezer

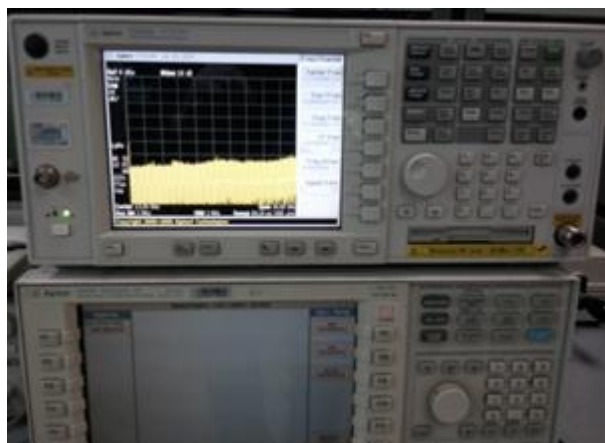


8960 & Spectrum Analyzer



Soldering iron


8. Level 3 Repair

8-4-1. Power On

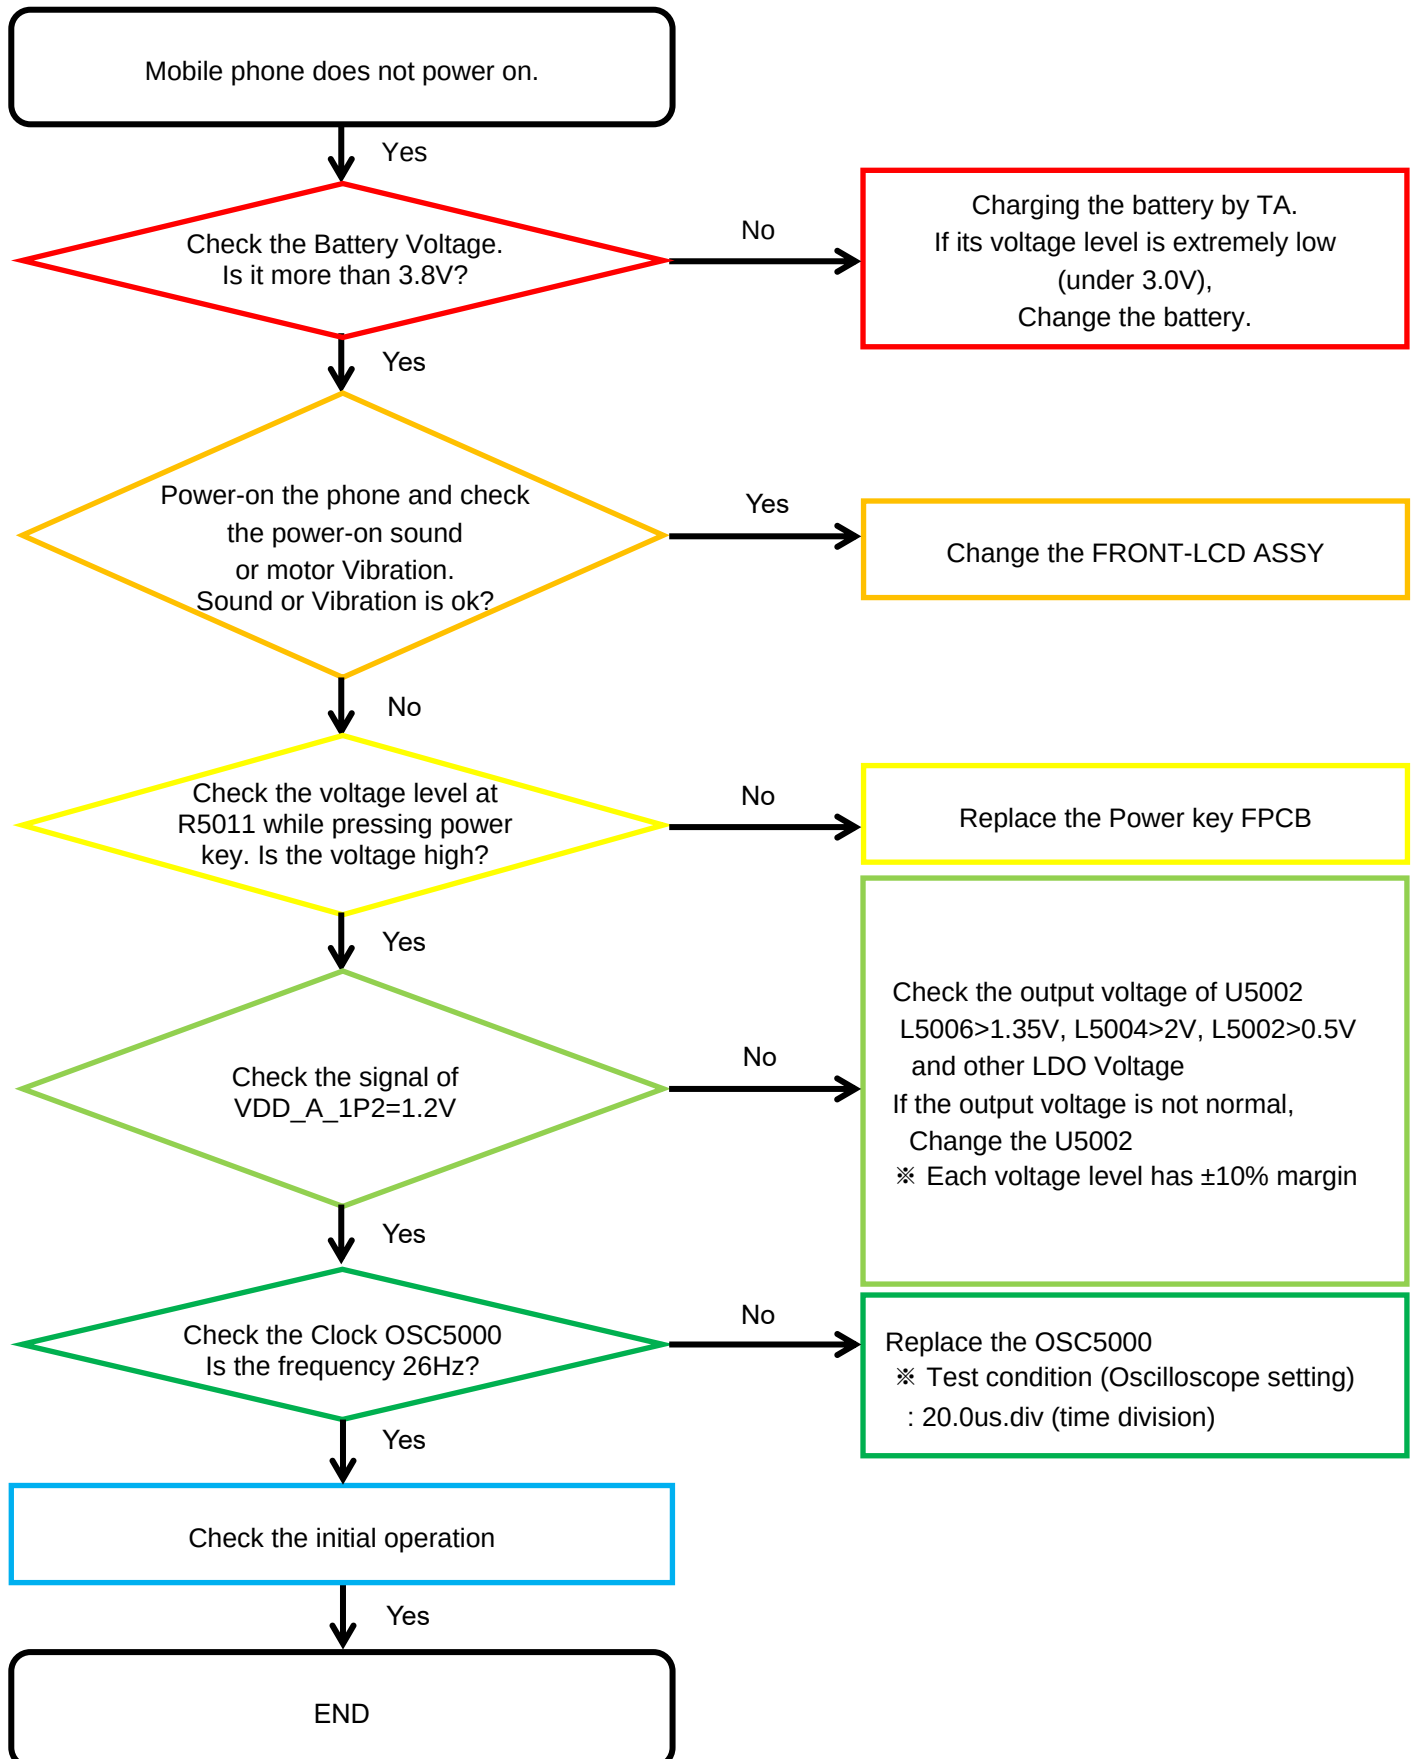


8. Level 3 Repair

8-4-2. Initial

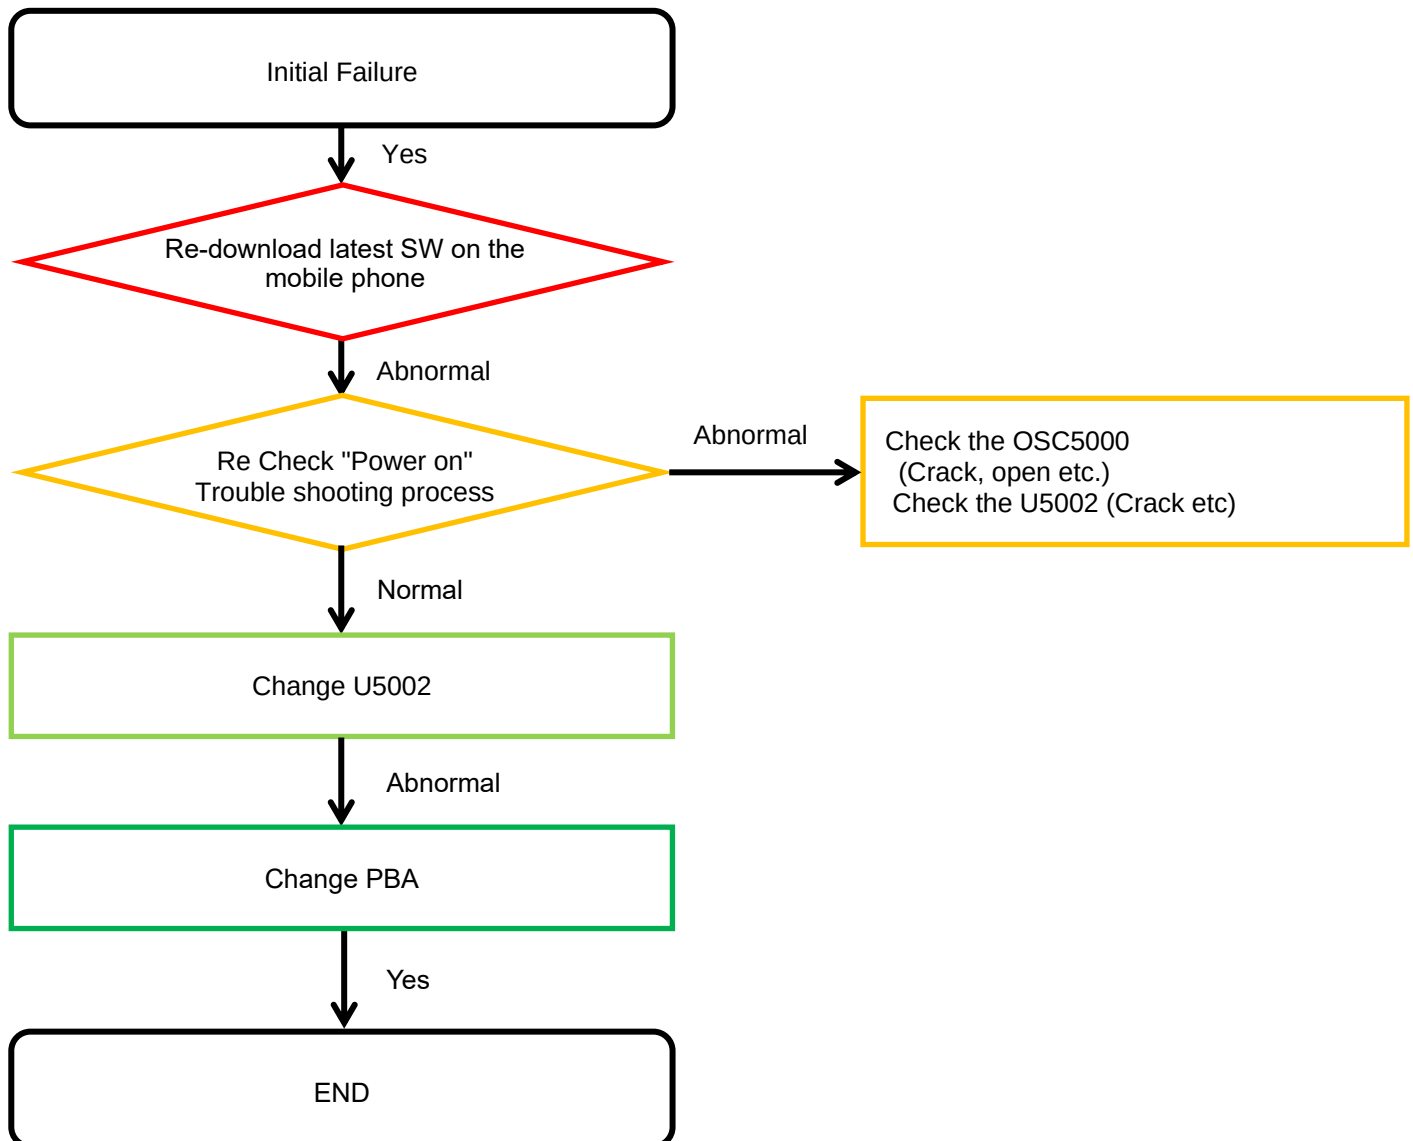


8. Level 3 Repair

8-4-3. No Service

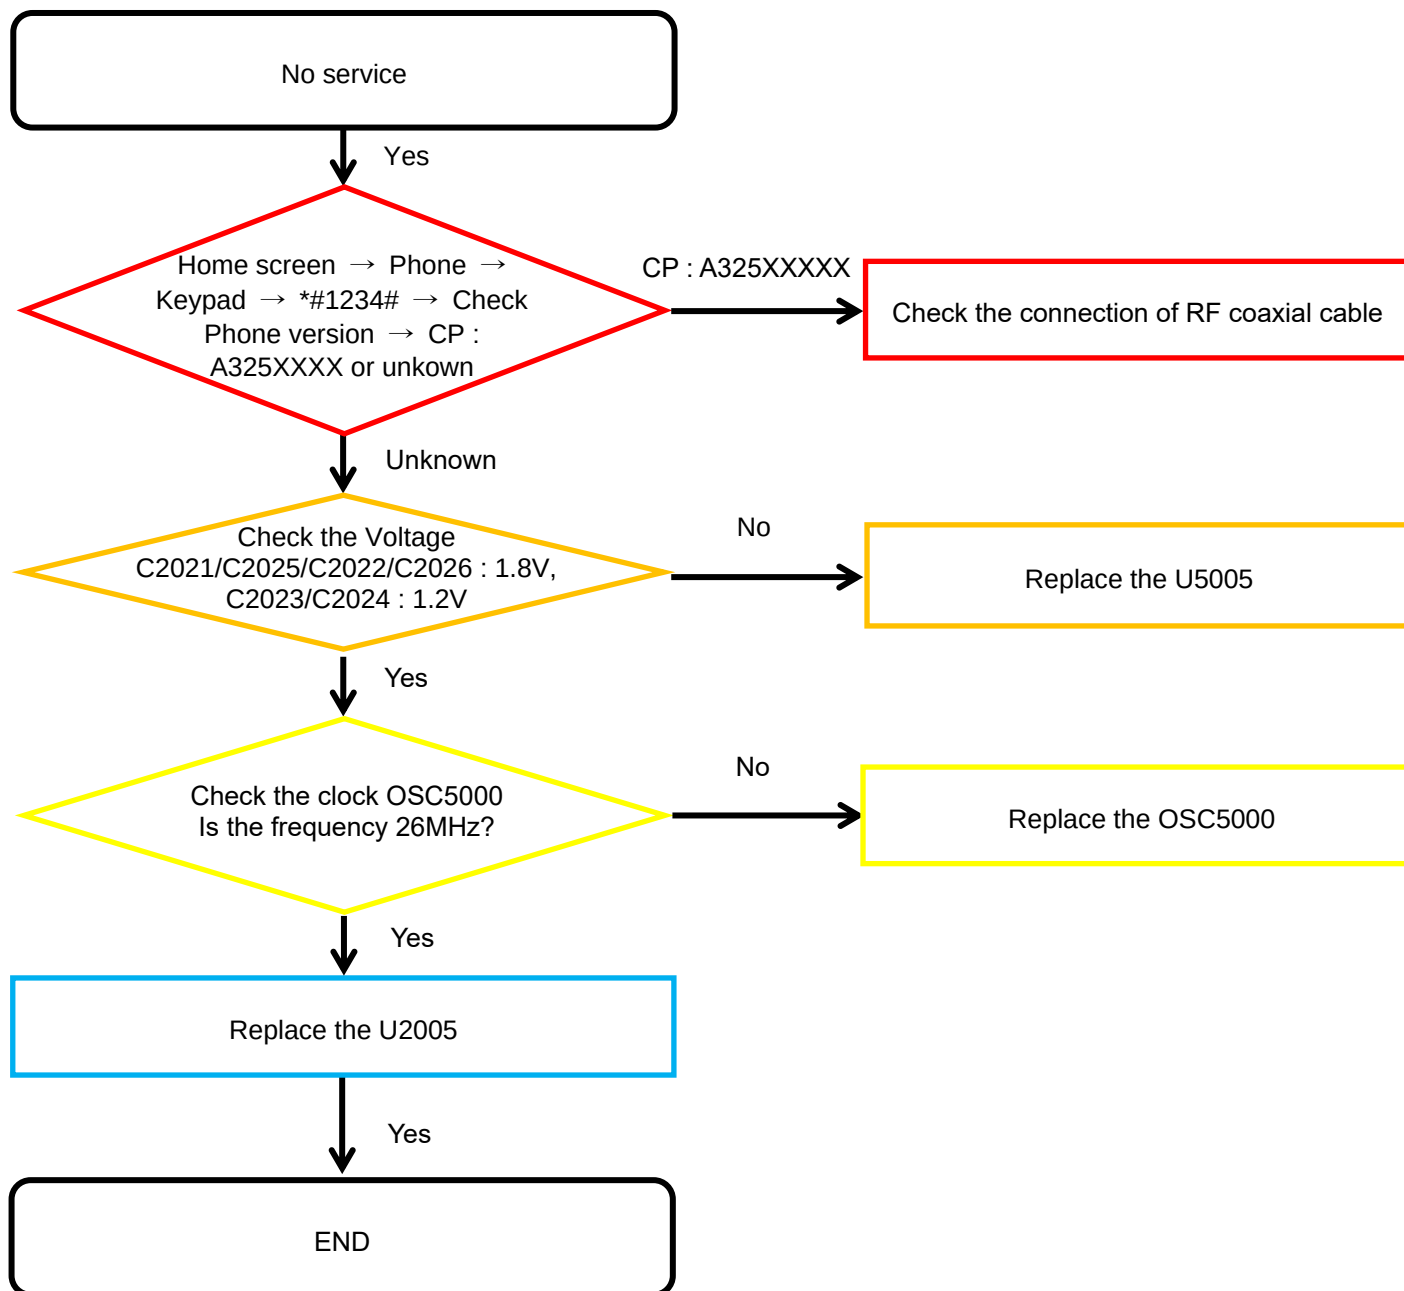


8. Level 3 Repair

8-4-4. SIM Part

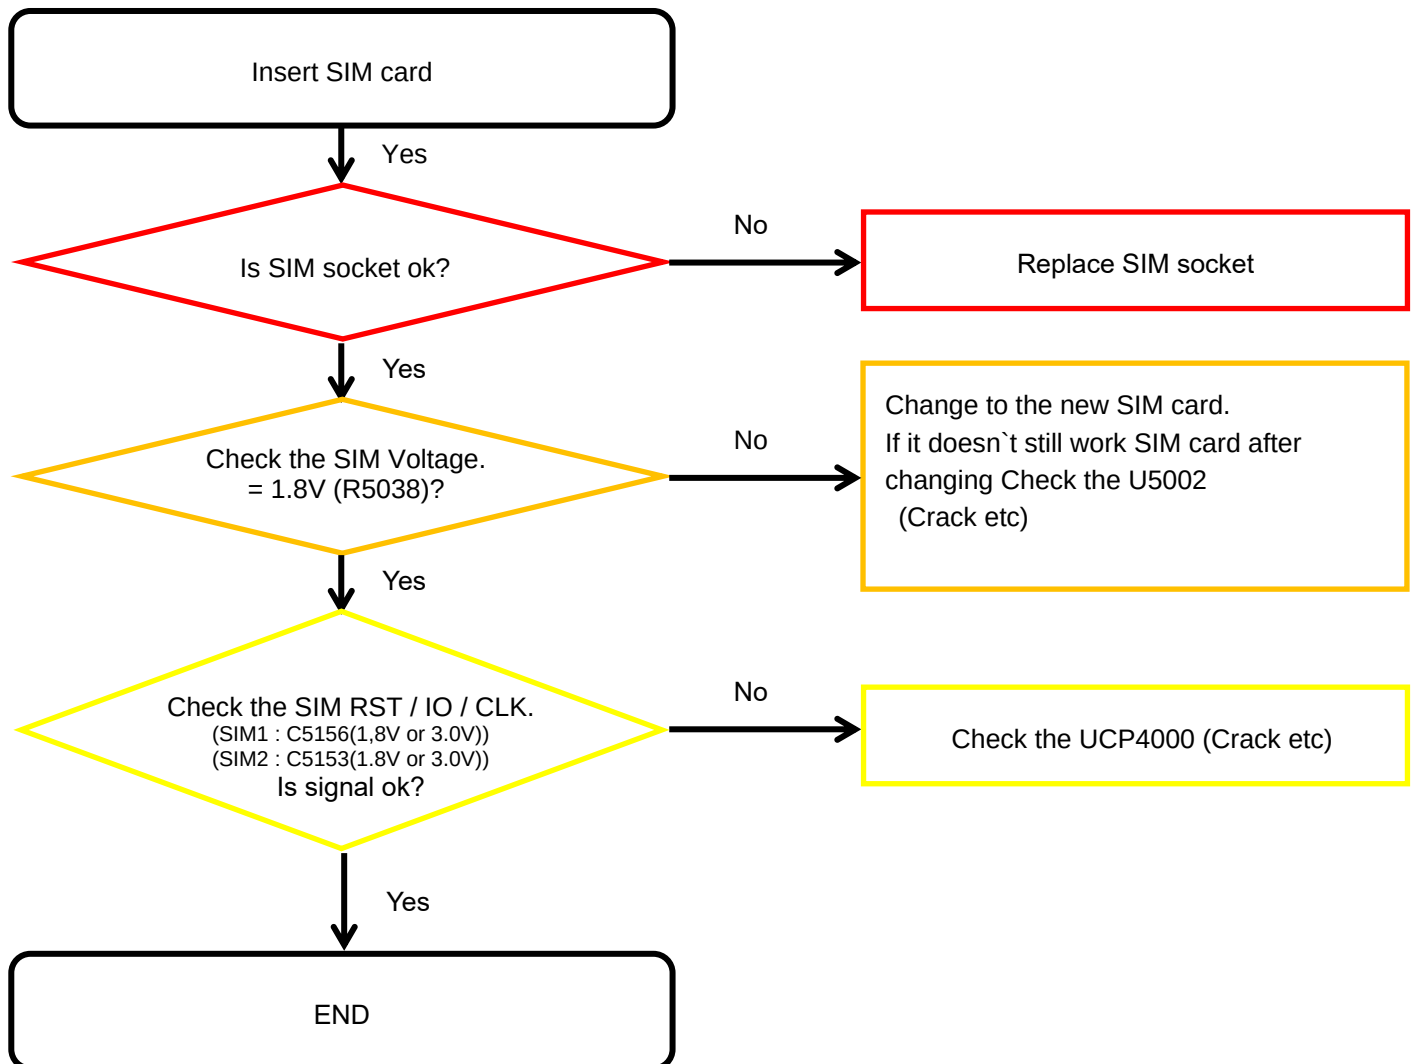


8. Level 3 Repair

8-4-5. T-Flash Part

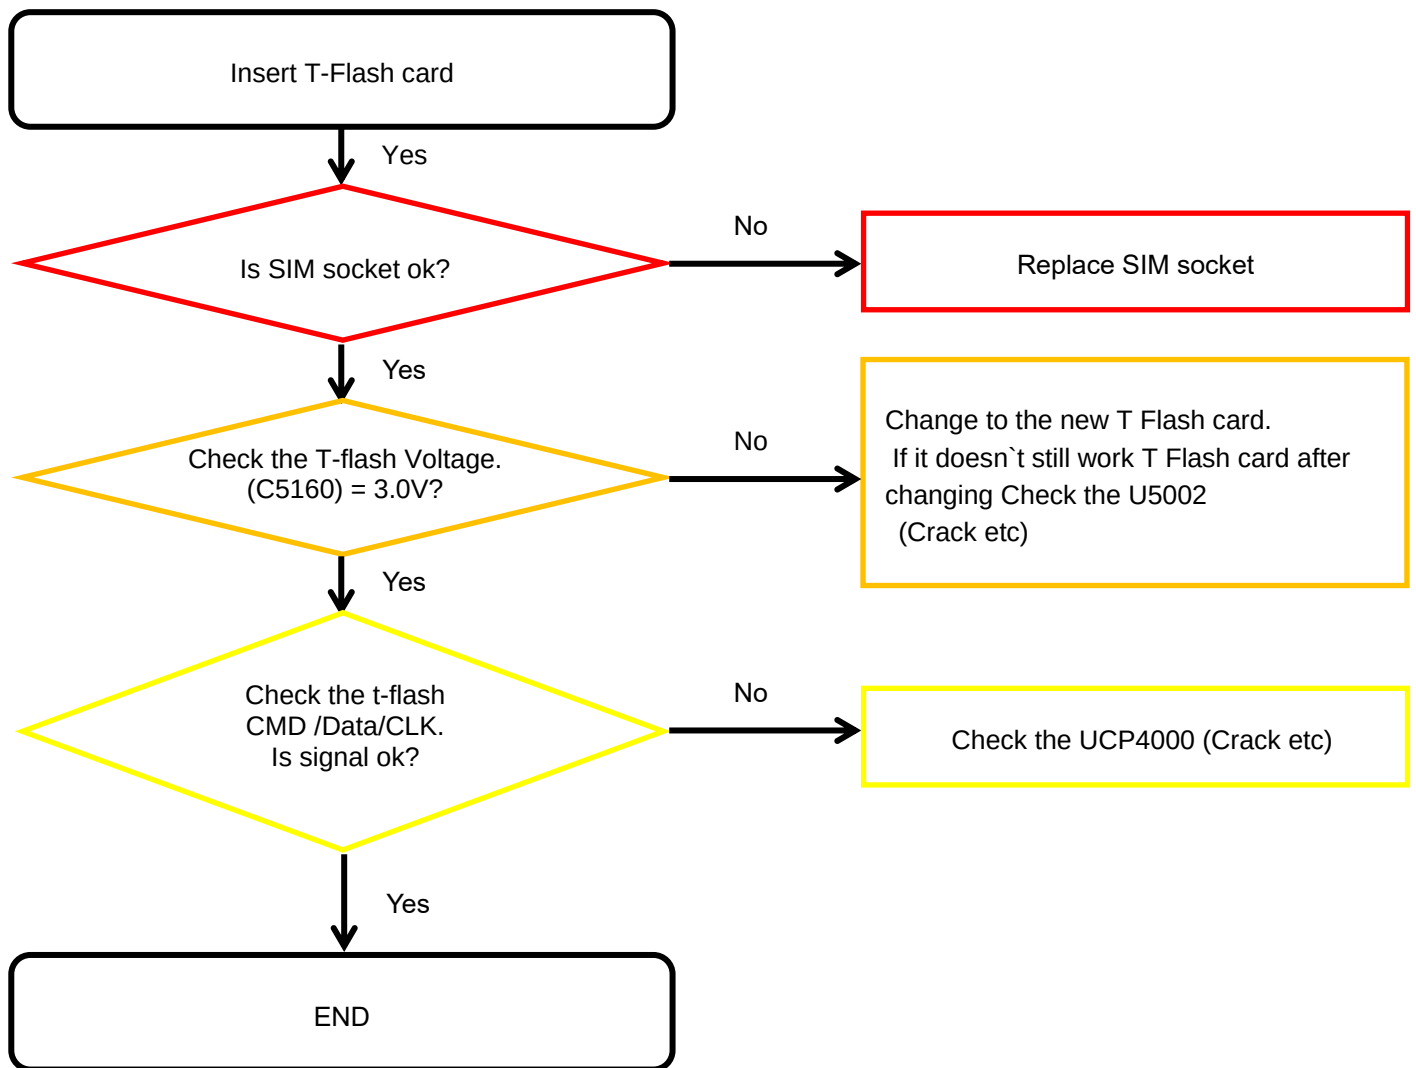


8. Level 3 Repair

8-4-6. Cable Charging Part

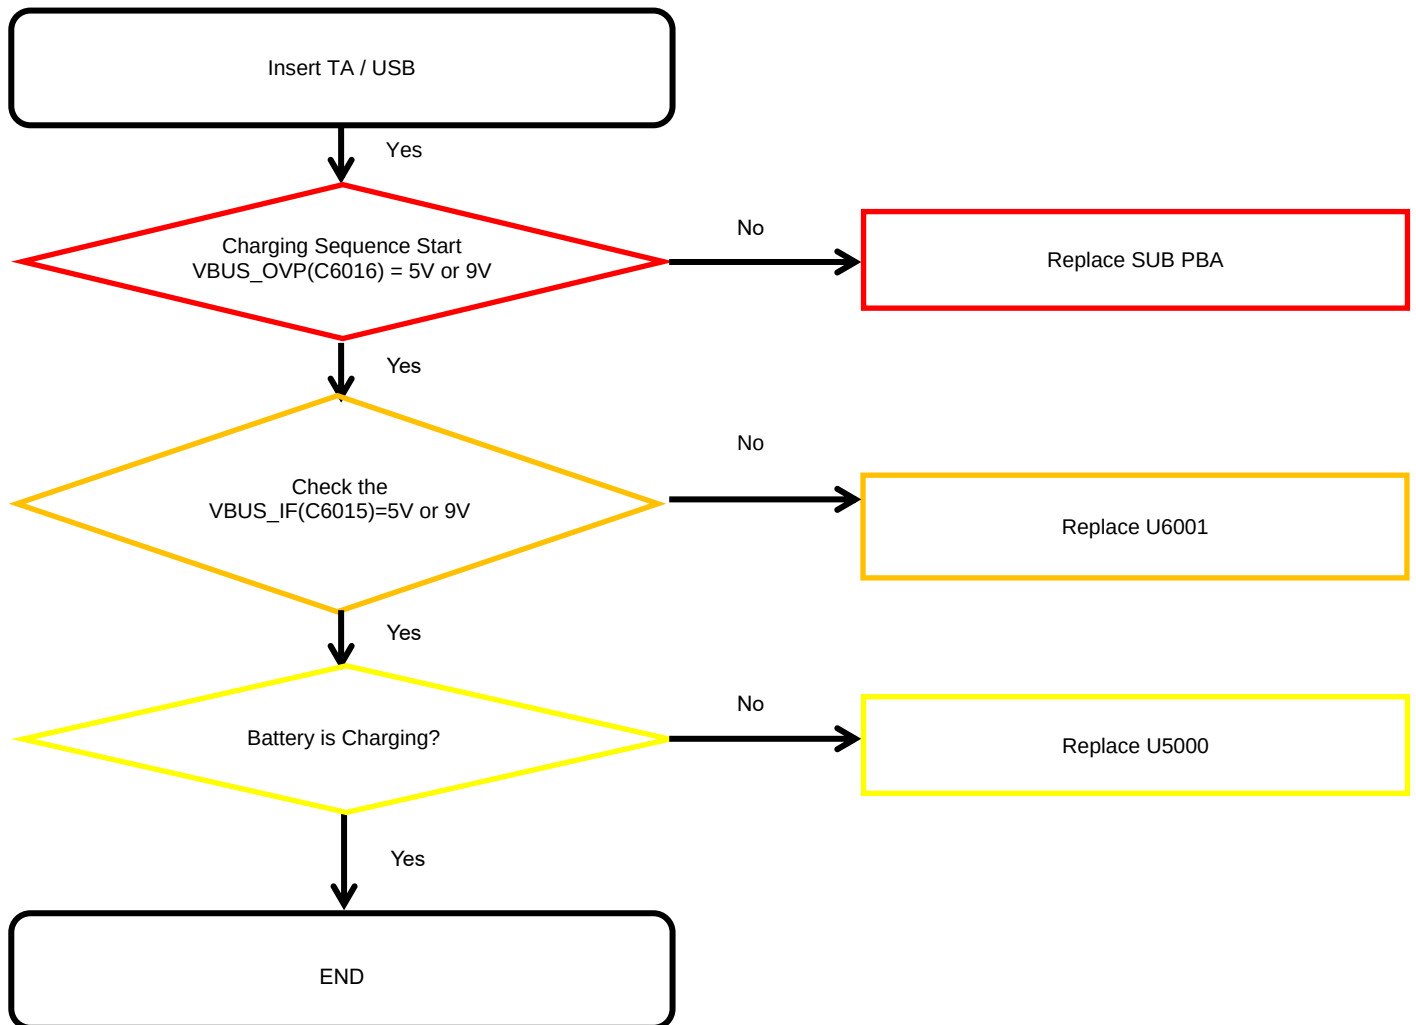


8. Level 3 Repair

8-4-7. OTG

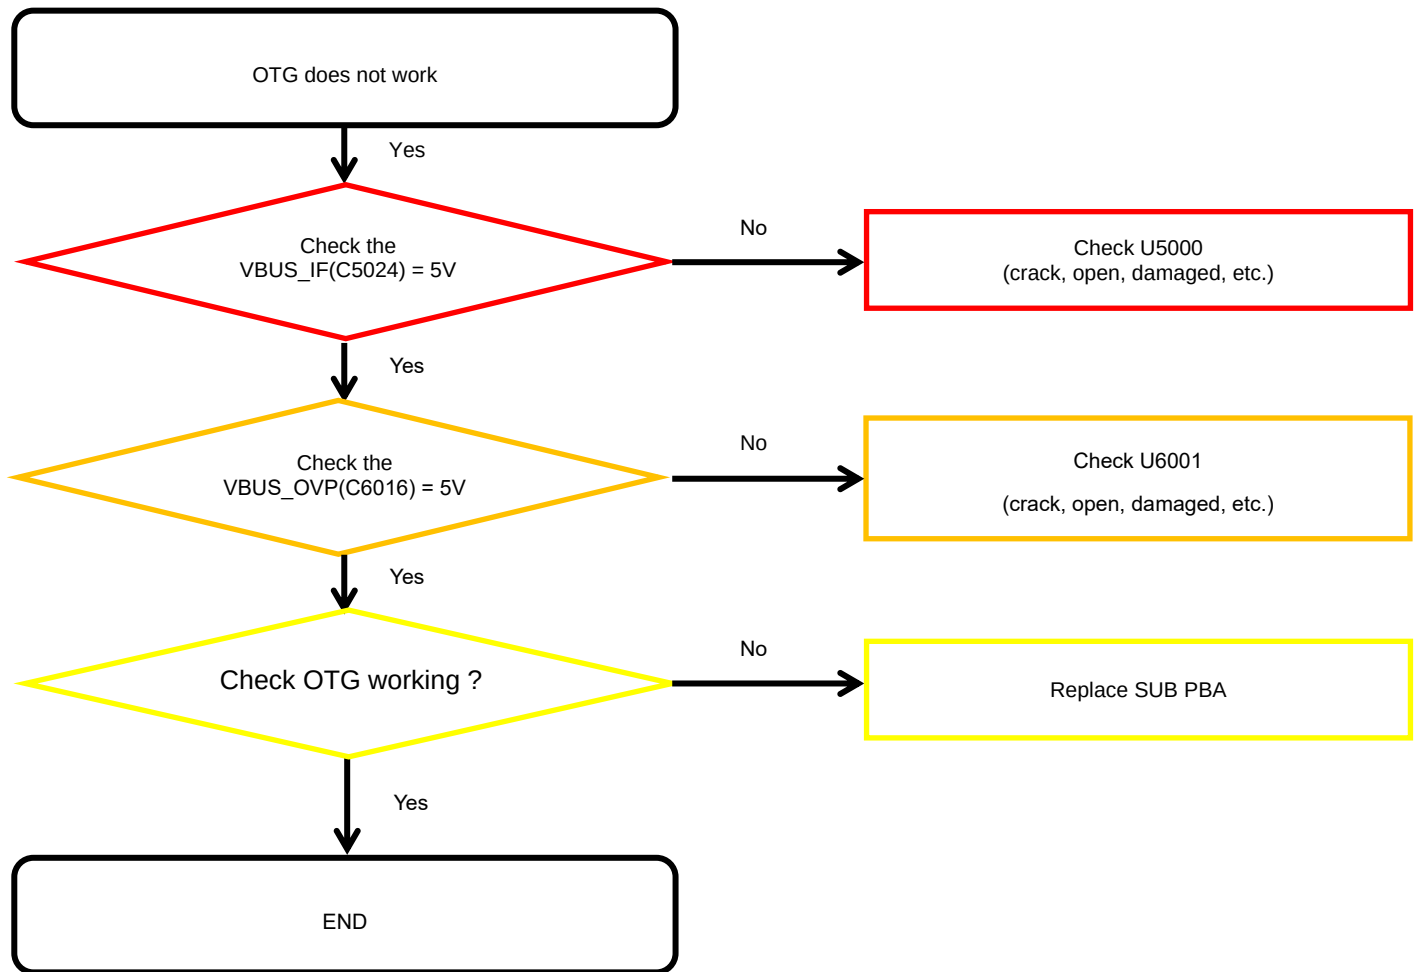


8. Level 3 Repair

8-4-8-1. Accel Sensor(6 AXIS)

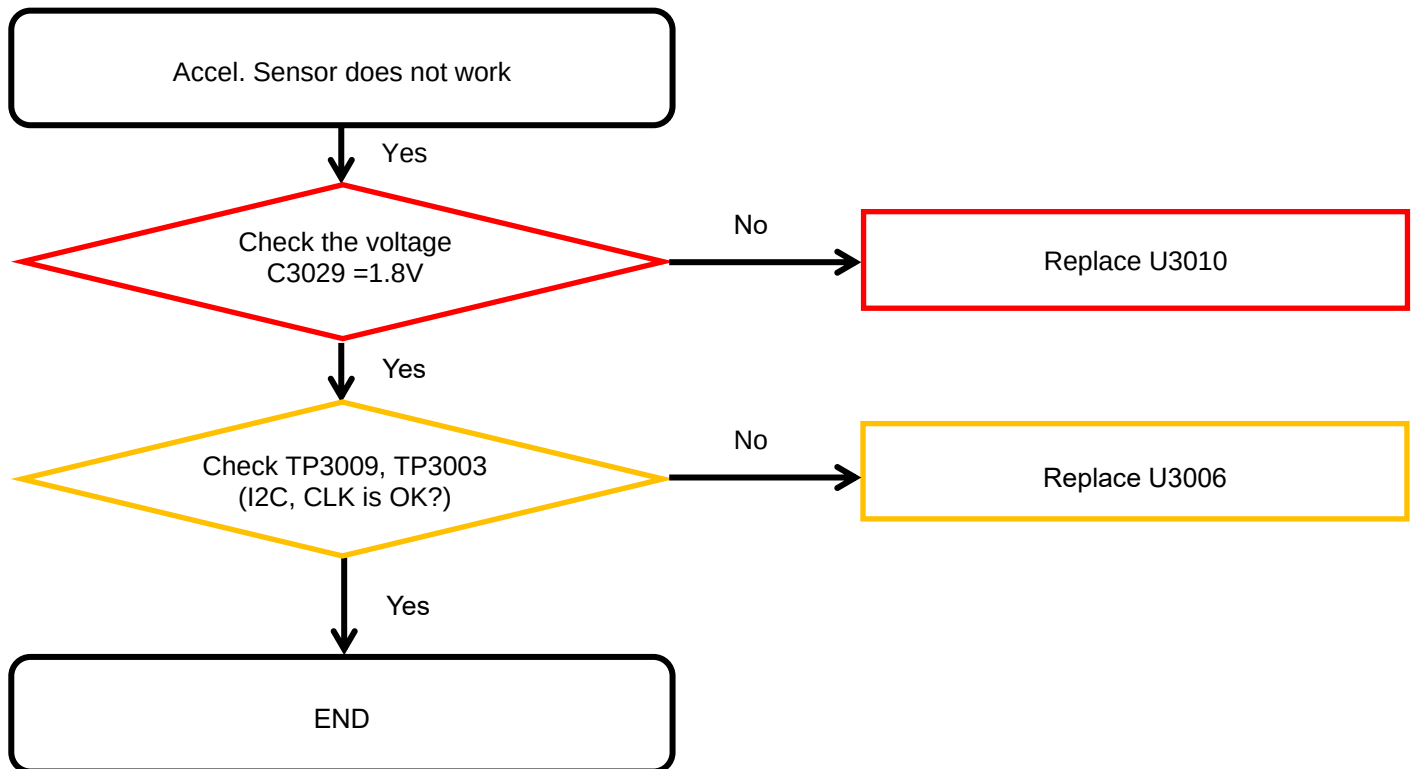


8. Level 3 Repair

8-4-8-2. Fingerprint Sensor

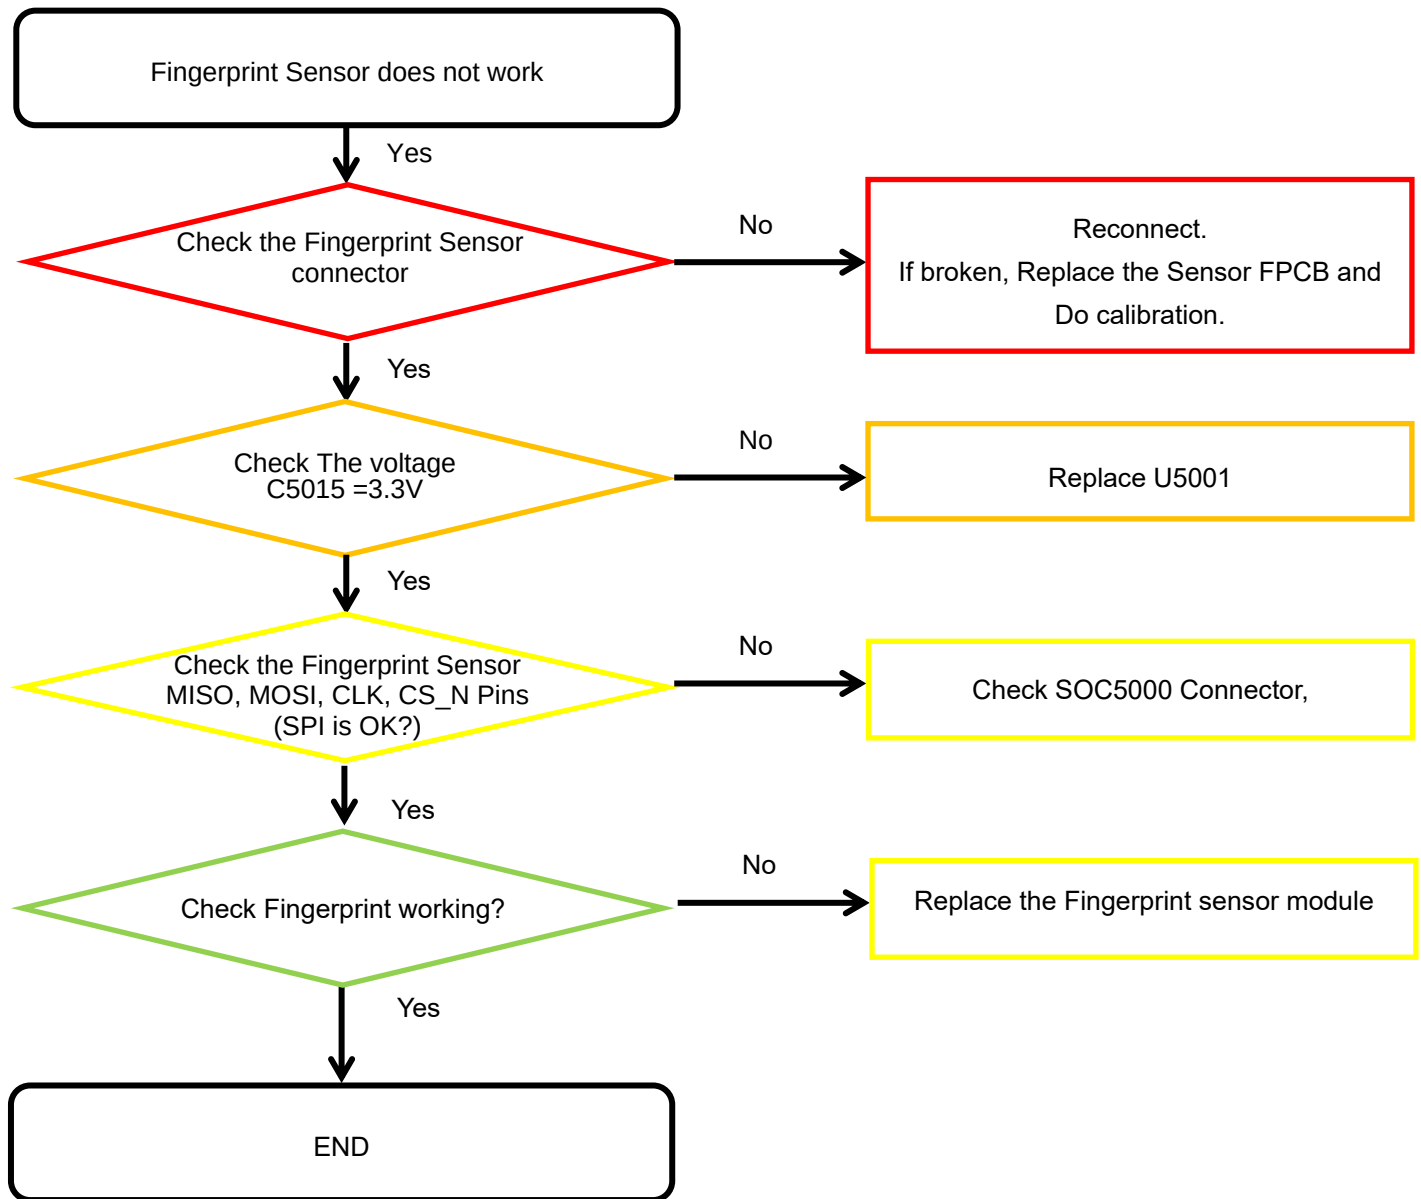


8. Level 3 Repair

8-4-9-1. Microphone Part - Main MIC

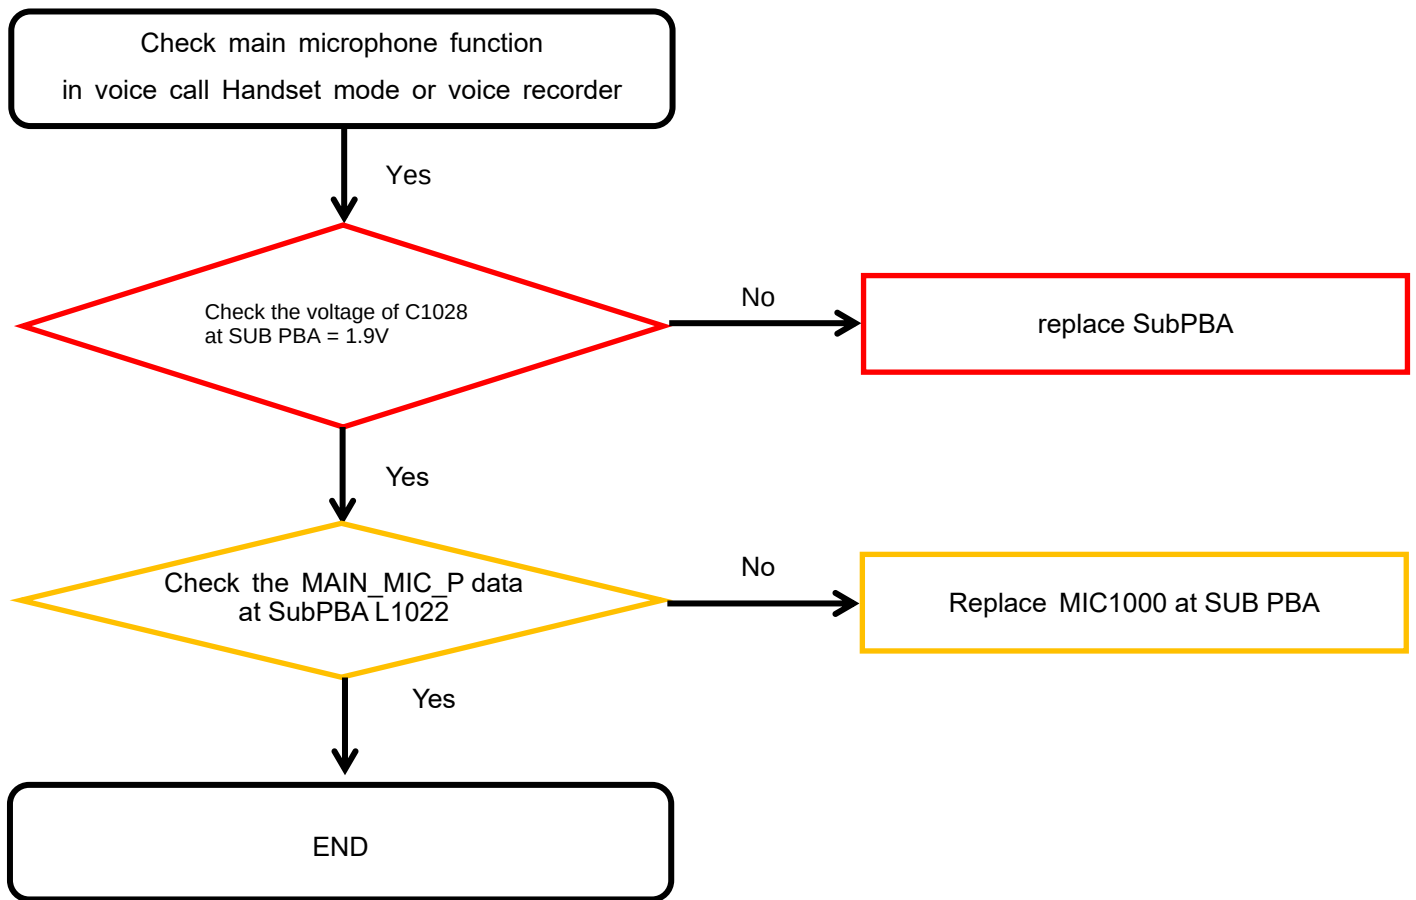


8. Level 3 Repair

8-4-9-2. Microphone Part - Sub(2nd) MIC

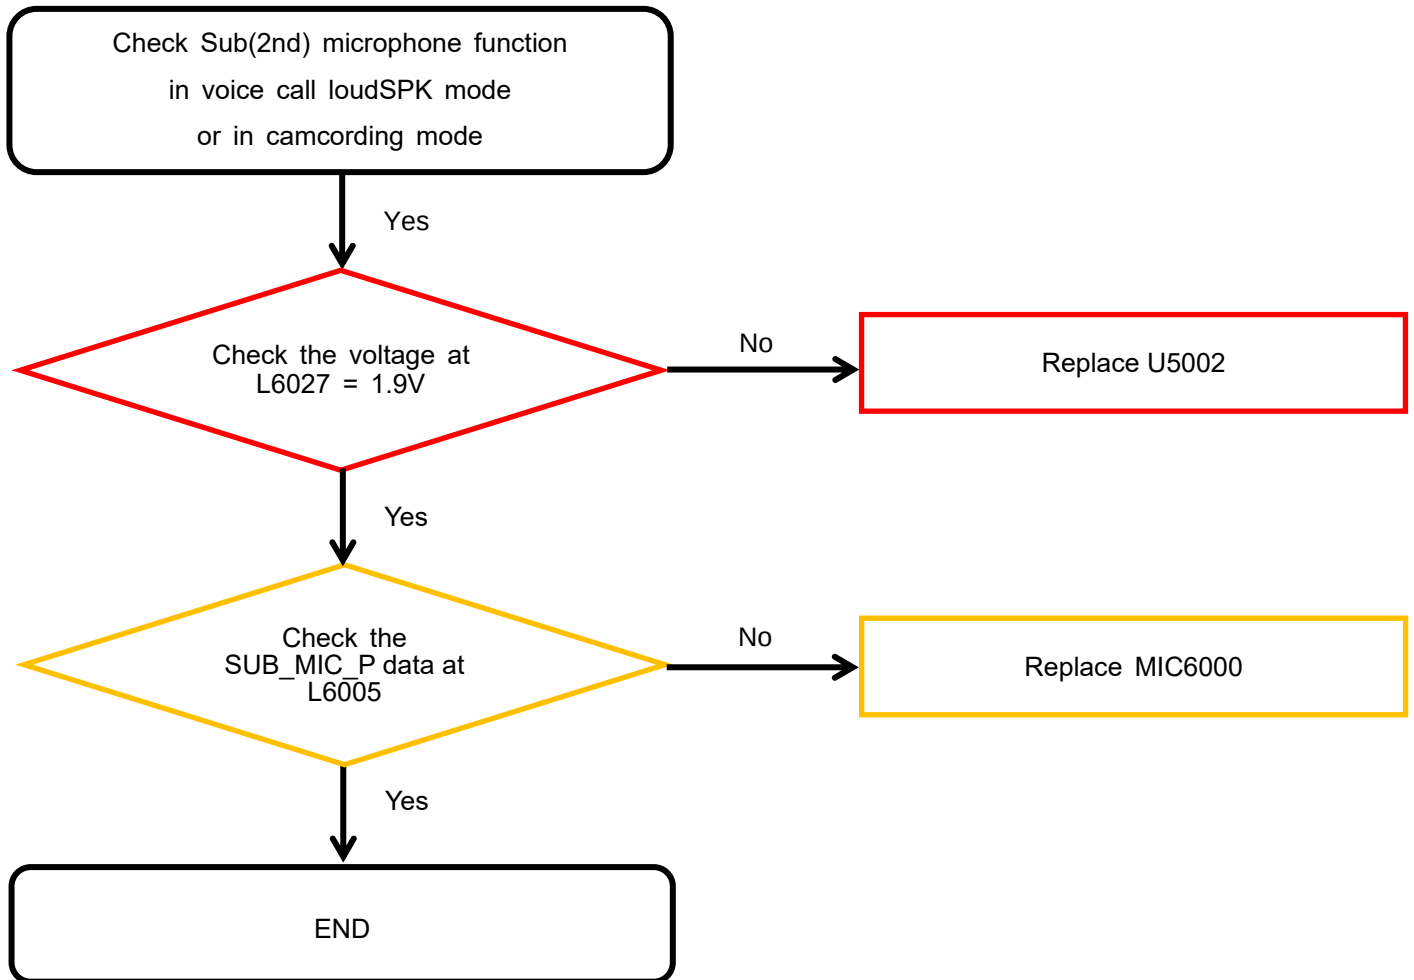


8. Level 3 Repair

8-4-10. Speaker Part

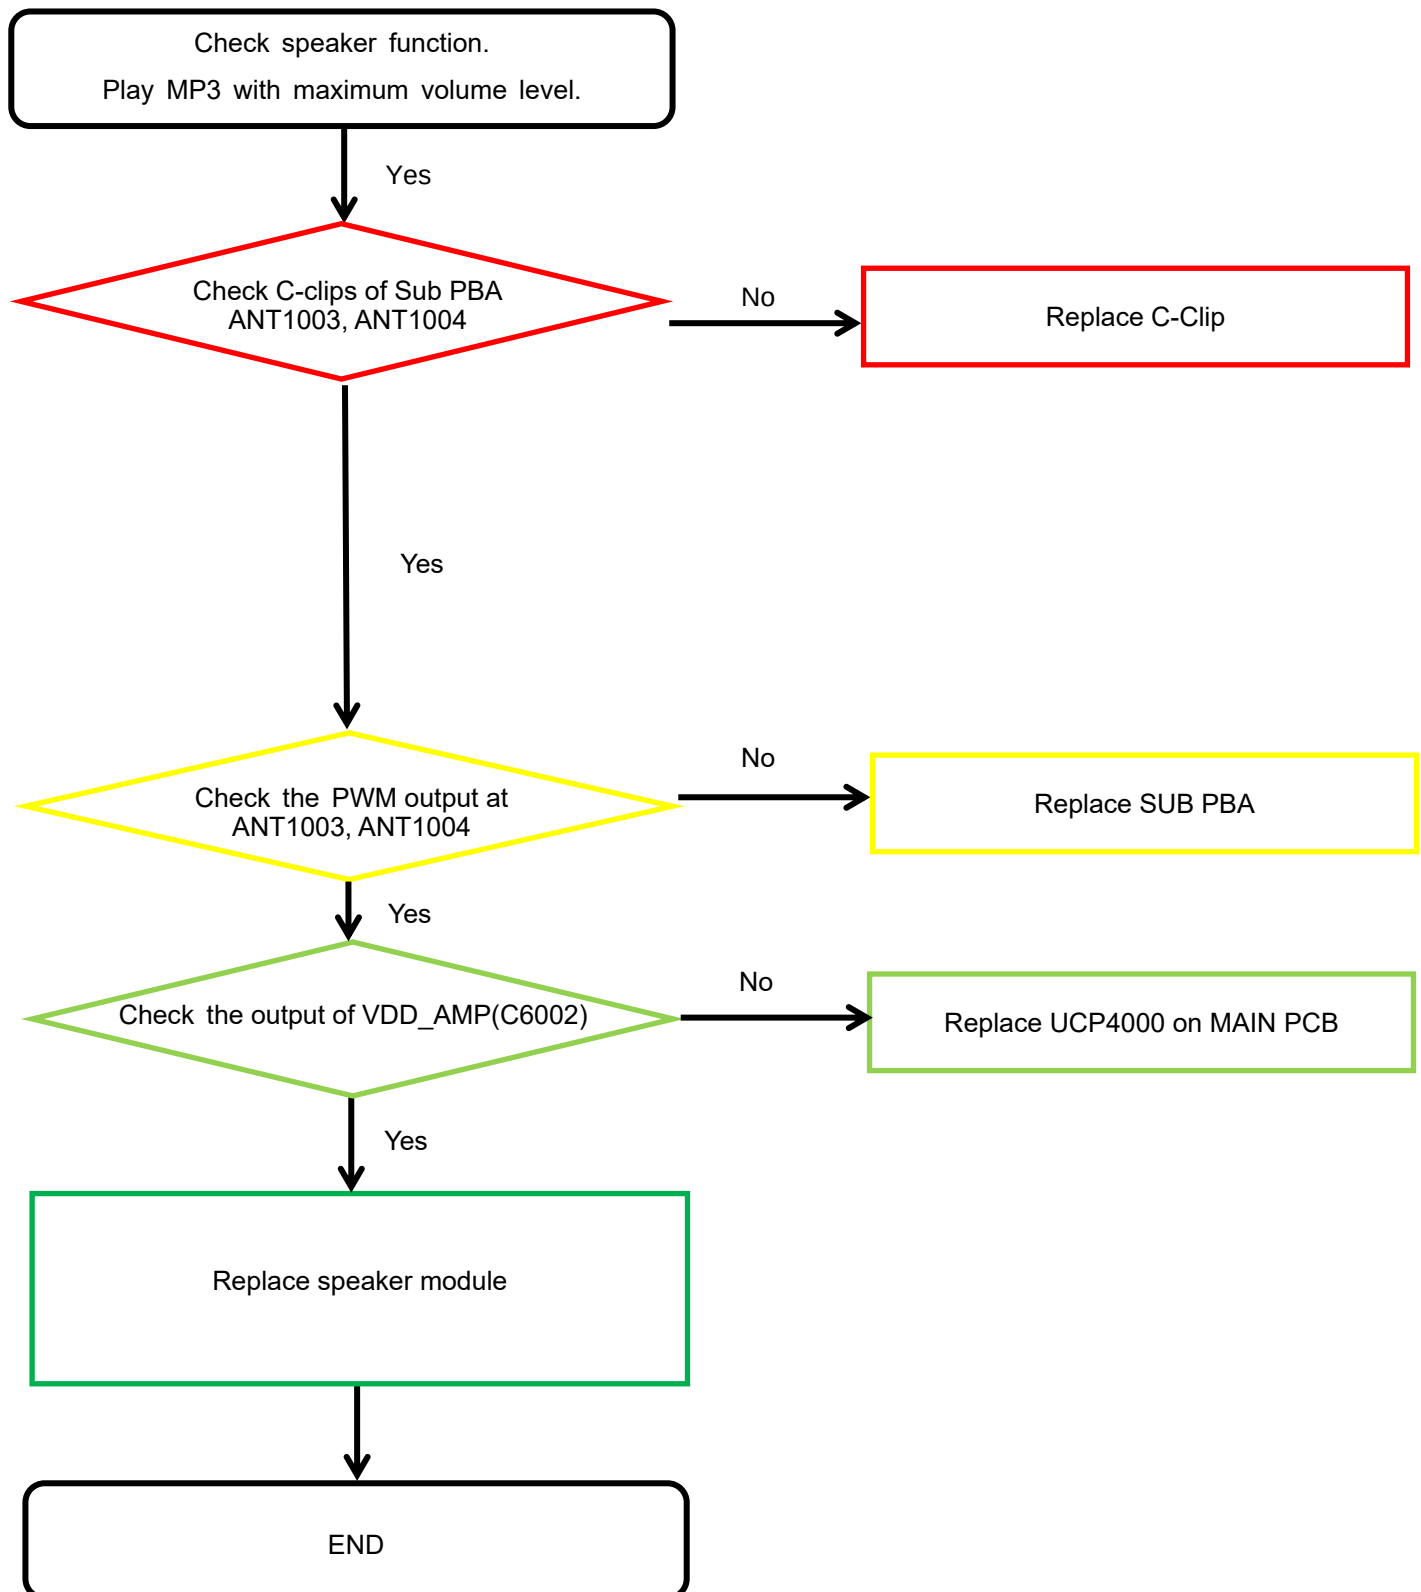


8. Level 3 Repair

8-4-11. Receiver Part

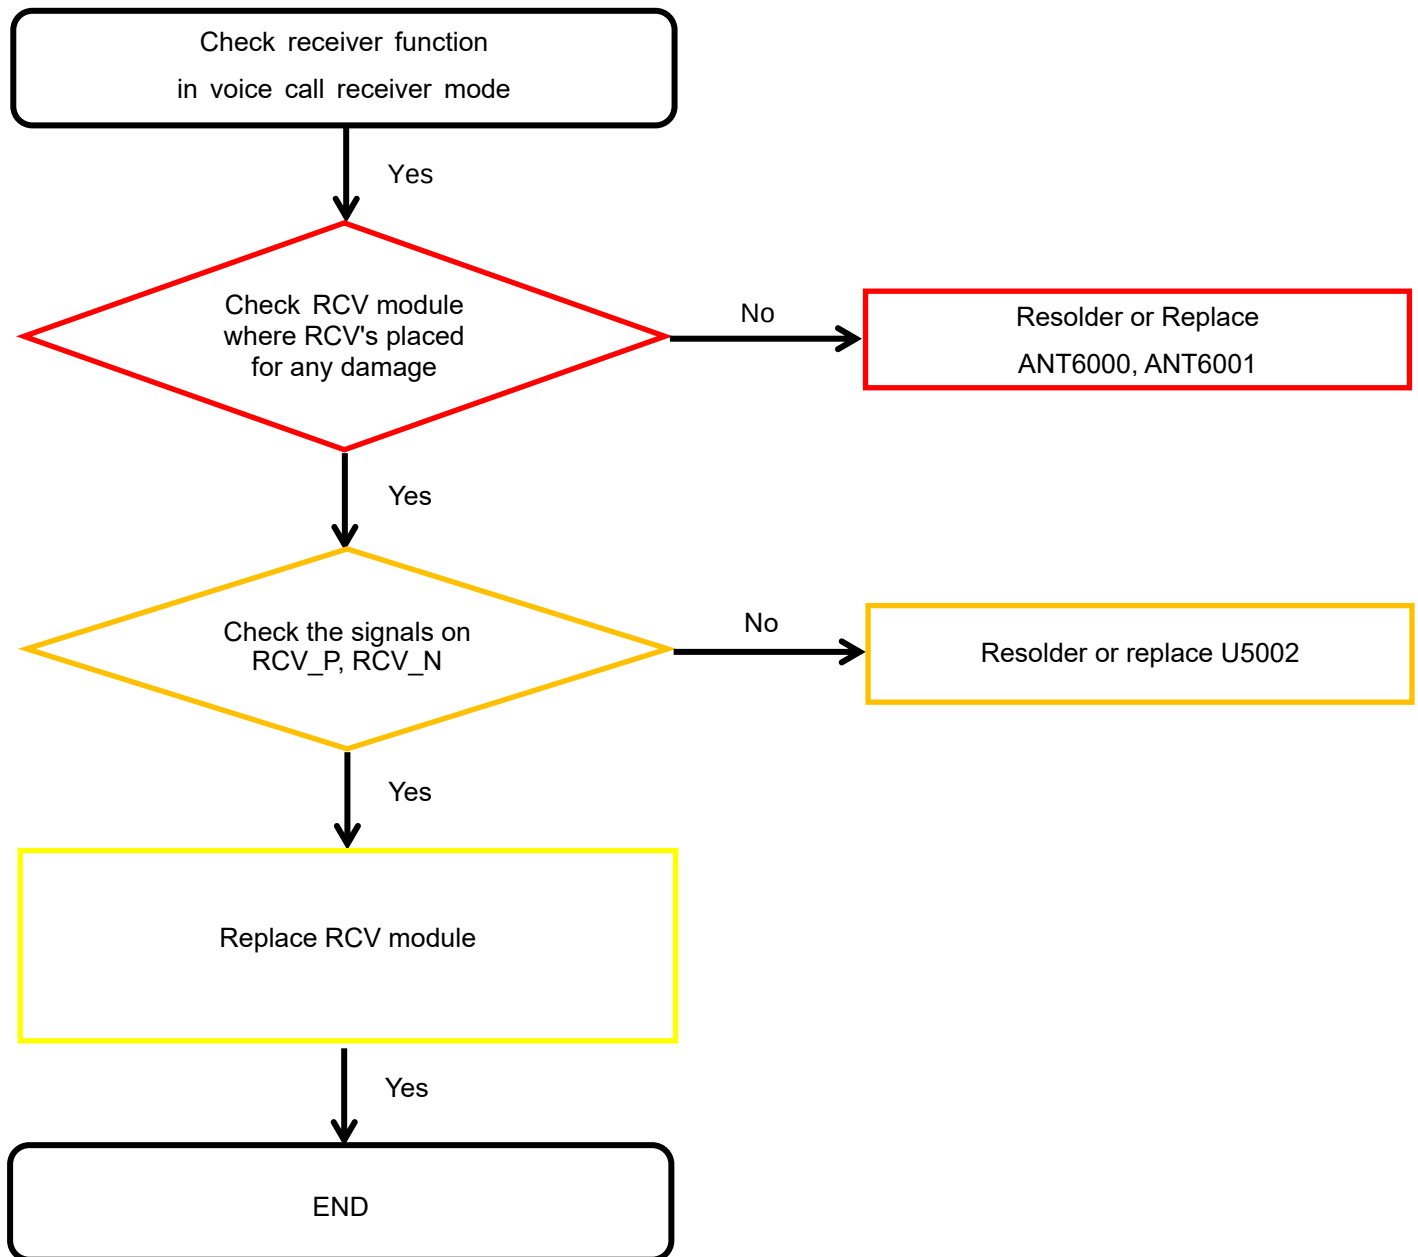


8. Level 3 Repair

8-4-12. BT/WIFI

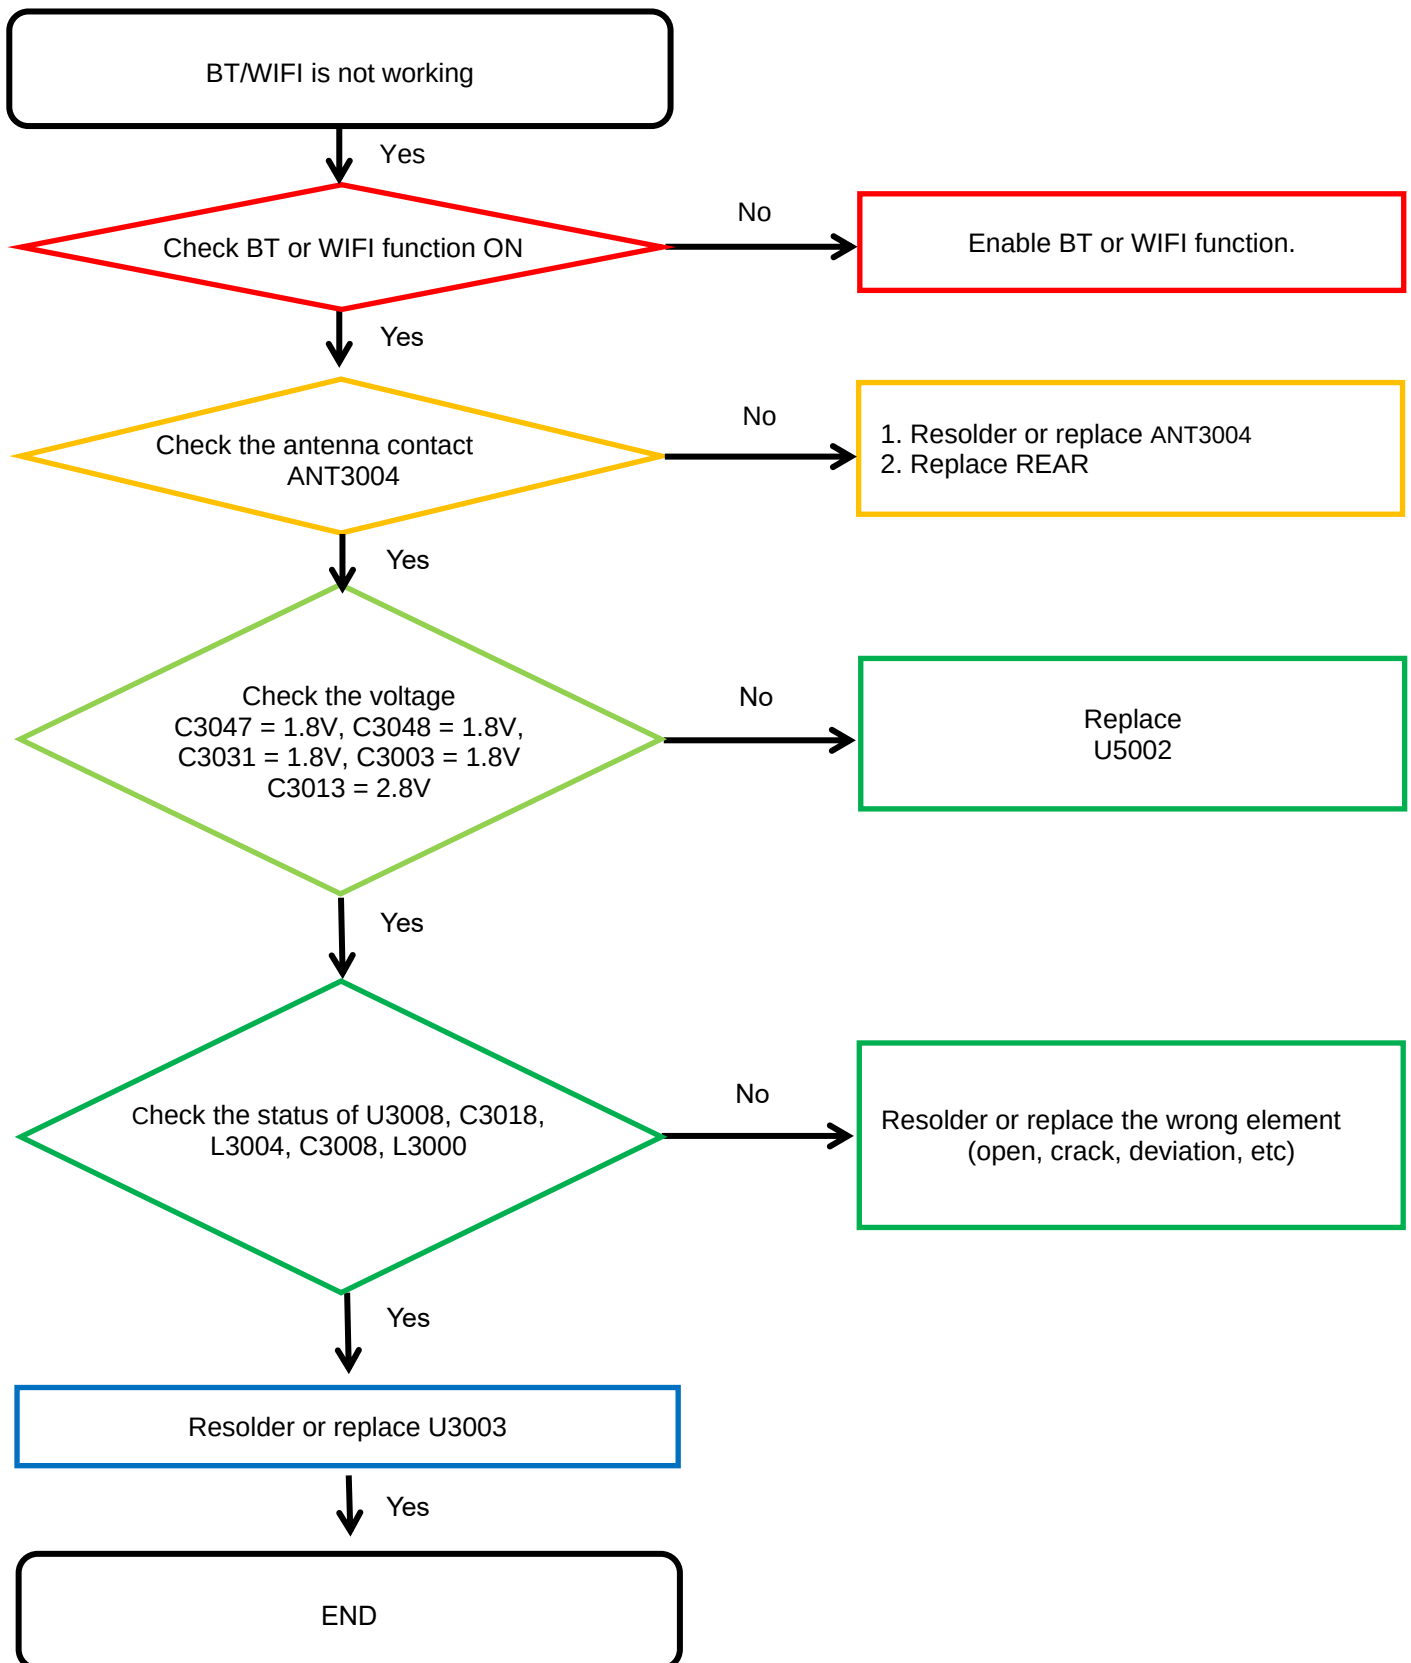


8. Level 3 Repair

8-4-13. GPS

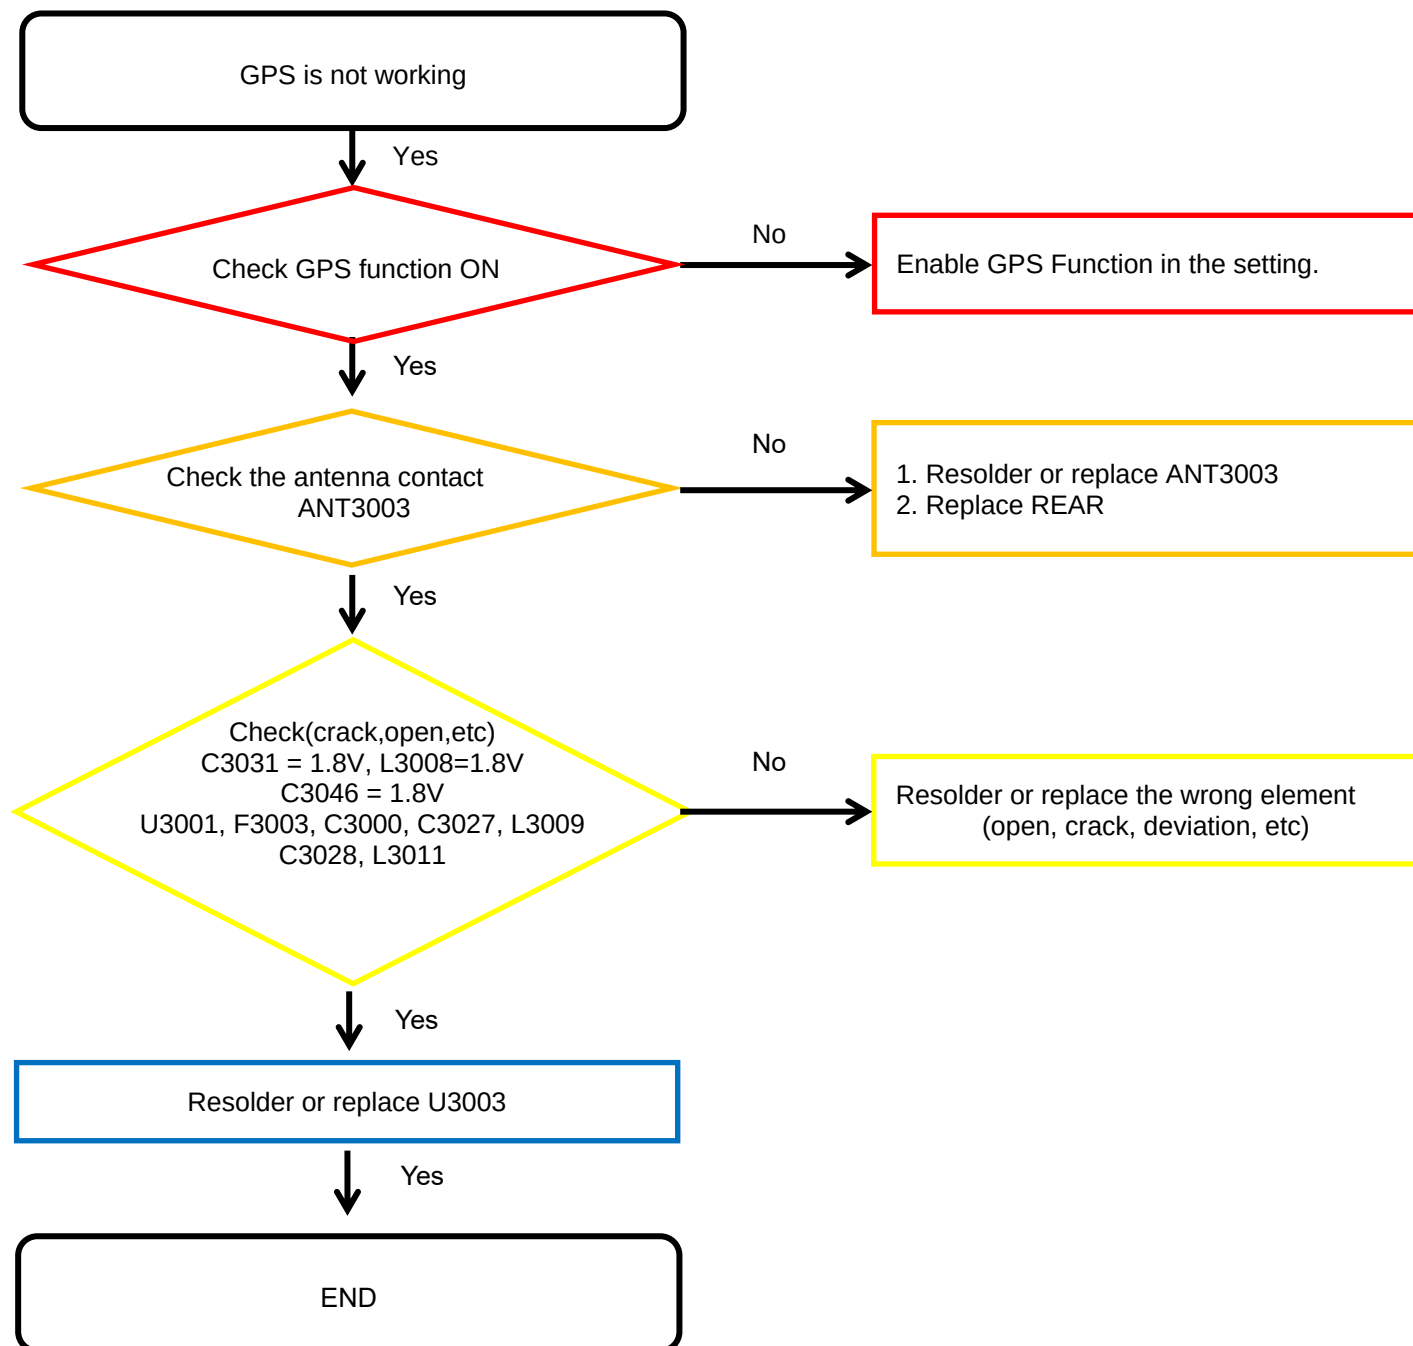


8. Level 3 Repair

8-4-14. NFC

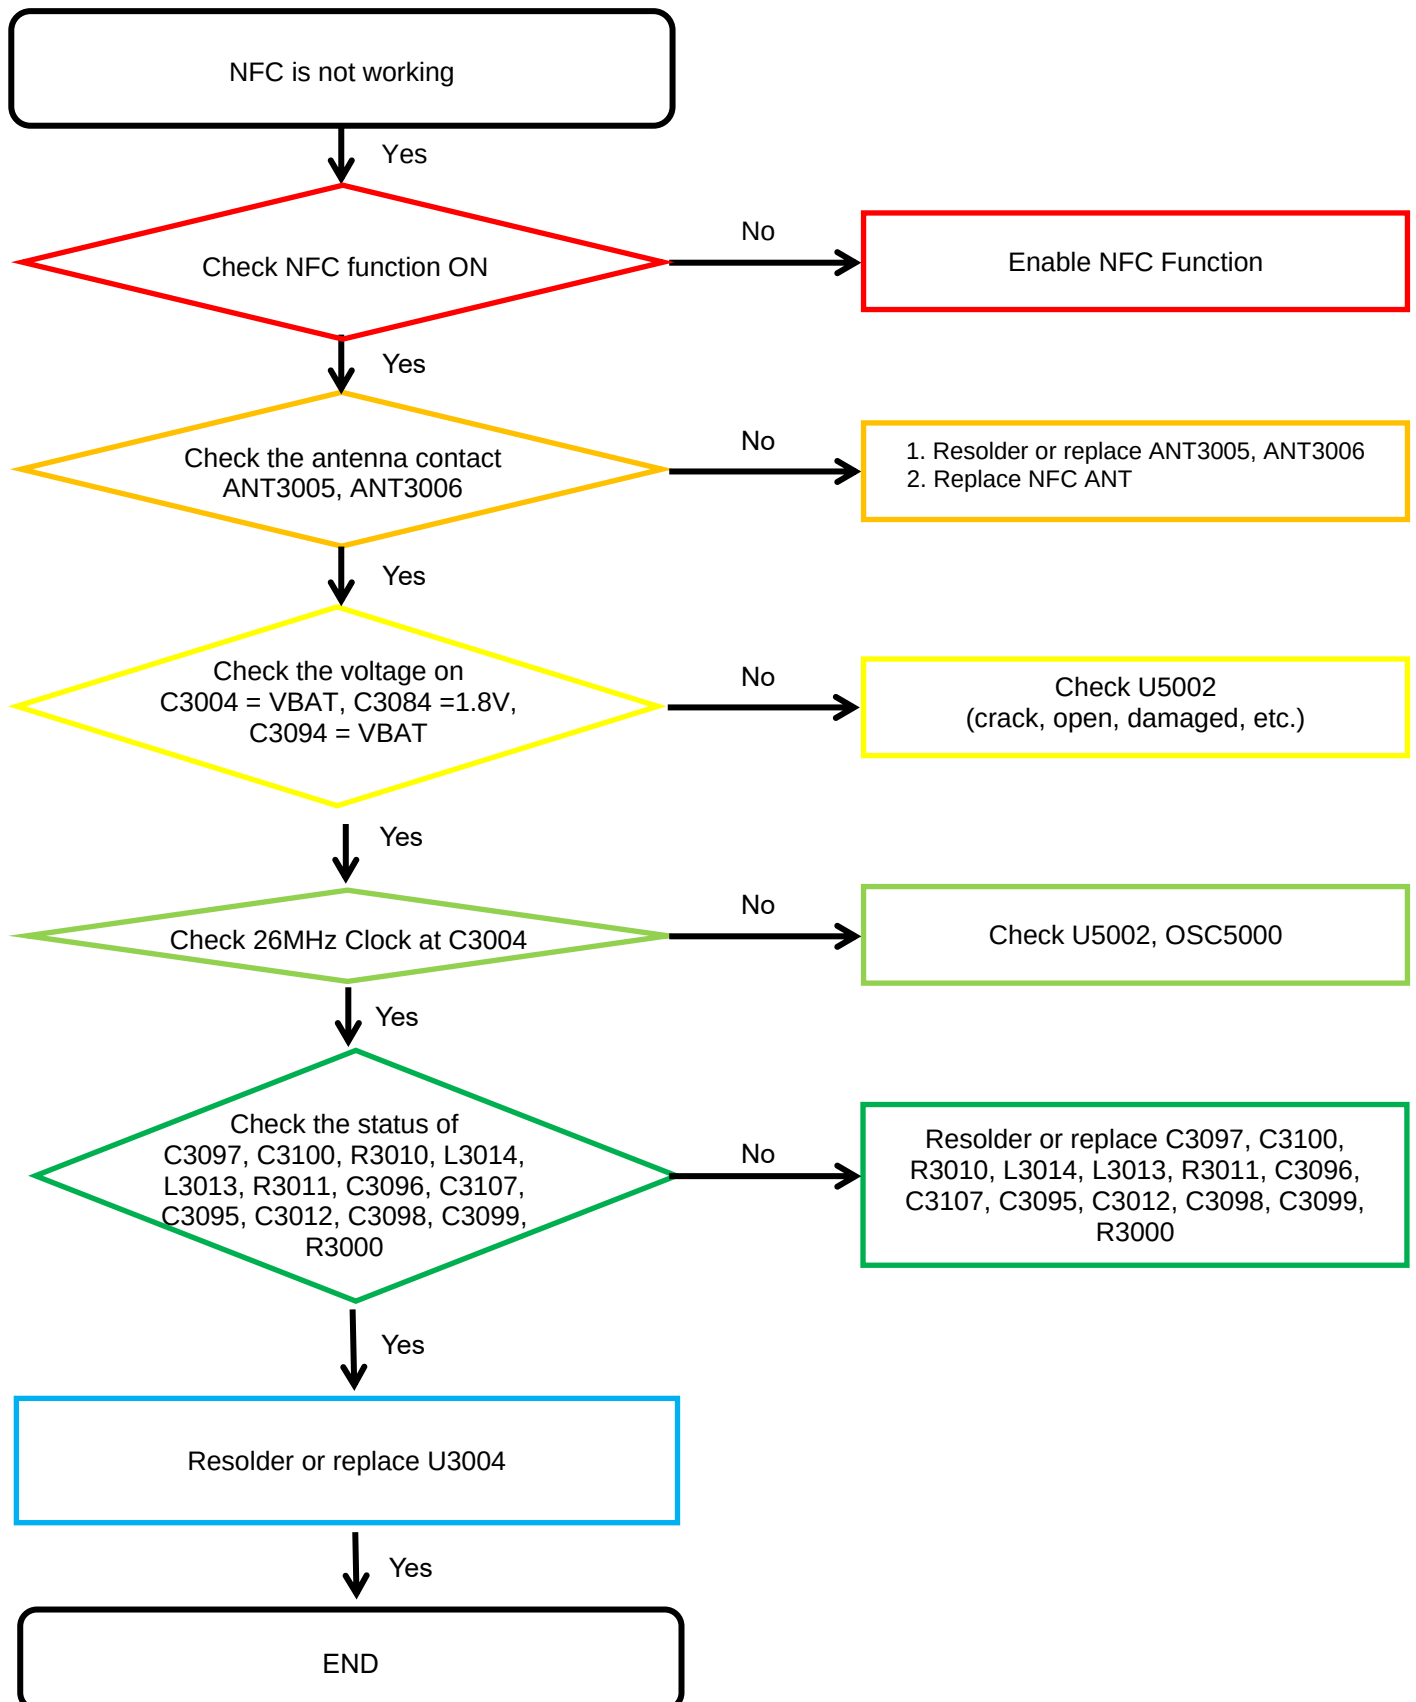


8. Level 3 Repair

8-4-15. FM radio part

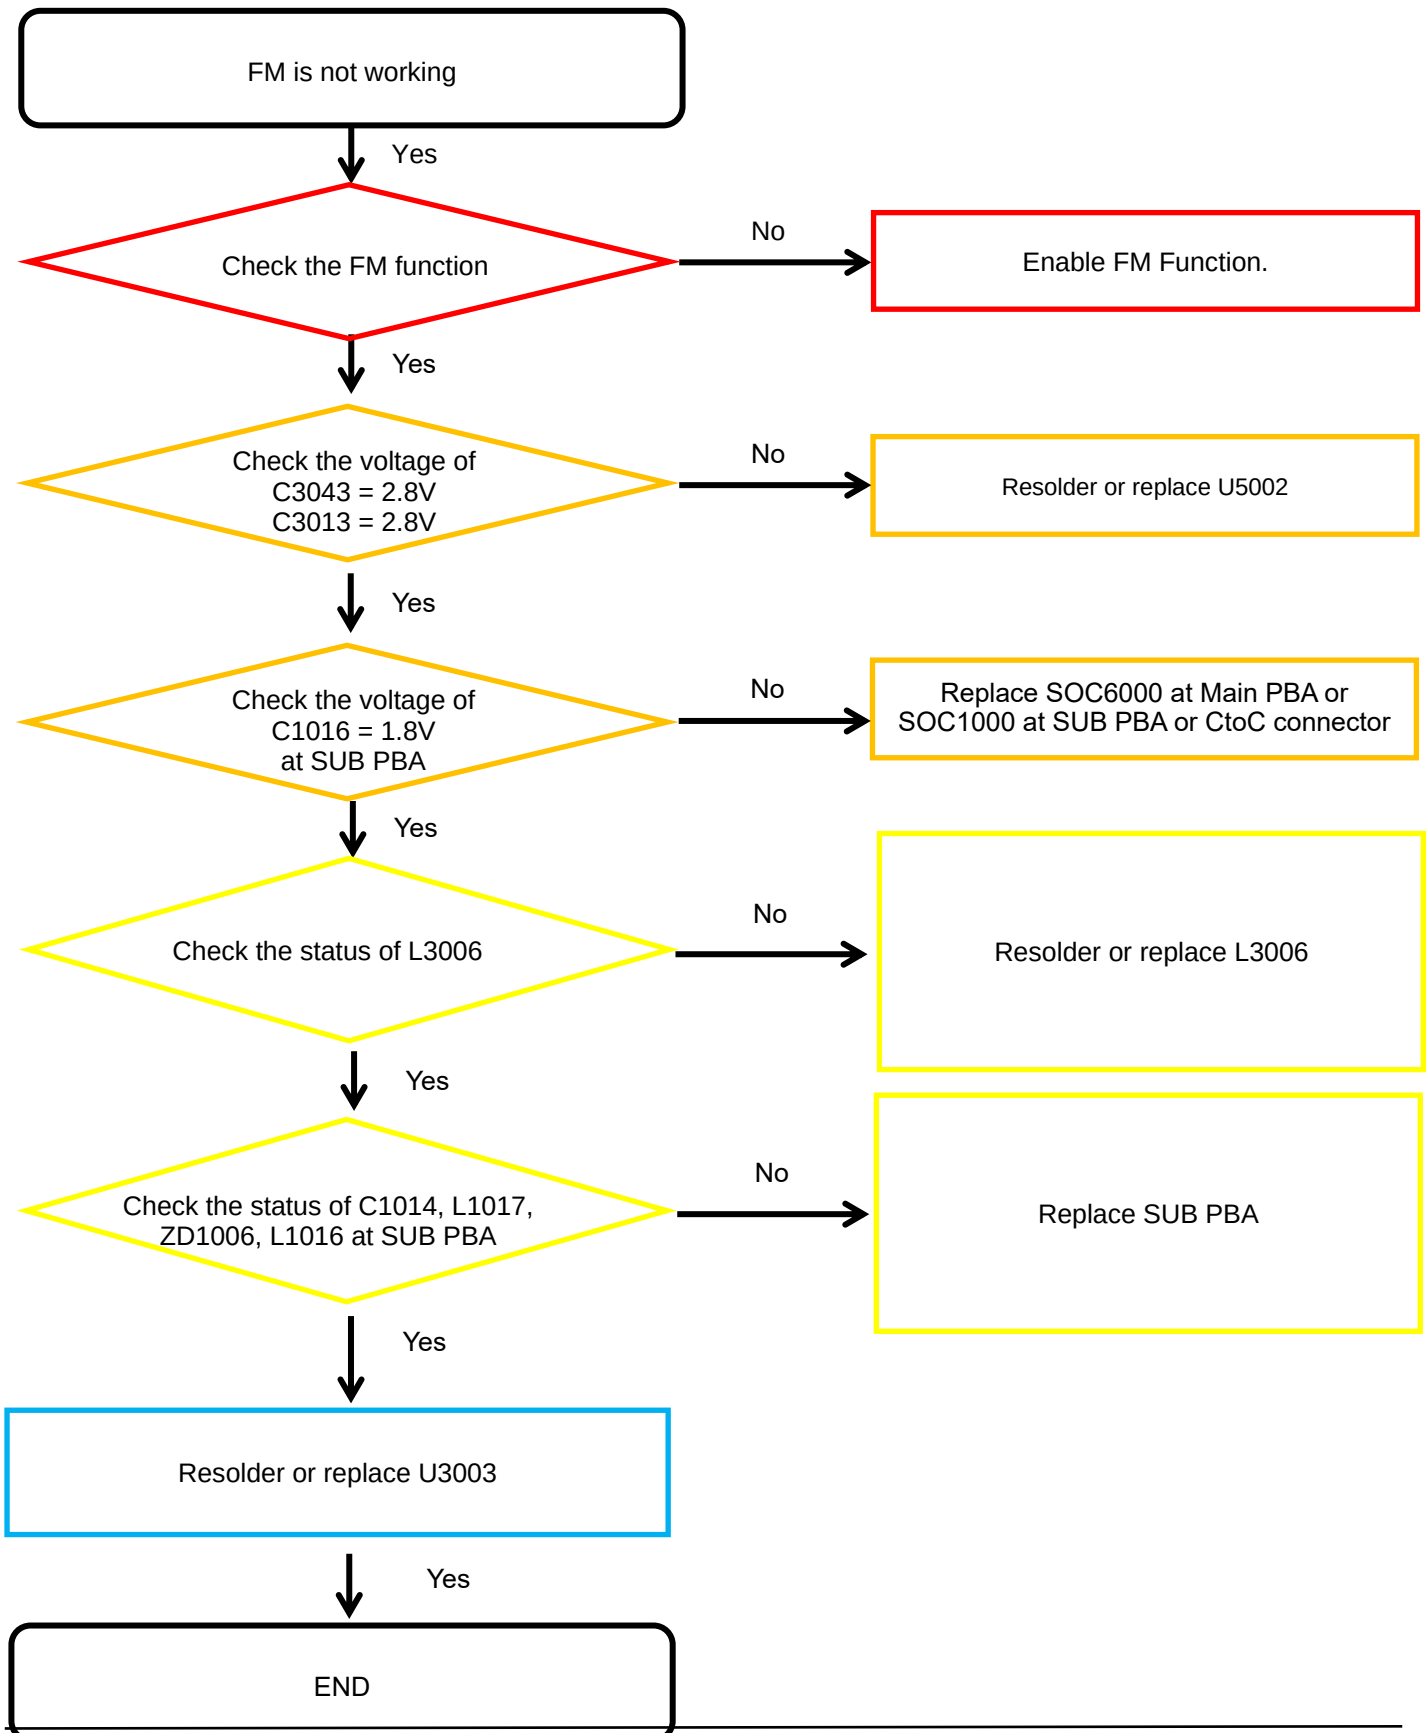


8. Level 3 Repair

8-4-16. Display

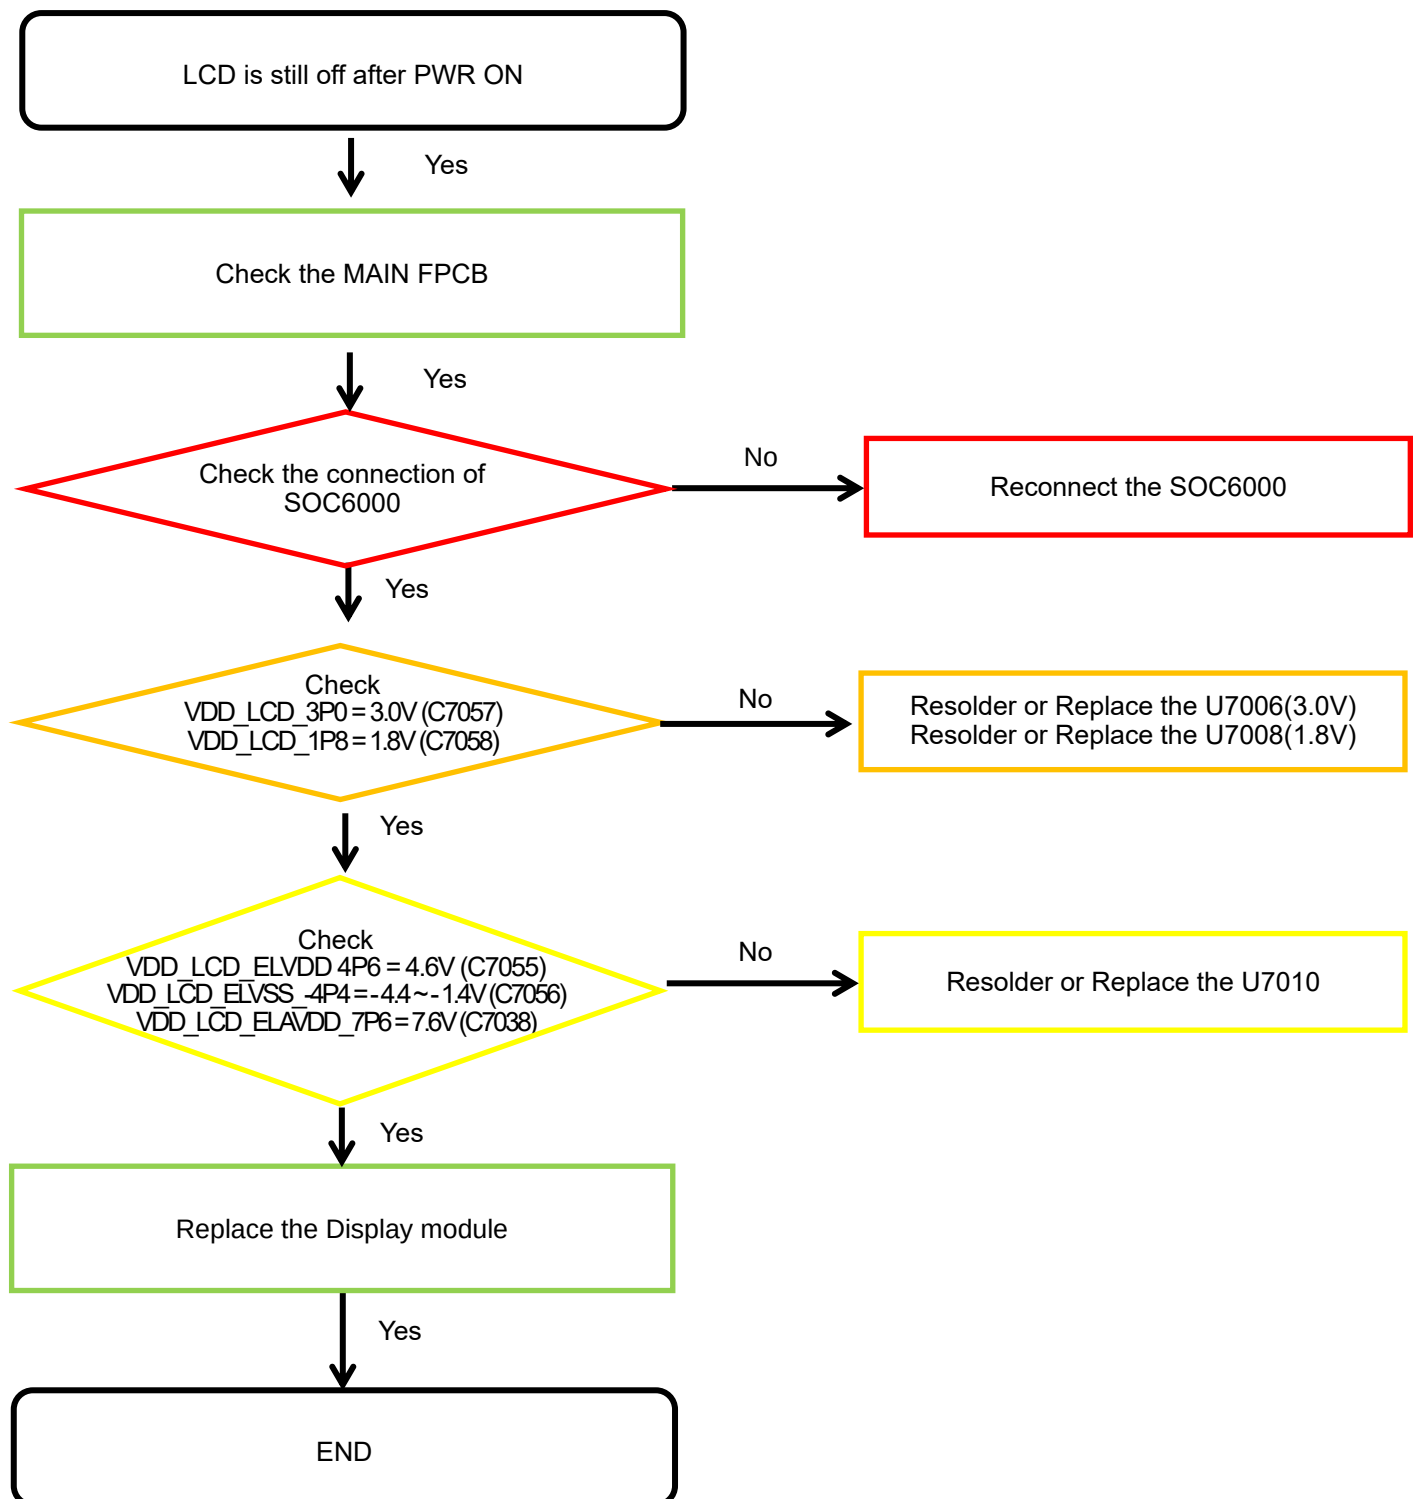


8. Level 3 Repair

8-4-17. REAR Camera

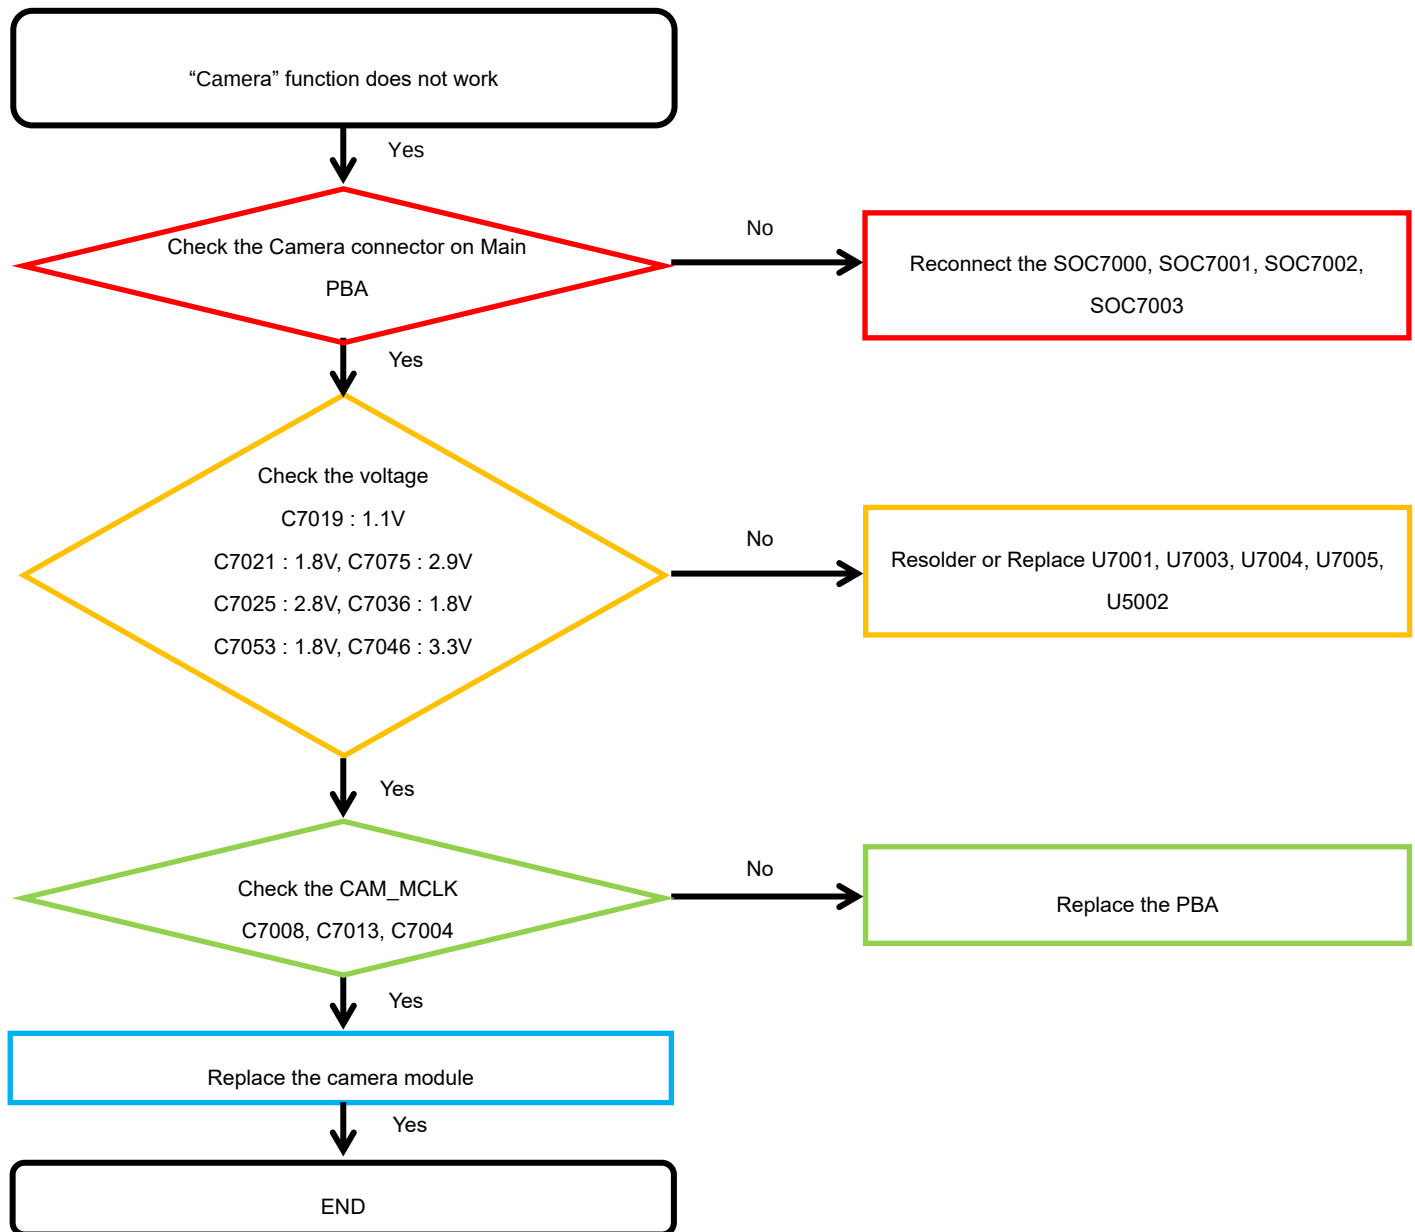


8. Level 3 Repair

8-4-18. FRONT CAMERA

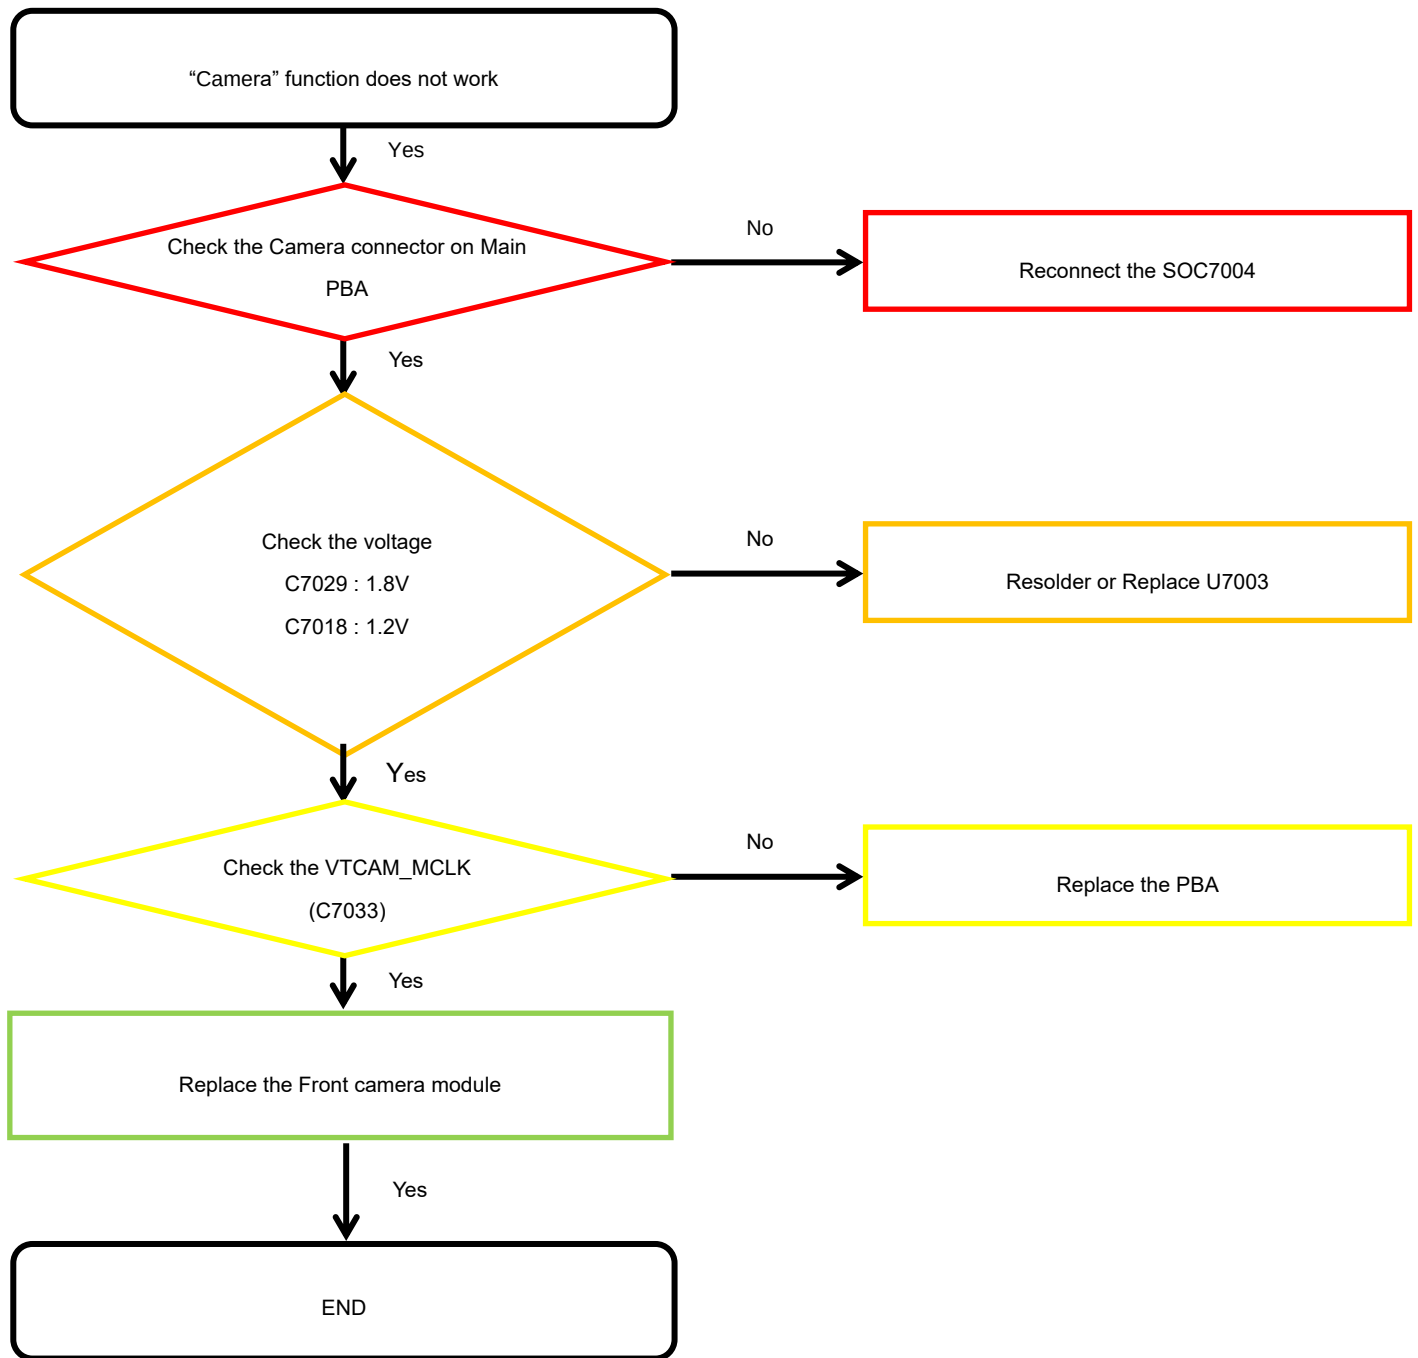


8. Level 3 Repair

8-4-19. Motor

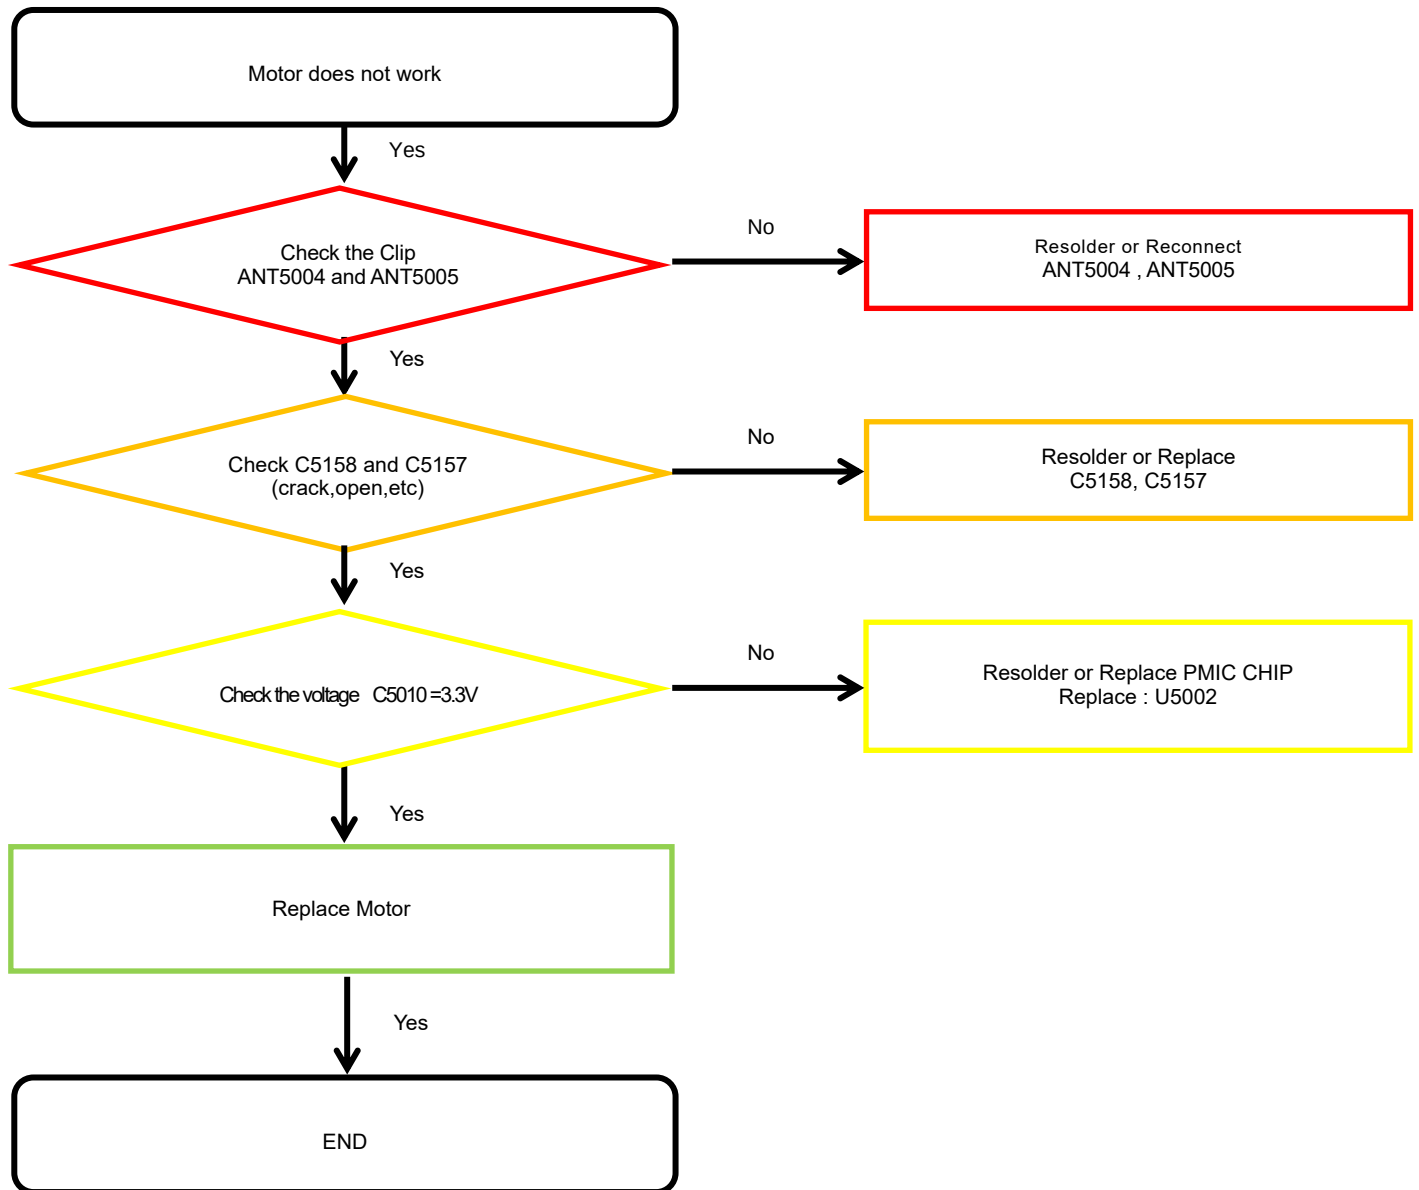


8. Level 3 Repair

8-4-20. GSM 850/900/1800/1900, WCDMA B1/2/4/5/8, LTE B1/2/3/4/5/8/12/17/20/26/28/66 PRx

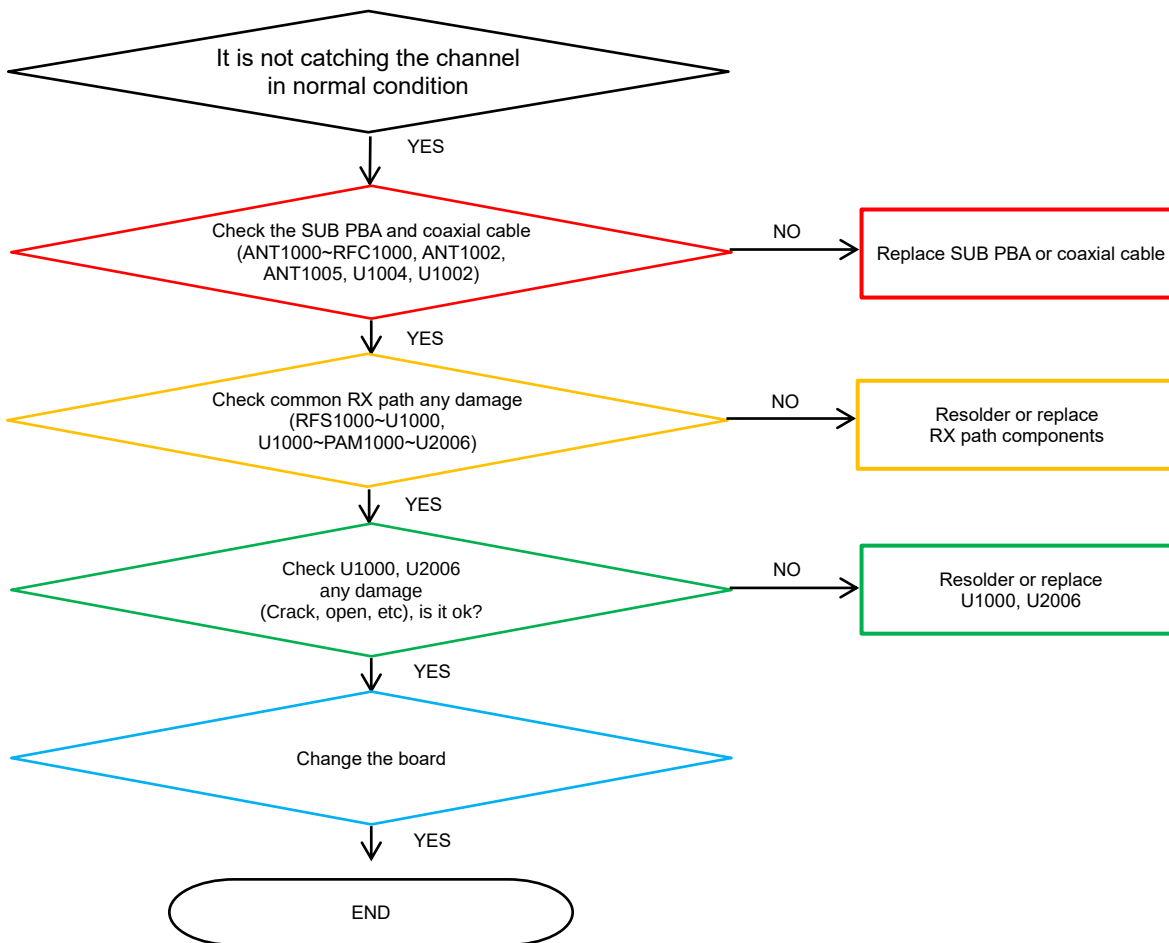


8. Level 3 Repair

8-4-21. LTE B7/38/40/41 PRx

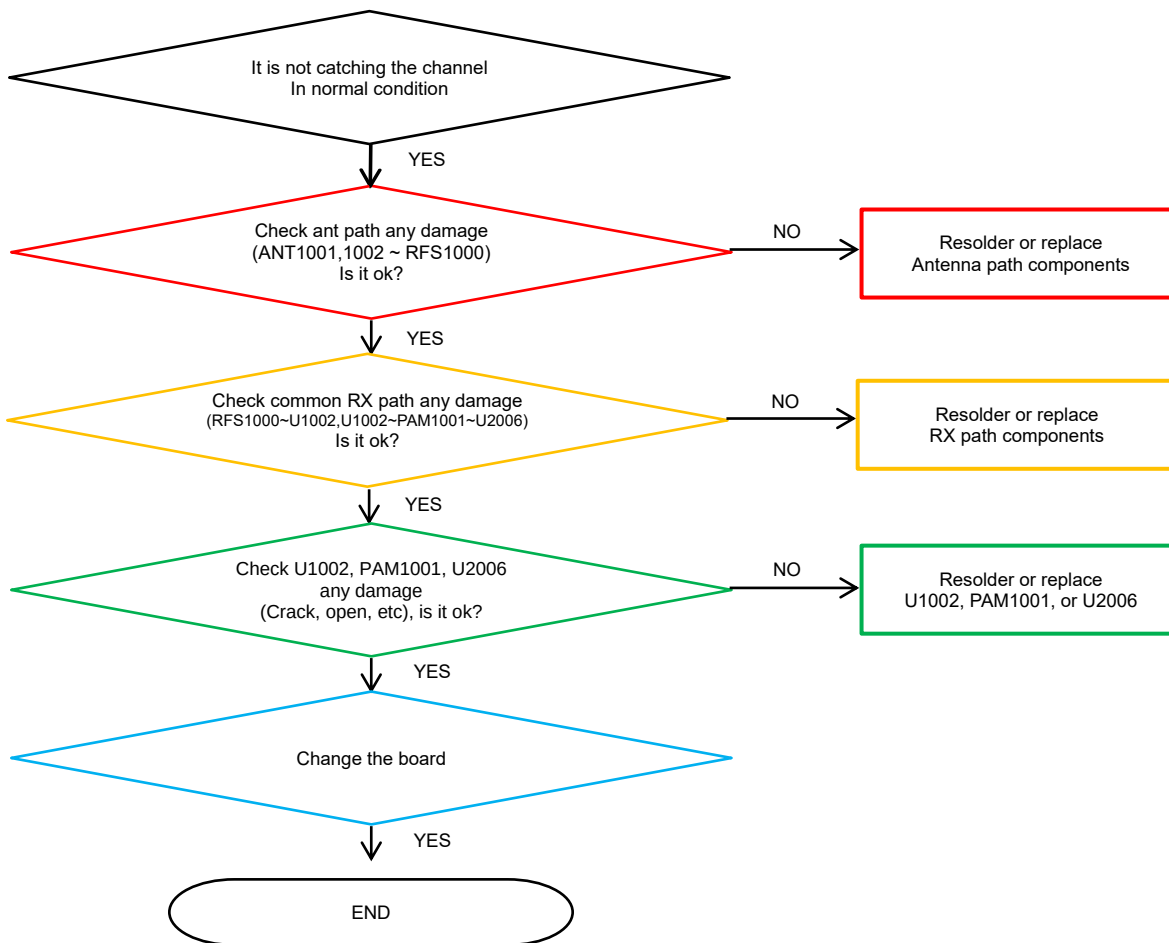


8. Level 3 Repair

8-4-22. GSM 850/900/1800/1900, WCDMA B1/2/4/5/8, LTE B1/2/3/4/5/7/8/12/13/17/20/26/28/38/40/41/66 DRx

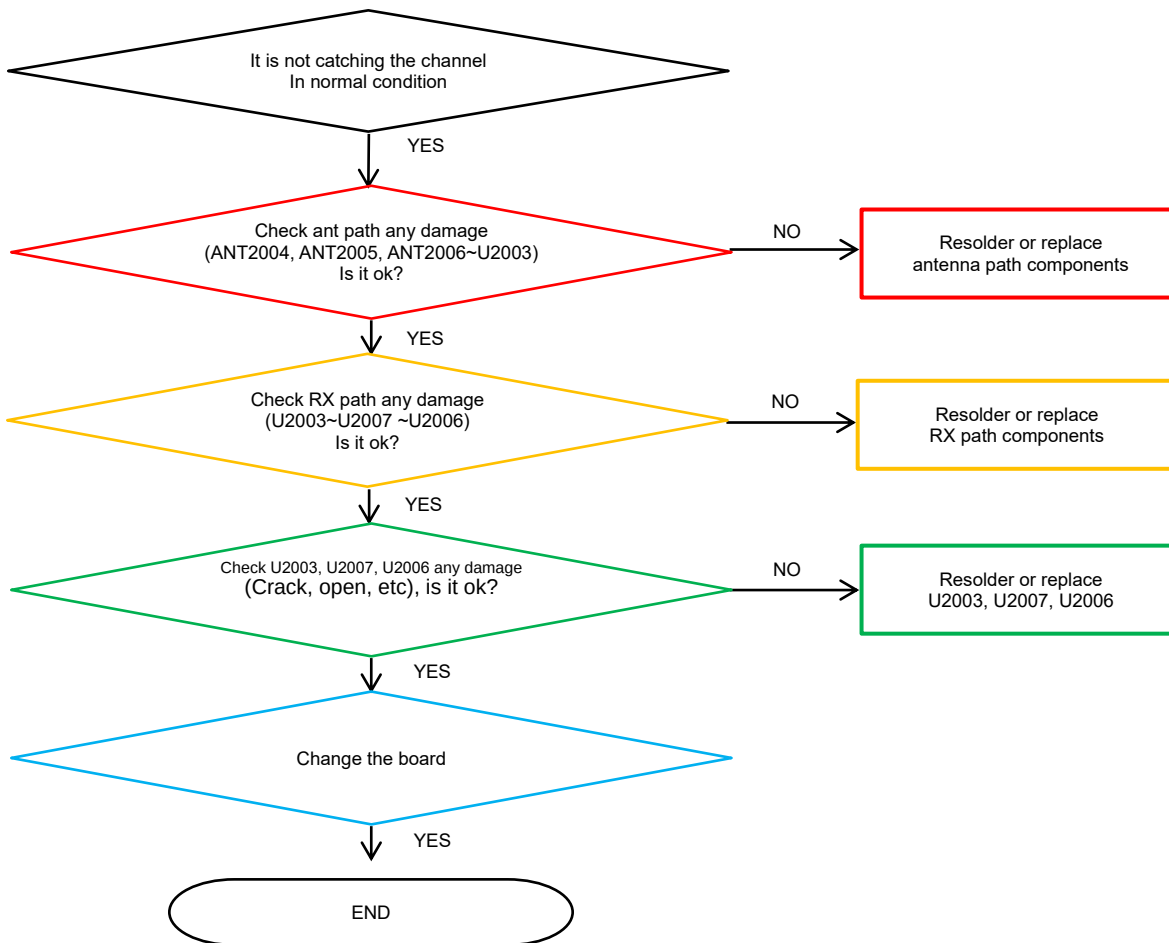

8. Level 3 Repair

8-4-23. GSM 850/900/1800/1900, WCDMA B1/2/4/5/8, LTE B1/2/3/4/5/8/12/13/17/20/26/28/66 Tx

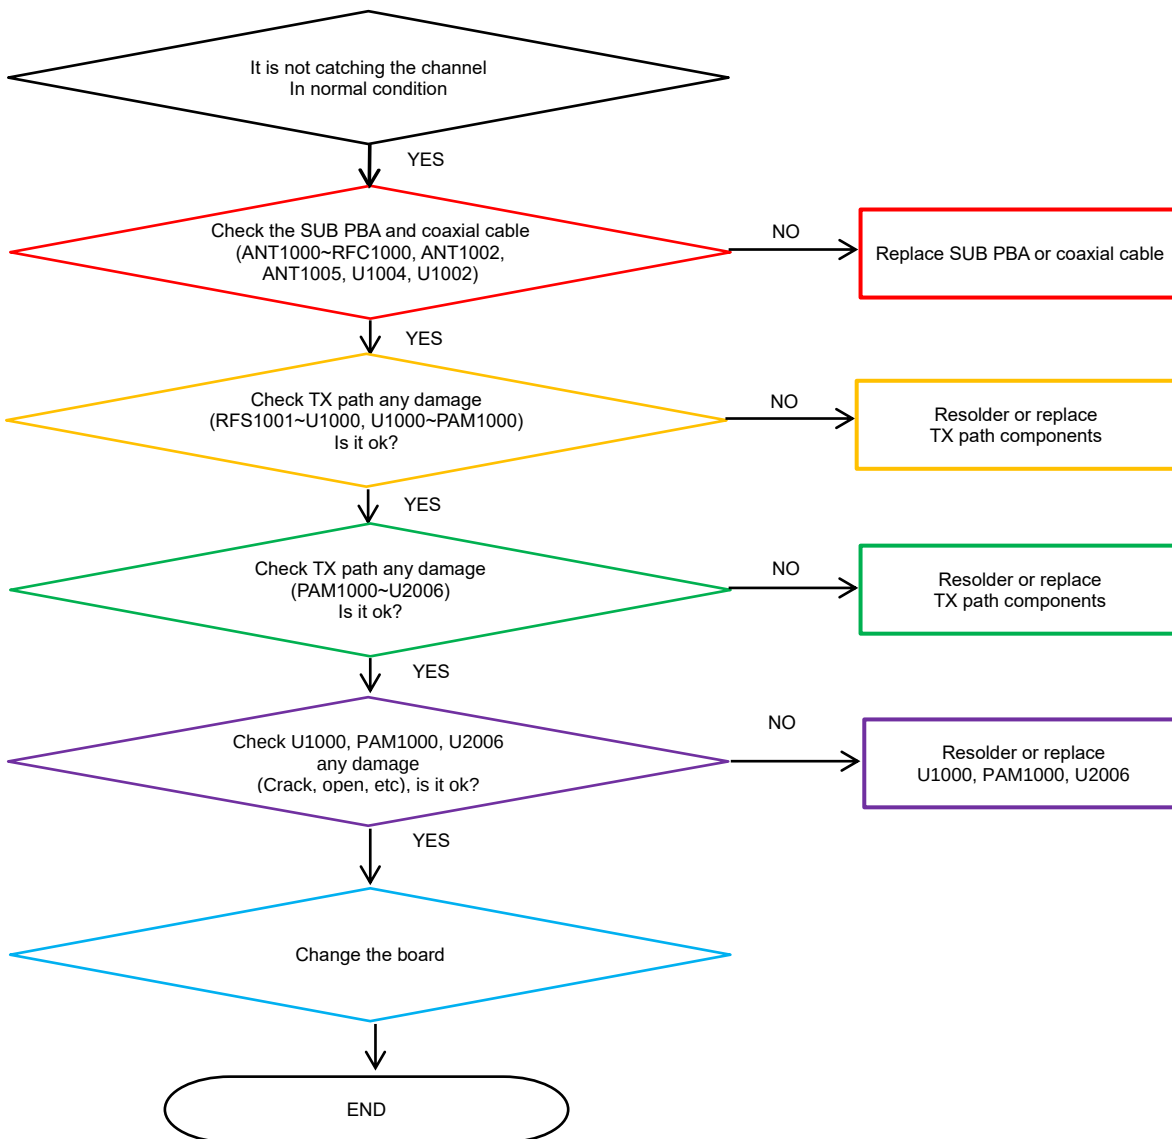

8. Level 3 Repair

8-4-24. LTE B7/38/40/41 Tx

