


Samsung A8S camera cannot be opened and crashes

Fault description: A customer sent a Samsung A8S for repair. The camera did not work when turned on and automatically crashed after a while.

Fault analysis: Based on the customer's description, it is initially determined that the problem is a camera failure (needs to be replaced) or a motherboard problem.

Repair process: After taking the phone apart, it was found that there were traces of water entering the front camera position of the motherboard, and the capacitors were burnt and carbonized. The tweezers broke when touched. Carefully clean the water inlet parts with washing water. Use a razor blade and washing water to scrape clean the electrolyte in the burnt area. Open the Xinzhi Manufacturing drawings, and there happens to be a bitmap for reference. The burned location should be the power supply line. Use a multimeter to measure the voltage, which is around 4v. I happened to have an A8S mobile phone on hand. I replaced the faulty camera with a confirmed machine and found that everything was normal with the camera. Judging from the current situation, the fault is most likely caused by circuit problems related to the front camera. According to the position of the point map,

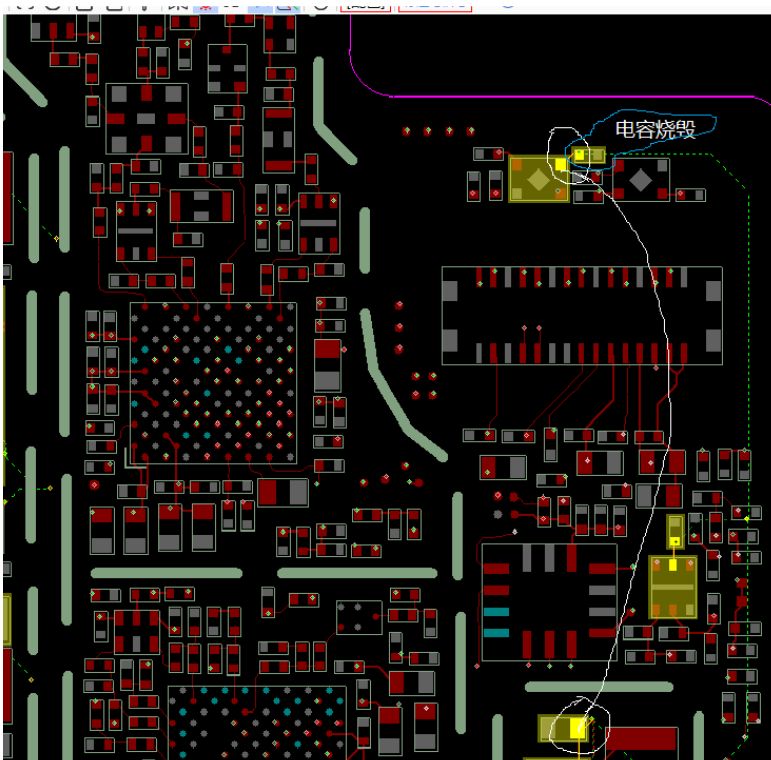

fly the burned line area to restore the five-pin input to normal. After the installation test, it was found that the camera function returned to normal and the fault was perfectly repaired.

