



SCPH-30000 series and SCPH-35000 series

SERVICE MANUAL for GH-013 (31/41) MOUNT
4th edition

SCPH-30000
SCPH-30001D
SCPH-30002D
SCPH-30003D
SCPH-30004D
SCPH-35000
SCPH-35001
SCPH-35002
SCPH-35003
SCPH-35004

PlayStation®2



Sony Computer Entertainment Inc.
Quality Assurance Department
Published in Japan © 6, 2001. 9-927-090-41

Reproduction Prohibited

NOTICE

Copyright by Sony Computer Entertainment Inc. All rights reserved. No reproduced and transferred required except permission by Sony Computer Entertainment Inc. No commercial use and rental required.

REVISIONS.

This manual compiled by first edition of SCPH-30000 series and SCPH-35000 series design data. Design and Specification will be subject to changed without notice. The latest versions of service manual, Technical memo, Technical information should be used together.

SAFETY-RELATED COMPONENT WARNING !!

COMPONENTS IDENTIFIED BY MARK $\triangle$ OR DOTTED LINE WITH MARK $\triangle$ ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

ATTENTION AU COMPOSANT AYANT RAPPORT À LA SÉCURITÉ !

LES COMPOSANTS IDENTIFIÉS PAR UNE MARQUE $\triangle$ SUR LES DIAGRAMMES SCHÉMATIQUES ET LA LISTE DES PIÈCES SONT CRITIQUES POUR LA SÉCURITÉ DE FONCTIONNEMENT. NE REMPLACER CES COMPOSANTS QUE PAR DES PIÈCES SONY DONT LES NUMÉROS SONT DONNÉS DANS CE MANUEL OU DANS LES SUPPLÉMENTS UBLIÉS PAR SONY.

CAUTION

Replace the battery with a Sony CR2032 battery. Use of any other type of battery may present the risk of fire or explosion. The battery may explode if mistreated. Do not recharge, disassemble, or dispose of in fire.

CAUTION

The use of optical instruments with this product will increase eye Hazard. As the laser beam used in this CD/DVD player is harmful To eyes, do not attempt to disassemble the cabinet. Refer servicing to qualified personnel only.

WARNING !!

WHEN SERVICING, DO NOT APPROACH THE LASER EXIT WITH THE EYE TOO CLOSELY. IN CASE IT IS NECESSARY TO CONFIRM LASER BEAM EMISSION, BE SURE TO OBSERVE FROM A DISTANCE OF MORE THAN 25cm FROM THE SURFACE OF THE OBJECTIVE LENS ON THE OPTICAL PICK-UP BLOCK.

CAUTION

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

CAUTION for electric shock

When power is ON, Don't touch to Power supply block, AC-inlet, Power switch and so on, not to get an electric shock at repair.

CAUTION for burning

When current is supplied, Some of part surface temperature like EE, GS, Regulator-IC, power supply, Optical device and so on. These part surface is become high temperature condition. When it repair, Don't touch them at a time during it surface is high temperature condition to take prevent against burning. Do repair after it is cooled down enough.

CAUTION

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Discard used batteries according to the manufacturer's instructions.

ADVARSEL!

Lithiumbatteri - Eksplosjonsfare ved feilagtig håndtering. Udsiftning må kun ske med batteri af samme fabrikat og type. Levér det brugte batteri tilbage til leverandøren.

SCPH-30000 series and SCPH-35000 series

ADVARSEL

Eksplosjonsfare ved feilagtig skifte av batteri. Benytt samme batteritype eller en tilsvarende type anbefalt av apparatfabrikanten. Brukte batterier kasseres i henhold til fabrikantens instruksjoner.

VARNING

Explosionsfara vid feilagtigt batteribyte. Använt samma batterityp eller en ekvivalent typ som rekommenderas av apparatillverkaren. Kassera använt batteri enligt fabrikantens instruktion.

VAROITUS

Paristo voi räjähtää, jos se on virheellisesti asennettu. Vaihda paristo ainoastaan valmistajan suosittelemaan tyyppiin. Hävitä käytetty paristo valmistajan ohjeiden mukaisesti.

SAFETY CHECK-OUT

After correcting the original service problem, perform the following safety checks before releasing the set to the customer.

1. Check the area of your repair for unsoldered or cold-soldered connections. Check the entire board surface for solder splashes and bridges.
2. Check the inter board wiring to ensure that no wires are "pinched" or contact high-wattage resistors.
3. Look for unauthorized replacement parts, particularly transistors, that were installed during a previous repair. Point them out to the customer and recommend their replacement.
4. Look for parts which, though functioning, show obvious signs of deterioration. Point them out of the customer and recommend their replacement.
5. Check the line cord for cracks and abrasion. Recommend the replacement of any such line cord to the customer.
6. Check the b+ voltage to see it is at the values specified.
7. Check the antenna terminals, metal trim, "metalized" knobs, screws, and all other exposed metal parts for ac leakage. Check leakage as described below.

LEAKAGE

The AC leakage from any exposed metal part to earth ground and from all exposed metal parts to any exposed metal part having a Return to chassis, must not exceed 0.5 mA (500 micro-amperes). Leakage current can be measured by any one of three methods.

1. A commercial leakage tester, such as the SIMPSON 229 or RCA WT-540A. Follow the manufacturers' instructions to use these instruments.
2. A battery-operated AC milli-ammeter. The Data Precision 245 digital multi-meter is suitable for this job
3. Measuring the voltage drop across a resistor by means of a VOM or battery-operated ac voltmeter. The "limit" indication is 0.75V, so analog meters must have an accurate low-voltage scale. The SIMPSON 250 and SANWA SH-63TRD are examples of a passive VOM that is suitable. Nearly all battery operated digital multi-meters that have a 2V AC range are suitable.

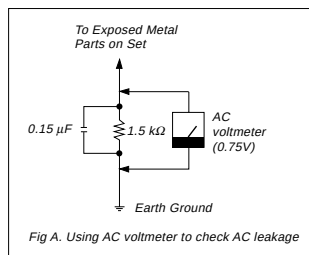


Fig A. Using AC voltmeter to check AC leakage

NOTIFICATION for environmental assessment

This model is CR2032 lithium battery onboard inside on the GD MOUNT as Timer backup power. CR2032 life may be about 5 to 8 years so you have very few need for changing to new one. But if you have necessary to replaced to new one or disassemble for scrapping, you have to keep your country law, regulation, standard, etc. of environmental assessment and safety.

TABLE OF CONTENTS

SCPH-30000 series and SCPH-35000 series GH013(31/41) MOUNT on board

Notice and Revision	2
1. Specification	4
2. Supplied Accessories and Packing Group	5
3. Instruction Manual Block	6
4. Exploded Views	
Overall and Main Block	
for SCPH-30000 / -35000	7
for SCPH-30001D / -35001	8
for SCPH-30002D / -30003D / -30004D /	9
-35002 / -350030 / -350004	
MD Block	10
GH Mount Block and Shield (A) Assy Block	11
Switch Assy Block	12
Power Switch, Fan and Rear Panel Assy Block	13
MD, GB Mount and Plate Assy Block	14
5. Block Diagram	15
6. Printed Wiring Boards and Schematic Diagrams	
This Note is Common for Printed Wiring Boards	
and Schematic Diagrams	GH013(31/41)-1
Electrical Parts List for GH013(31/41) Mount	GH013(31/41)-11
SW Mount	GH013(31/41)-19
GB Mount	GH013(31/41)-20

SECTION 1
SPECIFICATIONS

General	Inputs/ Outputs on the front
Power requirements	Controller ports (2)
100 V AC, 50/60 Hz	Memory card slots (2)
for SCPH-30000/-35000	USB ports (2)
120 V AC, 60 Hz	S400 (i-Link) port (1)
for SCPH-35001D/-35001	
220 -240 V AC, 50/60 Hz	Inputs/Outputs on the rear
for SCPH-30002D/-30003D/-30004D	HDD bay slot (1)
-35002/-35003/-35004	
Power consumption	Outputs on the rear
47 W for SCPH-30000/-35000	AV Multi out port (1)
79 W for SCPH-30001D/-35001	RGB, Ycbcr, Y/C, Composite-video,
50 W	Audio-L/R, XGA
for SCPH-30002D/-30003D/-30004D	Digital out port (1)
-35002/-35003/-35004	Optical audio
Dimensions	Supplied accessories
301 × 78 × 182 mm (w/h/d)	AC power cord (1)
Mass	A/V connecting cable (1)
2.4 kg	Dualshock2 Analog controller (1)
	Euro-AV Connector (1)
	for SCPH-30003D/-30004D
	-35003/-35004
	DISC (GT3)
	for SCPH-35000/-35001
	-35002/-35003/-35004

SECTION 2
SUPPLIED ACCESSORIES AND PACKING GROUP

NOTE :

• Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
• -XX and -X mean standardized parts, so they may have some difference from the original one.
• RESISTORS
METAL : Metal-film resistor.
F : nonflammable
Unit is Ω.

• SEMICONDUCTORS
In each case, u : μ, for example :
uA ... : μA ... uPA ... : μPA ...
uPB ... : μPB ... uPC ... : μPC ... uPD ... : μPD ...
• CAPACITORS
uF : μF
• COILS
uH : μH

The components identified by mark Δ or dotted line with mark Δ are critical for safety.
Replace only with part number specified.

SUPPLIED ACCESSORIES and PACKING GROUP

PLACE CODE #23

Ref. Part No.	Description
SCPH-30000/35000 ACCESSORIES & PACKING GROUP	

Δ AC 1-757-046-11	CORD, POWER
Δ AC 1-792-549-11	CORD, POWER
AV 1-792-028-11	AV CABLE (Integrated audio/video)
AV 1-792-028-21	AV CABLE (Integrated audio/video)
AV 1-792-028-31	AV CABLE (Integrated audio/video)

AV 1-792-028-41	AV CABLE (Integrated audio/video)
AV 1-792-238-72	AV CABLE (Integrated audio/video)
AV 1-792-238-82	AV CABLE (Integrated audio/video)
CONT 1-823-069-11	ANALOG CONTROLLER (DUALSHOCK 2)
CONT 1-823-069-21	ANALOG CONTROLLER (DUALSHOCK 2)

CONT 1-823-091-11	ANALOG CONTROLLER (DUALSHOCK 2)
CU 3-064-714-01	CUSHION
SH 3-060-494-01	SHEET, PROTECTION
TA 3-987-483-11	TAPE, BERODED PREVENTION
CA 3-071-641-01	INDIVIDUAL CARTON for SCPH-30000

CA 3-070-955-01	INDIVIDUAL CARTON for SCPH-35000
DISK 3-070-958-01	DVD-ROM (GT3) for SCPH-35000
MC 3-060-211-01	MASTER CARTON, 3 SETS for SCPH-30000
MC 3-070-959-01	MASTER CARTON, 3 SETS for SCPH-35000
IMB A-6785-257-A	MANUAL BLOCK ASSY, INSTRUCTION for SCPH-30000

IMB A-6785-319-A	MANUAL BLOCK ASSY, INSTRUCTION for SCPH-35000

Ref. Part No.	Description
SCPH-30001D/-35001 ACCESSORIES & PACKING GROUP	

Δ AC 1-790-108-21	CORD, POWER
AV 1-792-028-11	AV CABLE (Integrated audio/video)
AV 1-792-028-21	AV CABLE (Integrated audio/video)
AV 1-792-028-31	AV CABLE (Integrated audio/video)
AV 1-792-028-41	AV CABLE (Integrated audio/video)

AV 1-792-238-72	AV CABLE (Integrated audio/video)
AV 1-792-238-82	AV CABLE (Integrated audio/video)
CONT 1-823-069-11	ANALOG CONTROLLER (DUALSHOCK 2)
CONT 1-823-069-21	ANALOG CONTROLLER (DUALSHOCK 2)
CONT 1-823-091-11	ANALOG CONTROLLER (DUALSHOCK 2)

CU 3-064-714-01	CUSHION
CU2 3-064-713-01	CUSHION 2
SH 3-065-170-01	SHEET, PROTECTION
TA 3-987-483-11	TAPE, BERODED PREVENTION

CA 3-065-171-04	INDIVIDUAL CARTON for SCPH-30001D
CA 3-070-920-01	INDIVIDUAL CARTON for SCPH-35001
DISK 3-070-939-01	DVD-ROM (GT3) for SCPH-35001
MC 3-065-169-03	MASTER CARTON, 3 SETS for SCPH-30001D
MC 3-070-921-01	MASTER CARTON, 3 SETS for SCPH-35001

IMB A-6785-209-A	MANUAL BLOCK ASSY, INSTRUCTION for SCPH-30001D
IMB A-6785-305-A	MANUAL BLOCK ASSY, INSTRUCTION for SCPH-35001

Ref. Part No.	Description
SCPH-30002D/-35002 ACCESSORIES & PACKING GROUP	

Δ AC 1-555-074-51	CORD, POWER
AV 1-792-028-11	AV CABLE (Integrated audio/video)
AV 1-792-028-21	AV CABLE (Integrated audio/video)
AV 1-792-028-31	AV CABLE (Integrated audio/video)
AV 1-792-028-41	AV CABLE (Integrated audio/video)

AV 1-792-238-72	AV CABLE (Integrated audio/video)
AV 1-792-238-82	AV CABLE (Integrated audio/video)
CONT 1-823-069-11	ANALOG CONTROLLER (DUALSHOCK 2)
CONT 1-823-069-21	ANALOG CONTROLLER (DUALSHOCK 2)
CONT 1-823-091-11	ANALOG CONTROLLER (DUALSHOCK 2)

CU 3-064-714-01	CUSHION
SH 3-060-494-01	SHEET, PROTECTION
TA 3-987-483-11	TAPE, BERODED PREVENTION for SCPH-30002D
CA 3-066-446-02	INDIVIDUAL CARTON for SCPH-35002
CA 3-070-922-01	INDIVIDUAL CARTON for SCPH-35002

MC 3-066-441-21	MASTER CARTON, 3 SETS for SCPH-30002D
MC 3-070-915-21	MASTER CARTON, 3 SETS for SCPH-35002
IMB A-6785-243-A	MANUAL BLOCK ASSY, INSTRUCTION for SCPH-30002D
IMB A-6785-311-A	MANUAL BLOCK ASSY, INSTRUCTION for SCPH-35002

SCPH-30003D/-35003 ACCESSORIES & PACKING GROUP	

Δ AC 1-751-115-21	CORD, POWER
Δ AC 1-751-115-31	CORD, POWER
Δ AC 1-790-023-21	CODE, POWER
AV 1-792-028-11	AV CABLE (Integrated audio/video)
AV 1-792-028-21	AV CABLE (Integrated audio/video)

AV 1-792-028-31	AV CABLE (Integrated audio/video)
AV 1-792-028-41	AV CABLE (Integrated audio/video)
AV 1-792-238-72	AV CABLE (Integrated audio/video)
AV 1-792-238-82	AV CABLE (Integrated audio/video)
CONT 1-823-069-11	ANALOG CONTROLLER (DUALSHOCK 2)

CONT 1-823-069-21	ANALOG CONTROLLER (DUALSHOCK 2)
CONT 1-823-091-11	ANALOG CONTROLLER (DUALSHOCK 2)
CONT 1-823-091-12	ANALOG CONTROLLER (DUALSHOCK 2)
CONV 1-573-291-12	CONNECTOR, CONVERSION
CONV 1-785-004-12	CONNECTOR, CONVERSION
CU 3-064-714-01	CUSHION

PAD 3-065-172-01	PAD, TOGETHER PACKING
SH 3-060-494-01	SHEET, PROTECTION
TA 3-987-483-11	TAPE, BERODED PREVENTION
CA 3-066-446-12	INDIVIDUAL CARTON for SCPH-30003D
CA 3-070-917-11	INDIVIDUAL CARTON for SCPH-35003

MC 3-066-441-11	MASTER CARTON, 3 SETS for SCPH-30003D
MC 3-070-915-11	MASTER CARTON, 3 SETS for SCPH-35003
IMB A-6785-316-A	MANUAL BLOCK ASSY, INSTRUCTION for SCPH-35003
IMB A-6785-325-A	MANUAL BLOCK ASSY, INSTRUCTION for SCPH-30003D

Ref. Part No.	Description
SCPH-30004D/-35004 ACCESSORIES & PACKING GROUP	

Δ AC 1-575-131-82	CORD, POWER
Δ AC 1-823-152-11	CORD, POWER
AV 1-792-028-11	AV CABLE (Integrated audio/video)
AV 1-792-028-21	AV CABLE (Integrated audio/video)
AV 1-792-028-31	AV CABLE (Integrated audio/video)

AV 1-792-028-41	AV CABLE (Integrated audio/video)
AV 1-792-238-72	AV CABLE (Integrated audio/video)
AV 1-792-238-82	AV CABLE (Integrated audio/video)
CONT 1-823-069-11	ANALOG CONTROLLER (DUALSHOCK 2)
CONT 1-823-069-21	ANALOG CONTROLLER (DUALSHOCK 2)
CONT 1-823-091-11	ANALOG CONTROLLER (DUALSHOCK 2)
CONV 1-573-291-12	CONNECTOR, CONVERSION
CONV 1-785-004-12	CONNECTOR, CONVERSION
CU 3-064-714-01	CUSHION
PAD 3-065-172-01	PAD, TOGETHER PACKING

SH 3-060-494-01	SHEET, PROTECTION
TA 3-987-483-11	TAPE, BERODED PREVENTION
CA 3-066-446-02	INDIVIDUAL CARTON for SCPH-30004D
CA 3-070-917-01	INDIVIDUAL CARTON for SCPH-35004
MC 3-066-441-01	MASTER CARTON, 3 SETS for SCPH-30004D
MC 3-070-915-01	MASTER CARTON, 3 SETS for SCPH-35004
IMB A-6785-314-A	MANUAL BLOCK ASSY, INSTRUCTION for SCPH-35004
IMB A-6785-241-A	MANUAL BLOCK ASSY, INSTRUCTION for SCPH-30004D

SECTION 3
INSTRUCTION MANUAL BLOCK

NOTE :

• Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.

• -XX and -X mean standardized parts, so they may have some difference from the original one.

• RESISTORS
METAL : Metal-film resistor.
F : nonflammable
Unit is Ω.

• SEMICONDUCTORS
In each case, u : μ, for example :
uA . . . : μA . . . uPA . . . : μPA . . .
uPB . . . : μPB . . . uPC . . . : μPC . . . uPD . . . : μPD . . .

• CAPACITORS
uF : μF
• COILS
uH : μH

The components identified by mark Δ or dotted line with mark Δ are critical for safety.
Replace only with part number specified.

Instruction Manual Block

PLACE CODE #23

Ref.	Part No.	Description
A-6785-257-A INSTRUCTION MANUAL BLOCK ASSY for SCPH-30000		

CI	3-066-752-01	CARD, CUSTOMER INQUIRY
IN	3-066-753-01	INSTRUCTION (CAUTION)
LE	3-070-147-01	LEAFLET (SO-NET)
IM	3-066-323-02	MANUAL, INSTRUCTION
IM	3-070-040-01	MANUAL, INSTRUCTION

A-6785-209-A INSTRUCTION MANUAL BLOCK ASSY for SCPH-30001D		

CI	3-066-021-01	CARD, CUSTOMER INQUIRY
CS	3-066-966-01	CARD, SERVICE NUMBER
IN	3-067-847-11	INSTRUCTION
IM	3-068-537-14	MANUAL, INSTRUCTION
ES	3-060-161-02	SHEET, ESRG

A-6785-243-A INSTRUCTION MANUAL BLOCK ASSY for SCPH-30020D		

AOR	3-066-150-02	CARD (A), OWNER REGISTRATION
DISK	3-066-725-02	DISK, DEMONSTRATION
IN	3-068-120-11	INSTRUCTION
IM	3-068-537-21	MANUAL, INSTRUCTION
SE	3-987-375-02	SEAL, SEAL

A-6785-245-A INSTRUCTION MANUAL BLOCK ASSY for SCPH-30030		

BOR	3-066-150-02	CARD (B), OWNER REGISTRATION
DISK	3-066-725-02	DISK, DEMONSTRATION
IN	3-068-120-12	INSTRUCTION
IM	3-068-537-31	MANUAL, INSTRUCTION
SE	3-987-375-02	SEAL, SEAL

Ref.	Part No.	Description
A-6785-241-A INSTRUCTION MANUAL BLOCK ASSY for SCPH-30004D		

COR	3-066-160-03	CARD (C), OWNER REGISTRATION
DISK	3-066-725-02	DISK, DEMONSTRATION
IN	3-068-130-13	INSTRUCTION
IM	3-068-537-42	MANUAL, INSTRUCTION
IM	3-068-537-52	MANUAL, INSTRUCTION

SE	3-987-375-02	SEAL, SEAL

A-6785-319-A INSTRUCTION MANUAL BLOCK ASSY for SCPH-35000		

CI	3-070-956-01	CARD, CUSTOMER INQUIRY
IN	3-069-753-01	INSTRUCTION (CAUTION)
IM	3-070-040-01	MANUAL, INSTRUCTION
IM	3-070-957-01	MANUAL, INSTRUCTION

A-6785-305-A INSTRUCTION MANUAL BLOCK ASSY for SCPH-35001		

CI	3-066-021-01	CARD, CUSTOMER INQUIRY
CS	3-066-966-01	CARD, SERVICE NUMBER
IN	3-070-919-11	INSTRUCTION
IM	3-070-918-12	MANUAL, INSTRUCTION
ES	3-060-161-02	SHEET, ESRG

A-6785-311-A INSTRUCTION MANUAL BLOCK ASSY for SCPH-35002		

AOR	3-066-150-02	CARD (A), OWNER REGISTRATION
DISK	3-066-725-02	DISK, DEMONSTRATION
IN	3-070-923-11	INSTRUCTION
IM	3-070-918-21	MANUAL, INSTRUCTION
SE	3-987-375-02	SEAL, SEAL

Ref.	Part No.	Description
A-6785-316-A INSTRUCTION MANUAL BLOCK ASSY for SCPH-35003		

BOR	3-066-150-02	CARD (B), OWNER REGISTRATION
DISK	3-066-725-02	DISK, DEMONSTRATION
IN	3-070-924-11	INSTRUCTION
IM	3-070-918-31	MANUAL, INSTRUCTION
SE	3-987-375-02	SEAL, SEAL


A-6785-314-A INSTRUCTION MANUAL BLOCK ASSY for SCPH-35004		

COR	3-066-160-03	CARD (C), OWNER REGISTRATION
DISK	3-066-725-02	DISK, DEMONSTRATION
IN	3-070-916-11	INSTRUCTION
IM	3-070-918-41	MANUAL, INSTRUCTION
IM	3-070-918-51	MANUAL, INSTRUCTION

SE	3-987-375-02	SEAL, SEAL

SECTION 4 EXPLODED VIEWS

Overall and Main Block for SCPH-30000/-35000

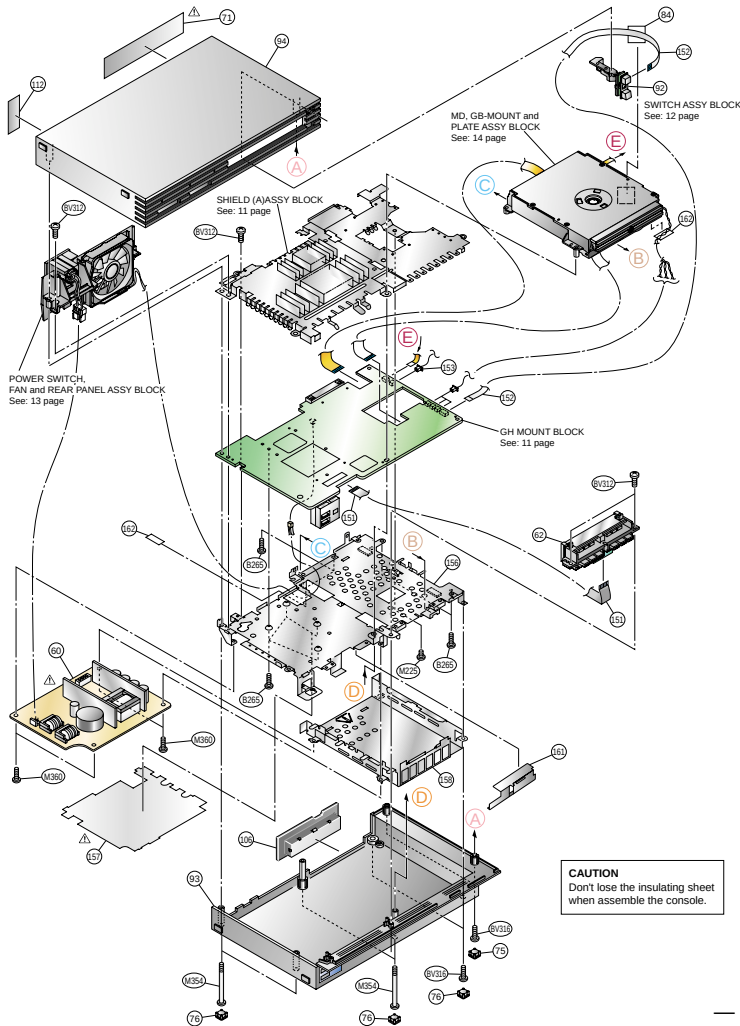

CAUTION

The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

CAUTION:
Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

OVERALL AND MAIN BLOCK

Ref-No.	Part No.	Description	Remark	Place code
Δ 60	1-468-610-11	POWER BLOCK		#00
62	1-694-676-21	TERMINAL BOARD (FRONT)		#17
62	1-694-729-21	TERMINAL BOARD (FRONT)		#17
62	1-694-769-31	TERMINAL BOARD (FRONT)		#17
Δ 71	3-069-696-03	LABEL, MODEL NUMBER (J1)	for SCPH-30000	#87
Δ 71	3-070-960-01	LABEL, MODEL NUMBER (J1)	for SCPH-35000	#87
75	3-059-626-03	COVER, SCREW		#22
76	3-059-627-01	CAP		#22
84	3-067-170-01	TAPE (20X20), HARNESS STOPPER		#87
92	A-6705-426-A	SWITCH BLOCK ASSY		#87
93	X-3951-722-1	COVER ASSY, LOWER		#87
94	X-3951-721-1	COVER ASSY, UPPER		#87
106	X-3951-317-1	LID ASSY		#87
112	3-067-865-01	TAPE, OPEN PREVENTION		#87
151	1-757-934-11	CABLE, FLEXIBLE FLAT (FFC-011)		#12
151	1-757-934-21	CABLE, FLEXIBLE FLAT (FFC-011)		#12
152	1-823-341-11	CABLE, FLEXIBLE FLAT (FFC-015)		#12
152	1-823-341-21	CABLE, FLEXIBLE FLAT (FFC-015)		#12
156	3-068-669-02	SHIELD (B)		#16
156	3-068-669-11	SHIELD (B)		#16
Δ 157	3-068-674-02	SHEET, INSULATING		#16
158	3-068-675-02	SHIELD (HDD)		#87
161	3-070-120-01	SHEET, INTERCEPTION	for SCPH-30000/35000	#87
162	3-069-212-01	TAPE, HARNESS STOPPER		#16
B265	3-069-170-01	TAPPING (B2X6.5)		#87
BV312	3-325-679-21	SCREW, TAPPING +BV 3X12		#87
BV316	3-070-296-01	TAPPING +BV 3X16		#87
BV316	3-325-679-91	SCREW (2 LOCK), +BV TAPPING		#87
M225	3-069-169-01	SCREW (M2X2.5)		#87
M354	3-059-622-02	SCREW (M3X5.4), HEAD TAPPING		#87
M360	3-069-168-01	TITE (CZN), M3X6 +BV S		#87

Exploded view diagram of the PlayStation 3 console assembly. The diagram shows the following components and their assembly order:

- Top Case (71):** The main upper housing of the console.
- Power Switch, Fan and Rear Panel Assy Block (See: 13 page):** Located at the rear, includes a cooling fan and power switch.
- Shield (A) Assy Block (See: 11 page):** A metal shield plate that fits into the top case.
- MD, GB Mount and Plate Assy Block (See: 14 page):** Mounts the Memory Disc (MD) and Game Boy Advance (GB) modules.
- Switch Assy Block (See: 12 page):** The button assembly for the console.
- GH Mount Block (See: 11 page):** Mounts the Game Boy Advance module.
- Internal Components:** Includes the power supply unit (PSU), hard drive (HD), and various mounting blocks (A, B, C, D, E) and screws (M300, M354, M250, M255, M256, M257, M258, M259, M260, M261, M262, M263, M264, M265, M266, M267, M268, M269, M270, M271, M272, M273, M274, M275, M276, M277, M278, M279, M280, M281, M282, M283, M284, M285, M286, M287, M288, M289, M290, M291, M292, M293, M294, M295, M296, M297, M298, M299, M300, M301, M302, M303, M304, M305, M306, M307, M308, M309, M310, M311, M312, M313, M314, M315, M316, M317, M318, M319, M320, M321, M322, M323, M324, M325, M326, M327, M328, M329, M330, M331, M332, M333, M334, M335, M336, M337, M338, M339, M340, M341, M342, M343, M344, M345, M346, M347, M348, M349, M350, M351, M352, M353, M354, M355, M356, M357, M358, M359, M360, M361, M362, M363, M364, M365, M366, M367, M368, M369, M370, M371, M372, M373, M374, M375, M376, M377, M378, M379, M380, M381, M382, M383, M384, M385, M386, M387, M388, M389, M390, M391, M392, M393, M394, M395, M396, M397, M398, M399, M400, M401, M402, M403, M404, M405, M406, M407, M408, M409, M410, M411, M412, M413, M414, M415, M416, M417, M418, M419, M420, M421, M422, M423, M424, M425, M426, M427, M428, M429, M430, M431, M432, M433, M434, M435, M436, M437, M438, M439, M440, M441, M442, M443, M444, M445, M446, M447, M448, M449, M450, M451, M452, M453, M454, M455, M456, M457, M458, M459, M460, M461, M462, M463, M464, M465, M466, M467, M468, M469, M470, M471, M472, M473, M474, M475, M476, M477, M478, M479, M480, M481, M482, M483, M484, M485, M486, M487, M488, M489, M490, M491, M492, M493, M494, M495, M496, M497, M498, M499, M500, M501, M502, M503, M504, M505, M506, M507, M508, M509, M510, M511, M512, M513, M514, M515, M516, M517, M518, M519, M520, M521, M522, M523, M524, M525, M526, M527, M528, M529, M530, M531, M532, M533, M534, M535, M536, M537, M538, M539, M540, M541, M542, M543, M544, M545, M546, M547, M548, M549, M550, M551, M552, M553, M554, M555, M556, M557, M558, M559, M560, M561, M562, M563, M564, M565, M566, M567, M568, M569, M570, M571, M572, M573, M574, M575, M576, M577, M578, M579, M580, M581, M582, M583, M584, M585, M586, M587, M588, M589, M590, M591, M592, M593, M594, M595, M596, M597, M598, M599, M600, M601, M602, M603, M604, M605, M606, M607, M608, M609, M610, M611, M612, M613, M614, M615, M616, M617, M618, M619, M620, M621, M622, M623, M624, M625, M626, M627, M628, M629, M630, M631, M632, M633, M634, M635, M636, M637, M638, M639, M640, M641, M642, M643, M644, M645, M646, M647, M648, M649, M650, M651, M652, M653, M654, M655, M656, M657, M658, M659, M660, M661, M662, M663, M664, M665, M666, M667, M668, M669, M670, M671, M672, M673, M674, M675, M676, M677, M678, M679, M680, M681, M682, M683, M684, M685, M686, M687, M688, M689, M690, M691, M692, M693, M694, M695, M696, M697, M698, M699, M700, M701, M702, M703, M704, M705, M706, M707, M708, M709, M710, M711, M712, M713, M714, M715, M716, M717, M718, M719, M720, M721, M722, M723, M724, M725, M726, M727, M728, M729, M730, M731, M732, M733, M734, M735, M736, M737, M738, M739, M740, M741, M742, M743, M744, M745, M746, M747, M748, M749, M750, M751, M752, M753, M754, M755, M756, M757, M758, M759, M760, M761, M762, M763, M764, M765, M766, M767, M768, M769, M770, M771, M772, M773, M774, M775, M776, M777, M778, M779, M780, M781, M782, M783, M784, M785, M786, M787, M788, M789, M790, M791, M792, M793, M794, M795, M796, M797, M798, M799, M800, M801, M802, M803, M804, M805, M806, M807, M808, M809, M810, M811, M812, M813, M814, M815, M816, M817, M818, M819, M820, M821, M822, M823, M824, M825, M826, M827, M828, M829, M830, M831, M832, M833, M834, M835, M836, M837, M838, M839, M840, M841, M842, M843, M844, M845, M846, M847, M848, M849, M850, M851, M852, M853, M854, M855, M856, M857, M858, M859, M860, M861, M862, M863, M864, M865, M866, M867, M868, M869, M870, M871, M872, M873, M874, M875, M876, M877, M878, M879, M880, M881, M882, M883, M884, M885, M886, M887, M888, M889, M890, M891, M892, M893, M894, M895, M896, M897, M898, M899, M900, M901, M902, M903, M904, M905, M906, M907, M908, M909, M910, M911, M912, M913, M914, M915, M916, M917, M918, M919, M920, M921, M922, M923, M924, M925, M926, M927, M928, M929, M930, M931, M932, M933, M934, M935, M936, M937, M938, M939, M940, M941, M942, M943, M944, M945, M946, M947, M948, M949, M950, M951, M952, M953, M954, M955, M956, M957, M958, M959, M960, M961, M962, M963, M964, M965, M966, M967, M968, M969, M970, M971, M972, M973, M974, M975, M976, M977, M978, M979, M980, M981, M982, M983, M984, M985, M986, M987, M988, M989, M990, M991, M992, M993, M994, M995, M996, M997, M998, M999, M1000).

CAUTION
Don't lose the insulating sheet when assemble the console.


The components identified by mark or dotted line with mark. are critical for safety. Replace only with part number specified.

CAUTION :
Use of controls or adjustments or performance
of procedures other than those specified herein
may result in hazardous radiation exposure.

Ref.No.	Part No.	Description	Remark	Place code
△ 60	1-468-604-11	POWER BLOCK		#90
△ 60	1-468-623-11	POWER BLOCK		#90
62	1-694-676-21	TERMINAL BOARD (FRONT)		#17
62	1-694-729-21	TERMINAL BOARD (FRONT)		#17
62	1-694-769-31	TERMINAL BOARD (FRONT)		#17
△ 71	3-069-170-01	LABEL, MODEL NUMBER (UC2)	for SCPH-30001D	#87
△ 71	3-078-932-01	LABEL, MODEL NUMBER (UC2)	for SCPH-35001	#87
75	3-859-626-03	COVER, SCREW		#22
76	3-859-627-01	CAP		#22
84	3-867-170-01	TAPE (20X20), HARNESS STOPPER		#87
92	A-6785-426-A	SWITCH BLOCK ASSY		#87
93	X-3951-706-1	COVER ASSY, LOWER		#87
94	X-3951-705-1	COVER ASSY, UPPER		#87
△ 103	3-976-231-11	LABEL, CAUTION		#87
106	X-3951-316-1	LID ASSY		#87
113	3-066-253-01	TAPE, VOID		#87
151	1-757-934-11	CABLE, FLEXIBLE FLAT (FFC-011)		#12
151	1-757-934-21	CABLE, FLEXIBLE FLAT (FFC-011)		#12
152	1-823-341-11	CABLE, FLEXIBLE FLAT (FFC-015)		#12
152	1-823-341-21	CABLE, FLEXIBLE FLAT (FFC-015)		#12
156	3-068-669-02	SHIELD (B)		#16
156	3-068-669-11	SHIELD (B)		#16
△ 157	3-068-674-02	SHEET, INSULATING		#16
158	3-068-675-02	SHIELD (HDD)		#87
△ 160	3-783-692-01	LABEL, CAUTION, BARRIER		#87
162	3-069-212-01	TAPE, HARNESS STOPER		#16
B265	3-069-170-01	TAPPING (B2X6.5)		#87
BV312	3-325-679-21	SCREW, TAPPING +BV 3X12		#87
BV316	3-078-296-01	TAPPING +BV 3X16		#87
BV316	3-325-679-91	SCREW (2 LOCK), +BV TAPPING		#87
M225	3-069-169-01	SCREW (M2X2.5)		#87
M354	3-059-622-02	SCREW (M3X54), HEAD TAPPING		#87
M360	3-069-168-01	TITE (CZN), M3X6 +BV S		#87

CAUTION
Don't lose the insulating sheet when assemble the console.

Overall and Main Block for SCPH-30002D/-30003D/-30004D/-35002/-35003/-35004

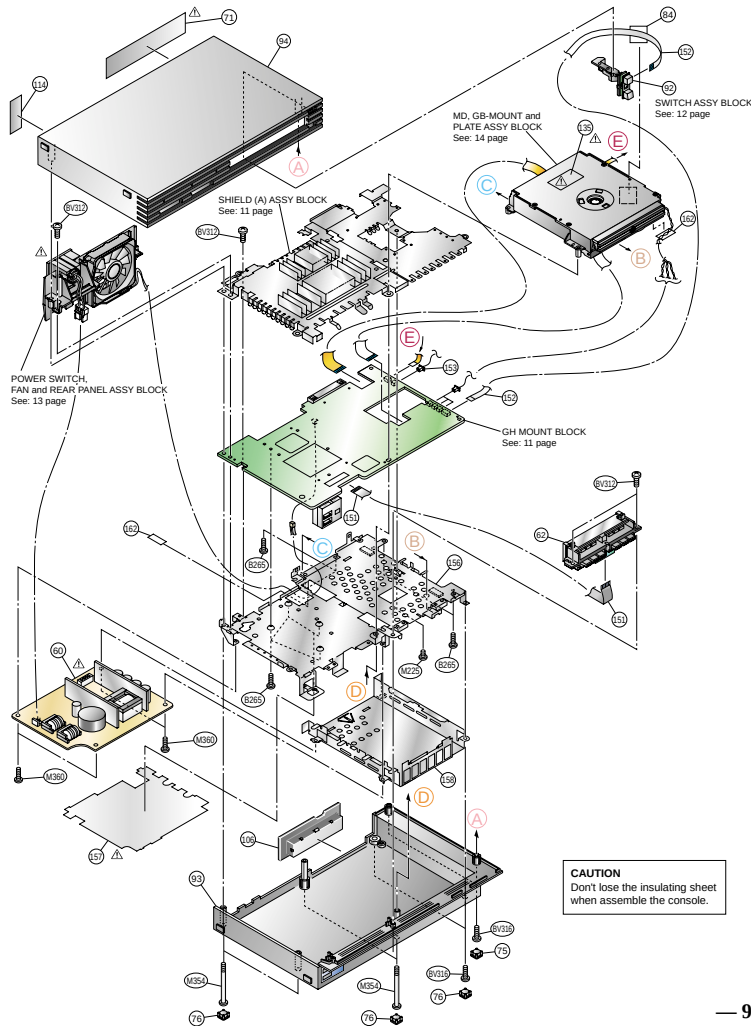

CAUTION

The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.


CAUTION: Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

OVERALL AND MAIN BLOCK

Ref-No.	Part No.	Description	Remark	Place code
Δ 60	1-468-605-11	POWER BLOCK		#00
62	1-694-676-21	TERMINAL BOARD (FRONT)		#17
62	1-694-729-21	TERMINAL BOARD (FRONT)		#17
62	1-694-769-31	TERMINAL BOARD (FRONT)		#17
Δ 71	3-069-119-01	LABEL, MODEL NUMBER (AU3)	for SCPH-30002D	#87
Δ 71	3-069-120-01	LABEL, MODEL NUMBER (CEK)	for SCPH-30003D	#87
Δ 71	3-069-121-01	LABEL, MODEL NUMBER (CEL)	for SCPH-30004D	#87
Δ 71	3-070-931-01	LABEL, MODEL NUMBER (AU3)	for SCPH-35002	#87
Δ 71	3-070-933-01	LABEL, MODEL NUMBER (CEK)	for SCPH-35003	#87
Δ 71	3-070-934-01	LABEL, MODEL NUMBER (CEL)	for SCPH-35004	#87
75	3-059-626-03	COVER, SCREW		#22
76	3-059-627-01	CAP		#22
84	3-067-170-01	TAPE (20X20), HARNESS STOPPER		#87
92	A-6705-426-A	SWITCH BLOCK ASSY		#87
93	X-3951-722-1	COVER ASSY, LOWER		#87
94	X-3951-721-1	COVER ASSY, UPPER		#87
106	X-3951-317-1	LID ASSY		#87
114	3-066-498-01	TAPE, VOID		#87
Δ 135	3-988-711-02	LABEL, LASER CAUTION		#87
151	1-757-934-11	CABLE, FLEXIBLE FLAT (FFC-011)		#12
151	1-757-934-21	CABLE, FLEXIBLE FLAT (FFC-011)		#12
152	1-823-341-11	CABLE, FLEXIBLE FLAT (FFC-015)		#12
152	1-823-341-21	CABLE, FLEXIBLE FLAT (FFC-015)		#12
156	3-068-669-02	SHIELD (B)		#16
156	3-068-669-11	SHIELD (B)		#16
Δ 157	3-068-674-02	SHEET, INSULATING		#16
158	3-068-675-02	SHIELD (HDD)		#87
162	3-069-212-01	TAPE, HARNESS STOPPER		#16
B265	3-069-170-01	TAPPING (B2X6.5)		#87
BV312	3-325-679-21	SCREW, TAPPING +BV 3X12		#87
BV316	3-070-296-01	TAPPING +BV 3X16		#87
BV316	3-325-679-91	SCREW (2 LOCK), +BV TAPPING		#87
M225	3-069-169-01	SCREW (M2X2.5)		#87
M354	3-059-622-02	SCREW (M3X5.4), HEAD TAPPING		#87
M360	3-069-168-01	TITE (CZN), M3X6 +BV S		#87

CAUTION
Don't lose the insulating sheet when assemble the console.


MD Block

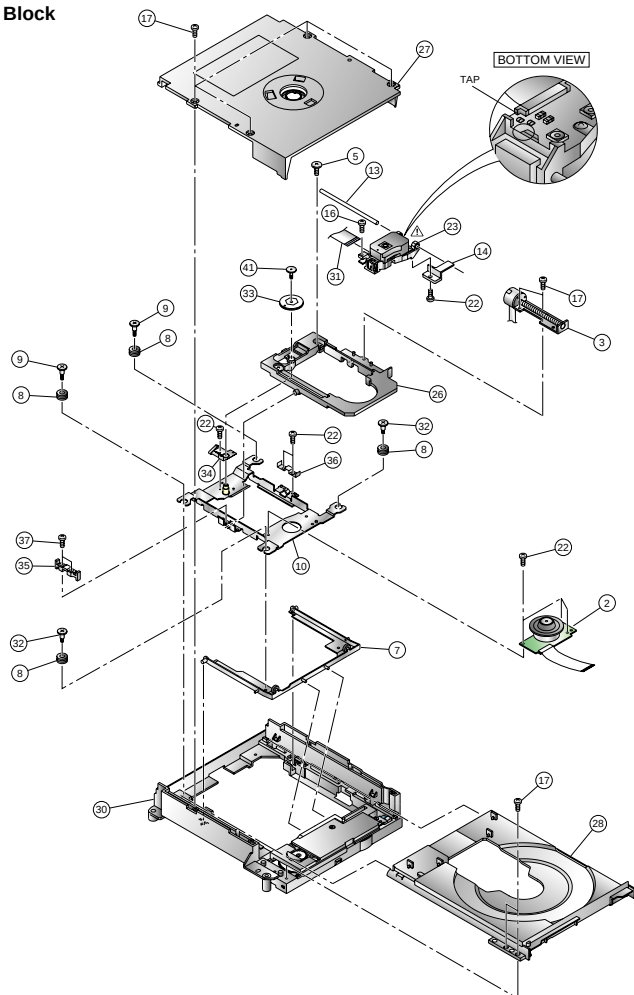

MD BLOCK

Ref-No.	Part No.	Description	Remark	Place code
2	1-763-700-12	MOTOR, DC (SPINDLE)		#10SP
2	8-835-733-02	MOTOR, DC SSC28C/C-NP (SPINDLE)		#10SP
3	1-763-639-21	MOTOR, DC		#10
5	3-059-845-01	SCREW (B2X6.5), SHAFT RETAINER		#10
7	X-3951-637-1	FRAME ASSY, SUB		#10
8	3-065-277-01	INSULATOR		#10
9	3-065-276-01	SCREW, STEP		#10
10	X-3951-606-1	CHASSIS ASSY, MAIN		#10
13	3-059-854-02	SHAFT, MAIN		#10
14	3-059-855-02	RACK		#10
16	3-060-399-01	SCREW, SKEW		#10
17	3-060-400-01	TAPPING (B2X6.5)		#10
22	3-062-728-01	Ø PLATE 3, MAIN M2X3.2		#10
23	8-820-141-10	DEVICE, OPTICAL KHS-400B		#100P
26	X-3951-607-1	CHASSIS ASSY, SUB		#10
27	X-3951-609-1	BRACKET ASSY, PULLEY		#10
28	X-3951-608-1	TRAY ASSY		#10TR
30	X-3951-610-3	FRAME ASSY, MAIN		#10
31	1-680-370-12	PWB, FLEXIBLE		#10
32	3-068-075-01	SCREW (SUB), STEP		#10
33	3-065-278-02	CAM, TILT		#10
34	3-068-076-01	SPRING (TILT), LEAF		#10
35	3-065-282-01	GUIDE (L)		#10
36	3-065-283-01	GUIDE (R)		#10
37	3-065-557-01	SCREW (M2X6.0)		#10
41	3-065-279-02	SCREW, CAM RETAINER		#10


GH Mount Block

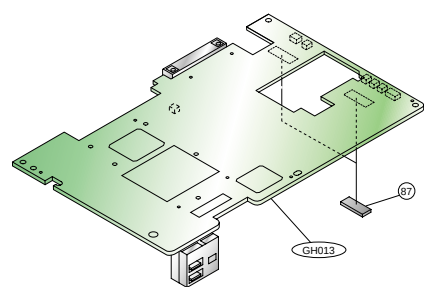

GH MOUNT BLOCK

Ref-No.	Part No.	Description	Remark	Place code
87	3-068-806-01	SHEET (DRIVER), ELECTRIC HEAT		#25GH
GH013	A-6714-479-A	GH-013(31/41) MOUNT(32M V2)	for SCPH-30000/-35000	#25GH
GH013	A-6714-478-A	GH-013(31/41) MOUNT(64M V2)	for SCPH-30000/-35000	#25GH
GH013	A-6714-474-A	GH-013(31/41) MOUNT(32M V2)	for SCPH-30001D/-35001	#25GH
GH013	A-6714-475-A	GH-013(31/41) MOUNT(64M V2)	for SCPH-30001D/-35001	#25GH
GH013	A-6714-476-A	GH-013(31/41) MOUNT(32M V2 HV)	for SCPH-30001D/-35001	#25GH
GH013	A-6714-477-A	GH-013(31/41) MOUNT(64M V2 HV)	for SCPH-30001D/-35001	#25GH
GH013	A-6714-482-A	GH-013(31/41) MOUNT(64M V2)	for SCPH-30002D/-35002	#25GH
GH013	A-6714-480-A	GH-013(31/41) MOUNT(32M V2)	for SCPH-30003D/-35003/-30004D/-35004	#25GH
GH013	A-6714-481-A	GH-013(31/41) MOUNT(64M V2)	for SCPH-30003D/-35003/-30004D/-35004	#25GH


Shield (A) Assy Block

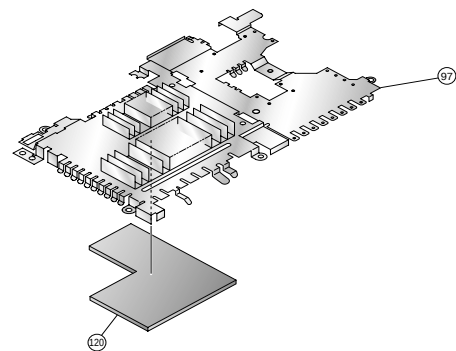

SHIELD (A) ASSY BLOCK

Ref-No.	Part No.	Description	Remark	Place code
97	X-3951-707-2	SHIELD (A) ASSY		#87
120	3-059-652-01	SHEET (A), ELECTRIC HEAT	for GH013 MOUNT	#16


Switch Assy Block

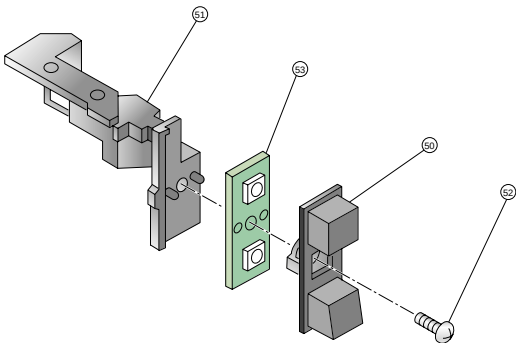

A-6705-426-A SW-365 SWITCH ASSY BLOCK for GH013 (31/41) MOUNT

Ref-No.	Part No.	Description	Remark	Place code
50	3-059-665-03	BUTTON, SWITCH		#25SW
51	3-059-666-05	BRACKET, SWITCH		#25SW
51	3-066-494-01	BRACKET, SWITCH		#25SW
52	7-685-105-11	TPG +P 2X8, TYPE 2, NON-SLIT		#25SW
53	A-6714-472-A	SW-365 MOUNT		#25SW

Power Switch, Fan and Rear Panel Assy Block

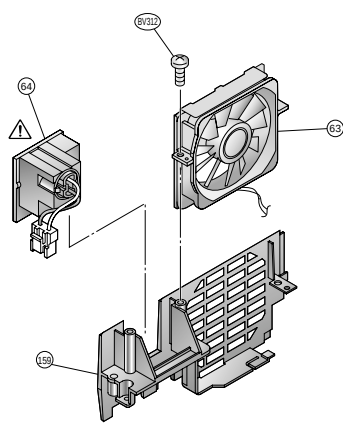


CAUTION

The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

CAUTION :
Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

Ref.No.	Part No.	Description	Remark	Place code
63	1-763-480-23	DC FAN		#74
63	1-763-554-22	FAN, DC		#74
63	1-763-756-11	FAN, DC		#74
Δ 64	1-771-994-31	SWITCH, POWER (WITH AC INLET)		#00
Δ 64	1-771-995-31	SWITCH, POWER (WITH AC INLET)	for SCPH-30001D/-35001	#00
	for SCPH-30000/-30002D/-30003D/-30004D/-35000/-35002/-35003/-35004			
159	3-068-676-02	PANEL, REAR	for SCPH-30001D/-35001	#87
159	3-068-676-12	PANEL, REAR		#87
	for SCPH-30000/-30002D/-30003D/-30004D/-35000/-35002/-35003/-35004			
BV312	3-325-679-21	SCREW, TAPPING +BV 3X12		#87

MD, GB Mount and Plate Assy Block

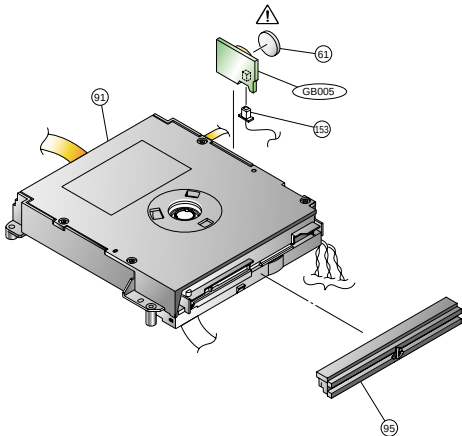

CAUTION

The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

CAUTION :
Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

Ref-No.	Part No.	Description	Remark	Place code
Δ 61	1-528-174-41	BATTERY, LITHIUM (CR2032 TYPE)		#256B
91	A-6705-342-A	MD BLOCK ASSY		#10
		for SCPH-30000/-30002D/-30003D/-30004D/-35000/-35002/-35003/-35004		
91	A-6705-398-A	MD BLOCK ASSY	for SCPH-30001D/35001	#10
95	X-3951-099-1	PLATE ASSY, ORNAMENTAL		#87
153	1-961-160-21	HARNESS (HS-059)		#12
GB005	A-6714-473-A	GB-005 MOUNT		#256B

SECTION 6
PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS

THIS NOTE IS COMMON FOR PRINTED WIRING
BOARDS AND SCHEMATIC DIAGRAMS.


- Note on Printed Wiring Boards :**
- Through hole is omitted.
 -  : Pattern on the side which is seen.

- Note on Schematic Diagram :**
- Use caution when replacing chip parts.
New parts must be attached after removal of chip.
Be careful not to heat the minus side of tantalum capacitor,
because it is damaged by the heat.
 - All capacitors are in μF unless otherwise noted. pF : μF 50 WV
or less are not indicated except for electrolytics and tantalums.
 - All resistors are in Ω and 1/4 W (Chip resistors : 1/10W) unless
otherwise specified.
 - Chip resistors are 1/8 W or 1/10 W unless otherwise noted.
 $\text{k}\Omega$: 1000 Ω , $\text{M}\Omega$: 1000 $\text{k}\Omega$.

Note : The components identified by mark $\triangle$ or dotted line with mark $\triangle$ are critical for safety. Replace only with part number specified.	Note : Les composants identifiés par une marque $\triangle$ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.
--	---

Note on DC Power line :
Unit of voltage is V (volt)

- | | |
|---|---|
| • +12V :  | • +3.3V :  |
| • +8.0V :  | • +2.5V :  |
| • +5.0V :  | • +1.8V :  |
| • +3.5V :  | • VC :  |
| | • +1.5V :  |
-
- | | |
|---|---|
| • IN :  | • Main Signal Line :  ,  |
| • OUT :  | |

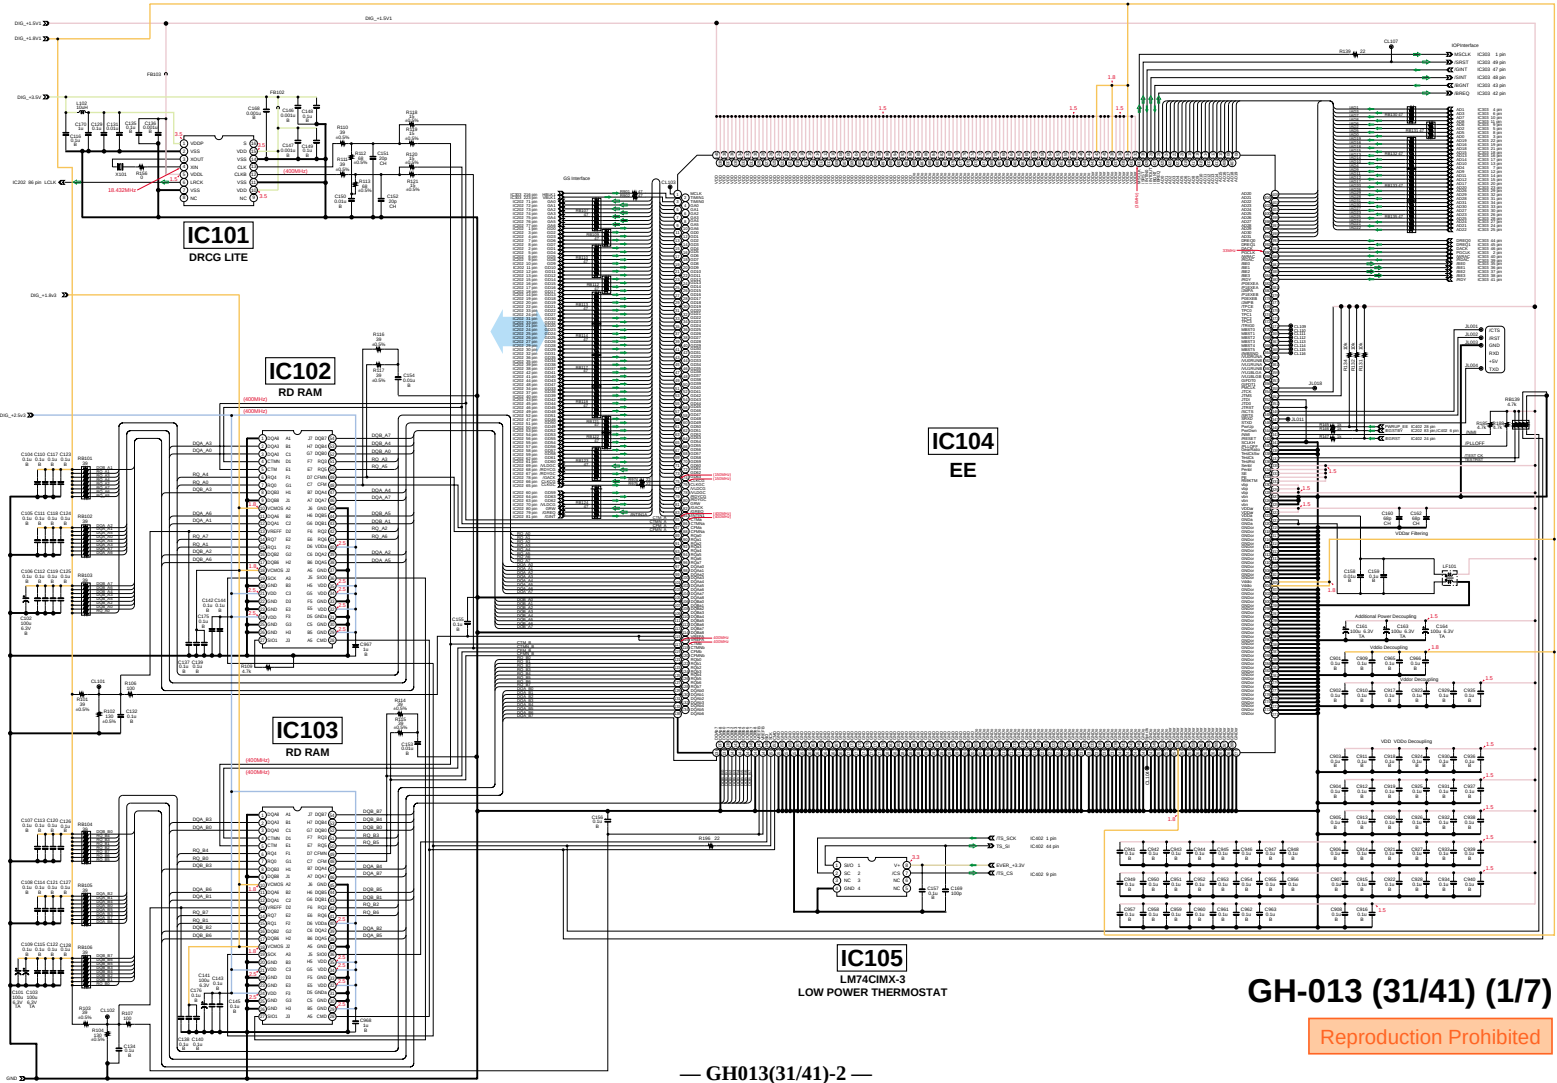


GH-013 (31/41) (1/7)

Reproduction Prohibited

— GH013(31/41)-2 —

SCPH-30000 series and SCPH-35000 series

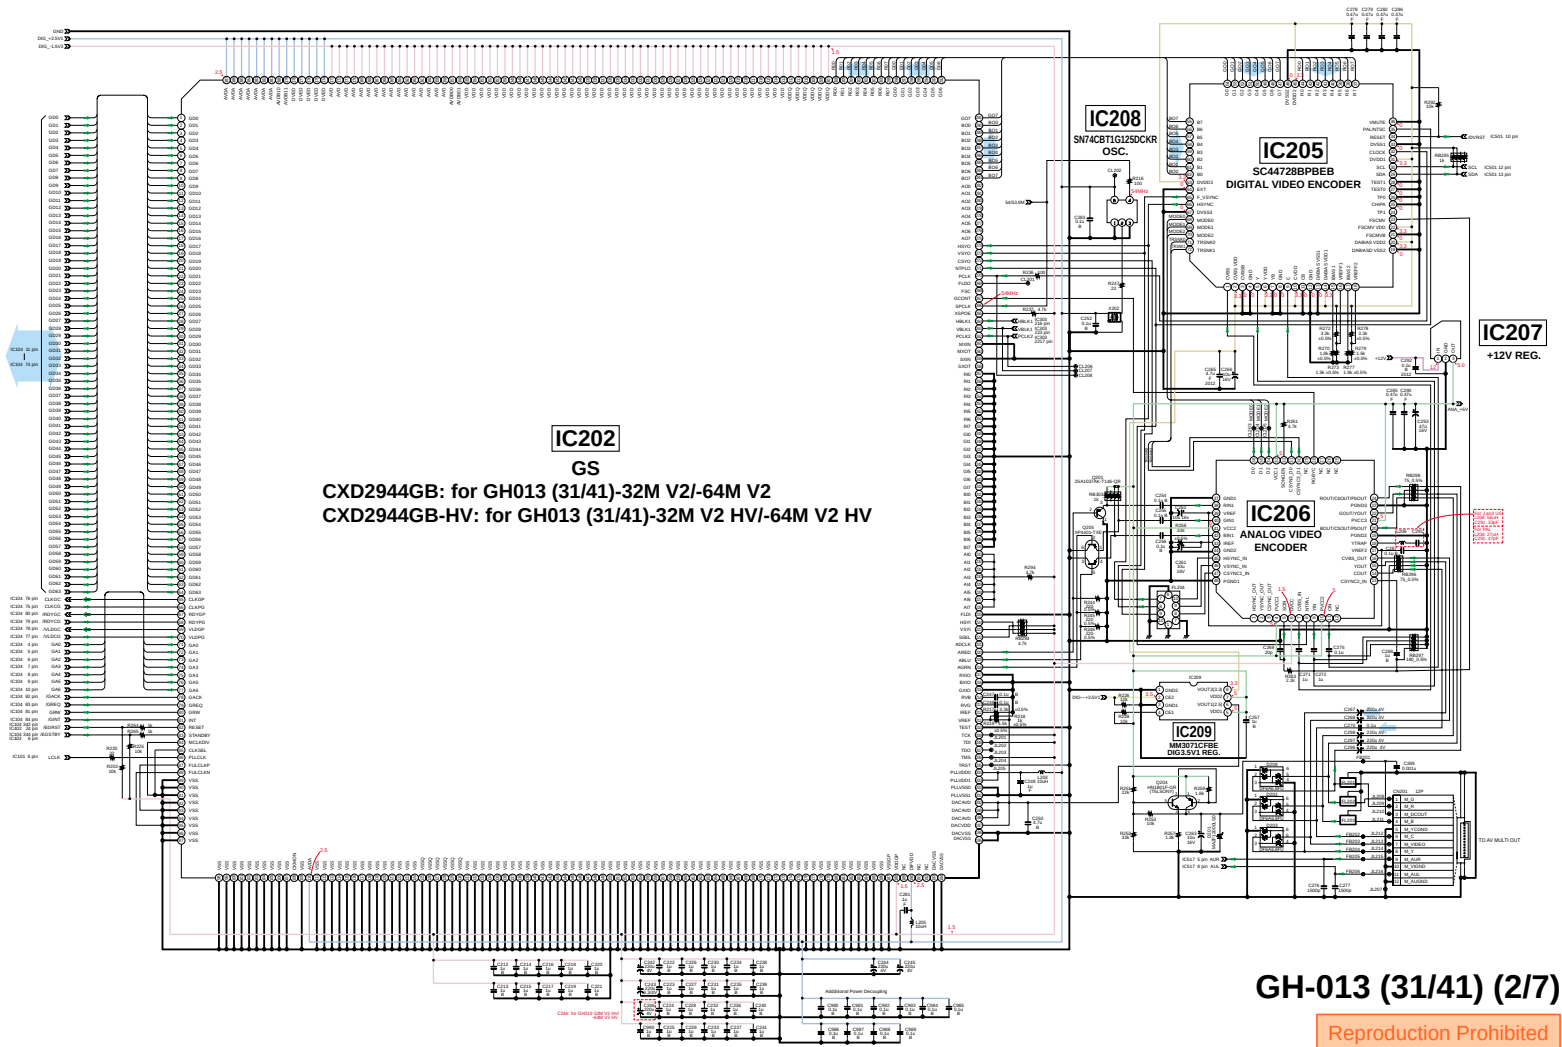


GH-013 (31/41) (2/7)

Reproduction Prohibited

— GH013(31/41)-3 —


SCPH-30000 series and SCPH-35000 series

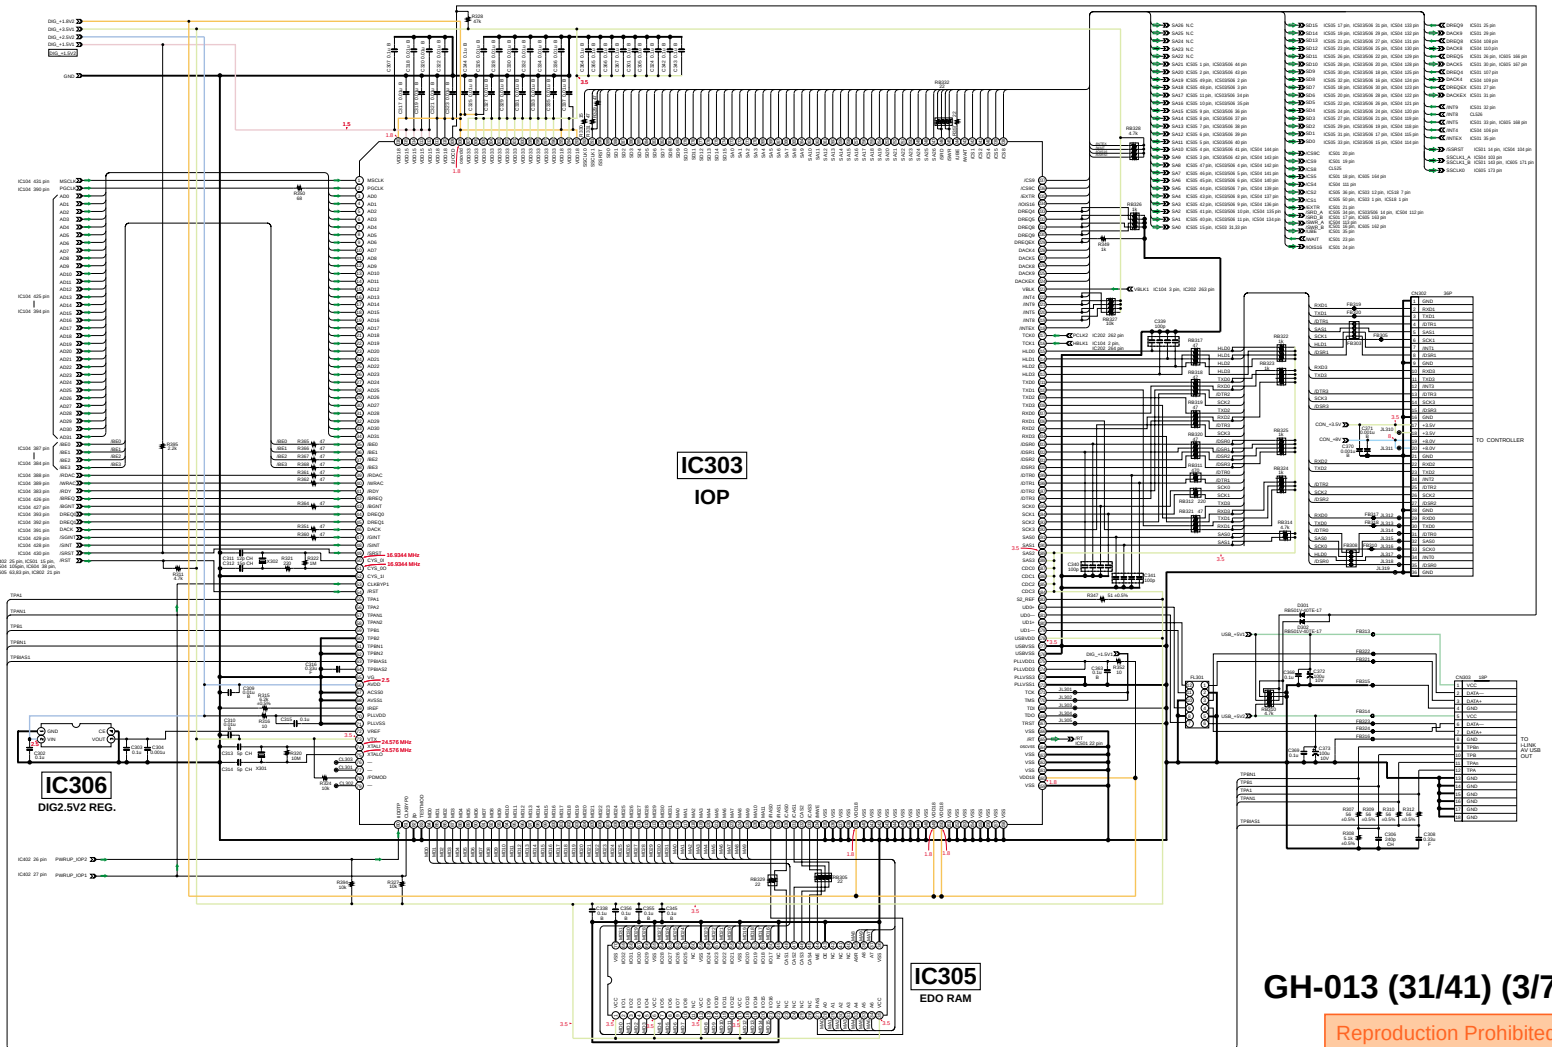

— GH013(31/41)-4 —

GH-013 (31/41) (3/7)


Reproduction Prohibited

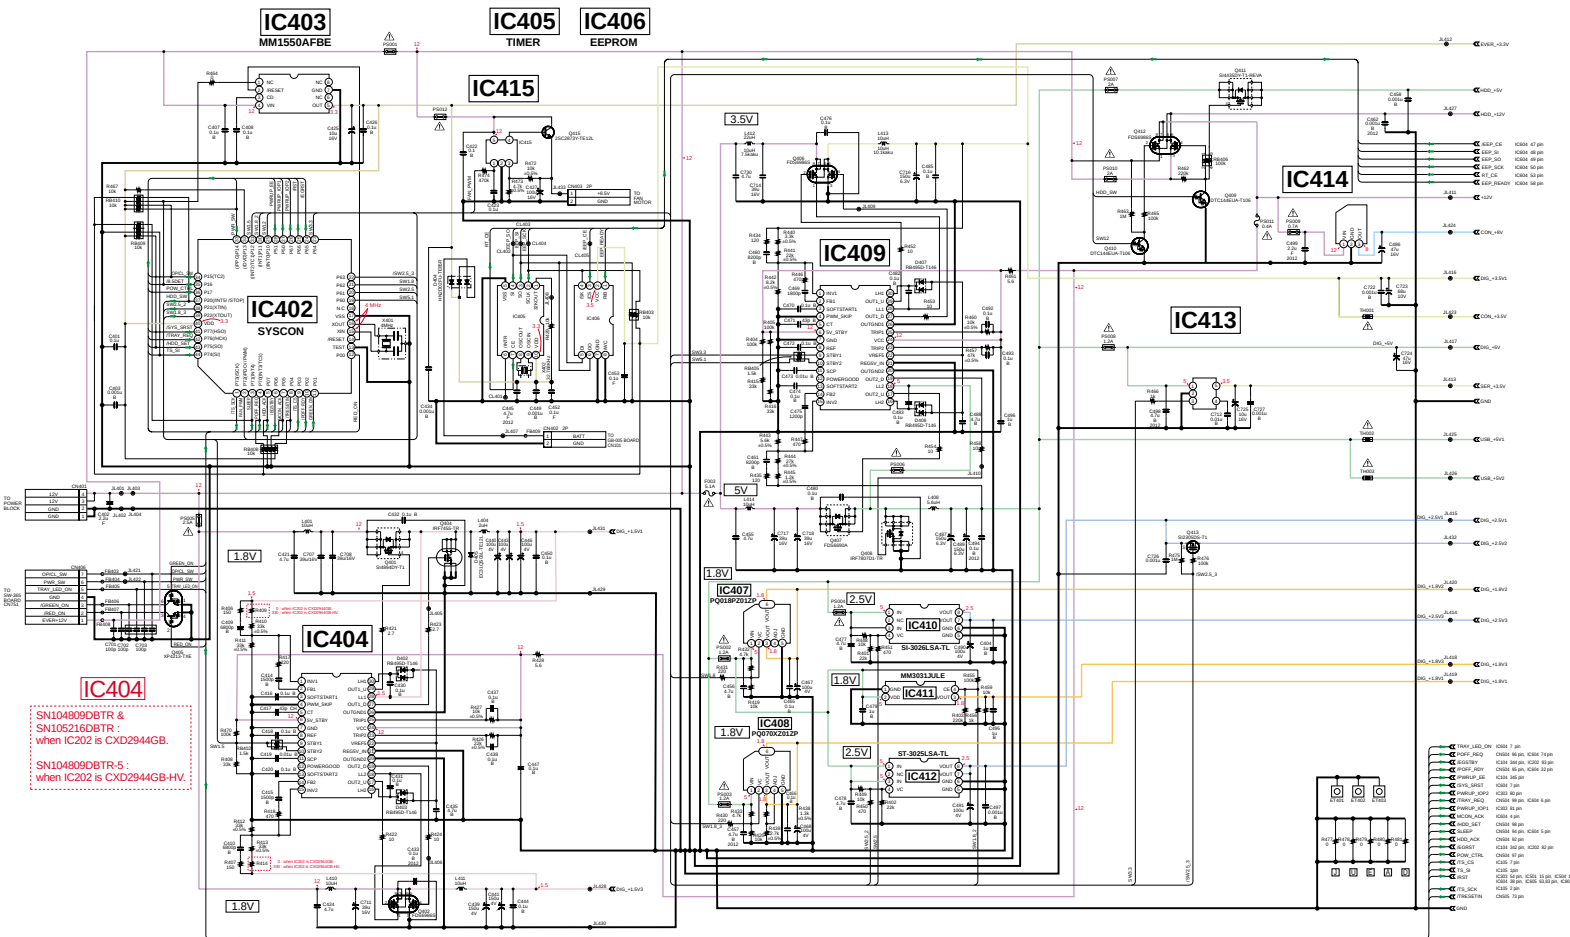

GH-013 (31/41) (4/7)

Reproduction Prohibited

SCPH-30000 series and SCPH-35000 series

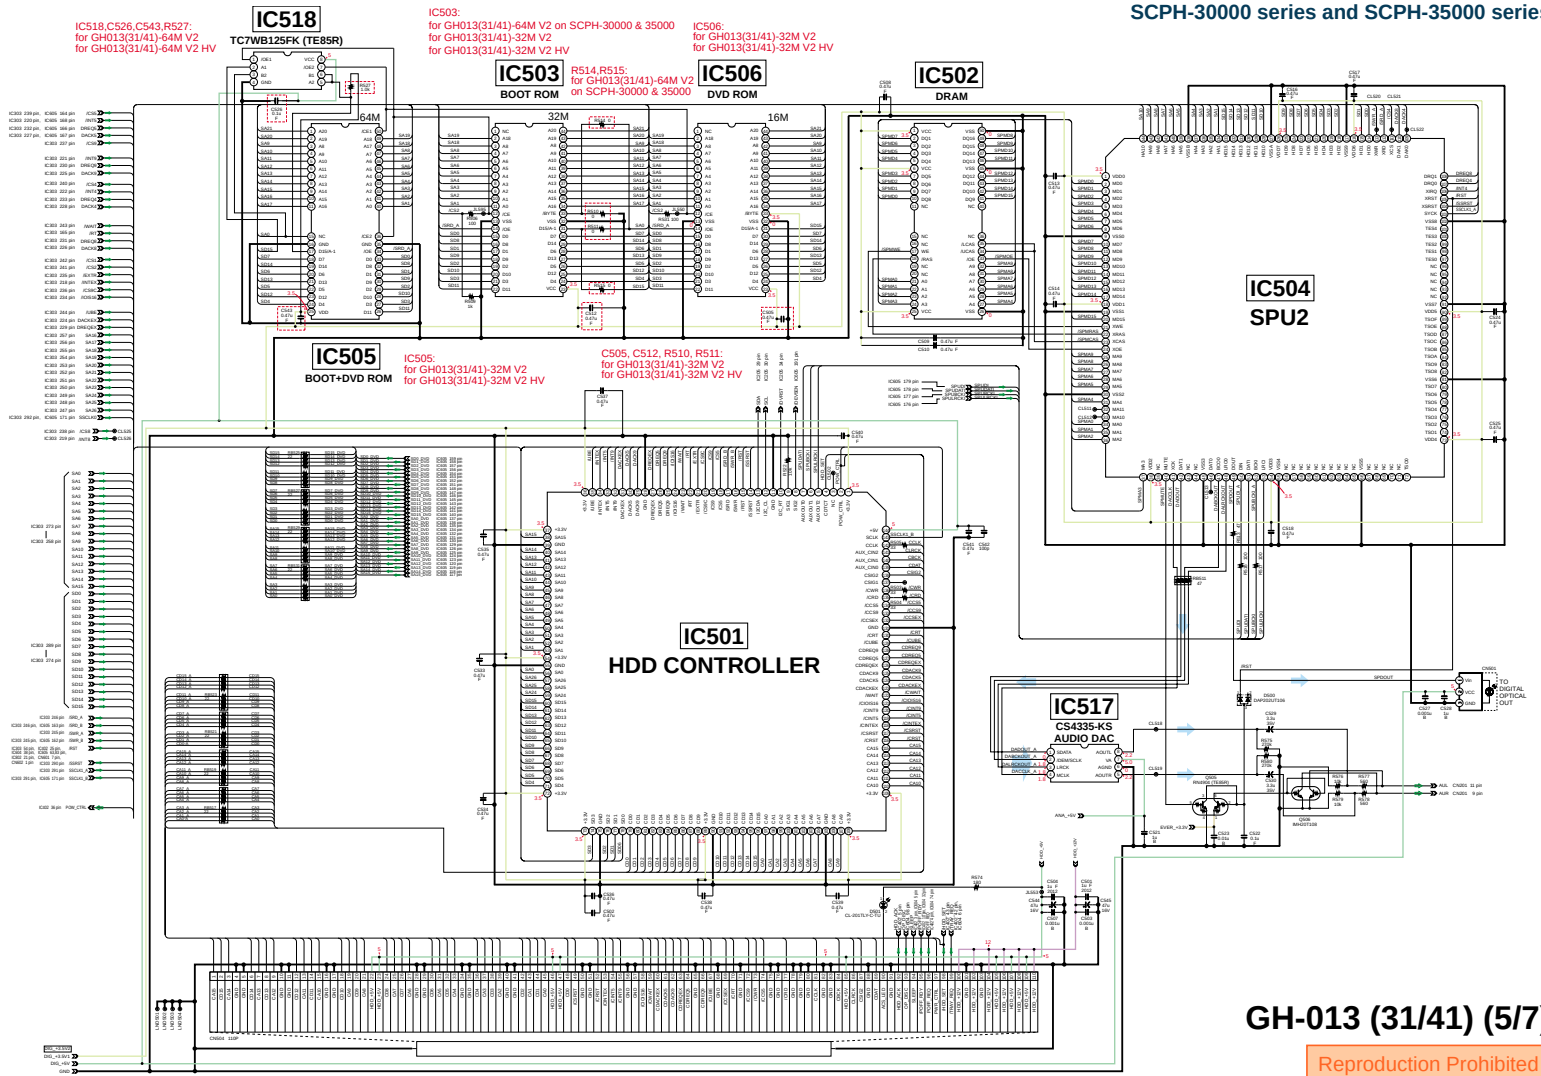


GH-013 (31/41) (5/7)

Reproduction Prohibited

— GH013(31/41)-6 —


SCPH-30000 series and SCPH-35000 series

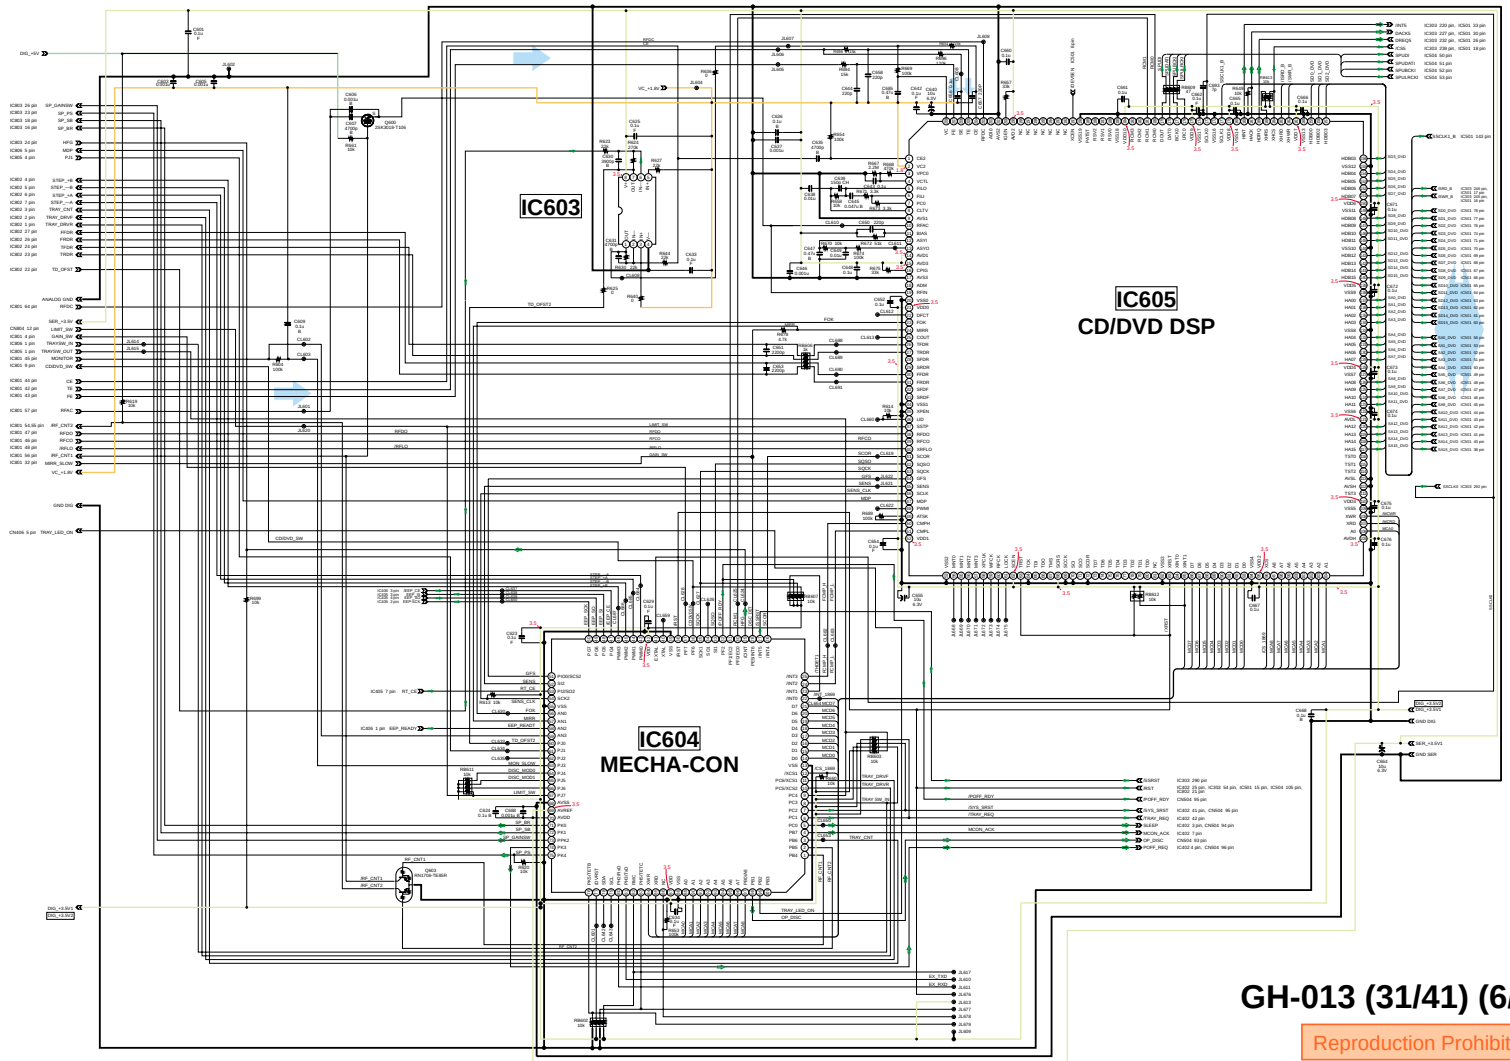

GH-013 (31/41) (6/7)


Reproduction Prohibited

— GH013(31/41)-7 —

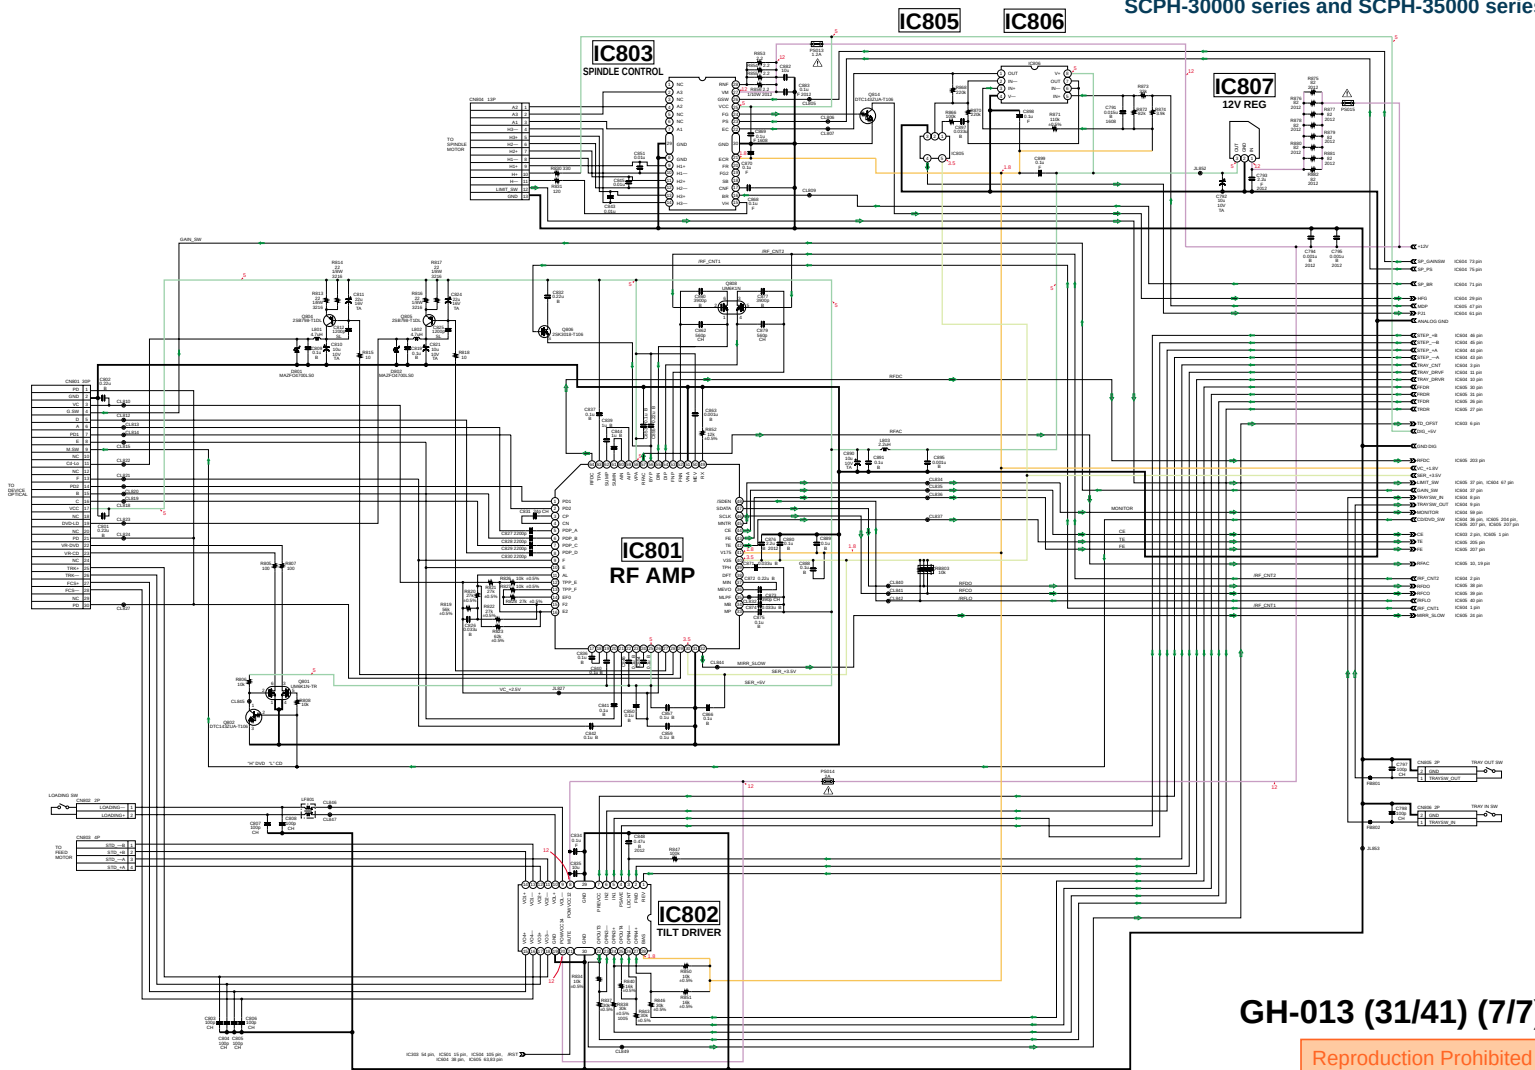

GH-013 (31/41) (7/7)

Reproduction Prohibited

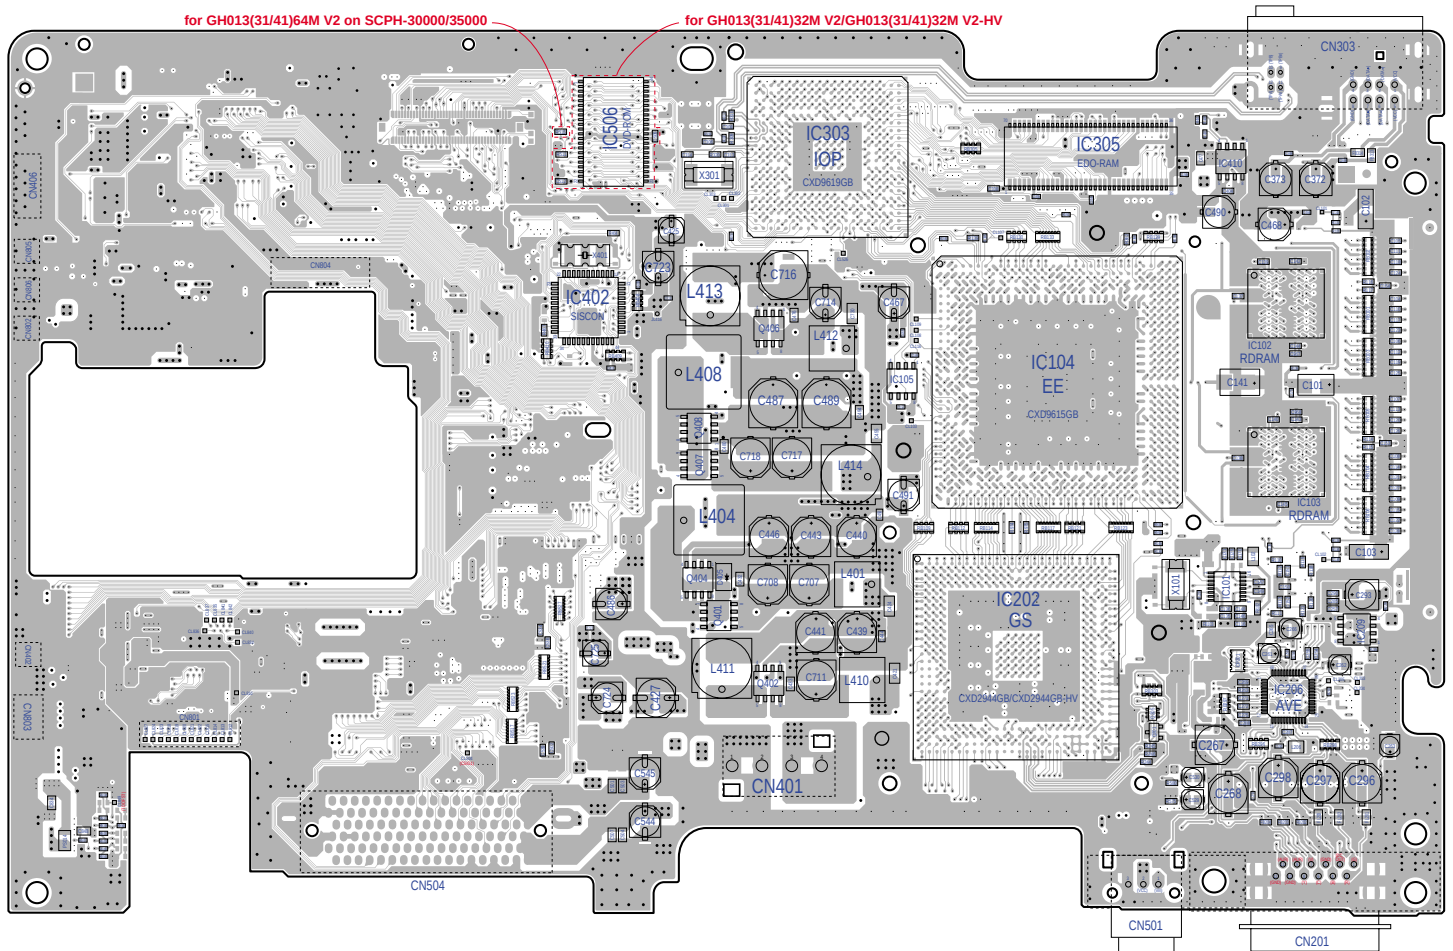


GH-013 (31/41)

A side

— GH013(31/41)-9 —

Reproduction Prohibited

SCPH-30000 series and SCPH-35000 series

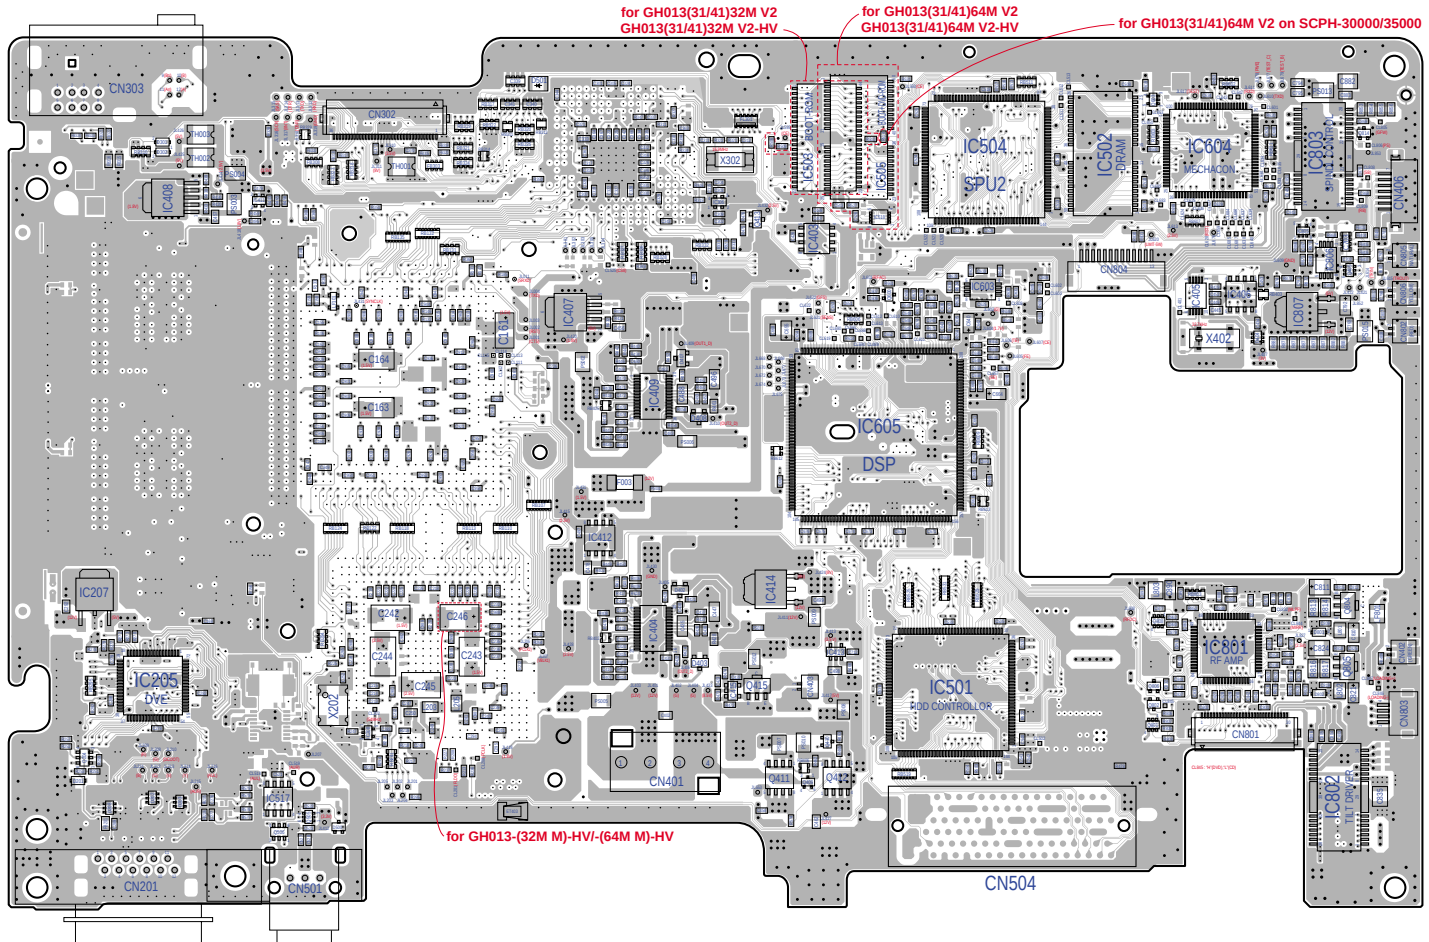

GH-013 (31/41)

B side

— GH013(31/41)-10 —

Reproduction Prohibited

ELECTRICAL PARTS LIST for GH013(31/41) MOUNT

NOTE :

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX and -X mean standardized parts, so they may have some difference from the original one.
- RESISTORS
METAL : Metal-film resistor.
F : nonflammable
Unit is Ω.
- SEMICONDUCTORS
In each case, u : μ, for example :
uA... : μA... uPA... : μPA...
uPB... : μPB... uPC... : μPC... uPD... : μPD...
- CAPACITORS
uF : μF
• COILS
uH : μH

The components identified by mark Δ or dotted line with mark Δ are critical for safety.
Replace only with part number specified.

Dissimilarity Parts Lib for GH 013(31/41)-V2 MOUNT on SCPH-30000/-35000

Ref.	Part No.	Description	Remarks	Ref.	Part No.	Description	Remarks
A-6714-478-A GH013-64M V2 MOUNT on SCPH-30000/-35000				A-6714-479-A GH013-32M V2 MOUNT on SCPH-30000/-35000			
IC604	8-752-920-00	IC CXP102064-008R-T6	MECHACON	IC604	8-752-926-08	IC CXP102064-008R-T6	MECHACON
IC503	6-800-927-01	IC K3NSV109RB-TC1AT00	64M BOOT+DVD-ROM	IC503	6-800-850-01	IC MR27V3202F-N3TPZ	32M BOOT-ROM
R514	1-216-864-91	CONDUCTOR, CHIP (1608)		IC506	6-800-366-01	IC MR27V1602E-M9TPZ	16M DVD-ROM
R515	1-216-864-91	CONDUCTOR, CHIP (1608)		C505	1-113-619-91	CAP, CERAMIC 470000PF F (1608)	
C512	1-113-619-91	CAP, CERAMIC 470000PF F (1608)		C512	1-113-619-91	CAP, CERAMIC 470000PF F (1608)	
IC202	8-759-699-08	IC CXD2944GB	GS	R510	1-216-864-91	CONDUCTOR, CHIP (1608)	
C243	1-135-689-91	CAP, CHIP TANTALUM ELECT 220MF		R511	1-216-864-91	CONDUCTOR, CHIP (1608)	
IC404	8-759-689-89	IC SN1048090BTR	DD-CON controller	IC202	8-759-699-08	IC CXD2944GB	GS
IC404	6-700-664-01	IC SN1052160BTR	DD-CON controller	C243	1-135-689-91	CAP, CHIP TANTALUM ELECT 220MF	
R409	1-216-864-91	CONDUCTOR, CHIP (1608)		IC404	8-759-689-89	IC SN1048090BTR	DD-CON controller
R414	1-216-864-91	CONDUCTOR, CHIP (1608)		IC404	6-700-664-01	IC SN1052160BTR	DD-CON controller
FL204	1-234-724-21	NETWORK, RC		R409	1-216-864-91	CONDUCTOR, CHIP (1608)	
C291	1-164-862-81	CAP, CHIP CERAMIC 33PF CH 1005		R414	1-216-864-91	CONDUCTOR, CHIP (1608)	
L206	1-412-960-21	INDUCTOR, SMALL TYPE 56UH 2518		C291	1-164-862-81	CAP, CHIP CERAMIC 33PF CH 1005	
R477	1-216-864-91	CONDUCTOR, CHIP (1608)	Marks for J-model	L206	1-412-960-21	INDUCTOR, SMALL TYPE 56UH 2518	
*****				FL204	1-234-724-21	NETWORK, RC	
				R477	1-216-864-91	CONDUCTOR, CHIP (1608)	Marks for J-model

Dissimilarity Parts Lib for GH 013(31/41)-V2 MOUNT on SCPH-30001D/-35001

Ref.	Part No.	Description	Remarks	Ref.	Part No.	Description	Remarks
A-6714-474-A GH013-32M V2 MOUNT on SCPH-30001D/-35001				A-6714-476-A GH013-32M V2 HV MOUNT on SCPH-30001D/-35001			
IC604	8-752-927-00	IC CXP102064-105R-T6	MECHACON	IC604	8-752-927-00	IC CXP102064-105R-T6	MECHACON
IC503	6-800-582-01	IC MR27V3202F-J5TPZ	32M BOOT-ROM	IC503	6-800-582-01	IC MR27V3202F-J5TPZ	32M BOOT-ROM
IC506	6-800-182-01	IC MR27V1602E-73TPZ	16M DVD-ROM	IC506	6-800-182-01	IC MR27V1602E-73TPZ	16M DVD-ROM
C505	1-113-619-91	CAP, CERAMIC 470000PF F (1608)		C505	1-113-619-91	CAP, CERAMIC 470000PF F (1608)	
C512	1-113-619-91	CAP, CERAMIC 470000PF F (1608)		C512	1-113-619-91	CAP, CERAMIC 470000PF F (1608)	
RS10	1-216-864-91	CONDUCTOR, CHIP (1608)		RS10	1-216-864-91	CONDUCTOR, CHIP (1608)	
RS11	1-216-864-91	CONDUCTOR, CHIP (1608)		RS11	1-216-864-91	CONDUCTOR, CHIP (1608)	
IC202	8-759-699-08	IC CXD2944GB	GS	IC202	6-700-082-01	IC CXD2944GB-HV	GS
C243	1-135-609-91	CAP, CHIP TANTALUM ELECT 220MF		C243	1-128-707-22	CAP, TANTALUM ELECT (SMD)220	
IC404	8-759-689-89	IC SN1048090BTR	DD-CON controller	C246	1-128-707-22	CAP, TANTALUM ELECT (SMD)220	
IC404	6-700-664-01	IC SN1052160BTR	DD-CON controller	IC404	8-759-837-35	IC SN1048090BTR-05	DD-CON controller
R409	1-216-864-91	CONDUCTOR, CHIP (1608)		R409	1-218-835-91	RES, CHIP 330 (1608)	
R414	1-216-864-91	CONDUCTOR, CHIP (1608)		R414	1-218-835-91	RES, CHIP 330 (1608)	
C291	1-164-862-81	CAP, CHIP CERAMIC 33PF CH 1005		C291	1-164-862-81	CAP, CHIP CERAMIC 33PF CH 1005	
L206	1-412-960-21	INDUCTOR, SMALL TYPE 56UH 2518		L206	1-412-960-21	INDUCTOR, SMALL TYPE 56UH 2518	
FL204	1-234-605-21	NETWORK, RC		FL204	1-234-605-21	NETWORK, RC	
R478	1-216-864-91	CONDUCTOR, CHIP (1608)	Marks for US model	R478	1-216-864-91	CONDUCTOR, CHIP (1608)	Marks for US model
*****				*****			
Ref.	Part No.	Description	Remarks	Ref.	Part No.	Description	Remarks
A-6714-475-A GH013-64M V2 MOUNT on SCPH-30001D/-35001				A-6714-477-A GH013-64M V2 HV MOUNT on SCPH-30001D/-35001			
IC604	8-752-925-45	IC CXP102064-104R-T6	MECHACON	IC604	8-752-925-45	IC CXP102064-104R-T6	MECHACON
IC505	6-800-183-01	IC TC5364200FT-PA05	64M BOOT+DVD-ROM	IC505	6-800-183-01	IC TC5364200FT-PA05	64M BOOT+DVD-ROM
IC510	8-759-689-49	IC TC7WB125FK(T6SR)		IC510	8-759-689-49	IC TC7WB125FK(T6SR)	
C526	1-164-156-91	CAP, CHIP CERAMIC 0.1MF F 1608		C526	1-164-156-91	CAP, CHIP CERAMIC 0.1MF F 1608	
C543	1-113-619-91	CAP, CERAMIC 470000PF F (1608)		C543	1-113-619-91	CAP, CERAMIC 470000PF F (1608)	
RS27	1-216-821-91	RES, CHIP 1.0K (1608)		RS27	1-216-821-91	RES, CHIP 1.0K (1608)	
IC202	8-759-699-08	IC CXD2944GB	GS	IC202	6-700-082-01	IC CXD2944GB-HV	GS
C243	1-135-609-91	CAP, CHIP TANTALUM ELECT 220MF		C243	1-128-707-22	CAP, TANTALUM ELECT (SMD)220	
IC404	8-759-689-89	IC SN1048090BTR	DD-CON controller	C246	1-128-707-22	CAP, TANTALUM ELECT (SMD)220	
IC404	6-700-664-01	IC SN1052160BTR	DD-CON controller	IC404	8-759-837-35	IC SN1048090BTR-05	DD-CON controller
R409	1-216-864-91	CONDUCTOR, CHIP (1608)		R409	1-218-835-91	RES, CHIP 330 (1608)	
R414	1-216-864-91	CONDUCTOR, CHIP (1608)		R414	1-218-835-91	RES, CHIP 330 (1608)	
FL204	1-234-605-21	NETWORK, RC		FL204	1-234-605-21	NETWORK, RC	
C291	1-164-862-81	CAP, CHIP CERAMIC 33PF CH 1005		C291	1-164-862-81	CAP, CHIP CERAMIC 33PF CH 1005	
L206	1-412-960-21	INDUCTOR, SMALL TYPE 56UH 2518		L206	1-412-960-21	INDUCTOR, SMALL TYPE 56UH 2518	
R478	1-216-864-91	CONDUCTOR, CHIP (1608)	Marks for US model	R478	1-216-864-91	CONDUCTOR, CHIP (1608)	Marks for US model
*****				*****			

Dissimilarity Parts Lib for GH 613(31/41)-V2 MOUNT on SCPH-30002D/-30003D/-30004D and SCPH-35002/-35003/-35004

Ref.	Part No.	Description	Remarks	Ref.	Part No.	Description	Remarks
A-6714-482-A GH013-64M V2 MOUNT on SCPH-30002D/-35002				A-6714-481-A GH013-64M V2 MOUNT on SCPH-30003D/-30004D/-35003/-35004			
IC604	8-752-922-01	IC CXP102064-203R-T6	MECHACON	IC604	8-752-924-75	IC CXP102064-203R-T6	MECHACON
IC505	6-800-190-01	IC TC5364200FT-PA07	64M BOOT+DVD-ROM	IC505	6-800-196-01	IC TC5364200FT-PA06	64M BOOT+DVD-ROM
IC518	8-759-680-49	IC TC7WB125FK(TE8SR)		IC518	8-759-680-49	IC TC7WB125FK(TE8SR)	
C526	1-164-156-91	CAP, CHIP CERAMIC 0.1MF F 1608		C526	1-164-156-91	CAP, CHIP CERAMIC 0.1MF F 1608	
C543	1-113-619-91	CAP, CERAMIC 470000PF F (1608)		C543	1-113-619-91	CAP, CERAMIC 470000PF F (1608)	
RS27	1-216-821-91	RES, CHIP 1.0K (1608)		RS27	1-216-821-91	RES, CHIP 1.0K (1608)	
IC202	8-759-699-08	IC CXD2944GB	GS	IC202	8-759-699-08	IC CXD2944GB	GS
C243	1-135-609-91	CAP, CHIP TANTALUM ELECT 220MF		C243	1-135-609-91	CAP, CHIP TANTALUM ELECT 220MF	
IC404	8-759-689-09	IC SN1040890BTR	DD-CON controller	IC404	8-759-689-09	IC SN1040890BTR	DD-CON controller
IC404	6-700-664-01	IC SN1052160BTR	DD-CON controller	IC404	6-700-664-01	IC SN1052160BTR	DD-CON controller
R409	1-216-864-91	CONDUCTOR, CHIP (1608)		R409	1-216-864-91	CONDUCTOR, CHIP (1608)	
R414	1-216-864-91	CONDUCTOR, CHIP (1608)		R414	1-216-864-91	CONDUCTOR, CHIP (1608)	
C291	1-164-866-81	CAP, CHIP CERAMIC 47PF CH 1005		C291	1-164-866-81	CAP, CHIP CERAMIC 47PF CH 1005	
L206	1-412-956-21	INDUCTOR, SMALL TYPE 27UH 2518		L206	1-412-956-21	INDUCTOR, SMALL TYPE 27UH 2518	
FL204	1-234-724-21	NETWORK, RC		FL204	1-234-724-21	NETWORK, RC	
R480	1-216-864-91	CONDUCTOR, CHIP (1608)	Marks for AU3 model	R479	1-216-864-91	CONDUCTOR, CHIP (1608)	Marks for CEK &CEL model
*****				*****			
Ref.	Part No.	Description	Remarks				
A-6714-480-A GH013-32M V2 MOUNT on SCPH-30003D/-30004D/-35003/-35004							
IC604	8-752-924-75	IC CXP102064-203R-T6	MECHACON				
IC503	6-800-197-01	IC MR27V3202F-A7TPZ	32M BOOT-ROM				
IC506	6-800-190-01	IC MR27V1602E-74TPZ	16M DVD-ROM				
C505	1-113-619-91	CAP, CERAMIC 470000PF F (1608)					
C512	1-113-619-91	CAP, CERAMIC 470000PF F (1608)					
RS10	1-216-864-91	CONDUCTOR, CHIP (1608)					
RS11	1-216-864-91	CONDUCTOR, CHIP (1608)					
IC202	8-759-699-08	IC CXD2944GB	GS				
C243	1-135-609-91	CAP, CHIP TANTALUM ELECT 220MF					
IC404	8-759-689-09	IC SN1040890BTR	DD-CON controller				
IC404	6-700-664-01	IC SN1052160BTR	DD-CON controller				
R409	1-216-864-91	CONDUCTOR, CHIP (1608)					
R414	1-216-864-91	CONDUCTOR, CHIP (1608)					
C291	1-164-866-81	CAP, CHIP CERAMIC 47PF CH 1005					
L206	1-412-956-21	INDUCTOR, SMALL TYPE 27UH 2518					
FL204	1-234-724-21	NETWORK, RC					
R479	1-216-864-91	CONDUCTOR, CHIP (1608)	Marks for CEK &CEL model				

Reproduction Prohibited

SCPH-30000 series and SCPH-35000 series

for GH013(31/41)-V2 MOUNT on SCPH-30000/30001D/30002D/30003D/30004D and SCPH-35000/35001/35002/35003/35004

Ref.	Part No.	Description	Ref.	Part No.	Description	Ref.	Part No.	Description	Ref.	Part No.	Description
Common Parts List											
PWB	1-682-770-31	PWB, GH-013	C163	1-128-964-91	CAP, CHIP TANTALUM ELECT 100MF	C282	1-113-619-91	CAP, CERAMIC 470000PF F (1608)	C369	1-125-777-81	CAP, CHIP CERAMIC 0.1MF B 1005
PWB	1-682-770-31	PWB, GH-013	C164	1-128-964-91	CAP, CHIP TANTALUM ELECT 100MF	C283	1-107-826-91	CAP, CHIP CERAMIC 1000000PF B	C370	1-162-964-91	CAP, CHIP CERAMIC 10000PF B 1608
			C165	1-162-964-91	CAP, CHIP CERAMIC 10000PF B 1608	C284	1-162-964-91	CAP, CHIP CERAMIC 470000PF F (1608)	C371	1-162-964-91	CAP, CHIP CERAMIC 10000PF B 1608
			C169	1-164-874-81	CAP, CHIP CERAMIC 1000PF CH 1005	C285	1-113-619-91	CAP, CERAMIC 470000PF F (1608)			
			C170	1-125-837-91	CAP, CHIP CERAMIC 1MF B (1608)						
<CAPACITOR>											
			C175	1-125-777-81	CAP, CHIP CERAMIC 0.1MF B 1005	C287	1-107-826-91	CAP, CHIP CERAMIC 1000000PF B	C372	1-165-492-21	CAP, ELECT 100MF
			C176	1-125-777-81	CAP, CHIP CERAMIC 0.1MF B 1005	C288	1-125-837-91	CAP, CHIP CERAMIC 1MF B (1608)	C373	1-165-492-21	CAP, ELECT 100MF
			C212	1-125-837-91	CAP, CHIP CERAMIC 1MF B (1608)	C289	1-162-964-91	CAP, CHIP CERAMIC 10000PF B 1608	C374	1-125-777-81	CAP, CHIP CERAMIC 0.1MF B 1005
			C213	1-125-837-91	CAP, CHIP CERAMIC 1MF B (1608)	C290	1-113-619-91	CAP, CERAMIC 470000PF F (1608)	C402	1-164-585-91	CAP, CHIP CERAMIC 0.2MF B 2012
			C214	1-125-837-91	CAP, CHIP CERAMIC 1MF B (1608)	C292	1-107-725-91	CAP, CERAMIC 1000000PF B (2012)	C403	1-164-937-81	CAP, CHIP CERAMIC 10000PF B 1005
C101	1-128-964-91	CAP, CHIP TANTALUM ELECT 100MF	C215	1-125-837-91	CAP, CHIP CERAMIC 1MF B (1608)	C293	1-137-765-21	CAP, ELECT 47MF	C404	1-125-837-91	CAP, CHIP CERAMIC 1MF B (1608)
C102	1-128-964-91	CAP, CHIP TANTALUM ELECT 100MF	C216	1-125-837-91	CAP, CHIP CERAMIC 1MF B (1608)	C296	1-126-210-21	CAP, ELECT 220MF	C405	1-107-826-91	CAP, CHIP CERAMIC 1000000PF B
C103	1-128-964-91	CAP, CHIP TANTALUM ELECT 100MF	C217	1-125-837-91	CAP, CHIP CERAMIC 1MF B (1608)	C297	1-126-210-21	CAP, ELECT 220MF	C406	1-107-826-91	CAP, CHIP CERAMIC 1000000PF B
C104	1-107-826-91	CAP, CHIP CERAMIC 1000000PF B	C218	1-125-837-91	CAP, CHIP CERAMIC 1MF B (1608)	C298	1-126-210-21	CAP, ELECT 220MF	C409	1-162-969-91	CAP, CERAMIC 68000PF B 1608
C105	1-107-826-91	CAP, CHIP CERAMIC 1000000PF B	C219	1-125-837-91	CAP, CHIP CERAMIC 1MF B (1608)	C301	1-107-826-91	CAP, CHIP CERAMIC 1000000PF B	C410	1-162-969-91	CAP, CERAMIC 68000PF B 1608
C106	1-107-826-91	CAP, CHIP CERAMIC 1000000PF B									
C107	1-107-826-91	CAP, CHIP CERAMIC 1000000PF B	C220	1-125-837-91	CAP, CHIP CERAMIC 1MF B (1608)	C302	1-107-826-91	CAP, CHIP CERAMIC 1000000PF B	C414	1-162-965-91	CAP, CERAMIC 15000PF B 1608
C108	1-107-826-91	CAP, CHIP CERAMIC 1000000PF B	C221	1-125-837-91	CAP, CHIP CERAMIC 1MF B (1608)	C303	1-107-826-91	CAP, CHIP CERAMIC 1000000PF B	C415	1-162-965-91	CAP, CERAMIC 15000PF B 1608
C109	1-107-826-91	CAP, CHIP CERAMIC 1000000PF B	C222	1-125-837-91	CAP, CHIP CERAMIC 1MF B (1608)	C304	1-162-964-91	CAP, CHIP CERAMIC 1000000PF B 1608	C416	1-107-826-91	CAP, CHIP CERAMIC 1000000PF B
C110	1-107-826-91	CAP, CHIP CERAMIC 1000000PF B	C223	1-125-837-91	CAP, CHIP CERAMIC 1MF B (1608)	C305	1-107-826-91	CAP, CHIP CERAMIC 1000000PF B	C417	1-164-379-91	CAP, CHIP CERAMIC 43PF CH 1608
			C224	1-125-837-91	CAP, CHIP CERAMIC 1MF B (1608)	C306	1-164-379-91	CAP, CERAMIC 240PF CH 1608	C418	1-107-826-91	CAP, CHIP CERAMIC 1000000PF B
			C225	1-125-837-91	CAP, CHIP CERAMIC 1MF B (1608)	C307	1-107-826-91	CAP, CHIP CERAMIC 1000000PF B	C419	1-162-965-91	CAP, CERAMIC 15000PF B 1608
			C226	1-125-837-91	CAP, CHIP CERAMIC 1MF B (1608)	C308	1-165-112-91	CAP, CERAMIC 330000PF F (1608)	C420	1-107-826-91	CAP, CHIP CERAMIC 1000000PF B
			C227	1-125-837-91	CAP, CHIP CERAMIC 1MF B (1608)	C309	1-107-826-91	CAP, CHIP CERAMIC 1000000PF B	C421	1-127-820-91	CAP, SQUARE TYPE CHIP 4.7MF
			C228	1-125-837-91	CAP, CHIP CERAMIC 1MF B (1608)	C310	1-162-970-91	CAP, CERAMIC 100000PF B 1608	C422	1-107-826-91	CAP, CHIP CERAMIC 1000000PF B
			C229	1-125-837-91	CAP, CHIP CERAMIC 1MF B (1608)	C311	1-162-916-91	CAP, CERAMIC 122PF CH 1608	C423	1-107-826-91	CAP, CHIP CERAMIC 1000000PF B
			C230	1-125-837-91	CAP, CHIP CERAMIC 1MF B (1608)	C312	1-162-917-91	CAP, CERAMIC 15PF CH 1608	C424	1-127-820-91	CAP, SQUARE TYPE CHIP 4.7MF
			C231	1-125-837-91	CAP, CHIP CERAMIC 1MF B (1608)	C313	1-162-910-91	CAP, CERAMIC 5.0PF CH 1606	C425	1-124-779-21	CAP, ELECT 10MF
			C232	1-125-837-91	CAP, CHIP CERAMIC 1MF B (1608)	C314	1-162-910-91	CAP, CERAMIC 5.0PF CH 1608	C426	1-107-826-91	CAP, CHIP CERAMIC 1000000PF B
			C233	1-125-837-91	CAP, CHIP CERAMIC 1MF B (1608)	C315	1-107-826-91	CAP, CHIP CERAMIC 1000000PF B	C427	1-117-681-21	CAP, ELECT 100MF
			C234	1-125-837-91	CAP, CHIP CERAMIC 1MF B (1608)	C316	1-165-112-91	CAP, CERAMIC 330000PF F (1608)	C430	1-107-826-91	CAP, CHIP CERAMIC 1000000PF B
C121	1-107-826-91	CAP, CHIP CERAMIC 1000000PF B				C317	1-162-970-91	CAP, CERAMIC 100000PF B 1608	C431	1-107-826-91	CAP, CHIP CERAMIC 1000000PF B
C122	1-107-826-91	CAP, CHIP CERAMIC 1000000PF B	C235	1-125-837-91	CAP, CHIP CERAMIC 1MF B (1608)	C318	1-162-970-91	CAP, CERAMIC 100000PF B 1608	C432	1-107-725-91	CAP, CHIP CERAMIC 1000000PF B (2012)
C123	1-107-826-91	CAP, CHIP CERAMIC 1000000PF B	C236	1-125-837-91	CAP, CHIP CERAMIC 1MF B (1608)	C319	1-162-970-91	CAP, CERAMIC 100000PF B 1608	C433	1-107-725-91	CAP, CHIP CERAMIC 1000000PF B (2012)
C124	1-107-826-91	CAP, CHIP CERAMIC 1000000PF B	C237	1-125-837-91	CAP, CHIP CERAMIC 1MF B (1608)	C320	1-162-970-91	CAP, CERAMIC 100000PF B 1608	C434	1-162-964-91	CAP, CHIP CERAMIC 10000PF B 1608
C125	1-107-826-91	CAP, CHIP CERAMIC 1000000PF B	C238	1-125-837-91	CAP, CHIP CERAMIC 1MF B (1608)	C321	1-162-970-91	CAP, CERAMIC 100000PF B 1608	C435	1-115-566-91	CAP, CERAMIC 4.7MF B
			C239	1-125-837-91	CAP, CHIP CERAMIC 1MF B (1608)						
C126	1-107-826-91	CAP, CHIP CERAMIC 1000000PF B	C240	1-125-837-91	CAP, CHIP CERAMIC 1MF B (1608)	C322	1-162-970-91	CAP, CERAMIC 100000PF B 1608	C437	1-107-826-91	CAP, CHIP CERAMIC 1000000PF B
C127	1-107-826-91	CAP, CHIP CERAMIC 1000000PF B	C241	1-125-837-91	CAP, CHIP CERAMIC 1MF B (1608)	C323	1-162-970-91	CAP, CERAMIC 100000PF B 1608	C438	1-107-826-91	CAP, CHIP CERAMIC 1000000PF B
C128	1-107-826-91	CAP, CHIP CERAMIC 1000000PF B	C242	1-128-707-21	CAP, TANTALUM ELECT (SMD) 220	C324	1-162-970-91	CAP, CHIP CERAMIC 100000PF B 1608	C439	1-135-593-21	CAP, ELECT 150MF
C129	1-107-826-91	CAP, CHIP CERAMIC 1000000PF B	C243	1-128-707-21	CAP, TANTALUM ELECT (SMD) 220	C325	1-162-970-91	CAP, CERAMIC 100000PF B 1608	C440	1-135-593-21	CAP, ELECT 100MF
C131	1-162-970-91	CAP, CERAMIC 100000PF B 1608	C244	1-128-707-21	CAP, TANTALUM ELECT (SMD) 220	C326	1-162-970-91	CAP, CERAMIC 100000PF B 1608	C441	1-135-592-21	CAP, ELECT 150MF
			C245	1-128-707-21	CAP, TANTALUM ELECT (SMD) 220						
C132	1-125-777-81	CAP, CHIP CERAMIC 0.1MF B 1005	C247	1-107-826-91	CAP, CHIP CERAMIC 1000000PF B	C327	1-162-970-91	CAP, CERAMIC 100000PF B 1608	C443	1-135-592-21	CAP, ELECT 100MF
C134	1-125-777-81	CAP, CHIP CERAMIC 0.1MF B 1005	C248	1-107-826-91	CAP, CHIP CERAMIC 1000000PF B	C328	1-162-970-91	CAP, CERAMIC 100000PF B 1608	C444	1-107-826-91	CAP, CHIP CERAMIC 1000000PF B
C135	1-107-826-91	CAP, CHIP CERAMIC 1000000PF B	C249	1-115-156-91	CAP, CERAMIC 10000000PF F 1608	C329	1-162-970-91	CAP, CERAMIC 100000PF B 1608	C445	1-117-720-91	CAP, CERAMIC 4.7MF F (2012)
C136	1-162-964-91	CAP, CHIP CERAMIC 10000PF B 1608	C250	1-107-826-91	CAP, CERAMIC 4.7MF (2012)	C330	1-162-970-91	CAP, CERAMIC 100000PF B 1608	C447	1-107-826-91	CAP, CHIP CERAMIC 1000000PF B
C137	1-107-826-91	CAP, CHIP CERAMIC 1000000PF B	C252	1-127-769-91	CAP, CHIP CERAMIC 1000000PF B	C331	1-162-970-91	CAP, CERAMIC 100000PF B 1608	C448	1-162-964-91	CAP, CHIP CERAMIC 10000PF B 1608
						C332	1-162-970-91	CAP, CERAMIC 100000PF B 1608	C449	1-162-964-91	CAP, CHIP CERAMIC 10000PF B 1608
C138	1-107-826-91	CAP, CHIP CERAMIC 1000000PF B	C254	1-107-826-91	CAP, CHIP CERAMIC 1000000PF B	C333	1-162-970-91	CAP, CERAMIC 100000PF B 1608	C452	1-164-156-91	CAP, CHIP CERAMIC 0.1MF F 1608
C139	1-107-826-91	CAP, CHIP CERAMIC 1000000PF B	C255	1-107-826-91	CAP, CHIP CERAMIC 1000000PF B	C334	1-162-970-91	CAP, CERAMIC 100000PF B 1608	C453	1-164-156-91	CAP, CHIP CERAMIC 0.1MF F 1608
C140	1-107-826-91	CAP, CHIP CERAMIC 1000000PF B	C256	1-125-777-81	CAP, CHIP CERAMIC 0.1MF B 1005	C335	1-162-970-91	CAP, CERAMIC 100000PF B 1608	C455	1-127-820-91	CAP, SQUARE TYPE CHIP 4.7MF
C141	1-128-964-91	CAP, CHIP TANTALUM ELECT 100MF	C257	1-125-837-91	CAP, CHIP CERAMIC 1MF B (1608)	C336	1-162-970-91	CAP, CERAMIC 100000PF B 1608			
C142	1-107-826-91	CAP, CHIP CERAMIC 1000000PF B	C261	1-128-084-21	CAP, ELECT (CHIP) 10MF						
C143	1-107-826-91	CAP, CHIP CERAMIC 1000000PF B	C262	1-128-084-21	CAP, ELECT (CHIP) 10MF	C337	1-162-970-91	CAP, CERAMIC 100000PF B 1608	C456	1-127-760-91	CAP, CERAMIC 4.7MF (2012)
C144	1-107-826-91	CAP, CHIP CERAMIC 1000000PF B	C263	1-128-084-21	CAP, ELECT (CHIP) 10MF	C338	1-107-826-91	CAP, CHIP CERAMIC 1000000PF B	C457	1-127-760-91	CAP, CERAMIC 4.7MF (2012)
C145	1-107-826-91	CAP, CHIP CERAMIC 1000000PF B	C265	1-117-720-91	CAP, CERAMIC 4.7MF (2012)	C339	1-125-764-61	CAP, CHIP CERAMIC 1000PF CH	C458	1-162-964-91	CAP, CHIP CERAMIC 10000PF B 1608
C146	1-162-964-91	CAP, CHIP CERAMIC 10000PF B 1608	C266	1-128-084-21	CAP, ELECT (CHIP) 10MF	C340	1-125-764-61	CAP, CHIP CERAMIC 1000PF CH	C460	1-164-174-91	CAP, CERAMIC 82000PF B 1608
C147	1-162-964-91	CAP, CHIP CERAMIC 10000PF B 1608	C267	1-126-210-21	CAP, ELECT 220MF	C341	1-125-764-61	CAP, CHIP CERAMIC 1000PF CH	C461	1-164-174-91	CAP, CERAMIC 82000PF B 1608
C148	1-107-826-91	CAP, CHIP CERAMIC 1000000PF B	C268	1-126-210-21	CAP, ELECT 220MF	C342	1-107-826-91	CAP, CHIP CERAMIC 1000000PF B	C462	1-163-009-91	CAP, CHIP CERAMIC 10000PF B 2012
C149	1-107-826-91	CAP, CHIP CERAMIC 1000000PF B	C269	1-164-160-91	CAP, CERAMIC 20PF CH (1608)	C343	1-107-826-91	CAP, CHIP CERAMIC 1000000PF B	C465	1-125-777-81	CAP, CHIP CERAMIC 0.1MF B 1005
C150	1-162-970-91	CAP, CERAMIC 100000PF B 1608	C270	1-125-777-81	CAP, CHIP CERAMIC 0.1MF B 1005	C344	1-162-970-91	CAP, CERAMIC 100000PF B 1608	C466	1-125-777-81	CAP, CHIP CERAMIC 0.1MF B 1005
C151	1-164-160-91	CAP, CERAMIC 20PF CH (1608)	C271	1-125-837-91	CAP, CHIP CERAMIC 1MF B (1608)	C345	1-125-777-81	CAP, CHIP CERAMIC 0.1MF B 1005	C467	1-125-777-81	CAP, CHIP CERAMIC 0.1MF B 1005
C152	1-164-160-91	CAP, CERAMIC 20PF CH (1608)	C272	1-125-837-91	CAP, CHIP CERAMIC 1MF B (1608)	C355	1-125-777-81	CAP, CHIP CERAMIC 0.1MF B 1005	C468	1-125-777-81	CAP, CHIP CERAMIC 0.1MF B 1005
C153	1-162-970-91	CAP, CERAMIC 100000PF B 1608	C275	1-107-826-91	CAP, CHIP CERAMIC 1000000PF B	C356	1-125-777-81	CAP, CHIP CERAMIC 0.1MF B 1005	C469	1-162-977-91	CAP, CHIP CERAMIC 10000PF B 1608
C154	1-162-970-91	CAP, CERAMIC 100000PF B 1608	C276	1-162-965-91	CAP, CERAMIC 15000PF B 1608	C363	1-107-826-91	CAP, CHIP CERAMIC 1000000PF B	C470	1-107-826-91	CAP, CHIP CERAMIC 1000000PF B
C155	1-107-826-91	CAP, CHIP CERAMIC 1000000PF B	C277	1-162-965-91	CAP, CERAMIC 15000PF B 1608	C364	1-107-826-91	CAP, CHIP CERAMIC 1000000PF B	C471	1-164-397-81	CAP, CHIP CERAMIC 10000PF B 1608
C156	1-107-826-91	CAP, CHIP CERAMIC 1000000PF B	C278	1-113-619-91	CAP, CERAMIC 470000PF F (1608)	C365	1-107-826-91	CAP, CHIP CERAMIC 1000000PF B	C472	1-107-826-91	CAP, CHIP CERAMIC 1000000PF B
C157	1-125-777-81	CAP, CHIP CERAMIC 0.1MF B 1005	C279	1-113-619-91	CAP, CERAMIC 470000PF F (1608)	C366	1-107-826-91	CAP, CHIP CERAMIC 1000000PF B	C473	1-162-970-91	CAP, CERAMIC 100000PF B 1608
C158	1-162-970-91	CAP, CERAMIC 100000PF B 1608	C281	1-115-156-91	CAP, CERAMIC 10000000PF F 1608	C367	1-107-826-91	CAP, CHIP CERAMIC 1000000PF B	C474	1-107-826-91	CAP, CHIP CERAMIC 1000000PF B
C159	1-107-826-91	CAP, CHIP CERAMIC 1000000PF B				C368	1-125-777-81	CAP, CHIP CERAMIC 0.1MF B 1005	C475	1-164-730-91	CAP, CERAMIC 1

Reproduction Prohibited

SCPH-30000 series and SCPH-35000 series


Ref.	Part No.	Description	Ref.	Part No.	Description	Ref.	Part No.	Description	Ref.	Part No.	Description
C477	1-127-760-91	CAP, CERAMIC 4.7MF (2012)	C631	1-162-968-91	CAP,CHIP CERAMIC 4700PF B 1608	C882	1-115-467-91	CAP, CHIP CERAMIC0.22MF B 1608	C898	1-164-156-91	CAP, CHIP CERAMIC 0.1MF F 1608
C478	1-127-760-91	CAP, CERAMIC 4.7MF (2012)	C633	1-164-156-91	CAP, CHIP CERAMIC 0.1MF F 1608	C883	1-162-927-91	CAP, CERAMIC 100PF CH 1608	C899	1-164-156-150	CAP, CHIP CERAMIC 0.1MF F 1608
C479	1-125-837-91	CAP, CHIP CERAMIC 1MF B (1608)	C634	1-164-156-91	CAP,CHIP CERAMIC 0.1MF F 1608	C884	1-162-927-91	CAP, CERAMIC 100PF CH 1608	C900	1-167-826-91	CAP, CHIP CERAMIC 100000PF B
C480	1-107-725-91	CAP, CERAMIC 100000PF B (2012)	C635	1-162-968-91	CAP,CHIP CERAMIC 4700PF B 1608	C885	1-162-927-91	CAP, CERAMIC 100PF CH 1608	C902	1-107-826-91	CAP, CHIP CERAMIC 100000PF B
C481	1-107-826-91	CAP, CHIP CERAMIC 100000PF B	C636	1-107-826-91	CAP,CHIP CERAMIC 1000000PF B 1608	C886	1-162-927-91	CAP, CERAMIC 100PF CH 1608	C903	1-107-826-91	CAP, CHIP CERAMIC 100000PF B
C482	1-107-826-91	CAP, CHIP CERAMIC 100000PF B	C637	1-162-964-91	CAP,CHIP CERAMIC 1000PF B 1608	C887	1-162-927-91	CAP, CERAMIC 100PF CH 1608	C904	1-107-826-91	CAP, CHIP CERAMIC 100000PF B
C483	1-107-826-91	CAP, CHIP CERAMIC 100000PF B	C638	1-162-970-91	CAP, CERAMIC 10000PF B 1608	C888	1-162-927-91	CAP, CERAMIC 100PF CH 1608	C905	1-107-826-91	CAP, CHIP CERAMIC 100000PF B
C484	1-137-765-21	CAP, ELECT 47MF	C639	1-164-217-91	CAP,CERAMIC 150PF CH 1608	C889	1-107-826-91	CAP, CHIP CERAMIC 100000PF B	C906	1-107-826-91	CAP, CHIP CERAMIC 100000PF B
C487	1-131-999-91	CAP, SOLID ELECT 150MF	C640	1-135-259-91	CAP,CHIP TANTALUM ELECT 10MF 1608	C890	1-104-851-91	CAP,CHIP TANTALUM ELECT 10MF 1608	C907	1-107-826-91	CAP, CHIP CERAMIC 100000PF B
C488	1-115-505-91	CAP, CERAMIC 4.7MF B (1608)	C642	1-164-156-91	CAP, CHIP CERAMIC 0.1MF F 1608	C891	1-135-908-21	CAP, TANTALUM ELECT 22MF 1608	C908	1-107-826-91	CAP, CHIP CERAMIC 100000PF B
C489	1-131-999-21	CAP, SOLID ELECT 150MF	C643	1-107-826-91	CAP, CHIP CERAMIC 100000PF B	C892	1-164-738-91	CAP,CERAMIC 1200PF B 1608	C909	1-107-826-91	CAP, CHIP CERAMIC 100000PF B
C490	1-126-209-21	CAP, ELECT 100MF	C644	1-164-230-91	CAP,CERAMIC 220PF CH 1608	C893	1-107-826-91	CAP, CHIP CERAMIC 100000PF B	C910	1-107-826-91	CAP, CHIP CERAMIC 100000PF B
C491	1-126-209-21	CAP, ELECT 100MF	C645	1-165-176-91	CAP,CERAMIC 47000PF B 1608	C894	1-104-851-91	CAP,CHIP TANTALUM ELECT 10MF 1608	C911	1-107-826-91	CAP, CHIP CERAMIC 100000PF B
C492	1-107-826-91	CAP,CHIP CERAMIC 100000PF B 1608	C646	1-162-968-91	CAP,CHIP CERAMIC 1000PF B 1608	C895	1-135-908-21	CAP, TANTALUM ELECT 22MF 1608	C912	1-107-826-91	CAP, CHIP CERAMIC 100000PF B
C493	1-107-826-91	CAP,CHIP CERAMIC 100000PF B 1608	C647	1-117-863-91	CAP, CHIP CERAMIC 0.47MF B 1608	C896	1-164-738-91	CAP,CERAMIC 1200PF B 1608	C913	1-107-826-91	CAP, CHIP CERAMIC 100000PF B
C494	1-107-725-91	CAP, CERAMIC 100000PF B (2012)	C648	1-164-156-91	CAP, CHIP CERAMIC 0.1MF F 1608	C897	1-164-738-91	CAP,CERAMIC 1200PF B 1608	C914	1-107-826-91	CAP, CHIP CERAMIC 100000PF B
C495	1-125-837-91	CAP, CHIP CERAMIC 1MF B (1608)	C649	1-162-970-91	CAP, CERAMIC 10000PF B 1608	C898	1-162-966-91	CAP, CERAMIC 2200PF B 1608	C915	1-107-826-91	CAP, CHIP CERAMIC 100000PF B
C496	1-107-862-91	CAP, CERAMIC 1000000PF B 3216	C650	1-164-230-91	CAP, CERAMIC 220PF CH 1608	C899	1-162-966-91	CAP, CERAMIC 2200PF B 1608	C916	1-107-826-91	CAP, CHIP CERAMIC 100000PF B
C497	1-162-964-91	CAP,CHIP CERAMIC 10000PF B 1608	C651	1-162-966-91	CAP, CERAMIC 2200PF B 1608	C900	1-162-966-91	CAP, CERAMIC 2200PF B 1608	C917	1-107-826-91	CAP, CHIP CERAMIC 100000PF B
C498	1-127-760-91	CAP, CERAMIC 4.7MF (2012)	C652	1-107-826-91	CAP, CHIP CERAMIC 1000000PF B	C901	1-162-966-91	CAP, CERAMIC 2200PF B 1608	C918	1-107-826-91	CAP, CHIP CERAMIC 100000PF B
C499	1-164-505-91	CAP,CHIP CERAMIC 2.2MF F 2012	C653	1-162-966-91	CAP, CERAMIC 2200PF B 1608	C902	1-162-966-91	CAP, CERAMIC 2200PF B 1608	C919	1-107-826-91	CAP, CHIP CERAMIC 100000PF B
C501	1-164-346-91	CAP, CHIP CERAMIC 1MF F (2012)	C654	1-164-156-91	C	C903	1-162-966-91	CAP, CERAMIC 2200PF B 1608	C920	1-107-826-91	CAP, CHIP CERAMIC 100000PF B
C502	1-113-619-91	CAP, CERAMIC 470000PF F (1608)	C655	1-135-259-91	CAP, CHIP TANTALUM ELECT 10MF 1608	C904	1-115-467-91	CAP, CHIP CERAMIC0.22MF B 1608	C921	1-107-826-91	CAP, CHIP CERAMIC 100000PF B
C503	1-163-009-91	CAP,CHIP CERAMIC 1000PF B 2012	C656	1-164-156-91	CAP, CHIP CERAMIC 0.1MF F 1608	C905	1-163-038-91	CAP, CERAMIC 4.7MF B (2012)	C922	1-107-826-91	CAP, CHIP CERAMIC 100000PF B
C504	1-164-346-91	CAP, CHIP CERAMIC 1MF F (2012)	C657	1-164-230-91	CAP,CERAMIC 220PF CH 1608	C906	1-127-692-91	CAP, CHIP CERAMIC 10MF B 3225	C923	1-107-826-91	CAP, CHIP CERAMIC 100000PF B
C507	1-113-619-91	CAP, CERAMIC 470000PF F (1608)	C658	1-164-230-91	CAP,CERAMIC 220PF CH 1608	C907	1-107-826-91	CAP, CHIP CERAMIC 1000000PF B	C924	1-107-826-91	CAP, CHIP CERAMIC 100000PF B
C508	1-113-619-91	CAP, CERAMIC 470000PF F (1608)	C659	1-107-826-91	CAP, CHIP CERAMIC 1000000PF B	C908	1-125-837-91	CAP, CHIP CERAMIC 1MF B (1608)	C925	1-107-826-91	CAP, CHIP CERAMIC 100000PF B
C509	1-113-619-91	CAP, CERAMIC 470000PF F (1608)	C661	1-164-156-91	CAP, CHIP CERAMIC 0.1MF F 1608	C909	1-107-826-91	CAP, CHIP CERAMIC 100000PF B	C926	1-107-826-91	CAP, CHIP CERAMIC 100000PF B
C510	1-113-619-91	CAP, CERAMIC 470000PF F (1608)	C662	1-164-156-91	CAP, CHIP CERAMIC 0.1MF F 1608	C910	1-107-826-91	CAP, CHIP CERAMIC 100000PF B	C927	1-107-826-91	CAP, CHIP CERAMIC 100000PF B
C511	1-113-619-91	CAP, CERAMIC 470000PF F (1608)	C663	1-135-259-91	CAP,CHIP TANTALUM ELECT 10MF 1608	C911	1-107-826-91	CAP, CHIP CERAMIC 100000PF B	C928	1-107-826-91	CAP, CHIP CERAMIC 100000PF B
C512	1-113-619-91	CAP, CERAMIC 470000PF F (1608)	C665	1-164-156-91	CAP, CHIP CERAMIC 0.1MF F 1608	C912	1-107-826-91	CAP, CHIP CERAMIC 100000PF B	C929	1-107-826-91	CAP, CHIP CERAMIC 100000PF B
C514	1-113-619-91	CAP, CERAMIC 470000PF F (1608)	C666	1-164-156-91	CAP, CHIP CERAMIC 0.1MF F 1608	C913	1-125-837-91	CAP, CHIP CERAMIC 1MF B (1608)	C930	1-107-826-91	CAP, CHIP CERAMIC 100000PF B
C515	1-113-619-91	CAP, CERAMIC 470000PF F (1608)	C667	1-164-156-91	CAP, CHIP CERAMIC 0.1MF F 1608	C914	1-162-970-91	CAP, CERAMIC 10000PF B 1608	C931	1-107-826-91	CAP, CHIP CERAMIC 100000PF B
C517	1-113-619-91	CAP, CERAMIC 470000PF F (1608)	C668	1-164-156-91	CAP, CHIP CERAMIC 0.1MF F 1608	C915	1-162-970-91	CAP, CERAMIC 10000PF B 1608	C932	1-107-826-91	CAP, CHIP CERAMIC 100000PF B
C518	1-113-619-91	CAP, CERAMIC 470000PF F (1608)	C669	1-107-826-91	CAP, CHIP CERAMIC 1000000PF B	C916	1-107-826-91	CAP, CHIP CERAMIC 1000000PF B	C933	1-107-826-91	CAP, CHIP CERAMIC 100000PF B
C521	1-125-837-91	CAP, CHIP CERAMIC 1MF B (1608)	C671	1-164-156-91	CAP, CHIP CERAMIC 0.1MF F 1608	C917	1-107-823-91	CAP, CHIP CERAMIC 470000PF B (2012)	C934	1-107-826-91	CAP, CHIP CERAMIC 100000PF B
C522	1-164-156-91	CAP, CHIP CERAMIC 0.1MF F 1608	C672	1-164-156-91	CAP, CHIP CERAMIC 0.1MF F 1608	C918	1-107-826-91	CAP, CHIP CERAMIC 1000000PF B	C935	1-107-826-91	CAP, CHIP CERAMIC 100000PF B
C523	1-162-970-91	CAP, CERAMIC 10000PF B 1608	C673	1-164-156-91	CAP, CHIP CERAMIC 0.1MF F 1608	C919	1-107-826-91	CAP, CHIP CERAMIC 1000000PF B	C936	1-107-826-91	CAP, CHIP CERAMIC 100000PF B
C524	1-113-619-91	CAP, CERAMIC 470000PF F (1608)	C674	1-164-156-91	CAP, CHIP CERAMIC 0.1MF F 1608	C920	1-107-826-91	CAP, CHIP CERAMIC 1000000PF B	C937	1-107-826-91	CAP, CHIP CERAMIC 100000PF B
C525	1-113-619-91	CAP, CERAMIC 470000PF F (1608)	C675	1-164-156-91	CAP, CHIP CERAMIC 0.1MF F 1608	C921	1-107-826-91	CAP, CHIP CERAMIC 1000000PF B	C938	1-107-826-91	CAP, CHIP CERAMIC 100000PF B
C527	1-162-964-91	CAP,CHIP CERAMIC 10000PF B 1608	C676	1-164-156-91	CAP, CHIP CERAMIC 0.1MF F 1608	C922	1-107-826-91	CAP, CHIP CERAMIC 1000000PF B	C939	1-107-826-91	CAP, CHIP CERAMIC 100000PF B
C528	1-125-837-91	CAP, CHIP CERAMIC 1MF B (1608)	C685	1-117-863-91	CAP, CHIP CERAMIC0.47MF B 1608	C923	1-107-826-91	CAP, CHIP CERAMIC 1000000PF B	C940	1-107-826-91	CAP, CHIP CERAMIC 100000PF B
C529	1-128-908-21	CAP, ELECT (CHIP) 3.3MF	C688	1-162-964-91	CAP,CHIP CERAMIC 1000PF B 1608	C924	1-107-826-91	CAP, CHIP CERAMIC 1000000PF B	C941	1-107-826-91	CAP, CHIP CERAMIC 100000PF B
C530	1-128-908-21	CAP, ELECT (CHIP) 3.3MF	C689	1-162-912-91	CAP, CERAMIC 7.0PF CH 1608	C925	1-107-826-91	CAP, CHIP CERAMIC 1000000PF B	C942	1-107-826-91	CAP, CHIP CERAMIC 100000PF B
C533	1-113-619-91	CAP, CERAMIC 470000PF F (1608)	C701	1-162-927-91	CAP, CERAMIC 100PF CH 1608	C926	1-164-738-91	CAP,CERAMIC 500PF CH (1608)	C943	1-107-826-91	CAP, CHIP CERAMIC 100000PF B
C534	1-113-619-91	CAP, CERAMIC 470000PF F (1608)	C702	1-162-927-91	CAP, CERAMIC 100PF CH 1608	C927	1-162-964-91	CAP,CHIP CERAMIC 10000PF B 1608	C944	1-107-826-91	CAP, CHIP CERAMIC 100000PF B
C535	1-113-619-91	CAP, CERAMIC 470000PF F (1608)	C703	1-125-764-91	CAP, CHIP CERAMIC 100PF CH 1608	C928	1-164-738-91	CAP,CERAMIC 500PF CH (1608)	C945	1-107-826-91	CAP, CHIP CERAMIC 100000PF B
C536	1-113-619-91	CAP, CERAMIC 470000PF F (1608)	C711	1-135-599-21	CAP, ELECT 39MF	C929	1-164-738-91	CAP,CERAMIC 500PF CH (1608)	C946	1-107-826-91	CAP, CHIP CERAMIC 100000PF B
C537	1-113-619-91	CAP, CERAMIC 470000PF F (1608)	C712	1-162-970-91	CAP, CERAMIC 10000PF B 1608	C930	1-164-156-91	CAP, CHIP CERAMIC 0.1MF F 1608	C947	1-107-826-91	CAP, CHIP CERAMIC 100000PF B
C538	1-113-619-91	CAP, CERAMIC 470000PF F (1608)	C713	1-131-999-21	CAP, SOLID ELECT 150MF	C931	1-164-156-91	CAP, CHIP CERAMIC 0.1MF F 1608	C948	1-107-826-91	CAP, CHIP CERAMIC 100000PF B
C539	1-113-619-91	CAP, CERAMIC 470000PF F (1608)	C717	1-135-599-21	CAP, ELECT 39MF	C932	1-164-156-91	CAP, CHIP CERAMIC 0.1MF F 1608	C949	1-107-826-91	CAP, CHIP CERAMIC 100000PF B
C540	1-113-619-91	CAP, CERAMIC 470000PF F (1608)	C718	1-135-599-21	CAP, ELECT 39MF	C933	1-164-156-91	CAP, CHIP CERAMIC 0.1MF F 1608	C950	1-107-826-91	CAP, CHIP CERAMIC 100000PF B
C541	1-113-619-91	CAP, CERAMIC 470000PF F (1608)	C722	1-164-937-81	CAP,CHIPCERAMIC 10000PF B 1005	C934	1-164-156-91	CAP, CHIP CERAMIC 0.1MF F 1608	C951	1-107-826-91	CAP, CHIP CERAMIC 100000PF B
C542	1-162-927-91	CAP, CERAMIC 100PF CH 1608	C723	1-137-765-21	CAP, ELECT 47MF	C935	1-164-156-91	CAP, CHIP CERAMIC 0.1MF F 1608	C952	1-107-826-91	CAP, CHIP CERAMIC 100000PF B
C544	1-137-765-21	CAP, ELECT 47MF	C724	1-137-765-21	CAP, ELECT 47MF	C936	1-164-156-91	CAP, CHIP CERAMIC 0.1MF F 1608	C953	1-107-826-91	CAP, CHIP CERAMIC 100000PF B
C545	1-137-765-21	CAP, ELECT 47MF	C725	1-124-779-21	CAP, ELECT 10MF	C937	1-164-156-91	CAP, CHIP CERAMIC 0.1MF F 1608	C954	1-107-826-91	CAP, CHIP CERAMIC 100000PF B
C581	1-164-156-91	CAP, CHIP CERAMIC 0.1MF F 1608	C726	1-162-964-91	CAP,CHIP CERAMIC 1000PF B 1608	C938	1-164-156-91	CAP, CHIP CERAMIC 0.1MF F 1608	C955	1-107-826-91	CAP, CHIP CERAMIC 100000PF B
C603	1-162-964-91	CAP,CHIP CERAMIC 10000PF B 1608	C727	1-164-937-81	CAP,CHIPCERAMIC 10000PF B 1005	C939	1-164-156-91	CAP, CHIP CERAMIC 0.1MF F 1608	C956	1-107-826-91	CAP, CHIP CERAMIC 100000PF B
C605	1-162-964-91	CAP,CHIP CERAMIC 10000PF B 1608	C730	1-127-820-91	CAP, SQUARE TYPE CHIP 4.7MF	C940	1-164-156-91	CAP, CHIP CERAMIC 0.1MF F 1608	C957	1-107-826-91	CAP, CHIP CERAMIC 100000PF B
C606	1-162-964-91	CAP,CHIP CERAMIC 10000PF B 1608	C731	1-164-245-91	CAP,CERAMIC 150000PF B 1608	C941	1-164-156-91	CAP, CHIP CERAMIC 0.1MF F 1608	C958	1-107-826-91	CAP, CHIP CERAMIC 100000PF B
C607	1-162-968-91	CAP,CHIP CERAMIC 4700PF B 1608	C792	1-184-851-91	CAP,CHIP TANTALUM ELECT 10MF 1608	C942	1-164-156-91	CAP, CHIP CERAMIC 0.1MF F 1608	C959	1-107-826-91	CAP, CHIP CERAMIC 100000PF B
C608	1-107-826-91	CAP, CHIP CERAMIC 100000PF B	C793	1-164-565-91	CAP, CHIP CERAMIC 2.2MF F 2012	C943	1-164-156-91	CAP, CHIP CERAMIC 0.1MF F 1608	C960	1-107-826-91	CAP, CHIP CERAMIC 100000PF B
C623	1-164-156-91	CAP, CHIP CERAMIC 0.1MF F 1608	C794	1-163-009-91	CAP, CHIP CERAMIC 1000PF B 2012	C944	1-164-156-91	CAP, CHIP CERAMIC 0.1MF F 1608	C961	1-107-826-91	CAP, CHIP CERAMIC 100000PF B
C624	1-162-927-91	CAP, CERAMIC 100PF CH 1608	C795	1-163-009-91	CAP,CHIP CERAMIC 1000PF B 2012	C945	1-164-156-91	CAP, CHIP CERAMIC 0.1MF F 1608	C962	1-107-826-91	CAP, CHIP CERAMIC 100000PF B
C625	1-164-156-91	CAP, CHIP CERAMIC 0.1MF F 1608	C797	1-162-927-91	CAP, CERAMIC 100PF CH 1608	C946	1-164-156-91	CAP, CHIP CERAMIC 0.1MF F 1608	C963	1-107-826-91	CAP, CHIP CERAMIC 100000PF B
C626	1-164-156-91	CAP, CHIP CERAMIC 0.1MF F 1608	C798	1-162-927-91	CAP, CERAMIC 100PF CH 1608						

Ref.	Part No.	Description	Ref.	Part No.	Description	Ref.	Part No.	Description	Ref.	Part No.	Description
C966	1-107-826-91	CAP, CHIP CERAMIC 100000PF 8	D500	8-719-941-21	DIODE DAP202UT106	IC206	8-752-099-53	IC CXA3525BR-T4	L418	1-424-788-21	COIL, CHOKE (SMD) 10UH
C967	1-125-837-91	CAP, CHIP CERAMIC 1MF B (1608)	D501	8-719-882-76	DIODE CL-201TLY-C-TU	IC207	8-759-391-69	IC MC78M05CDTRK	L419	1-424-797-21	COIL, CHOKE 10UH
C968	1-125-837-91	CAP, CHIP CERAMIC 1MF B (1608)	D801	8-719-865-68	DIODE MAZF04700LS0	IC207	8-759-691-08	IC JCP78M05CDTRK	L411	1-419-949-21	COIL, CHOKE 10UH
C980	1-107-826-91	CAP, CHIP CERAMIC 100000PF 8	D801	8-719-882-00	DIODE MM324V7T1	IC207	8-759-697-61	IC L78M05CDT-TR(P)	L411	1-424-789-41	COIL, CHOKE 10UH
C981	1-107-826-91	CAP, CHIP CERAMIC 100000PF 8	D802	8-719-865-68	DIODE MAZF04700LS0	IC208	8-759-683-81	IC SN74CBT1G125DCKR	L411	1-424-789-41	COIL, CHOKE (SMD) 10UH
C982	1-107-826-91	CAP, CHIP CERAMIC 100000PF 8	D802	8-719-882-00	DIODE MM324V7T1	IC209	8-759-697-68	IC MK3871CFBE	L411	1-424-916-21	COIL, CHOKE (SMD) 10UH
C983	1-107-826-91	CAP, CHIP CERAMIC 100000PF 8				IC303	8-759-699-11	IC CX0891068	L412	1-411-197-21	COIL, DO CONVERTER
C984	1-107-826-91	CAP, CHIP CERAMIC 100000PF 8			<FUSE>	IC305	6-700-119-01	IC TSN8(YEL)	L412	1-424-788-21	COIL, CHOKE (SMD) 10UH
C985	1-107-826-91	CAP, CHIP CERAMIC 100000PF 8	Δ F003	1-576-434-21	FUSE, CHIP	IC305	6-700-549-01	IC K4Q153212MJC60T	L412	1-424-797-21	COIL, CHOKE 10UH
C986	1-107-826-91	CAP, CHIP CERAMIC 100000PF 8	Δ F003	1-576-434-41	FUSE, CHIP	IC306	8-759-680-07	IC MM3051NULE	L413	1-424-789-41	COIL, CHOKE (SMD) 10UH
C987	1-107-826-91	CAP, CHIP CERAMIC 100000PF 8	Δ F003	1-576-438-21	FUSE, CHIP	IC306	8-759-697-24	IC S-817A12ANB-CUB-T2	L413	1-424-789-21	COIL, CHOKE (SMD) 10UH
C988	1-107-826-91	CAP, CHIP CERAMIC 100000PF 8			<FERRITE BEAD>	IC402	8-759-837-34	IC TMP87C807U-2A69(EL)	L413	1-424-799-21	COIL, CHOKE (SMD) 10UH
C989	1-107-826-91	CAP, CHIP CERAMIC 100000PF 8				IC403	6-700-665-01	IC MM1550AFBE	L413	1-424-916-21	COIL, CHOKE (SMD) 10UH
C990	1-125-837-91	CAP, CHIP CERAMIC 1MF B (1608)	F8102	1-469-667-21	FERRITE, EMI (SMD)	IC405	8-759-560-17	IC RS5C348A-E2	L414	1-424-789-41	COIL, CHOKE (SMD) 10UH
		<CONNECTOR>	F8103	1-469-667-21	FERRITE, EMI (SMD)	IC406	8-759-698-67	IC BR2880F-E2	L414	1-424-798-21	COIL, CHOKE (SMD) 10UH
CN201	1-815-631-11	CONNECTOR, SQUARE TYPE 12P	F8201	1-414-813-21	FERRITE, EMI (SMD)	IC407	8-759-712-66	IC PQ818P2012P	L414	1-424-916-21	COIL, CHOKE (SMD) 10UH
CN202	1-794-206-21	CONNECTOR, FFC/FPC (ZIF) 36P	F8202	1-500-113-22	BEAD, FERRITE (CHIP)	IC408	8-759-712-65	IC PQ870AZ012P	L801	1-400-073-21	INDUCTOR, CHIP 4.7UH (2518)
CN303	1-694-822-11	TERMINAL BOARD (1LINK/USB)	F8203	1-500-113-22	BEAD, FERRITE (CHIP)	IC409	6-700-664-01	IC SN1052160BTR	L801	1-469-524-91	INDUCTOR 4.7UH (NLFV25)
CN401	1-815-630-11	PIN, CONNECTOR 4P	F8204	1-500-113-22	BEAD, FERRITE (CHIP)	IC409	8-759-689-89	IC SN1040890BTR	L802	1-400-073-21	INDUCTOR, CHIP 4.7UH (2518)
CN402	1-815-640-21	PIN, CONNECTOR (PC BOARD) 2P	F8205	1-500-113-22	BEAD, FERRITE (CHIP)	IC410	8-749-018-42	IC SI-3026LSA-TL	L802	1-469-524-91	INDUCTOR 4.7UH (NLFV25)
CN403	1-784-650-21	CONNECTOR 2P	F8206	1-500-113-22	BEAD, FERRITE (CHIP)	IC411	8-759-680-06	IC MM3051NULE	L803	1-414-394-41	INDUCTOR (SMD) 2.2UH
CN406	1-779-345-11	CONNECTOR, FFC/FPC 7P	F8303	1-400-154-21	FERRITE, EMI	IC412	8-749-018-41	IC SI-3025LSA-TL			<COIL>
CN501	1-476-736-11	TRANSMITTER UNIT, LIGHT	F8305	1-414-555-21	FERRITE, EMI (SMD)	IC413	6-700-233-01	IC MM15732NLE	LF191	1-419-100-21	COIL, COMMON-MODE CHOKE
CN504	1-815-632-11	CONNECTOR BOARD TO BOARD 110P	F8308	1-400-154-21	FERRITE, EMI	IC413	8-759-598-12	IC LP29851TMSX-3.5	LF801	1-416-405-21	FILTER, CHIP EMI (COMMON MODE)
CN801	1-794-237-21	CONNECTOR, FFC/FPC 38P	F8310	1-414-555-21	FERRITE, EMI (SMD)	IC414	8-759-669-41	IC TA7808F(TE16L)			<LINK>
CN802	1-770-619-41	PIN, CONNECTOR 2P	F8313	1-469-324-21	FERRITE, EMI (SMD)	IC414	8-759-473-16	IC BA17808FP-E2	Δ PS001	1-576-519-21	FUSE, MICRO (1608 TYPE)
CN803	1-779-206-21	CONNECTOR, FFC(LIF(NON-ZIF))4P	F8314	1-469-324-21	FERRITE, EMI (SMD)	IC414	8-759-697-62	IC NJM7808DLA(Te1)	Δ PS002	1-533-940-21	RINK, CHIP IC
CN804	1-794-194-21	CONNECTOR, FFC/FPC 13P	F8315	1-469-324-21	FERRITE, EMI (SMD)	IC415	8-759-581-11	IC NJM125F(Te2)	Δ PS002	1-576-282-21	RINK, SQUARE CHIP TYPE IC
CN805	1-770-619-21	PIN, CONNECTOR 2P	F8316	1-469-324-21	FERRITE, EMI (SMD)	IC501	6-700-231-01	IC CXD9611AR	Δ PS003	1-533-940-21	RINK, CHIP IC
CN806	1-770-619-81	PIN, CONNECTOR 2P	F8317	1-469-110-21	FERRITE, EMI (SMD)	IC501	8-759-699-10	IC CXD9611R	Δ PS003	1-576-282-21	RINK, SQUARE CHIP TYPE IC
		<DIODE>	F8318	1-469-110-21	FERRITE, EMI (SMD)	IC502	6-701-050-01	IC MSM10V976F-S0TKR1	Δ PS004	1-533-940-21	RINK, CHIP IC
D201	8-719-065-70	DIODE MAZF12000LS0	F8319	1-469-110-21	FERRITE, EMI (SMD)	IC502	8-759-712-79	IC K4C1516120-TL50T00	Δ PS004	1-576-282-21	RINK, SQUARE CHIP TYPE IC
D201	8-719-082-01	DIODE MM3212V71	F8320	1-469-110-21	FERRITE, EMI (SMD)	IC502	8-759-712-81	IC GW71V18163CT-ST	Δ PS005	1-576-398-21	RINK, IC (CCP2E63)
D202	6-500-009-01	DIODE RSE6.8XN-TR	F8321	1-469-110-21	FERRITE, EMI (SMD)	IC502	8-759-712-82	IC SDW18165CTM65	Δ PS006	1-533-915-41	RINK, CHIP IC
D202	6-500-044-01	DIODE DF6A6.8FU(Te8SR)	F8322	1-469-110-21	FERRITE, EMI (SMD)	IC504	8-752-408-53	IC CXD2942AR	Δ PS006	1-576-259-21	RINK, IC
D202	6-500-045-01	DIODE MAZB068H0LS0	F8323	1-469-110-21	FERRITE, EMI (SMD)	IC504	8-752-410-55	IC CXD2942BR	Δ PS007	1-533-282-21	LINK, IC
D202	6-500-045-01	DIODE MAZB068H0LS0	F8324	1-469-110-21	FERRITE, EMI (SMD)	IC517	8-759-667-10	IC CS4335-KS	Δ PS008	1-533-940-21	RINK, CHIP IC
D202	6-500-045-01	DIODE MAZB068H0LS0	F8404	1-469-667-21	FERRITE, EMI (SMD)	IC603	8-759-370-11	IC NJM2100V-TE2	Δ PS008	1-576-282-21	RINK, SQUARE CHIP TYPE IC
D202	6-500-045-01	DIODE MAZB068H0LS0	F8405	1-469-667-21	FERRITE, EMI (SMD)	IC605	8-752-414-53	IC CXD1869A0-2	Δ PS009	1-533-915-41	RINK, CHIP IC
D203	6-500-009-01	DIODE RSE6.8XN-TR	F8406	1-469-667-21	FERRITE, EMI (SMD)	IC605	8-752-413-11	IC CXD1869B0	Δ PS009	1-576-259-21	RINK, IC
D203	6-500-044-01	DIODE DF6A6.8FU(Te8SR)	F8407	1-469-667-21	FERRITE, EMI (SMD)	IC801	6-700-585-01	IC SP3727AFAP0MR	Δ PS010	1-533-282-21	LINK, IC
D203	6-500-045-01	DIODE MAZB068H0LS0	F8408	1-469-667-21	FERRITE, EMI (SMD)	IC802	8-759-697-05	IC BA5815FM-E2	Δ PS011	1-576-519-21	FUSE, MICRO (1608 TYPE)
D203	6-500-053-01	DIODE DF6A6.8FU71	F8409	1-469-667-21	FERRITE, EMI (SMD)	IC803	8-759-588-00	IC BA6664FM-E2	Δ PS012	1-533-915-41	RINK, CHIP IC
D208	6-500-009-01	DIODE RSE6.8XN-TR	F8801	1-469-562-21	FERRITE, EMI (SMD)	IC805	8-759-712-38	IC HD74HC16G6CME	Δ PS012	1-576-259-21	RINK, IC
D208	6-500-844-01	DIODE DF6A6.8FU(Te8SR)	F8802	1-469-562-21	FERRITE, EMI (SMD)	IC805	8-759-712-63	IC MC74VHC10660FT1	Δ PS013	1-533-940-21	RINK, CHIP IC
D208	6-500-045-01	DIODE MAZB068H0LS0			<FILTER>	IC806	8-759-337-40	IC NJM2504(VTE2)			
D208	6-500-053-01	DIODE DF6A6.8FU71	FL201	1-469-991-21	EMI FILTER (SMD)	IC807	8-759-391-69	IC MC78M05CDTRK	Δ PS013	1-576-282-21	RINK, SQUARE CHIP TYPE IC
D301	8-719-027-76	DIODE 1SS357-TPH3	FL202	1-469-991-21	EMI FILTER (SMD)	IC807	8-759-697-61	IC L78M05CDT-TR(P)	Δ PS014	1-533-282-21	LINK, IC
D301	8-719-058-24	DIODE R8501V-40TE-17	FL203	1-469-991-21	EMI FILTER (SMD)			<INDUCTOR>	Δ PS015	1-533-915-41	RINK, CHIP IC
D301	8-719-071-87	DIODE MA785-(TX),S0	FL301	1-234-725-21	NETWORK, RC (USB)						<TRANSISTOR>
D302	8-719-027-76	DIODE 1SS357-TPH3			<IC>	L102	1-469-525-91	INDUCTOR 10UH (NLFV25)	D201	8-729-026-50	TRANSISTOR 2SA1037AK-T146-QR
D302	8-719-058-24	DIODE R8501V-40TE-17	IC101	8-759-831-20	IC CY2212ZC-2T	L102	1-469-967-21	INDUCTOR, CHIP 10UH	D204	8-729-049-77	TRANSISTOR HN1081F-GR(TSLSONY)
D302	8-719-071-87	DIODE MA785-(TX),S0	IC101	8-759-834-04	IC SN104971APMR	L203	1-469-525-91	INDUCTOR 10UH (NLFV25)	D205	8-729-013-22	TRANSISTOR HN1081F-GR(Te8SR)
D402	8-719-074-34	DIODE RB4950-T146	IC102	8-800-800-01	IC TC59RM7166B-80VELZ	L203	1-469-967-21	INDUCTOR, CHIP 10UH	D205	8-729-055-85	TRANSISTOR UMT1N-TN
D402	8-719-081-64	DIODE HRM02028TL	IC102	8-759-660-80	IC TC59RM7166B-80VELZ	L205	1-469-525-91	INDUCTOR 10UH (NLFV25)	D205	8-729-427-71	TRANSISTOR XP4461-TX
D403	8-719-074-34	DIODE RB4950-T146	IC102	8-759-660-80	IC TC59RM7166B-80VELZ	L205	1-469-967-21	INDUCTOR, CHIP 10UH	Q401	8-729-054-35	TRANSISTOR HAT2070R-EL
D403	8-719-081-64	DIODE HRM02028TL	IC102	8-759-837-33	IC K4R271669A-SCK8T00	L401	1-411-197-21	COIL, DO CONVERTER	Q401	8-729-055-58	TRANSISTOR SI4894DY-T1
D403	8-719-081-64	DIODE HRM02028TL	IC103	6-800-800-01	IC TC59RM7166B-80VELZ	L401	1-424-788-21	COIL, CHOKE (SMD) 10UH	Q402	8-729-053-79	TRANSISTOR 1RF7901D1-TR
D403	8-719-081-64	DIODE HRM02028TL	IC103	8-759-660-80	IC TC59RM7166B-80VELZ	L404	1-424-854-21	COIL (SMD), CHOKE 2.0UH	Q402	8-729-053-80	TRANSISTOR SI4830DY-T1
D404	8-719-033-15	DIODE HN2002FU-TE8SR	IC104	8-759-699-09	IC CXD96156B	L404	1-424-914-21	COIL, CHOKE (SMD) 2.2UH	Q402	8-729-054-68	TRANSISTOR FDS69865
D405	8-719-066-98	DIODE R8051L-40TE25	IC105	8-759-689-90	IC LM74C1MX-3	L484	1-424-920-21	COIL, CHOKE (SMD) 2.4UH	Q404	8-729-052-07	TRANSISTOR HAT2064R-EL
D405	8-719-078-04	DIODE EC3103SL-TE12L	IC205	6-700-230-01	IC SC447288PBEB	L480	1-419-990-21	COIL, CHOKE 5.0UH	Q404	8-729-054-64	TRANSISTOR 1RF7455-TR
D407	8-719-074-34	DIODE RB4950-T146	IC206	8-752-093-56	IC CXA3525R-T4	L408	1-419-902-21	COIL, CHOKE (SMD) 5.0UH	Q405	8-729-014-43	TRANSISTOR RN1094-TE8SR
D407	8-719-081-64	DIODE HRM02028TL				L410	1-411-197-21	COIL, DO CONVERTER	Q405	8-729-052-36	TRANSISTOR UMH2NTN
D408	8-719-074-34	DIODE RB4950-T146									


Ref.	Part No.	Description	Ref.	Part No.	Description	Ref.	Part No.	Description	Ref.	Part No.	Description
Q405	8-729-427-47	TRANSISTOR XP4213-TXE	R134	1-218-965-81	RES, CHIP 10K	R361	1-218-937-81	RES, CHIP 47	R463	1-216-857-91	RES, CHIP 1.0M (1608)
Q406	8-729-053-79	TRANSISTOR IRF7901D1-TR	R139	1-218-801-91	RES, CHIP 22 (1608)	R362	1-216-805-91	RES, CHIP 47 (1608)	R464	1-216-864-91	CONDUCTOR, CHIP (1608)
Q406	8-729-053-80	TRANSISTOR ST4838DY-T1	R145	1-218-953-81	RES, CHIP 1.0K (1608)	R364	1-216-805-91	RES, CHIP 47 (1608)			
Q406	8-729-054-68	TRANSISTOR FDS6986S	R146	1-216-921-91	RES, CHIP 1.0K (1608)						
Q407	8-729-046-04	TRANSISTOR FDS6690A	R147	1-216-821-91	RES, CHIP 1.0K (1608)	R365	1-216-805-91	RES, CHIP 47 (1608)	R465	1-216-845-91	RES, CHIP 100K (1608)
Q407	8-729-054-66	TRANSISTOR HAT2071R-EL	R150	1-216-864-91	CONDUCTOR, CHIP (1608)	R366	1-218-937-81	RES, CHIP 47 (1608)	R466	1-216-821-91	RES, CHIP 1.0K (1608)
			R185	1-216-829-91	RES, CHIP 4.7K (1608)	R367	1-216-805-91	RES, CHIP 47 (1608)	R467	1-216-833-91	RES, CHIP 10K (1608)
Q408	8-729-051-61	TRANSISTOR IRF7807D1-TR	R188	1-216-829-91	RES, CHIP 4.7K (1608)	R368	1-216-805-91	RES, CHIP 47 (1608)	R478	1-216-845-91	RES, CHIP 100K (1608)
Q408	8-729-054-67	TRANSISTOR FDS6690S	R196	1-218-933-81	RES, CHIP 22 (1608)	R394	1-216-833-91	RES, CHIP 10K (1608)	R472	1-218-871-91	RES, CHIP 10K (1608)
Q409	8-729-029-14	TRANSISTOR DTC144EUA-T106	R202	1-216-833-91	RES, CHIP 10K (1608)	R395	1-218-957-81	RES, CHIP 2.2K (1608)	R473	1-218-863-91	RES, CHIP 4.7K (1608)
Q410	8-729-013-97	TRANSISTOR RN1304-TE85L	R216	1-216-809-91	RES, CHIP 100 (1608)	R401	1-218-969-91	RES, CHIP 22K (1608)	R474	1-216-853-91	RES, CHIP 470K (1608)
Q410	8-729-029-14	TRANSISTOR DTC144EUA-T106	R217	1-218-859-91	RES, CHIP 3.3K (1608)	R402	1-216-837-91	RES, CHIP 22K (1608)	R475	1-216-857-91	RES, CHIP 1.0M (1608)
Q411	8-729-053-93	TRANSISTOR FDS4435	R218	1-218-847-91	RES, CHIP 1.0K (1608)	R403	1-216-849-91	RES, CHIP 220K (1608)	R476	1-216-845-91	RES, CHIP 100K (1608)
Q411	8-729-054-36	TRANSISTOR UP417166-E2	R219	1-218-851-91	RES, CHIP 1.5K (1608)	R404	1-216-845-91	RES, CHIP 100K (1608)	R503	1-216-803-91	RES, CHIP 33 (1608)
Q412	6-550-026-01	TRANSISTOR IRF7328-TR	R220	1-218-933-81	RES, CHIP 22 (1608)	R405	1-216-845-91	RES, CHIP 100K (1608)	R504	1-216-803-91	RES, CHIP 33 (1608)
Q412	6-550-036-01	TRANSISTOR FDS4935	R225	1-216-833-91	RES, CHIP 10K (1608)	R406	1-216-811-91	RES, CHIP 150 (1608)	R505	1-216-803-91	RES, CHIP 33 (1608)
Q413	8-729-054-34	TRANSISTOR FDN304P	R226	1-218-965-81	RES, CHIP 10K (1608)	R407	1-216-811-91	RES, CHIP 150 (1608)	R506	1-216-809-91	RES, CHIP 100 (1608)
Q413	8-729-054-38	TRANSISTOR IRLML6401-TR	R228	1-218-965-81	RES, CHIP 10K (1608)	R408	1-216-839-91	RES, CHIP 33K (1608)	R509	1-216-821-91	RES, CHIP 1.0K (1608)
Q413	8-750-593-78	IC SI2305DS-T1	R236	1-216-809-91	RES, CHIP 100 (1608)	R410	1-218-983-91	RES, CHIP 33K (1608)	R513	1-216-805-91	RES, CHIP 47 (1608)
Q415	8-729-052-41	TRANSISTOR 2SC4541 (2TL SONY1)	R237	1-216-829-91	RES, CHIP 4.7K (1608)	R411	1-218-883-91	RES, CHIP 33K (1608)	R516	1-216-809-91	RES, CHIP 100 (1608)
Q415	8-729-209-77	TRANSISTOR 2SC2873Y-TE12L	R244	1-218-831-91	RES, CHIP 220 (1608)	R412	1-218-883-91	RES, CHIP 33K (1608)	R517	1-216-809-91	RES, CHIP 100 (1608)
Q505	8-729-021-09	TRANSISTOR RM4904 (TE85R)	R245	1-218-831-91	RES, CHIP 220 (1608)	R413	1-218-883-91	RES, CHIP 33K (1608)	R522	1-216-833-91	RES, CHIP 10K (1608)
Q506	8-729-056-15	TRANSISTOR JMK207188	R246	1-218-831-91	RES, CHIP 220 (1608)	R415	1-216-839-91	RES, CHIP 33K (1608)	R531	1-216-809-91	RES, CHIP 100 (1608)
Q600	8-729-016-26	TRANSISTOR 2SK1958-T1	R247	1-216-801-91	RES, CHIP 22 (1608)	R416	1-216-839-91	RES, CHIP 33K (1608)	R574	1-216-812-91	RES, CHIP 180 (1608)
Q600	8-729-048-50	TRANSISTOR 2SK3018-T106	R251	1-216-837-91	RES, CHIP 22K (1608)	R417	1-216-813-91	RES, CHIP 220 (1608)	R575	1-216-850-91	RES, CHIP 270K (1608)
Q603	8-729-017-33	TRANSISTOR RN1706-TE85R	R252	1-216-839-91	RES, CHIP 33K (1608)	R418	1-216-817-91	RES, CHIP 470 (1608)	R576	1-216-833-91	RES, CHIP 10K (1608)
Q601	6-550-008-01	TRANSISTOR UM83UN-TN	R253	1-216-833-91	RES, CHIP 10K (1608)	R419	1-216-833-91	RES, CHIP 10K (1608)	R577	1-216-818-91	RES, CHIP 560 (1608)
Q601	6-550-014-01	TRANSISTOR SSM6N15FU (TE85R)	R258	1-216-824-91	RES, CHIP 1.0K (1608)	R420	1-216-833-91	RES, CHIP 10K (1608)	R578	1-216-818-91	RES, CHIP 560 (1608)
Q601	6-550-017-01	TRANSISTOR XP0487800LS0	R259	1-208-923-81	RES, CHIP 33K (1605)	R421	1-216-790-91	RES, CHIP 2.7 (1608)	R579	1-216-833-91	RES, CHIP 10K (1608)
Q602	8-729-014-02	TRANSISTOR RN1306-TE85L	R259	1-216-824-91	RES, CHIP 1.0K (1608)	R422	1-216-797-91	RES, CHIP 10 (1608)	R580	1-216-850-91	RES, CHIP 270K (1608)
Q602	8-729-014-02	TRANSISTOR RN1306-TE85L	R261	1-218-961-81	RES, CHIP 4.7K (1608)	R423	1-216-790-91	RES, CHIP 2.7 (1608)	R604	1-216-845-91	RES, CHIP 100K (1608)
Q602	8-729-014-02	TRANSISTOR RN1306-TE85L	R263	1-216-825-91	RES, CHIP 2.2K (1608)	R424	1-216-797-91	RES, CHIP 10 (1608)	R613	1-216-833-91	RES, CHIP 10K (1608)
Q602	8-729-029-13	TRANSISTOR DTC143ZUA-T106	R264	1-216-821-91	RES, CHIP 1.0K (1608)	R426	1-218-879-91	RES, CHIP 22K (1608)	R614	1-216-833-91	RES, CHIP 10K (1608)
Q604	8-729-055-22	TRANSISTOR 2SA1734 (TE12L)	R265	1-216-821-91	RES, CHIP 1.0K (1608)	R427	1-218-871-91	RES, CHIP 10K (1608)	R619	1-216-833-91	RES, CHIP 10K (1608)
Q604	8-729-103-96	TRANSISTOR 2SB798-T10L	R270	1-218-853-91	RES, CHIP 1.0K (1608)	R428	1-216-309-91	RES, CHIP 5.6 (2012)	R620	1-216-833-91	RES, CHIP 10K (1608)
Q605	8-729-055-22	TRANSISTOR 2SA1734 (TE12L)	R272	1-218-859-91	RES, CHIP 3.3K (1608)	R429	1-216-833-91	RES, CHIP 10K (1608)	R623	1-216-837-91	RES, CHIP 22K (1608)
Q605	8-729-103-96	TRANSISTOR 2SB798-T10L	R273	1-218-851-91	RES, CHIP 1.5K (1608)	R430	1-216-813-91	RES, CHIP 220 (1608)	R624	1-216-850-91	RES, CHIP 270K (1608)
Q606	8-729-016-26	TRANSISTOR 2SK1958-T1	R277	1-218-853-91	RES, CHIP 1.0K (1608)	R431	1-216-813-91	RES, CHIP 220 (1608)	R625	1-216-864-91	CONDUCTOR, CHIP (1608)
Q606	8-729-048-50	TRANSISTOR 2SK3018-T106	R278	1-218-859-91	RES, CHIP 3.3K (1608)	R432	1-216-829-91	RES, CHIP 4.7K (1608)	R627	1-216-837-91	RES, CHIP 22K (1608)
Q608	6-550-008-01	TRANSISTOR UM83UN-TN	R279	1-218-851-91	RES, CHIP 1.5K (1608)	R433	1-216-829-91	RES, CHIP 4.7K (1608)	R630	1-216-837-91	RES, CHIP 22K (1608)
Q608	6-550-014-01	TRANSISTOR SSM6N15FU (TE85R)	R281	1-216-833-91	RES, CHIP 10K (1608)	R434	1-216-810-91	RES, CHIP 120 (1608)	R636	1-216-864-91	CONDUCTOR, CHIP (1608)
Q608	6-550-017-01	TRANSISTOR XP0487800LS0	R292	1-216-829-91	RES, CHIP 4.7K (1608)	R435	1-216-810-91	RES, CHIP 120 (1608)	R640	1-216-864-91	CONDUCTOR, CHIP (1608)
Q614	8-729-014-02	TRANSISTOR RN1306-TE85L	R294	1-208-857-81	RES, CHIP 56 (1605)	R438	1-218-850-91	RES, CHIP 1.3K (1608)	R644	1-216-837-91	RES, CHIP 22K (1608)
Q614	8-729-029-13	TRANSISTOR DTC143ZUA-T106	R300	1-208-904-81	RES, CHIP 5.1K (1605)	R439	1-218-857-91	RES, CHIP 2.7K (1608)	R649	1-216-833-91	RES, CHIP 10K (1608)
		<RESISTOR>	R309	1-211-987-91	RES, CHIP 56 (1608)	R440	1-218-859-91	RES, CHIP 3.3K (1608)	R651	1-216-835-91	RES, CHIP 15K (1608)
R101	1-220-884-81	RES, CHIP 39 (1005)	R310	1-211-987-91	RES, CHIP 56 (1608)	R441	1-218-879-91	RES, CHIP 22K (1608)	R653	1-216-845-91	RES, CHIP 100K (1608)
R102	1-208-866-81	RES, CHIP 130 (1005)	R311	1-216-829-91	RES, CHIP 4.7K (1608)	R442	1-218-969-91	RES, CHIP 8.2K (1608)	R654	1-216-845-91	RES, CHIP 100K (1608)
R103	1-220-884-81	RES, CHIP 39 (1005)	R312	1-208-857-81	RES, CHIP 56 (1005)	R443	1-218-965-91	RES, CHIP 5.0K (1608)	R657	1-216-839-91	RES, CHIP 33K (1608)
R104	1-208-866-81	RES, CHIP 130 (1005)	R315	1-218-866-91	RES, CHIP 6.2K (1608)	R444	1-218-881-91	RES, CHIP 27K (1608)	R658	1-216-833-91	RES, CHIP 10K (1608)
R106	1-216-809-91	RES, CHIP 100 (1608)	R316	1-216-797-91	RES, CHIP 10 (1608)	R445	1-218-849-91	RES, CHIP 1.2K (1608)	R660	1-216-833-91	RES, CHIP 10K (1608)
R107	1-216-809-91	RES, CHIP 100 (1608)	R320	1-219-570-91	RES, CHIP 10M (1608)	R446	1-216-817-91	RES, CHIP 470 (1608)	R661	1-216-833-91	RES, CHIP 10K (1608)
R109	1-218-961-81	RES, CHIP 4.7K (1608)	R321	1-216-813-91	RES, CHIP 220 (1608)	R447	1-216-817-91	RES, CHIP 470 (1608)	R667	1-216-861-91	RES, CHIP 2.2M (1608)
R110	1-211-983-91	RES, CHIP 39 (1608)	R322	1-216-857-91	RES, CHIP 1.0M (1608)	R448	1-218-965-81	RES, CHIP 10K (1608)	R668	1-216-853-91	RES, CHIP 470K (1608)
R111	1-211-983-91	RES, CHIP 39 (1608)	R324	1-216-833-91	RES, CHIP 10K (1608)	R449	1-216-833-91	RES, CHIP 10K (1608)	R669	1-216-845-91	RES, CHIP 100K (1608)
R112	1-211-989-91	RES, CHIP 68 (1608)	R327	1-216-833-91	RES, CHIP 10K (1608)	R450	1-216-817-91	RES, CHIP 470 (1608)	R670	1-216-833-91	RES, CHIP 10K (1608)
R113	1-211-989-91	RES, CHIP 68 (1608)	R328	1-216-841-91	RES, CHIP 47K (1608)	R451	1-218-940-81	RES, CHIP 470 (1608)	R671	1-216-827-91	RES, CHIP 3.3K (1608)
R114	1-211-983-91	RES, CHIP 39 (1608)	R329	1-216-805-91	RES, CHIP 47 (1608)	R452	1-216-797-91	RES, CHIP 10 (1608)	R672	1-218-808-91	RES, CHIP 51K (1608)
R115	1-211-983-91	RES, CHIP 39 (1608)	R330	1-211-973-91	RES, CHIP 15 (1608)	R453	1-216-797-91	RES, CHIP 10 (1608)	R673	1-216-827-91	RES, CHIP 3.3K (1608)
R116	1-211-983-91	RES, CHIP 39 (1608)	R331	1-216-805-91	RES, CHIP 47 (1608)	R454	1-216-797-91	RES, CHIP 10 (1608)	R674	1-216-845-91	RES, CHIP 100K (1608)
R117	1-211-983-91	RES, CHIP 39 (1608)	R347	1-211-906-91	RES, CHIP 51 (1608)	R455	1-216-845-91	RES, CHIP 100K (1608)	R675	1-216-839-91	RES, CHIP 33K (1608)
R118	1-211-973-91	RES, CHIP 15 (1608)	R349	1-216-821-91	RES, CHIP 1.0K (1608)	R456	1-216-821-91	RES, CHIP 1.0K (1608)	R678	1-216-829-91	RES, CHIP 4.7K (1608)
R119	1-211-973-91	RES, CHIP 15 (1608)	R350	1-216-807-91	RES, CHIP 68 (1608)	R457	1-218-987-91	RES, CHIP 47K (1608)	R689	1-216-845-91	RES, CHIP 100K (1608)
R120	1-211-973-91	RES, CHIP 15 (1608)	R351	1-216-805-91	RES, CHIP 47 (1608)	R458	1-216-797-91	RES, CHIP 10 (1608)	R694	1-216-835-91	RES, CHIP 15K (1608)
R121	1-211-973-91	RES, CHIP 15 (1608)	R352	1-216-797-91	RES, CHIP 10 (1608)	R459	1-216-833-91	RES, CHIP 10K (1608)	R696	1-216-846-91	RES, CHIP 120K (1608)
R131	1-216-833-91	RES, CHIP 10K (1608)	R357	1-218-933-81	RES, CHIP 22 (1608)	R460	1-218-871-91	RES, CHIP 10K (1608)	R698	1-216-835-91	RES, CHIP 15K (1608)
R132	1-216-833-91	RES, CHIP 10K (1608)	R360	1-218-937-81	RES, CHIP 47 (1608)	R461	1-216-309-91	RES, CHIP 5.6 (2012)	R699	1-216-833-91	RES, CHIP 10K (1608)
						R462	1-216-849-91	RES, CHIP 220K (1608)	R806	1-216-833-91	RES, CHIP 10K (1608)

Ref.	Part No.	Description	Ref.	Part No.	Description	Ref.	Part No.	Description	Ref.	Part No.	Description
R807	1-216-809-91	RES, CHIP 100 (1608)	RB118	1-234-710-21	RES, CHIP NETWORK 47X8 (3816)	△ TH082	1-804-384-21	THERMISTOR, POSITIVE			
R808	1-216-833-91	RES, CHIP 10K (1608)	RB121	1-233-423-21	RES, CHIP NETWORK 47 (3216)	△ TH093	1-533-817-21	THERMISTOR			
R813	1-216-158-91	RES, CHIP 22 (3216)	RB122	1-233-423-21	RES, CHIP NETWORK 47 (3216)	△ TH093	1-804-384-21	THERMISTOR, POSITIVE			
R814	1-216-158-91	RES, CHIP 22 (3216)	RB123	1-234-710-21	RES, CHIP NETWORK 47X8 (3816)			<CRYSTAL>			
R815	1-216-797-91	RES, CHIP 10 (1608)	RB124	1-234-710-21	RES, CHIP NETWORK 47X8 (3816)	X101	1-781-640-21	VIBRATOR, CRYSTAL			
R816	1-216-158-91	RES, CHIP 22 (3216)	RB125	1-234-710-21	RES, CHIP NETWORK 47X8 (3816)	X101	1-781-640-41	VIBRATOR, CRYSTAL			
R817	1-216-158-91	RES, CHIP 22 (3216)	RB132	1-234-710-21	RES, CHIP NETWORK 47X8 (3816)	X202	1-781-857-21	OSCILLATOR, CRYSTAL			
R818	1-216-797-91	RES, CHIP 10 (1608)	RB133	1-234-710-21	RES, CHIP NETWORK 47X8 (3816)	X202	1-781-857-41	OSCILLATOR, CRYSTAL			
R819	1-216-889-91	RES, CHIP 56K (1608)	RB135	1-234-710-21	RES, CHIP NETWORK 47X8 (3816)	X301	1-781-856-21	VIBRATOR, CRYSTAL			
R820	1-216-881-91	RES, CHIP 27K (1608)	RB139	1-233-423-21	RES, CHIP NETWORK 47 (3216)	X301	1-781-856-41	VIBRATOR, CRYSTAL			
R821	1-216-881-91	RES, CHIP 27K (1608)	RB131	1-233-423-21	RES, CHIP NETWORK 47 (3216)	X302	1-781-768-21	VIBRATOR, CRYSTAL			
R822	1-218-881-91	RES, CHIP 27K (1608)	RB294	1-233-414-21	RES, CHIP NETWORK 4.7K (3216)	X401	1-760-496-22	VIBRATOR, LITHIUM NIOBATE			
R823	1-218-890-91	RES, CHIP 62K (1608)	RB295	1-233-412-21	RES, CHIP NETWORK 1.0K (3216)	X402	1-760-928-41	VIBRATOR, CRYSTAL			
R826	1-218-871-91	RES, CHIP 10K (1608)	RB296	1-234-598-21	RES, CHIP NETWORK 75X4 (3216)	X402	1-767-300-21	VIBRATOR, CRYSTAL			
R827	1-218-871-91	RES, CHIP 10K (1608)	RB297	1-234-599-21	RES, CHIP NETWORK 180X4 (3216)						
R828	1-218-881-91	RES, CHIP 27K (1608)	RB298	1-234-598-21	RES, CHIP NETWORK 75X4 (3216)	X402	1-781-266-41	VIBRATOR, CRYSTAL			
R839	1-216-815-91	RES, CHIP 330 (1608)	RB303	1-233-412-21	RES, CHIP NETWORK 1.0K (3216)	X402	1-781-266-61	VIBRATOR, CRYSTAL			
R831	1-216-810-91	RES, CHIP 120 (1608)	RB305	1-233-575-21	RES, CHIP NETWORK 22 (1608)						
R834	1-208-911-81	RES, CHIP 10K (1005)	RB310	1-233-414-21	RES, CHIP NETWORK 4.7K (3216)						
R837	1-208-922-81	RES, CHIP 30K (1005)	RB311	1-233-679-91	RES, NETWORK (1608) 470 (1608)						
R838	1-208-922-81	RES, CHIP 30K (1005)	RB312	1-233-706-91	RES, NETWORK 220 (1608)						
R840	1-208-916-81	RES, CHIP 16K (1005)	RB314	1-233-681-91	RES, NETWORK (1608) 4.7K (1608)						
R843	1-208-922-81	RES, CHIP 30K (1005)	RB317	1-233-423-21	RES, CHIP NETWORK 47 (3216)						
R846	1-208-922-81	RES, CHIP 30K (1005)	RB318	1-233-423-21	RES, CHIP NETWORK 47 (3216)						
R847	1-218-877-81	RES, CHIP 100K (1005)	RB319	1-233-423-21	RES, CHIP NETWORK 47 (3216)						
R850	1-208-911-81	RES, CHIP 10K (1005)	RB320	1-233-423-21	RES, CHIP NETWORK 47 (3216)						
R851	1-208-916-81	RES, CHIP 16K (1005)	RB321	1-233-423-21	RES, CHIP NETWORK 47 (3216)						
R852	1-218-873-91	RES, CHIP 12K (1608)	RB322	1-233-412-21	RES, CHIP NETWORK 1.0K (3216)						
R853	1-216-298-91	RES, CHIP 2.2 (2012)	RB323	1-233-412-21	RES, CHIP NETWORK 1.0K (3216)						
R854	1-216-298-91	RES, CHIP 2.2 (2012)	RB324	1-233-412-21	RES, CHIP NETWORK 1.0K (3216)						
R855	1-216-298-91	RES, CHIP 2.2 (2012)	RB325	1-233-412-21	RES, CHIP NETWORK 1.0K (3216)						
R856	1-216-298-91	RES, CHIP 2.2 (2012)	RB326	1-233-412-21	RES, CHIP NETWORK 1.0K (3216)						
R866	1-216-845-91	RES, CHIP 100K (1608)	RB327	1-233-415-21	RES, CHIP NETWORK 10K (3216)						
R868	1-216-849-91	RES, CHIP 220K (1608)	RB328	1-233-414-21	RES, CHIP NETWORK 4.7K (3216)						
R870	1-216-849-91	RES, CHIP 220K (1608)	RB329	1-233-783-91	RES, NETWORK 22 (1608)						
R871	1-218-896-91	RES, CHIP 110K (1608)	RB332	1-233-575-21	RES, CHIP NETWORK 22 (1608)						
R872	1-216-844-91	RES, CHIP 82K (1608)	RB402	1-233-803-91	RES, NETWORK 1.5K (1608)						
R873	1-216-839-91	RES, CHIP 33K (1608)	RB403	1-233-789-91	RES, NETWORK 10K (1608)						
R874	1-216-828-91	RES, CHIP 3.9K (1608)	RB405	1-233-803-91	RES, NETWORK 1.5K (1608)						
R875	1-216-823-91	RES, CHIP 82 (2012)	RB406	1-233-792-91	RES, NETWORK 100K (1608)						
R876	1-216-823-91	RES, CHIP 82 (2012)	RB408	1-233-415-21	RES, CHIP NETWORK 10K (3216)						
R877	1-216-823-91	RES, CHIP 82 (2012)	RB409	1-233-415-21	RES, CHIP NETWORK 10K (3216)						
R878	1-216-823-91	RES, CHIP 82 (2012)	RB410	1-233-415-21	RES, CHIP NETWORK 10K (3216)						
R879	1-216-823-91	RES, CHIP 82 (2012)	RB511	1-233-423-21	RES, CHIP NETWORK 47 (3216)						
R880	1-216-823-91	RES, CHIP 82 (2012)	RB517	1-234-711-21	RES, CHIP NETWORK 22X8 (3816)						
R881	1-216-823-91	RES, CHIP 82 (2012)	RB519	1-234-711-21	RES, CHIP NETWORK 22X8 (3816)						
R882	1-216-823-91	RES, CHIP 82 (2012)	RB521	1-234-711-21	RES, CHIP NETWORK 22X8 (3816)						
R901	1-218-937-81	RES, CHIP 47 (1608)	RB523	1-234-711-21	RES, CHIP NETWORK 22X8 (3816)						
R902	1-218-937-81	RES, CHIP 47 (1608)	RB525	1-234-711-21	RES, CHIP NETWORK 22X8 (3816)						
R914	1-216-881-91	RES, CHIP 22 (1608)	RB527	1-234-711-21	RES, CHIP NETWORK 22X8 (3816)						
R975	1-216-881-91	RES, CHIP 22 (1608)	RB529	1-234-711-21	RES, CHIP NETWORK 22X8 (3816)						
		<RESISTOR BLOCK>	RB531	1-234-711-21	RES, CHIP NETWORK 22X8 (3816)						
RB101	1-234-496-21	ARRAY, RESISTOR 39 (3216)	RB602	1-233-415-21	RES, CHIP NETWORK 10K (3216)						
RB102	1-234-496-21	ARRAY, RESISTOR 39 (3216)	RB603	1-233-415-21	RES, CHIP NETWORK 10K (3216)						
RB103	1-234-496-21	ARRAY, RESISTOR 39 (3216)	RB606	1-233-412-21	RES, CHIP NETWORK 1.0K (3216)						
RB104	1-234-496-21	ARRAY, RESISTOR 39 (3216)	RB607	1-233-415-21	RES, CHIP NETWORK 10K (3216)						
RB105	1-234-496-21	ARRAY, RESISTOR 39 (3216)	RB609	1-233-423-21	RES, CHIP NETWORK 47 (3216)						
RB106	1-234-496-21	ARRAY, RESISTOR 39 (3216)	RB611	1-233-415-21	RES, CHIP NETWORK 10K (3216)						
RB107	1-234-710-21	RES, CHIP NETWORK 47X8 (3816)	RB612	1-233-789-91	RES, NETWORK 10K (1608)						
RB109	1-233-423-21	RES, CHIP NETWORK 47 (3216)	RB613	1-233-789-91	RES, NETWORK 10K (1608)						
RB110	1-234-710-21	RES, CHIP NETWORK 47X8 (3816)	RB803	1-233-415-21	RES, CHIP NETWORK 10K (3216)						
RB112	1-233-423-21	RES, CHIP NETWORK 47 (3216)			<THERMISTOR>						
RB113	1-234-710-21	RES, CHIP NETWORK 47X8 (3816)	△ TH001	1-533-817-21	THERMISTOR						
RB114	1-234-710-21	RES, CHIP NETWORK 47X8 (3816)	△ TH001	1-804-384-21	THERMISTOR, POSITIVE						
RB117	1-234-710-21	RES, CHIP NETWORK 47X8 (3816)	△ TH002	1-533-817-21	THERMISTOR						


SW MOUNT

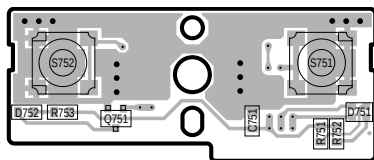

SW-365
A side

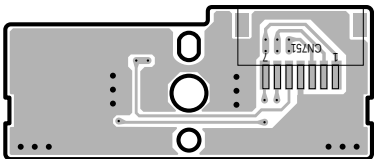

SW-365
B side

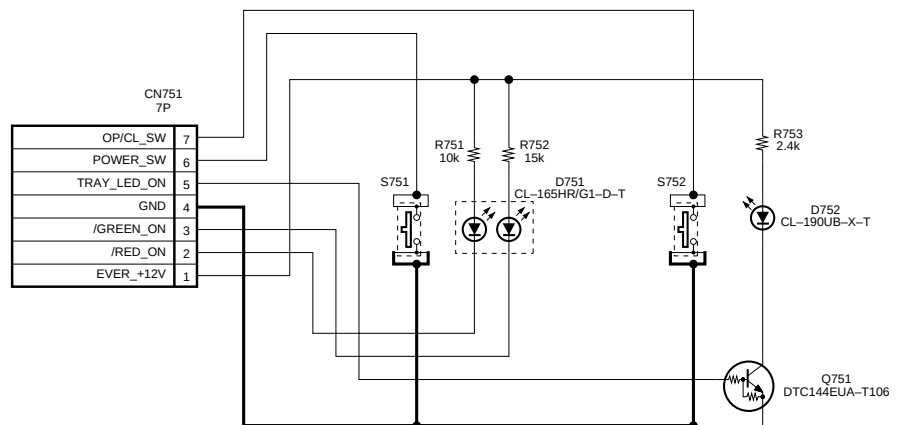

SW-365


SWITCH MOUNTED CIRCUIT BOARD

Ref-No.	Part No.	Description	Remark	Place code
53	A-6714-472-A	SW-365 MOUNT	for SWITCH ASSY BLOCK(A-6705-426-A)	#25SW
CN751	1-785-470-21	CONNECTOR, FPC(LIF(NON-ZIF))7P		#25SW
D751	8-719-078-90	DIODE CL-165HR/G1-D-T		#25SW
D752	8-719-080-04	DIODE CL-190UB-X-T		#25SW
Q751	8-729-013-97	TRANSISTOR RN1304-TE85L		#25SW
Q751	8-729-029-14	TRANSISTOR DTC144EUA-T106		#25SW
R751	1-216-833-91	RES, CHIP 10K (1608)		#25SW
R752	1-216-835-91	RES, CHIP 15K (1608)		#25SW
R753	1-216-993-91	RES, CHIP 2.4K (1608)		#25SW
S751	1-771-917-21	SWITCH, TACTILE		#25SW
S752	1-771-917-21	SWITCH, TACTILE		#25SW


Reproduction Prohibited

GB MOUNT


SCPH-30000 series and SCPH-35000 series

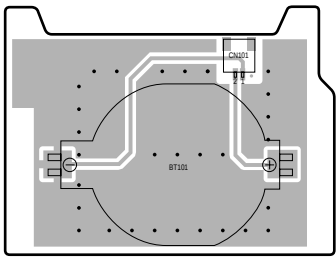

GB-005
A side



GB-005

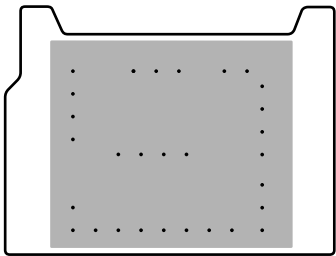

GB-005
B side

GB MOUNTED CIRCUIT BOARD				
Ref-No.	Part No.	Description	Remark	Place code
GB005	A-6714-473-A	GB-005 MOUNT	for Combine with GH013(31/41)	#2568
BT101	1-756-076-21	HOLDER, LITHIUM BATTERY		#2568
CN101	1-815-648-21	PIN, CONNECTOR (PC BOARD) 2P		#2568