



8.3 级维修

8-1.框图

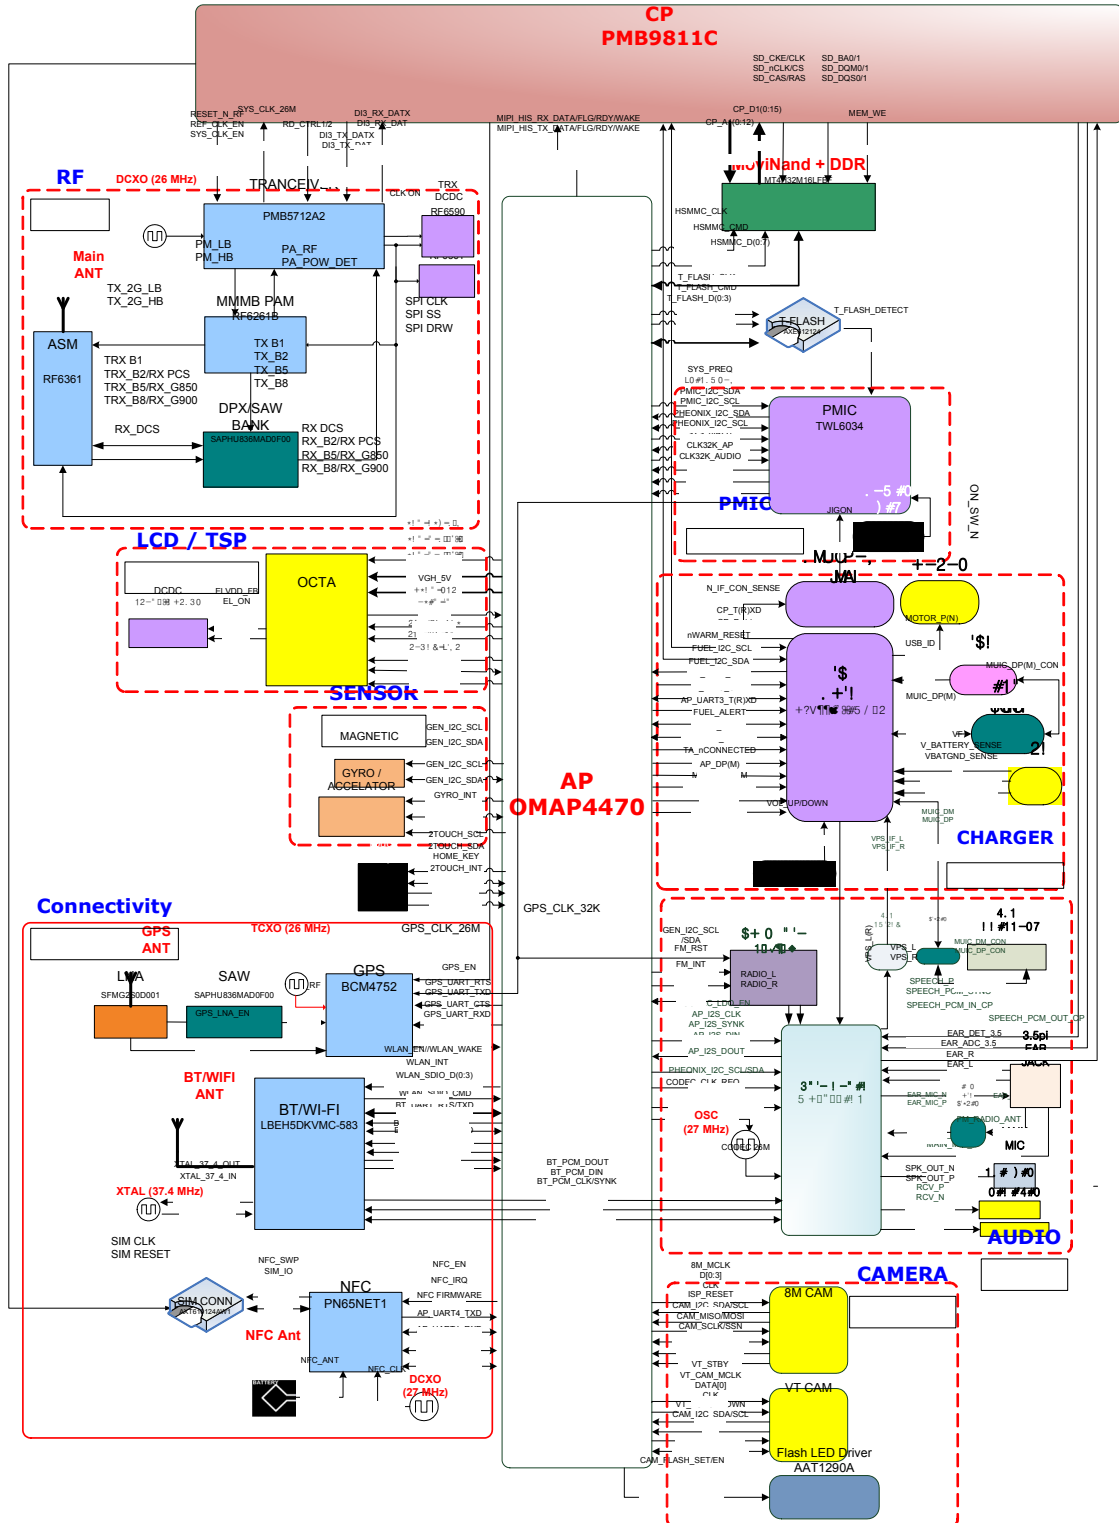


8-2.主板图

8-2-1.顶部

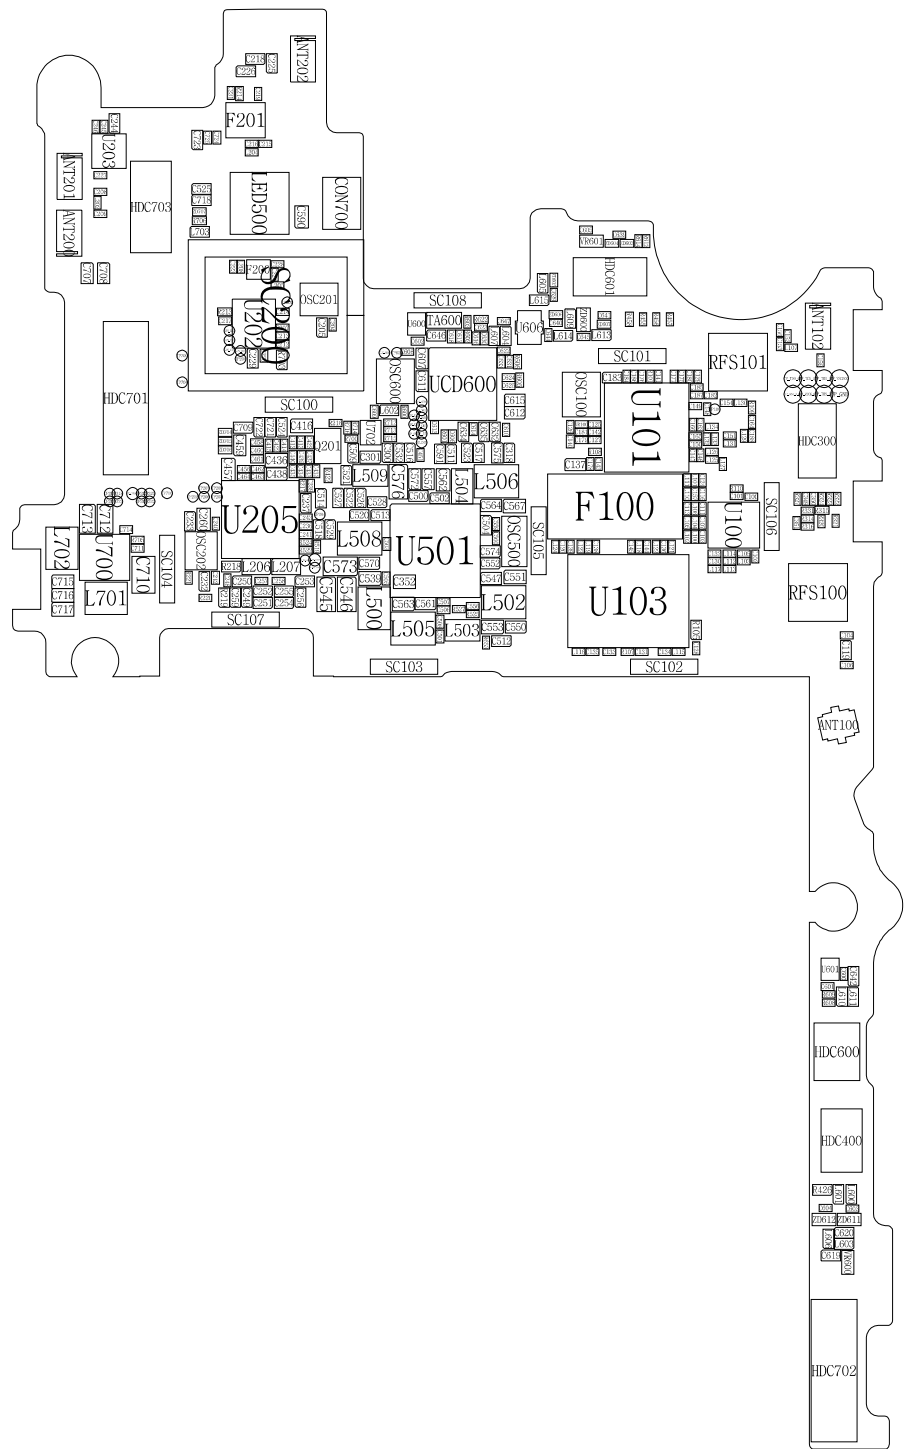


8-2-2.底部

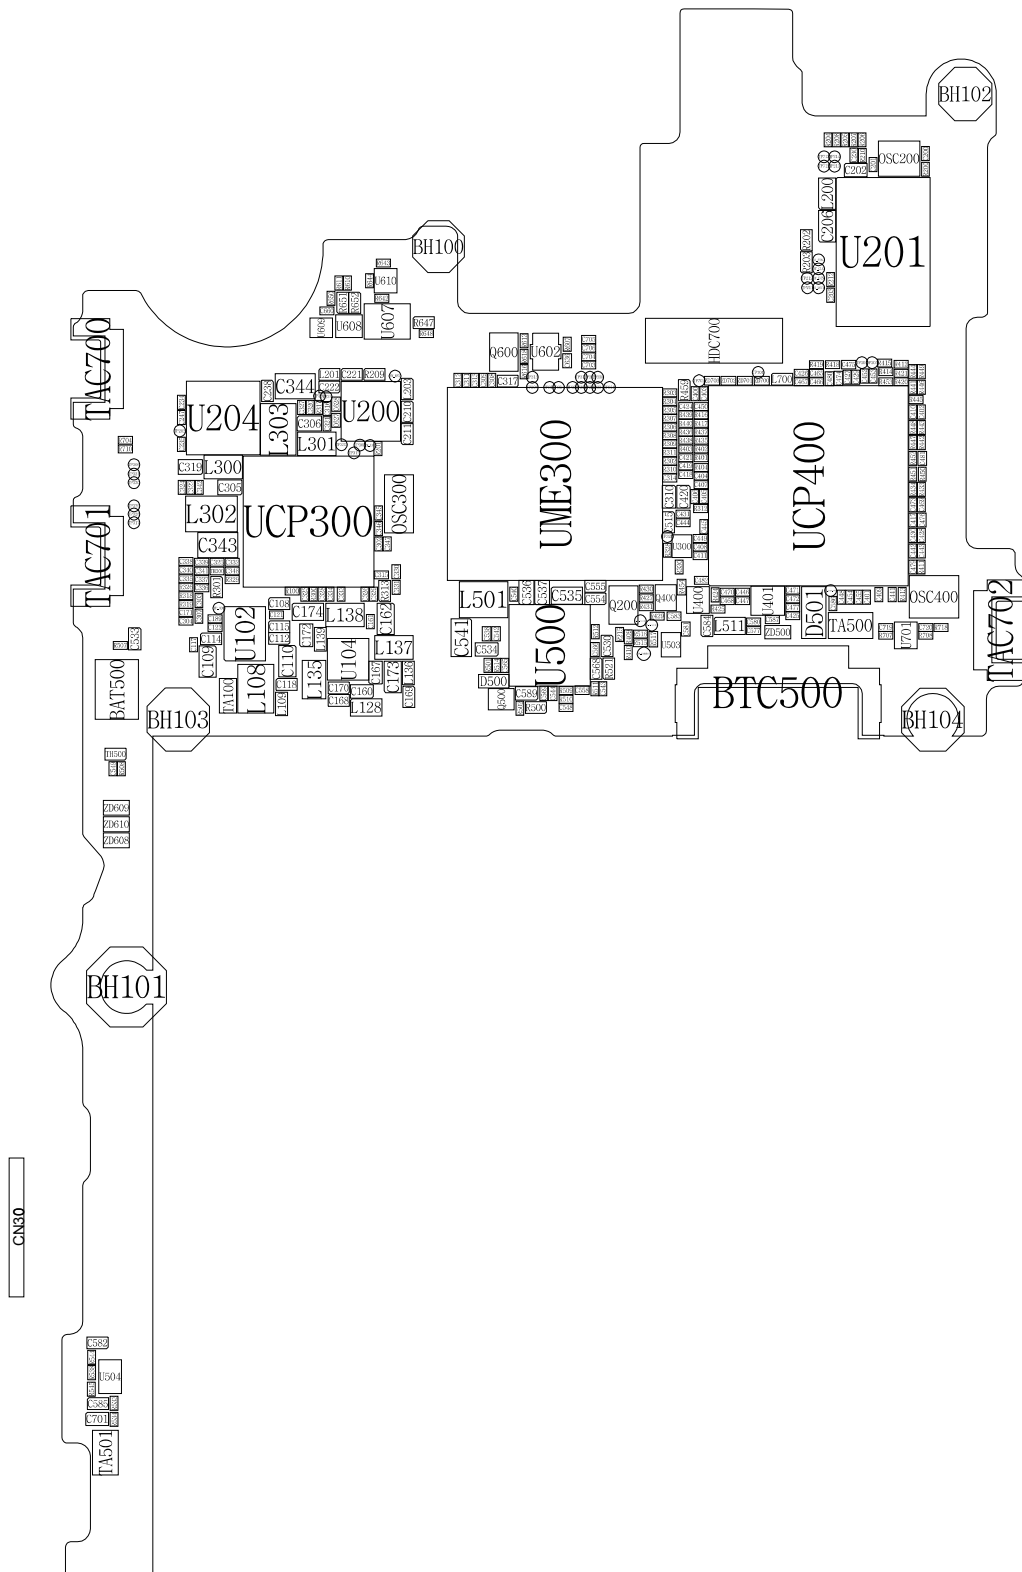

8-3.故障排除流程图

设备

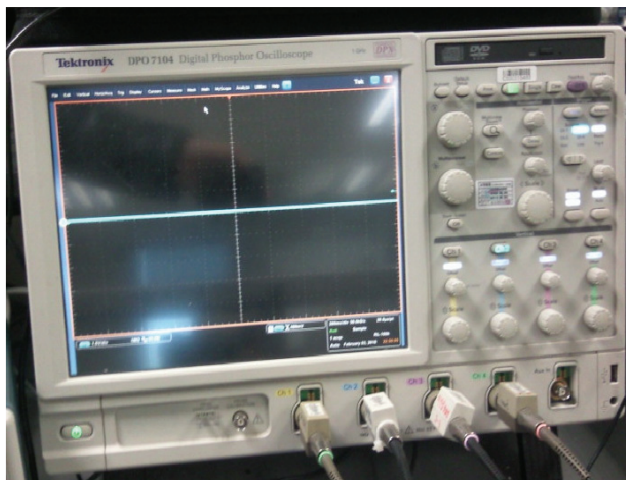


↑示波器




↑数字万用表



↑电源供电器

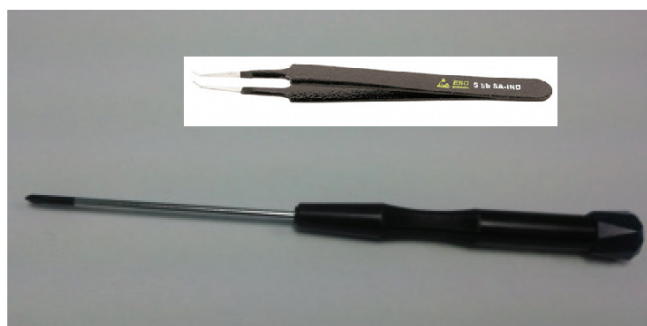

↑+字螺丝刀，ESD 安全镊子

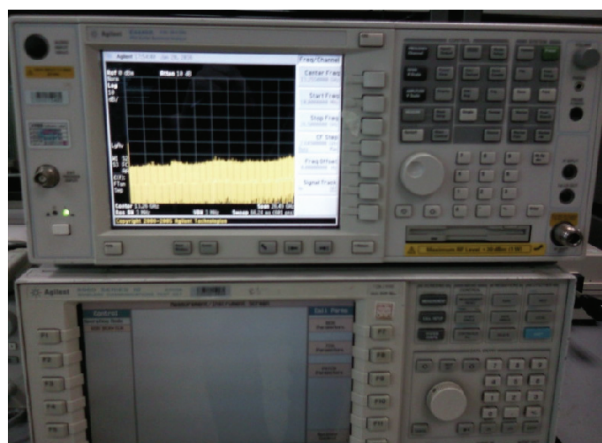




18960 和光谱分析器




↑焊接熨斗




8-3-1 开机

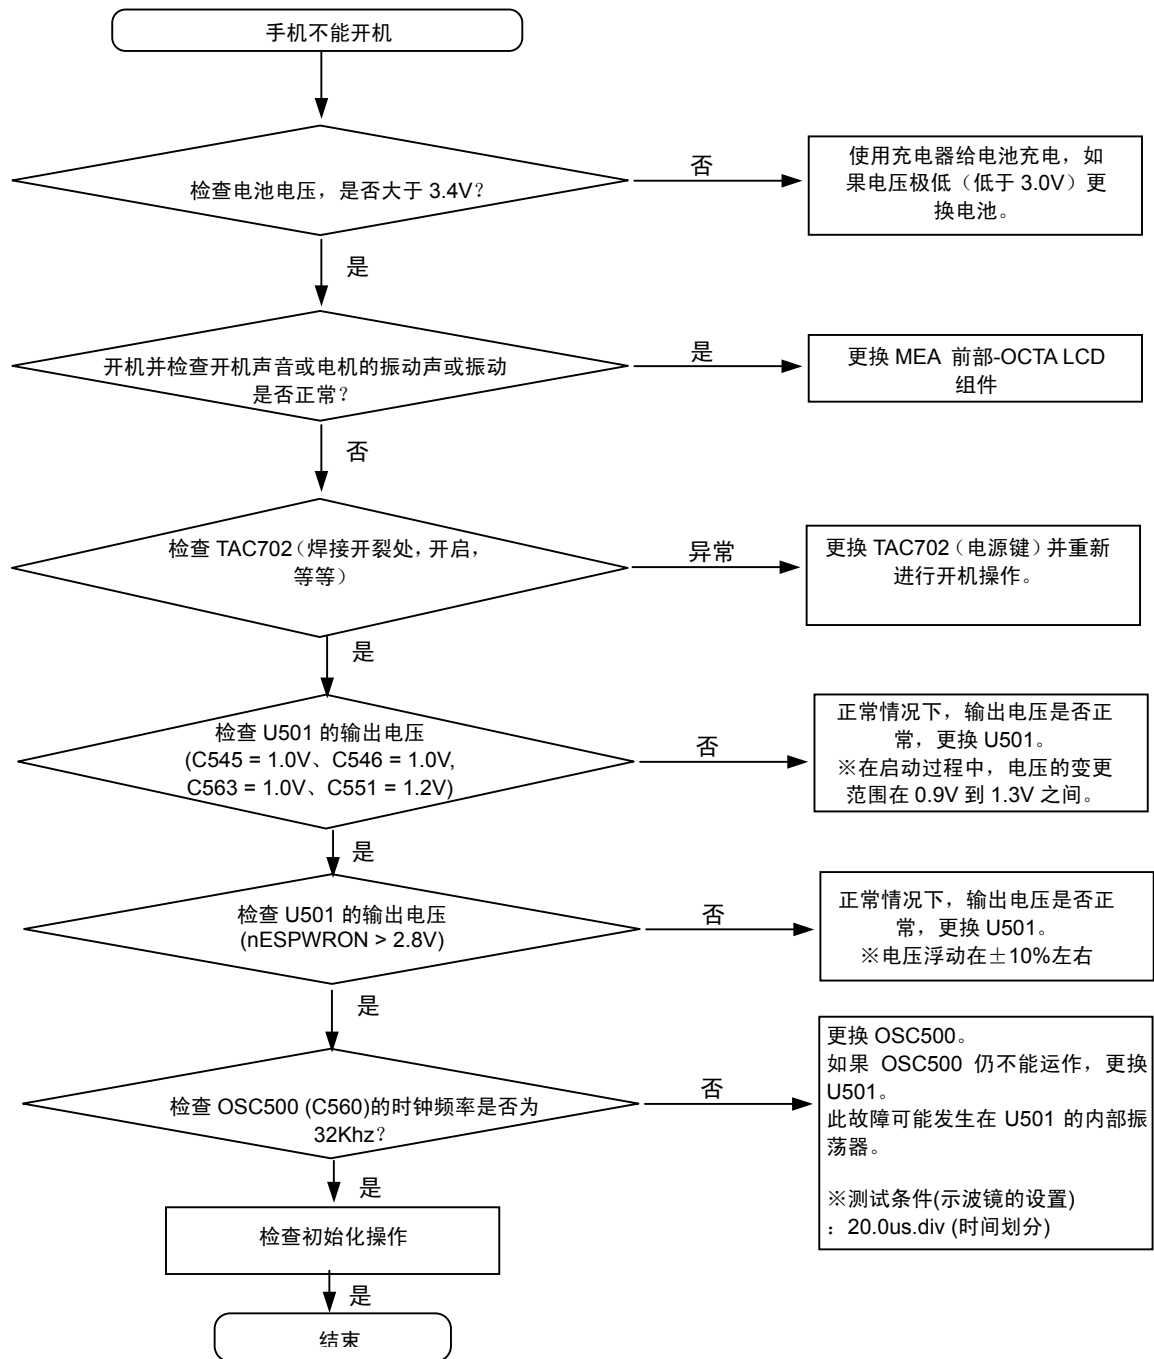

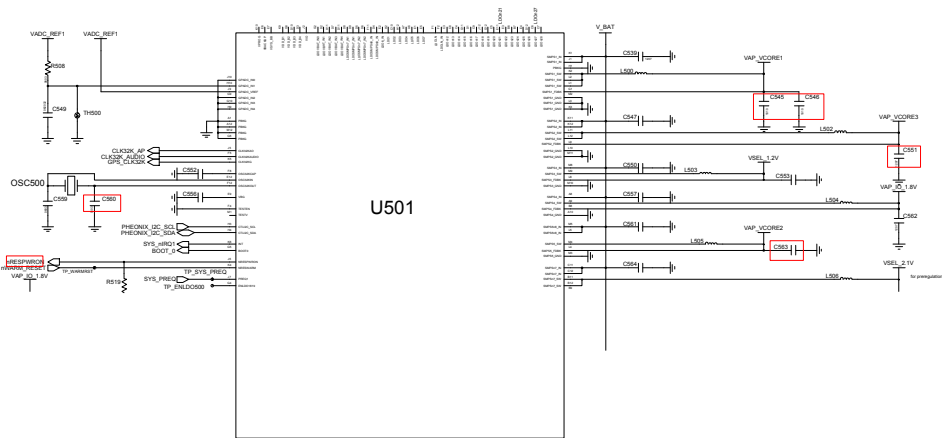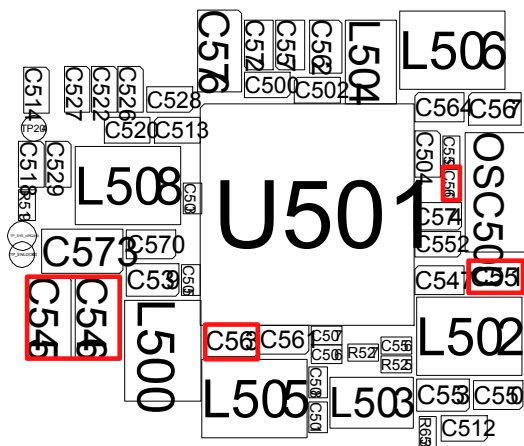



8-3-2. 初始化

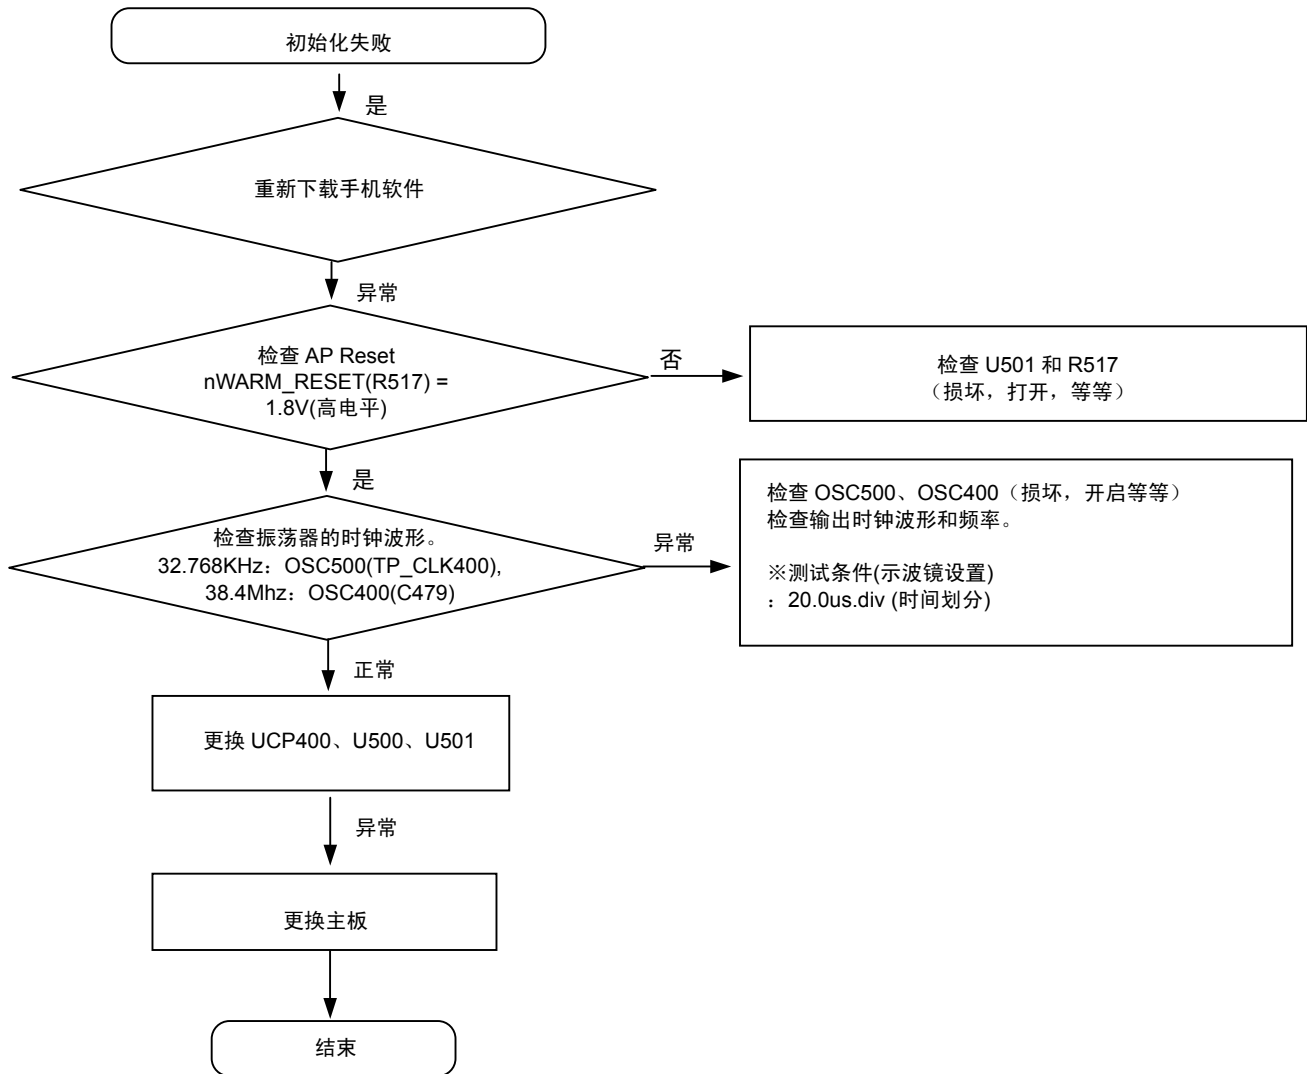

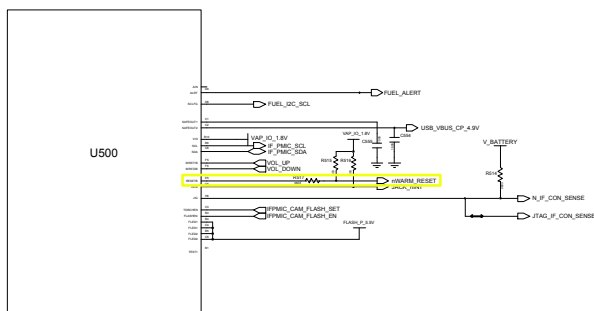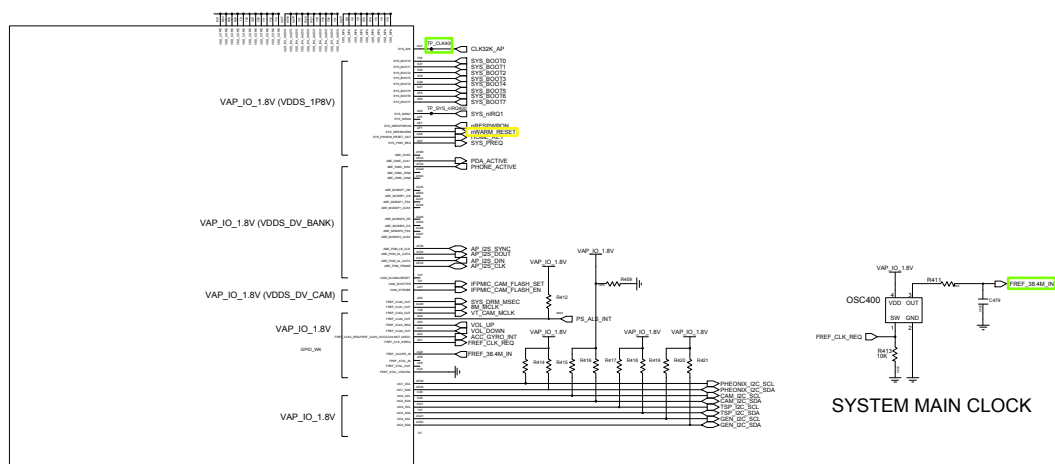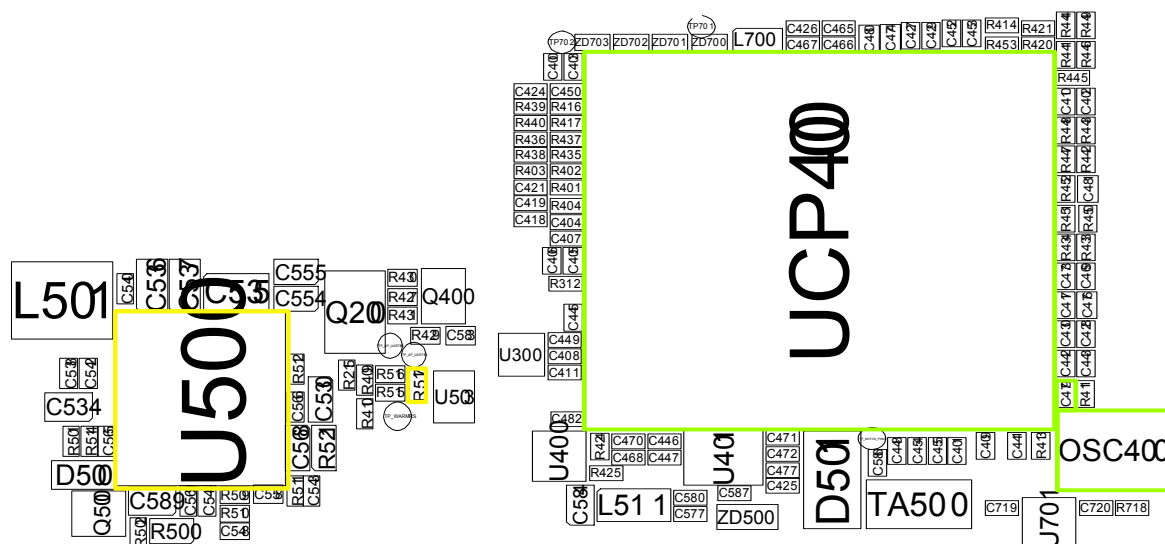





8-3-3. 无服务

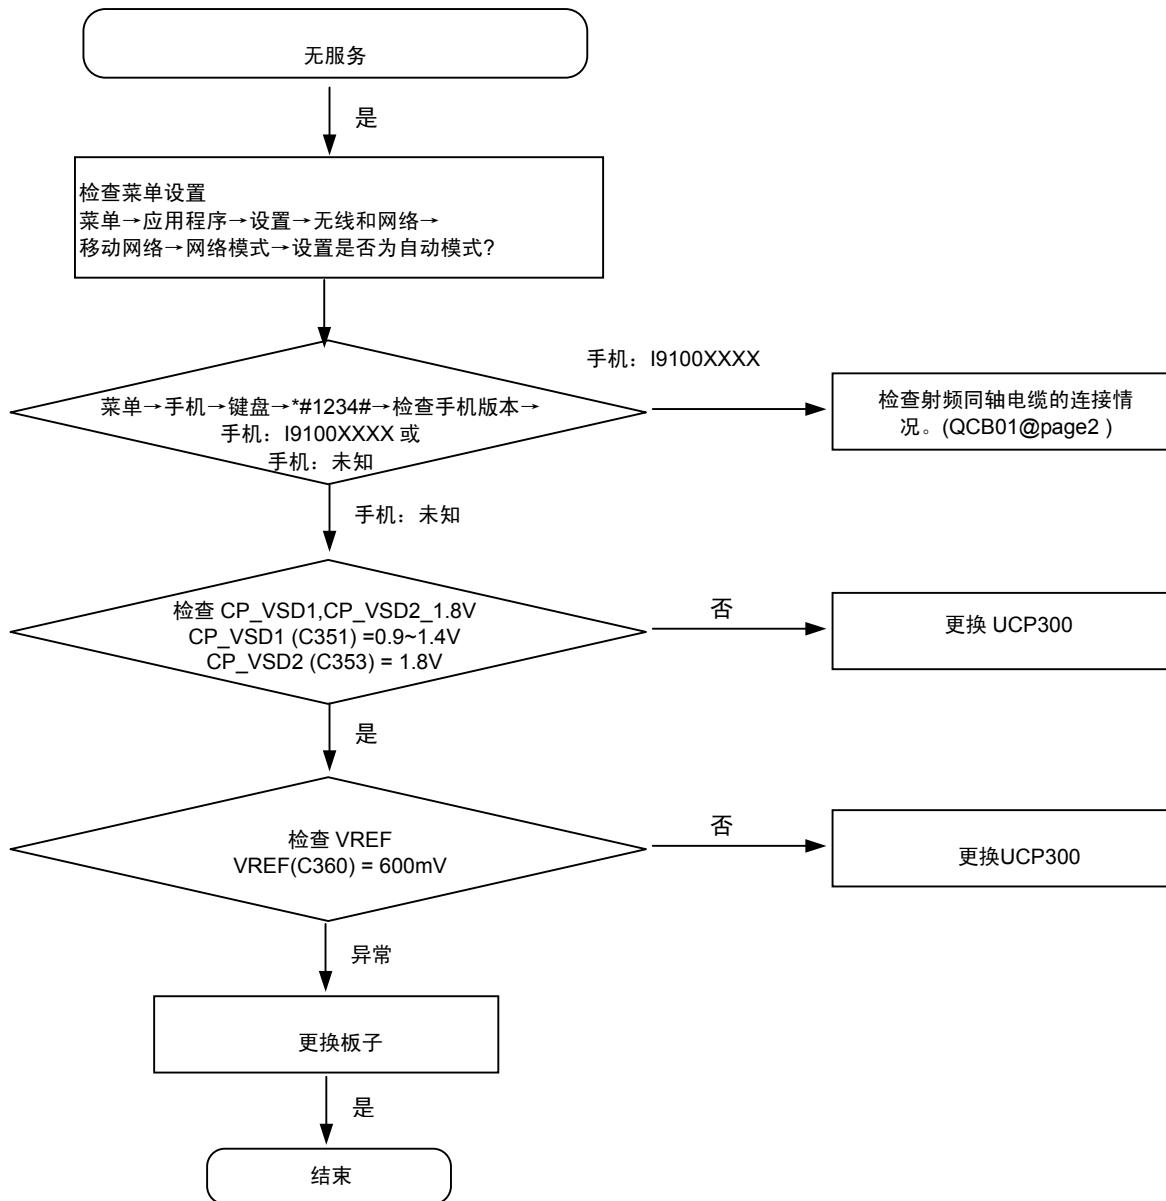

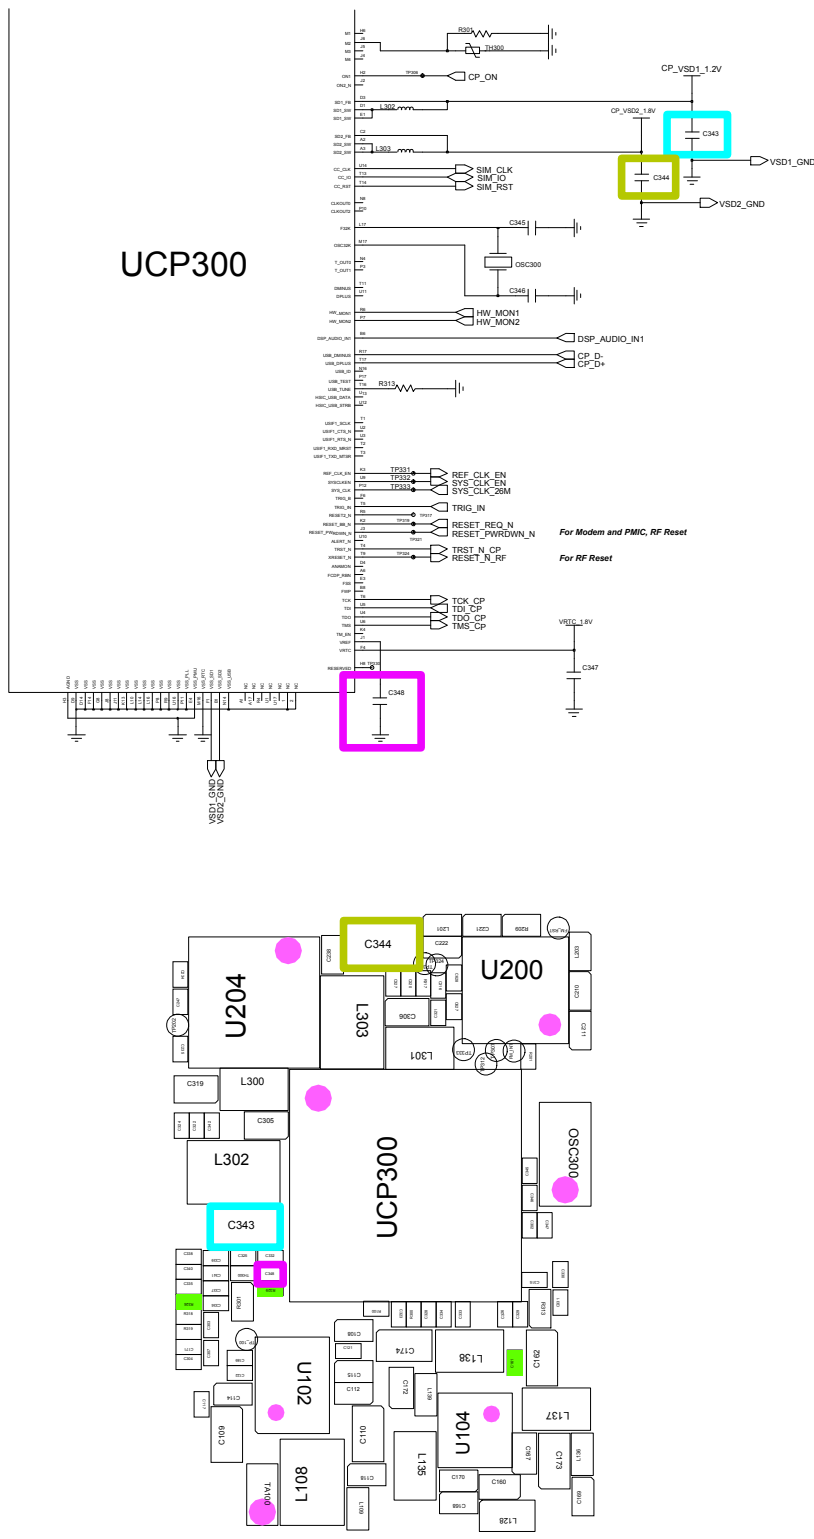




8-3-4.Sim卡

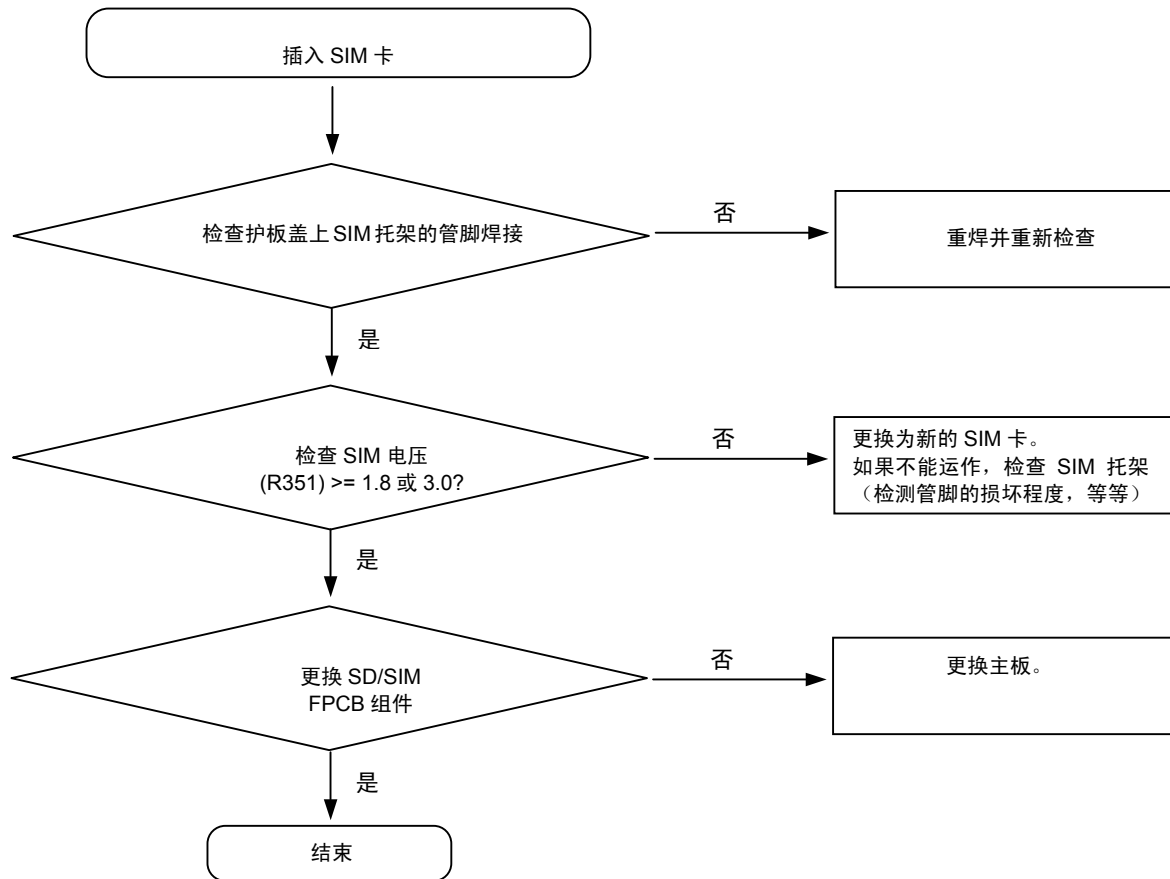

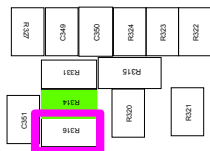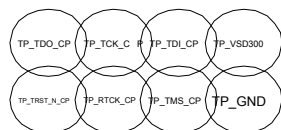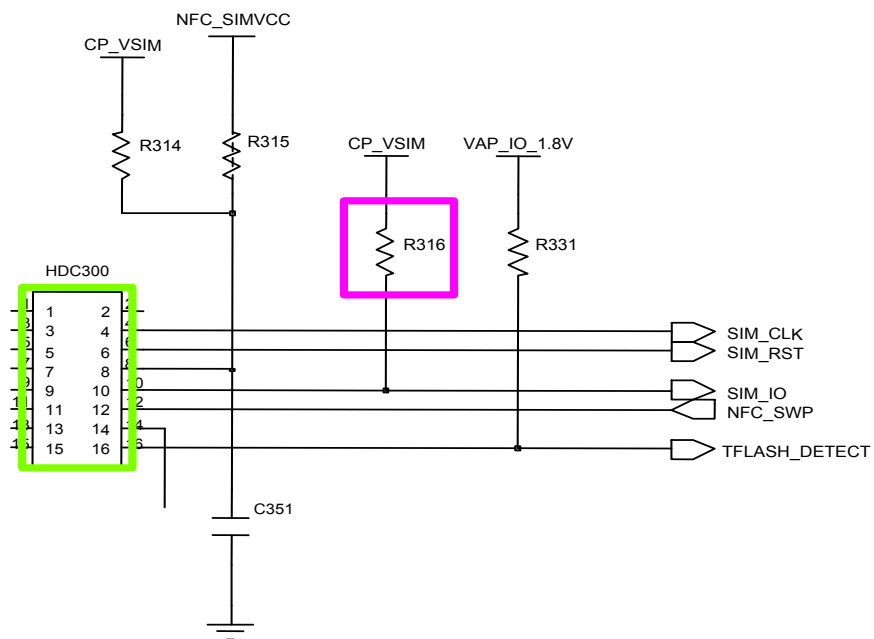


8-3-5. 充电部分

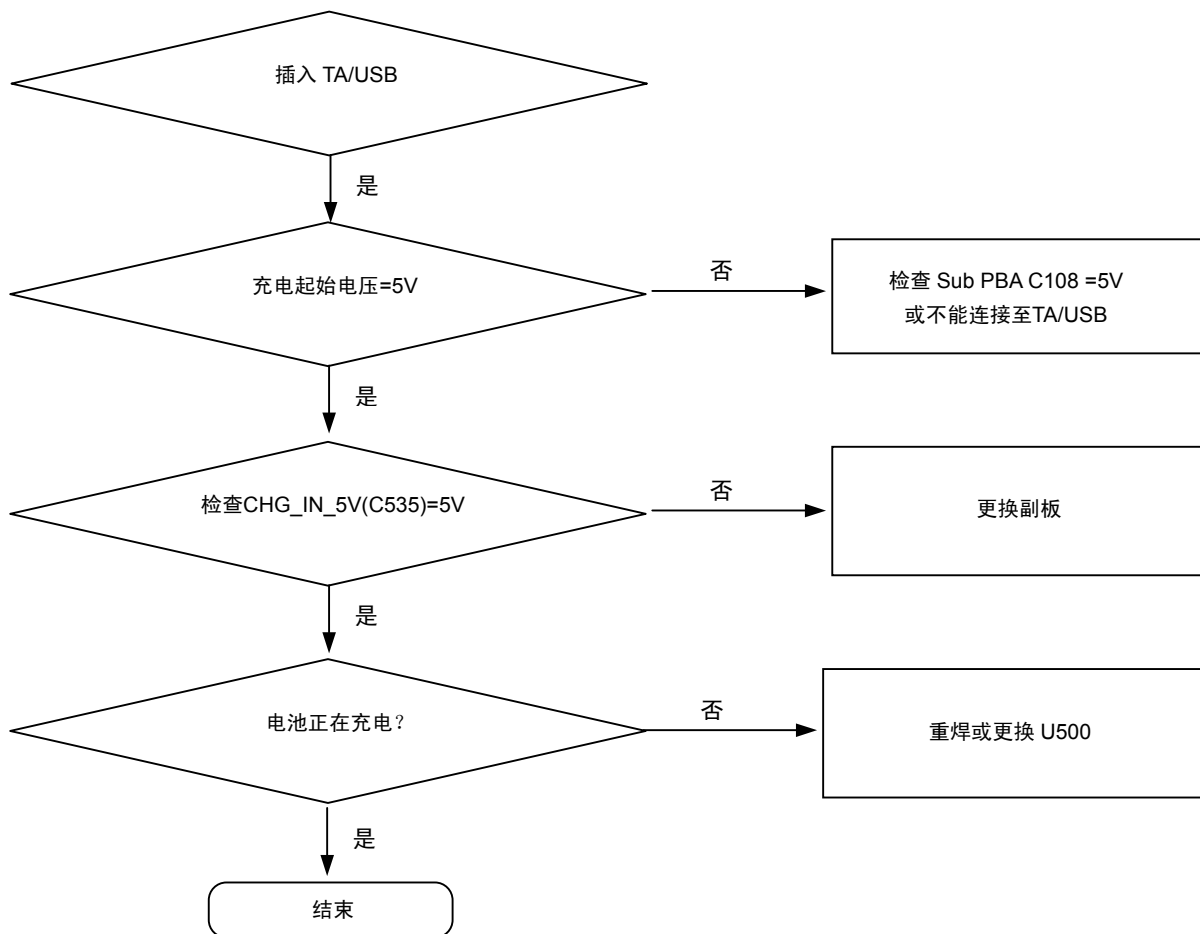


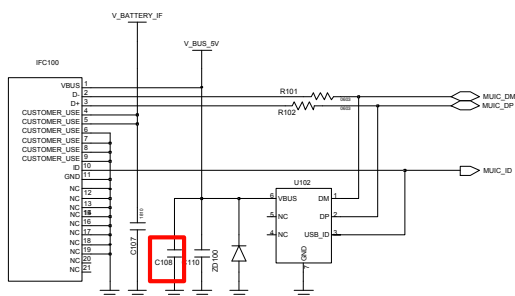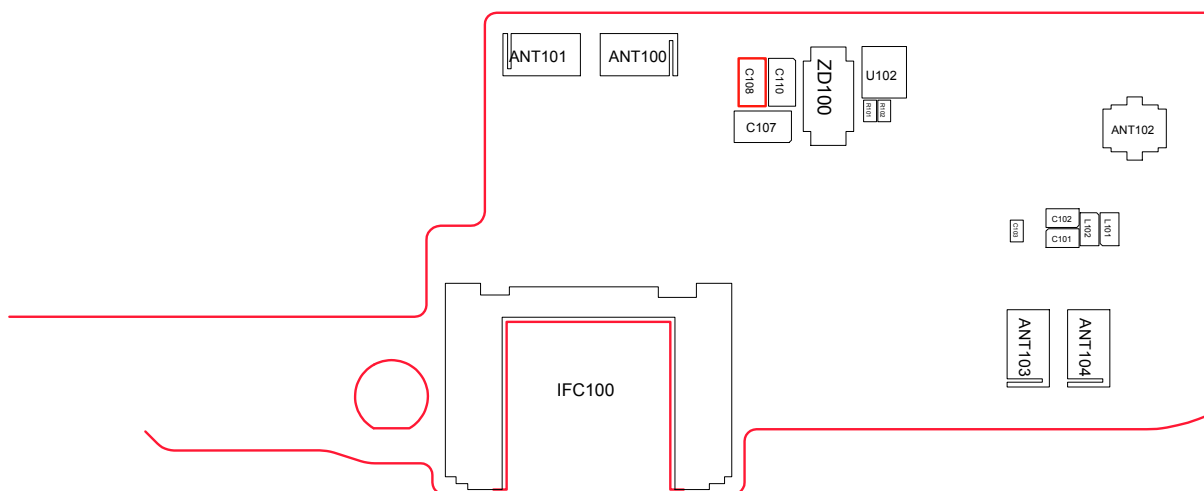


11PIN USB CONNECTOR

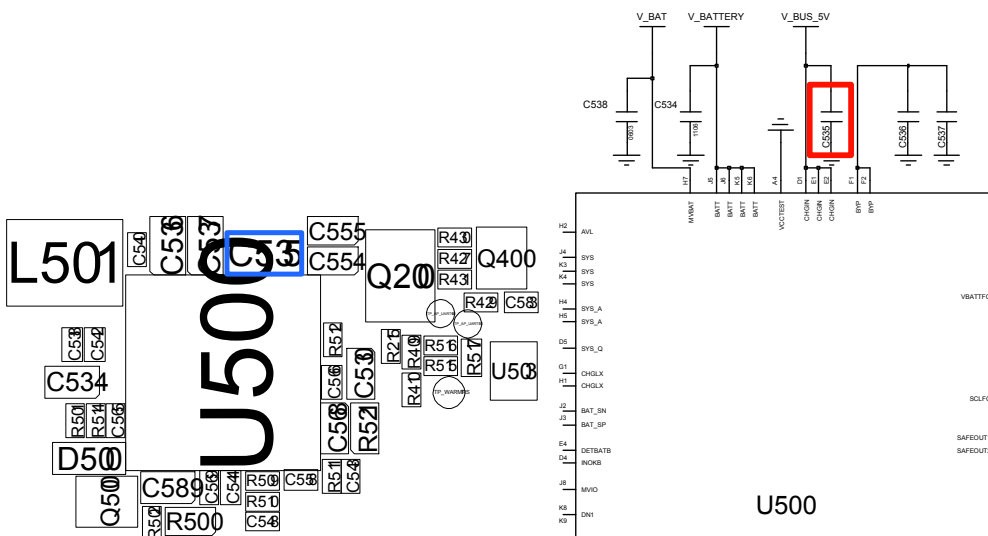




8-3-6. 话筒部分（主话筒）

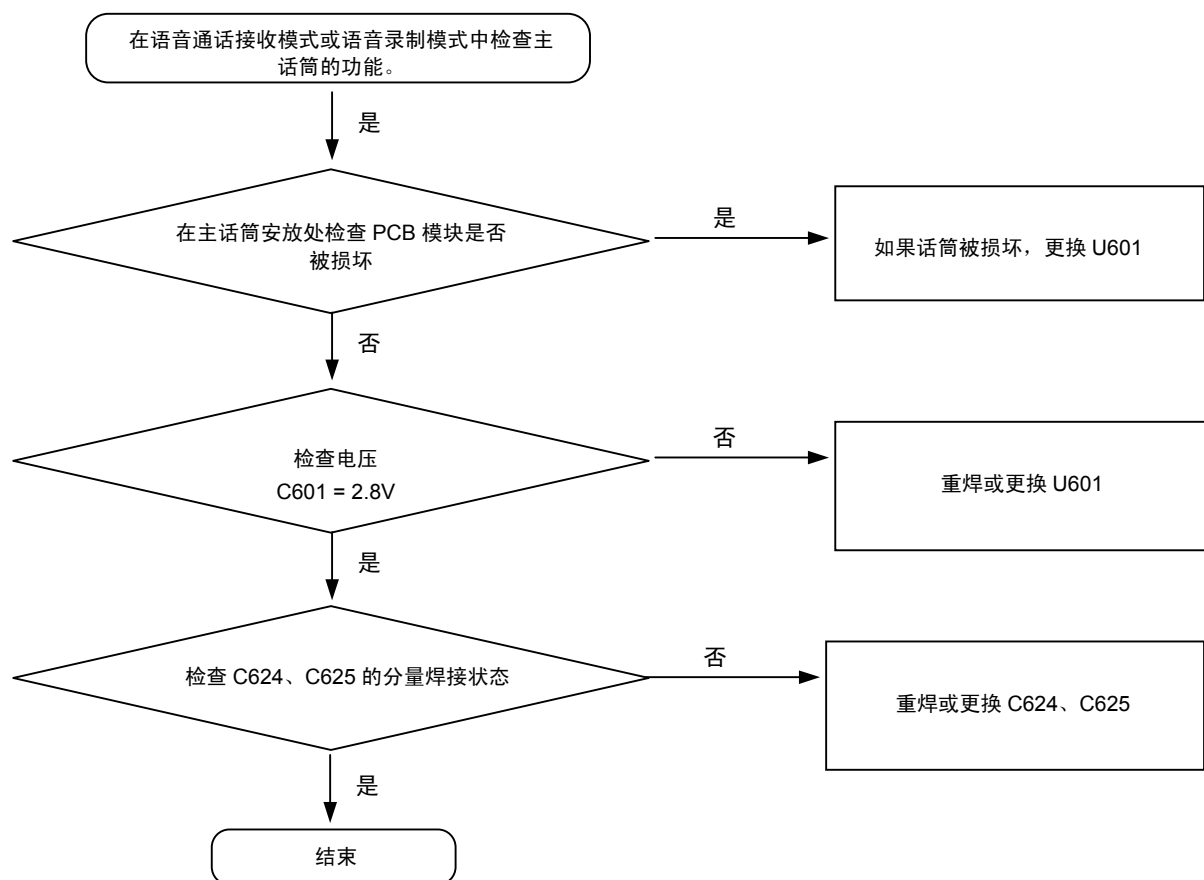

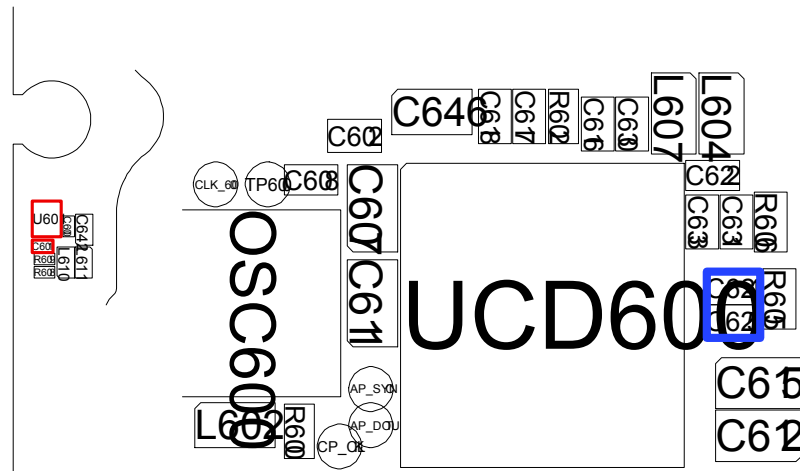



8-3-6-1. 话筒部分（副话筒）

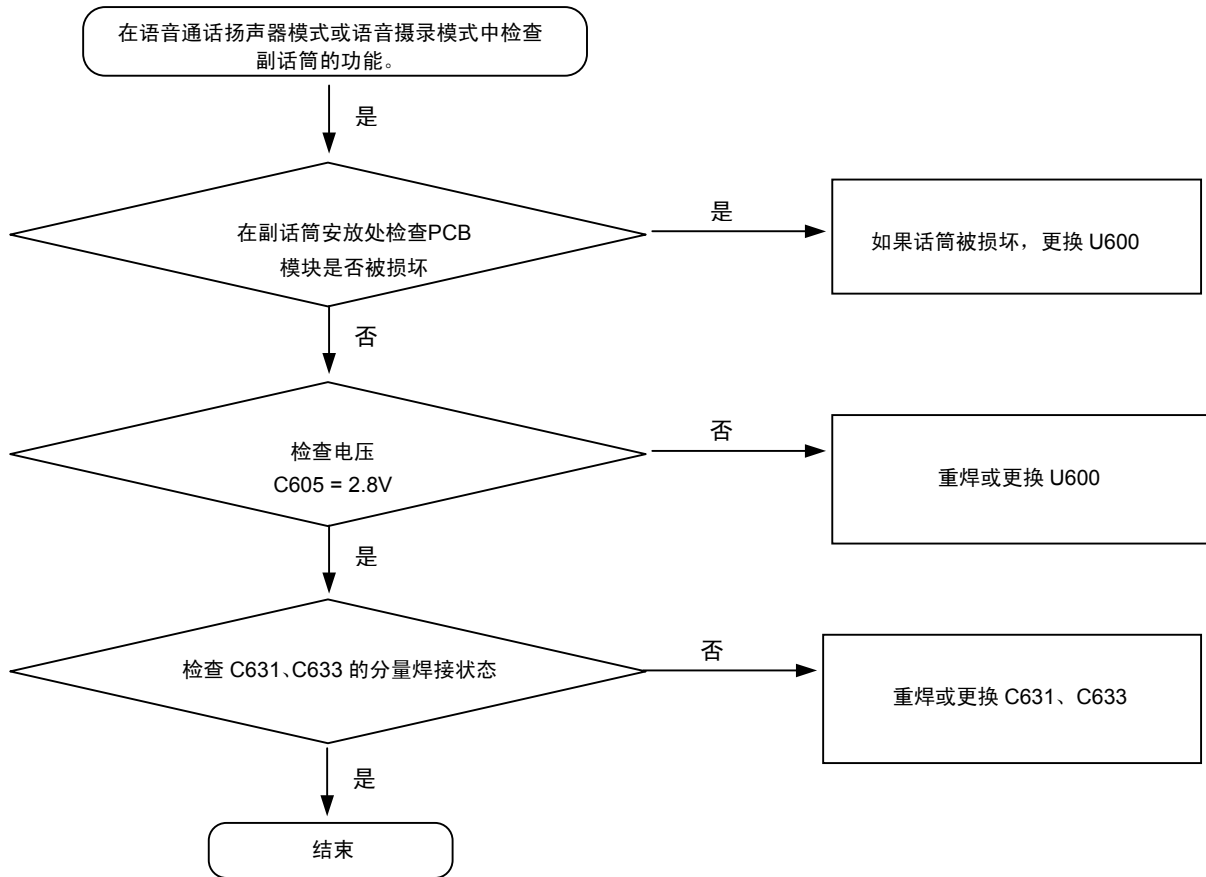

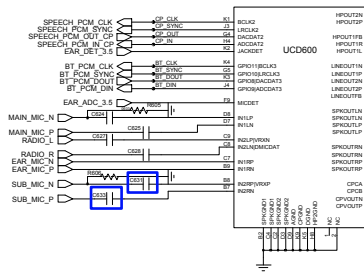


8-3-7.扬声器部分

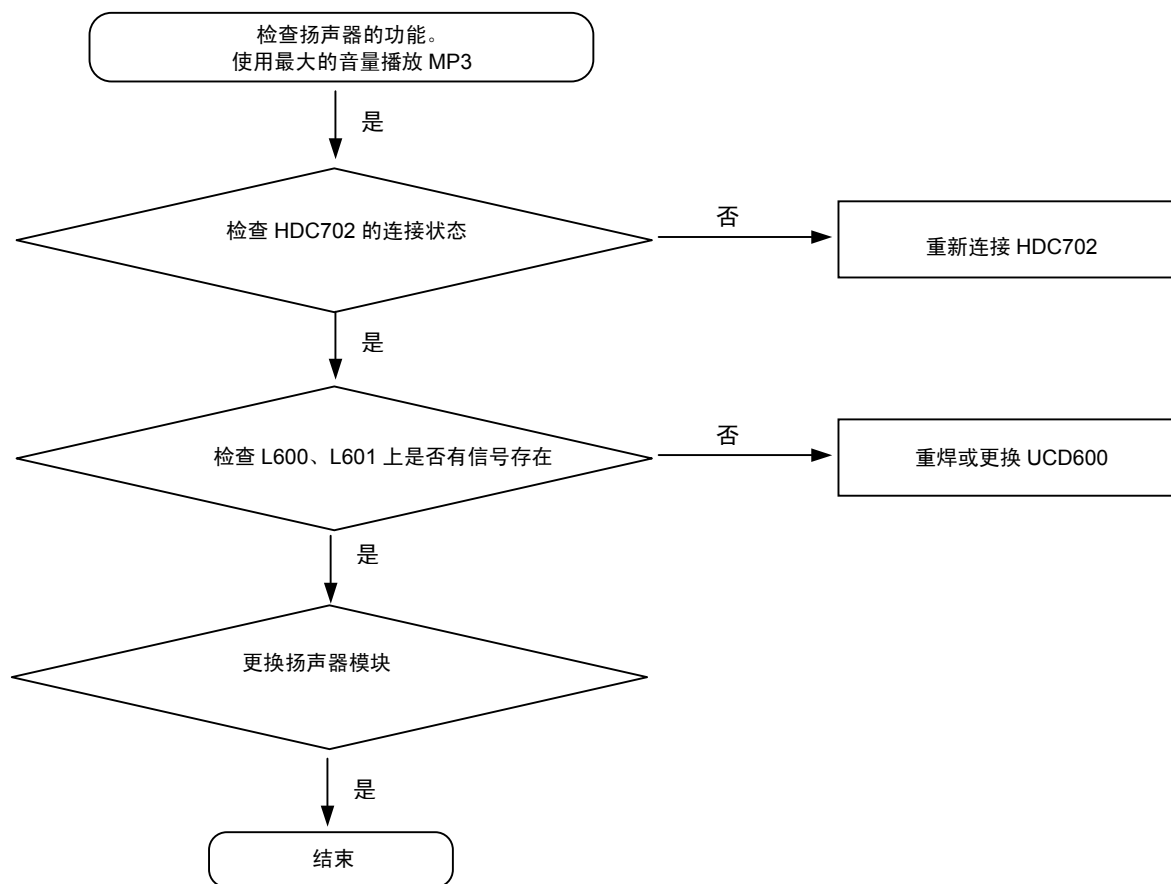


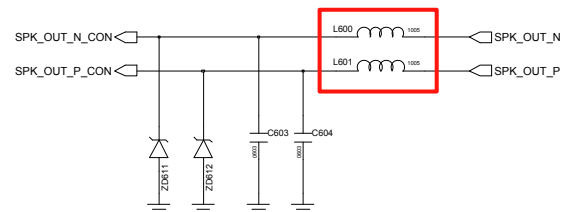


8-3-7.接收器部分



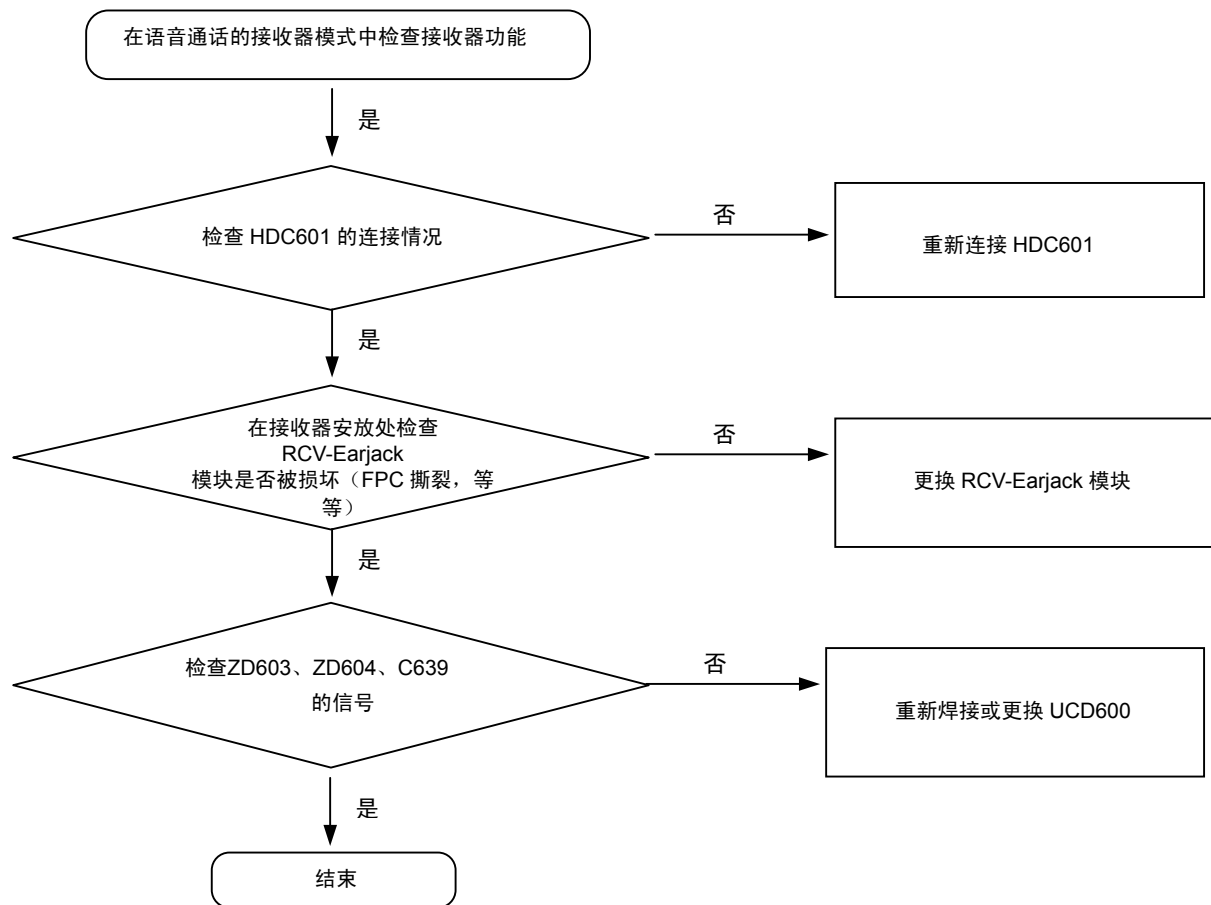


8-3-8.FM收音机

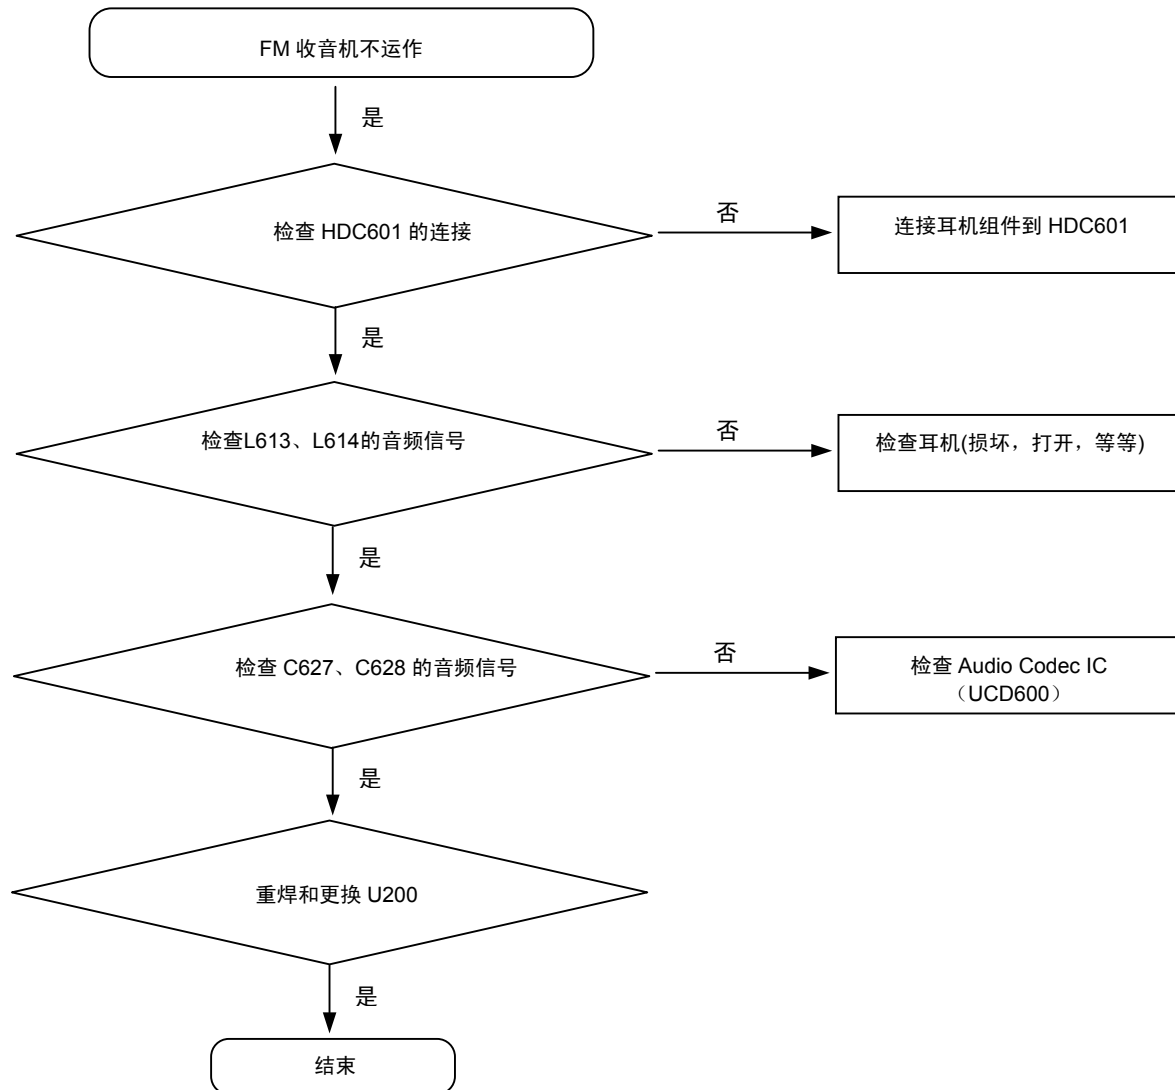




8-3-9.BT/WIFI

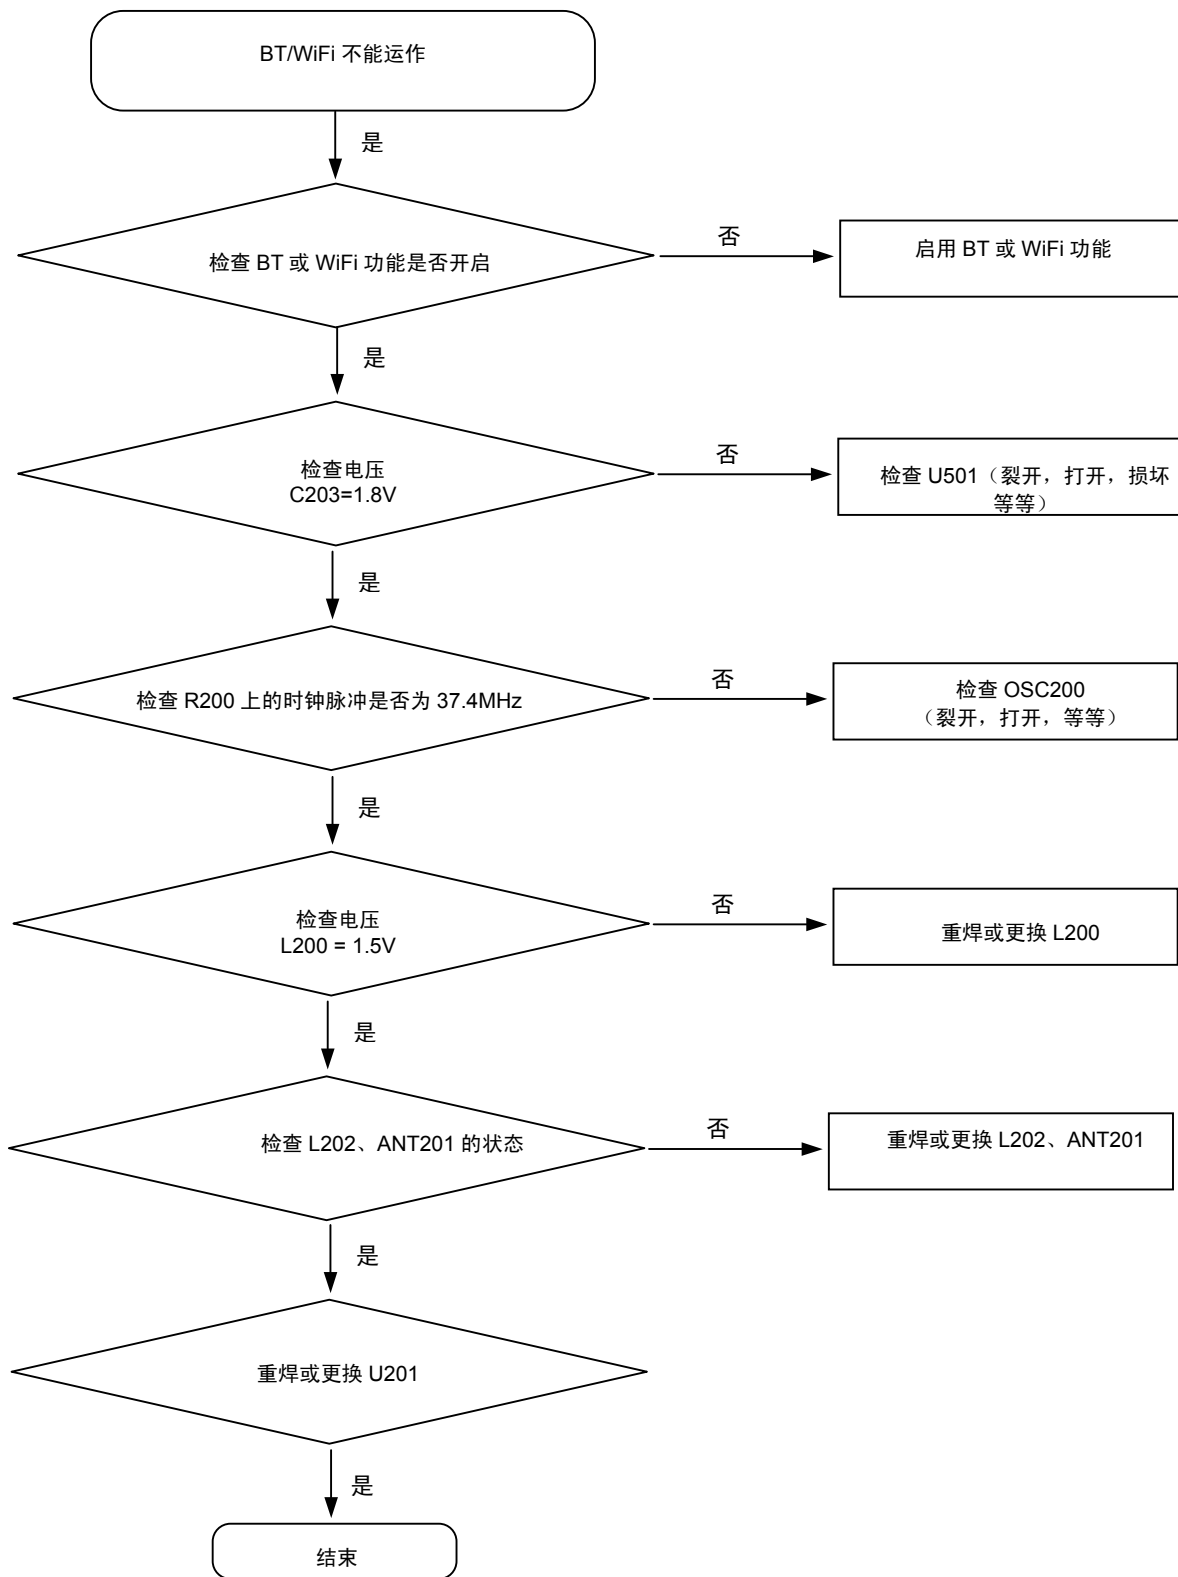

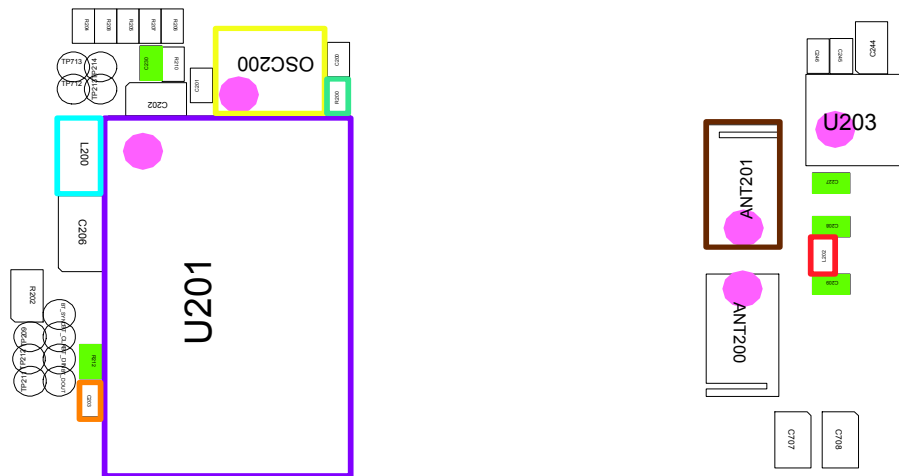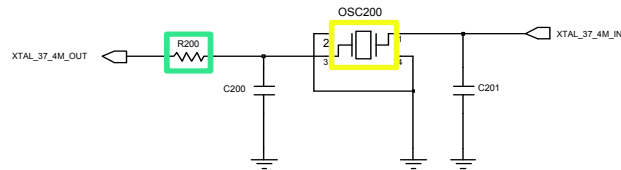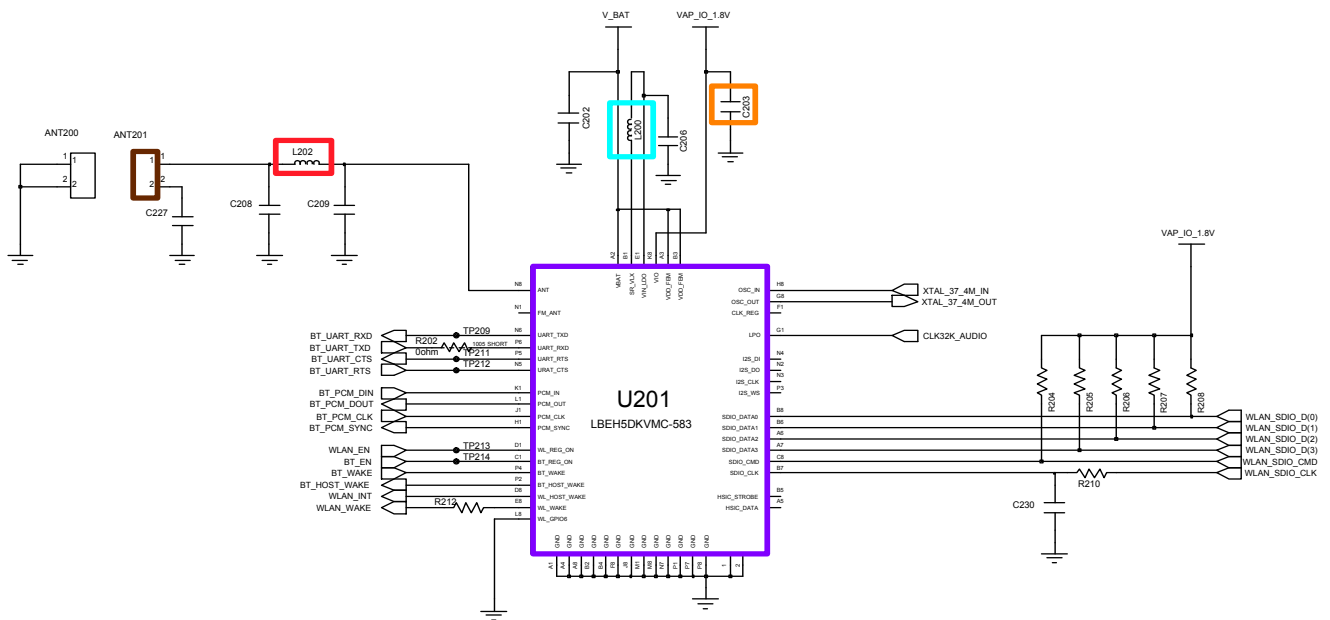



8-3-10.液晶显示屏

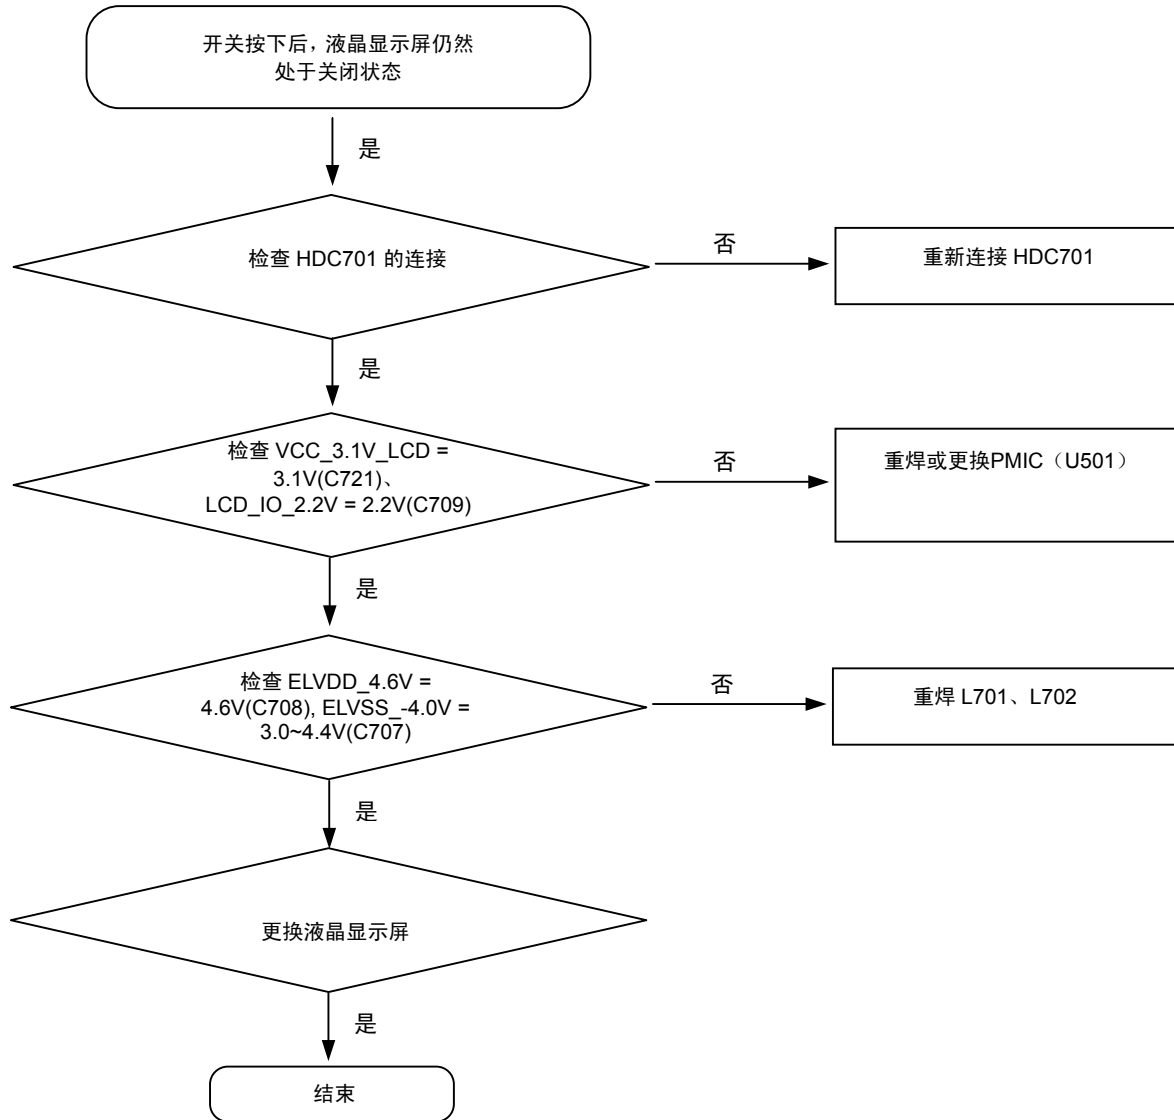


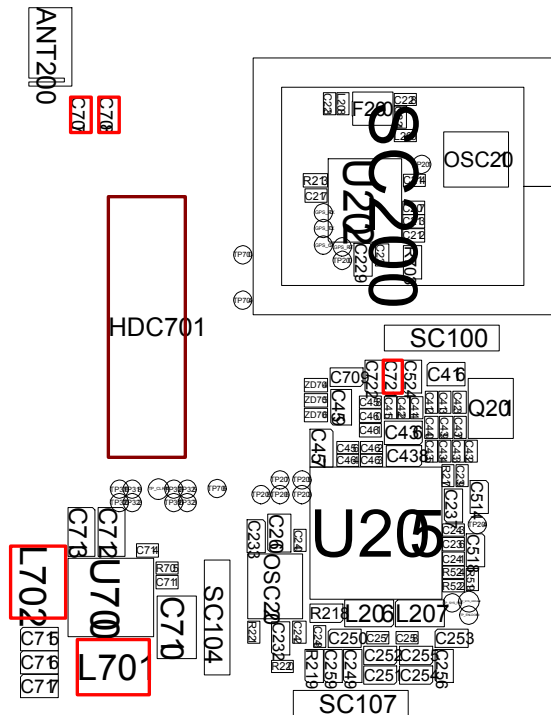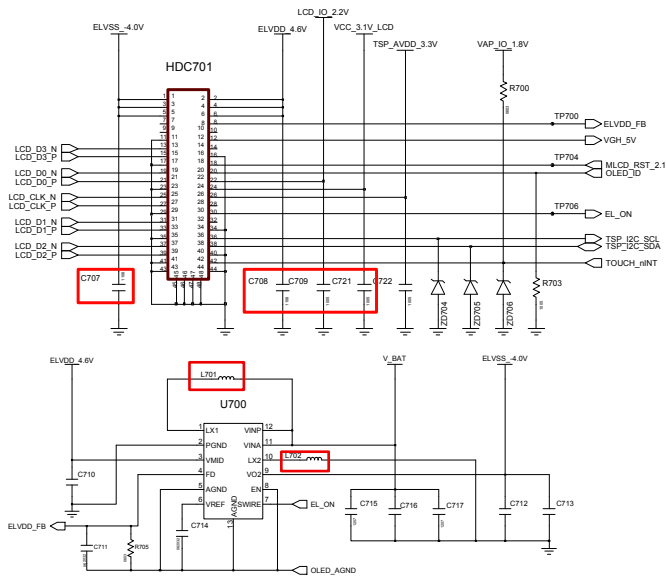


8-3-11.TSP

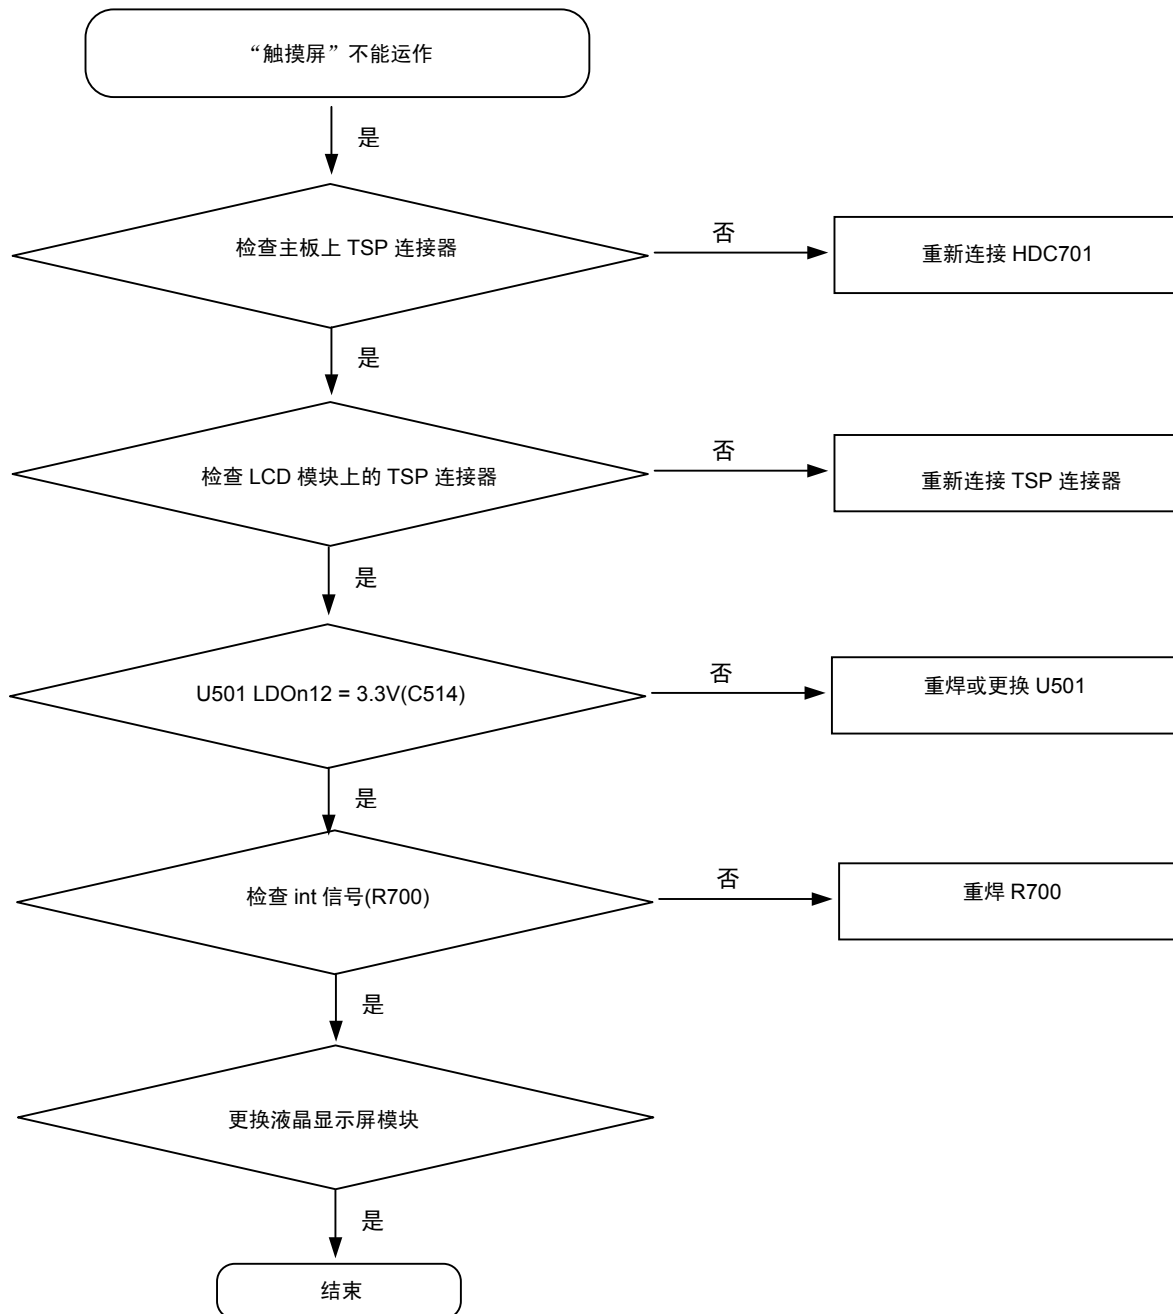


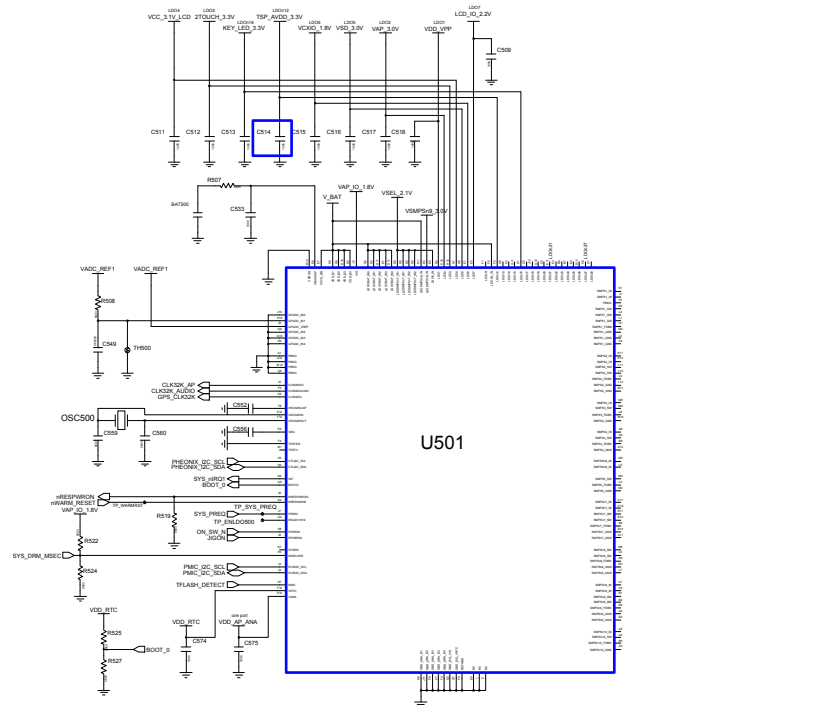


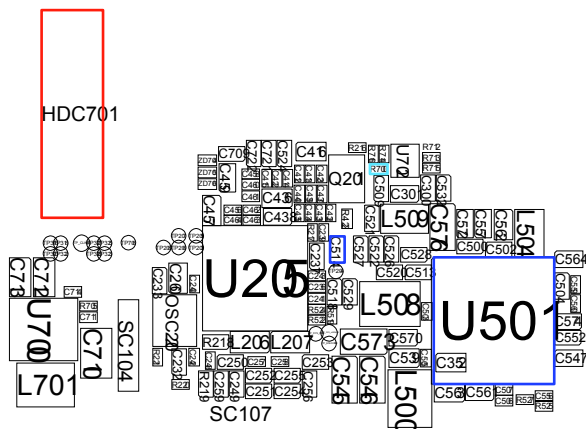


8-3-12.8M摄像头

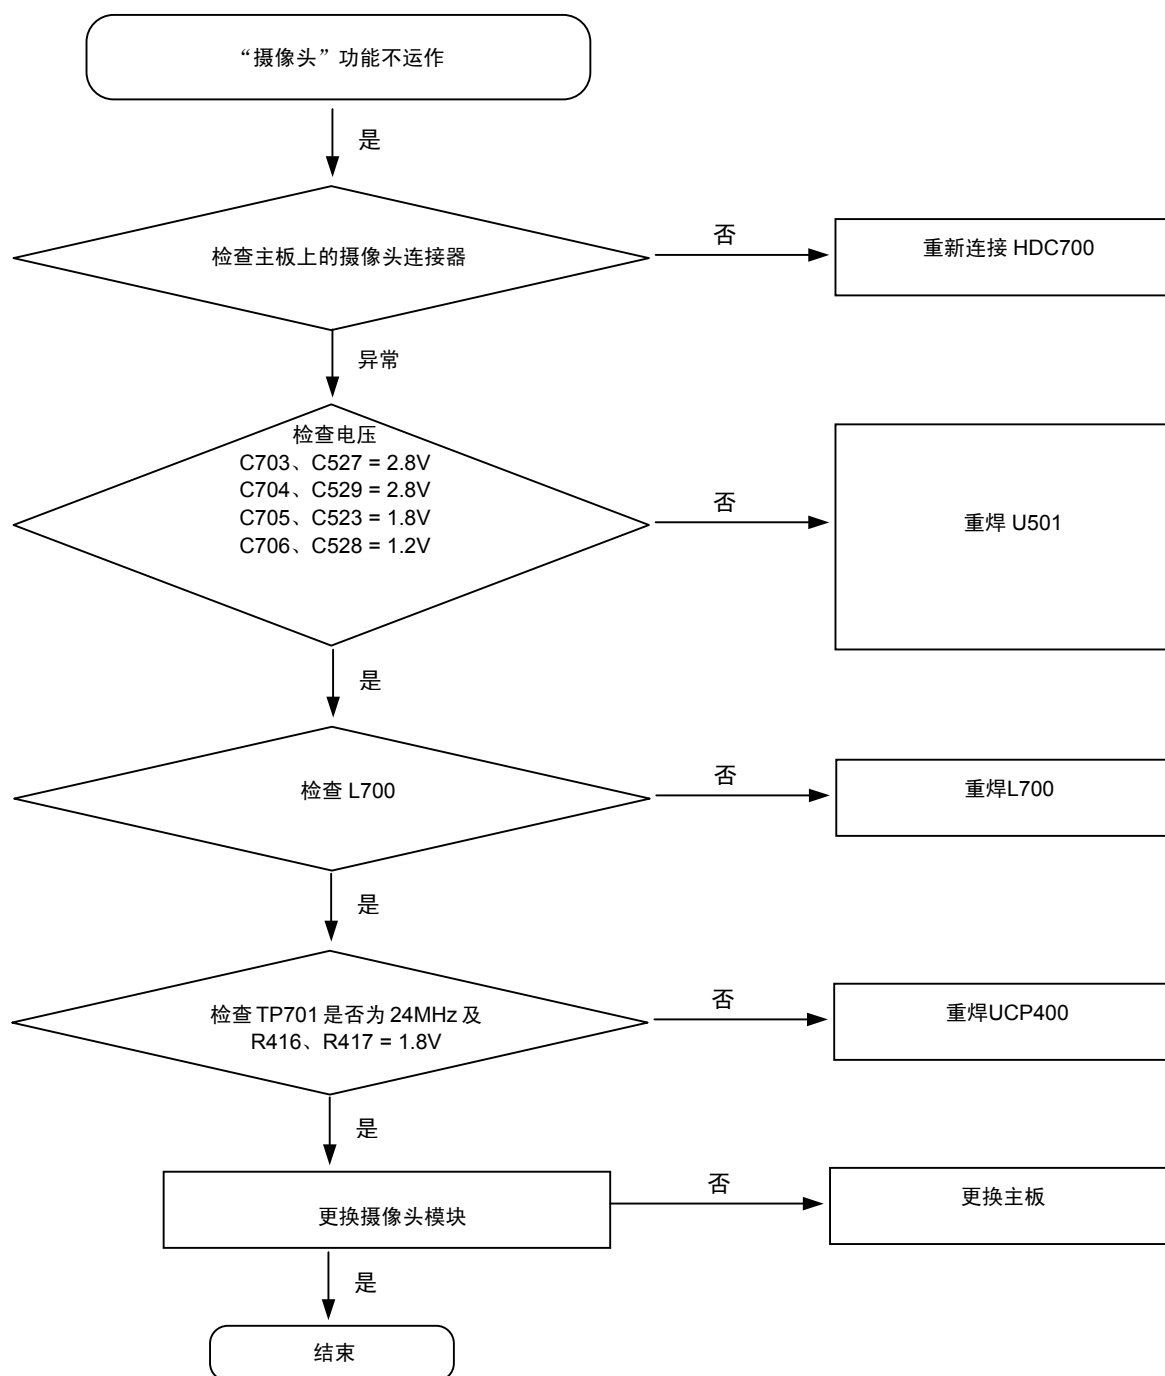


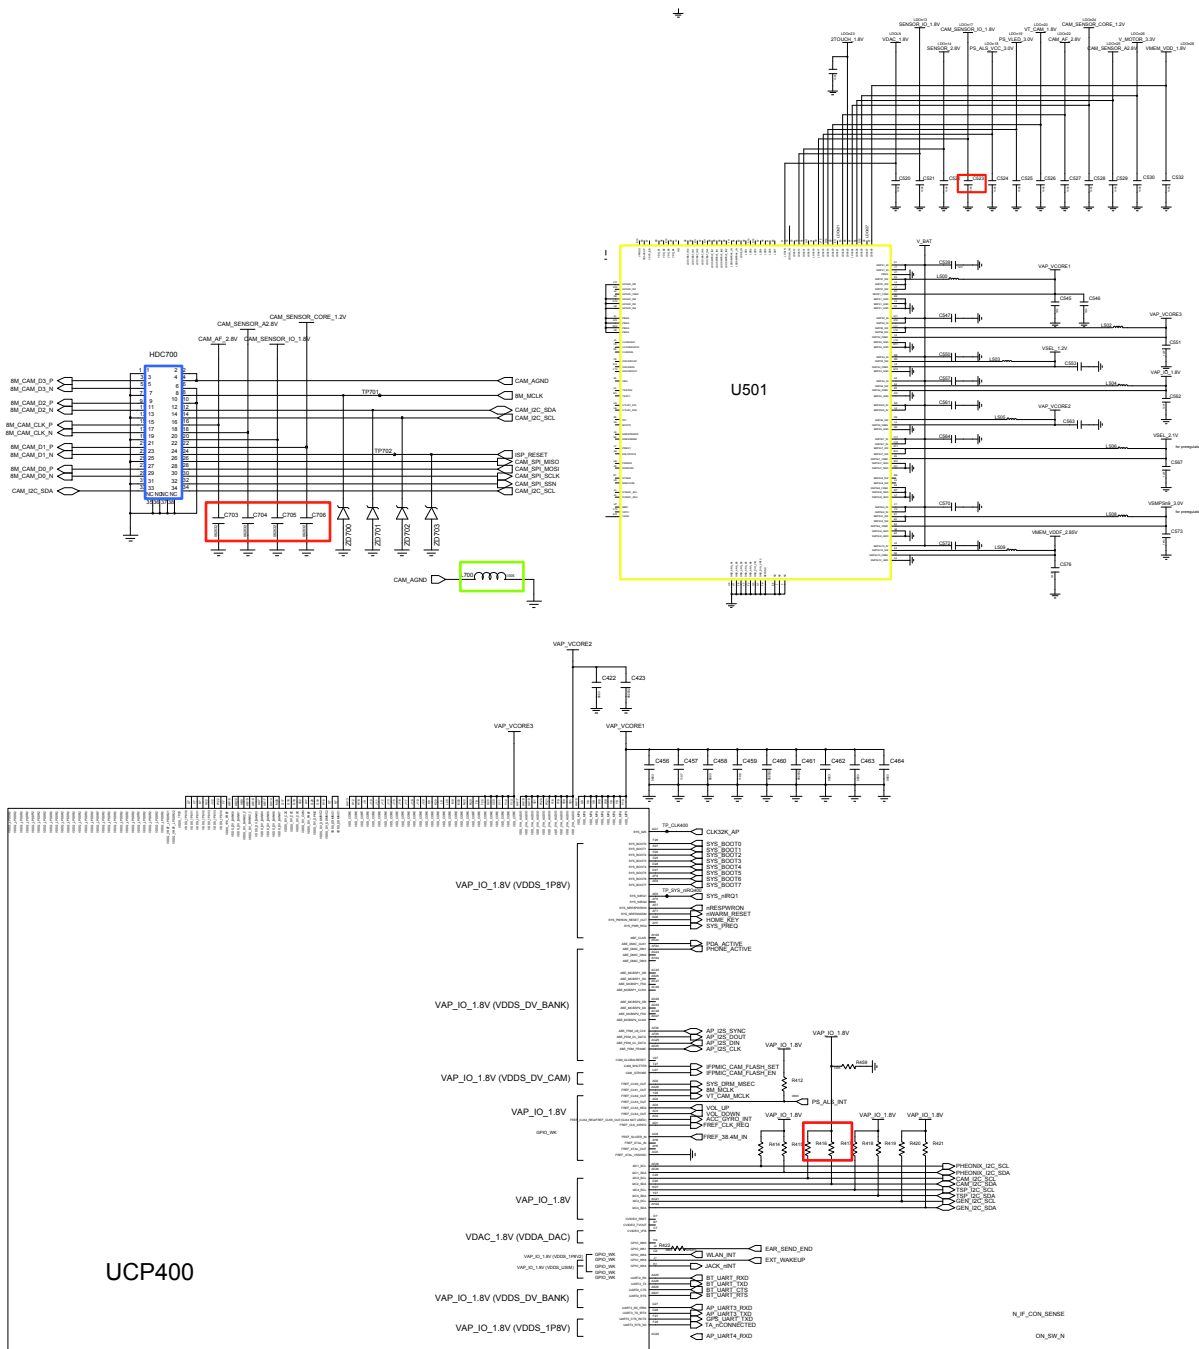

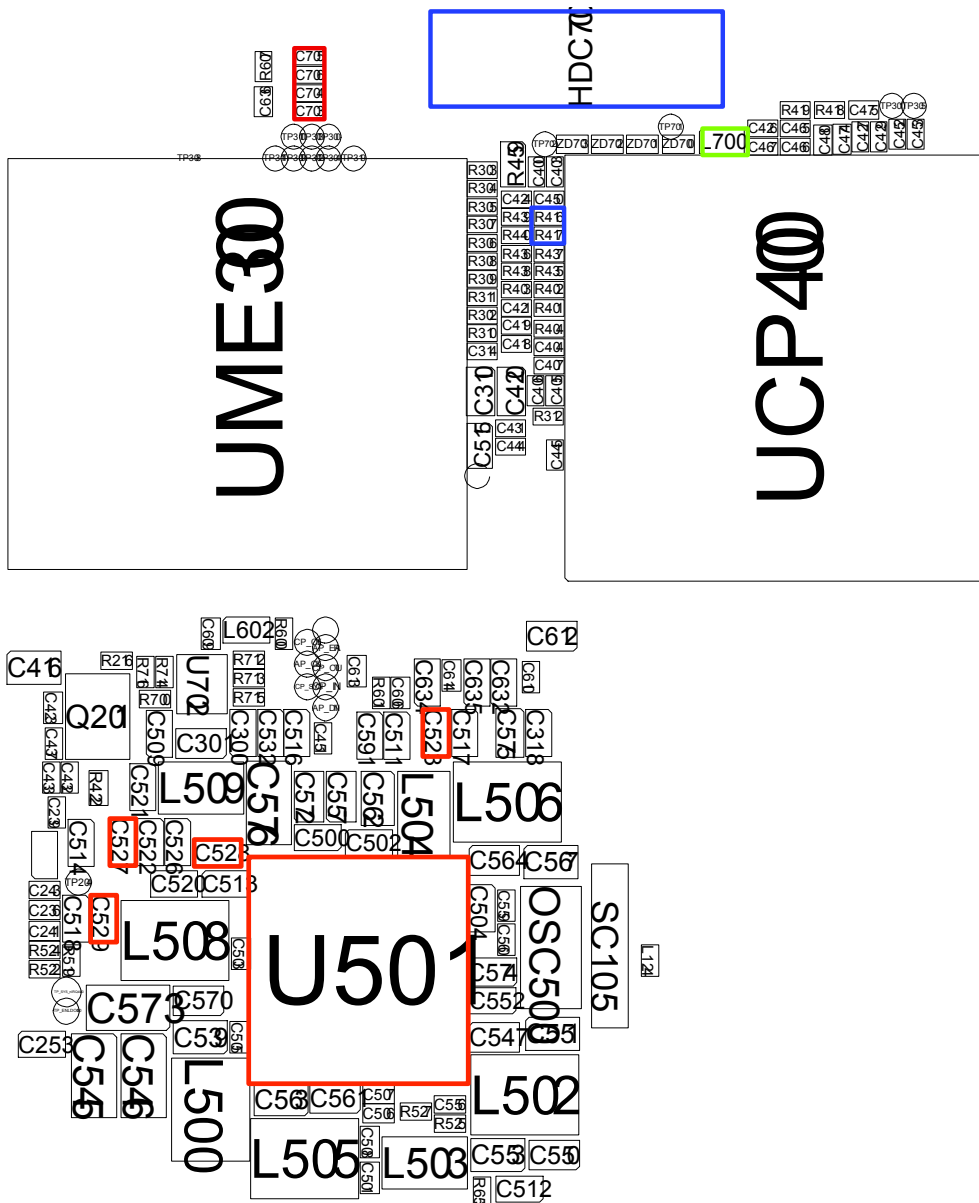



8-3-13.1.9M摄像头

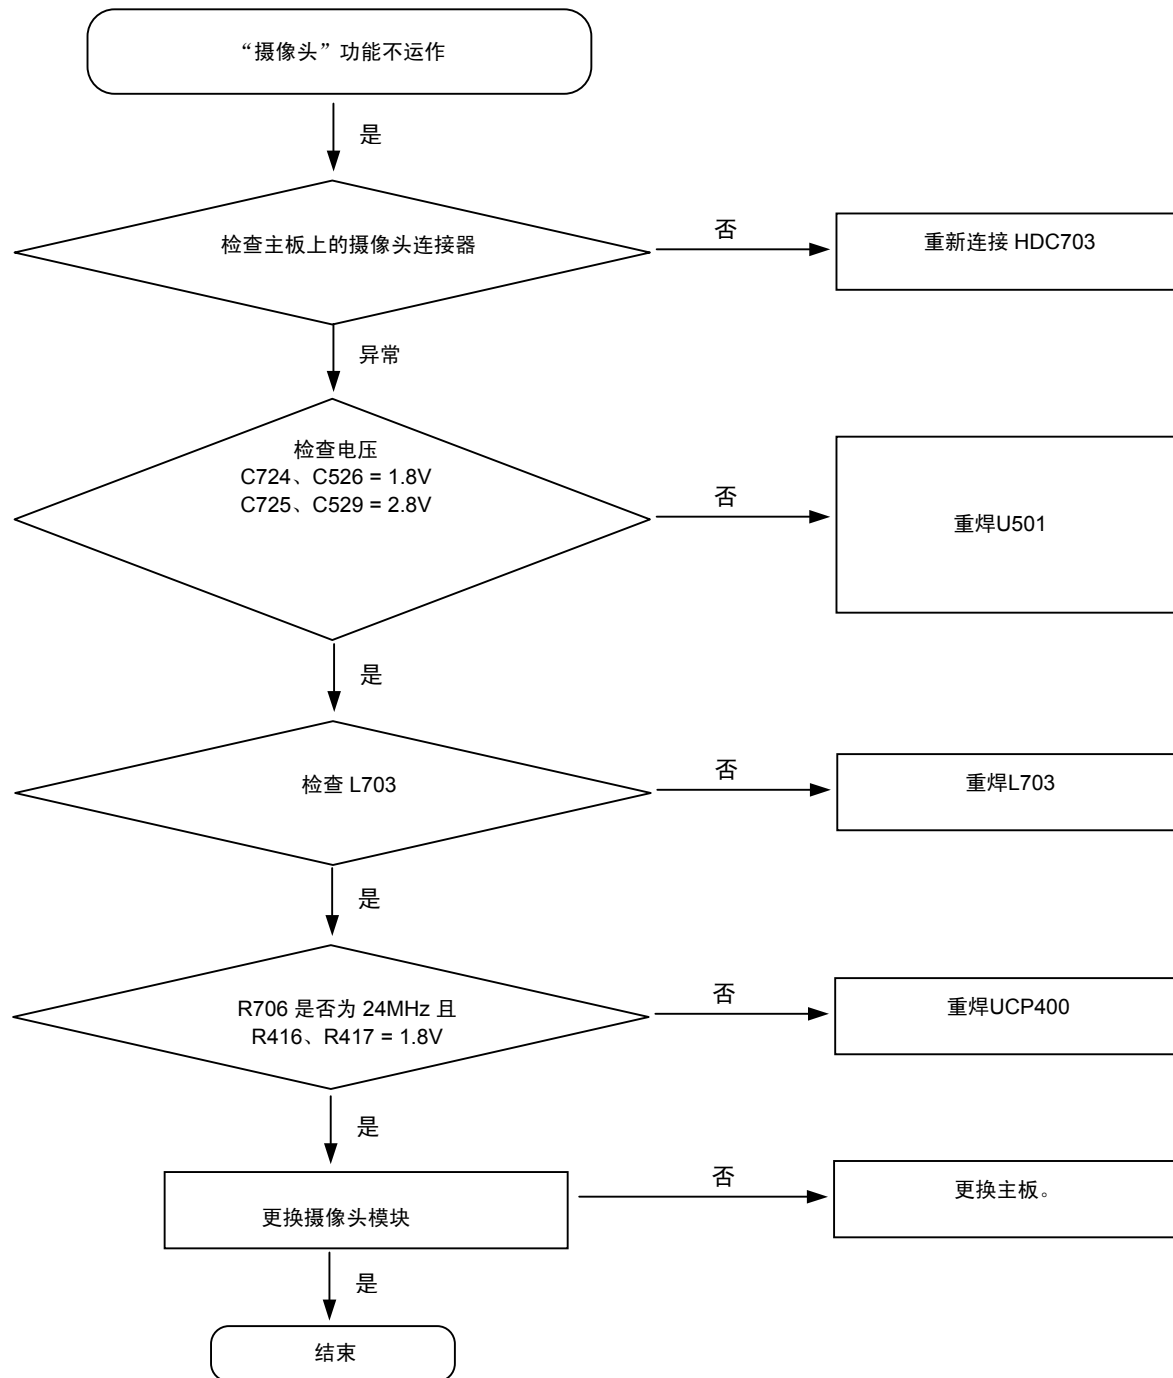




8-3-12.GSM1800接收器

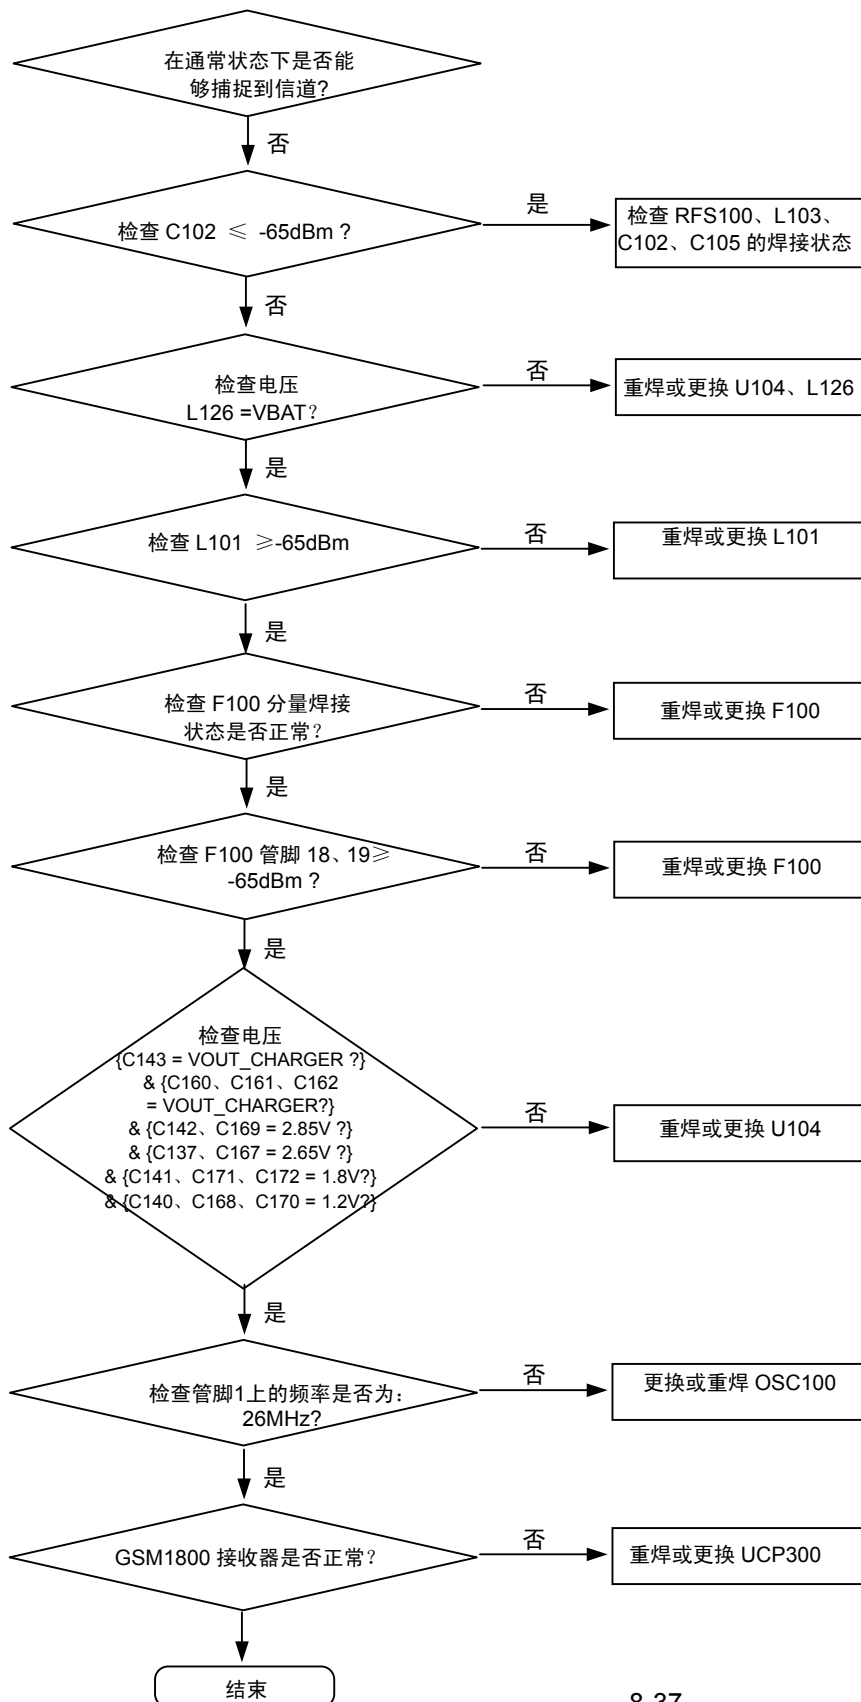


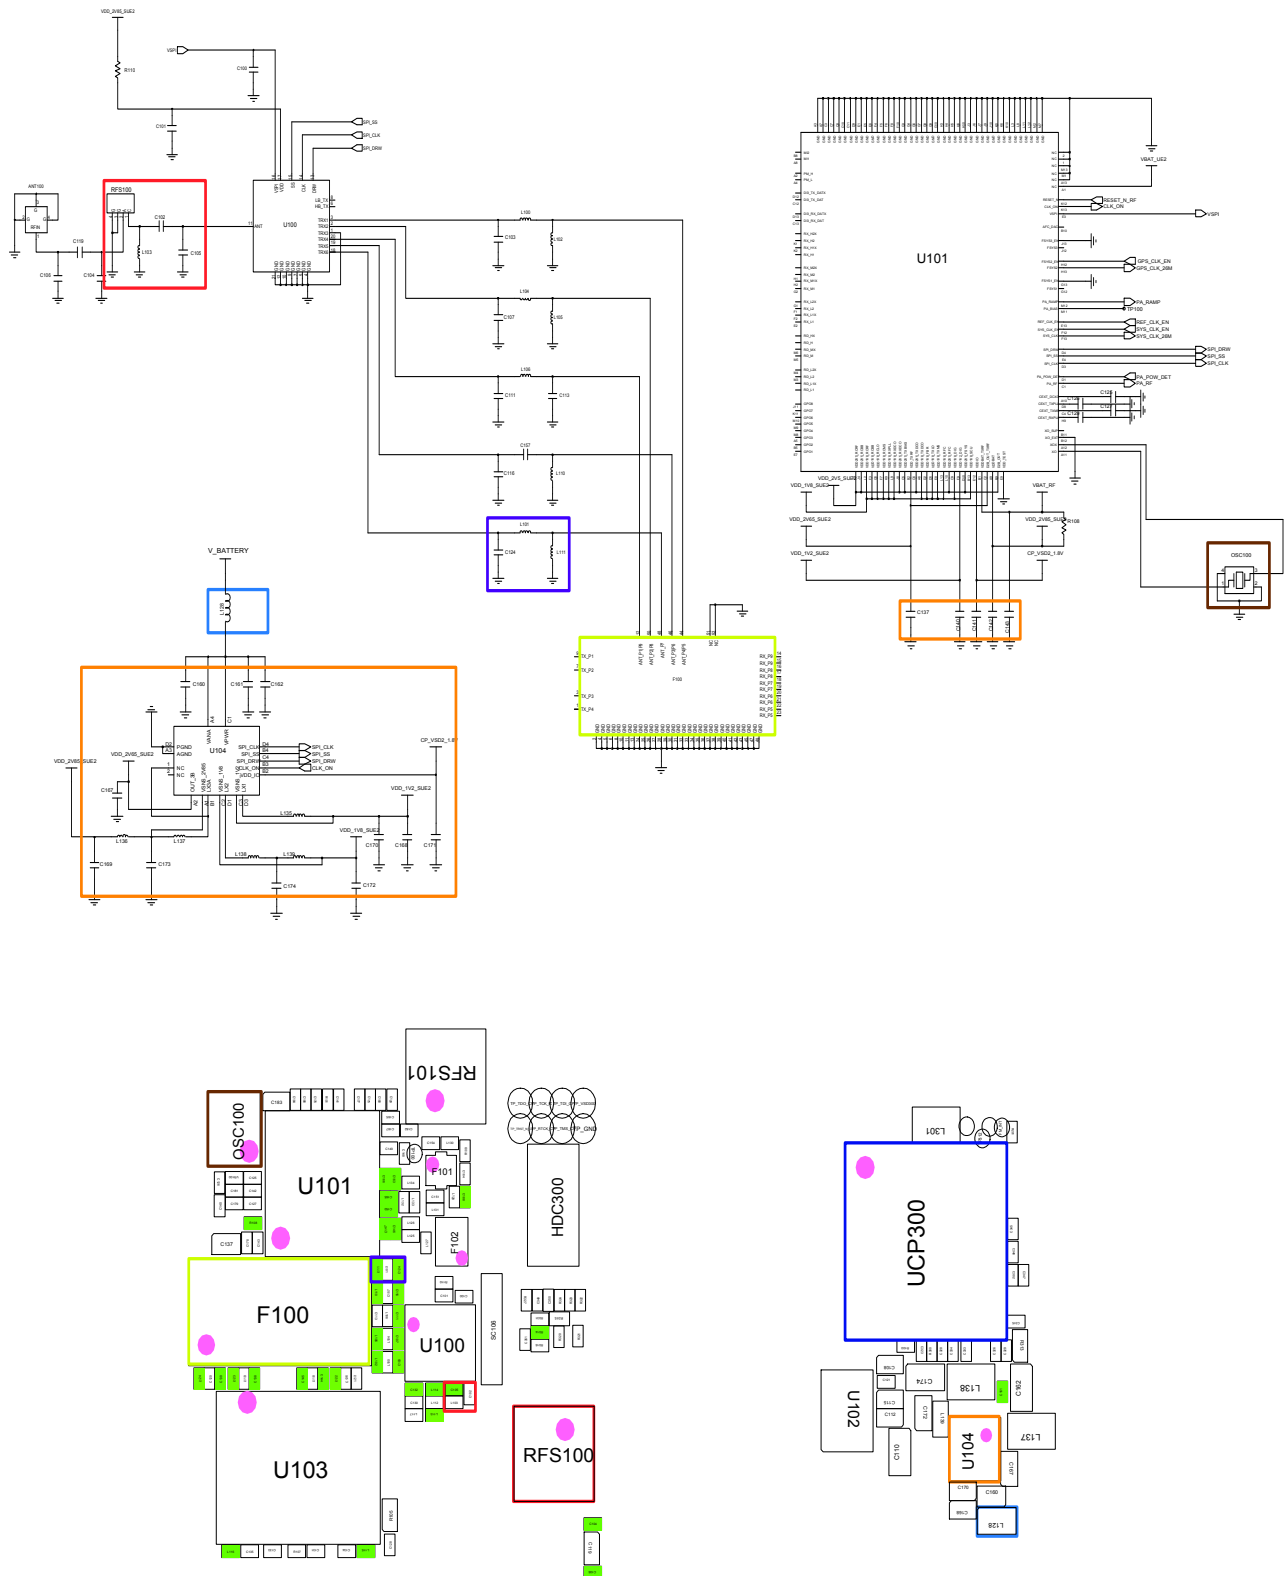


8-3-13.WCDMA Band1接收器

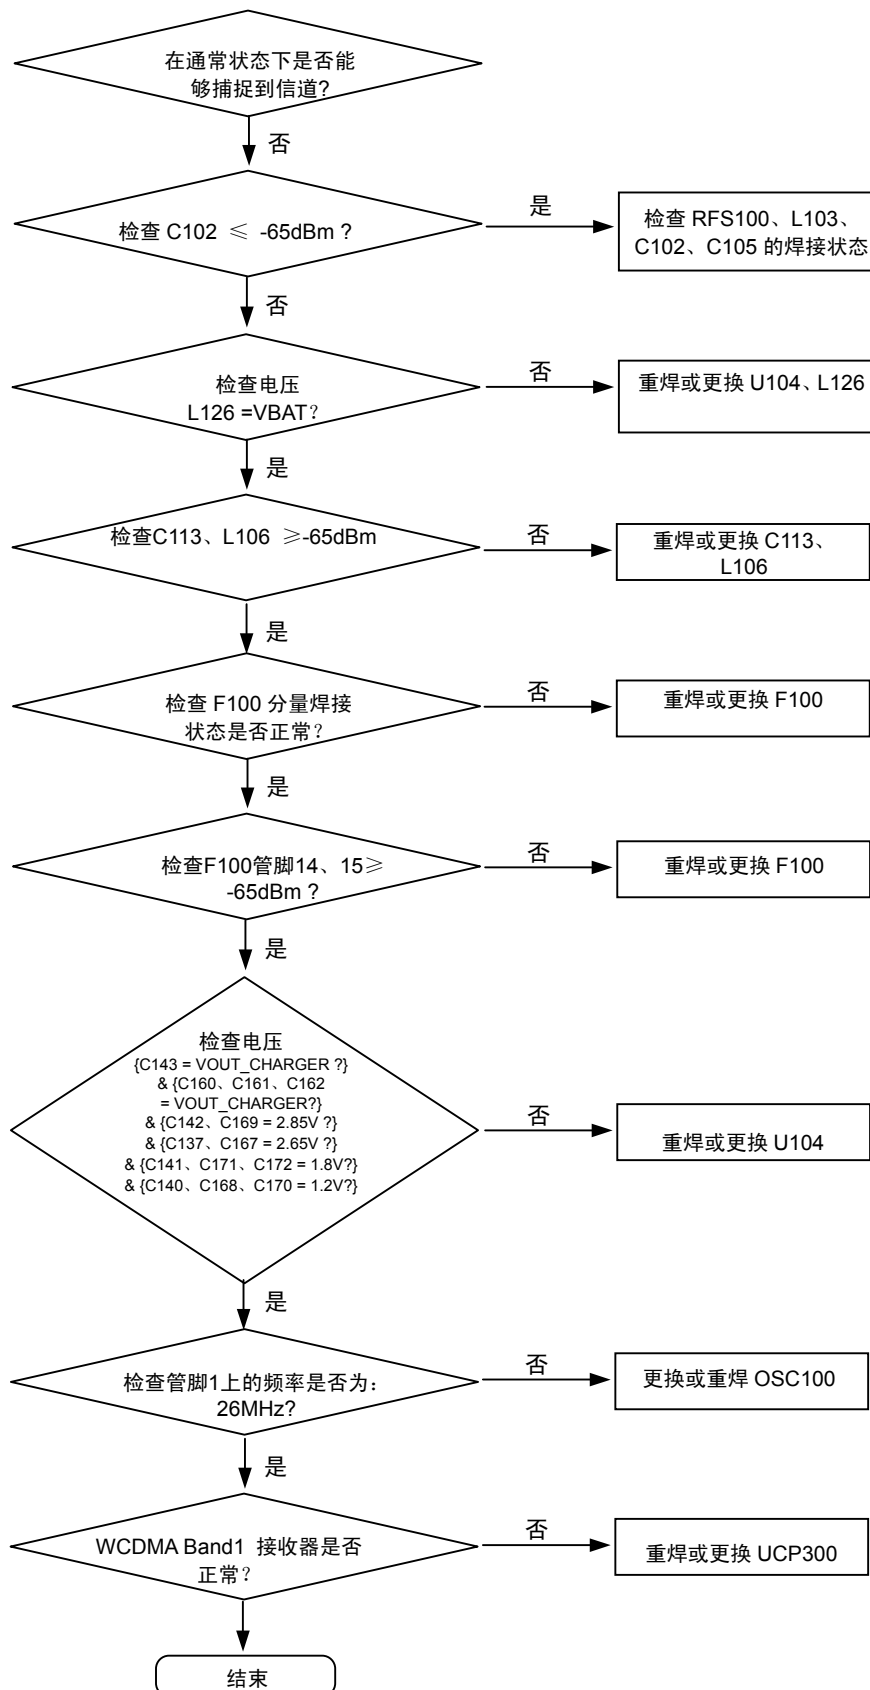


连续接收开通
射频输入：10700CH
功率：-50dBm





8-3-14.WCDMA Band2接收器/GSM1900接收器

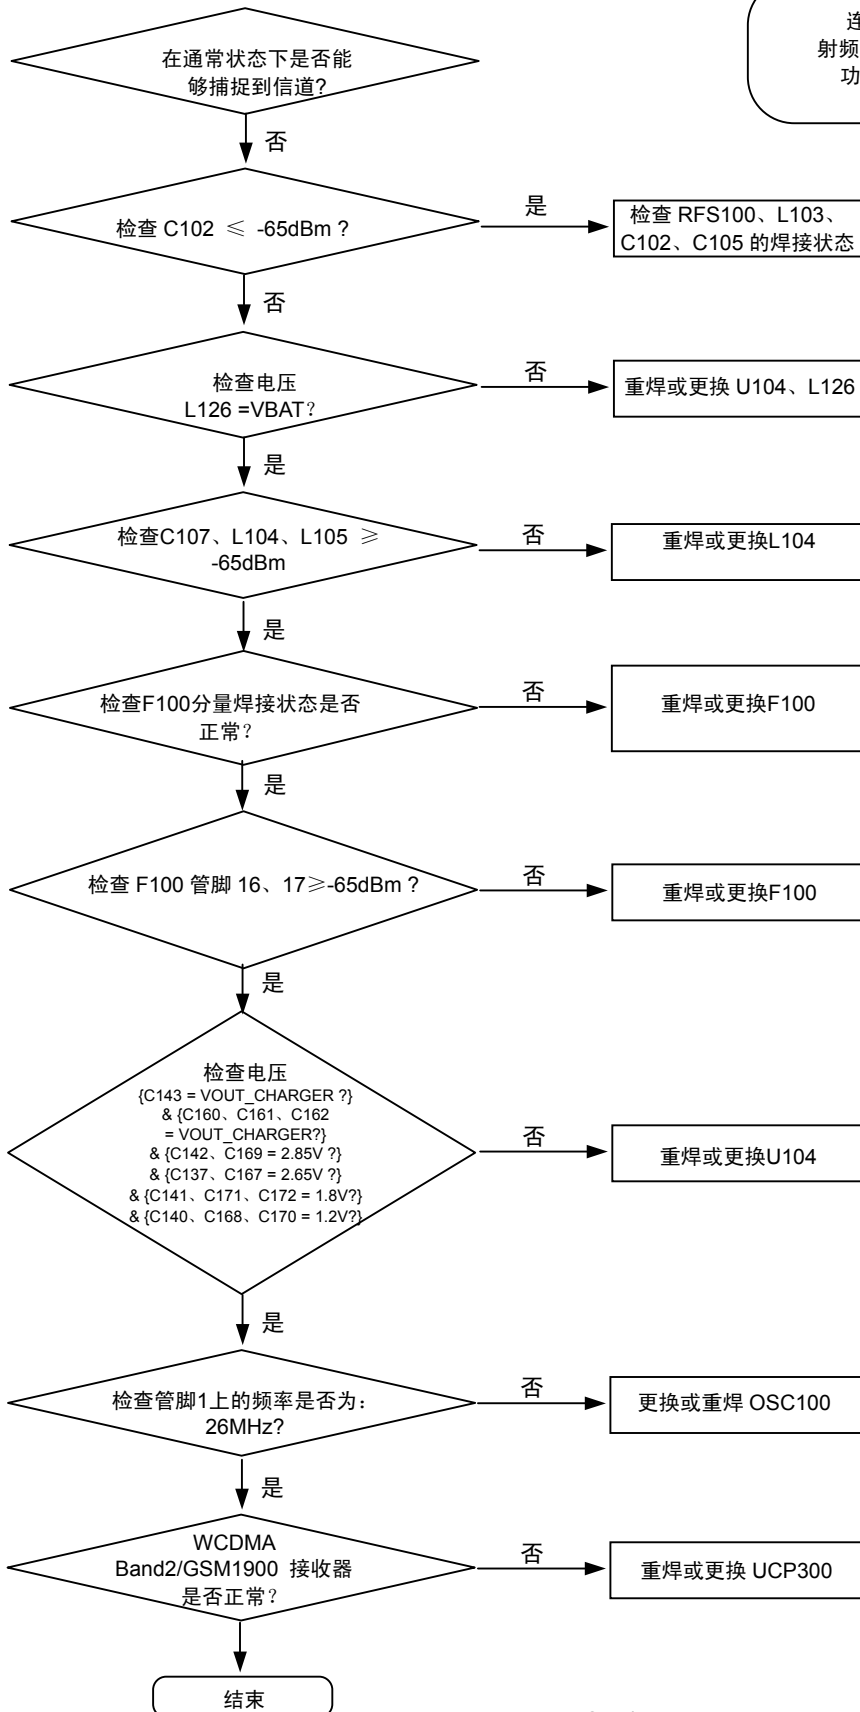





8-3-15.WCDMA Band5 /GSM850接收器

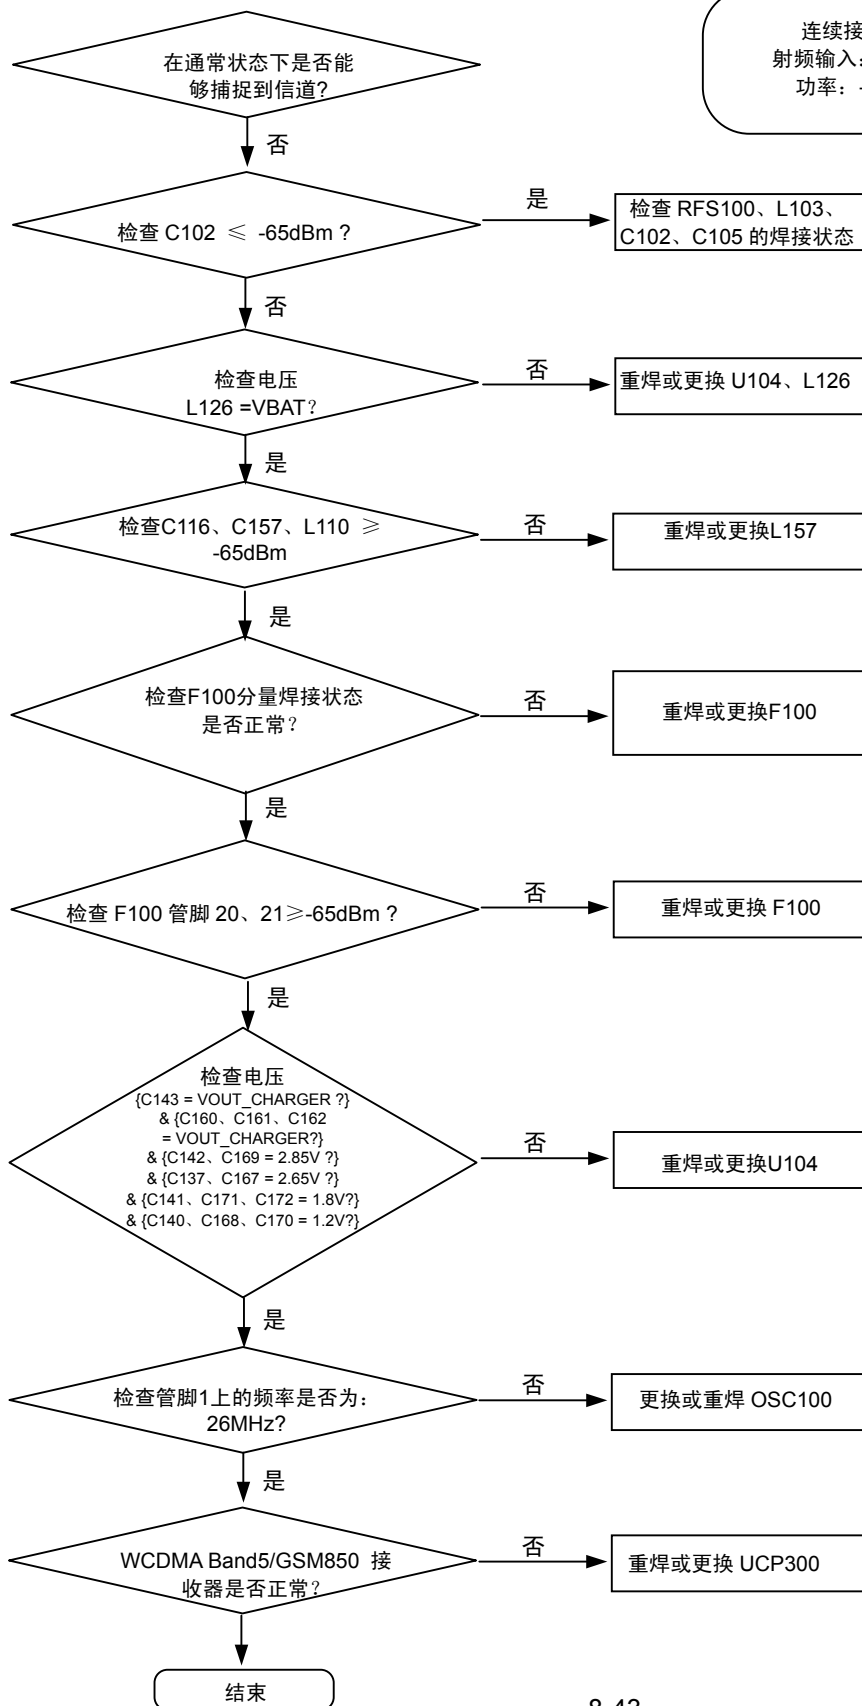

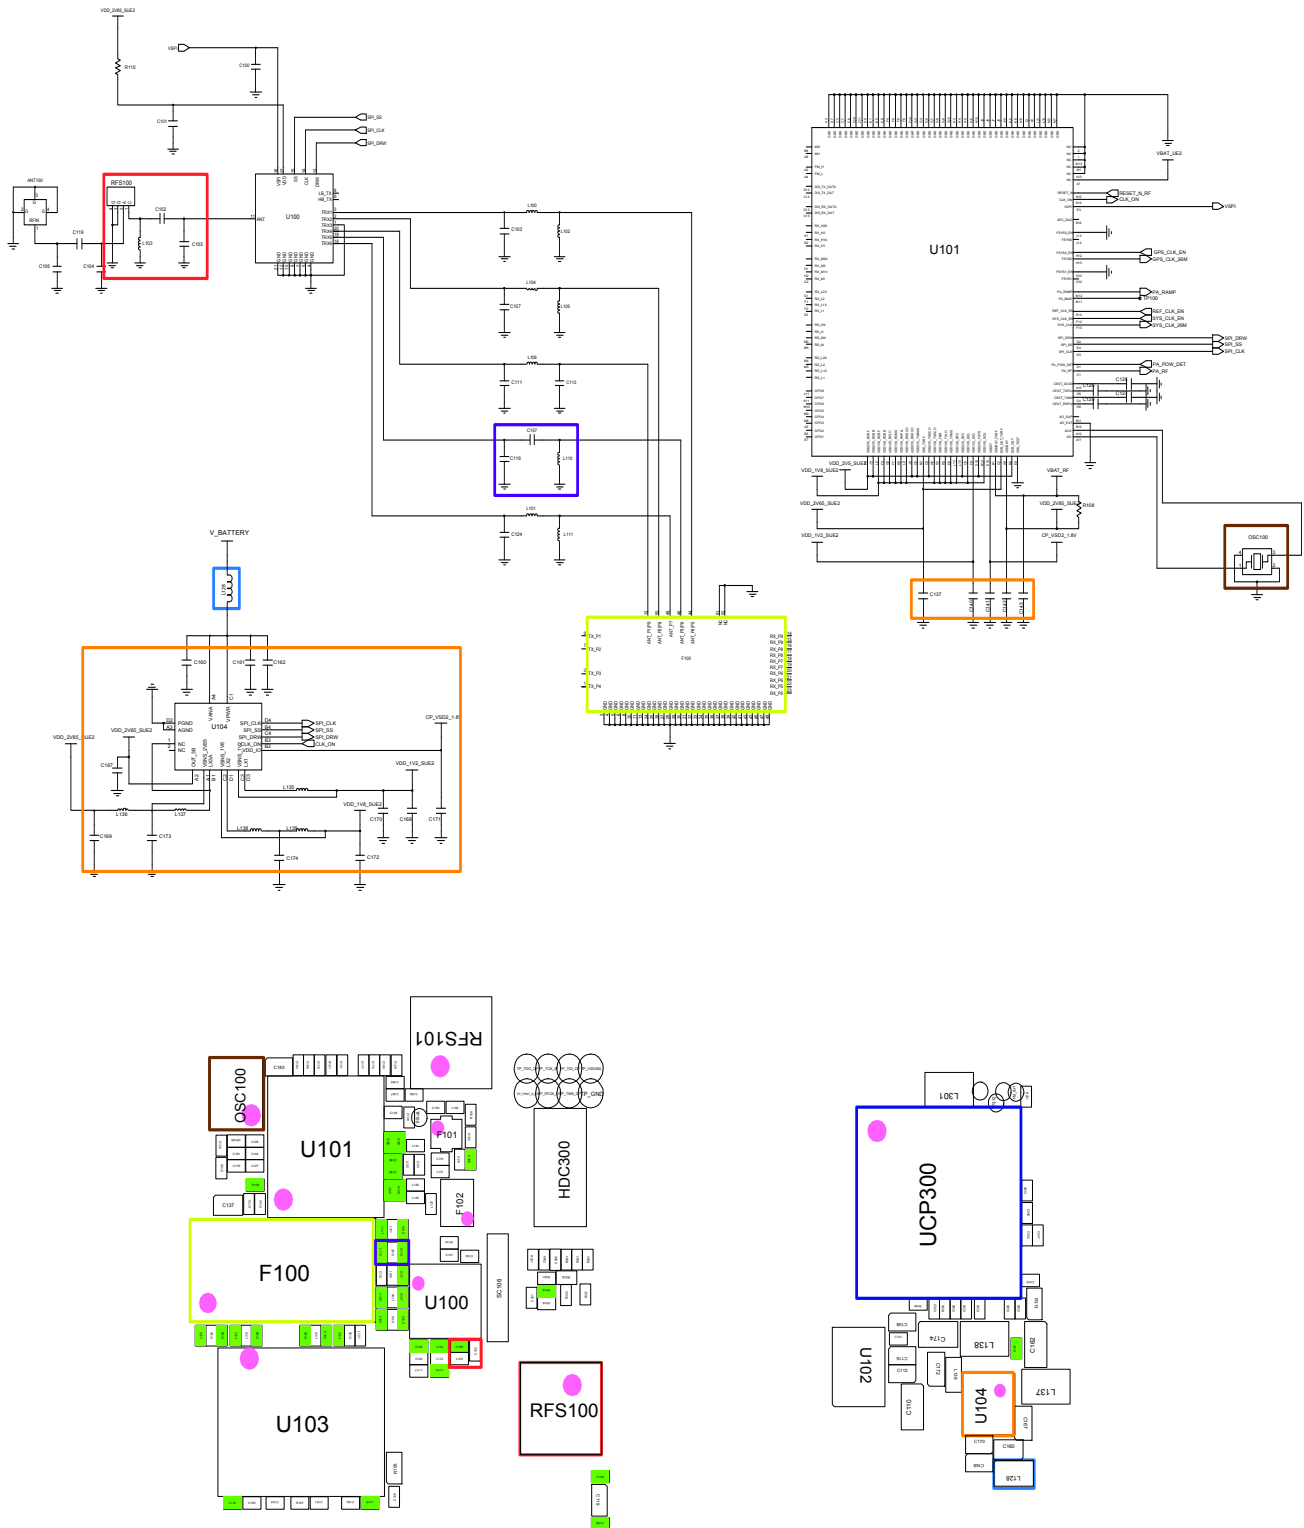


8-3-16.WCDMA Band8 /GSM900接收器

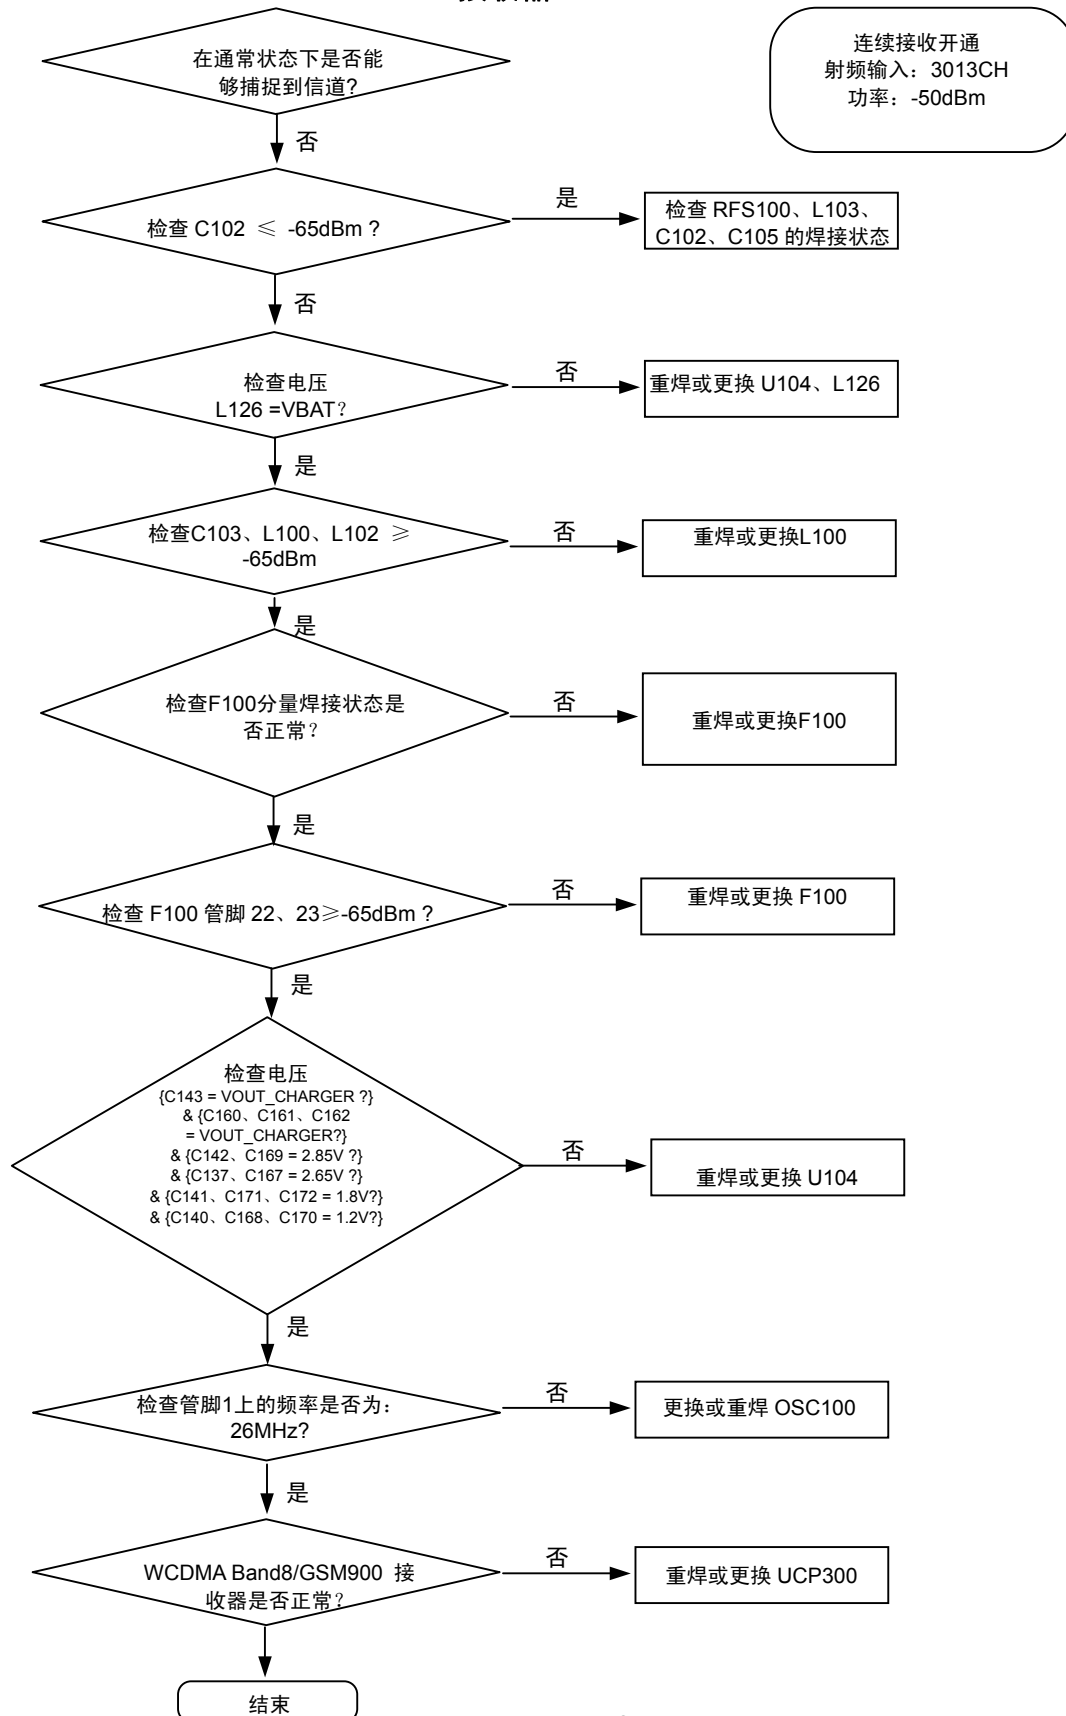


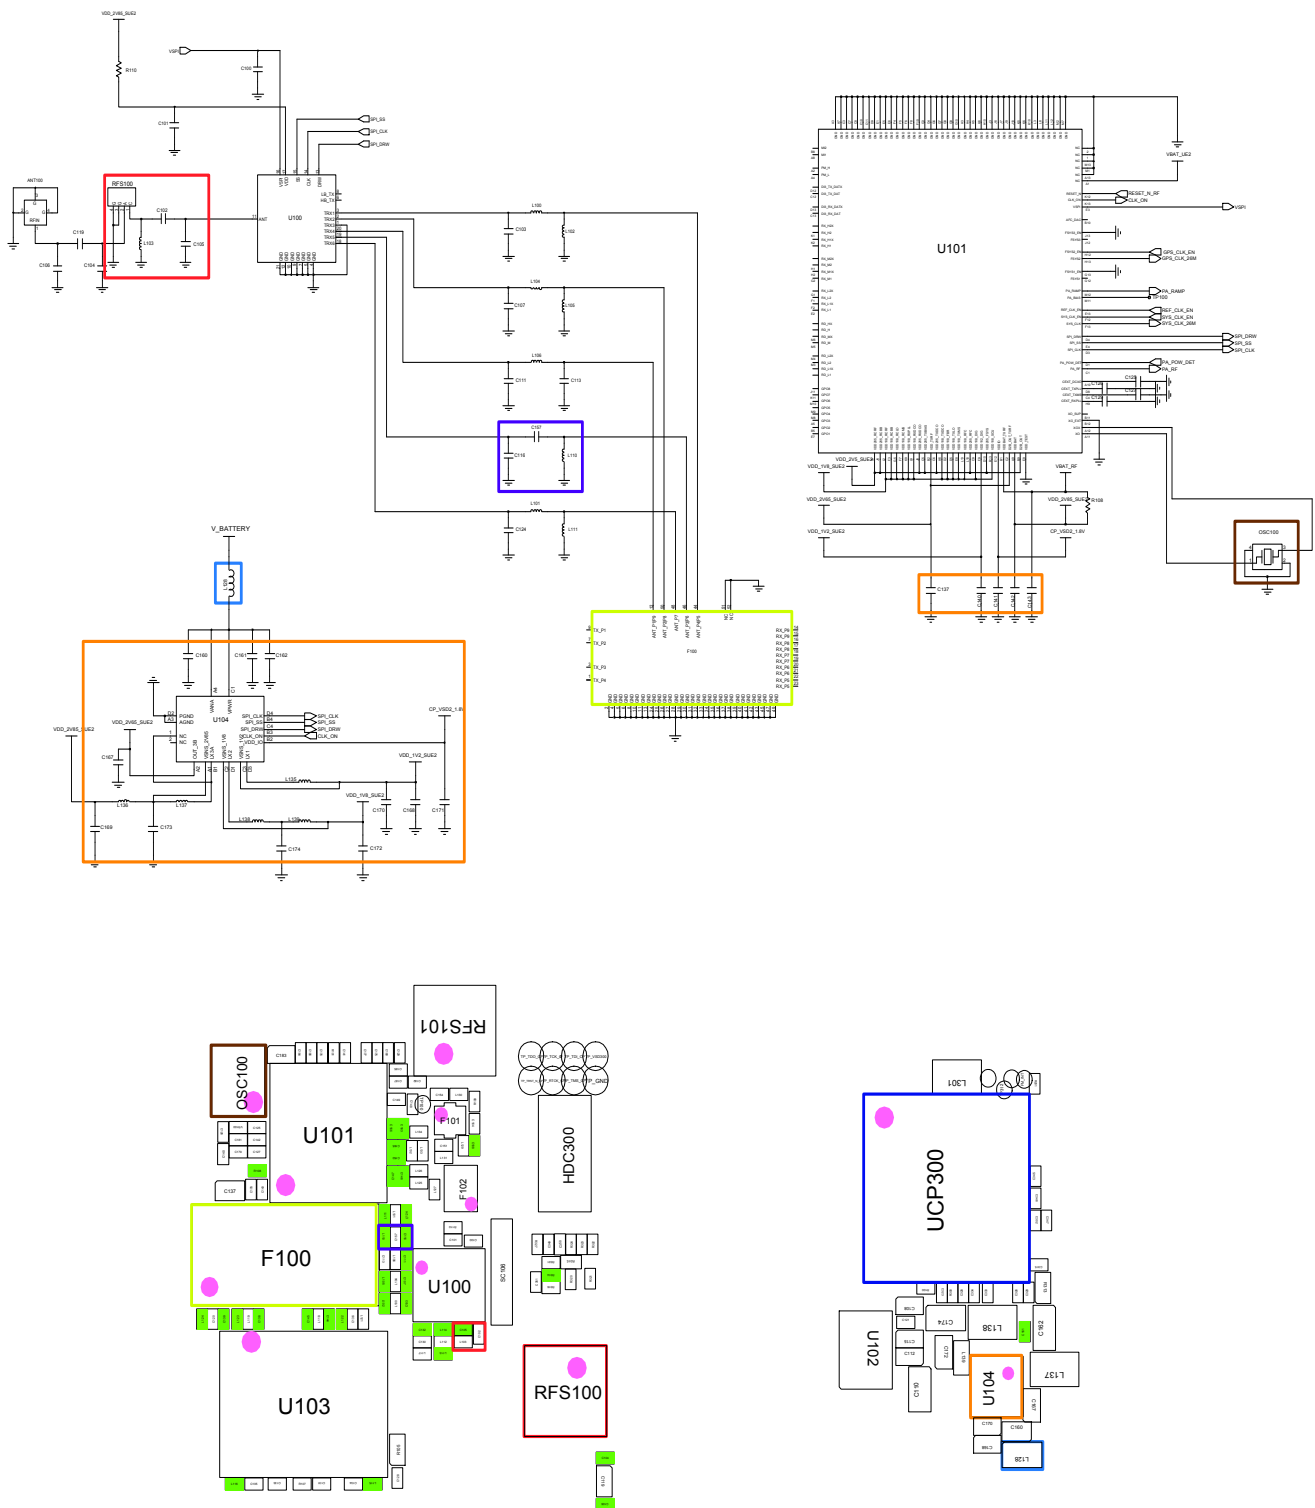


8-3-17.GSM850/GSM900发射器


持续发射开通条件
 DAC 发射功率: 应用代码 14500
 GSM850 CH: 190
 GSM900 CH: 37
 RBW: 100KHz
 VBW: 100KHz
 SPAN: 10MHz
 REF LEV.: 10dBm
 ATT.: 20dB

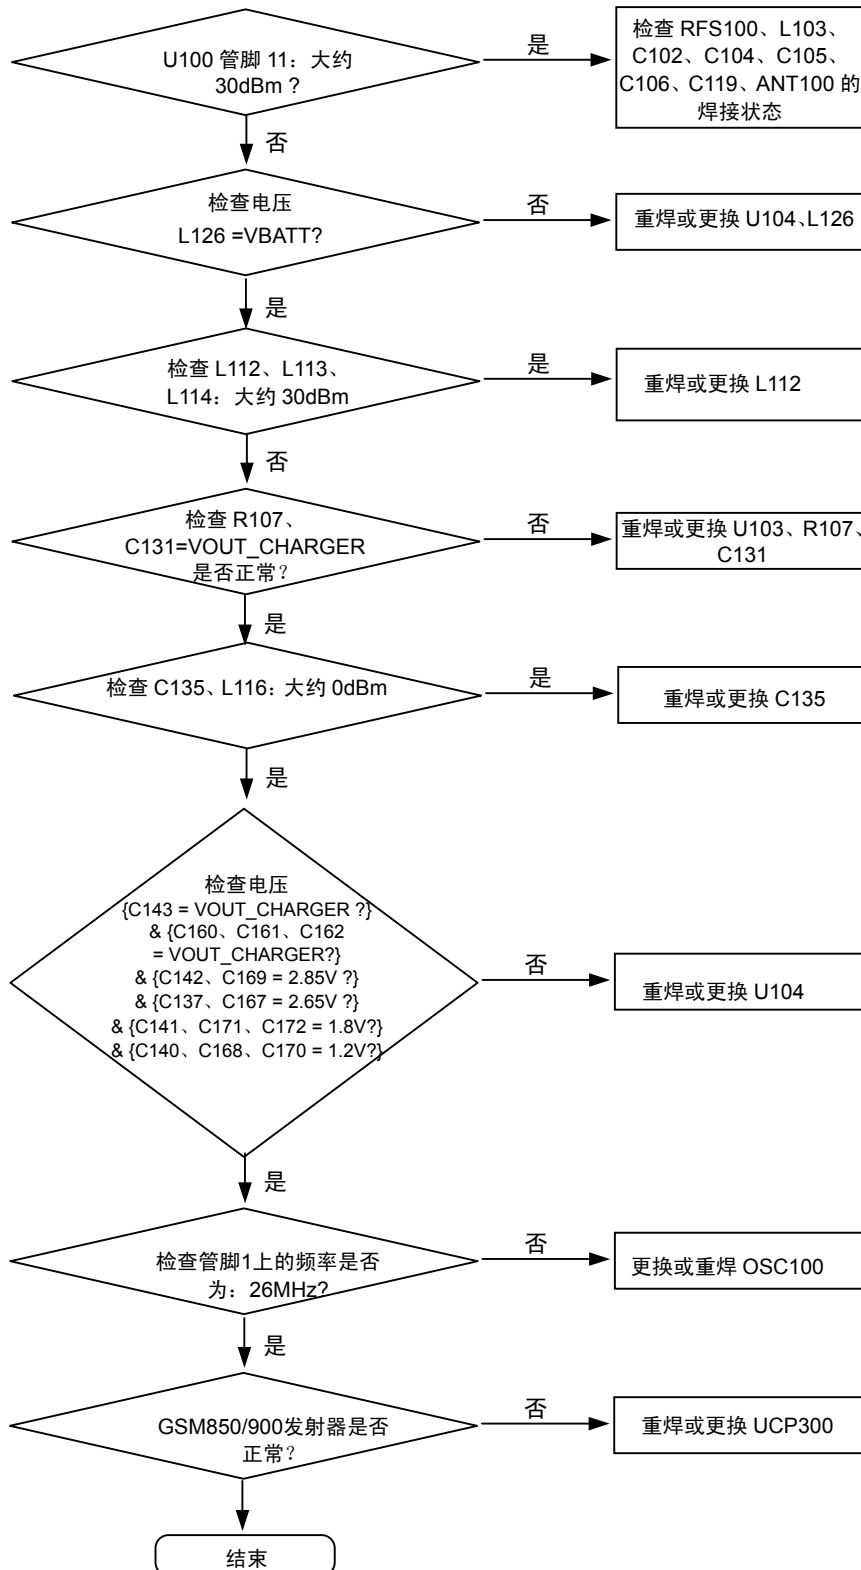

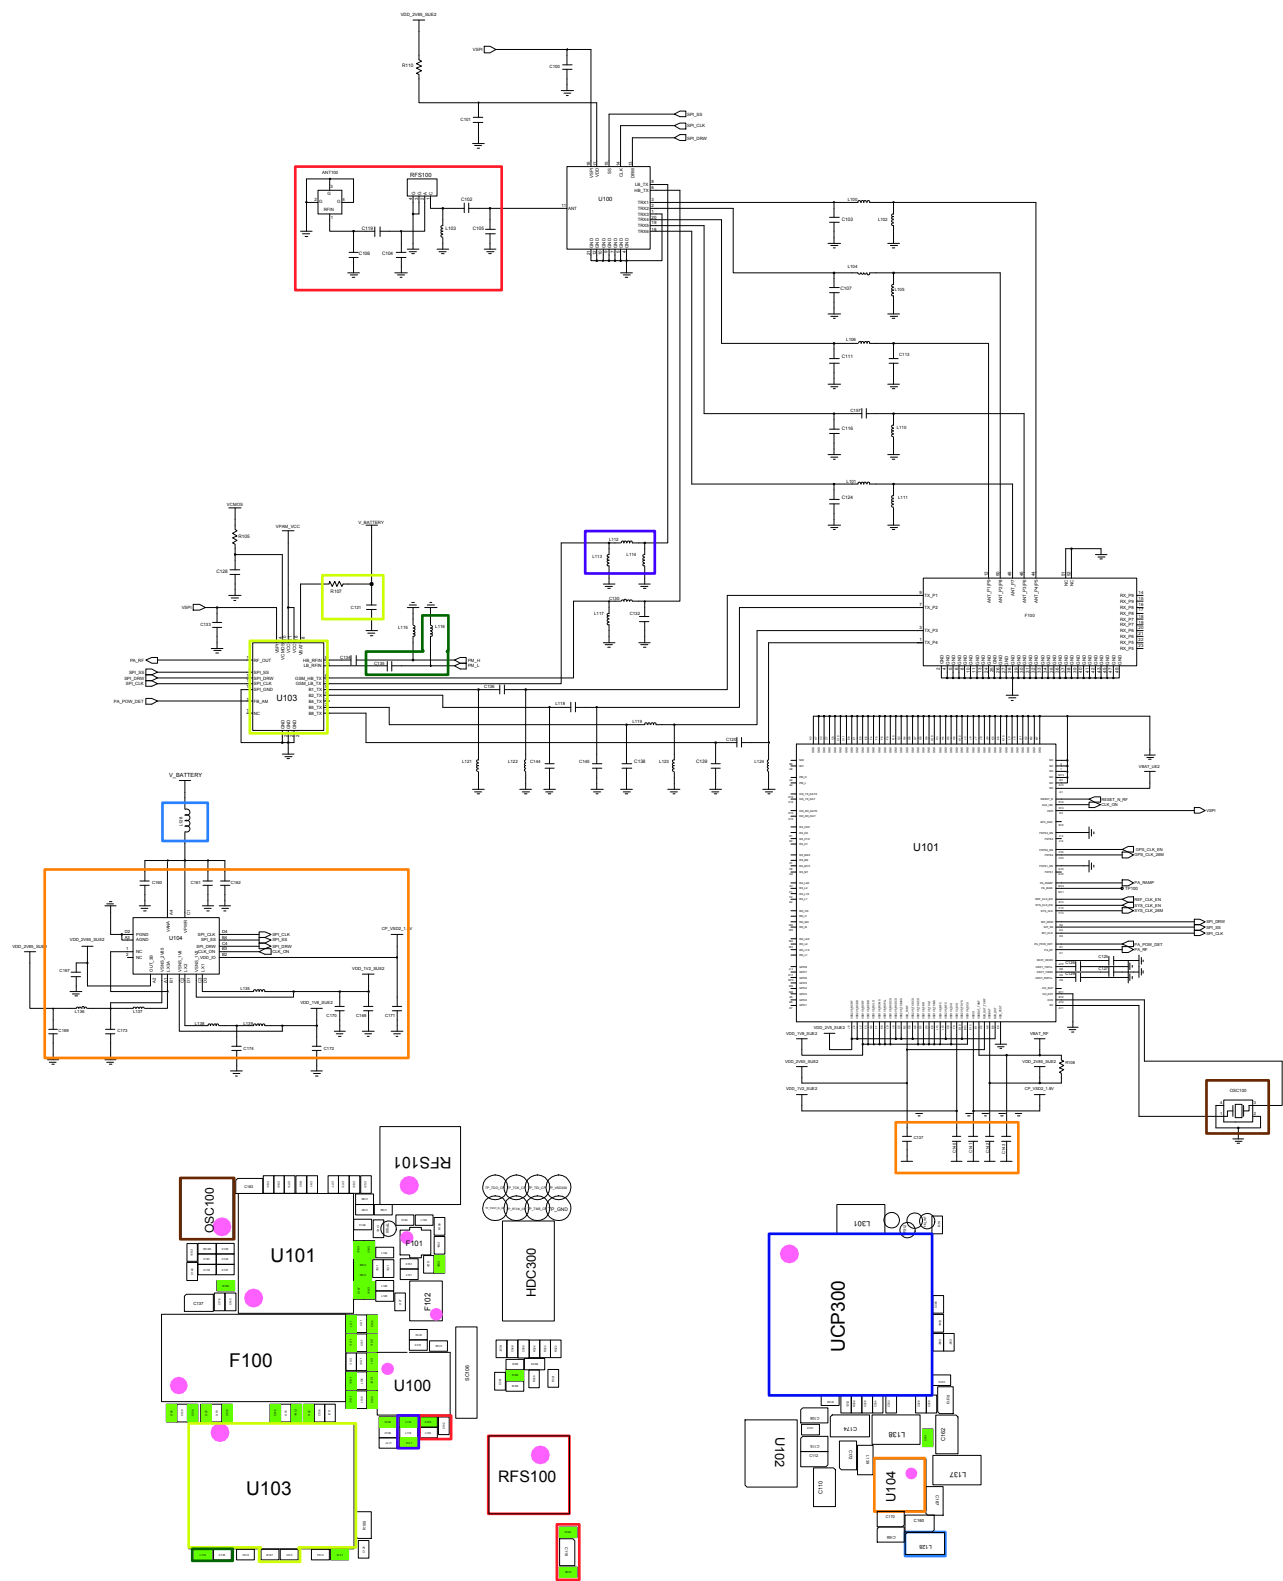


8-3-18.DCS/PCS发射器

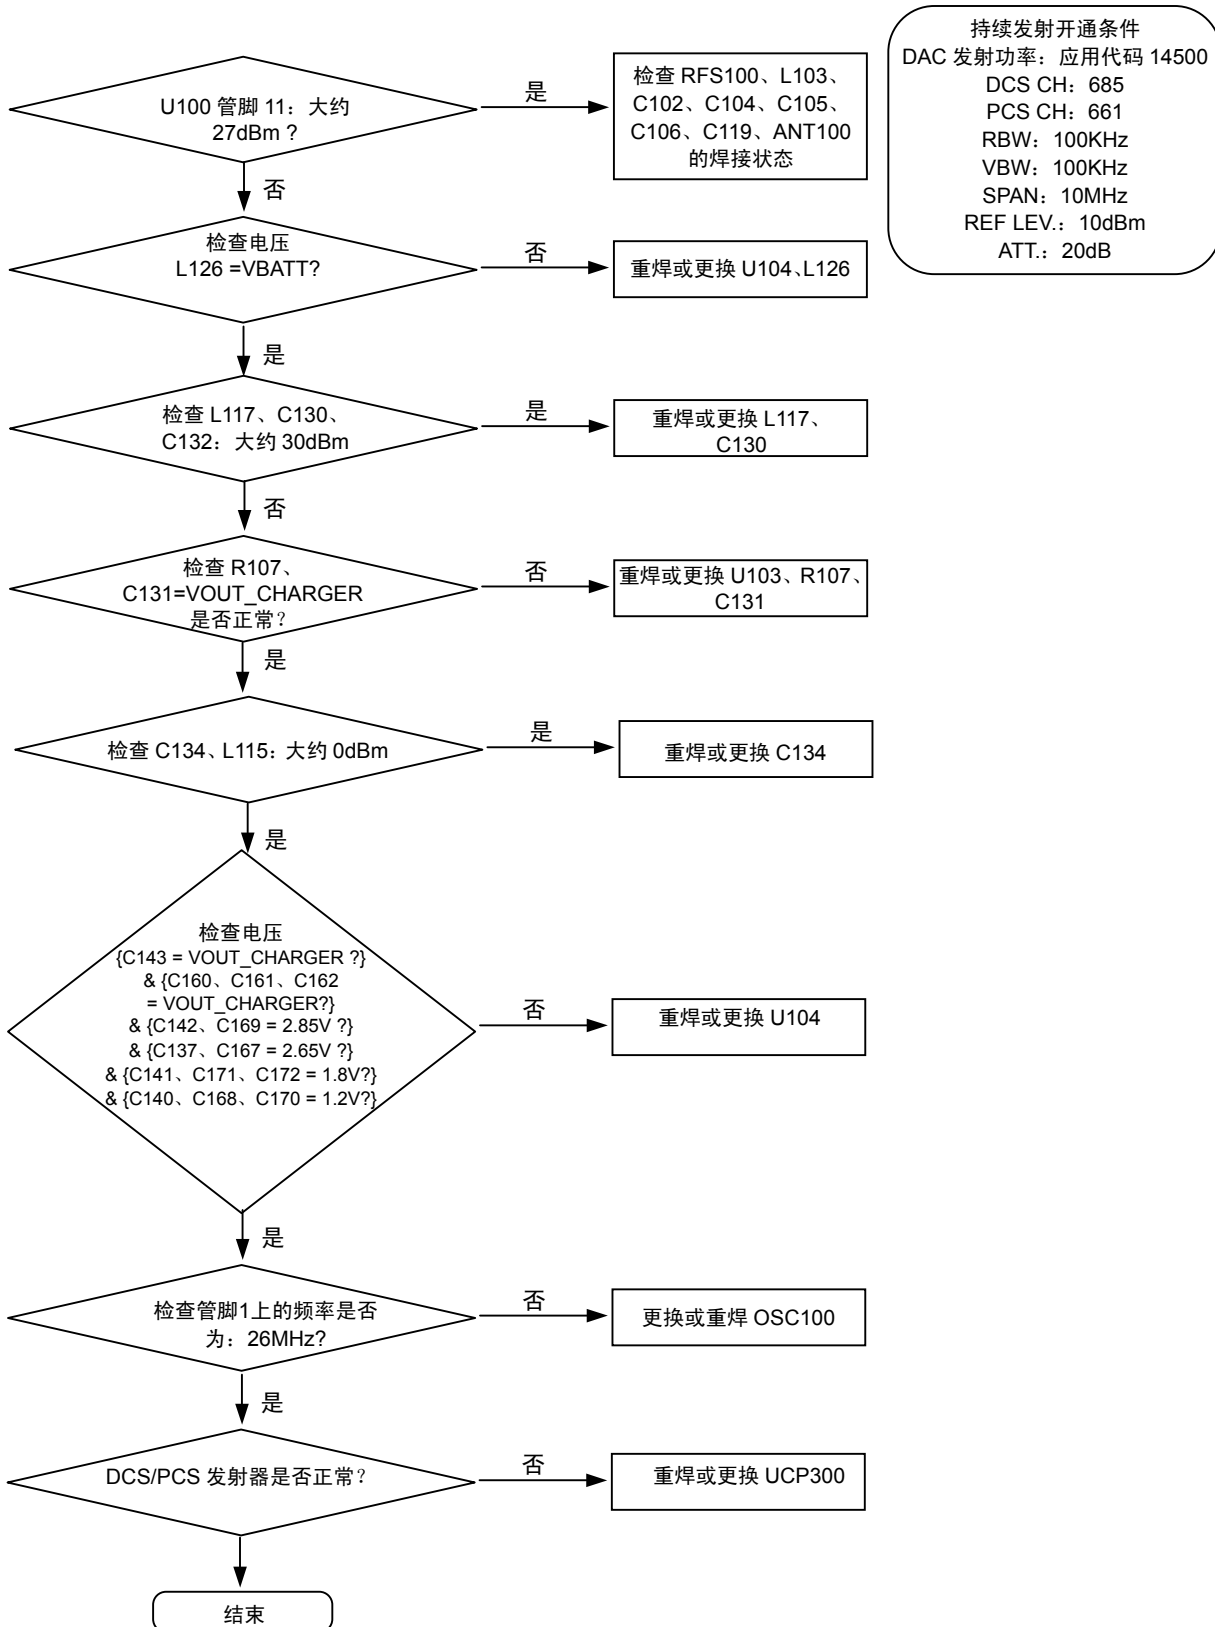


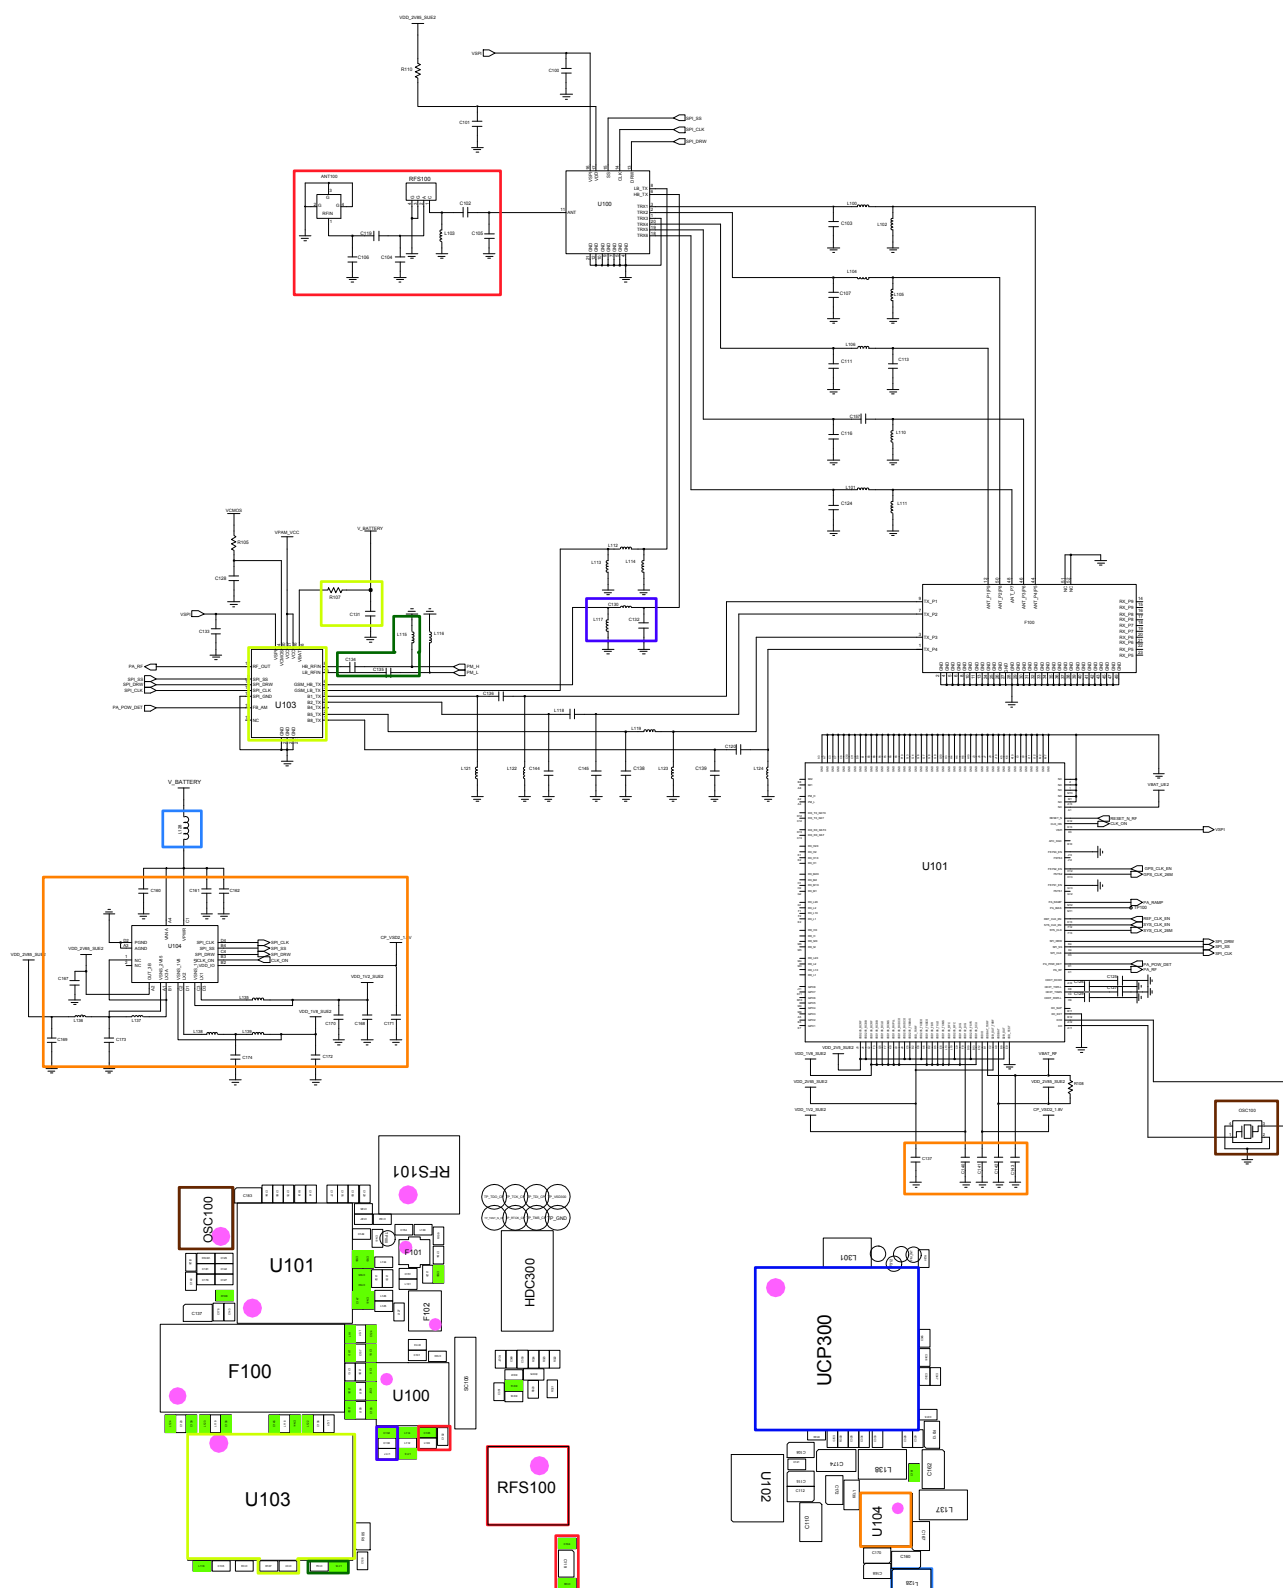


8-3-19.WCDMA Band1发射器

持续发射开通条件
 DAC 发射功率: 应用代码 14500
 WCDMA Band1 CH: 10700
 RBW: 100KHz
 VBW: 100KHz
 SPAN: 10MHz
 REF LEV.: 10dBm
 ATT.: 20dB

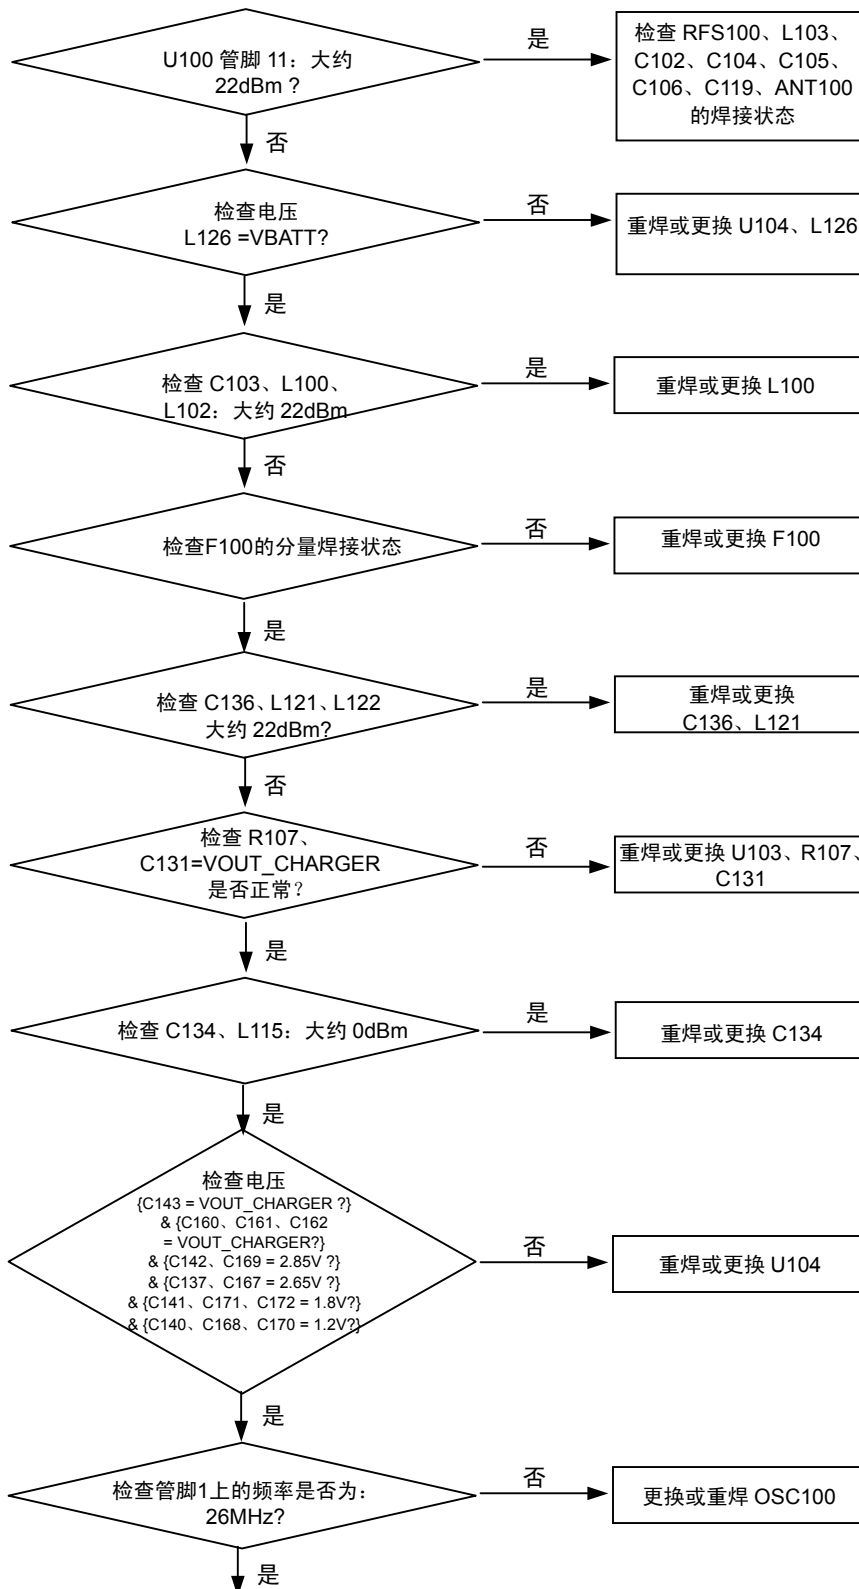


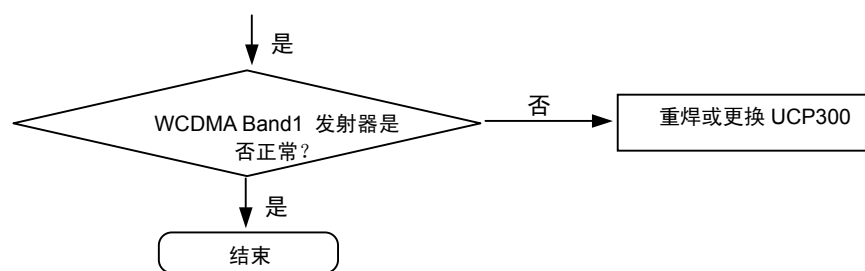


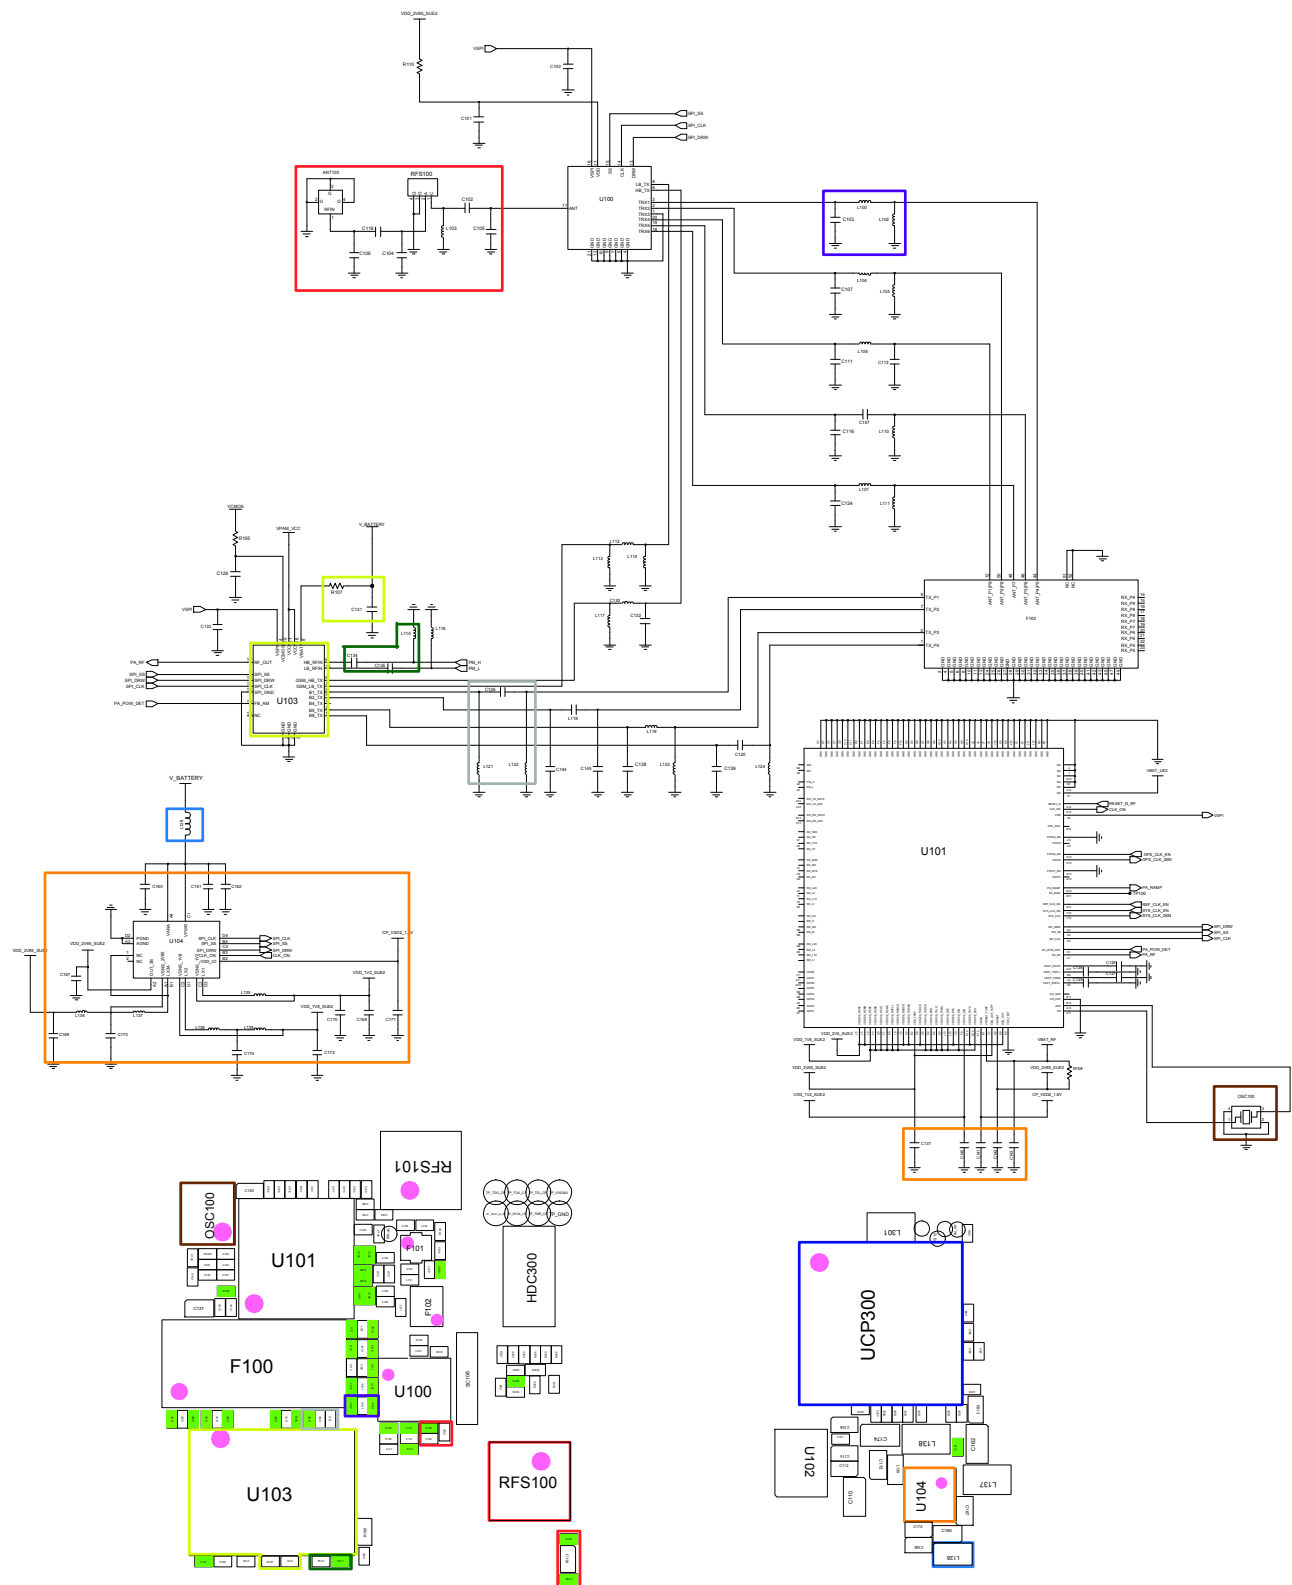


8-3-20.WCDMA Band2发射器

持续发射开通条件
 DAC 发射功率: 应用代码 14500
 WCDMA Band2 CH: 9880
 RBW: 100KHz
 VBW: 100KHz
 SPAN: 10MHz
 REF LEV.: 10dBm
 ATT.: 20dB

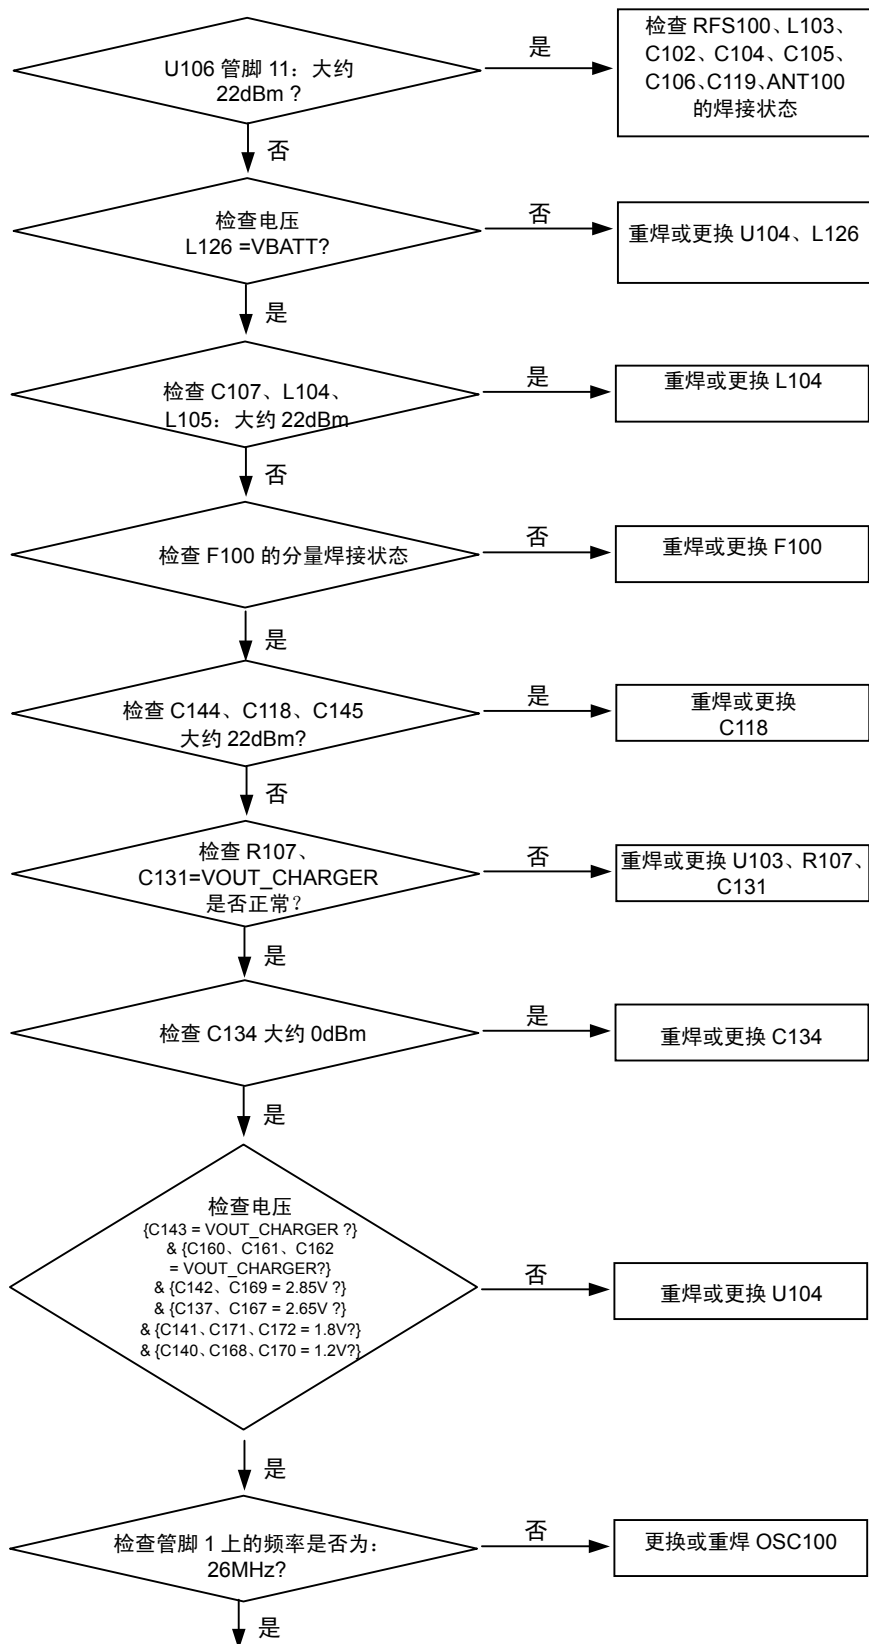


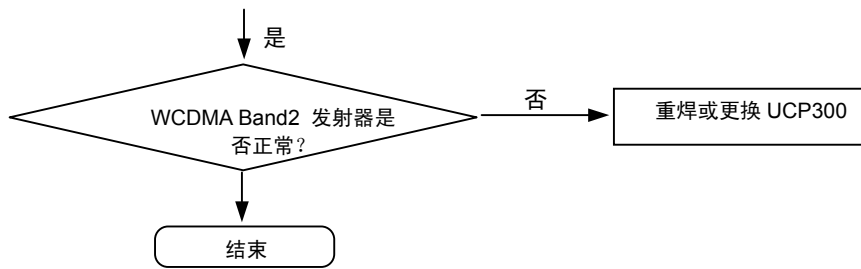





8-3-21.WCDMA Band5发射器


持续发射开通条件
 DAC 发射功率: 应用代码 14500
 WCDMA Band5 CH: 4408
 RBW: 100KHz
 VBW: 100KHz
 SPAN: 10MHz
 REF LEV.: 10dBm
 ATT.: 20dB

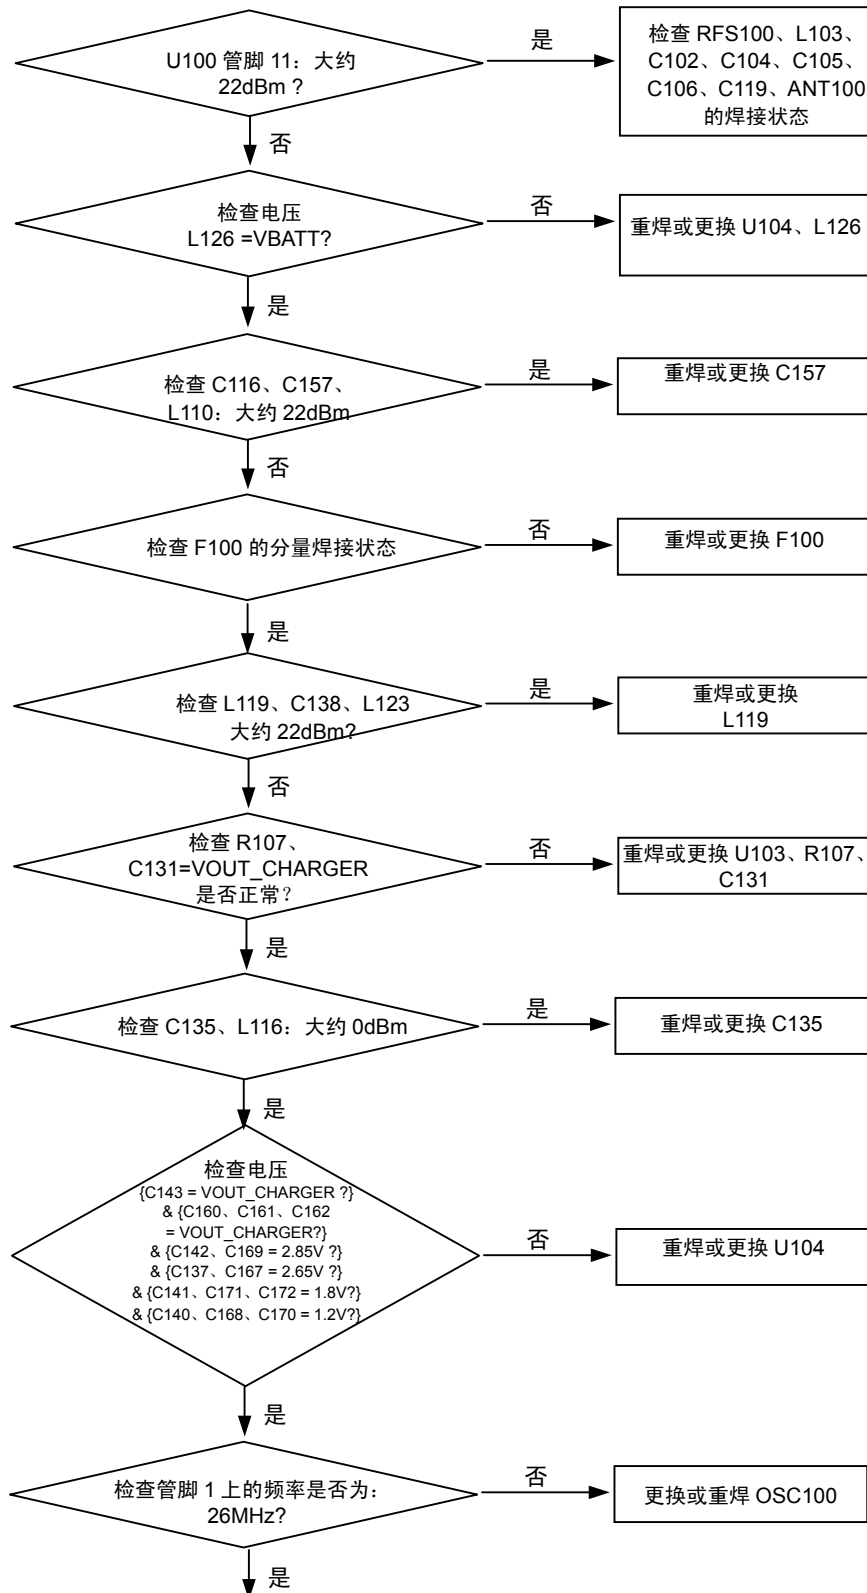

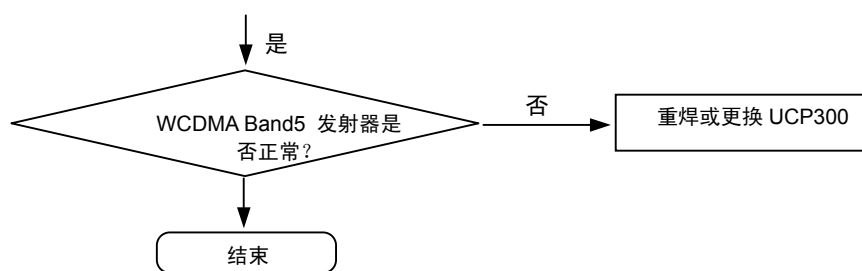



8-3-22.WCDMA Band8发射器

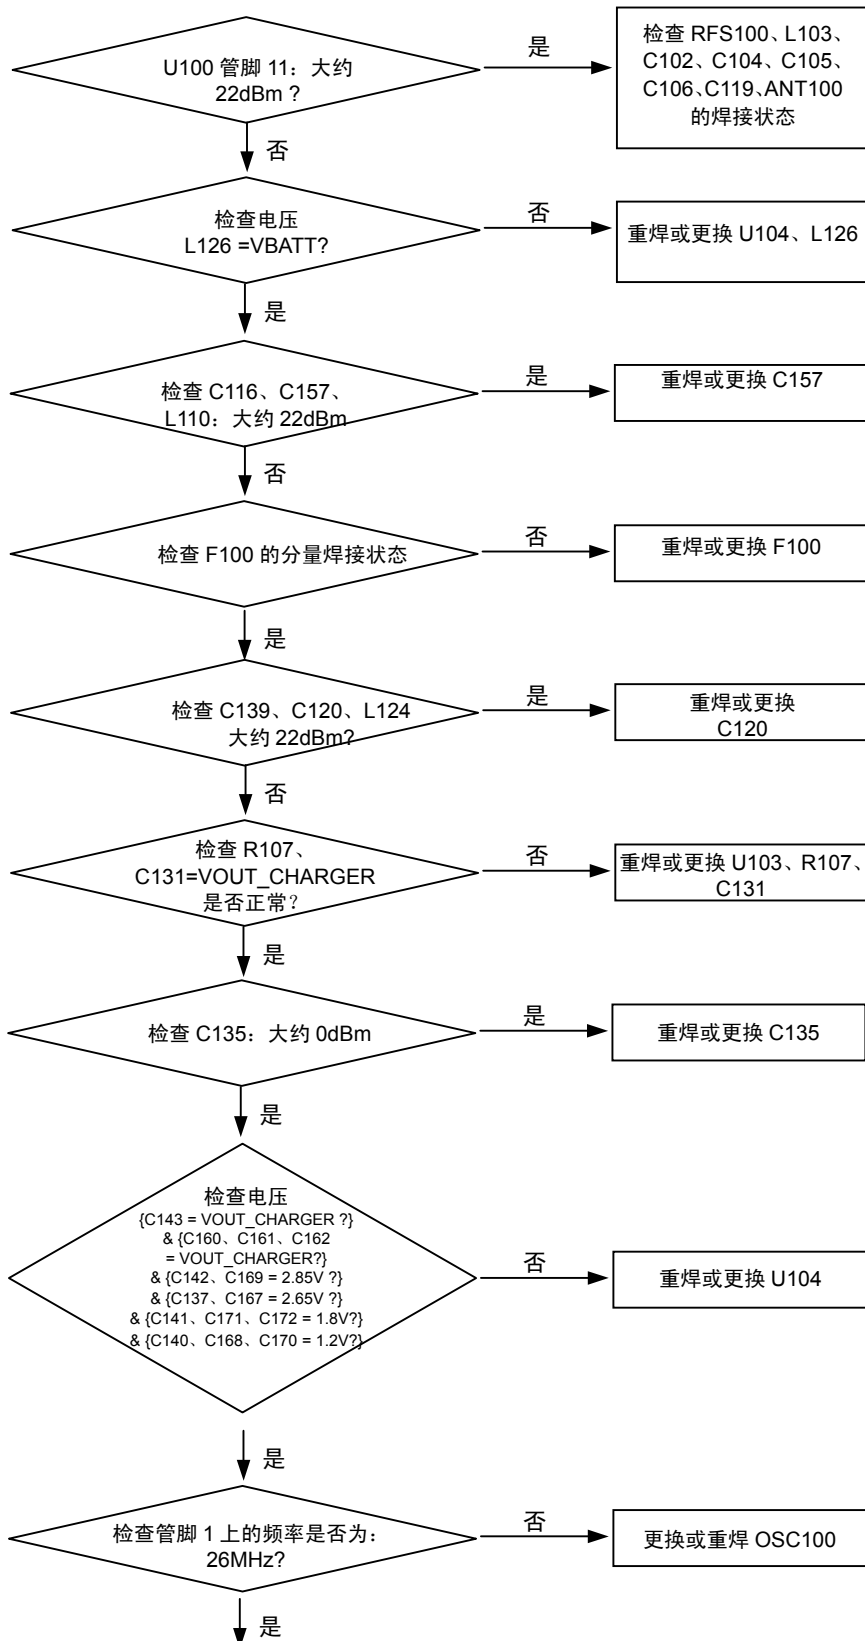

持续发射开通条件
 DAC 发射功率: 应用代码 14500
 WCDMA Band2 CH: 3013
 RBW: 100KHz
 VBW: 100KHz
 SPAN: 10MHz
 REF LEV.: 10dBm
 ATT.: 20dB

