


8. Level 3 Repair


8-1. Components Layout

TOP

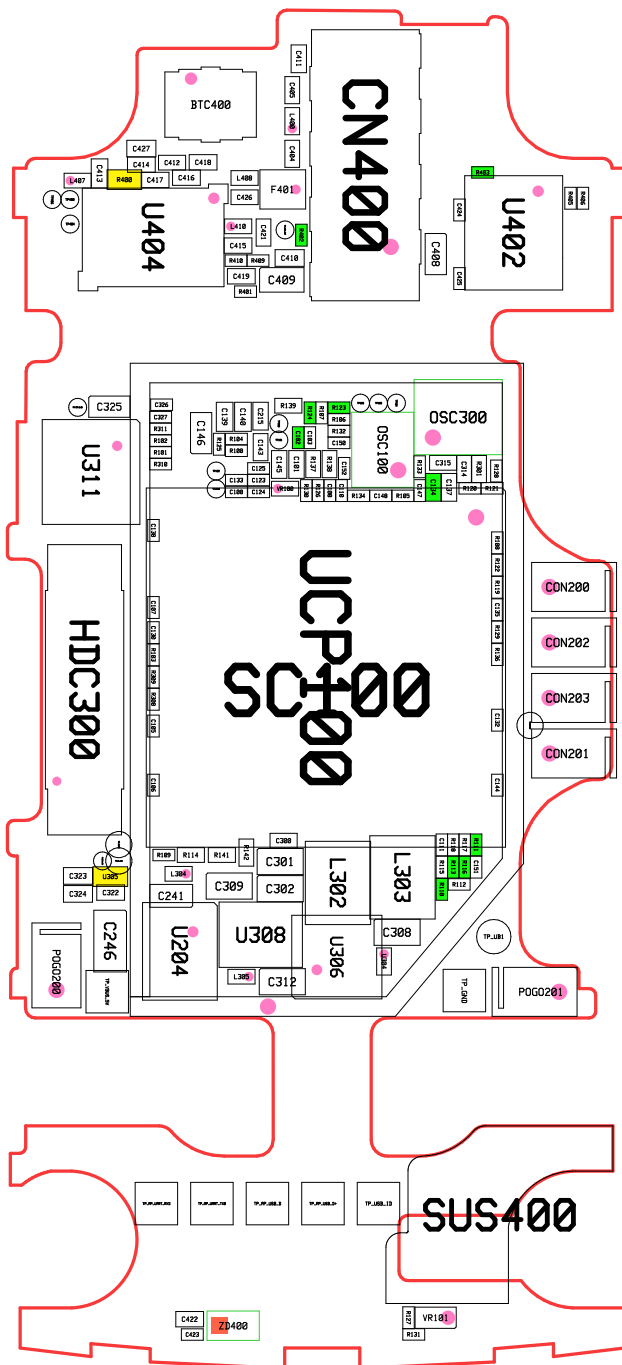


8. Level 3 Repair

Bottom

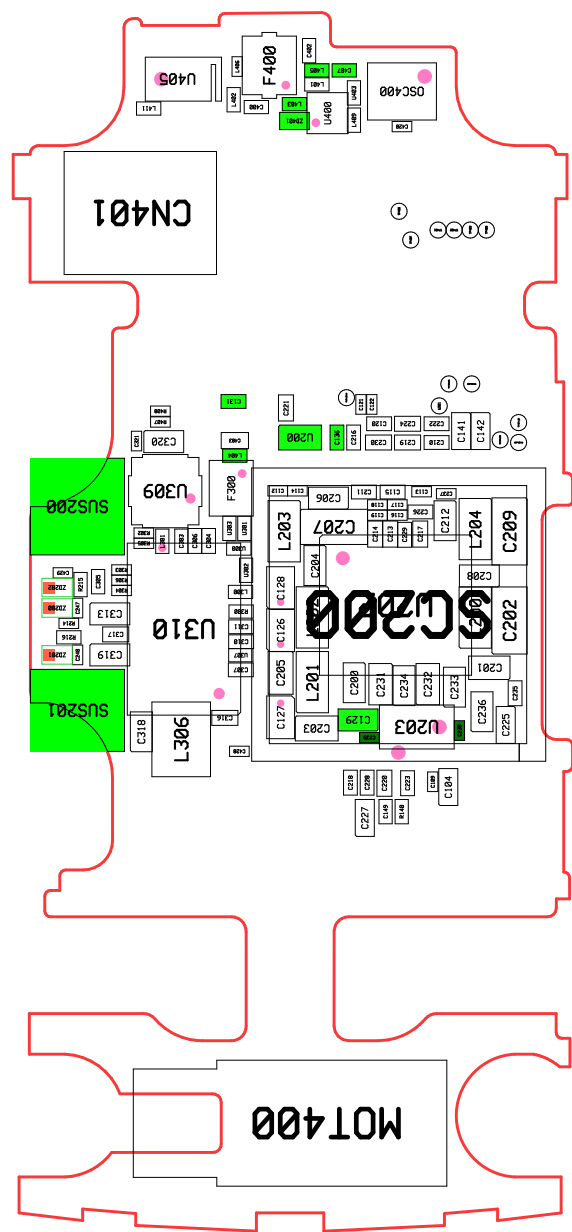


8-2. Block Diagram



Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.


8. Level 3 Repair

8-3. Flow chart of Troubleshooting.

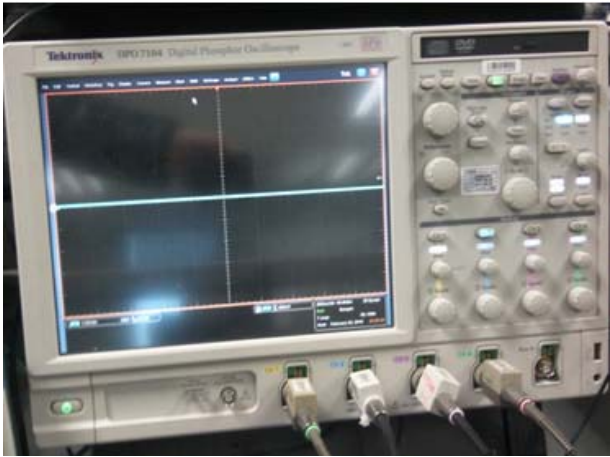	
Oscilloscope	Digital Multimeter
	
Power Supply	+ driver, ESD Safe Tweezer
	
Soldering iron	


8. Level 3 Repair

8-4-1. Power On

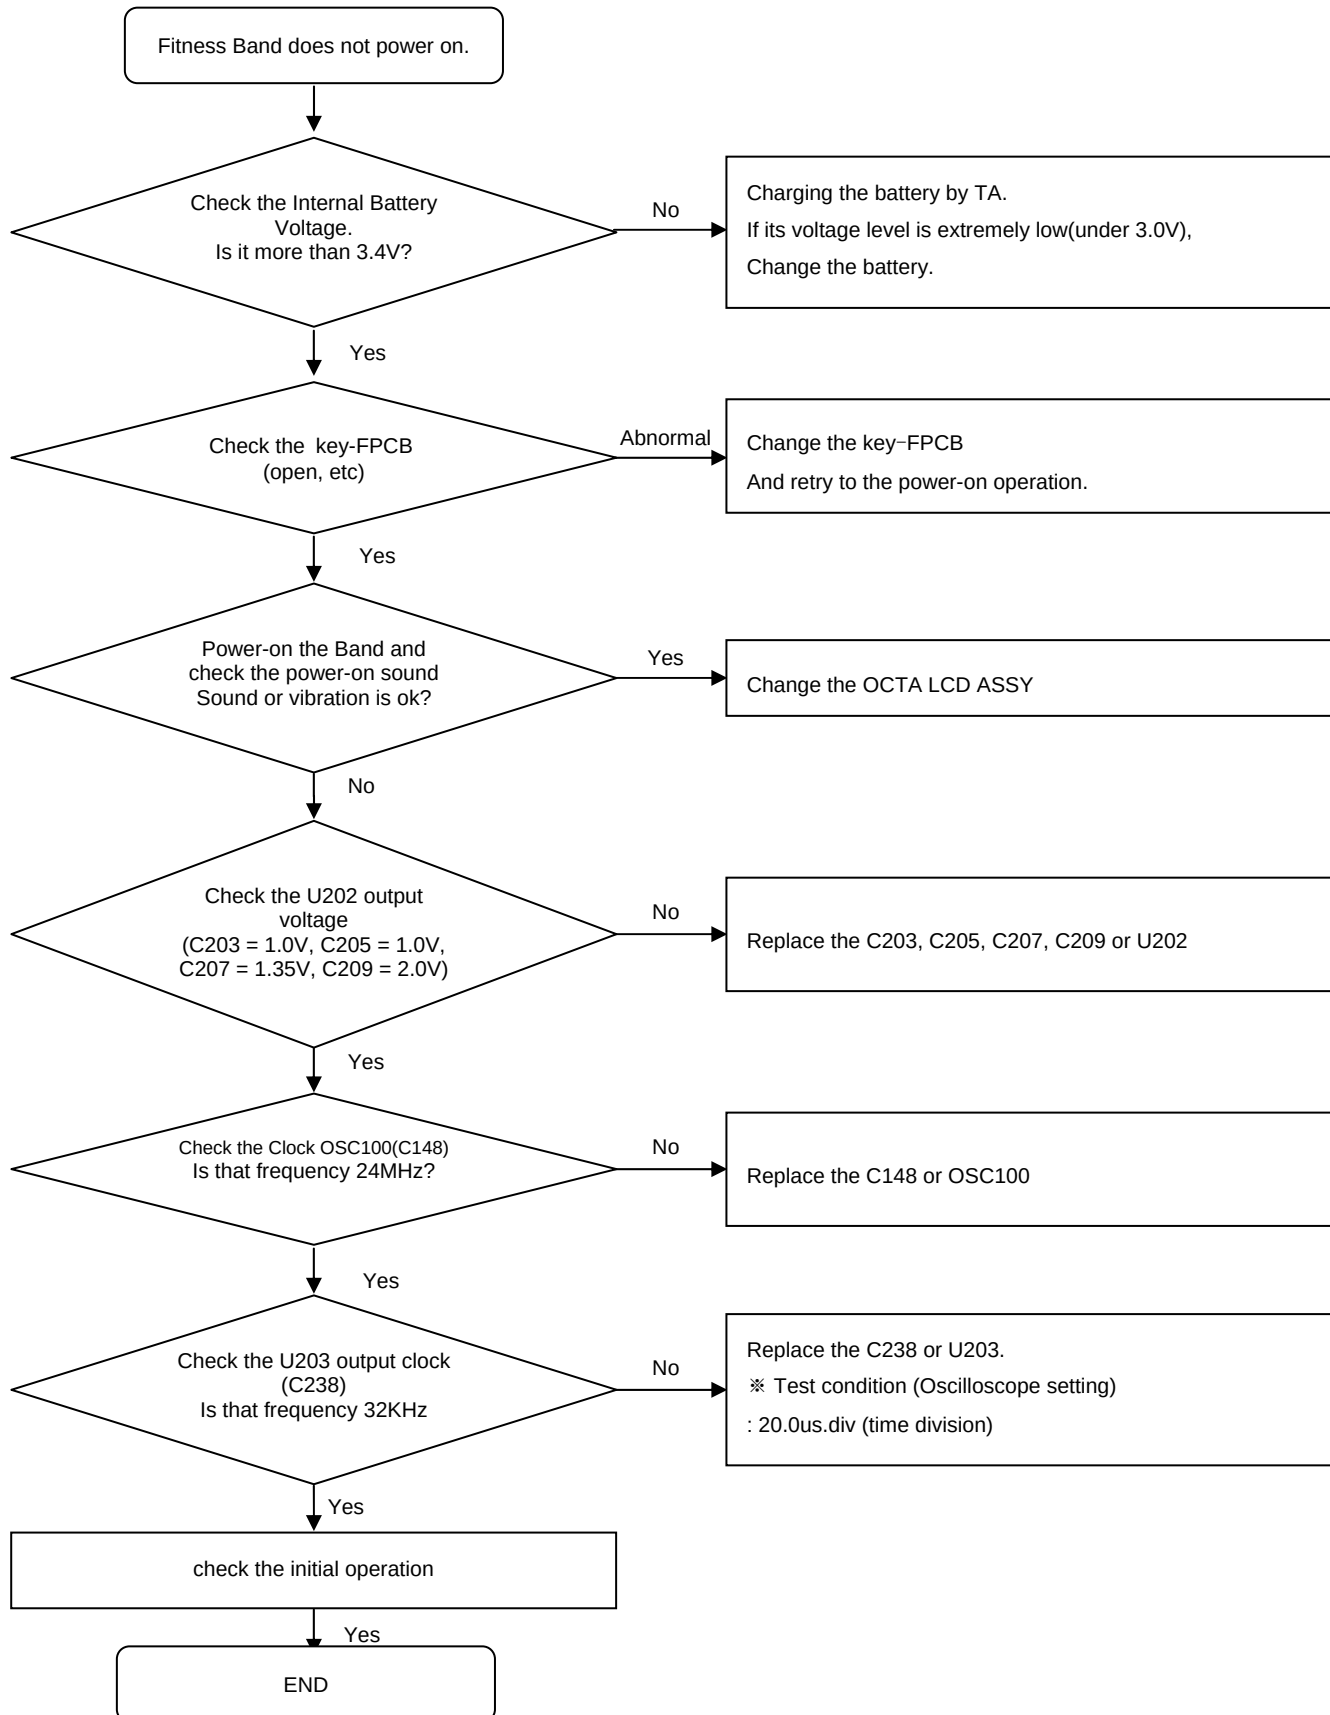


8. Level 3 Repair

8-4-2. Initial (Lock up)

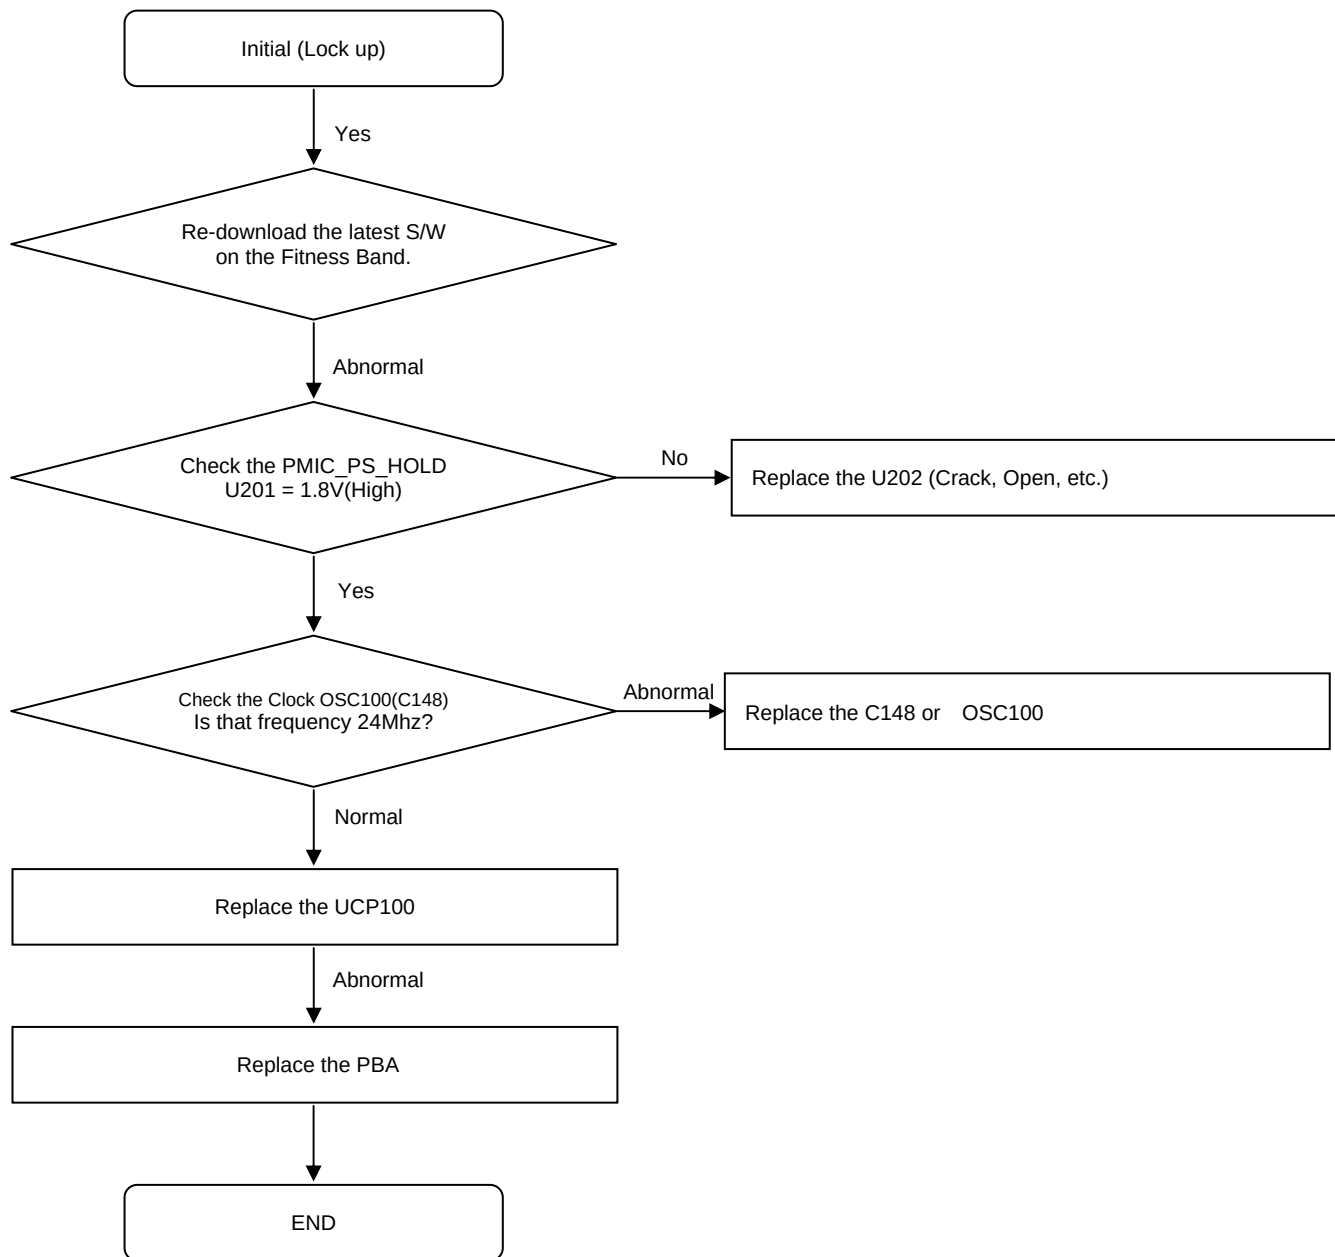


8. Level 3 Repair

8-4-3. Charging Part

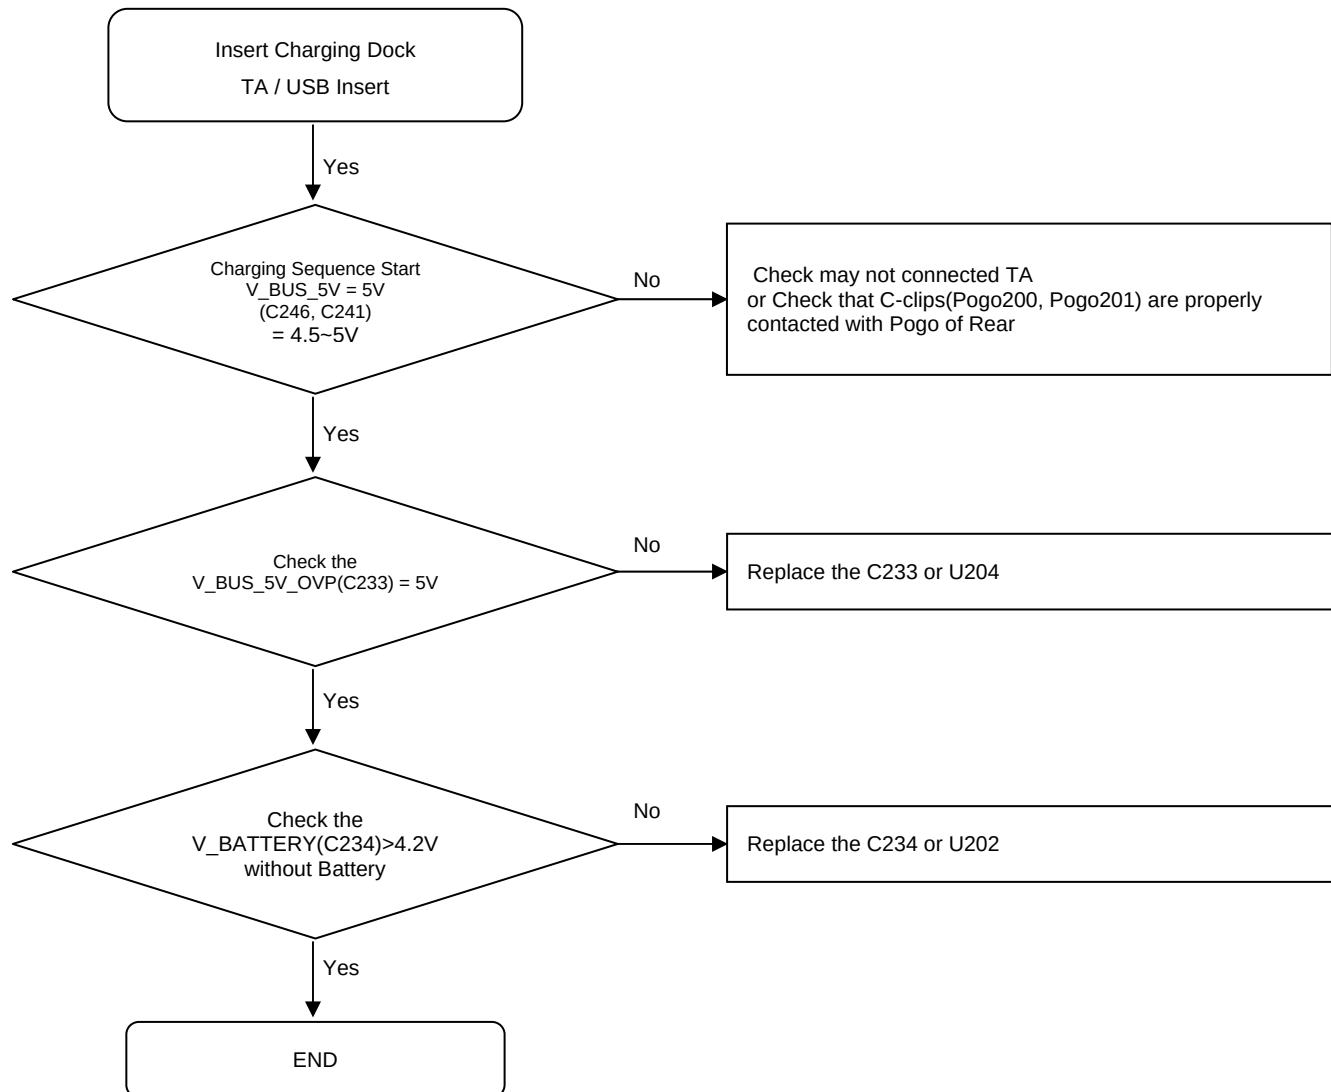


8. Level 3 Repair

8-4-5. BT/WIFI

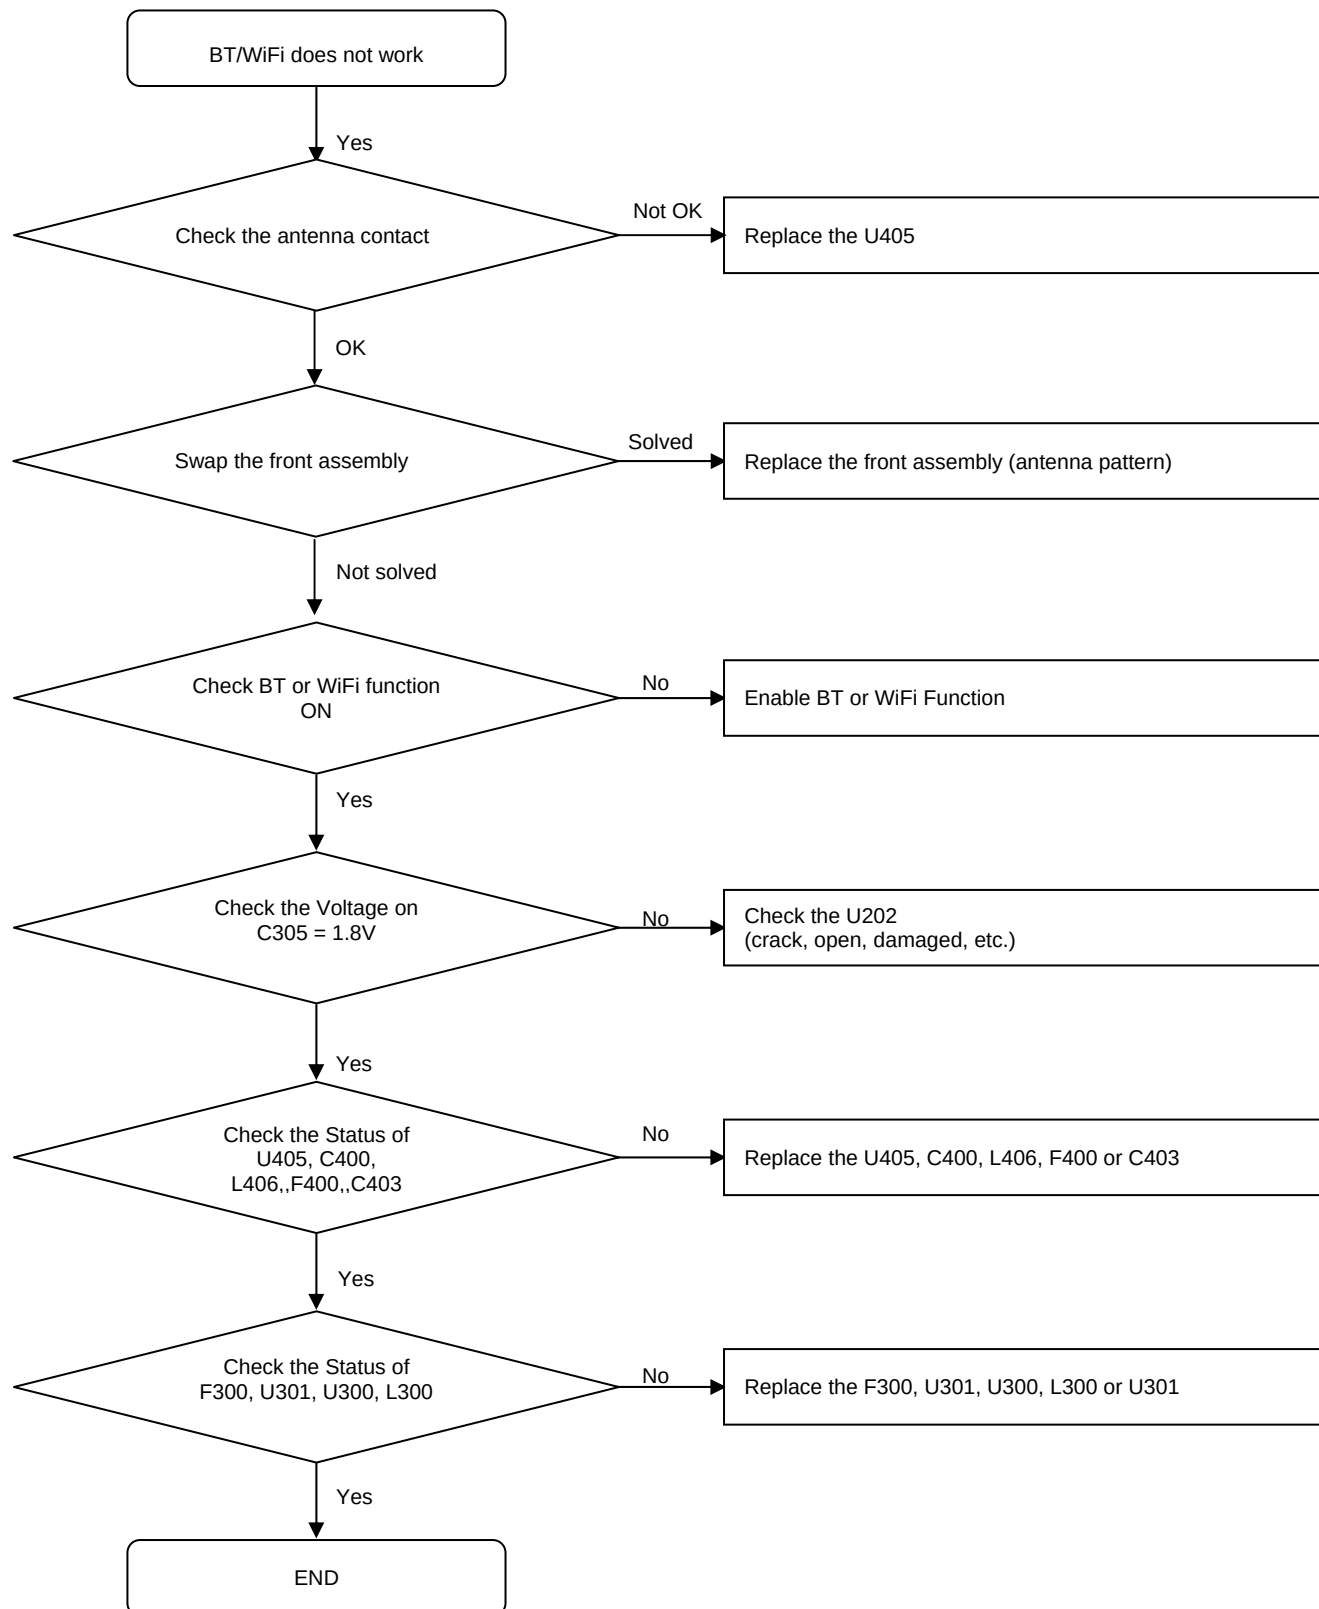


8. Level 3 Repair

8-4-6 MOTOR

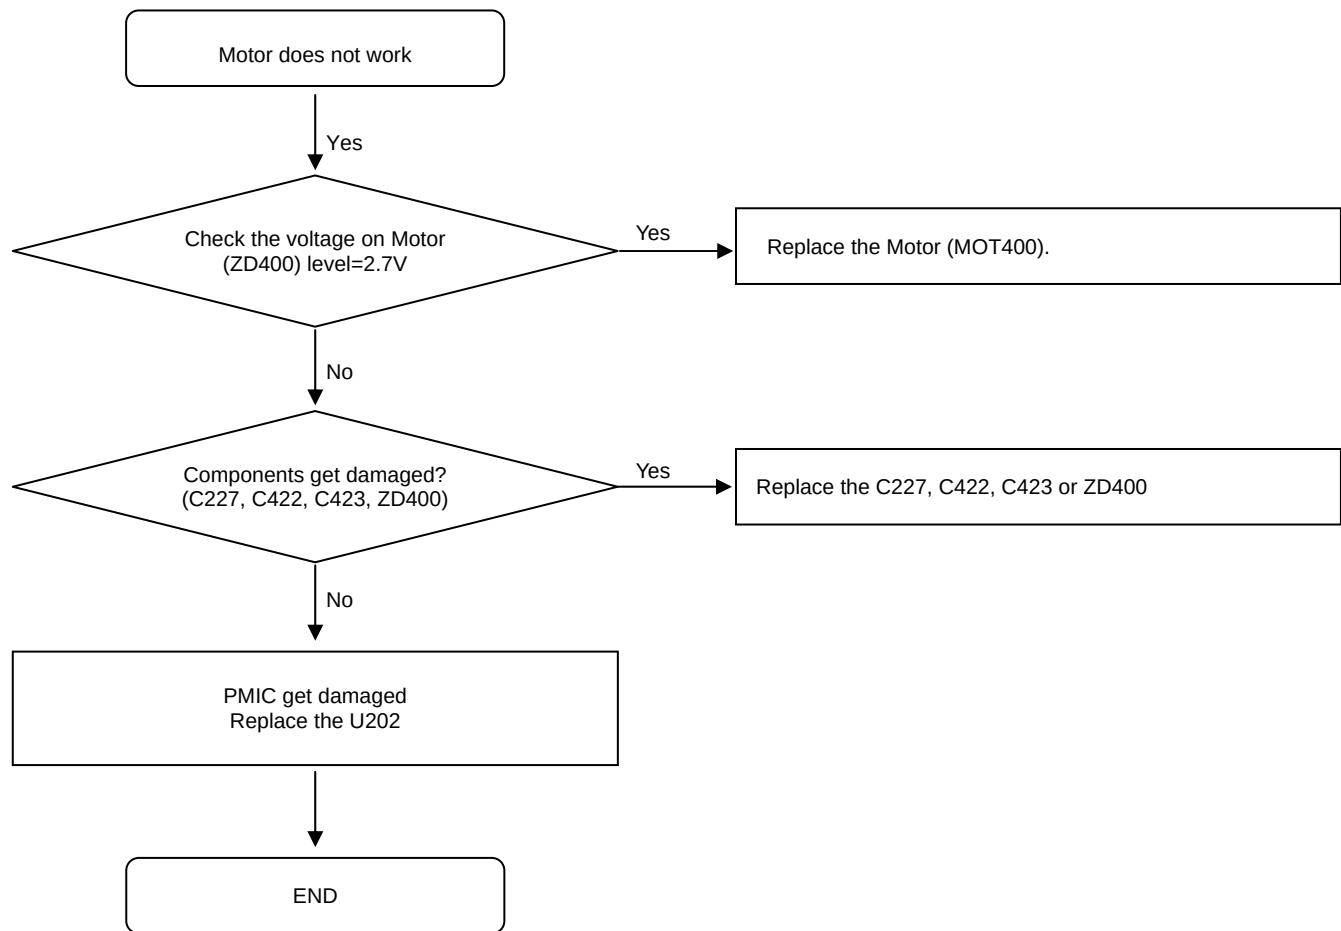


8. Level 3 Repair

8-4-7 UB(Display part)

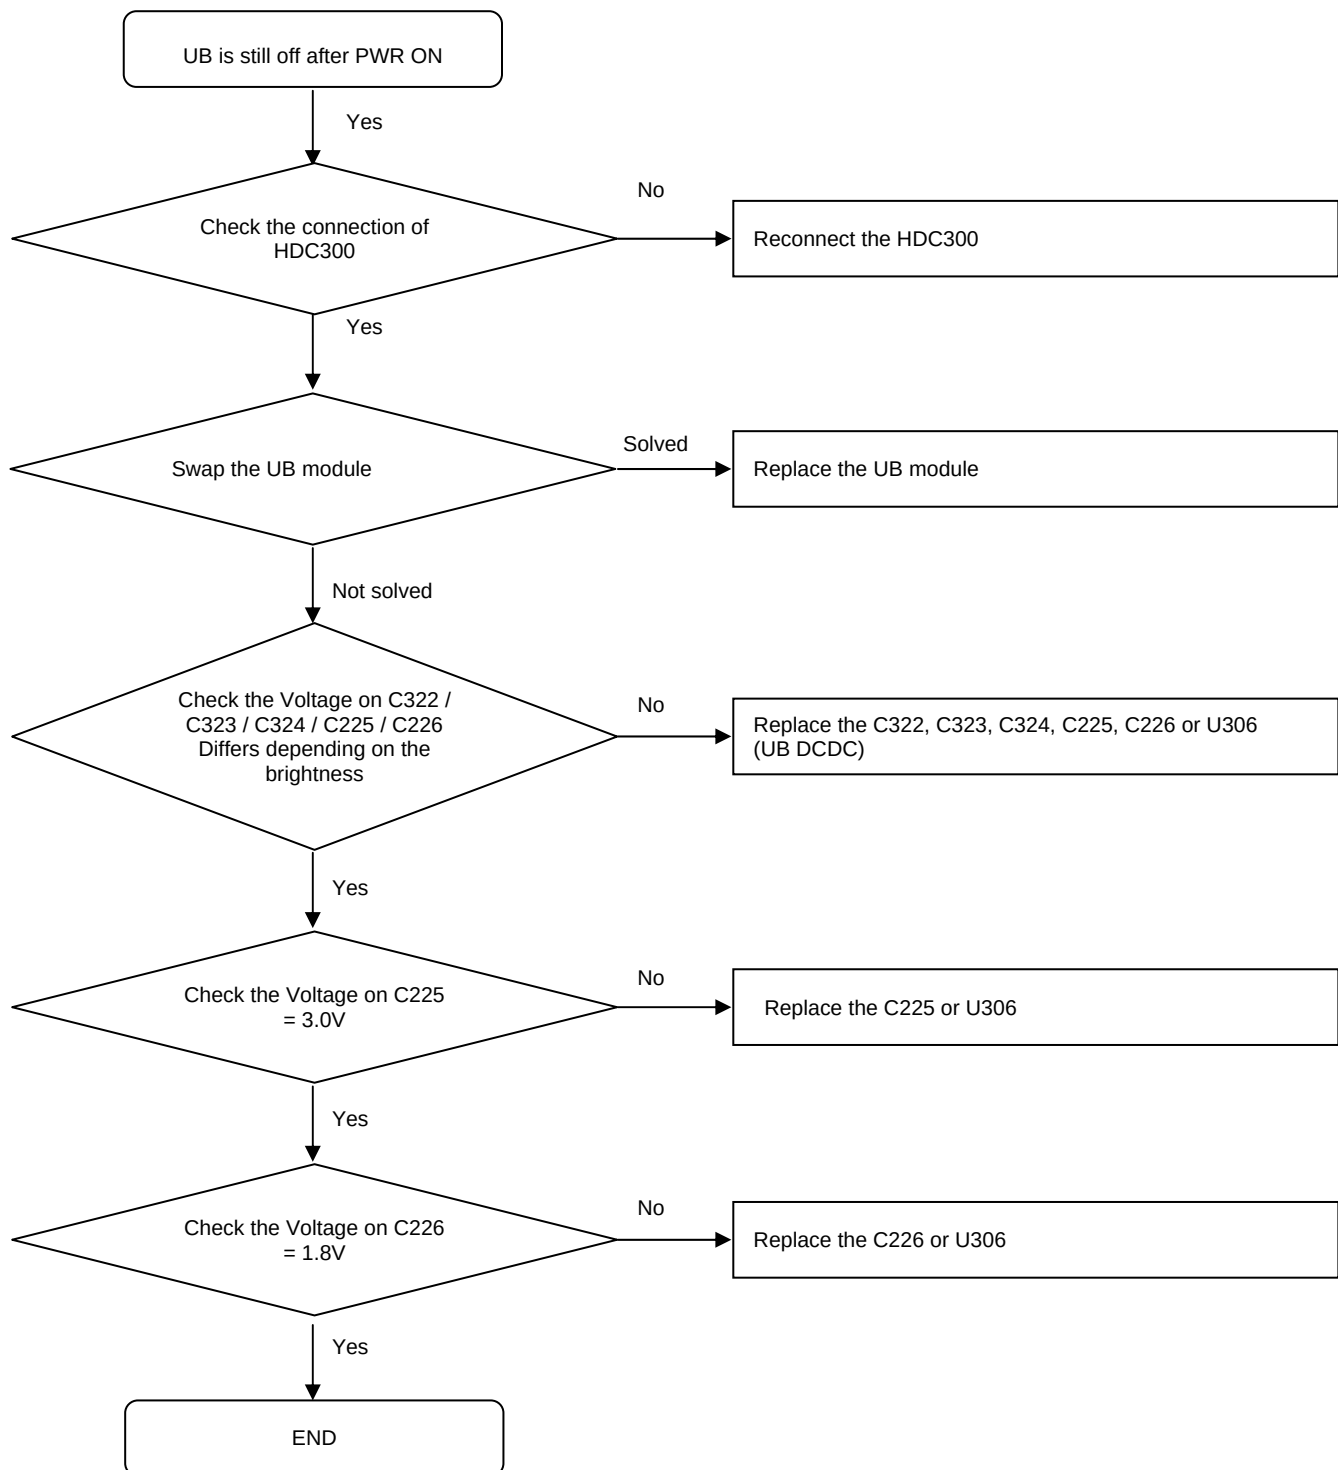


8. Level 3 Repair

8-4-8 TSP

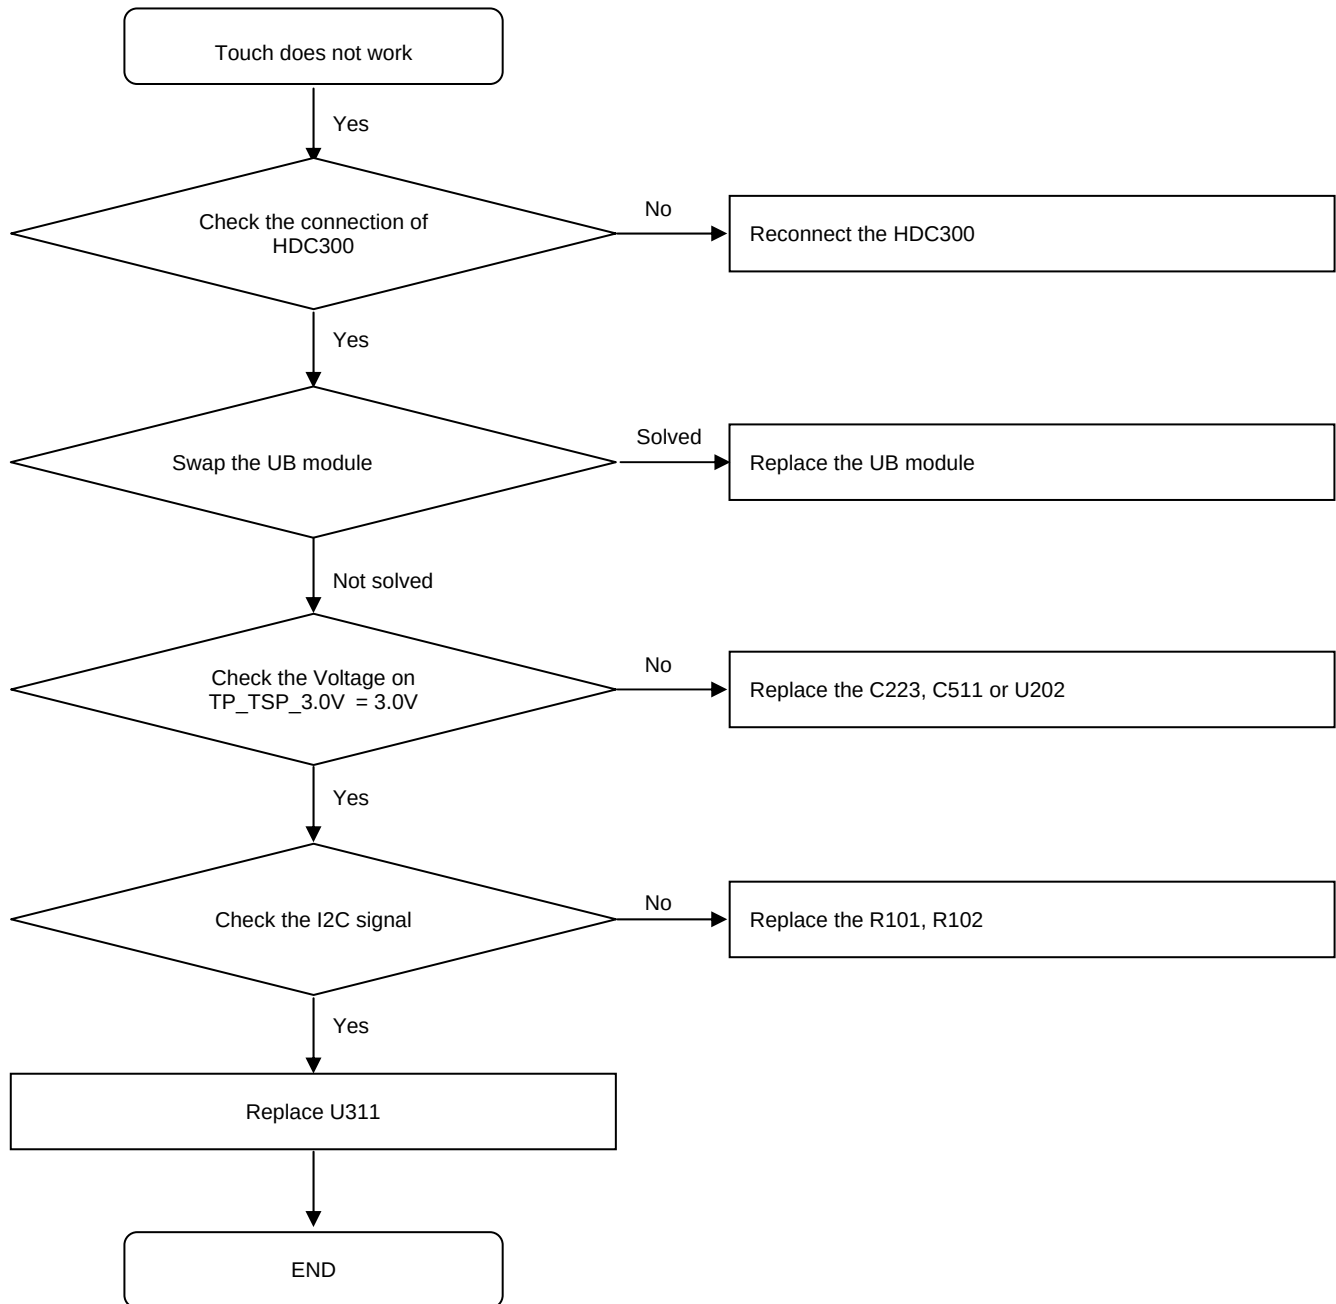

8. Level 3 Repair


8-4-9 GPS

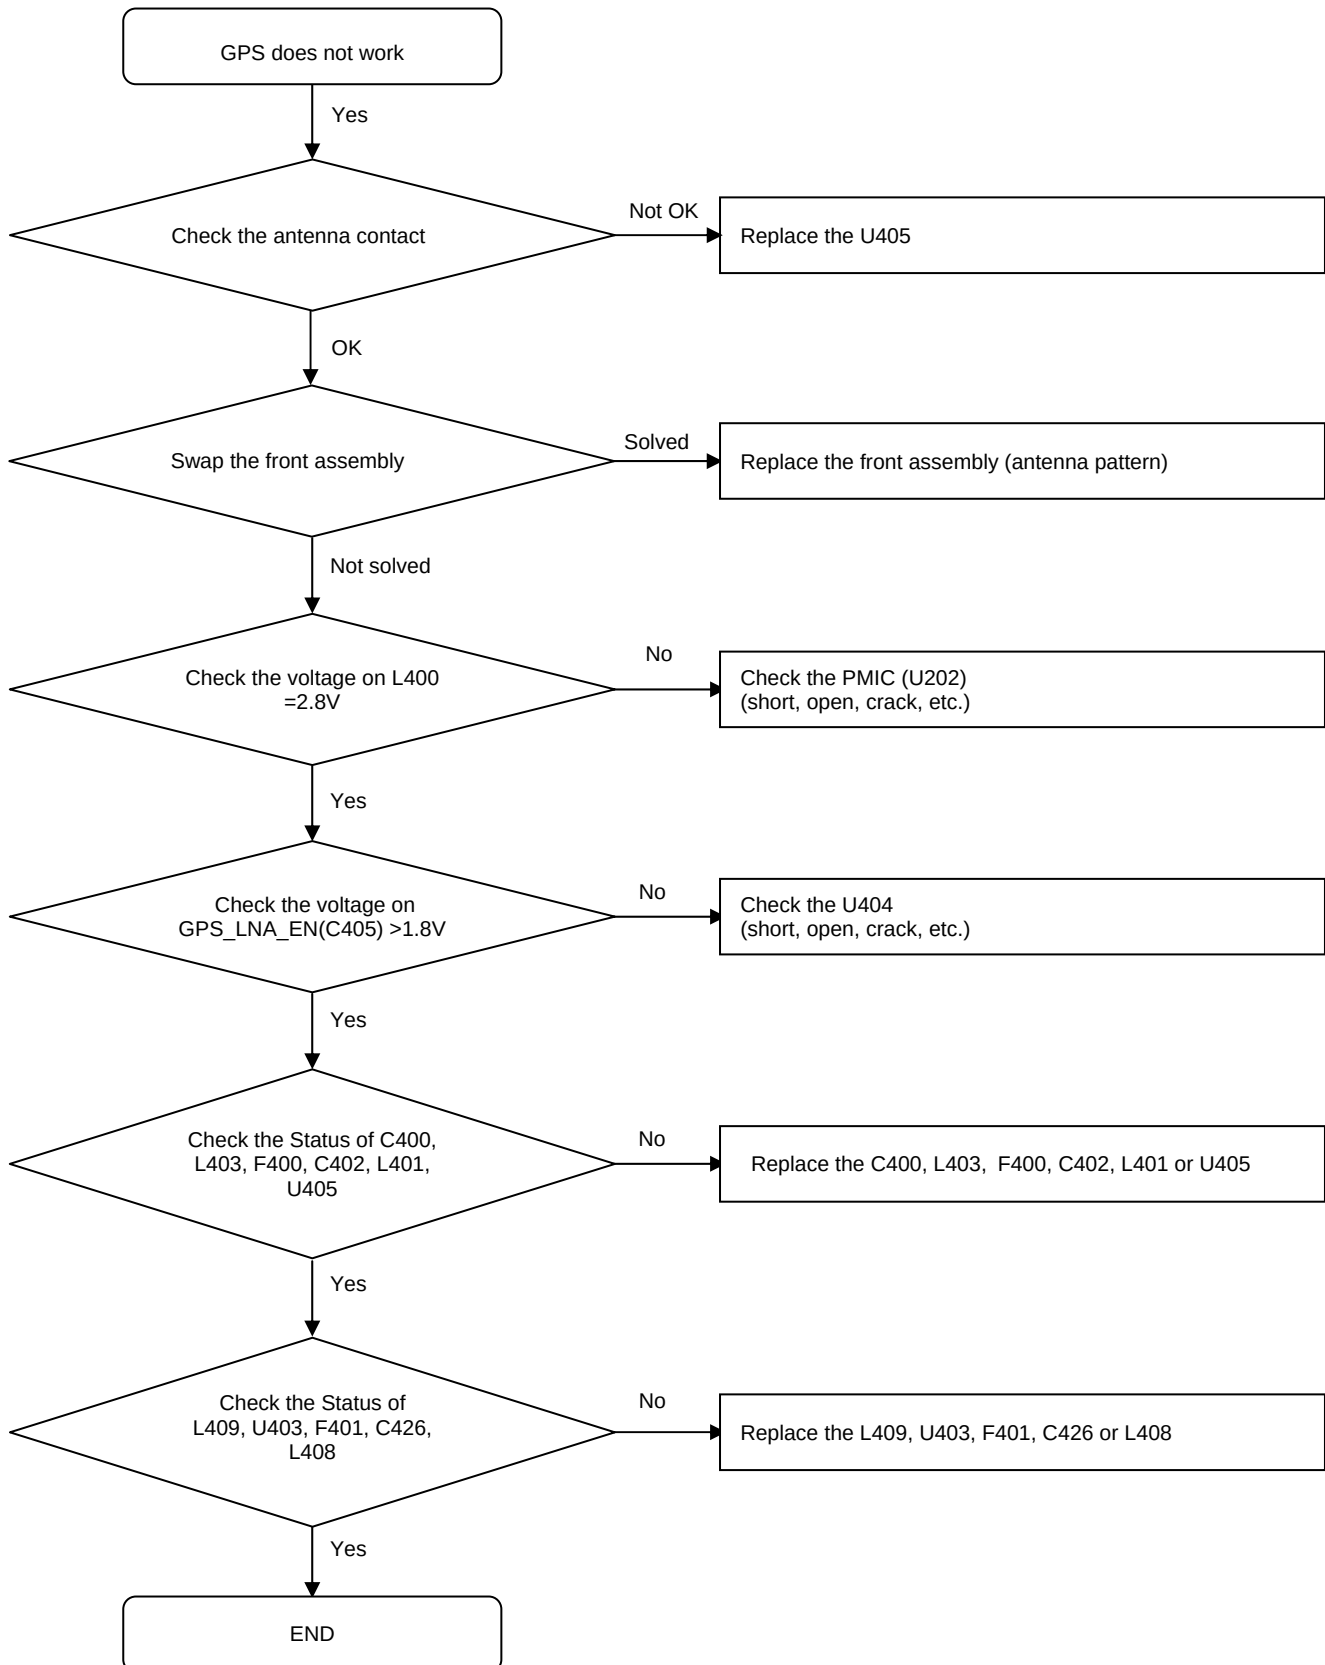

8. Level 3 Repair


8-4-10 Sensor

8-4-10-1 HRM Sensor

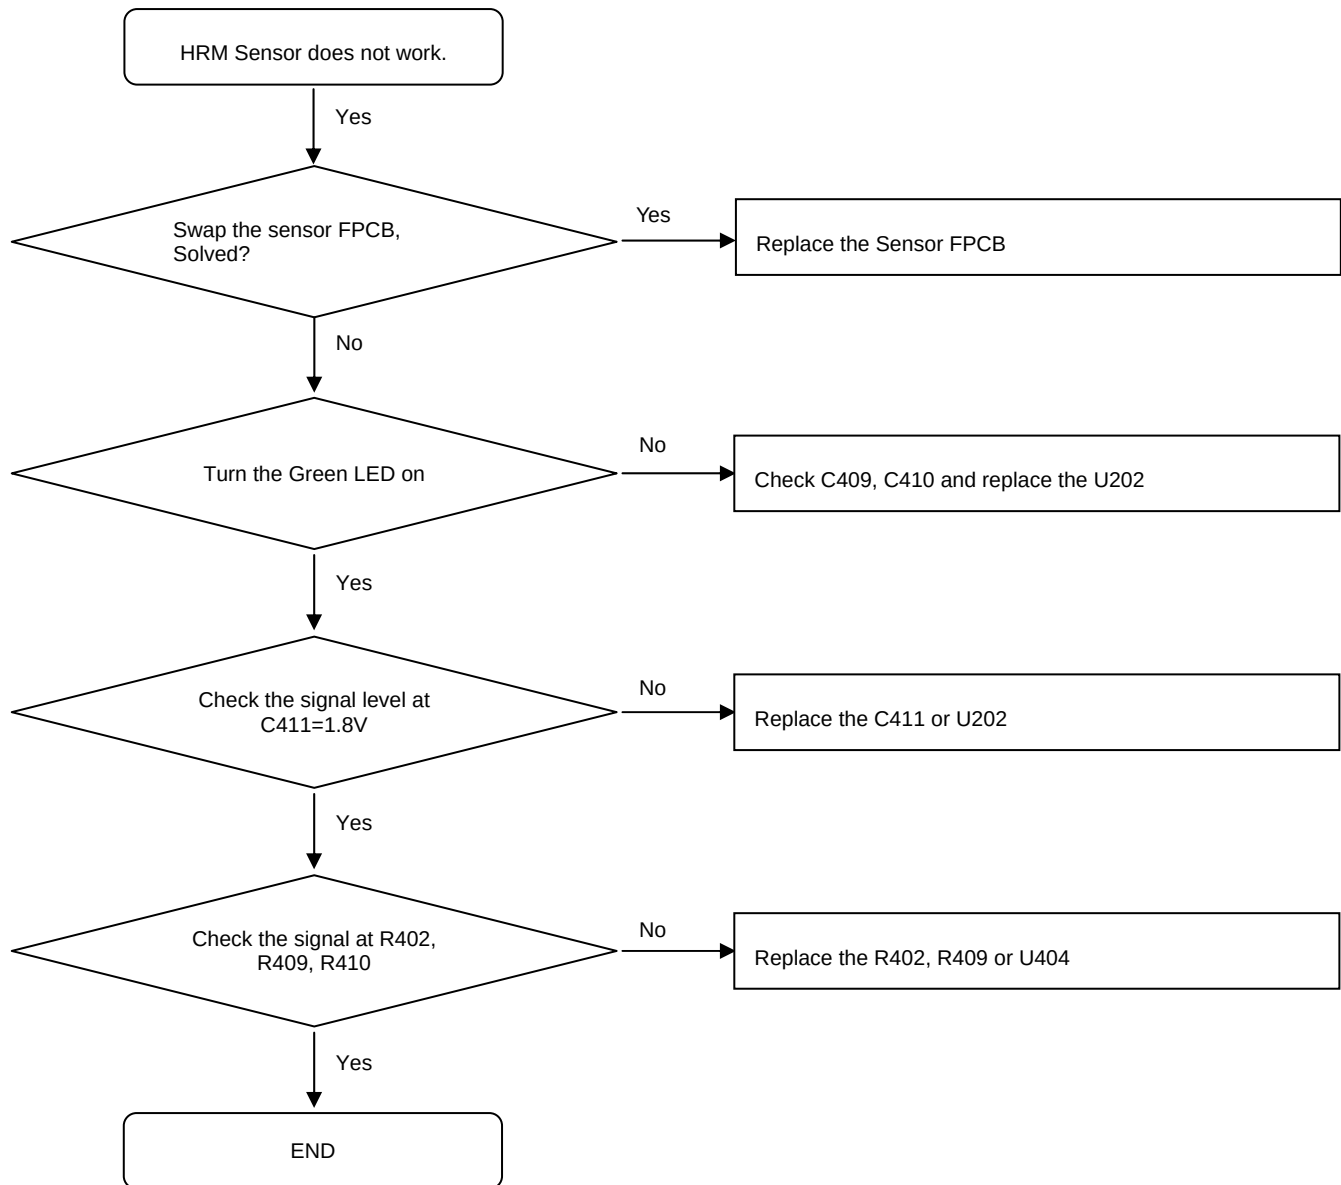

8. Level 3 Repair

8-4-10-2 6-Axis Sensor

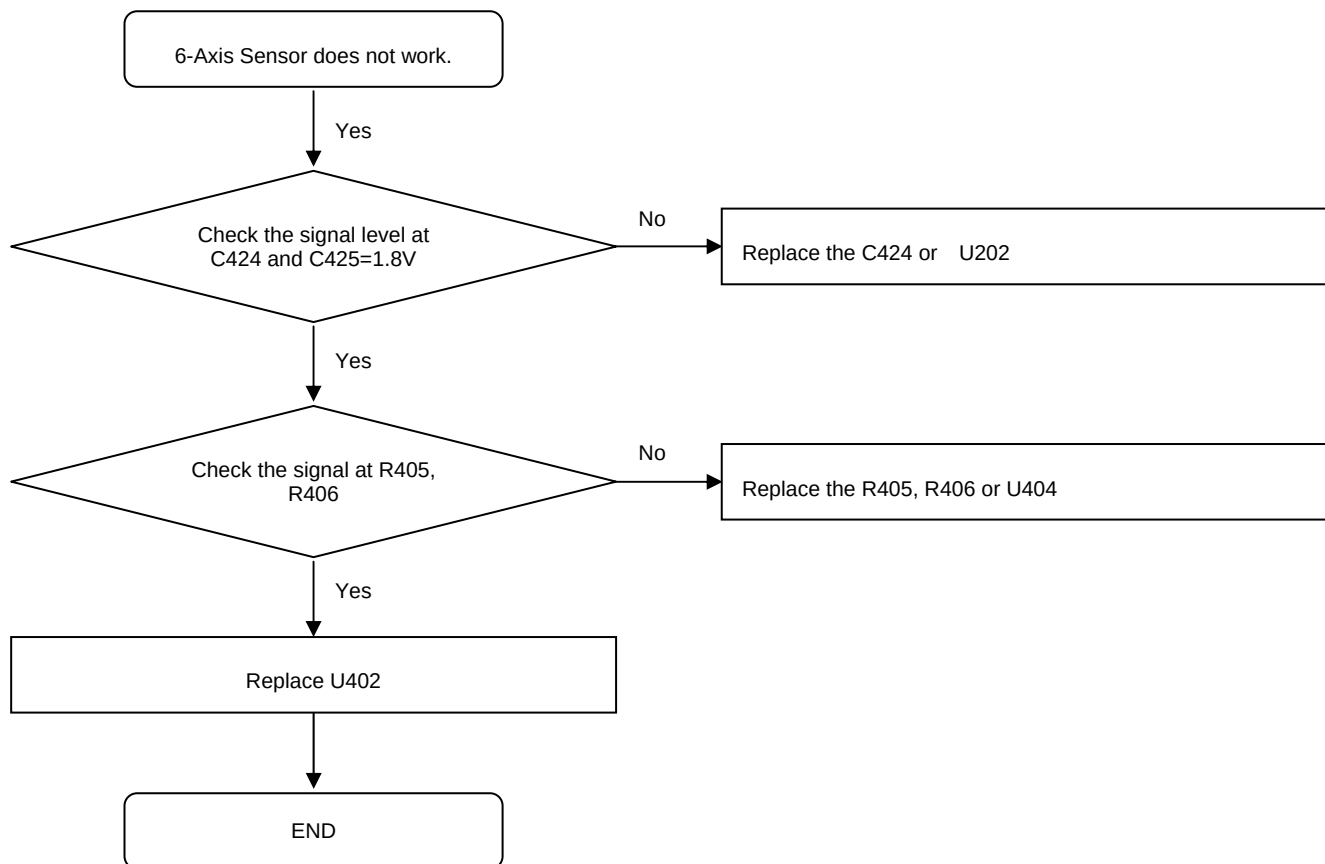

8. Level 3 Repair

8-4-10-3 Barometer

