



-LCD part

■ LCD part

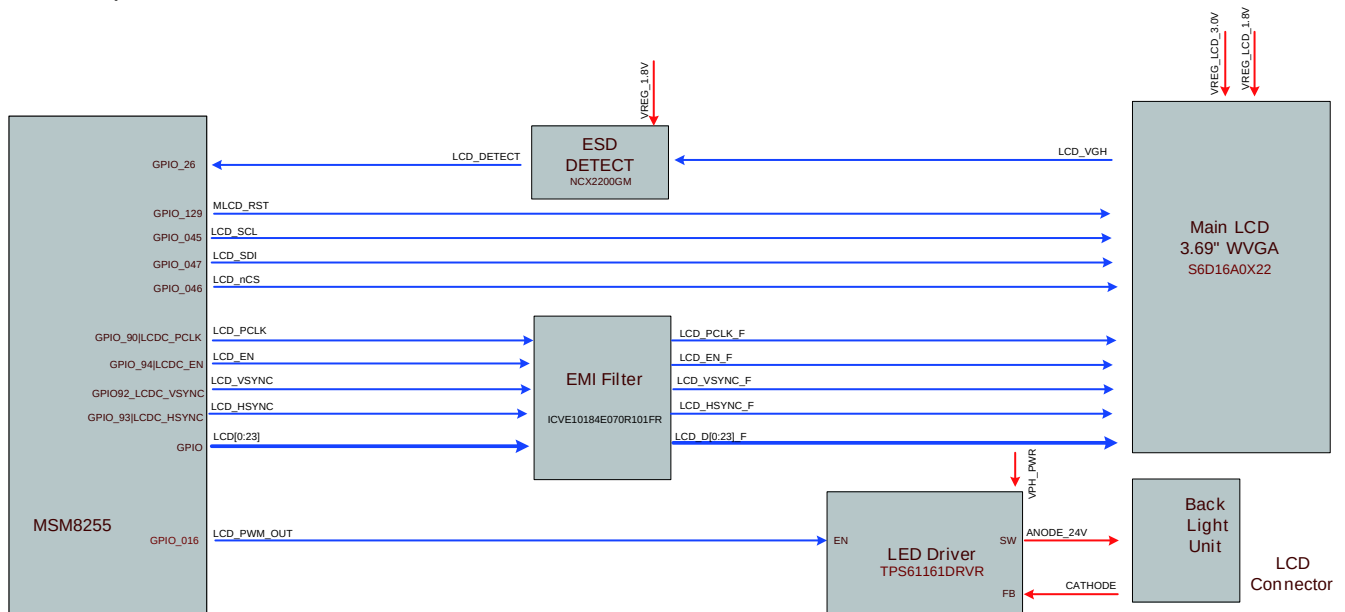


-


■ TSP part

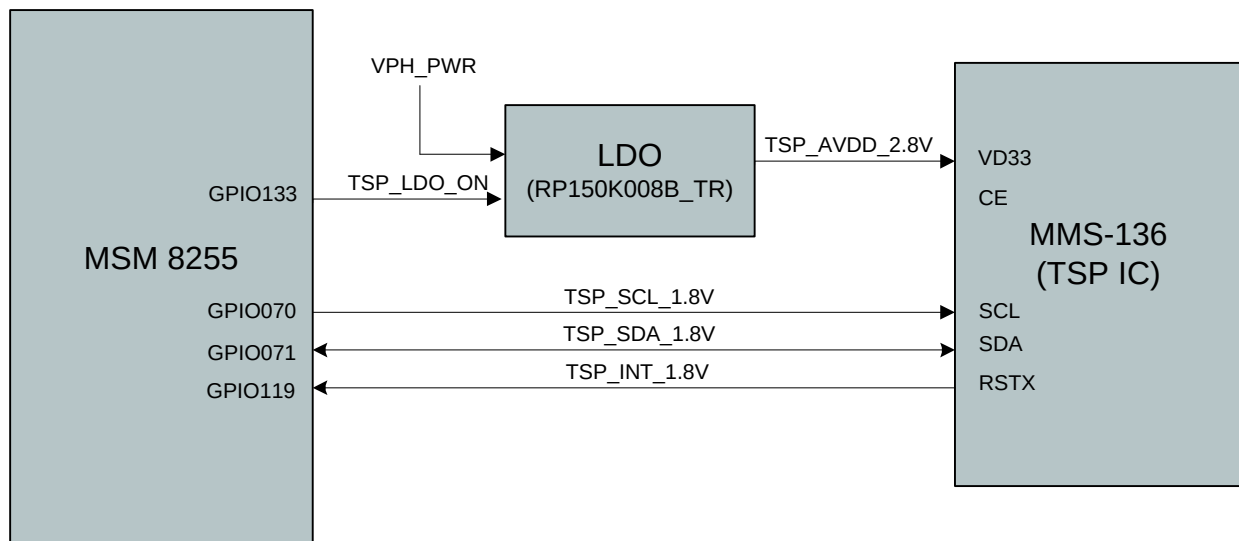


■ CAMERA part

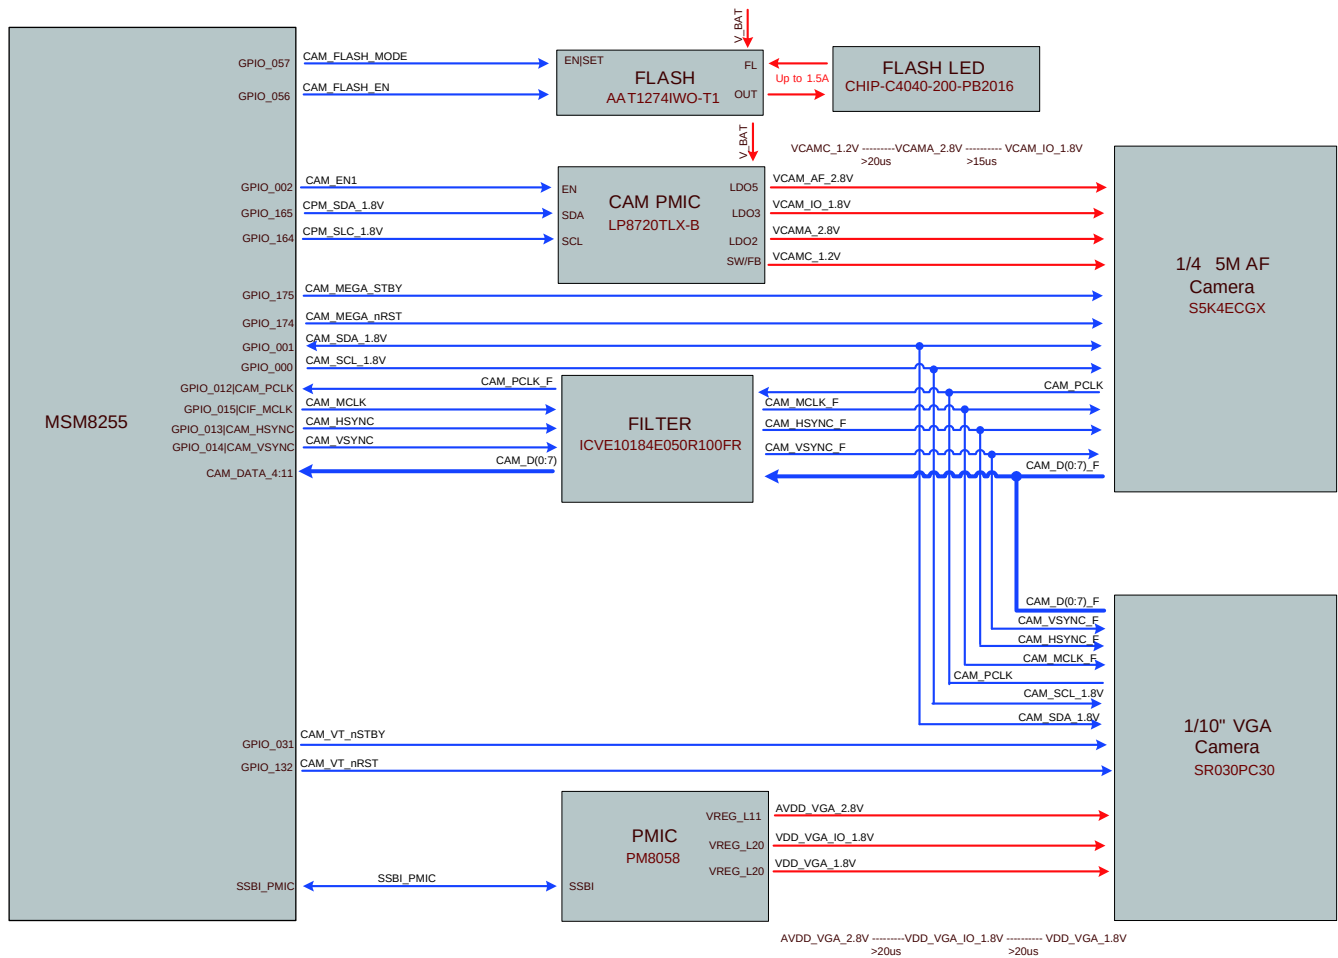


■ AUDIO part

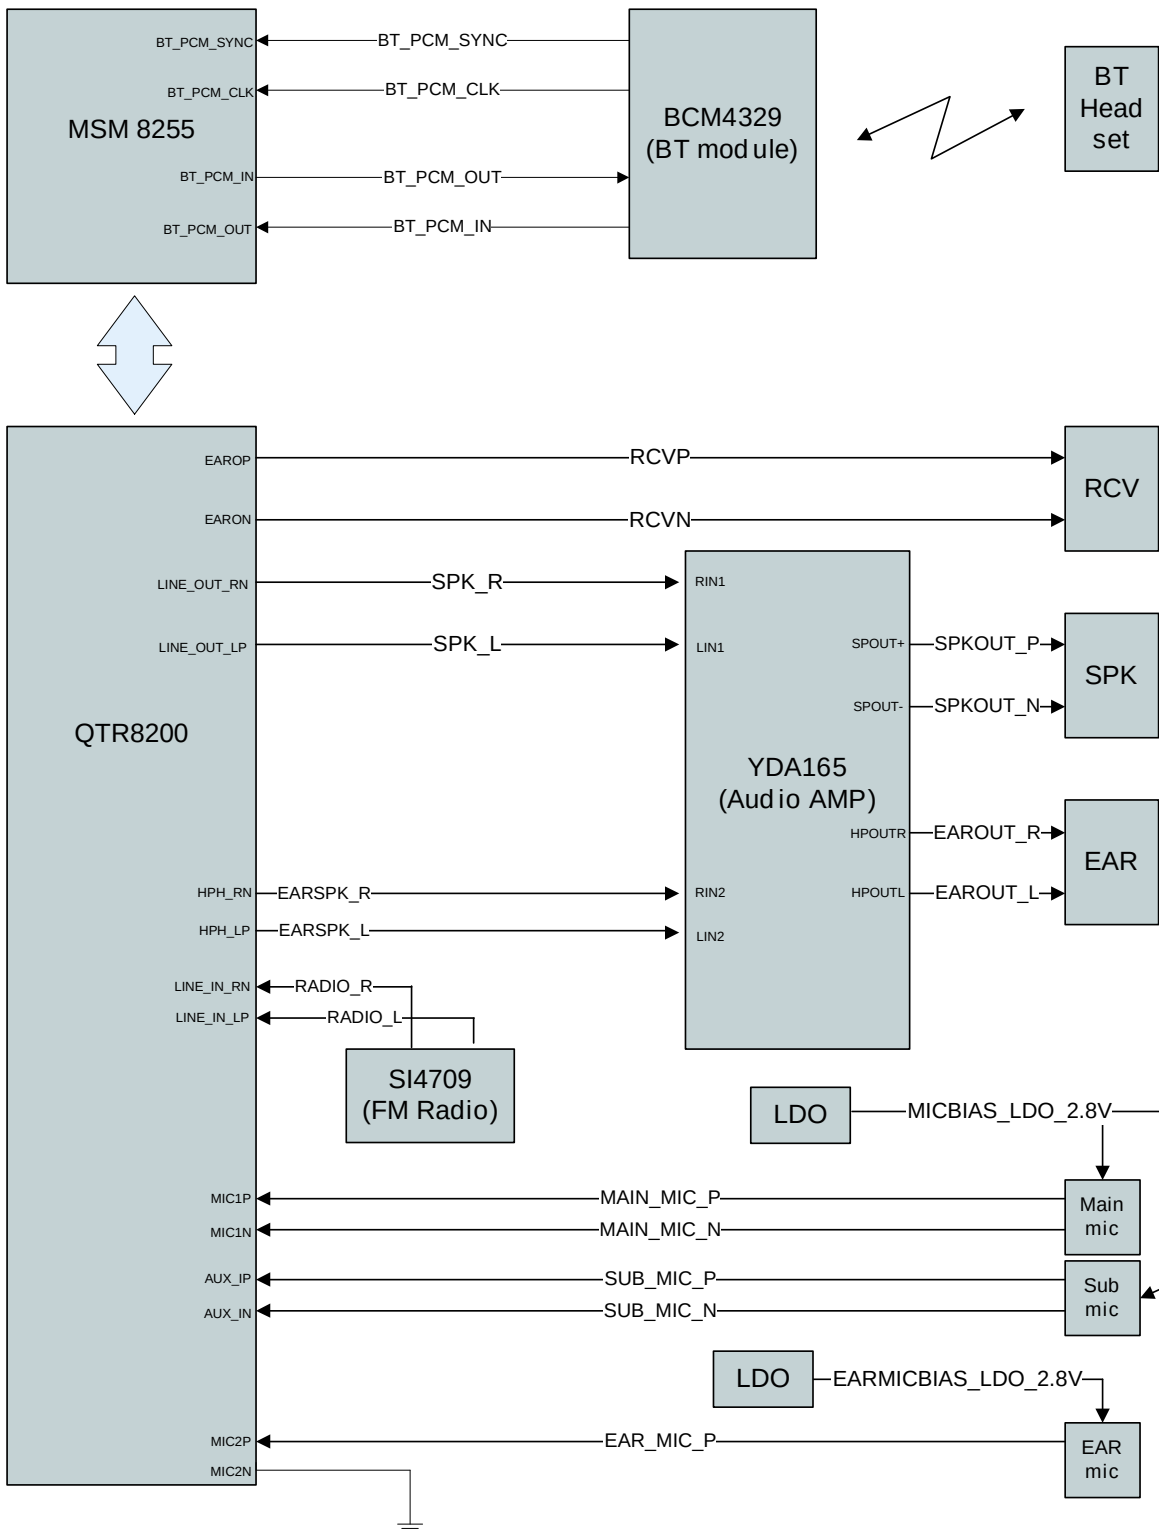


■ BT /W IFI part

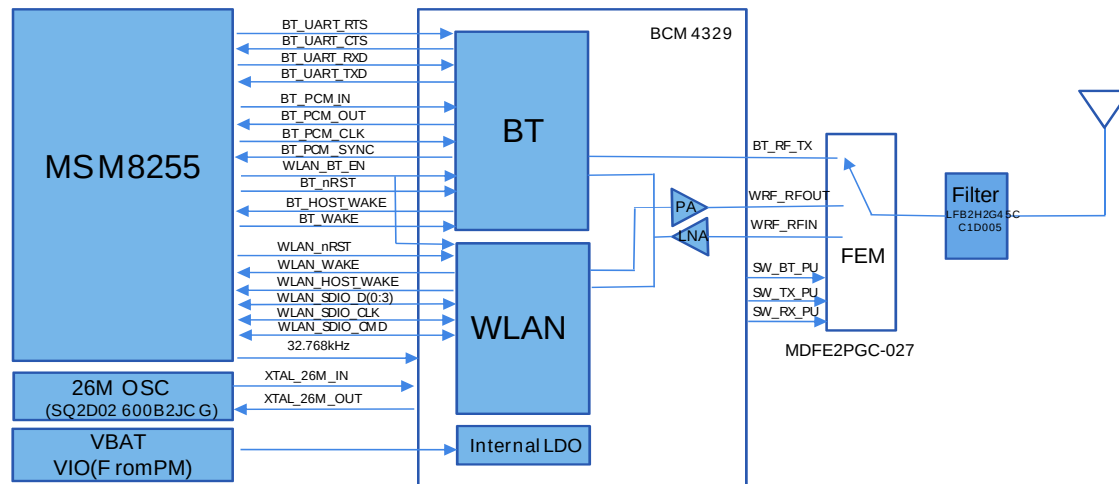

■ GPS part

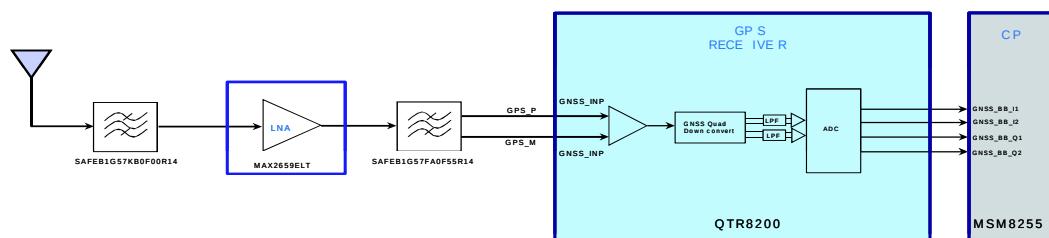


■ MEMORY part

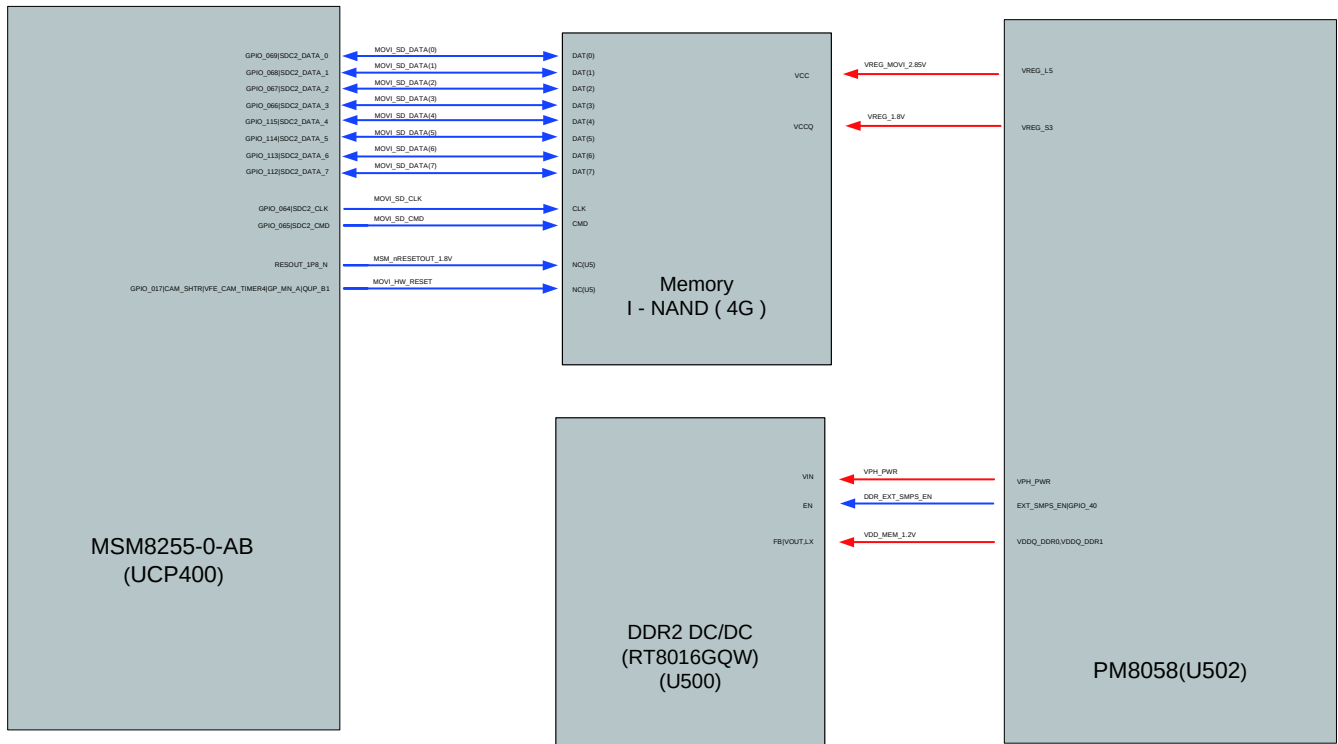


※

■ Proximity sensor part

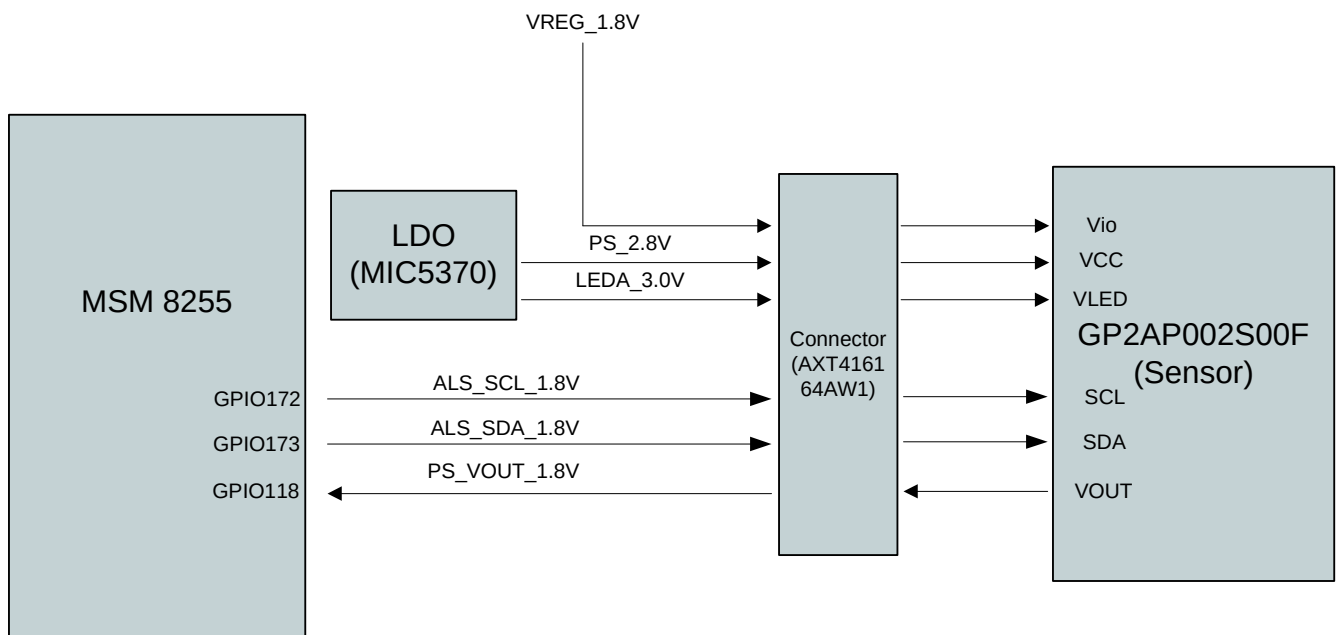


8-2-1. Bottom

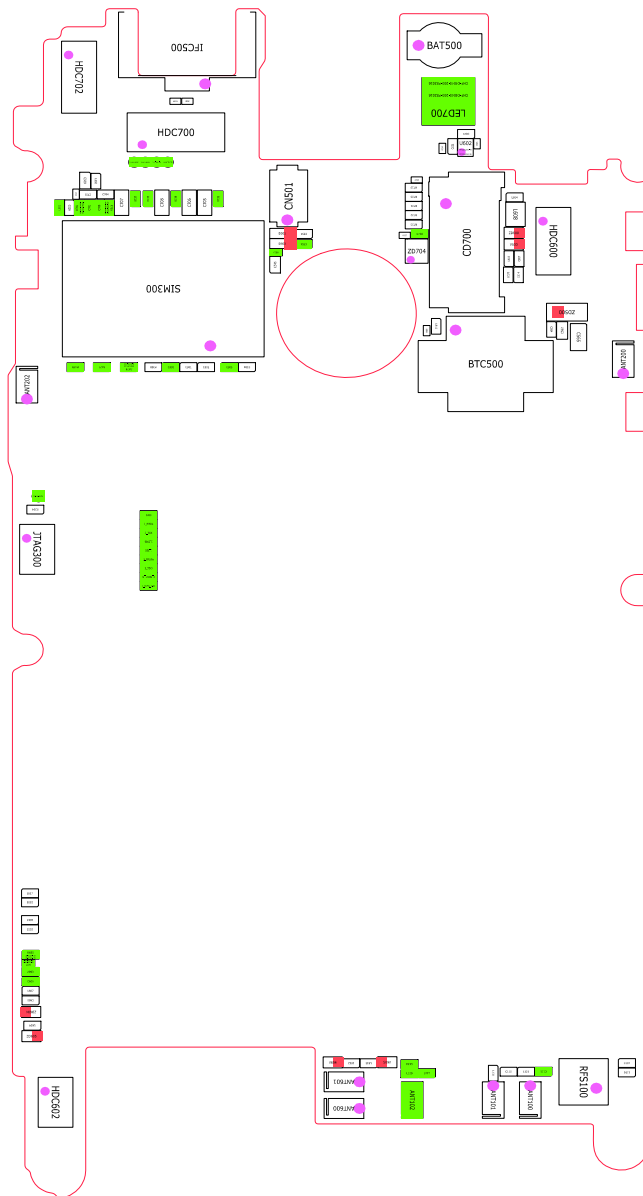

8-3. Flow Chart of Troubleshooting

Equipments

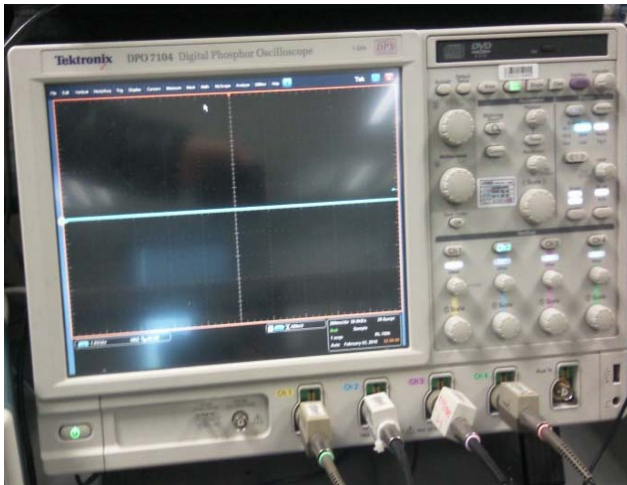

↑ Oscilloscope



↑ Digital Multimeter







↑ Power Supply




↑ + driver, Tweezer


8-3-1. Power On

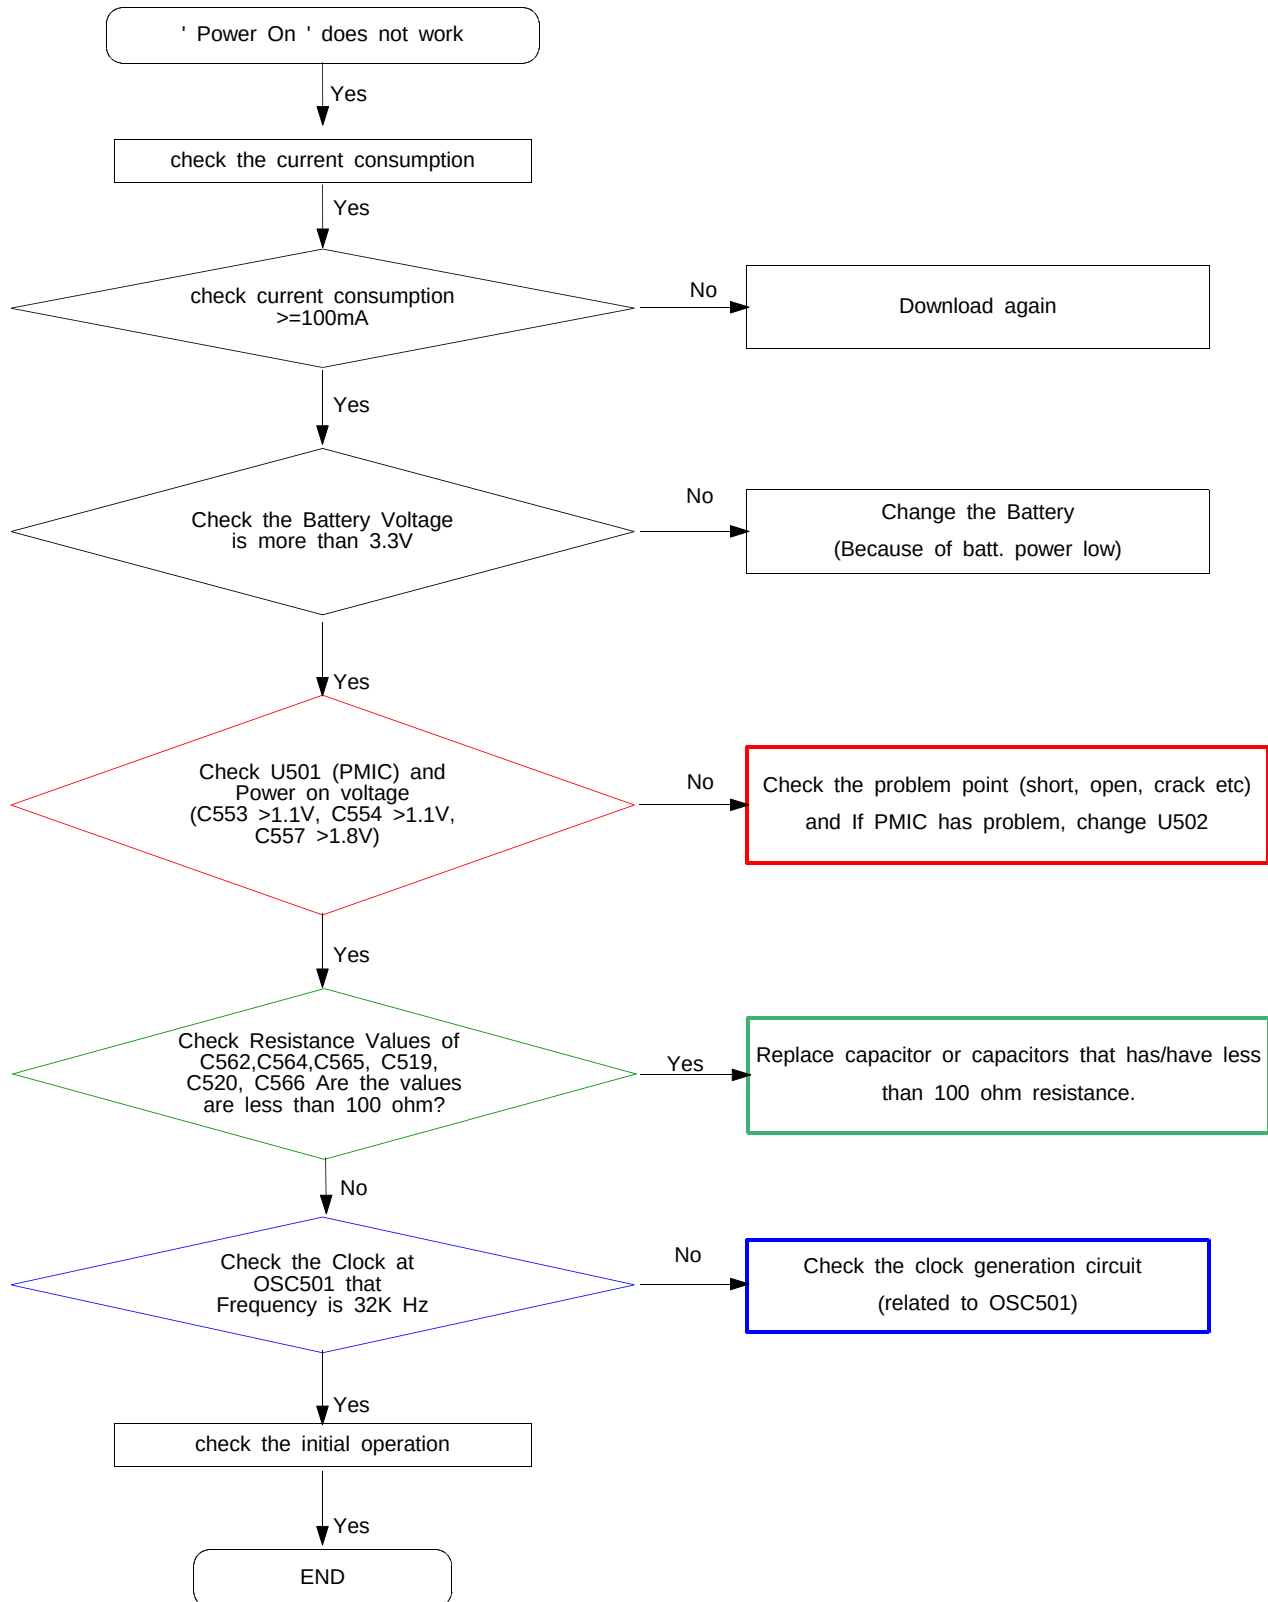

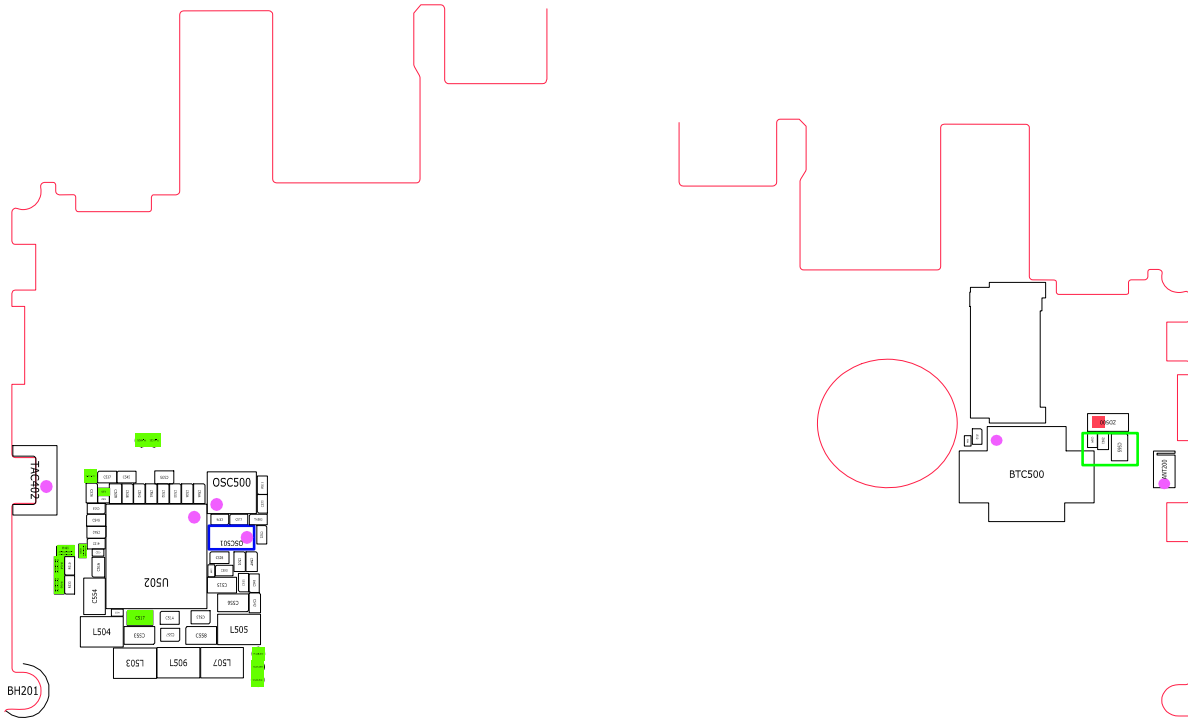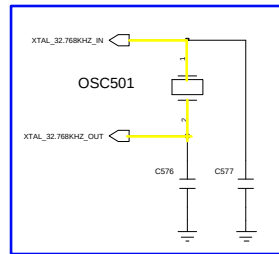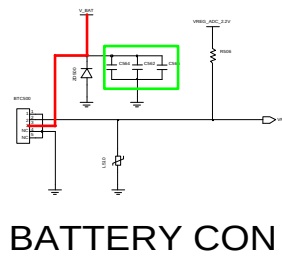


8-3-2. Initial

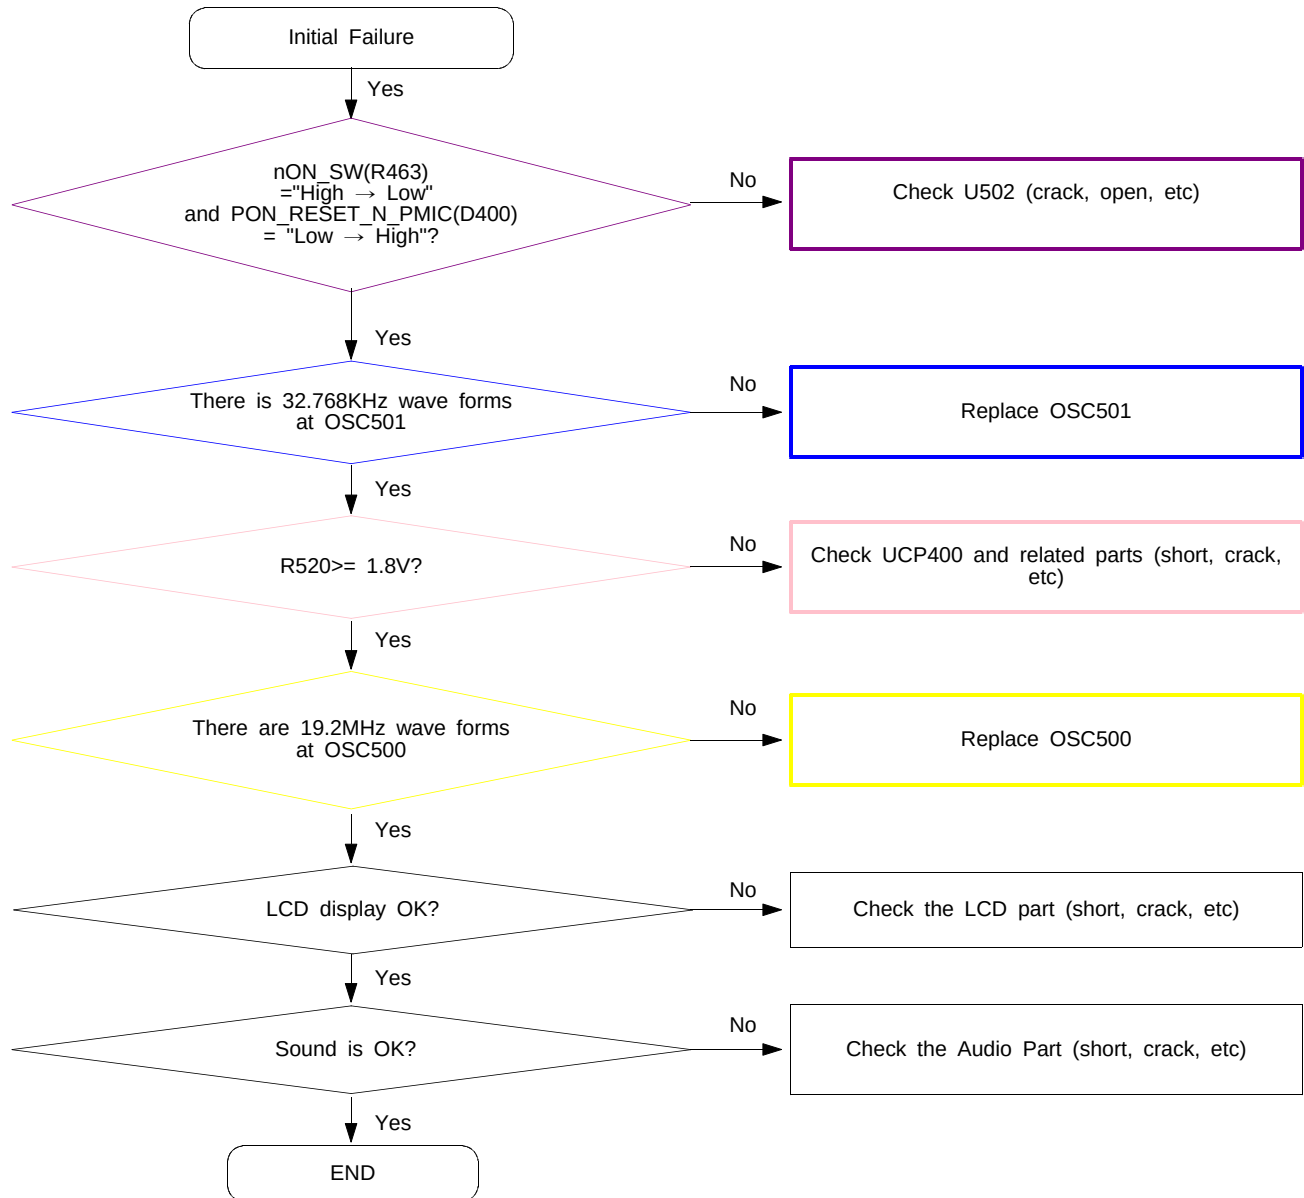


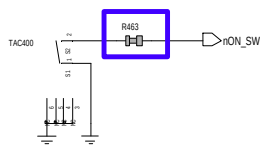


POWER KEY

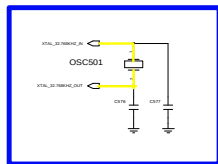


UCP400

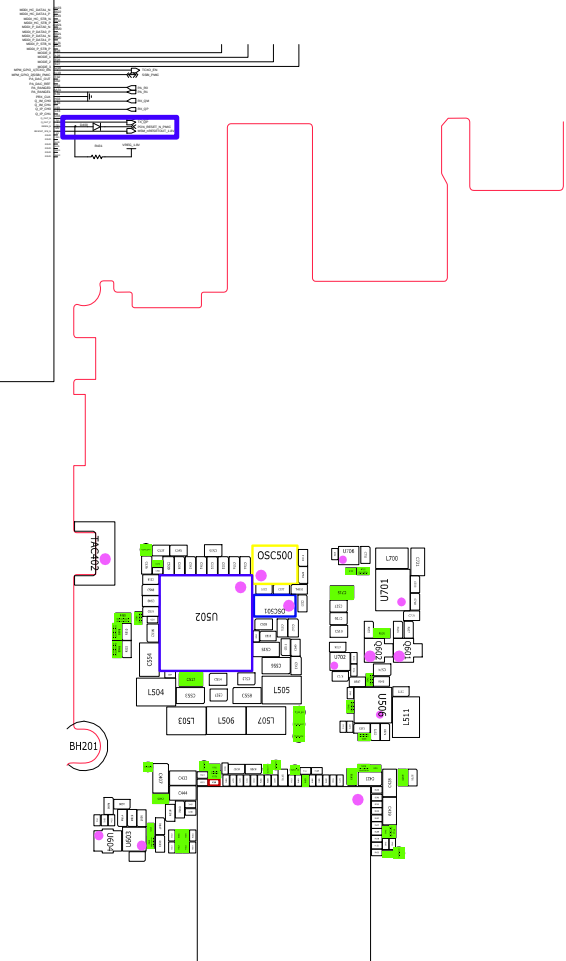


U502

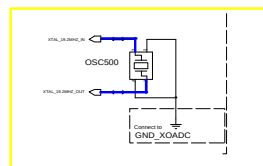


8-3-3. Charging Part

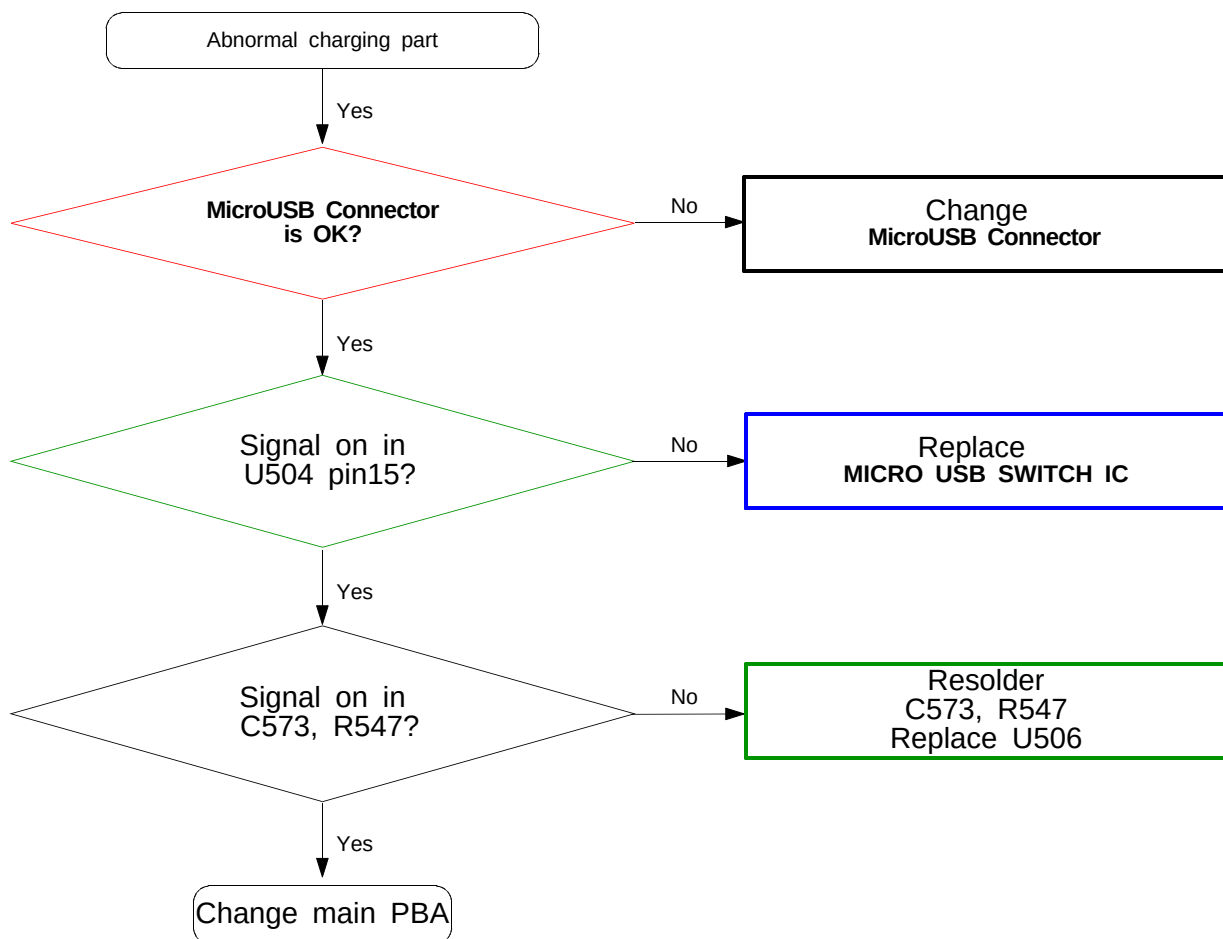


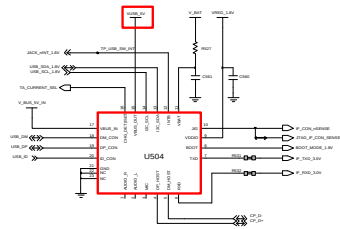


MICRO USB SWITCH IC

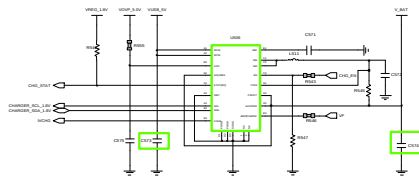


BATTERY CHARGER

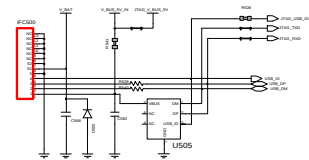


MicroUSB Connector

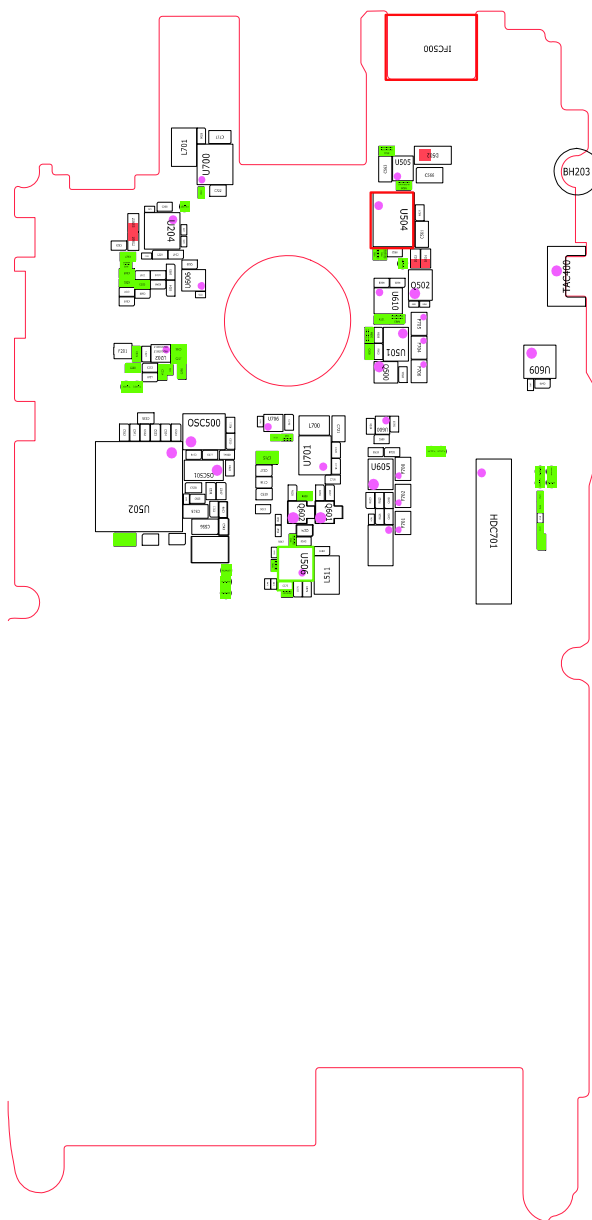



8-3-4. Sim Part

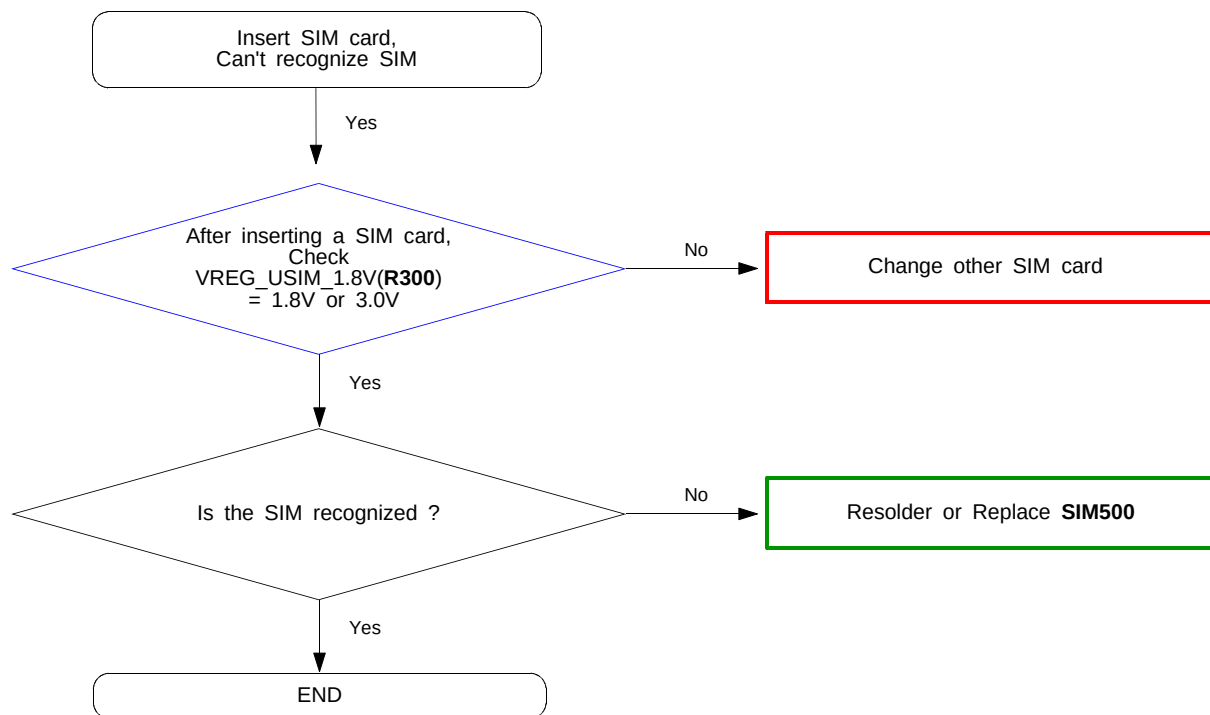

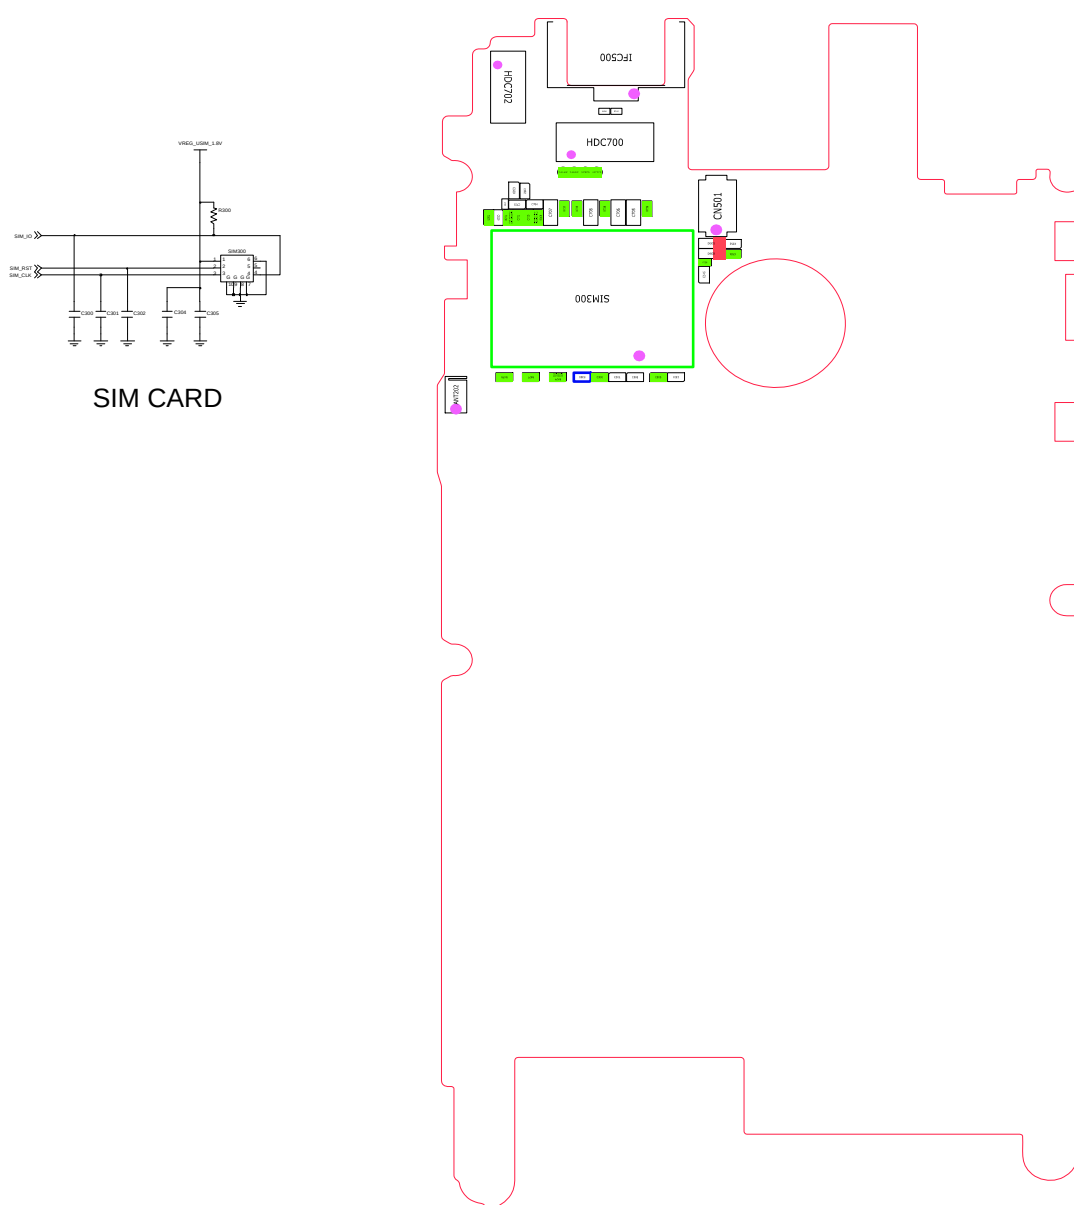


8-3-4 T-Flash

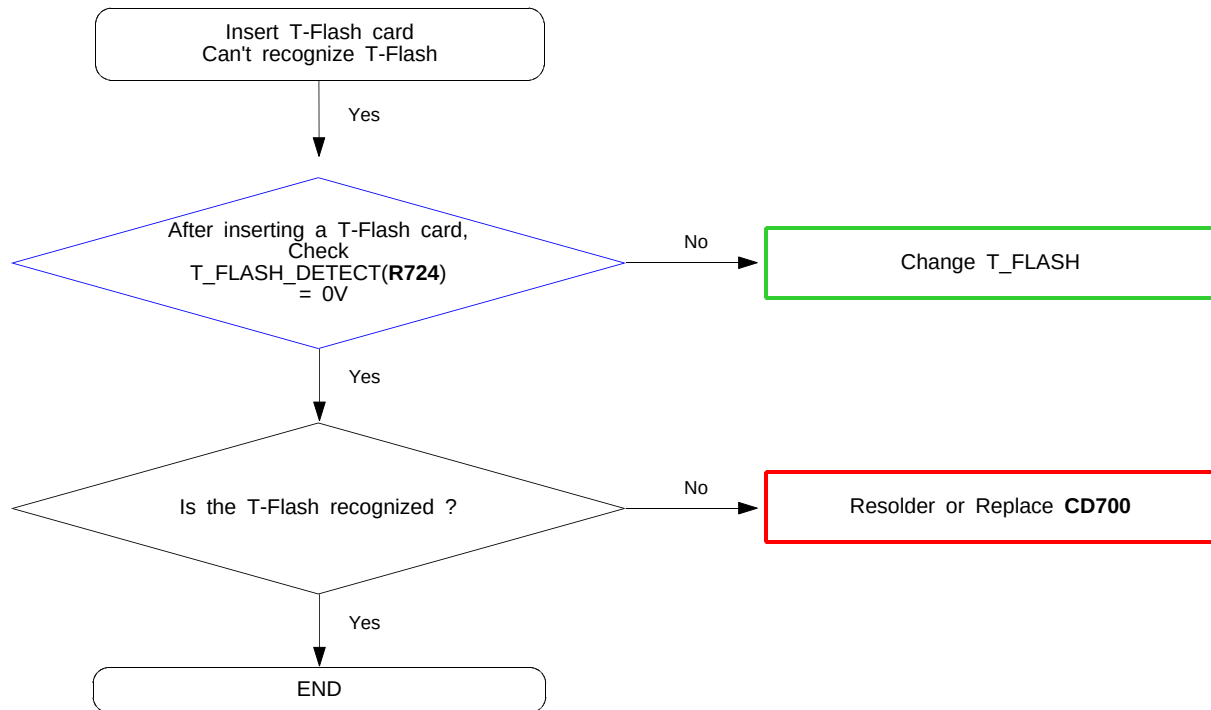



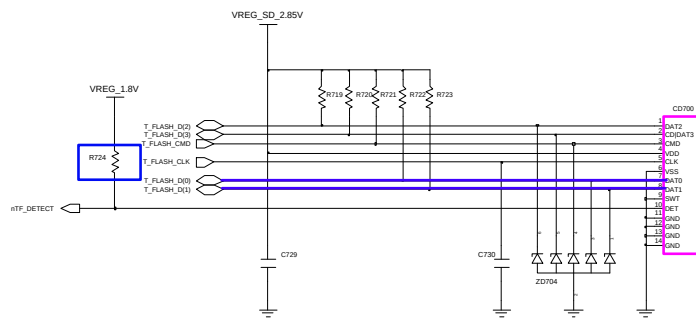


T-FLASH Connector

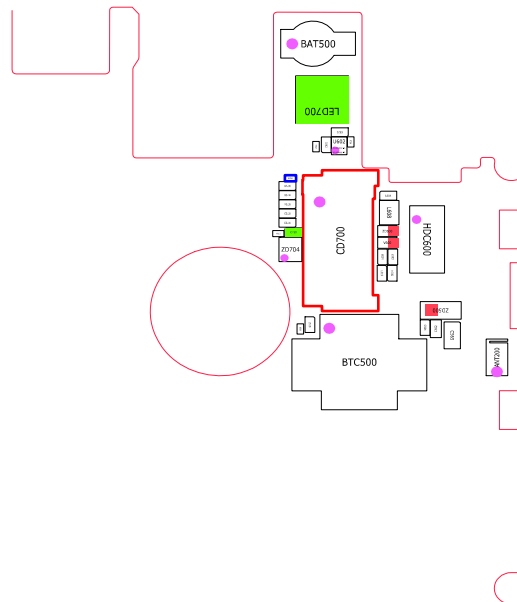



8-3-5. Microphone Part (1)

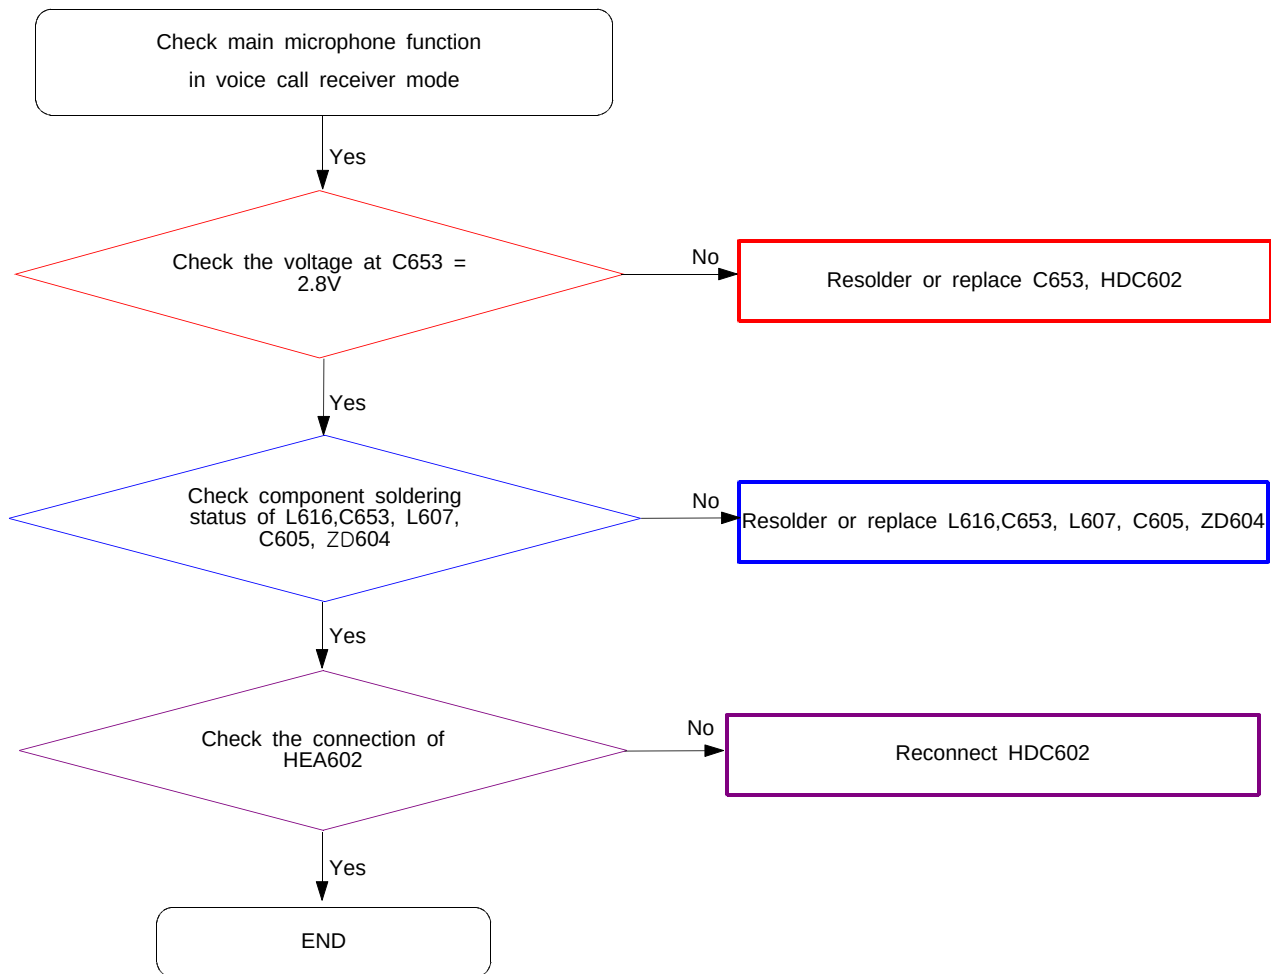

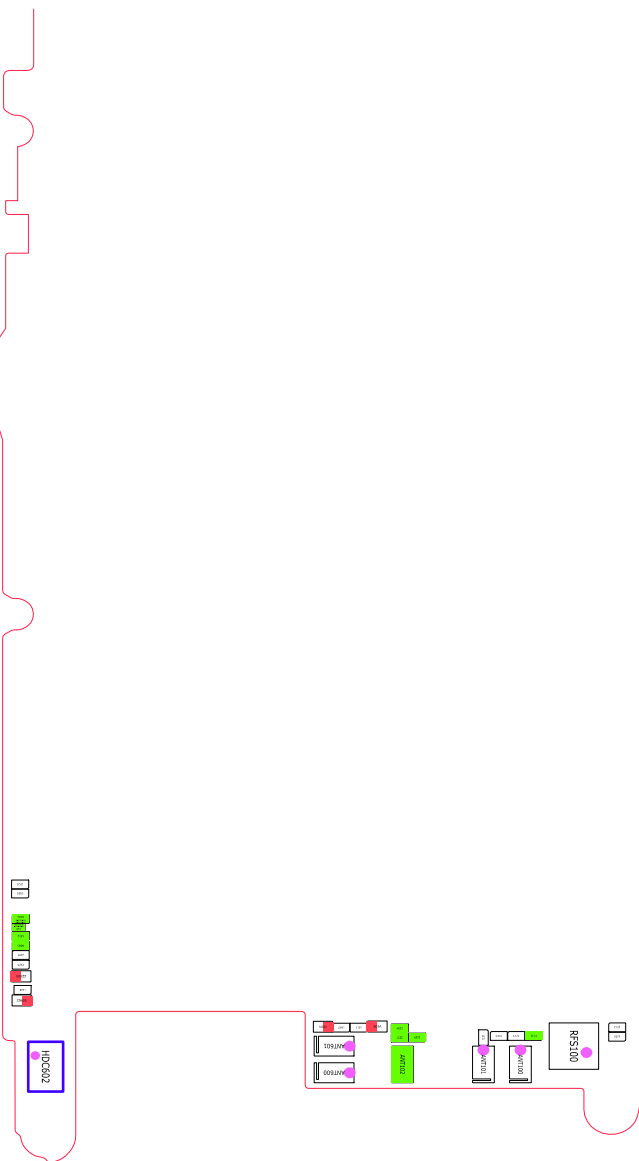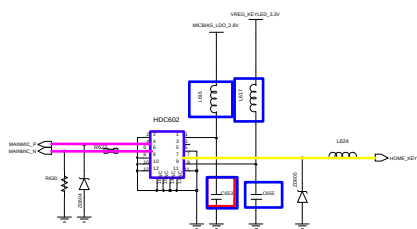



8-3-5. Microphone Part (2)

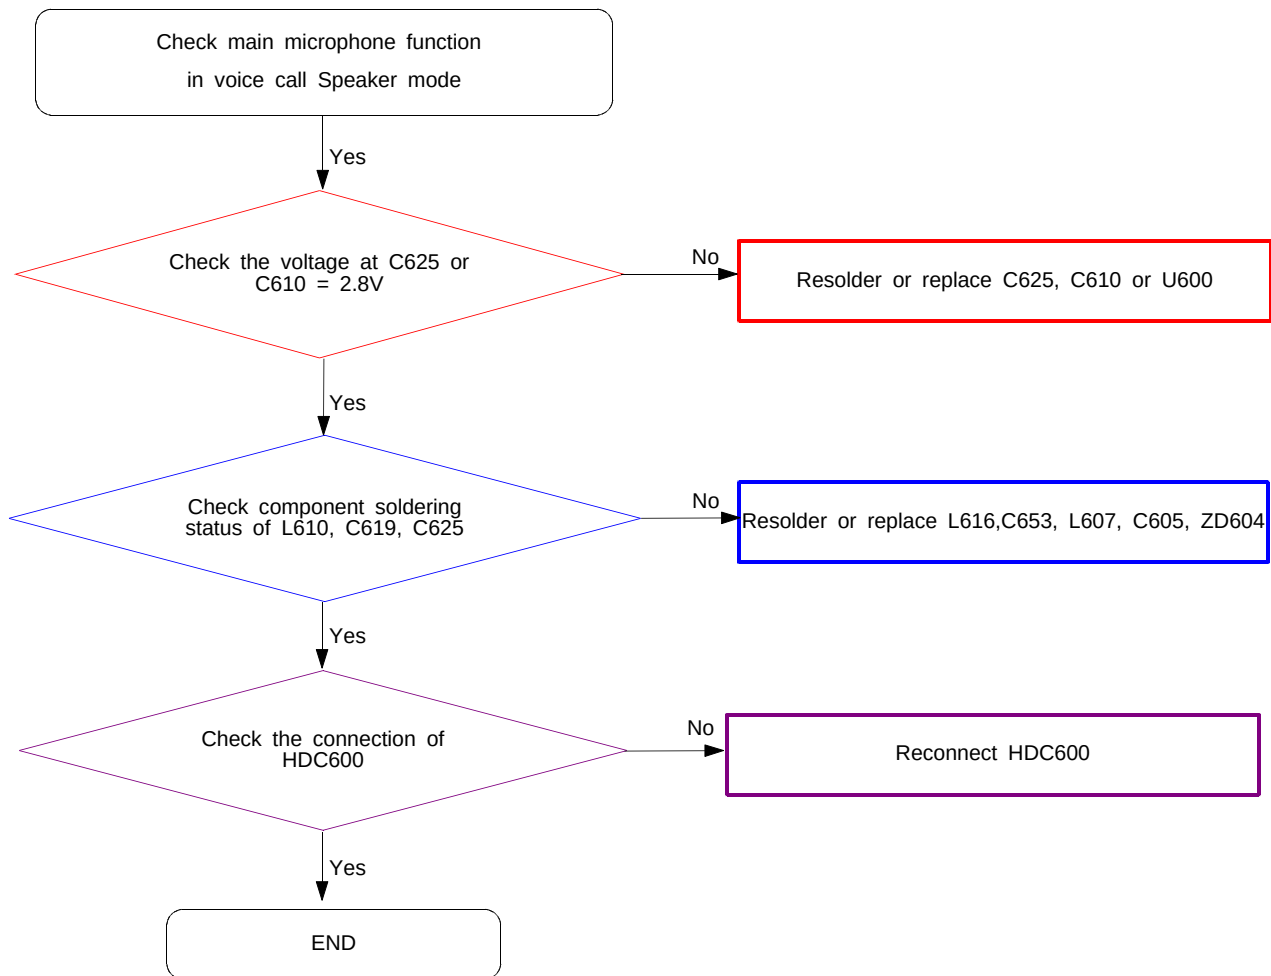

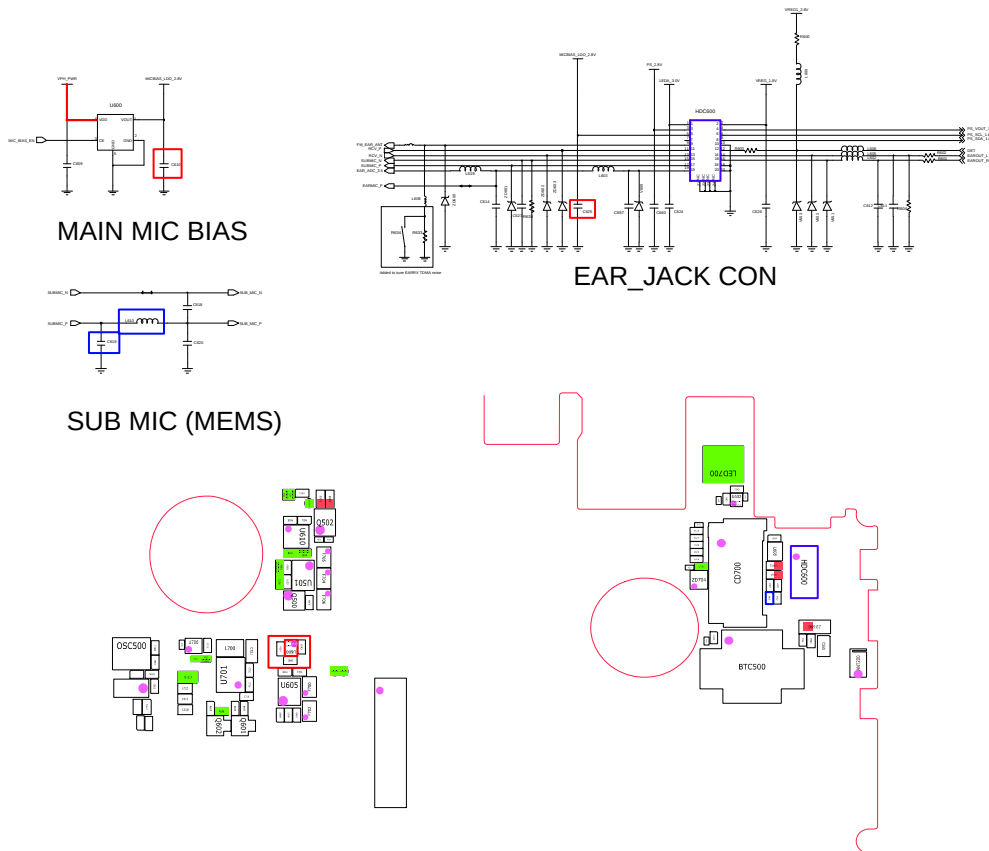


6. Speaker Part



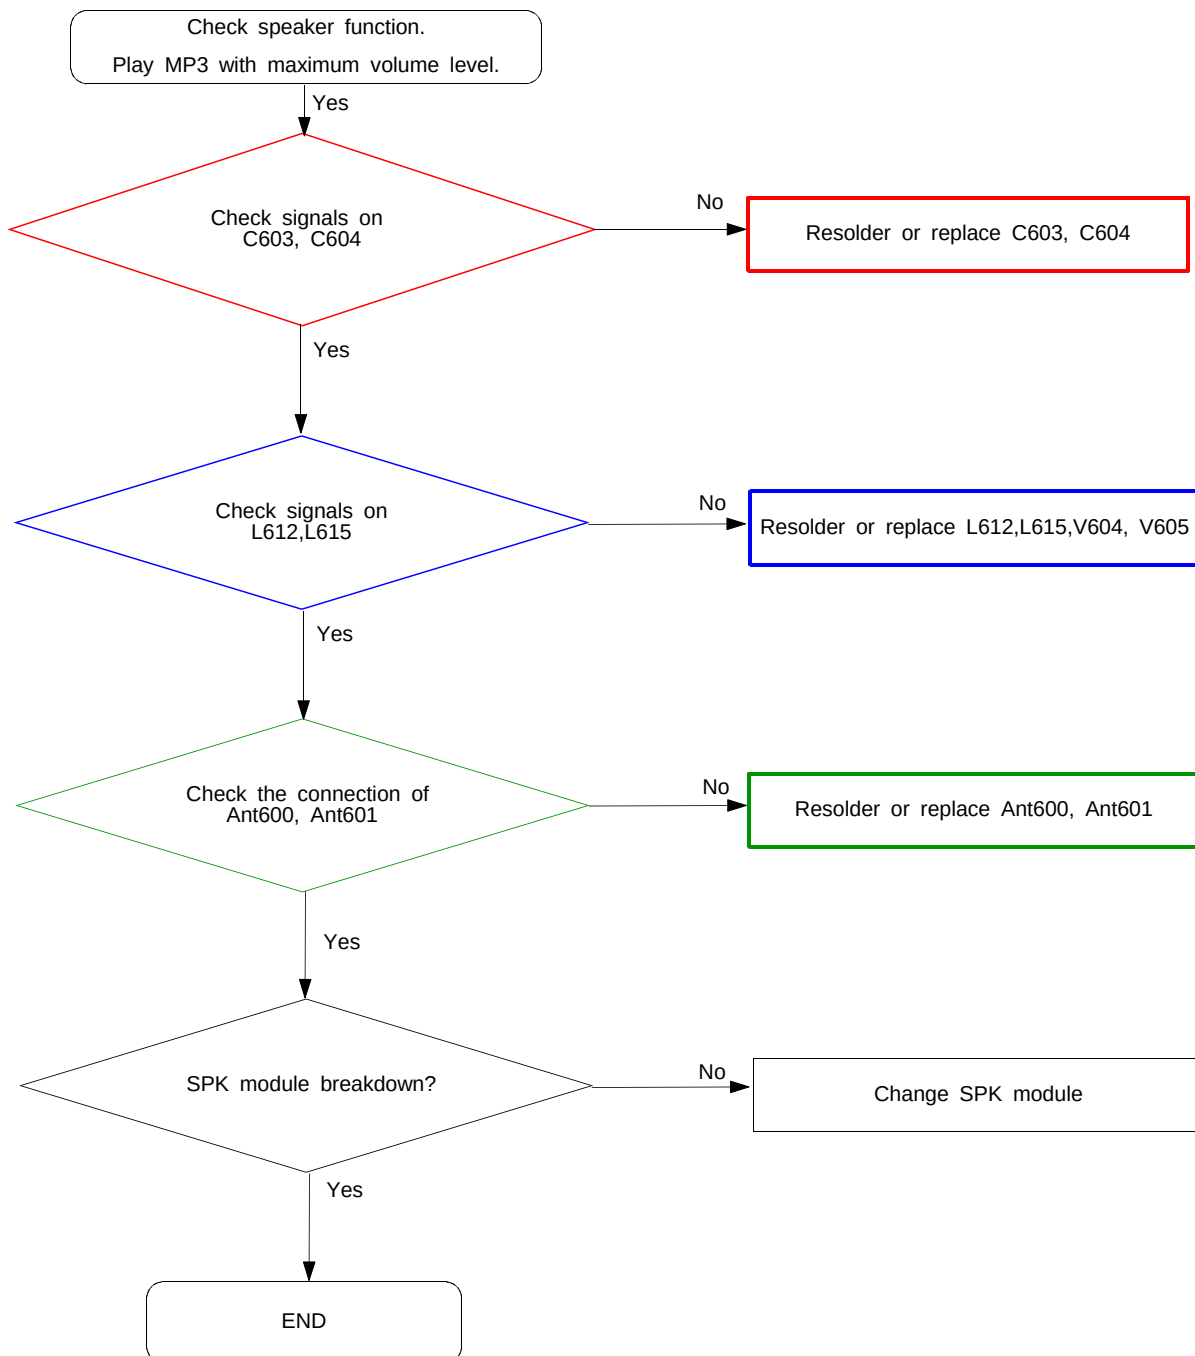


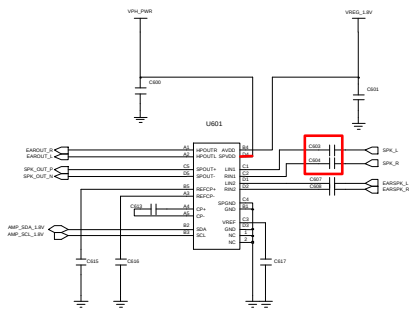


< AUDIO AMP - YDA165 >

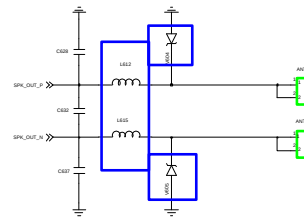

SPEAKER Contact

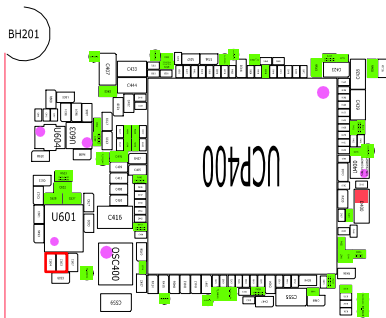



8-3-7. Receiver Part

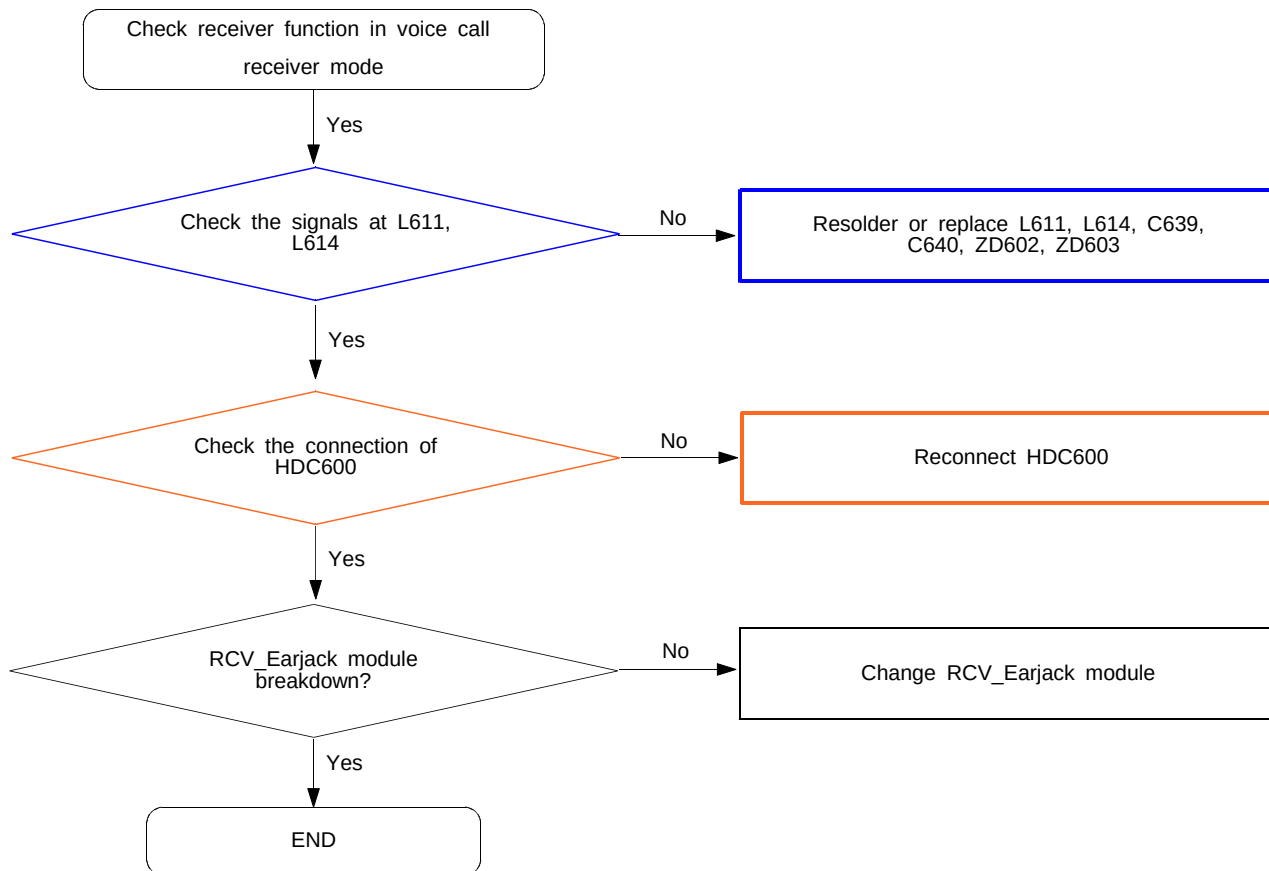


8-3-8. KEY Function (volume key/ power key)


- volume key

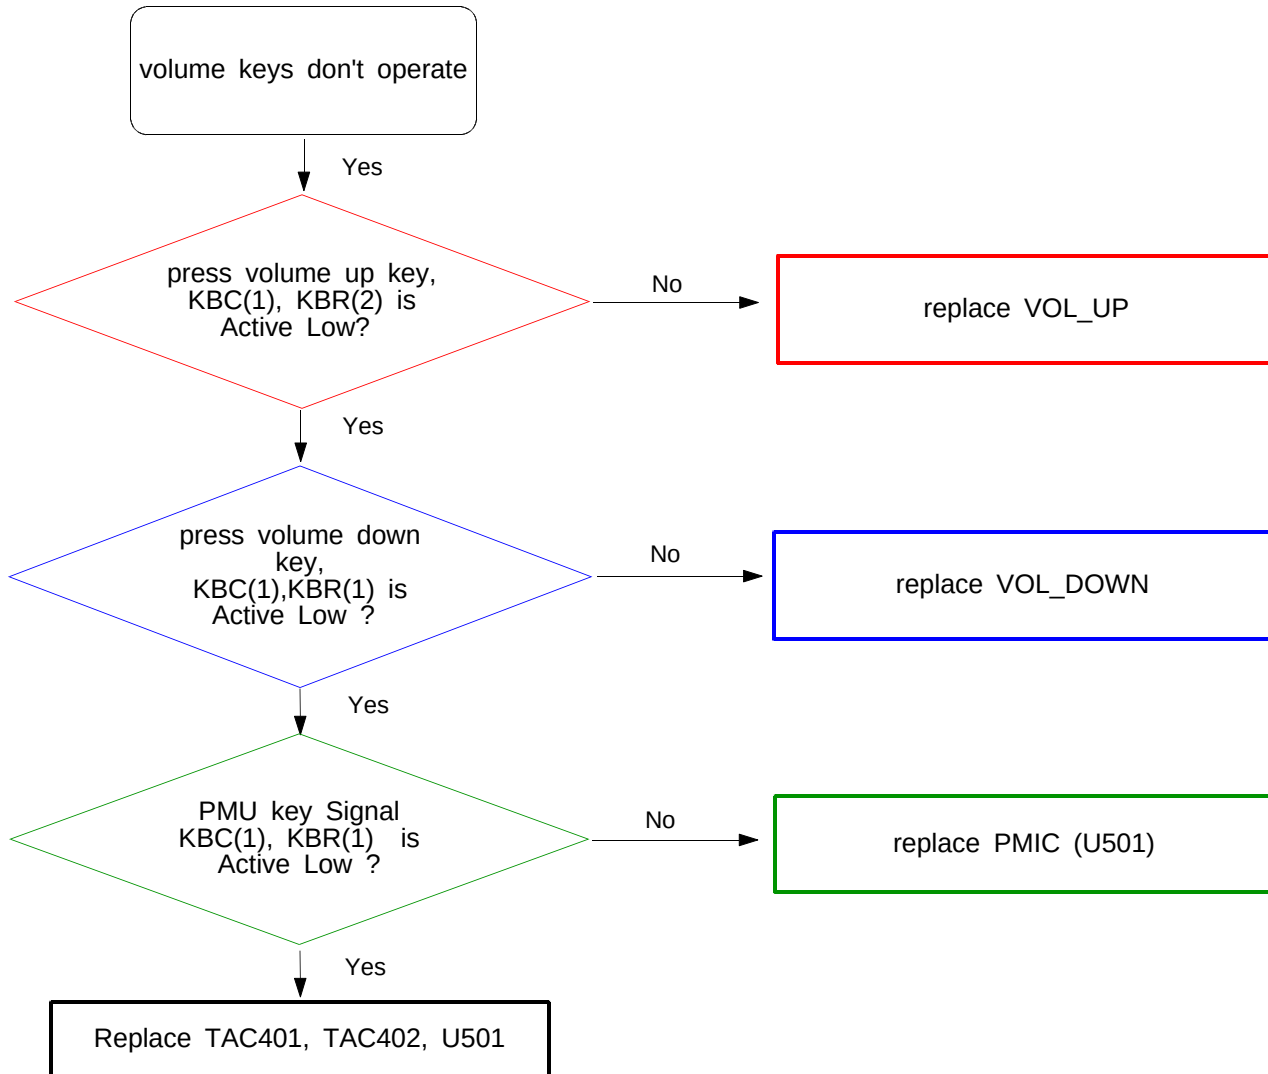

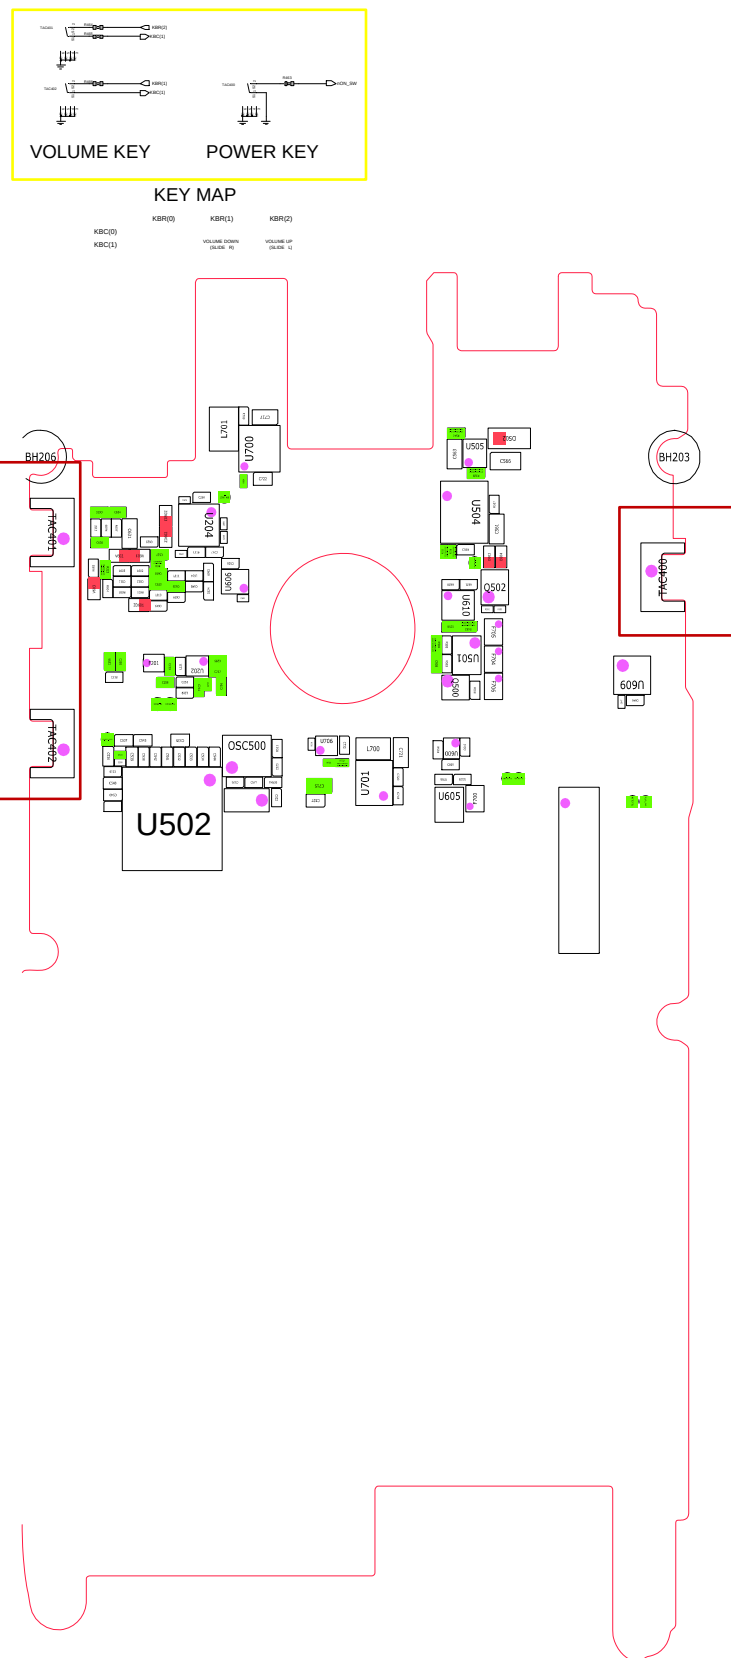



8-3-9. BT/WIFI

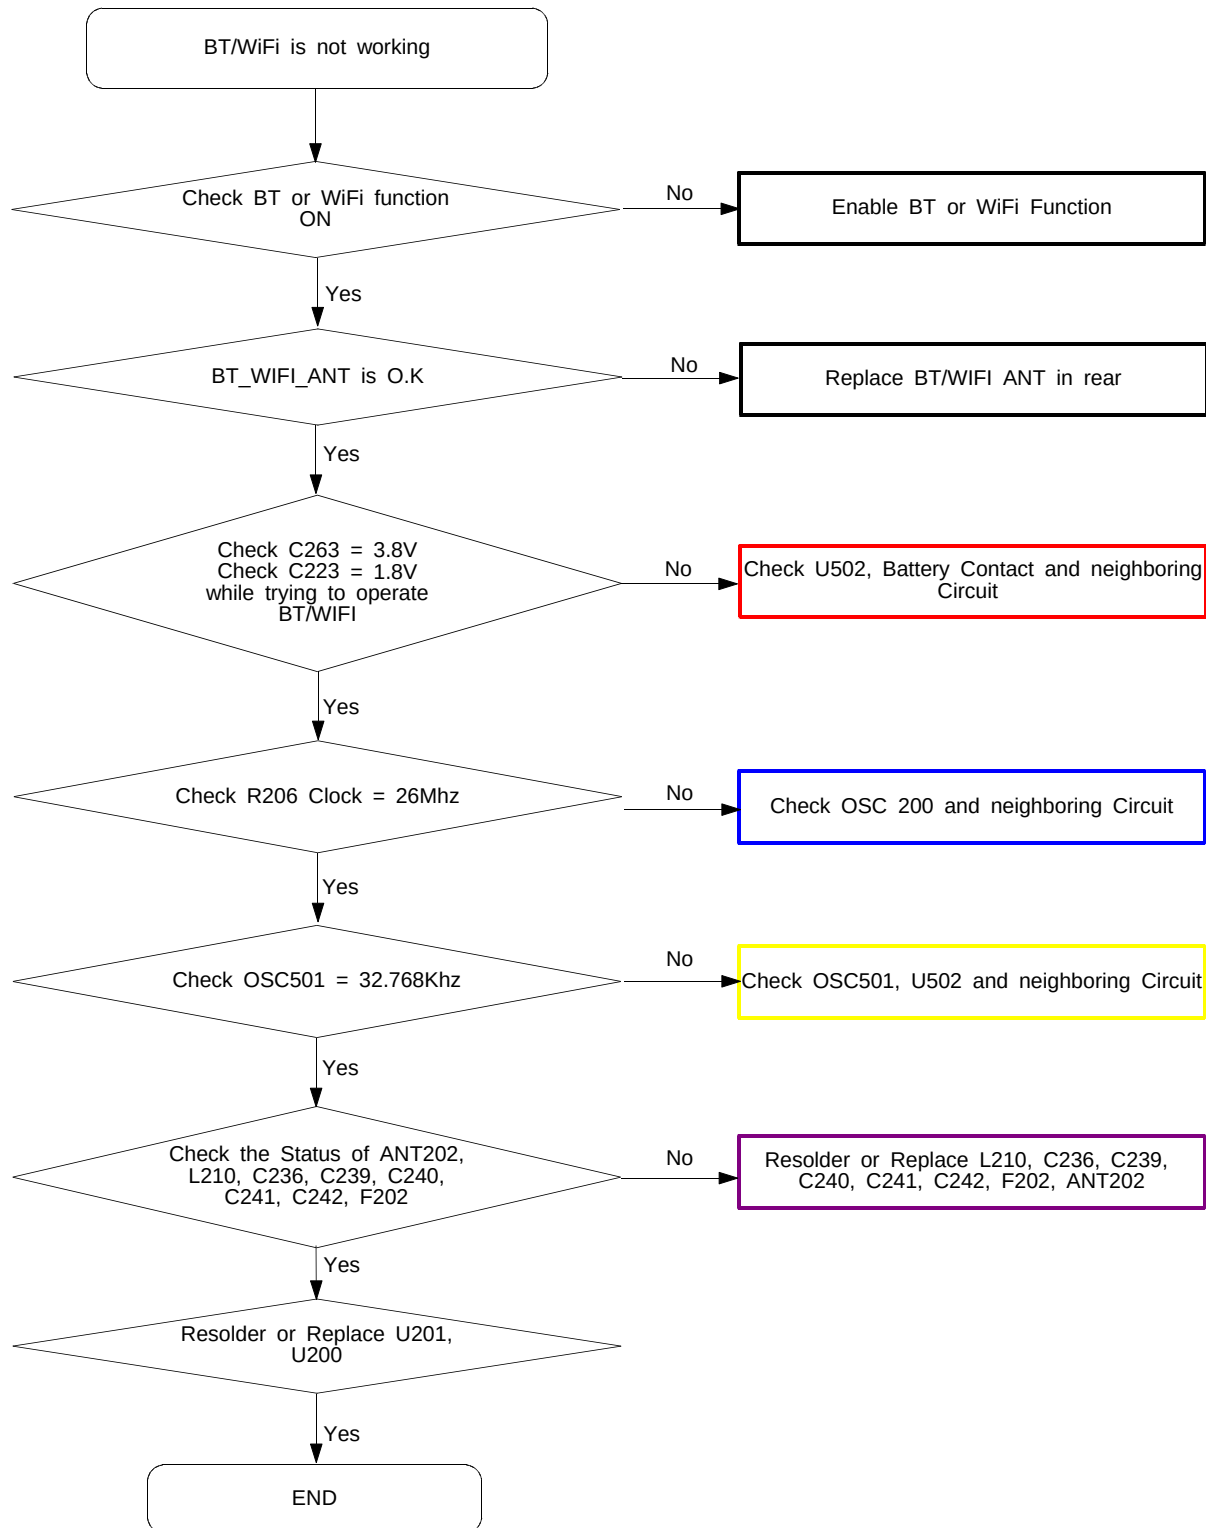

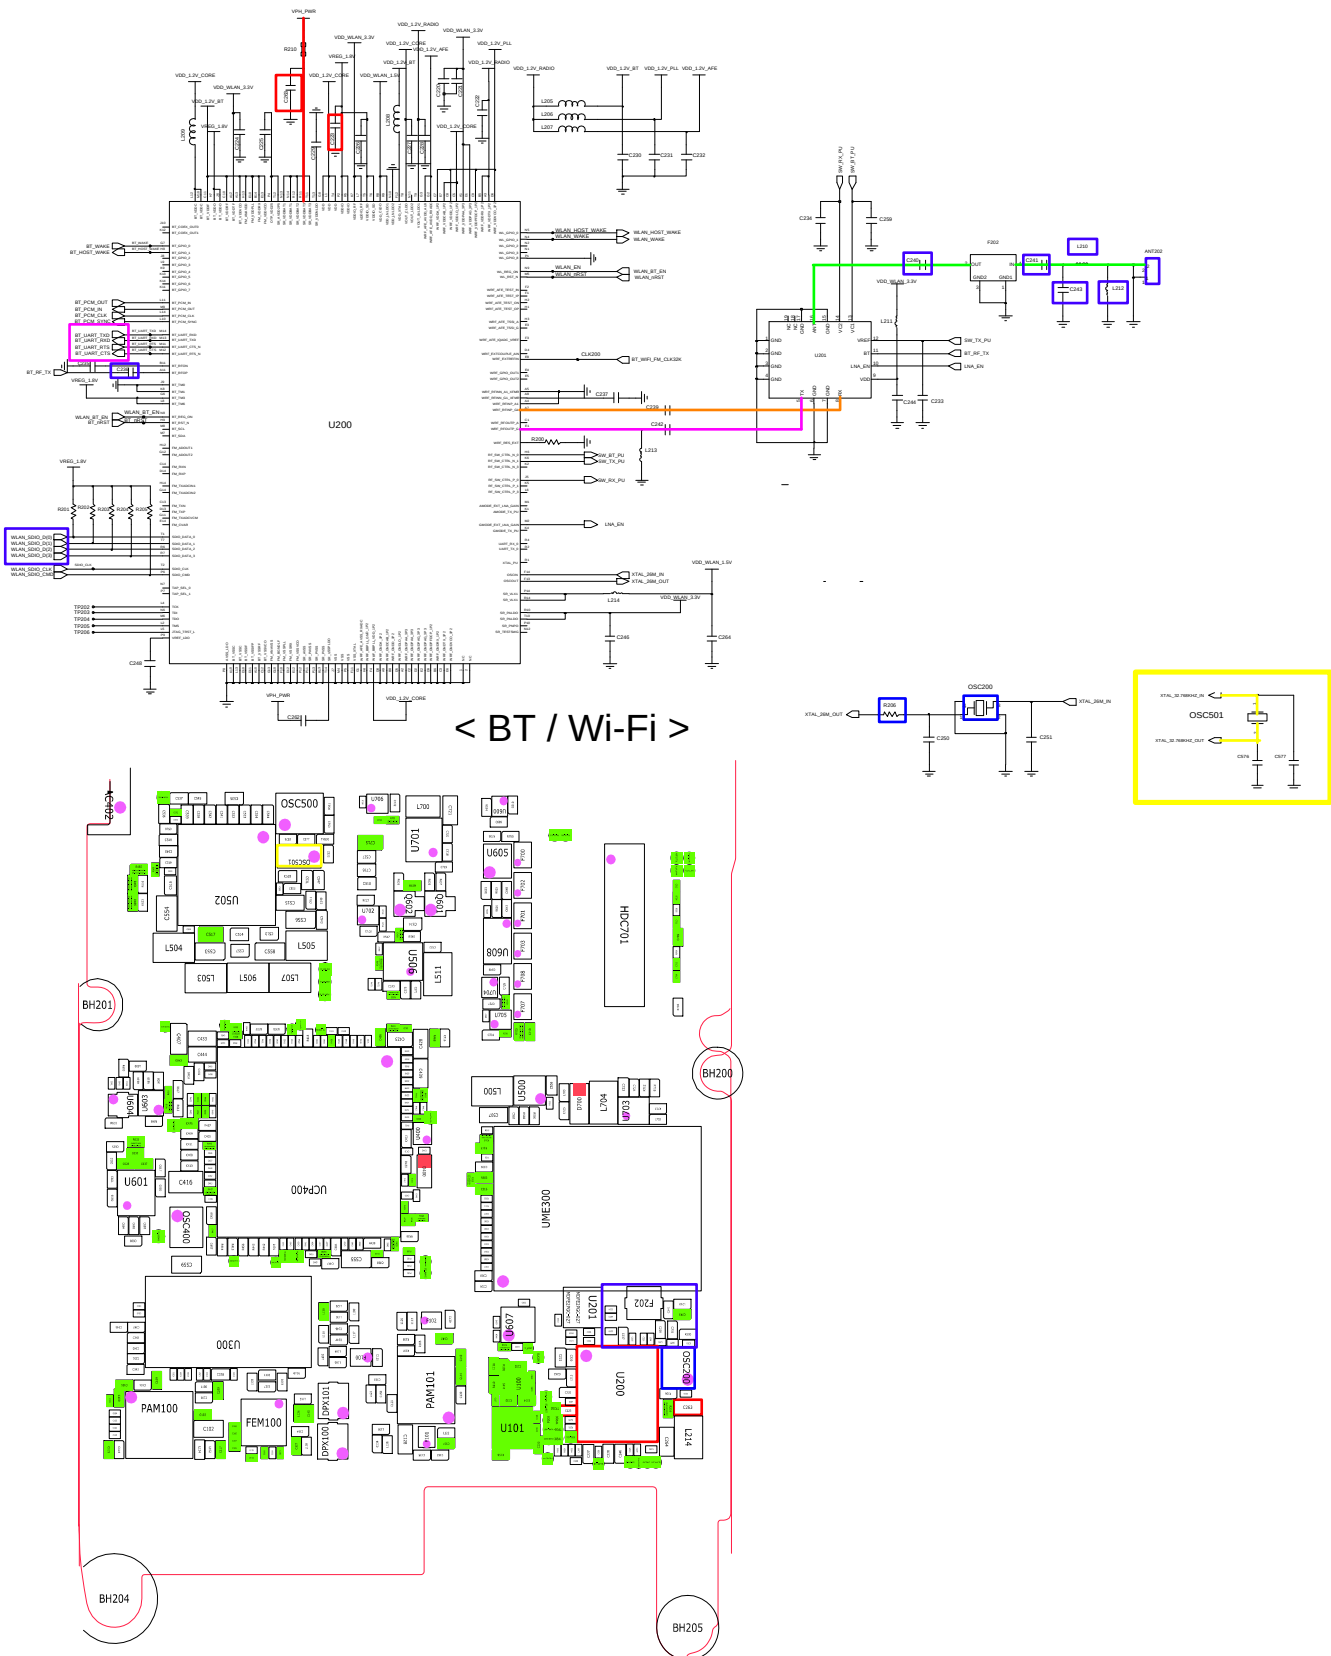


8-3-10. FM RADIO

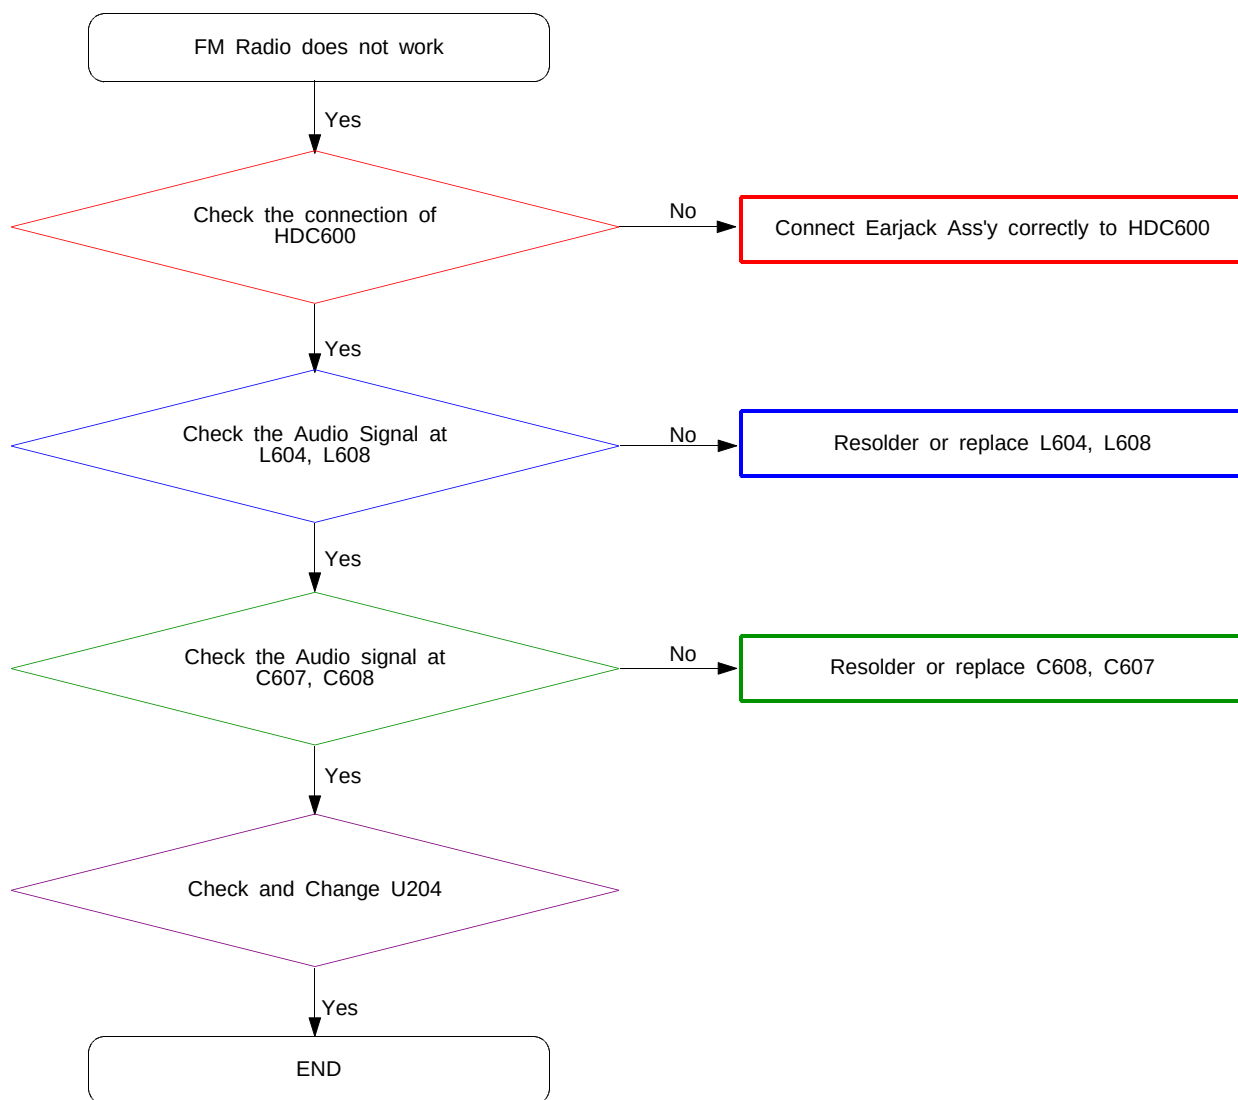


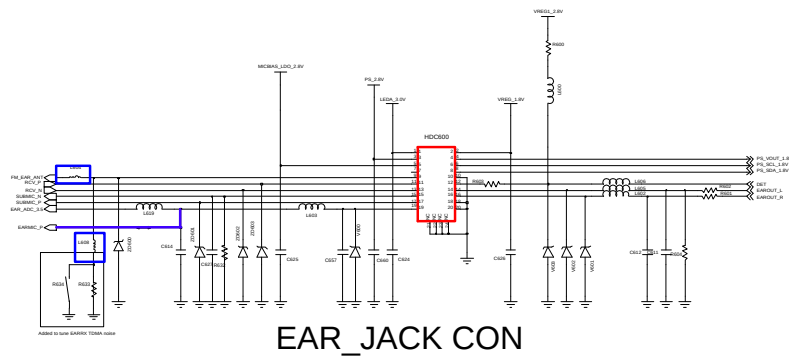




EAR_JACK CON

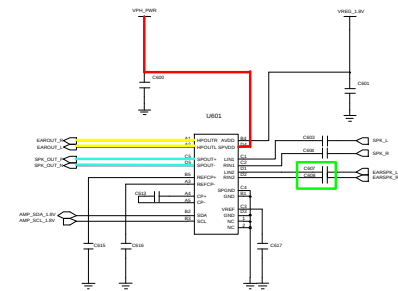


< AUDIO AMP - YDA165 >

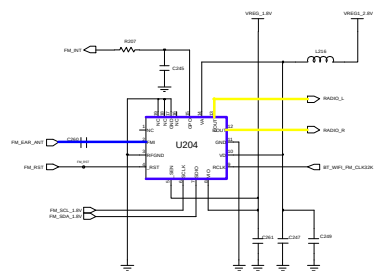


FM RADIO(SI4709)

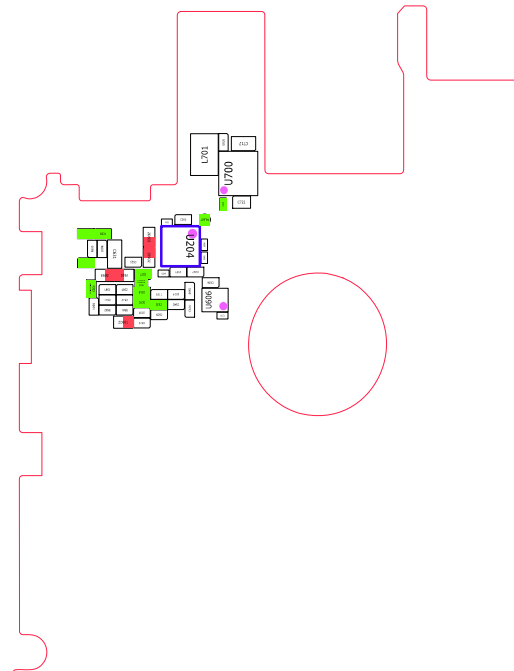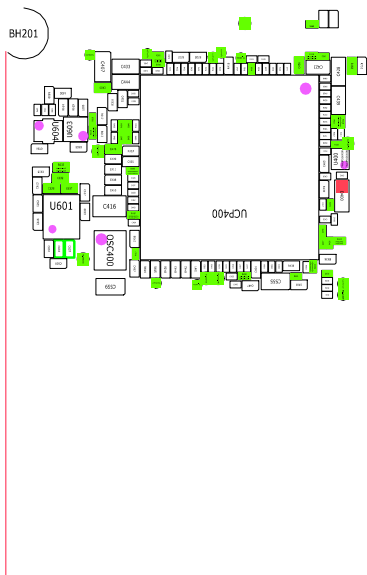
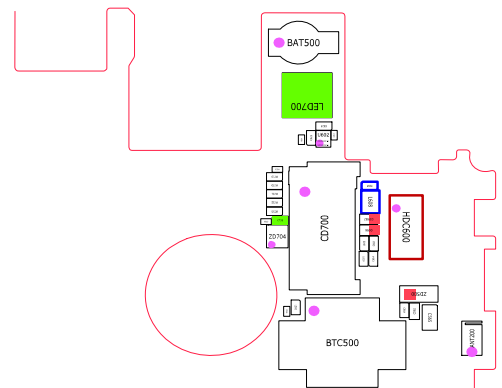


8-3-11. TSP

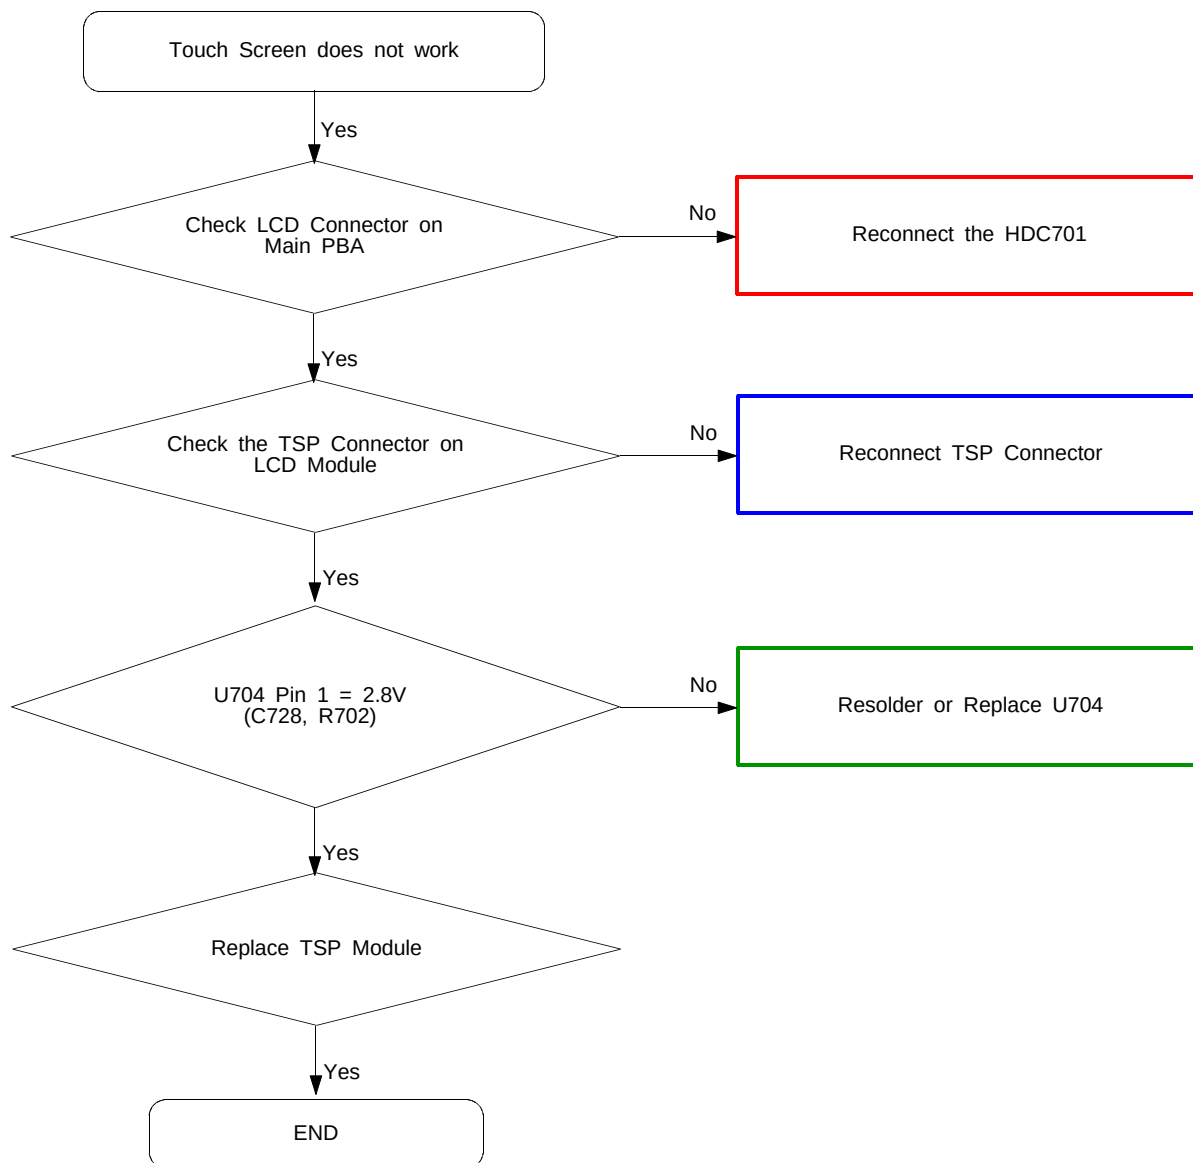


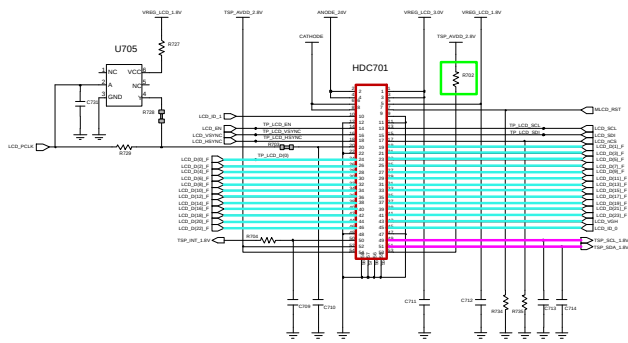


3.7" LCD Connector

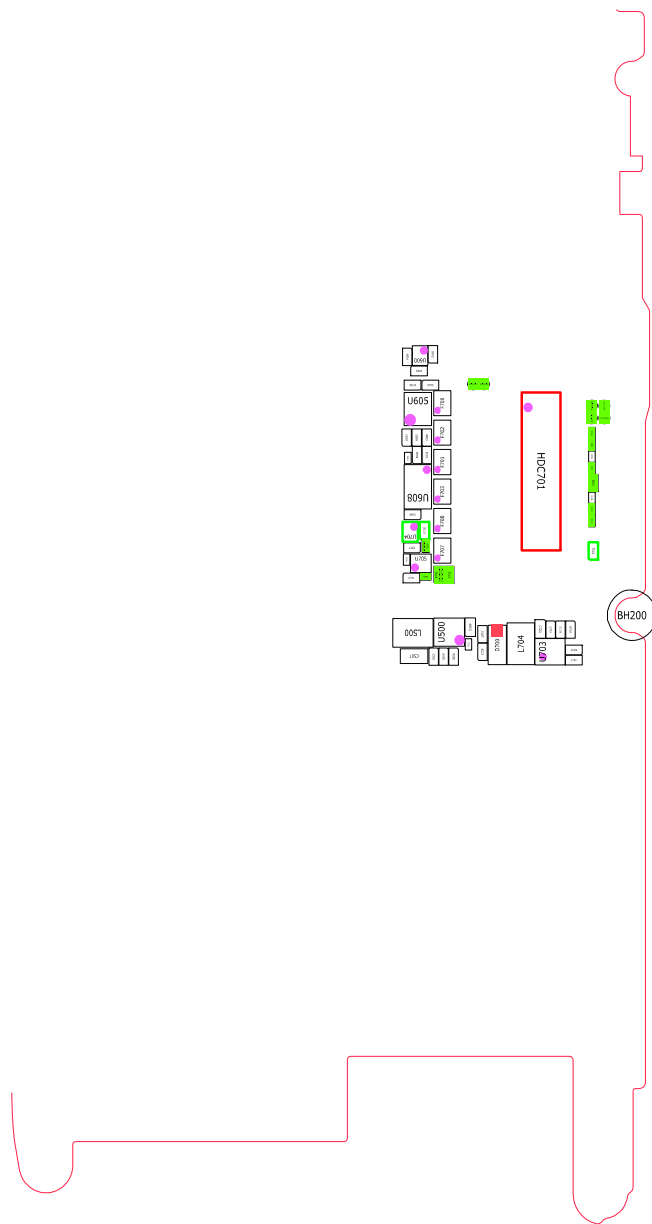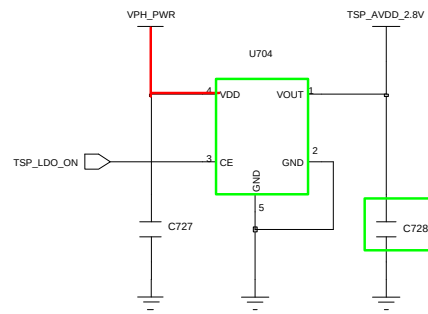


8-3-12. LCD


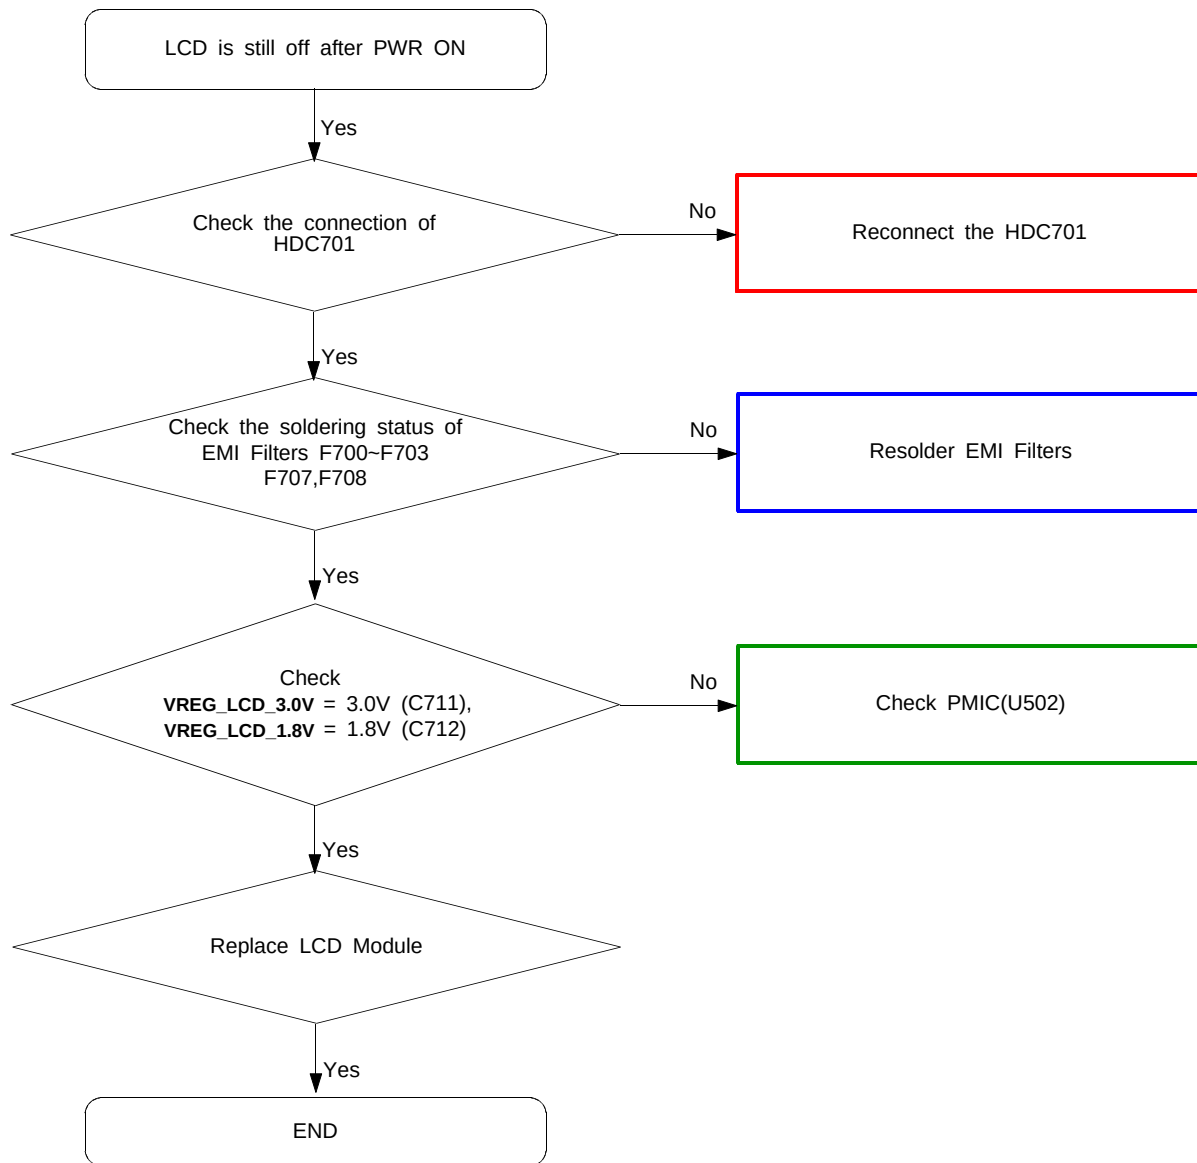


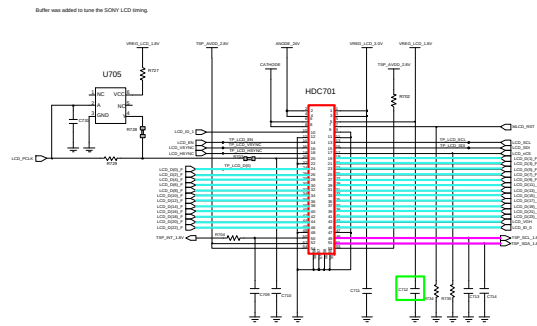


3.7" LCD Connector


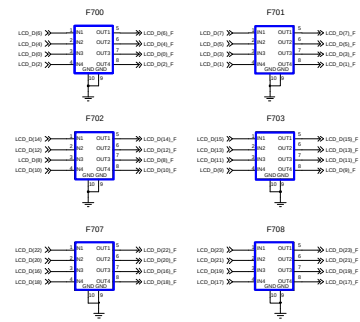


LCD EMI_FILTER

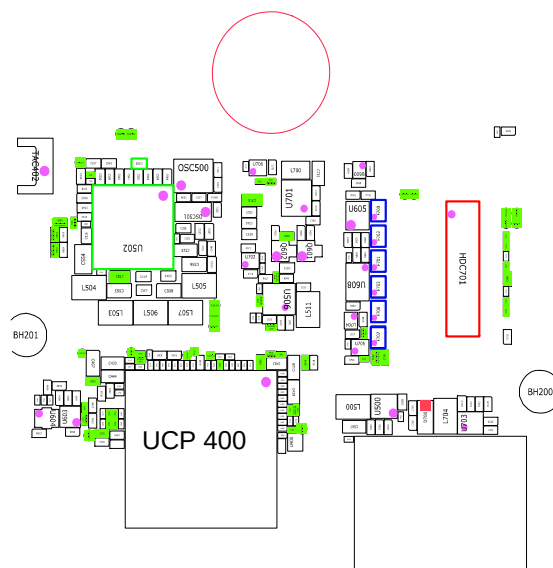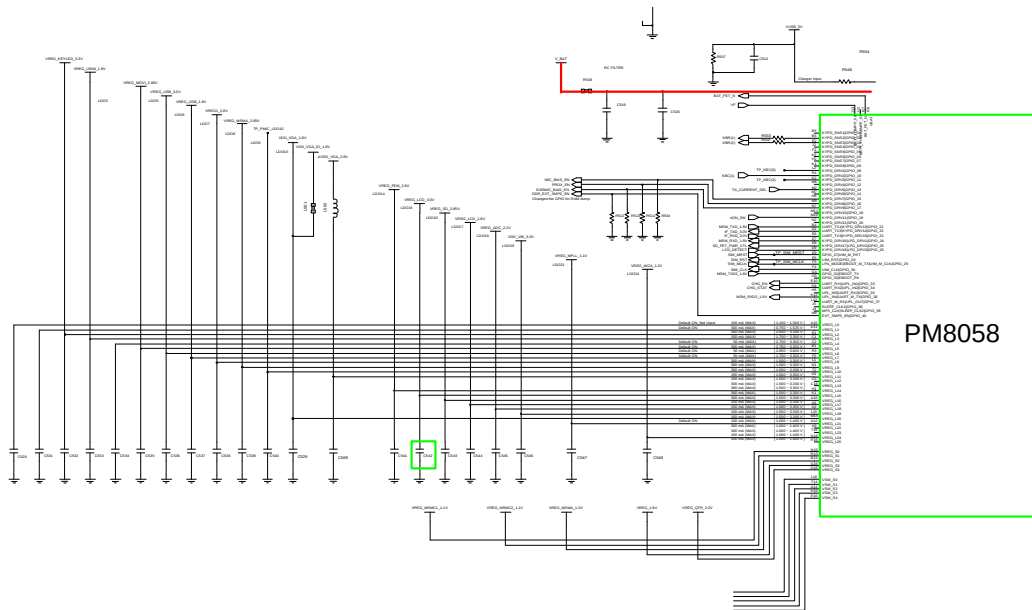



8-3-13. 5M CAM

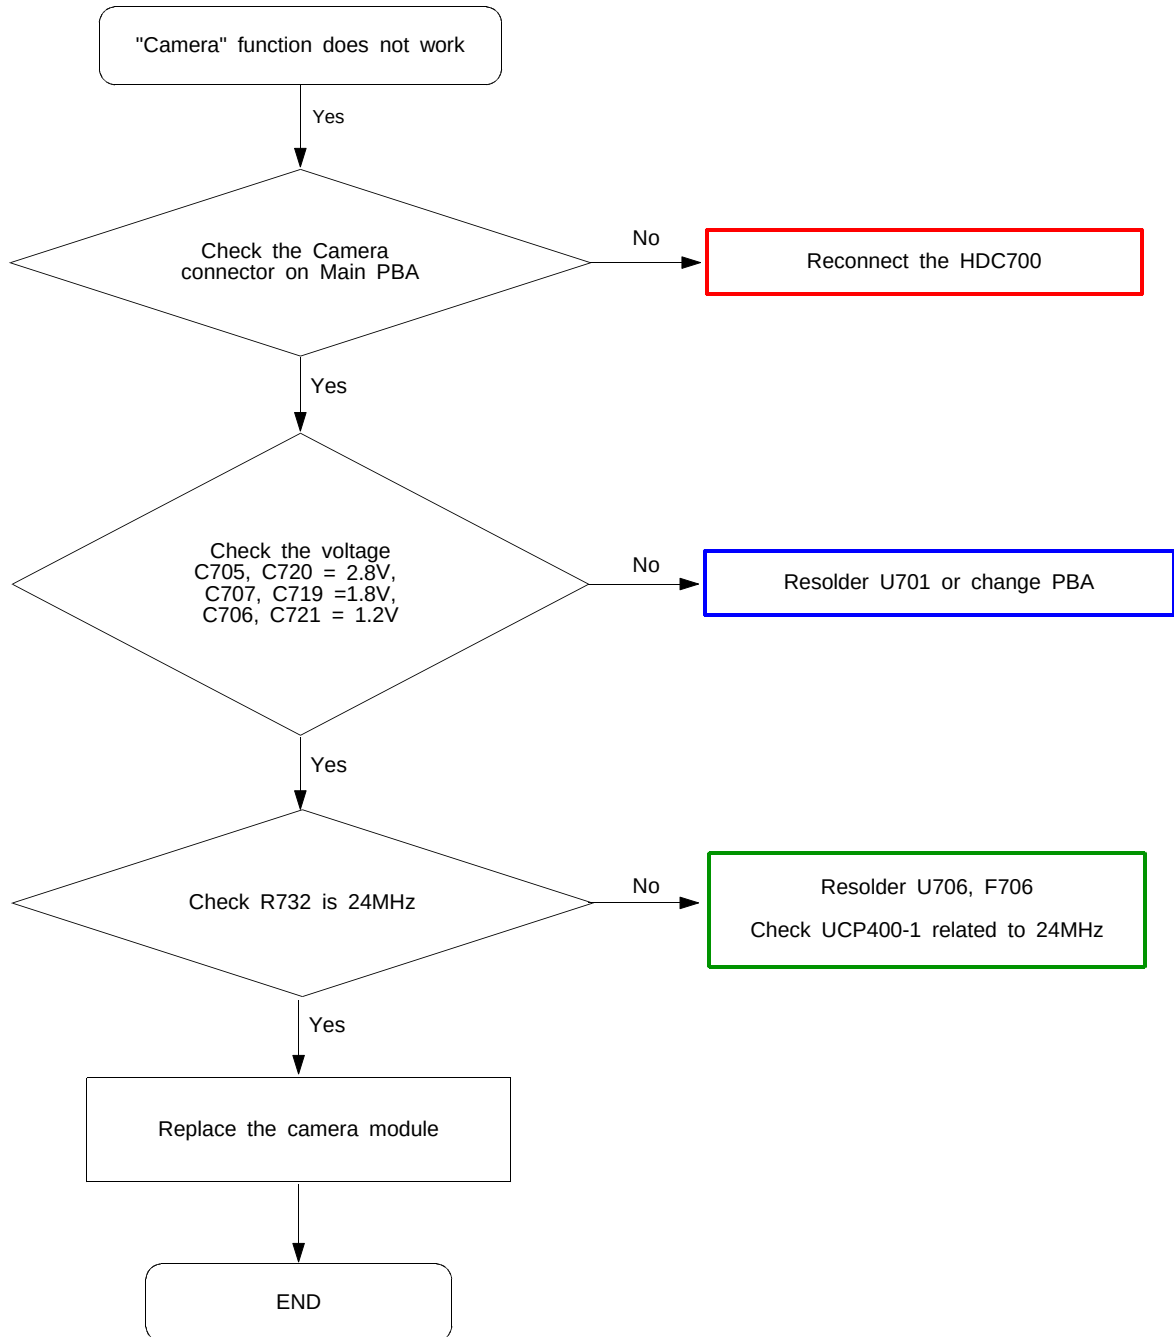

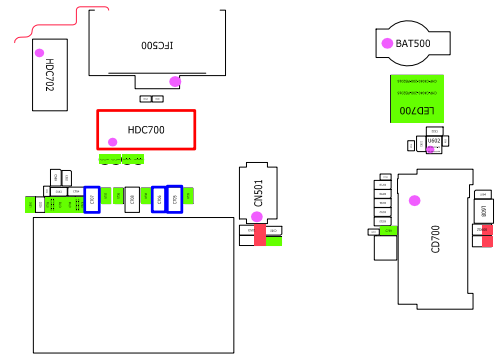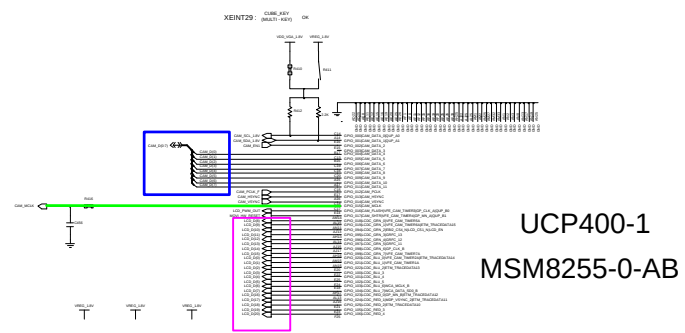


8-3-14. GSM850 RX

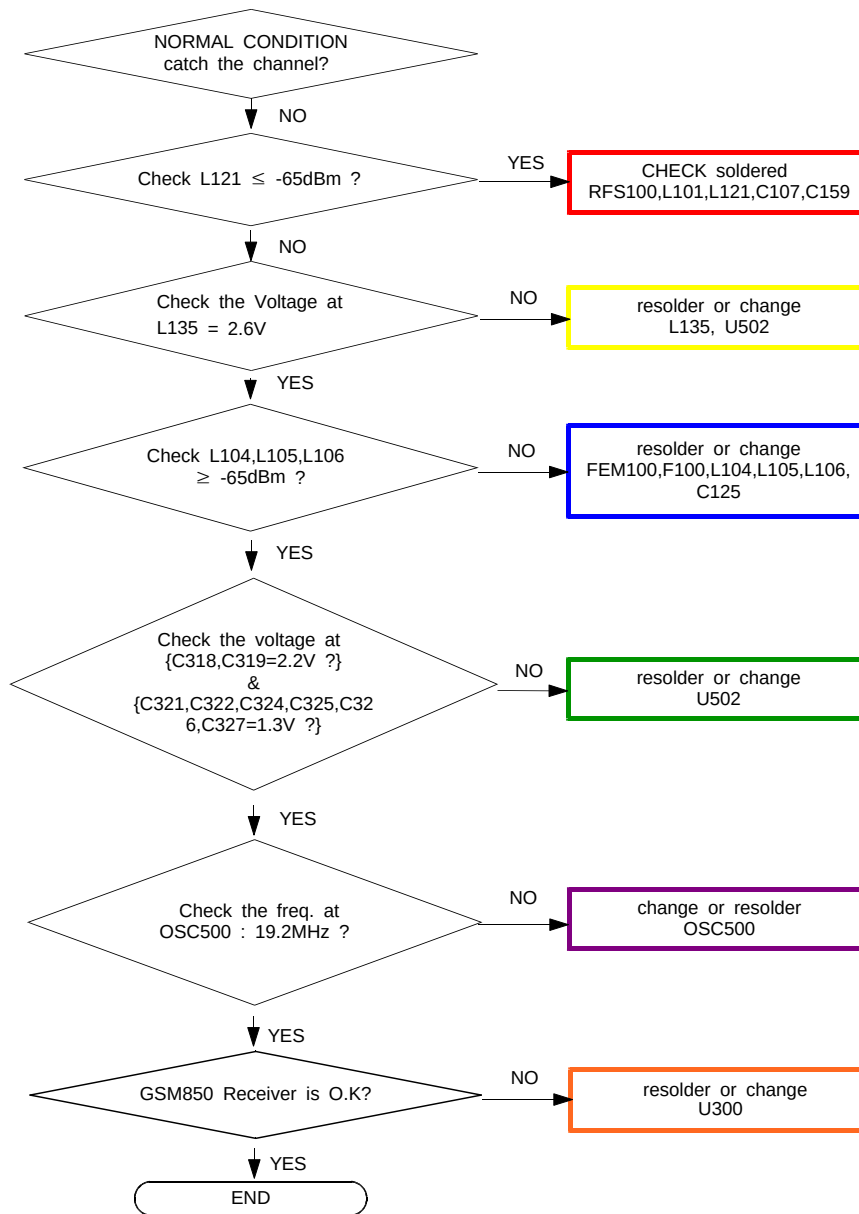


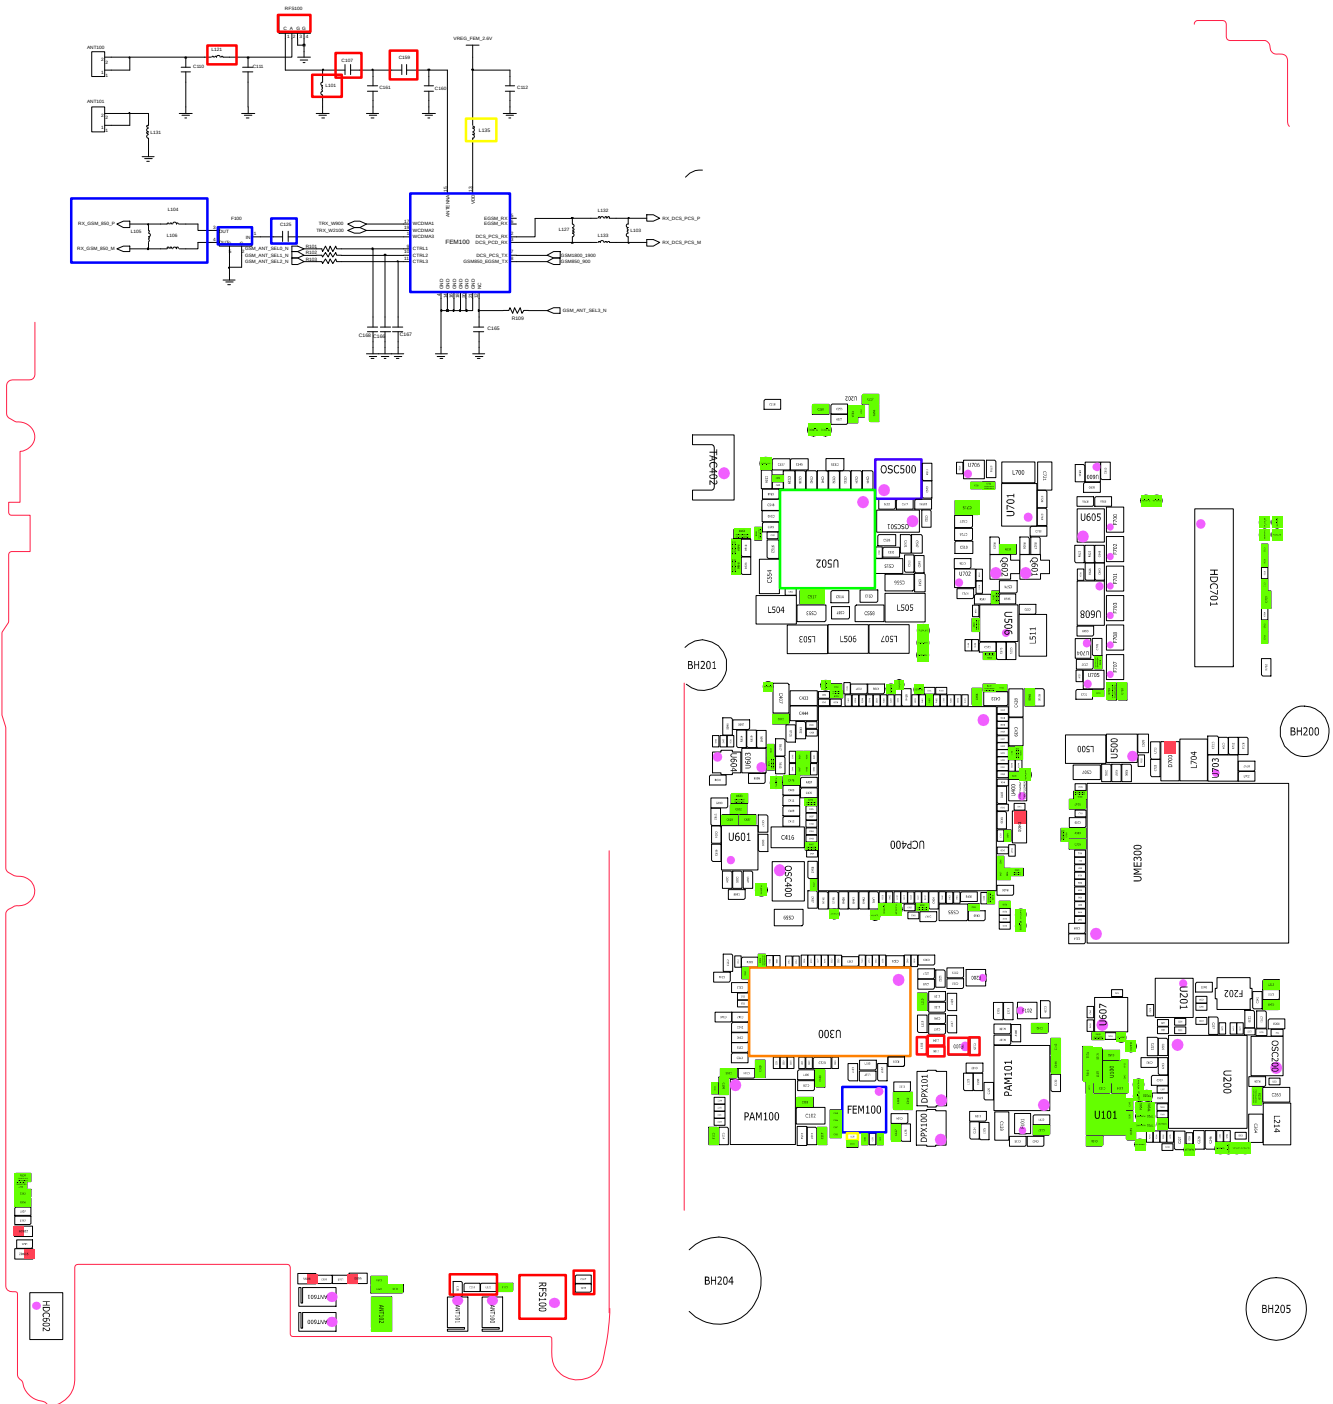


8-3-15. GSM1800, GSM1900 RX

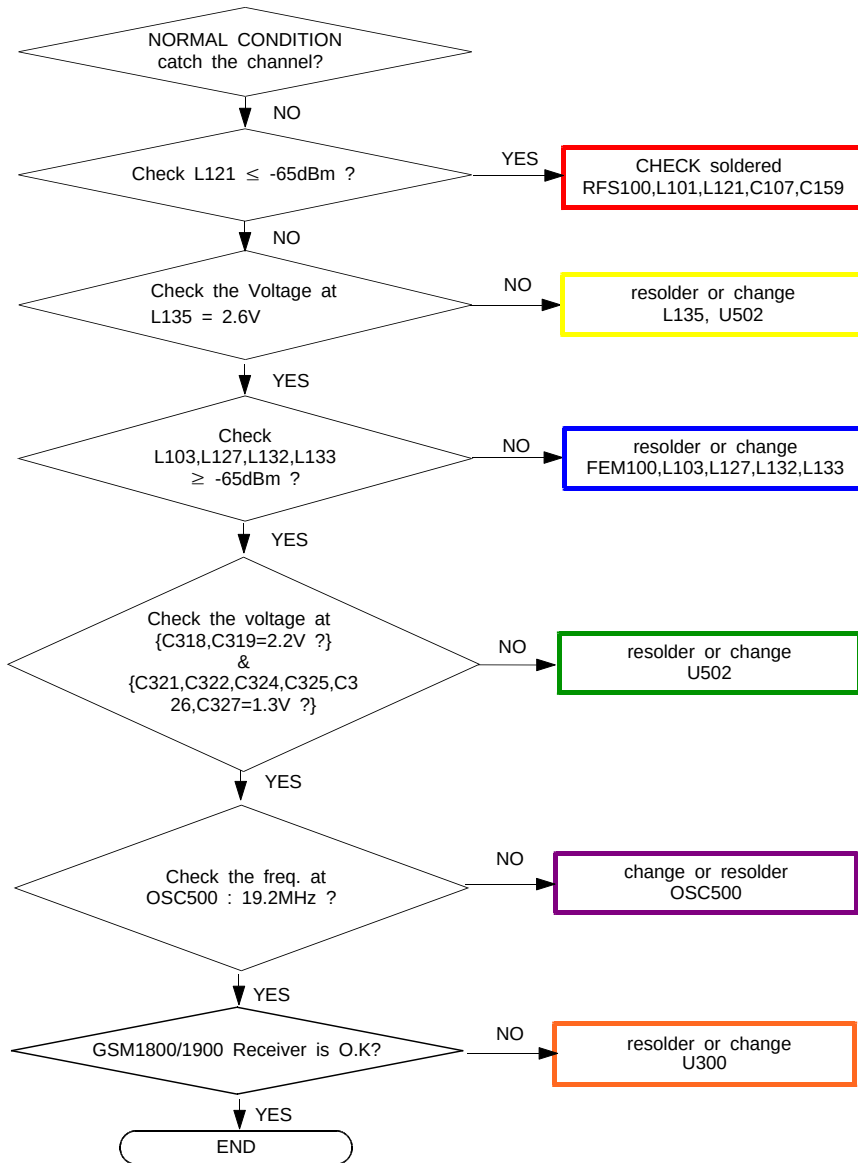


8-3-16. WCDMA Band1 RX

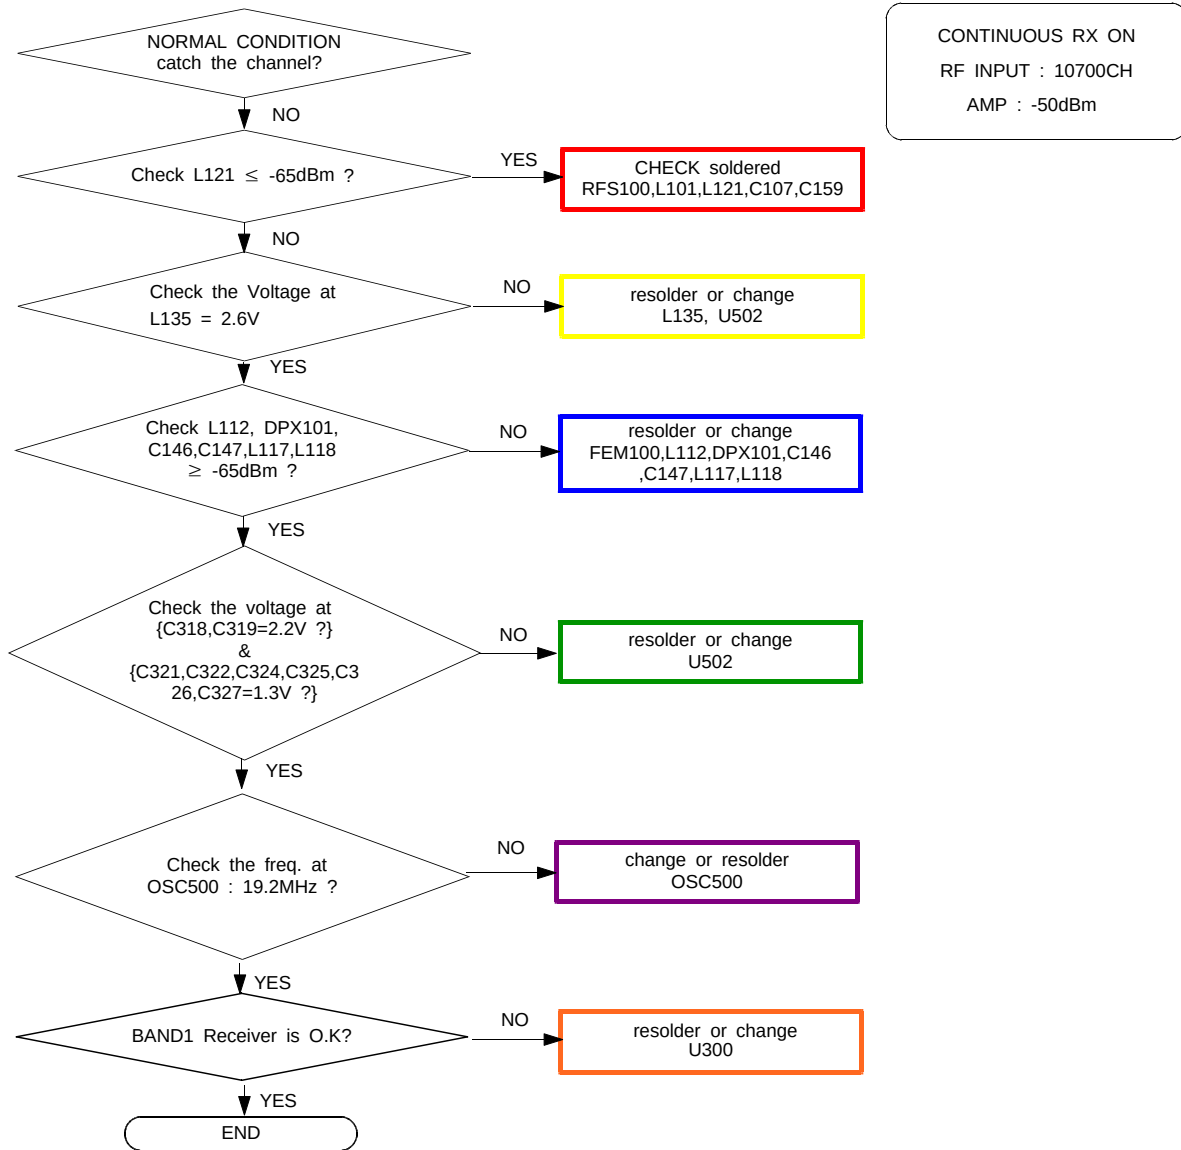


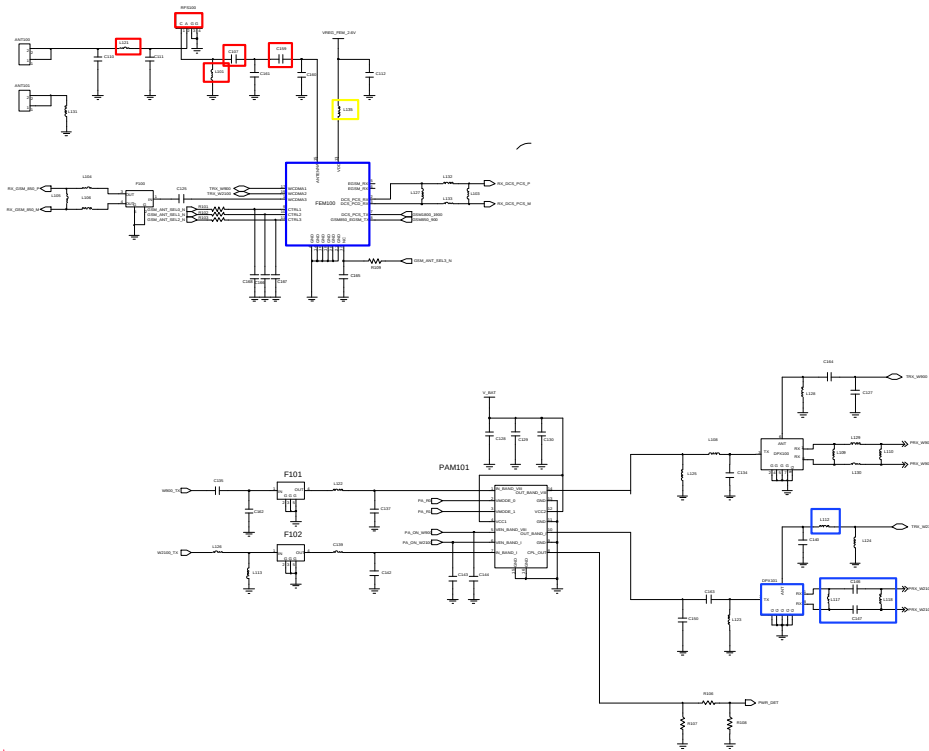


< WCDMA BAND1/BAND8 Discrete & PAD >

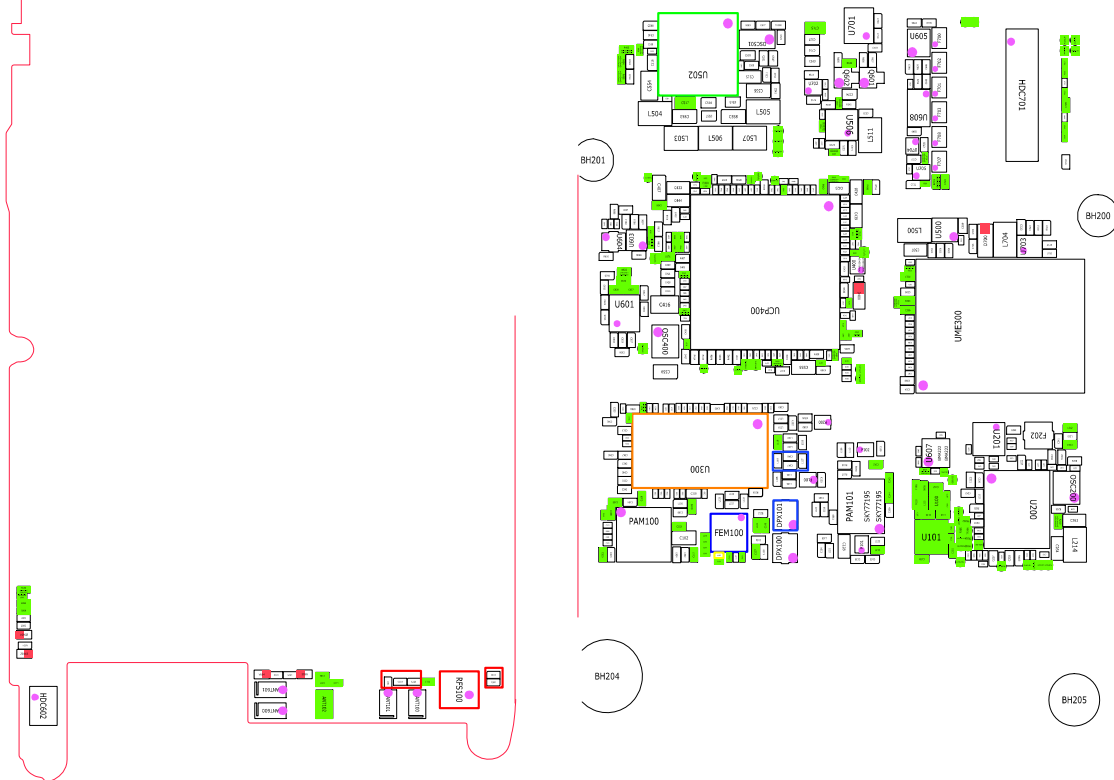


8-3-17. WCDMA Band8 / GSM900 RX

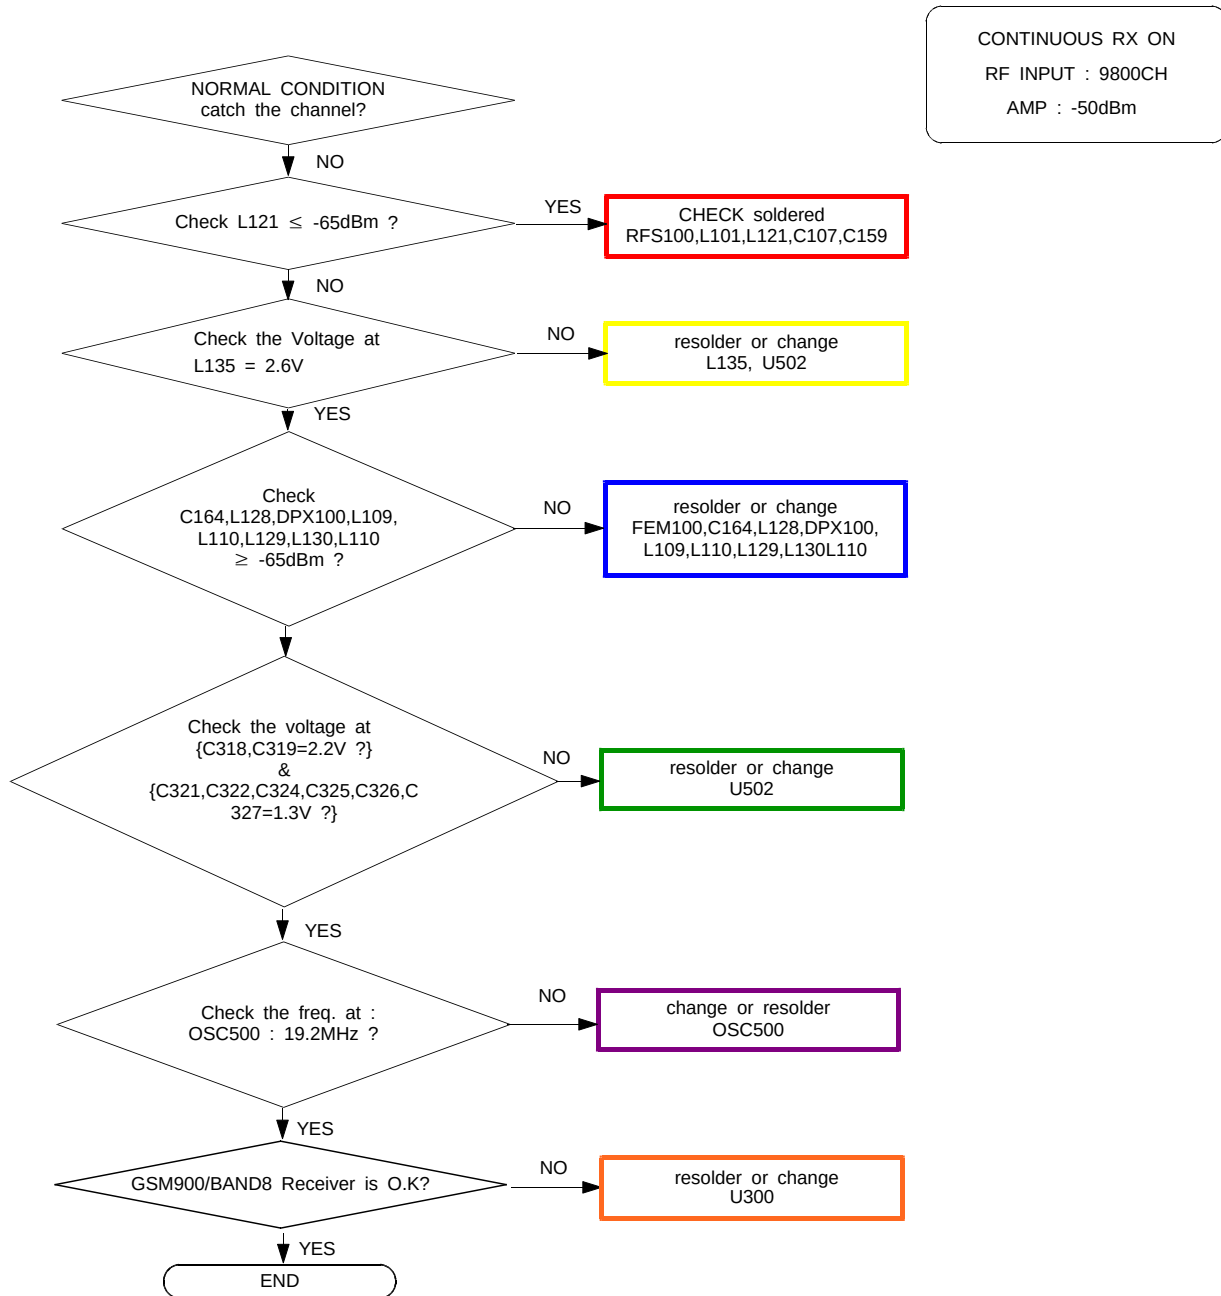

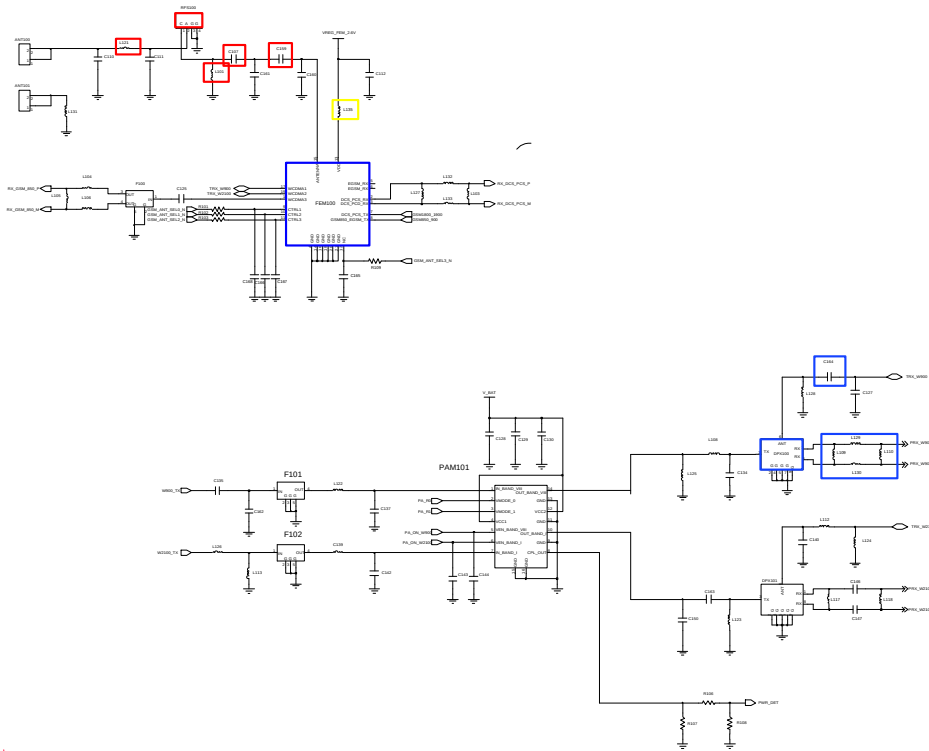



< WCDMA BAND1/BAND8 Discrete & PAD >

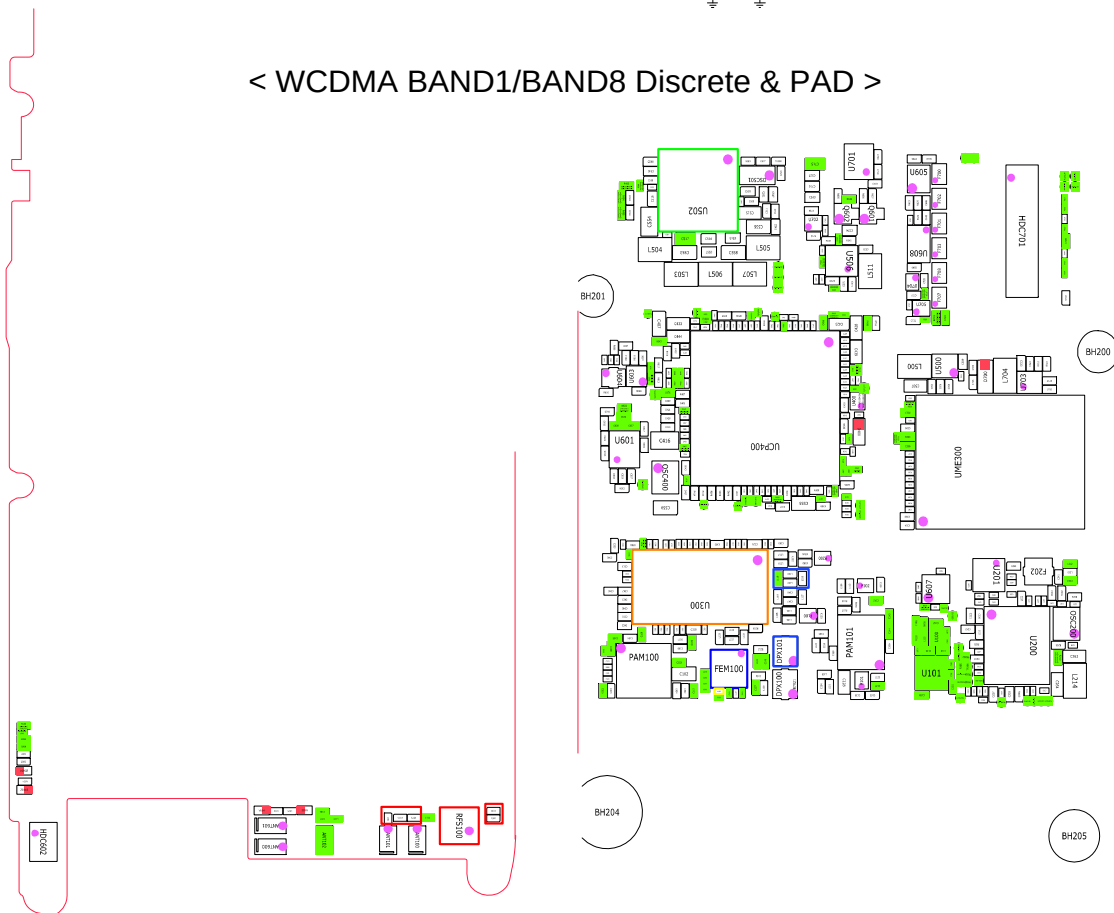


8-3-19. GSM850/GSM900 TX

CONTINUOUS TX ON CONDITION
TX POWER DAC:14500 CODE
APPLIED
GSM850 CH : 190
GSM900 CH : 62
RBW : 100KHz
VBW : 100KHz
SPAN : 10MHz
REF LEV. : 10dBm
ATT. : 20dB

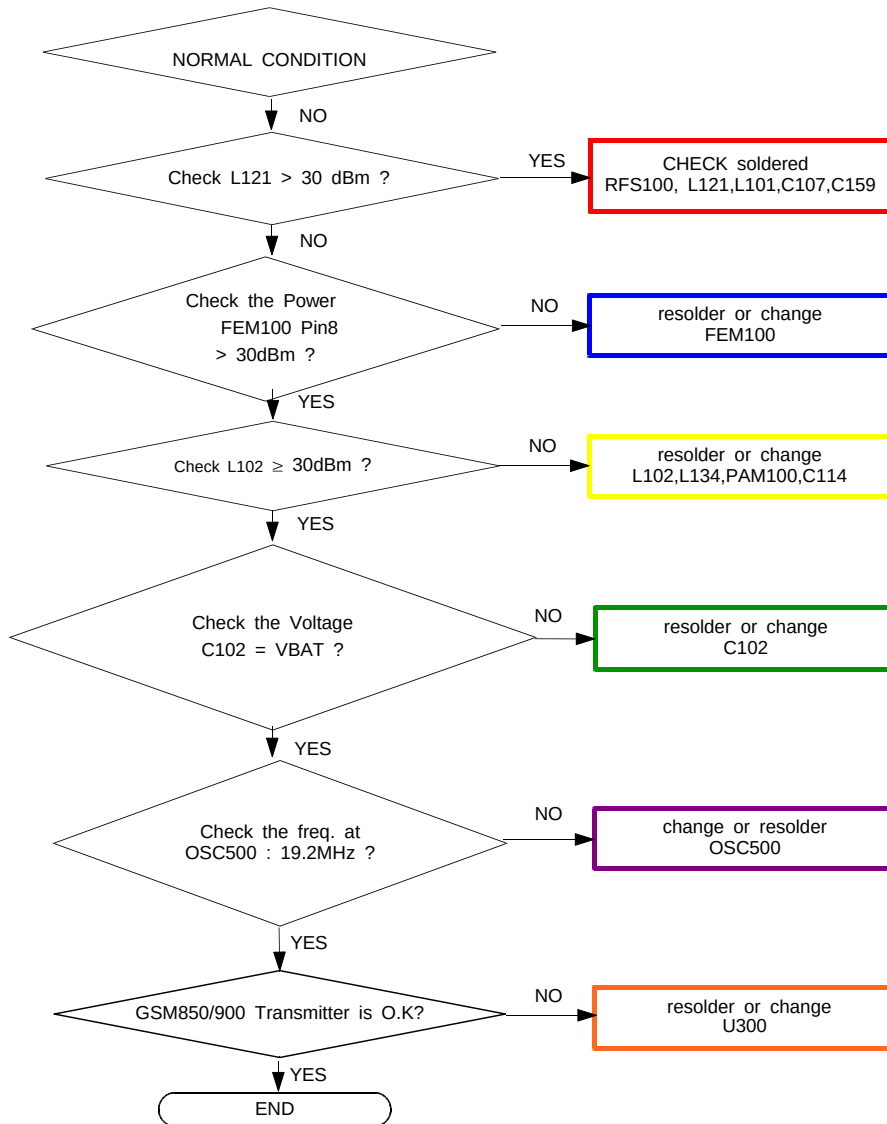


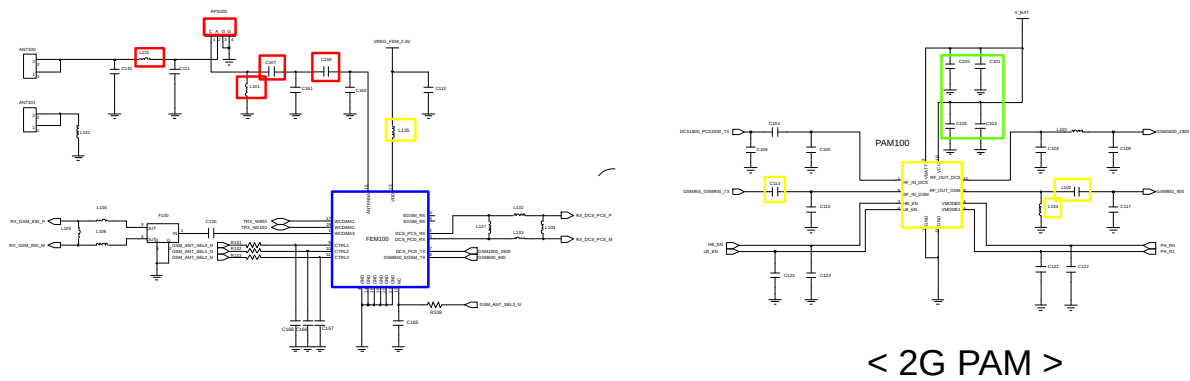

< 2G PAM >

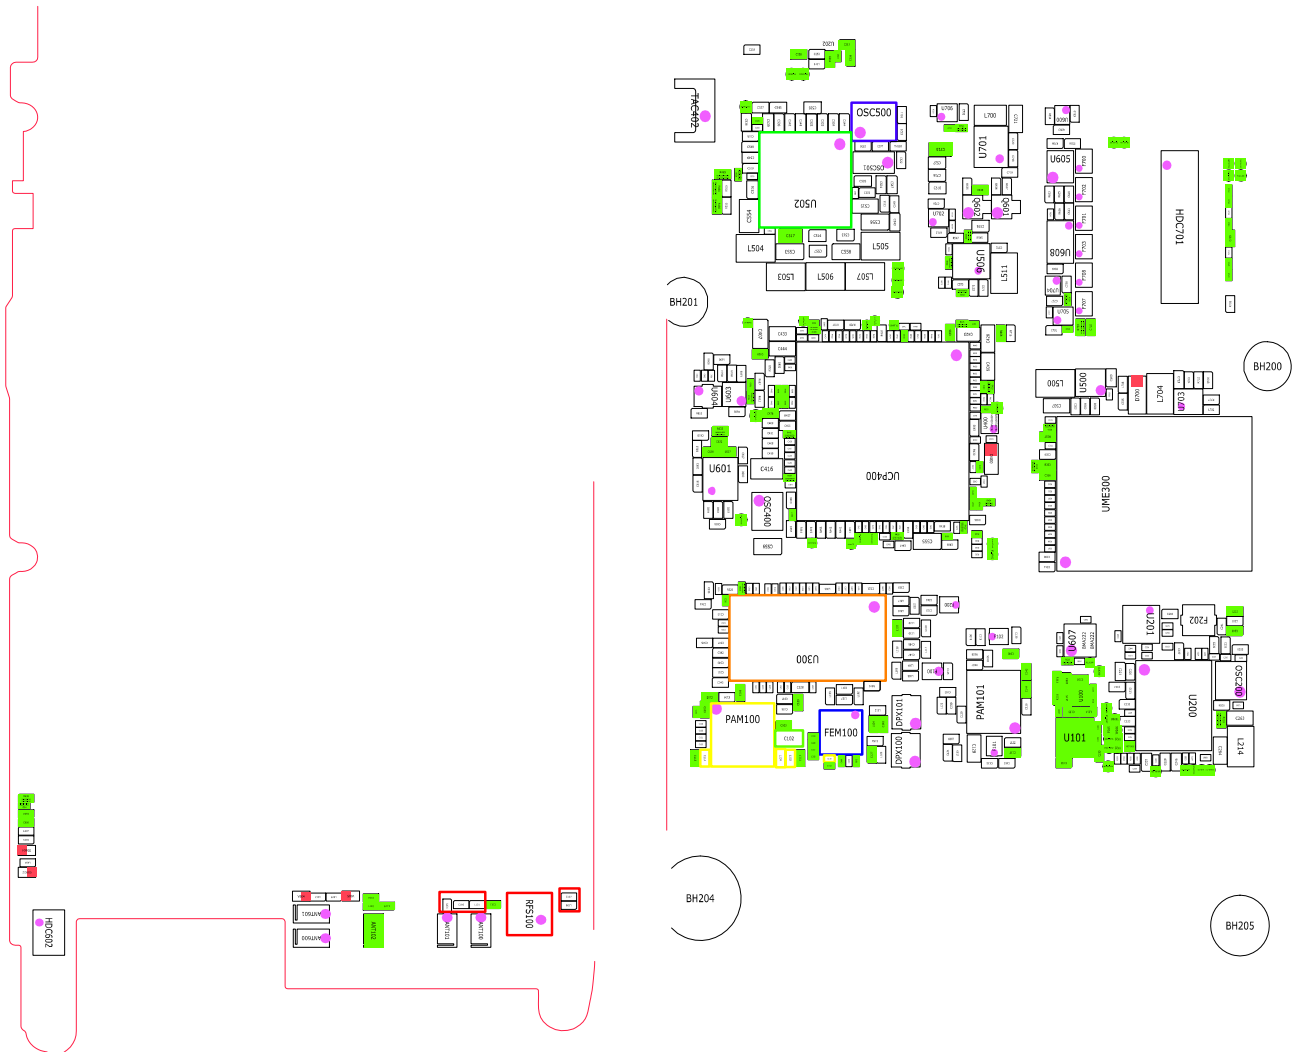


8-3-20. DCS/PCS TX

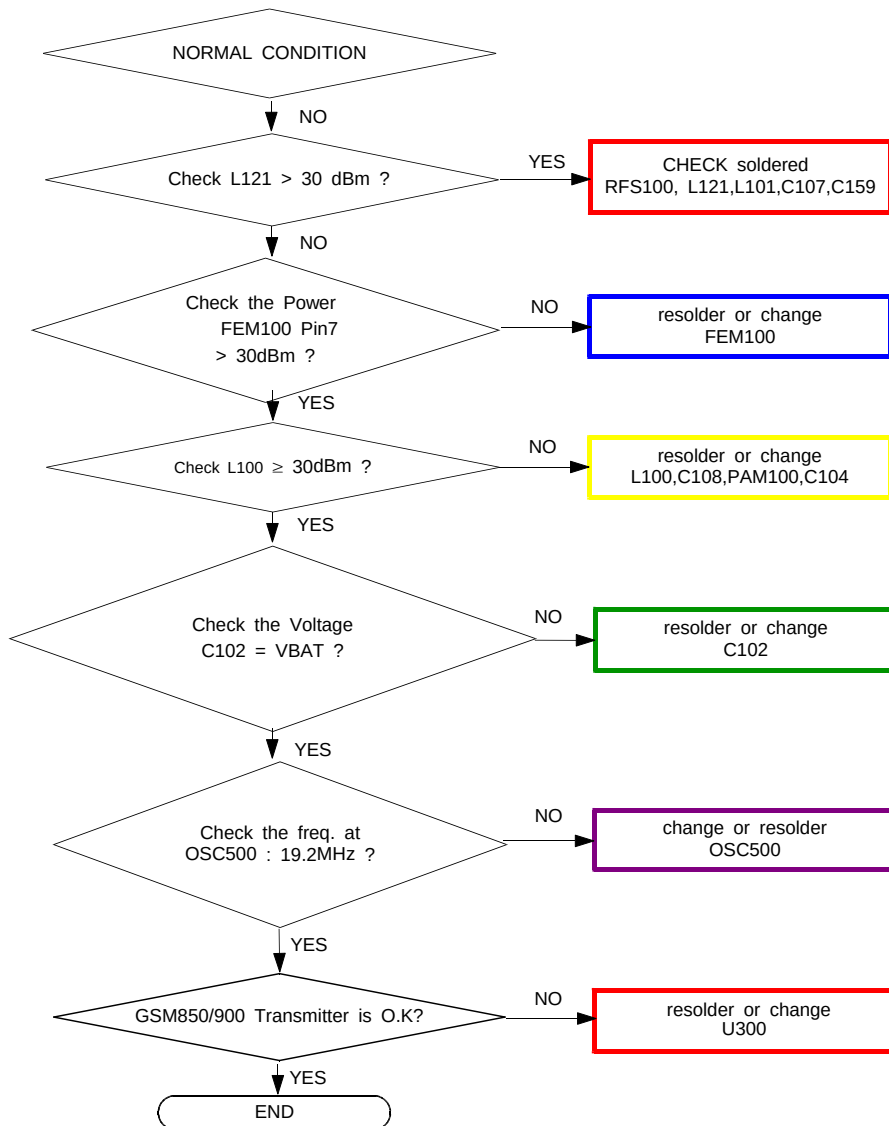



CONTINUOUS TX ON CONDITION
TX POWER DAC:14500 CODE
APPLIED
GSM850 CH : 190
GSM900 CH : 698
RBW : 100KHz
VBW : 100KHz
SPAN : 10MHz
REF LEV. : 10dBm
ATT. : 20dB

8-3-21. WCDMA BAND1 TX

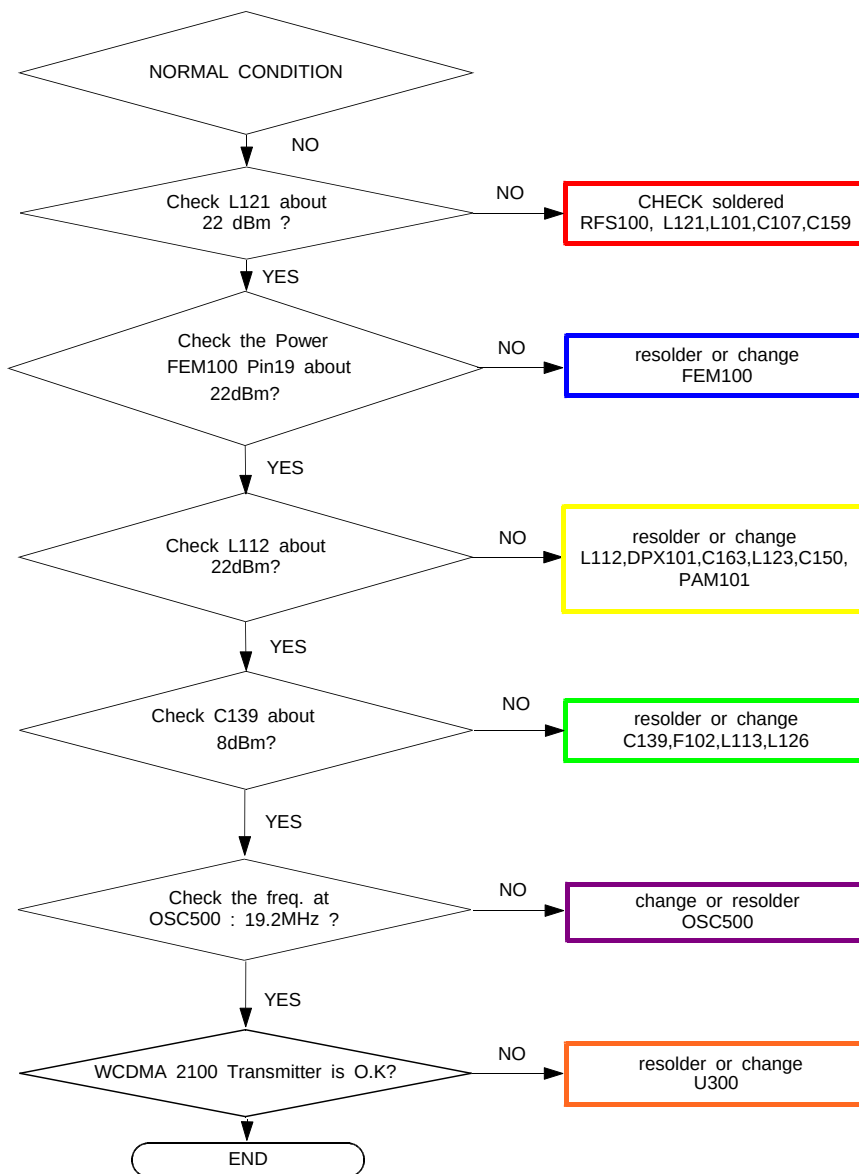


8-3-22. WCDMA BAND 8TX

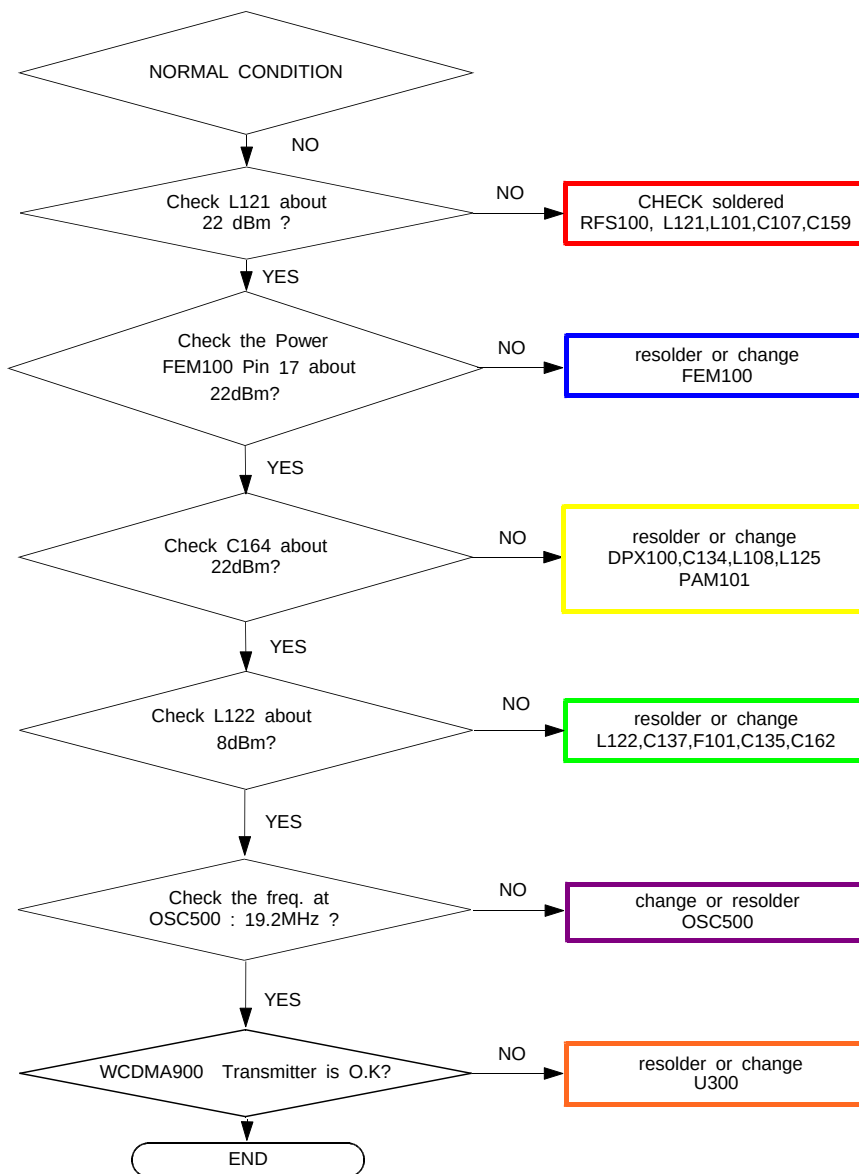

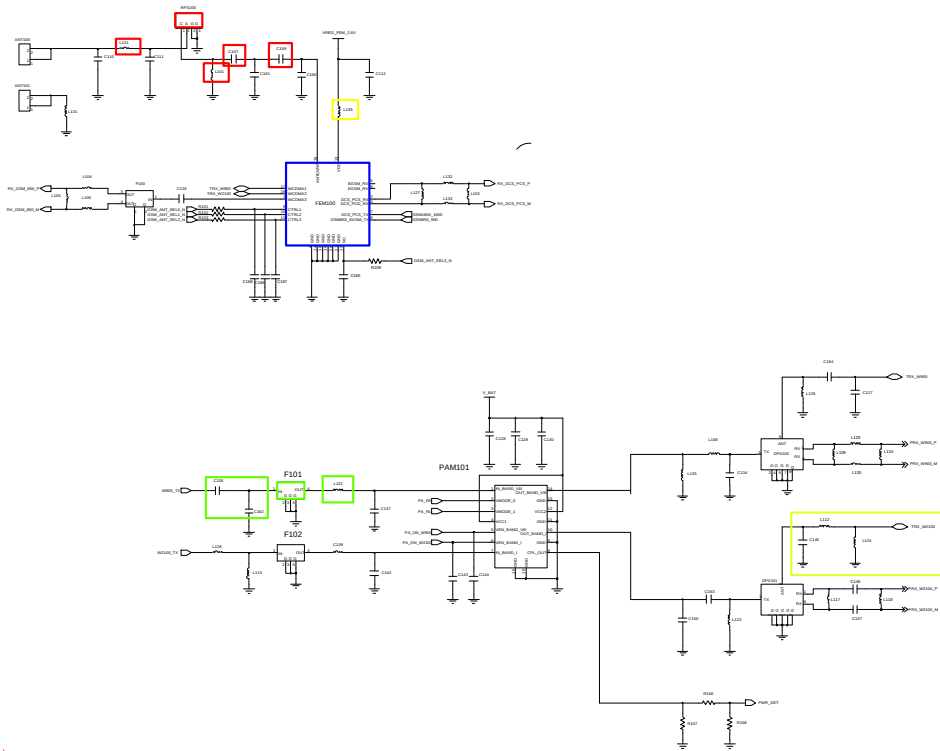

< WCDMA BAND1/BAND8 Discrete & PAD >

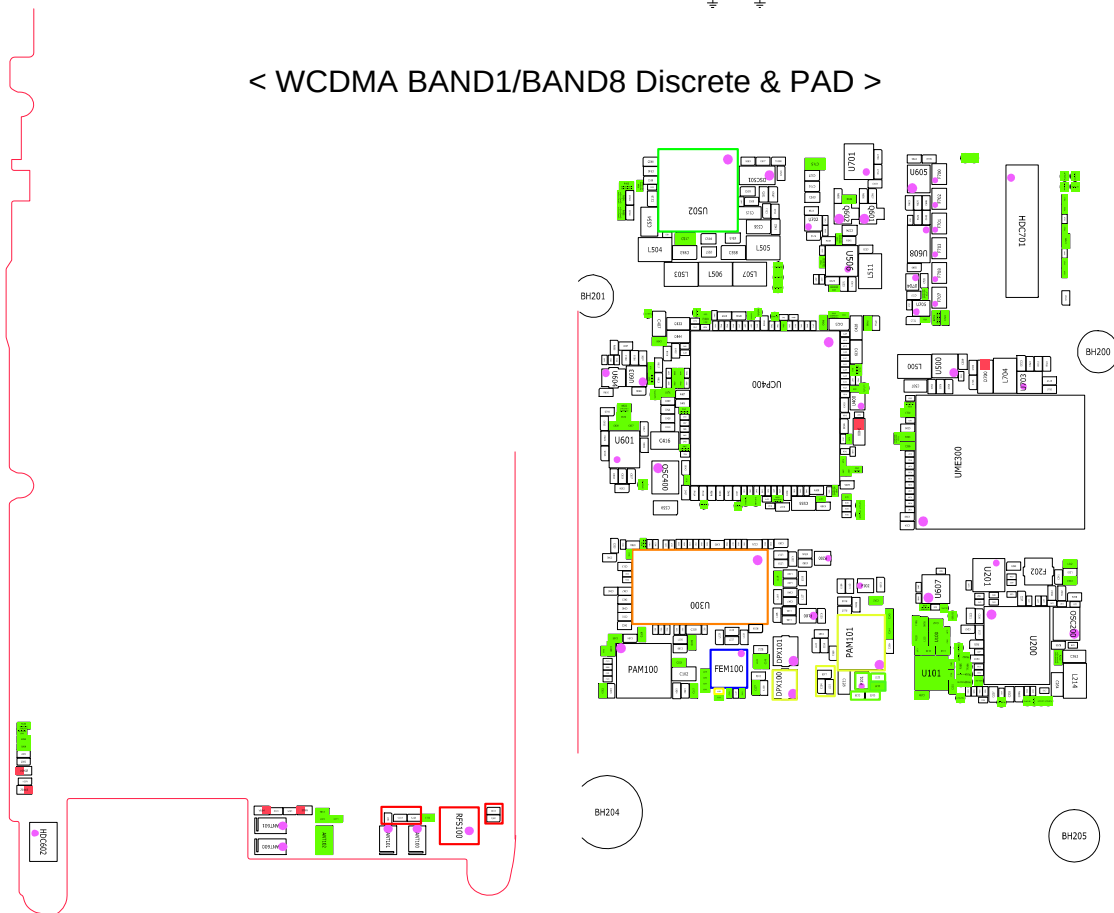


8-4. Service Schematics

- NC Point

: NC


: DNC

UCP400

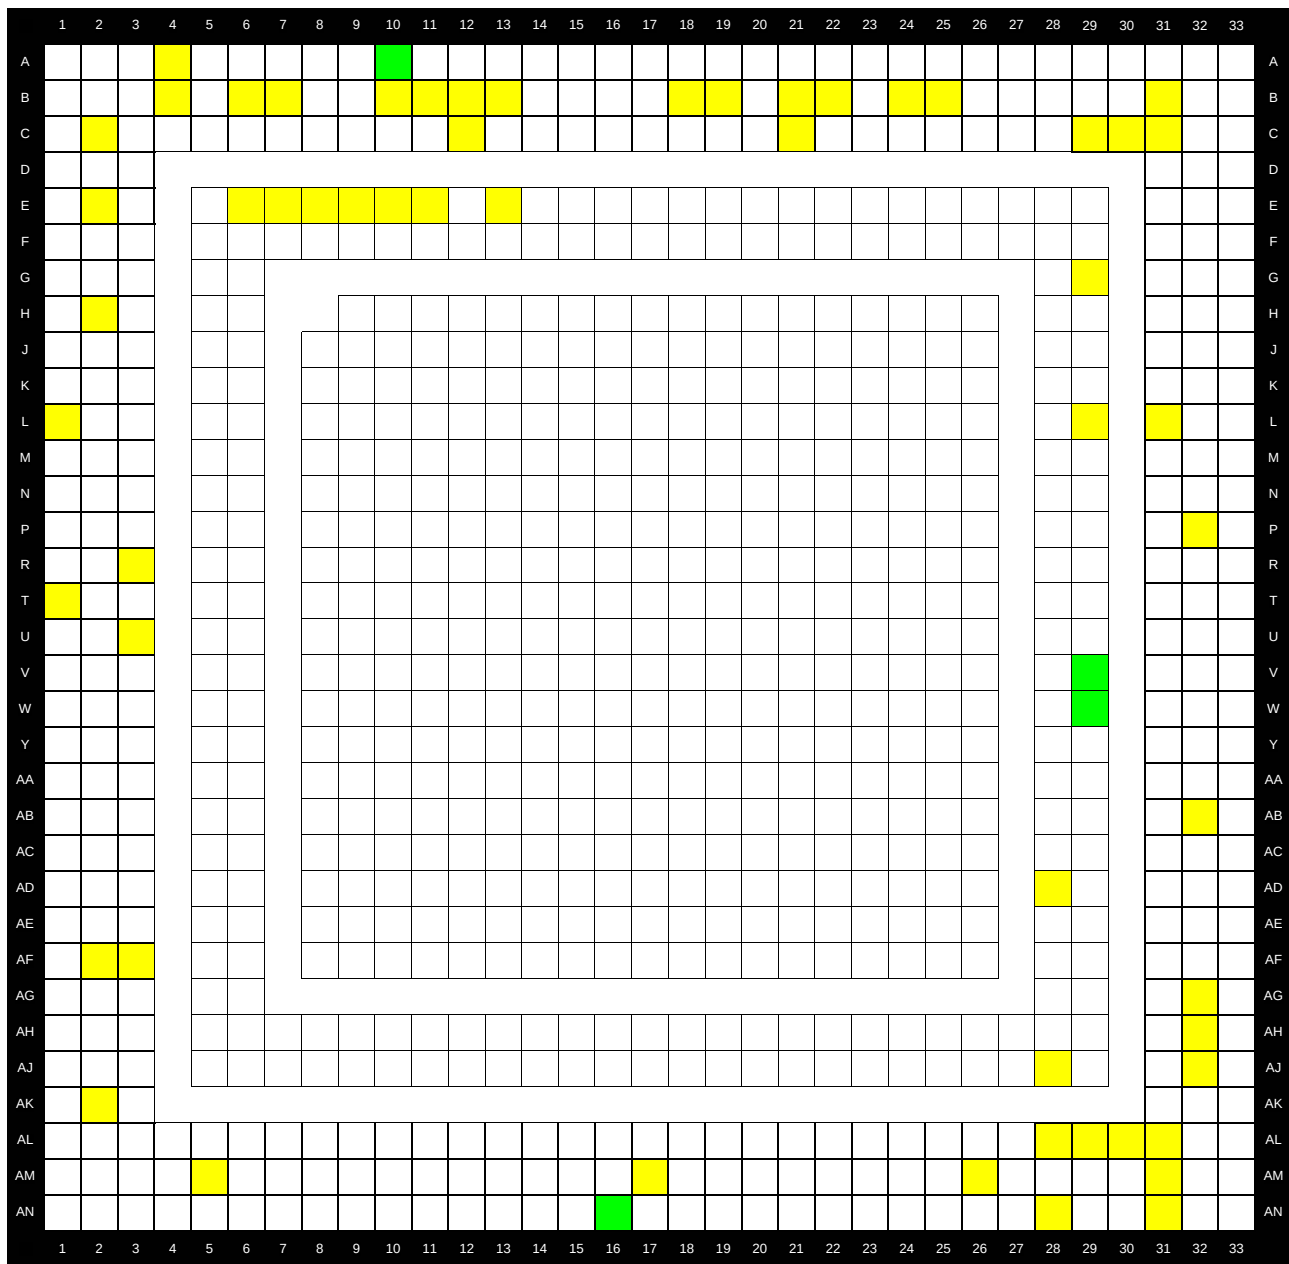


■ : DNC

U502

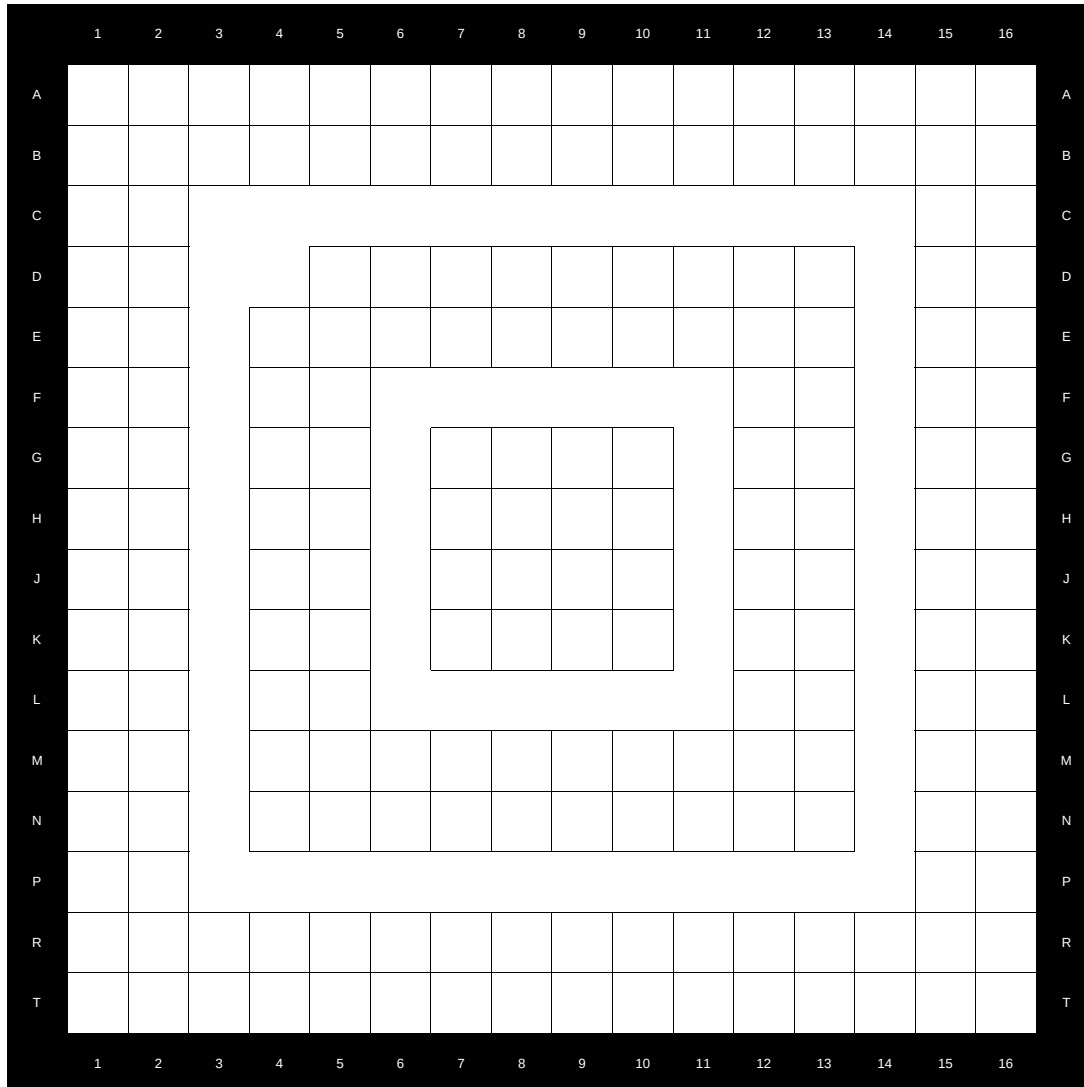

 : DNC

U300

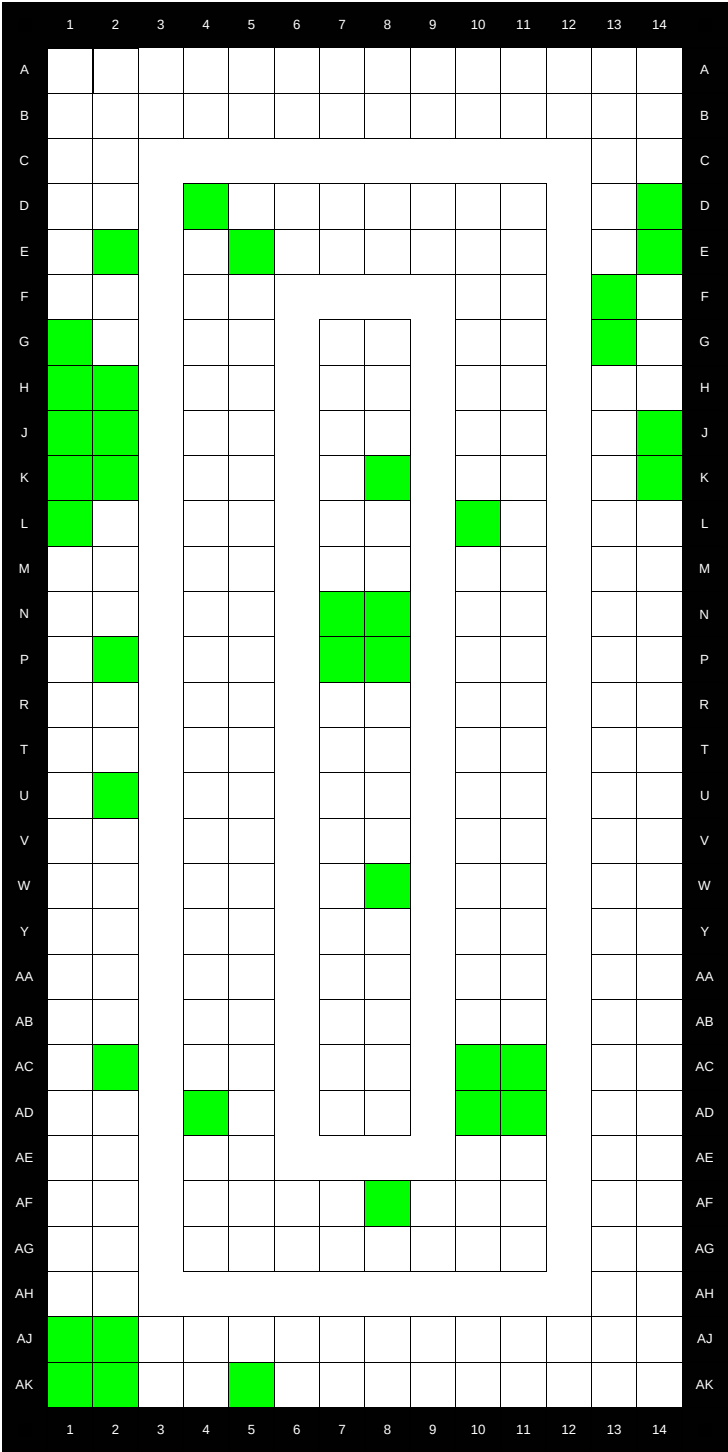

● : NC

UME300

