


8.3 级维修


8-1.框图

Block Diagram

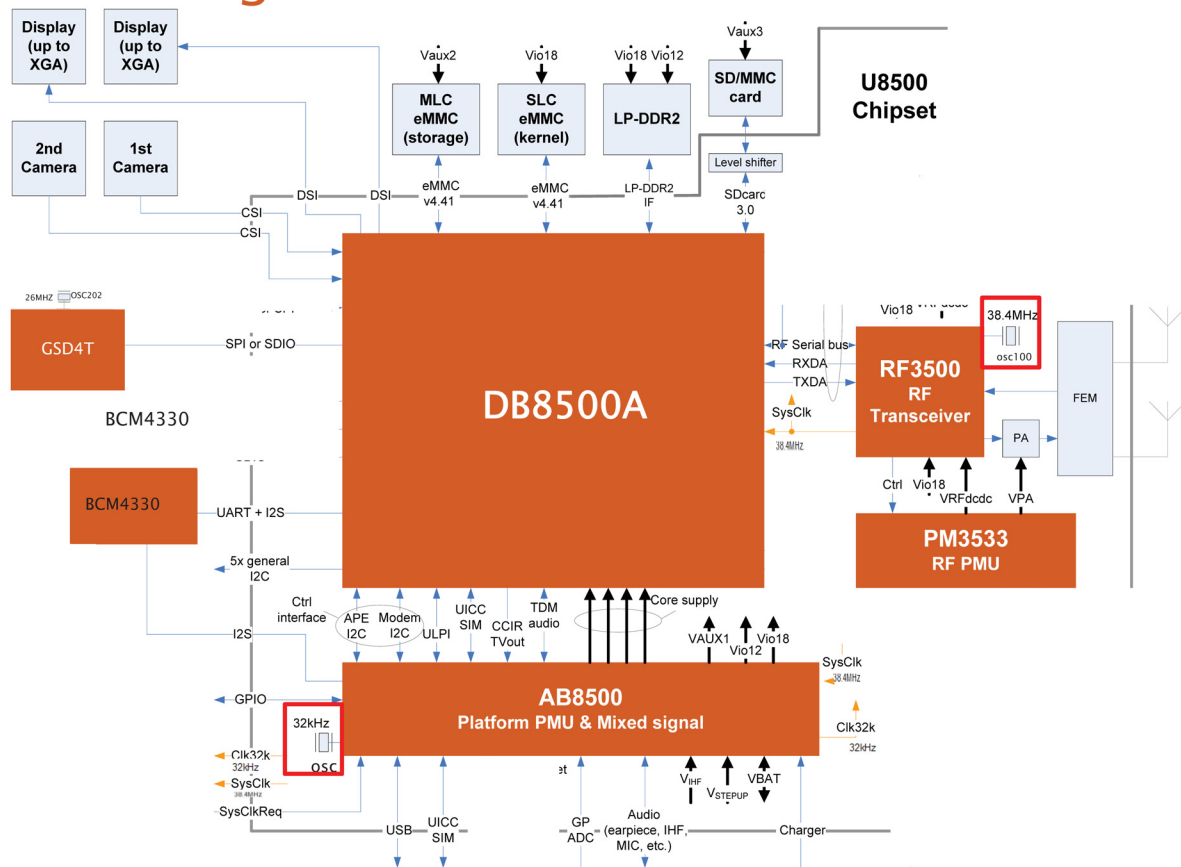


8-2.主板图

8-2-1.顶部

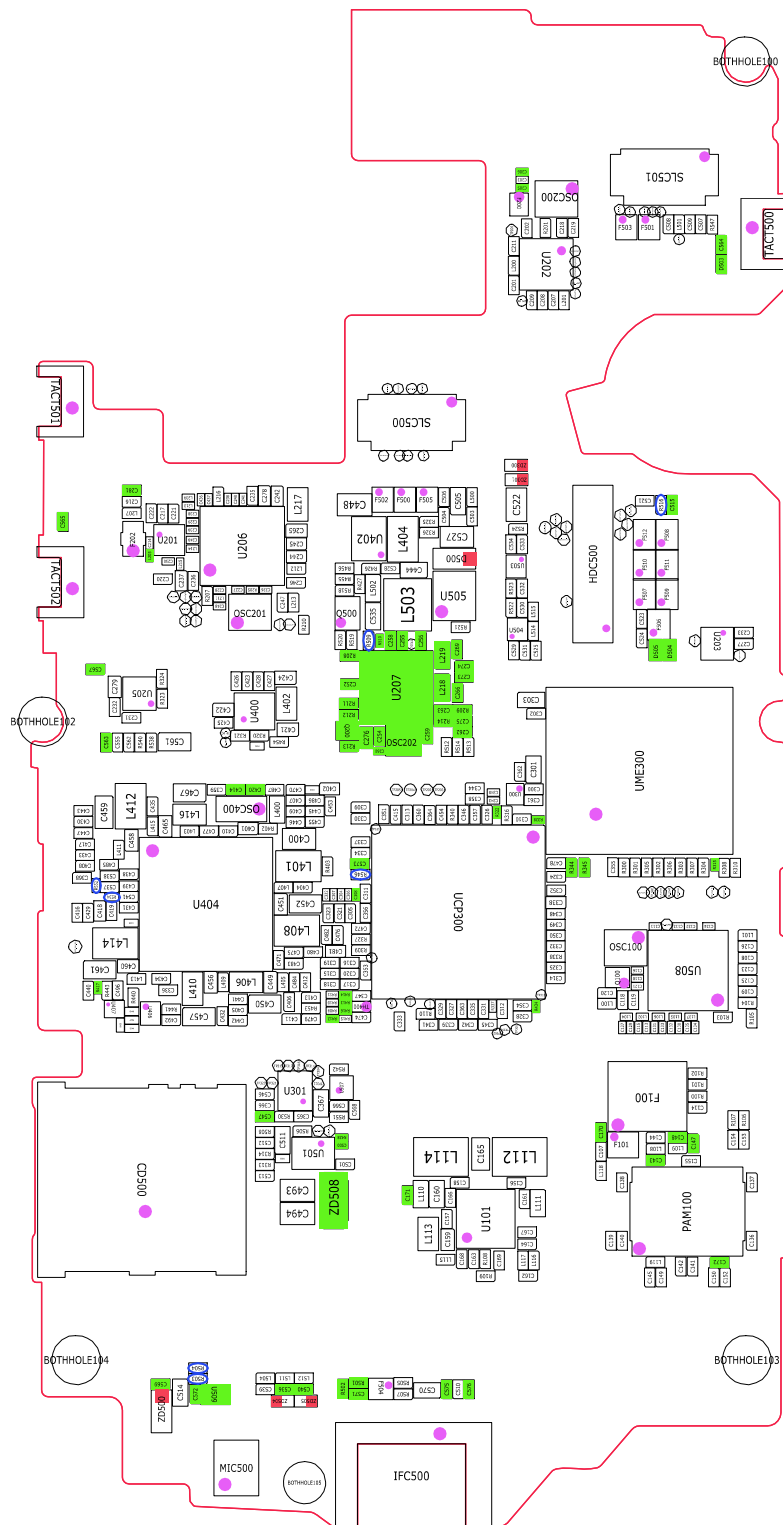


8-2-2.底部

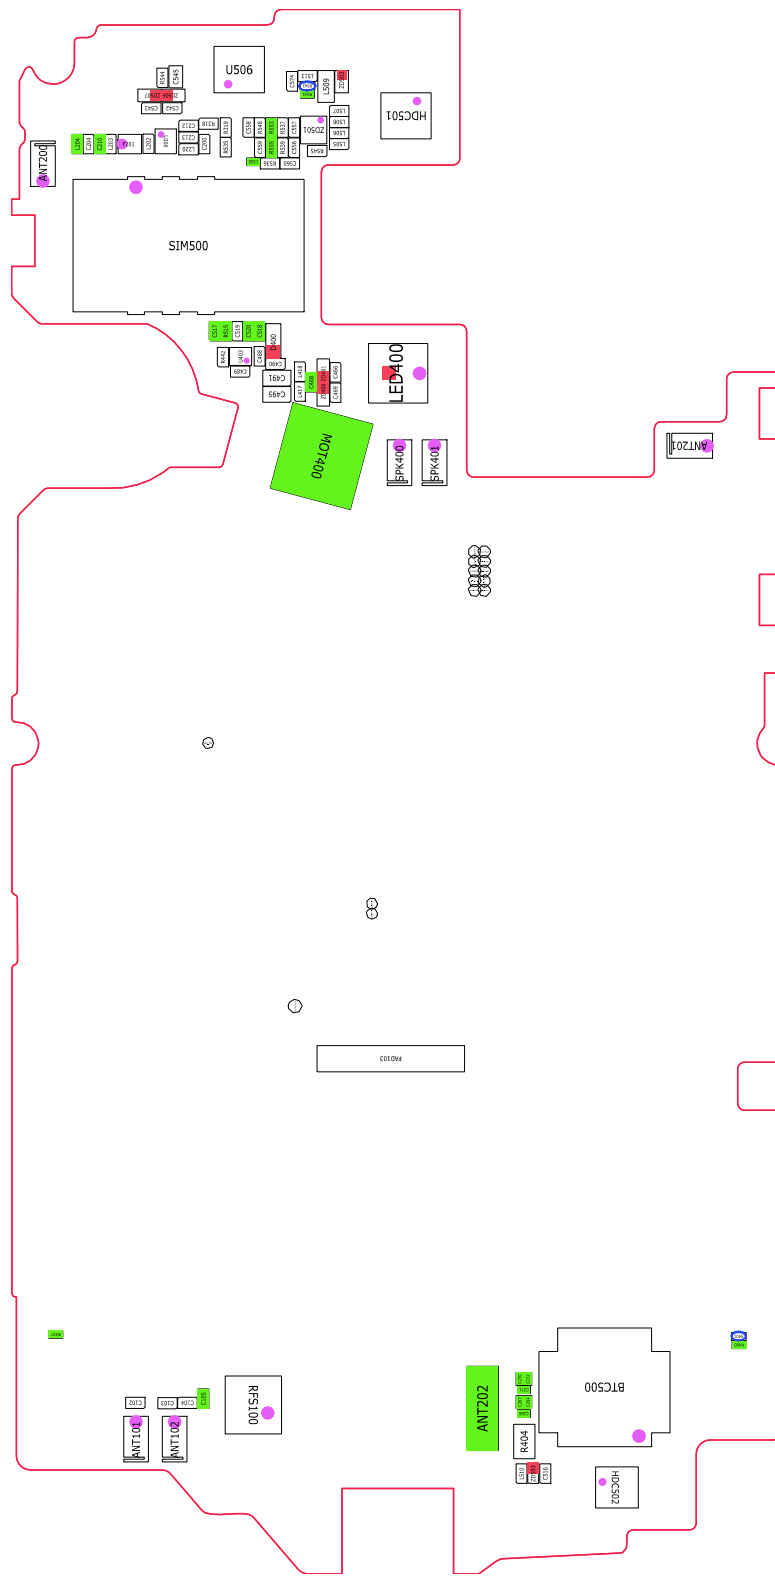

8-3.故障排除流程图

设备

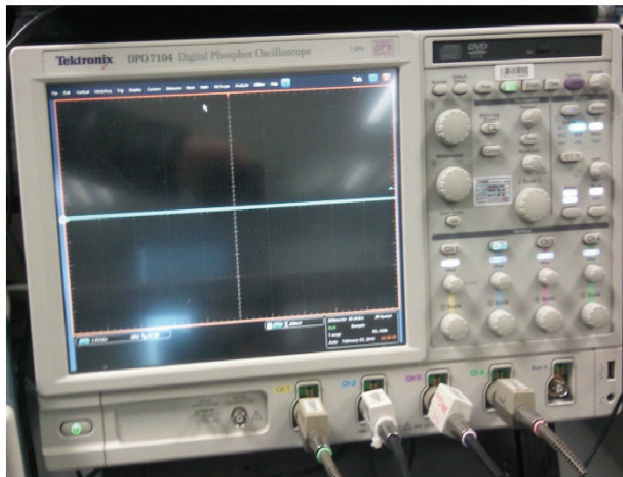


↑示波器




↑数字万用表



↑电源供电器

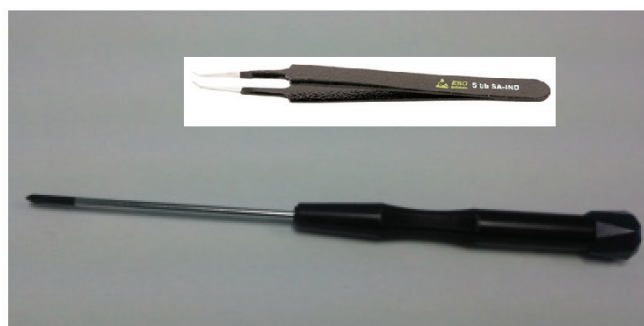

↑+字螺丝刀，ESD 安全镊子

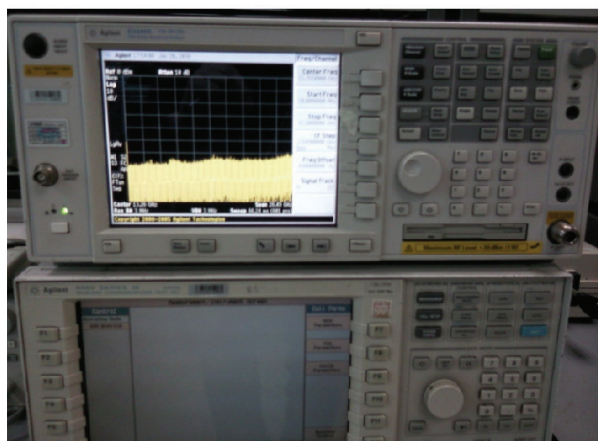


↑8960和光谱分析器




↑焊接熨斗


8-3-1 开机



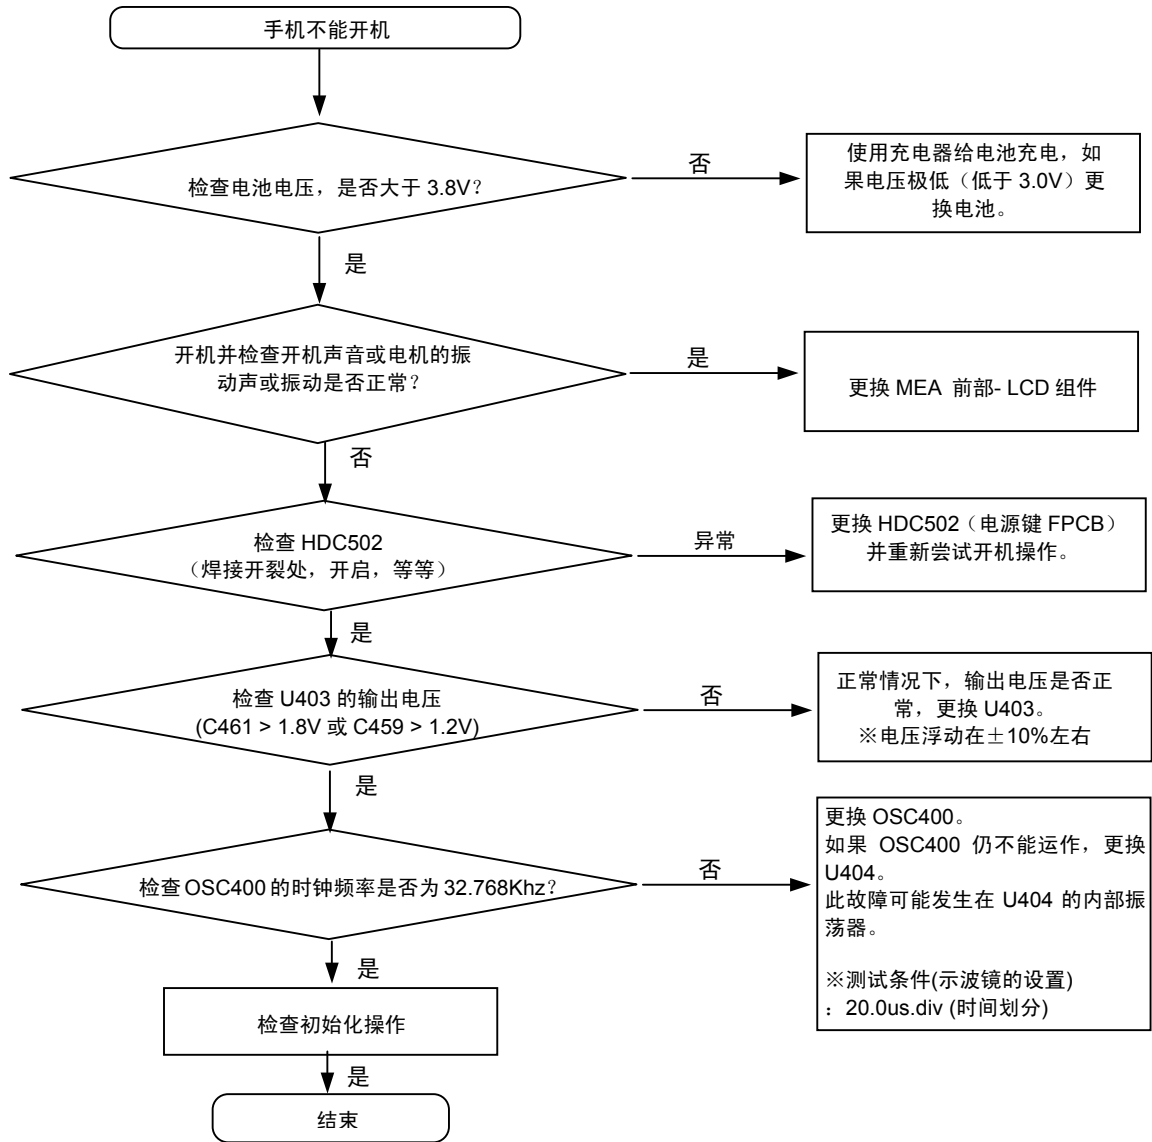


8-3-2. 初始化



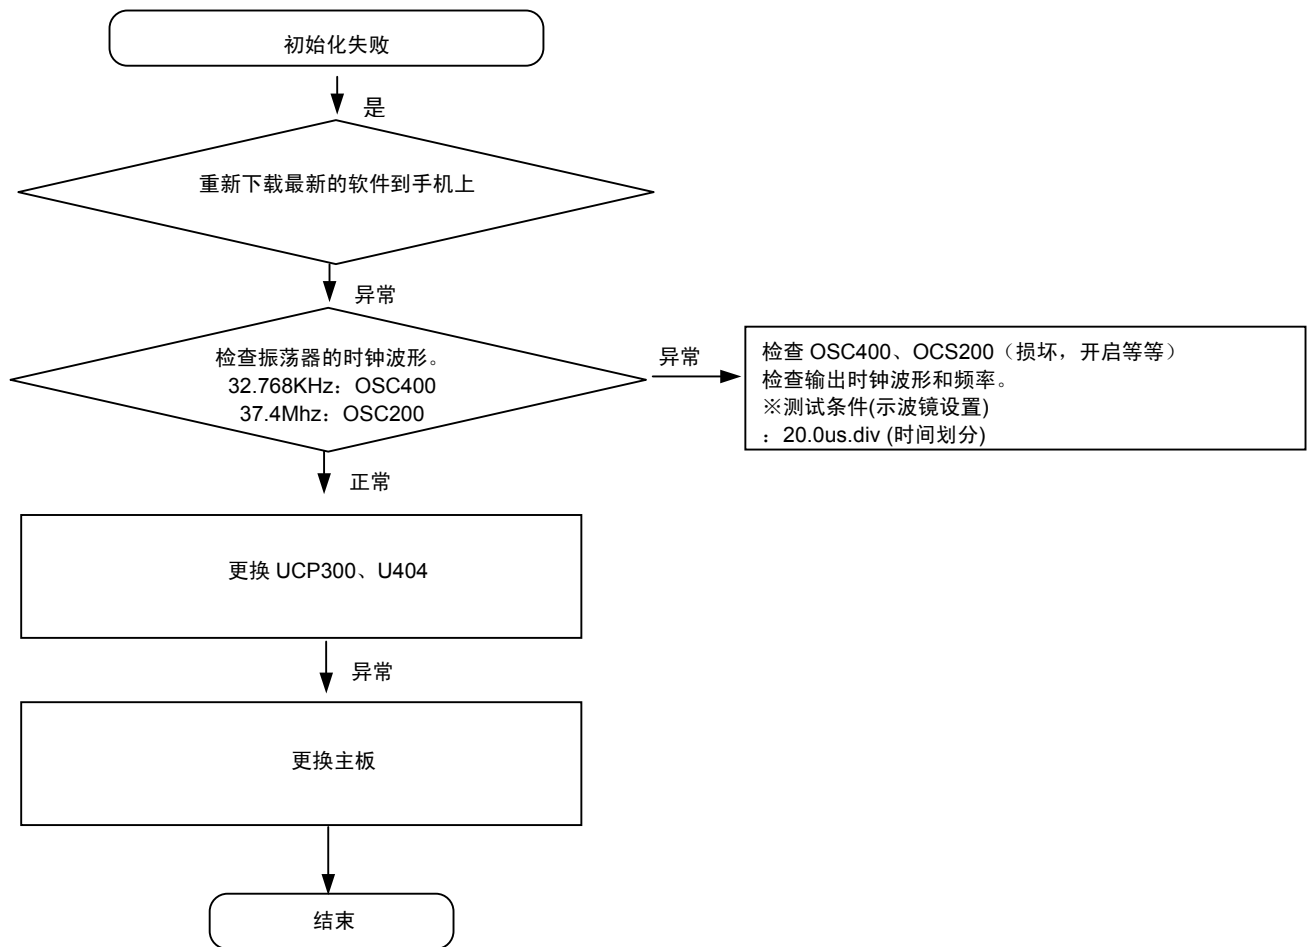


8-3-3. 无服务

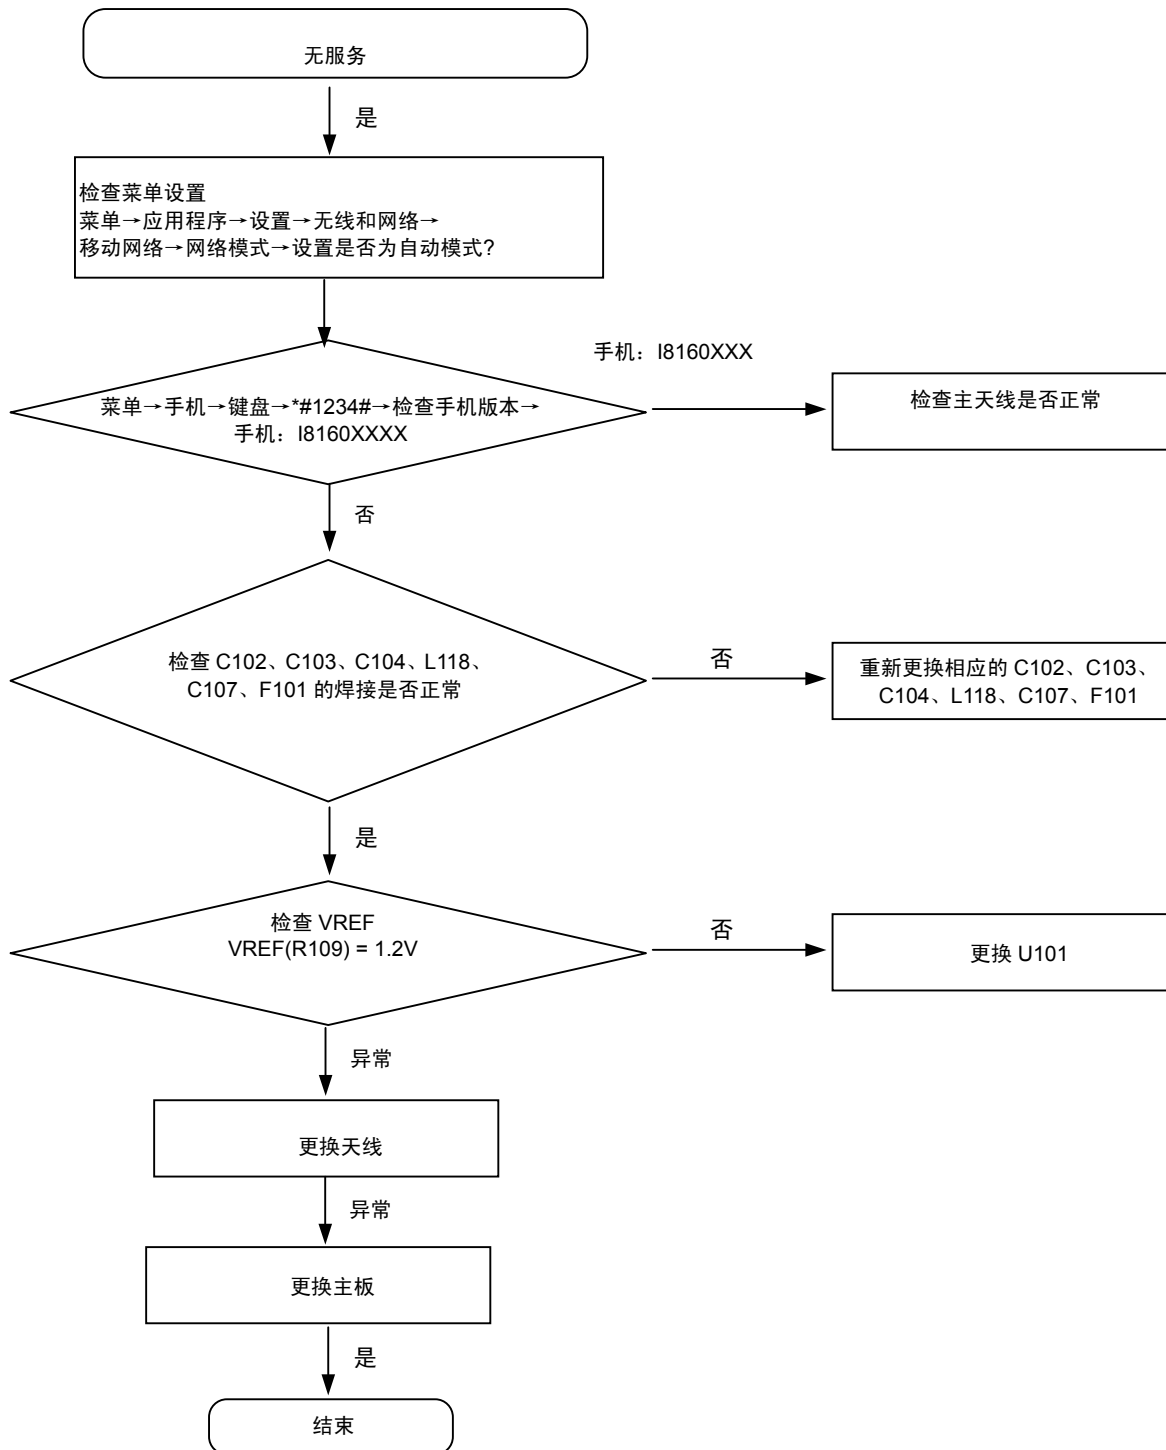



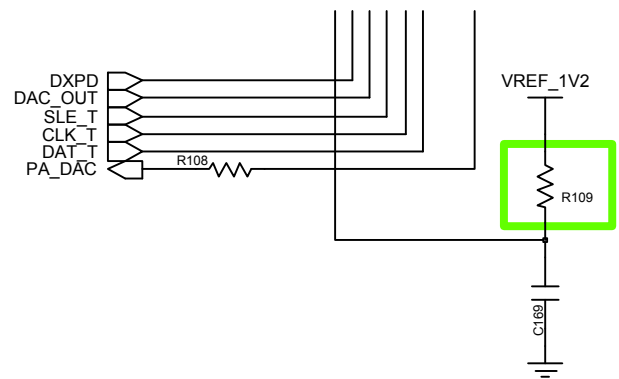
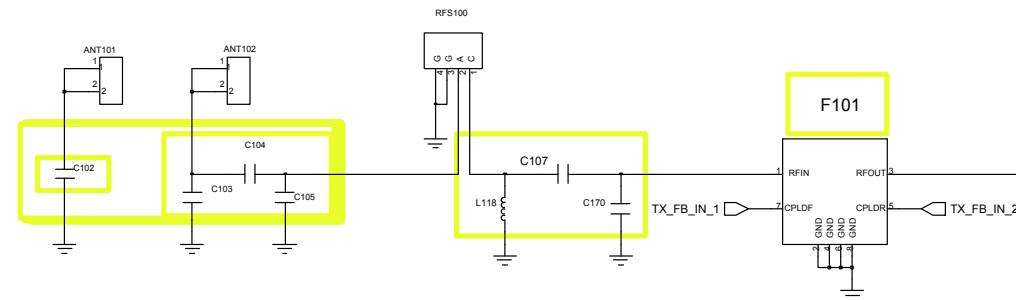
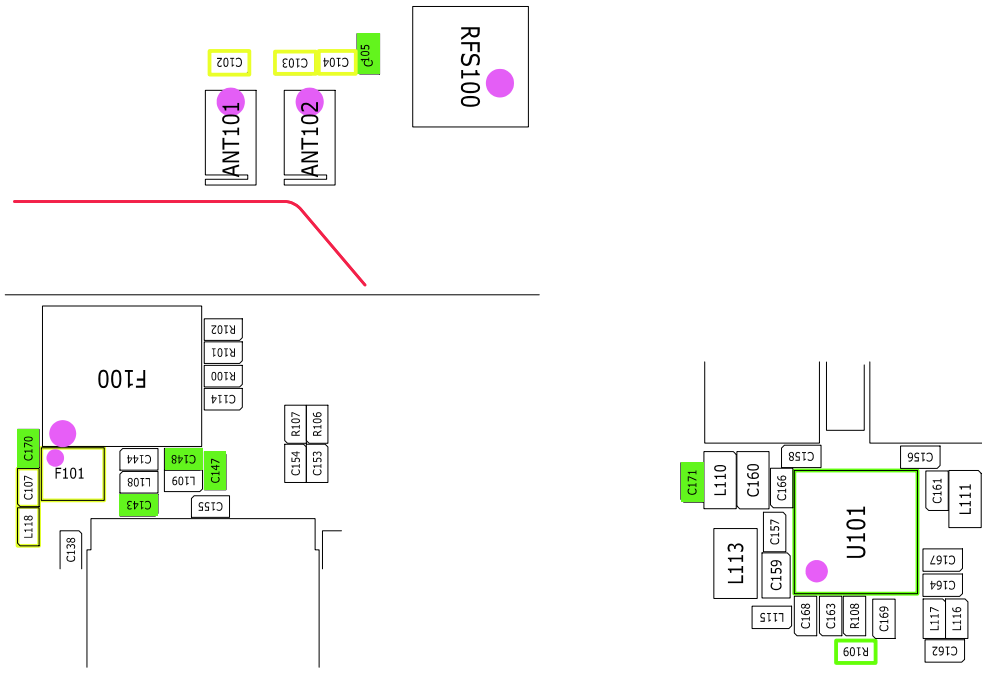


8-3-4.Sim 卡

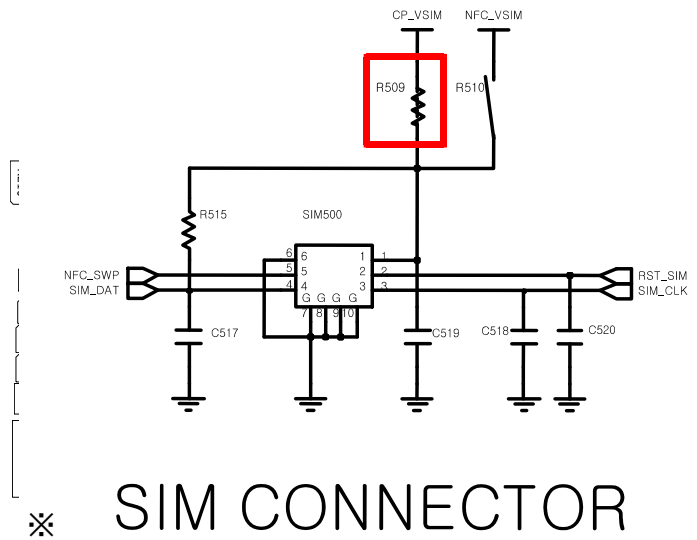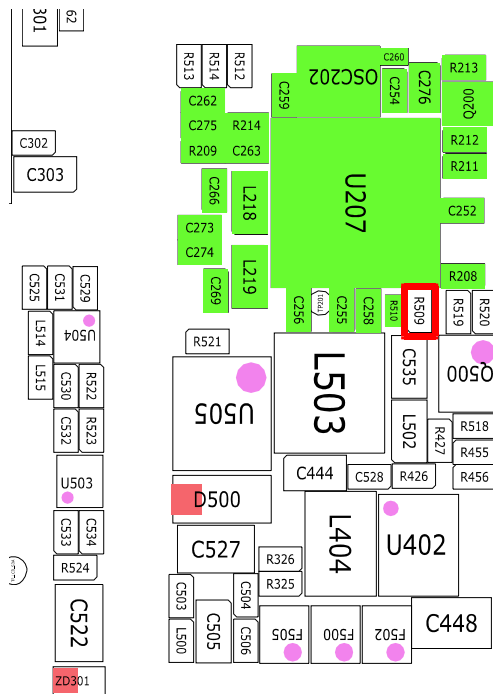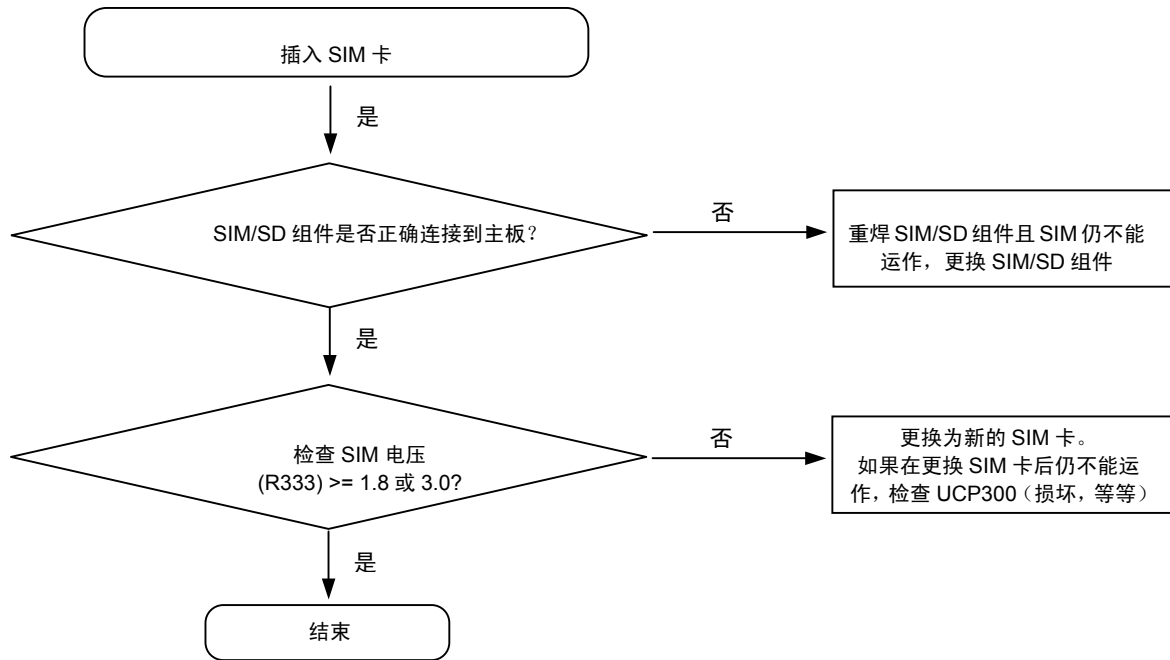





8-3-5.充电部分

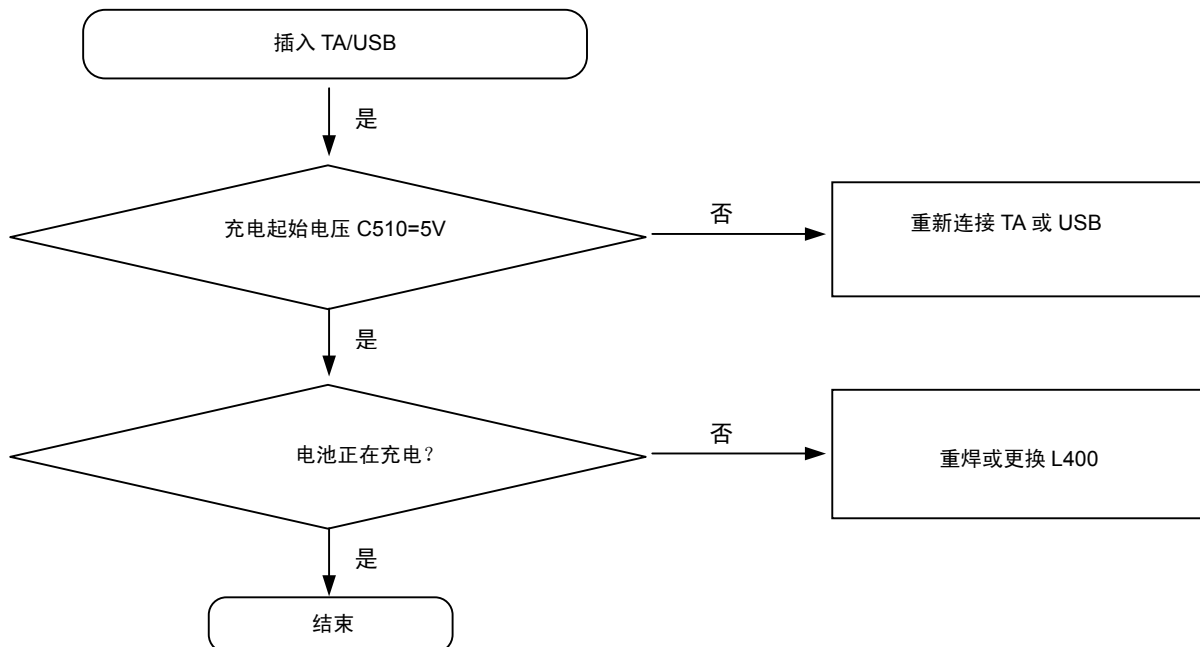

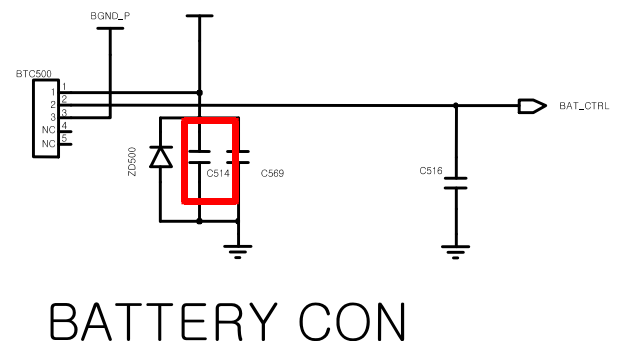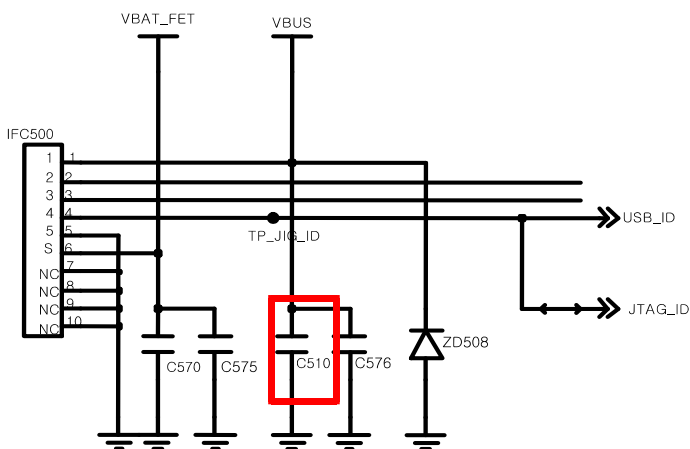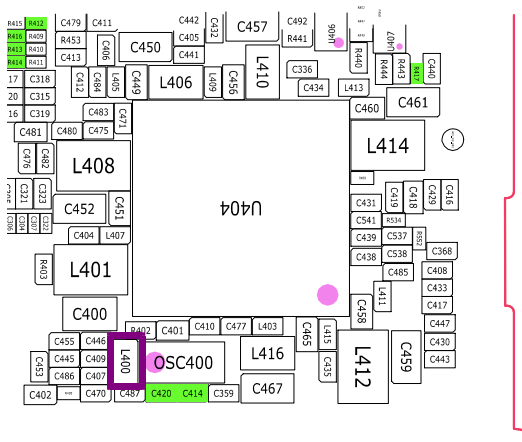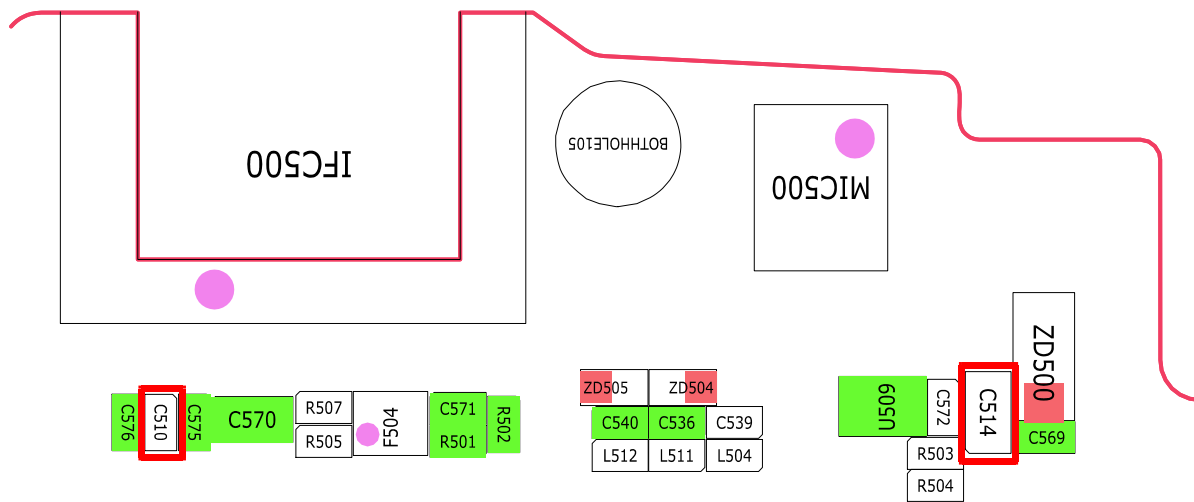




8-3-6. 话筒部分

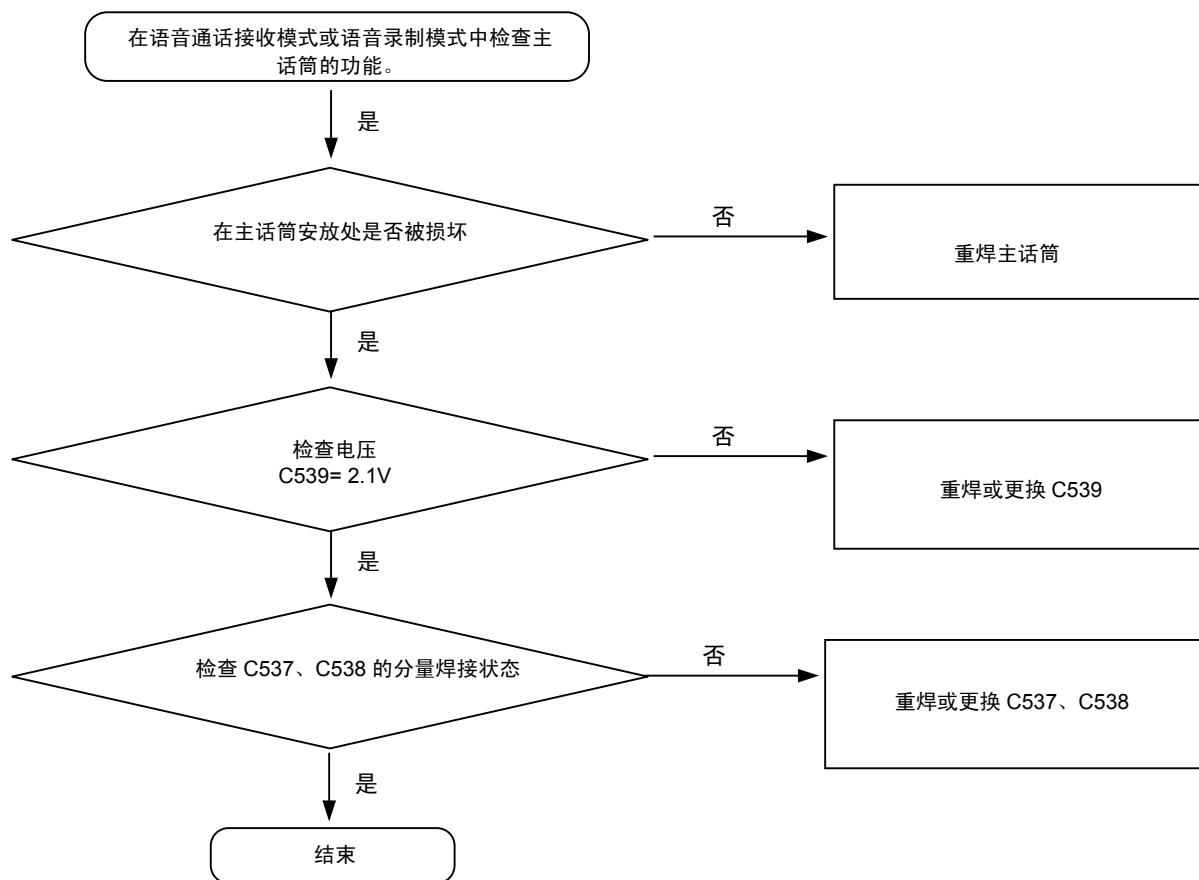

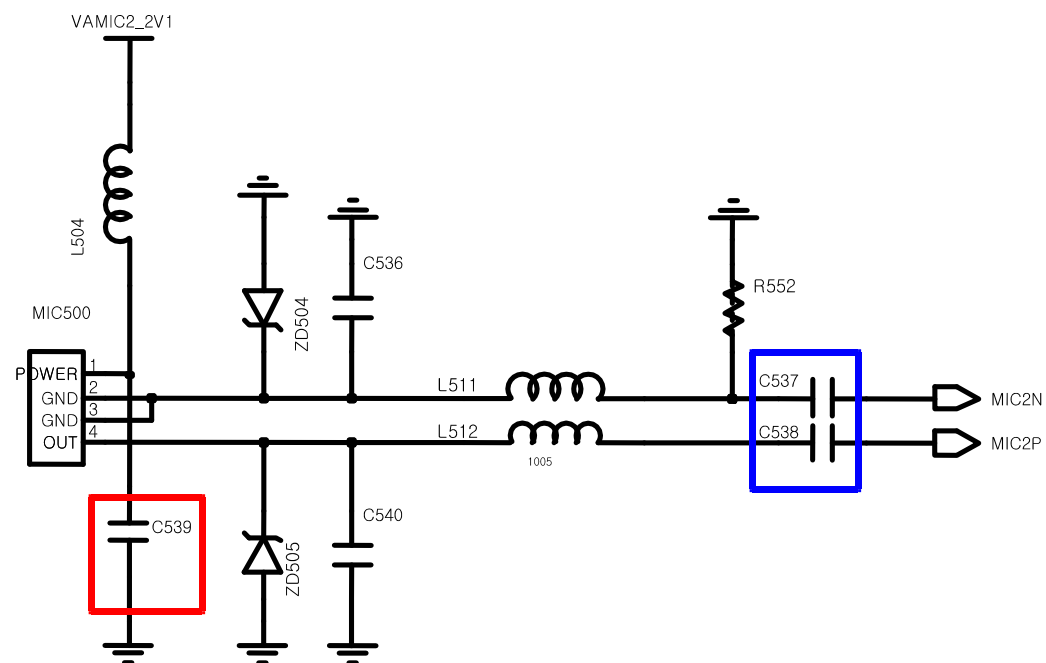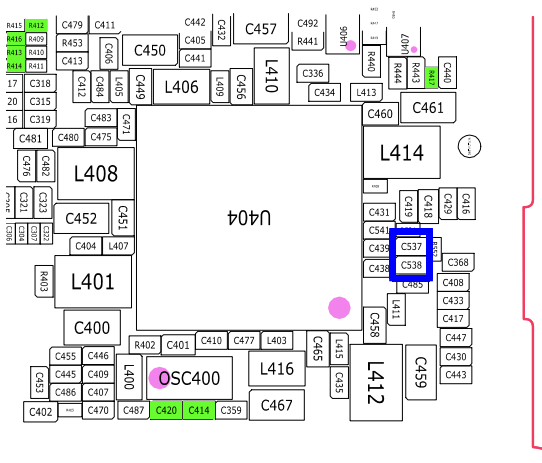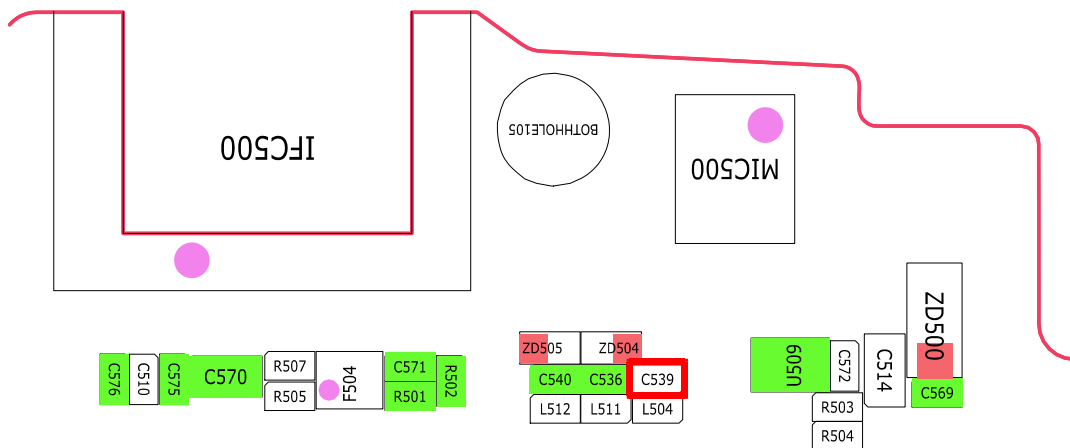




8-3-7.扬声器部分

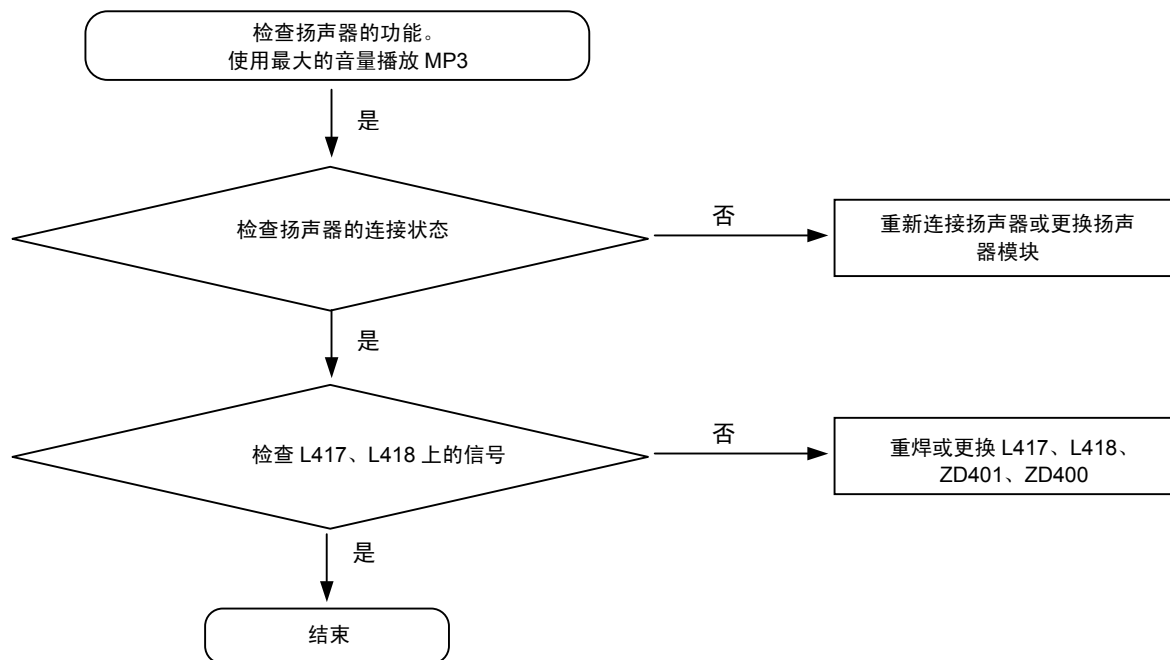

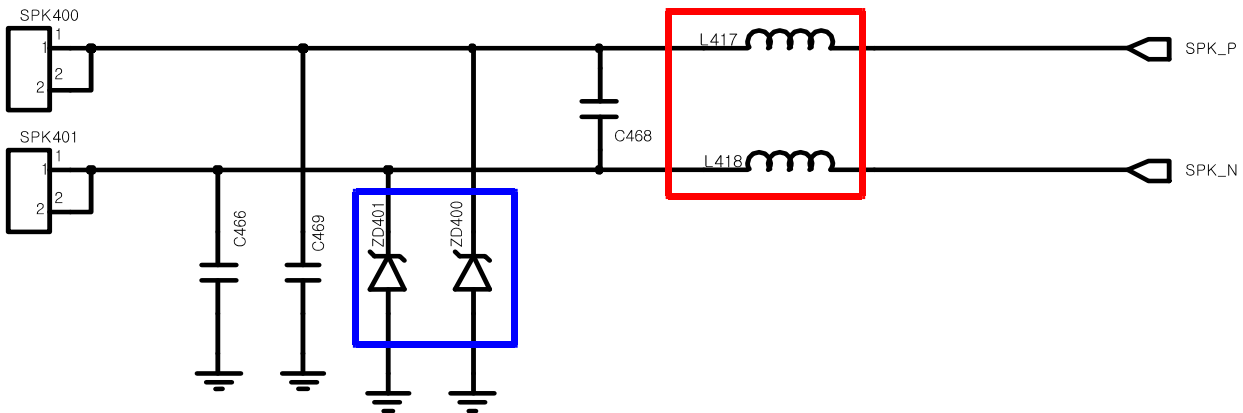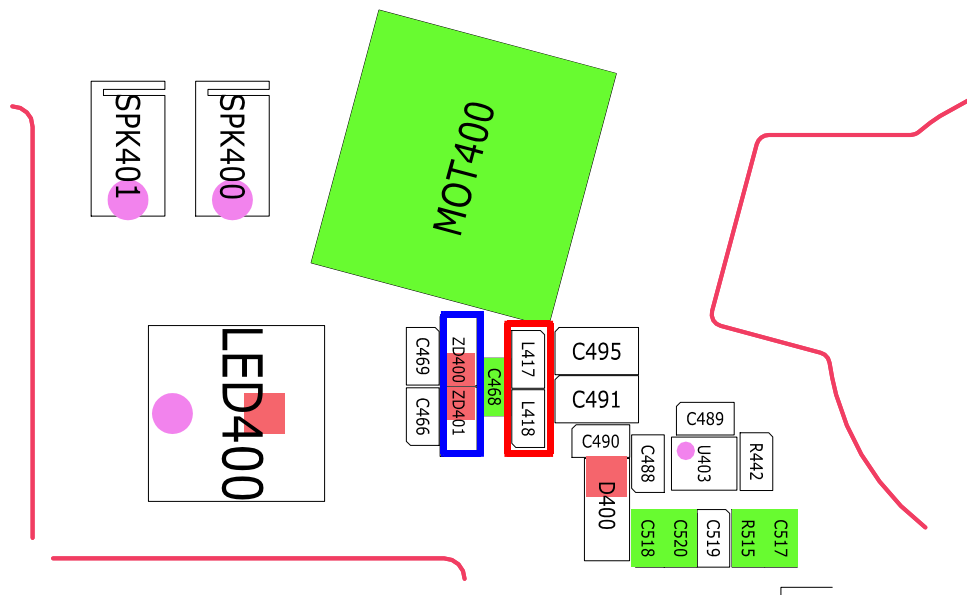





8-3-8.接收器部分

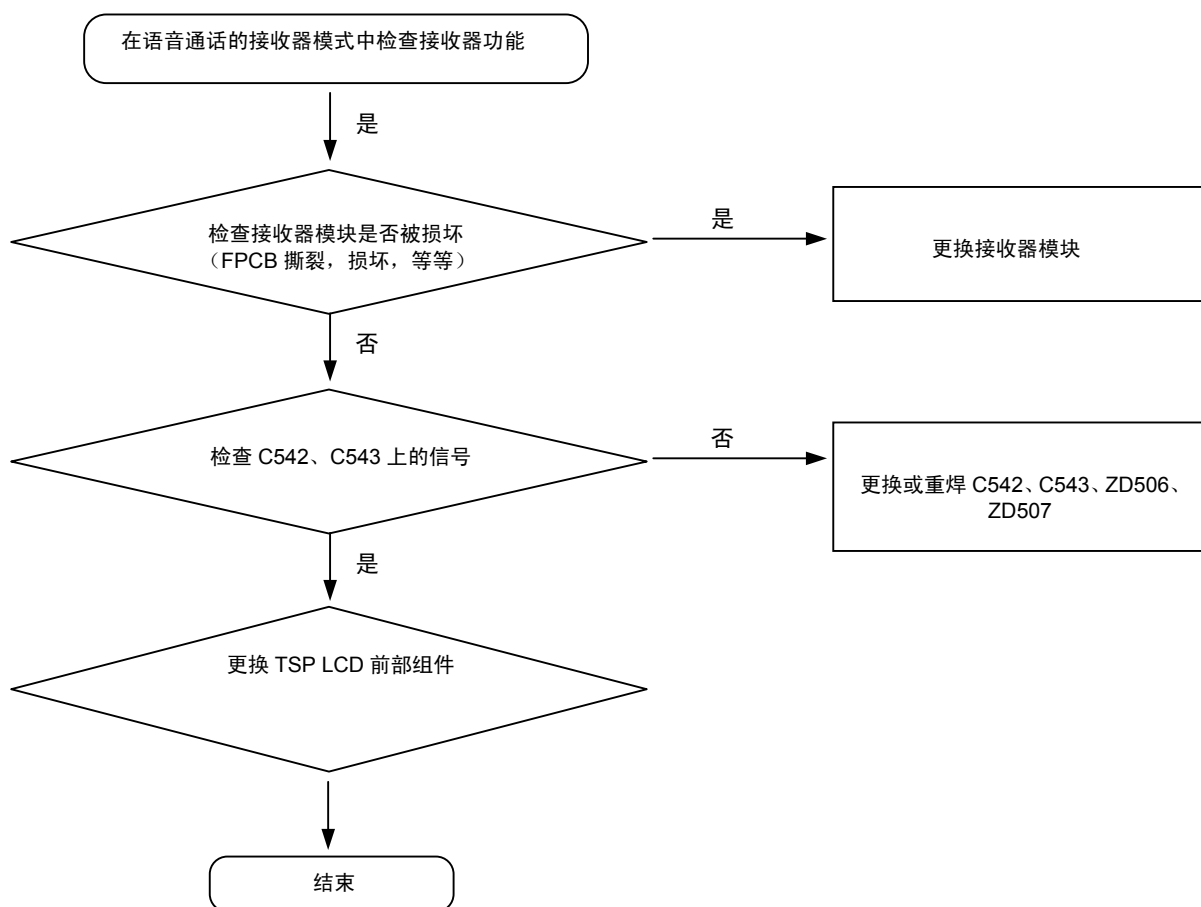

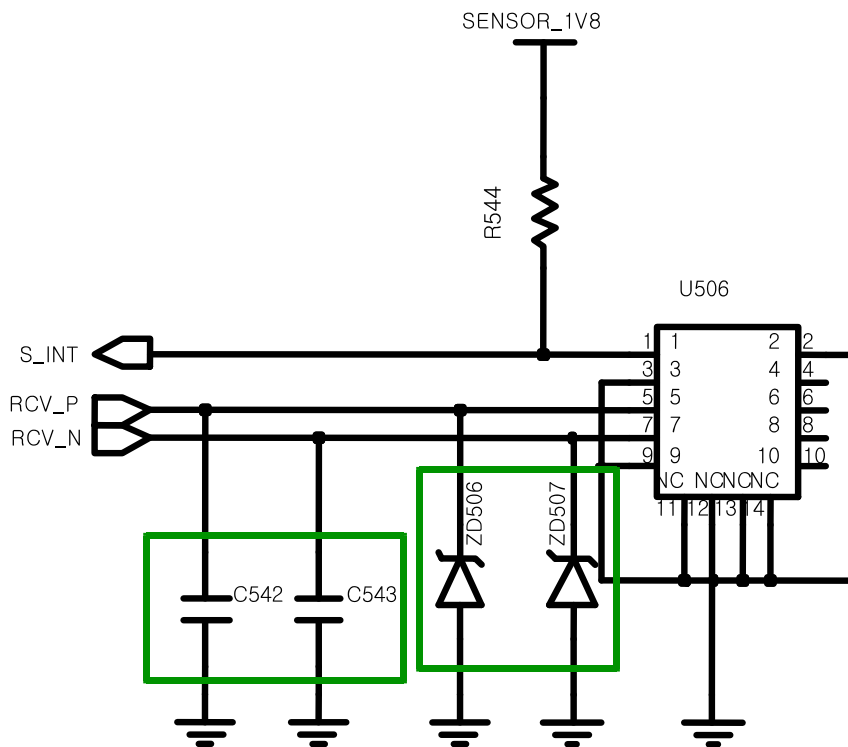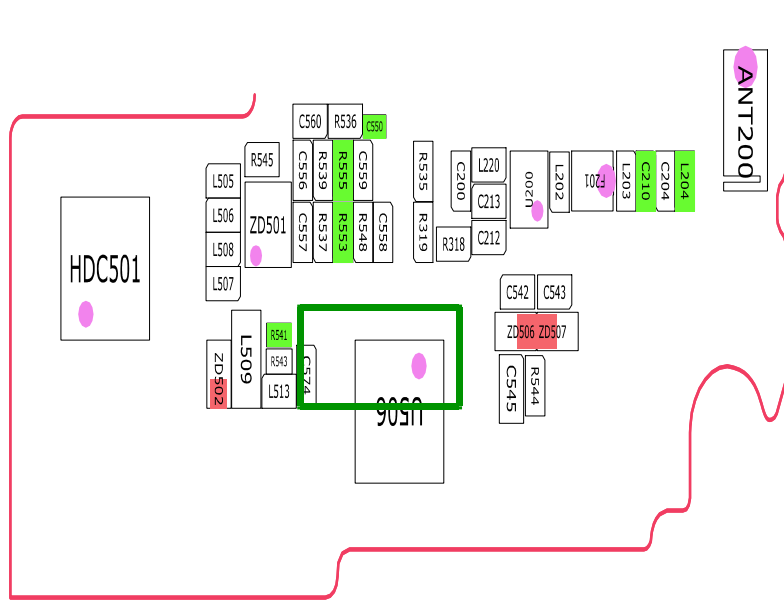


8-3-9.BT/WIFI

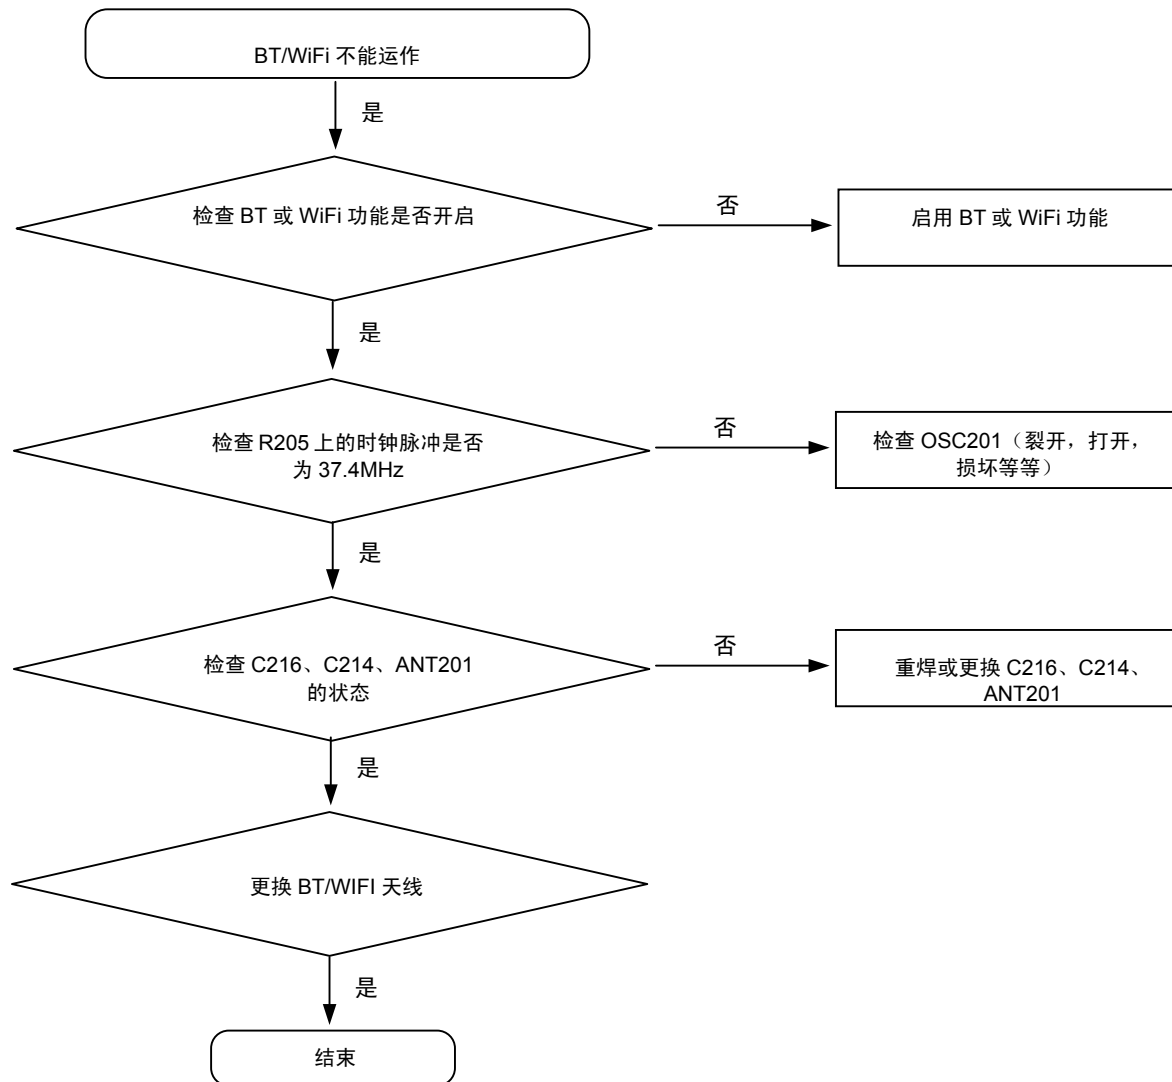


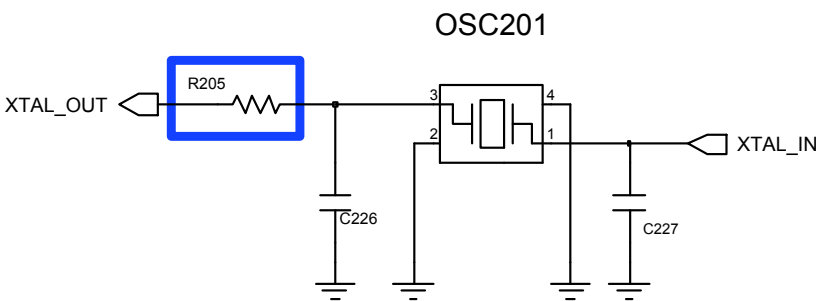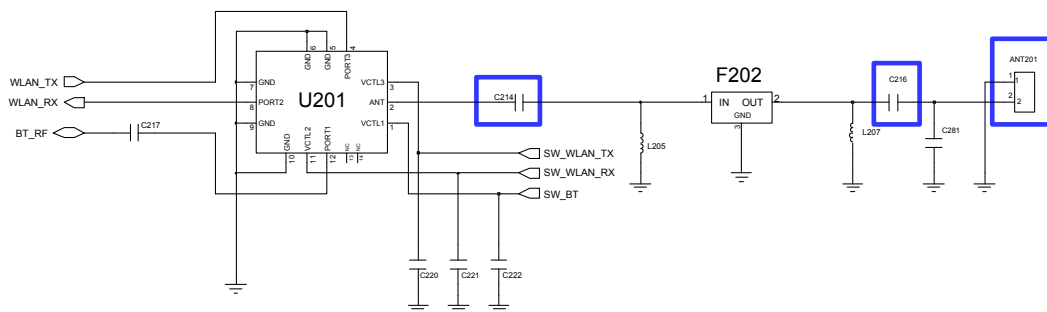
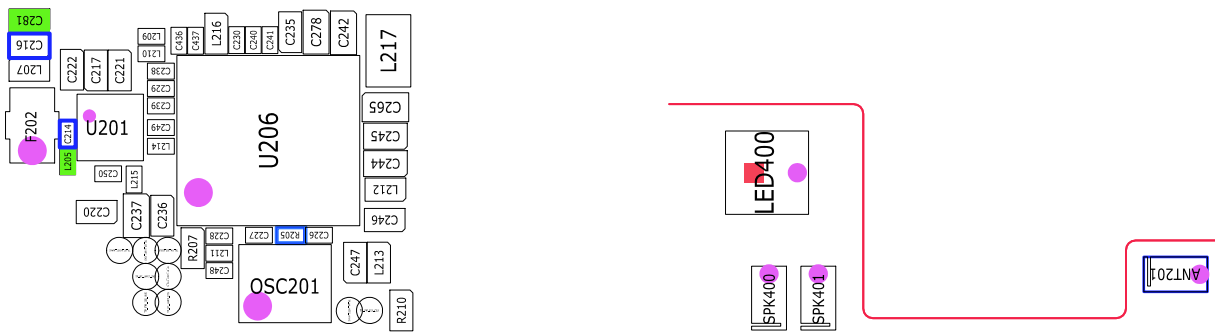


8-3-10.FM 收音机

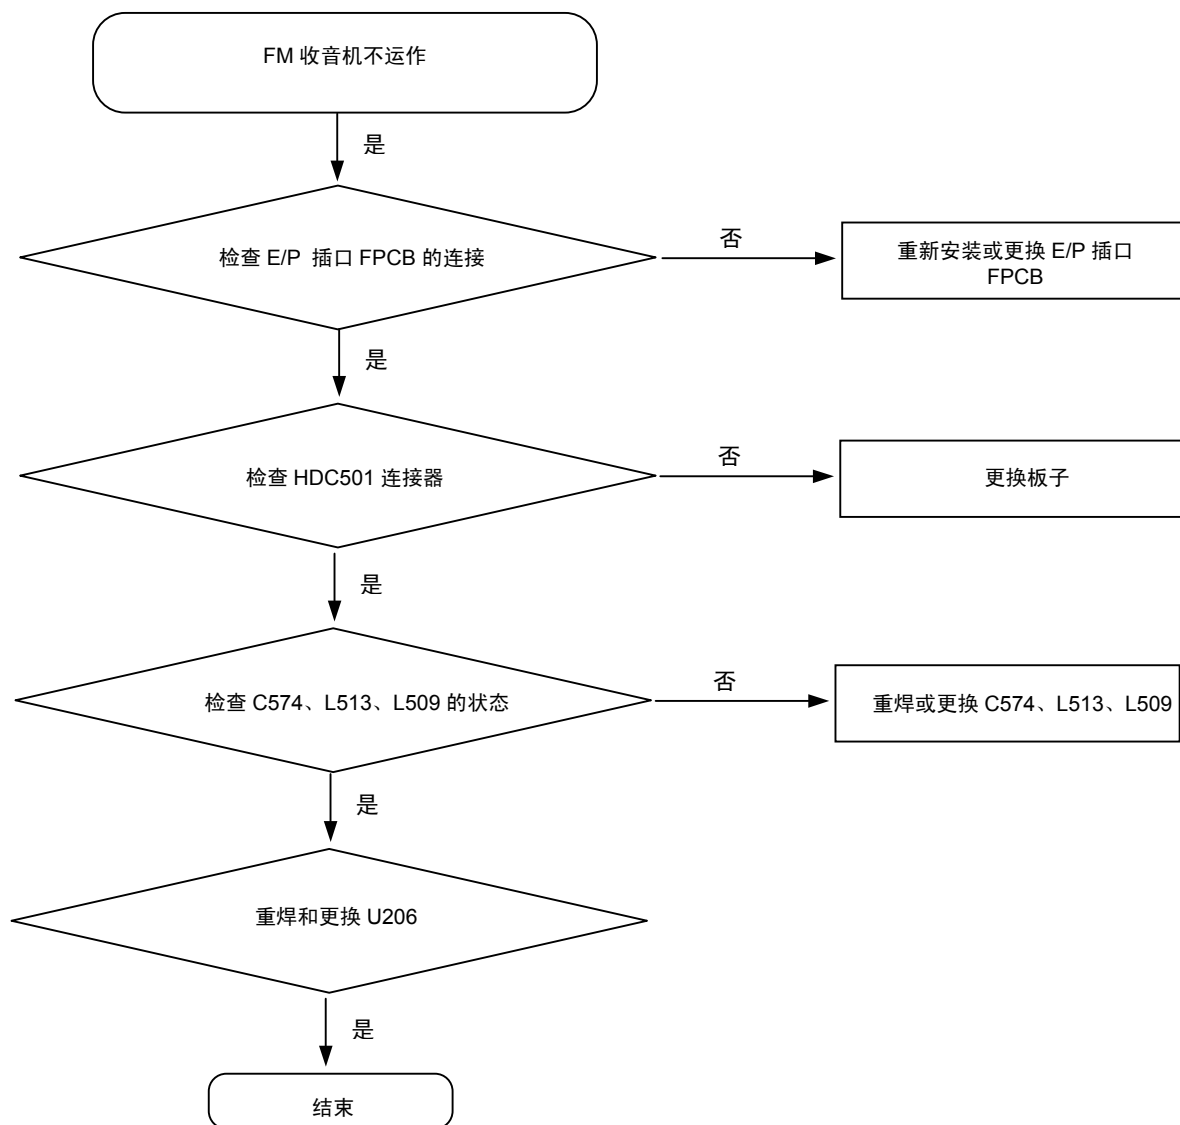




8-3-11.液晶显示屏

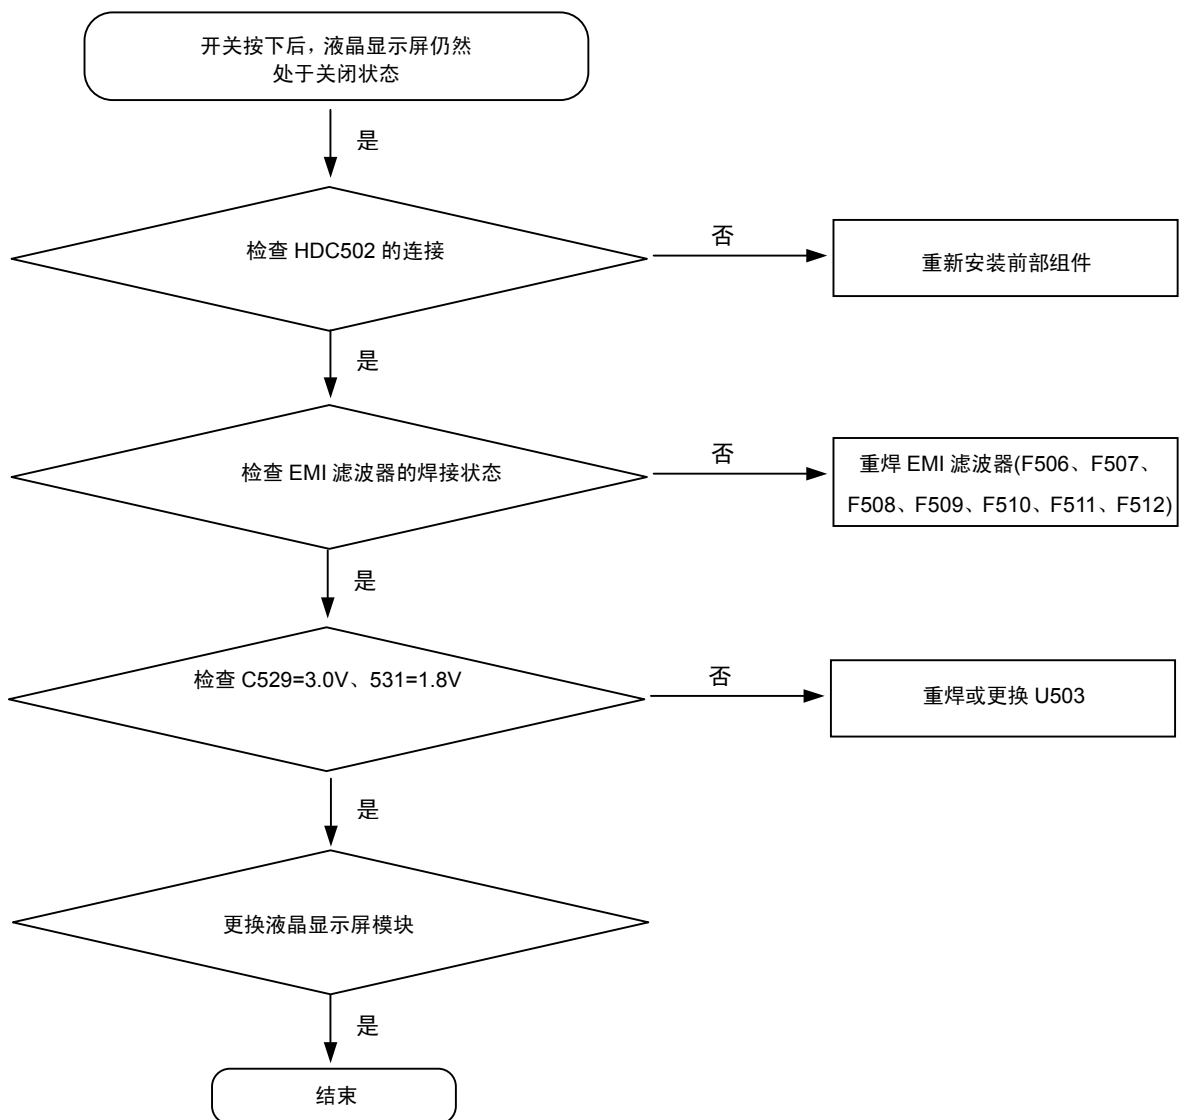

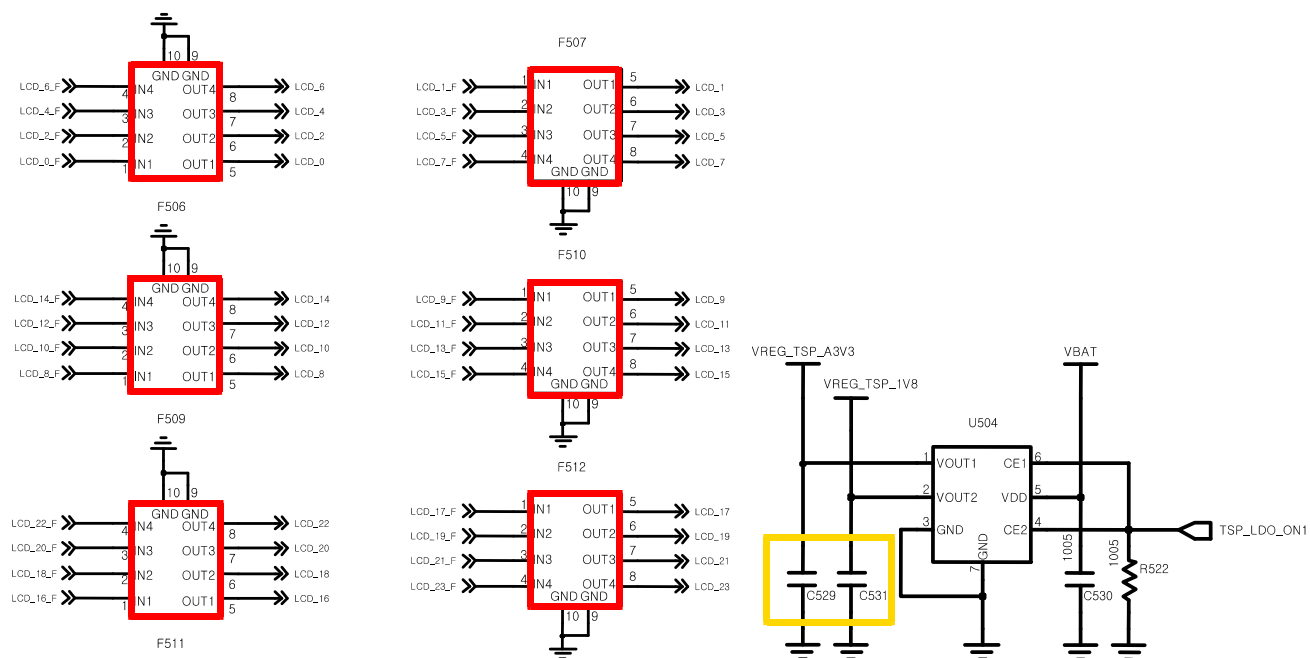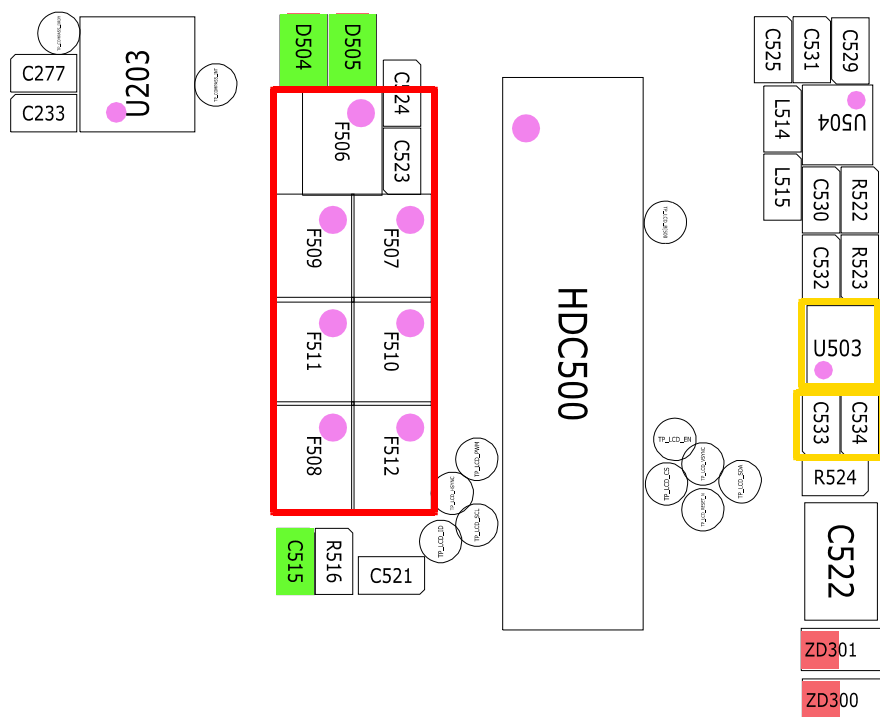




8-3-12.TSP


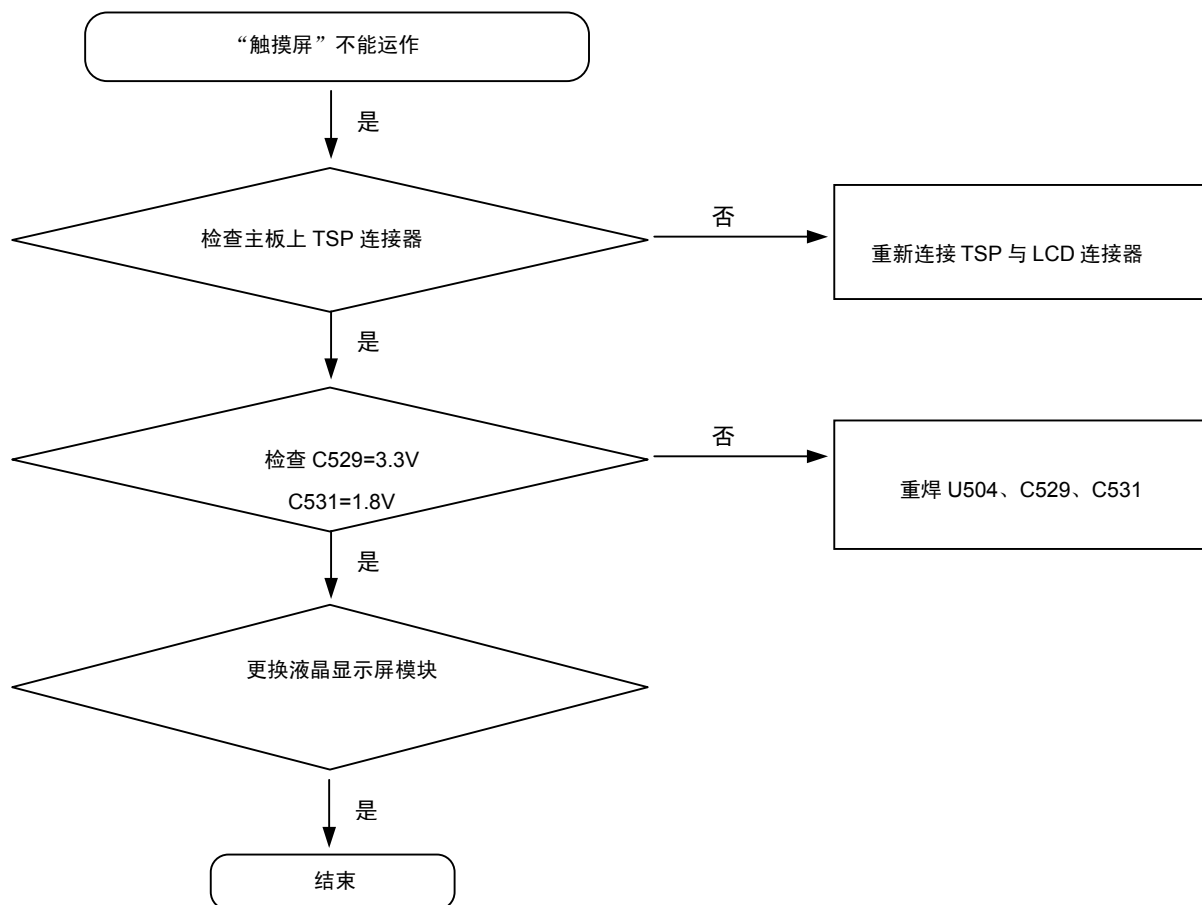


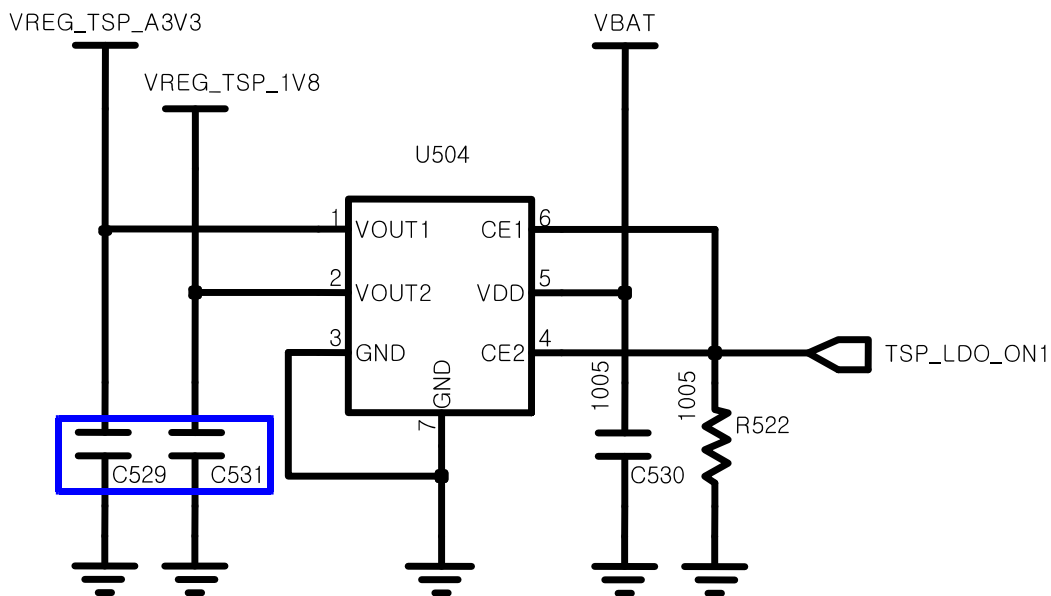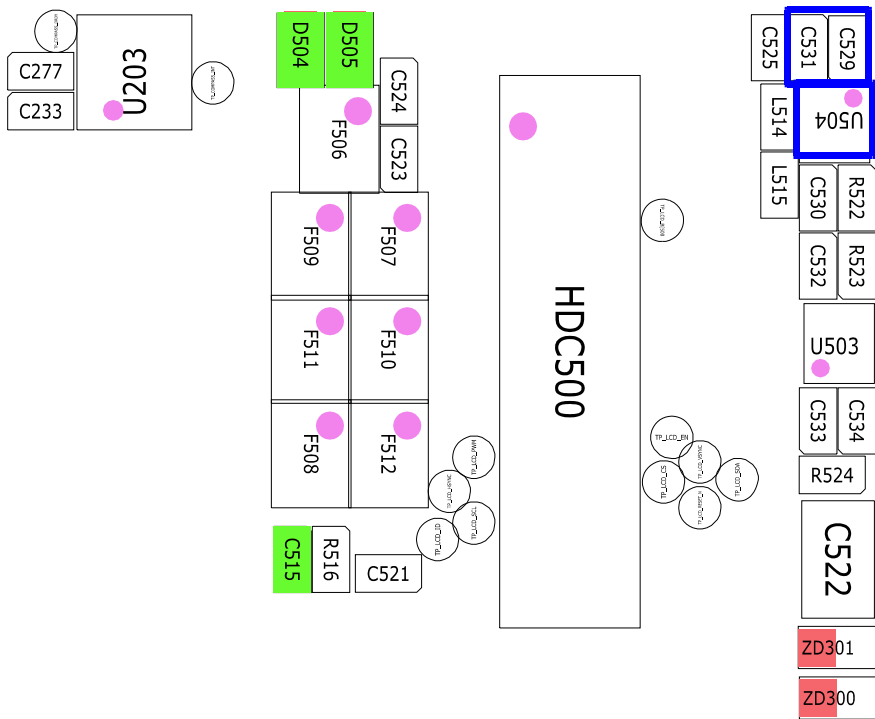


8-3-13.5M 摄像头

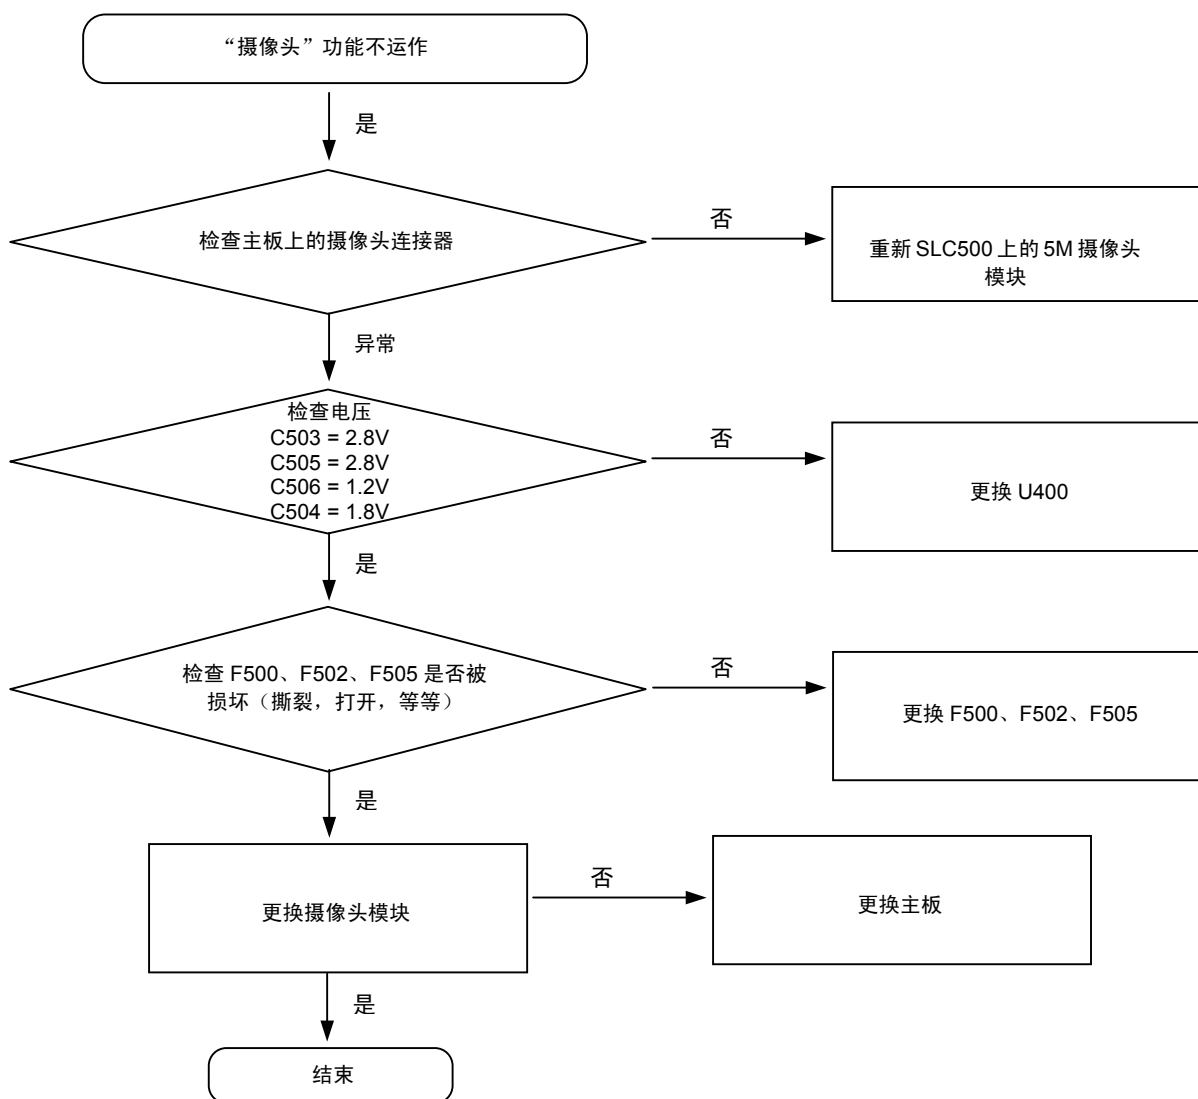


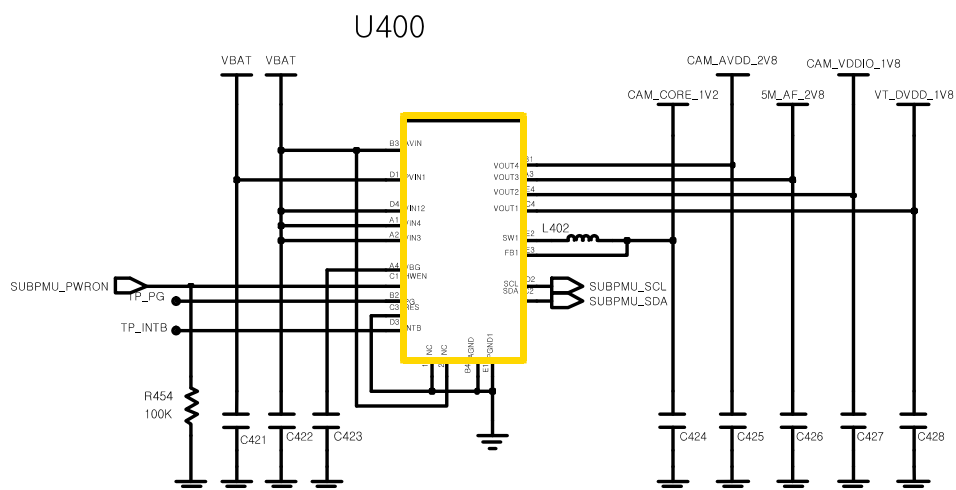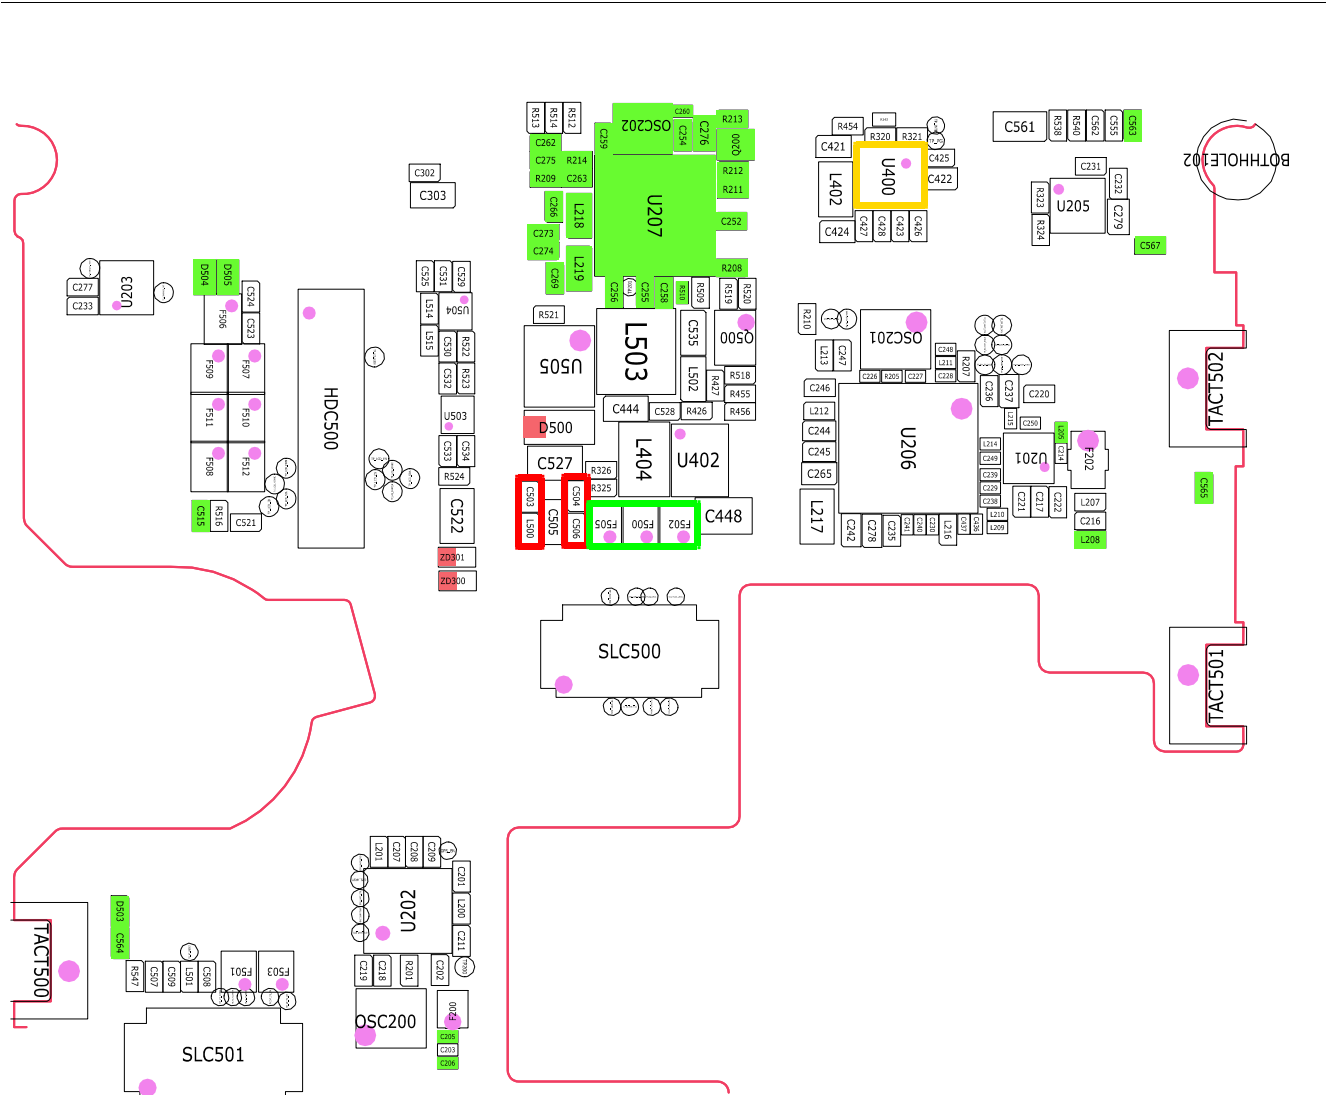


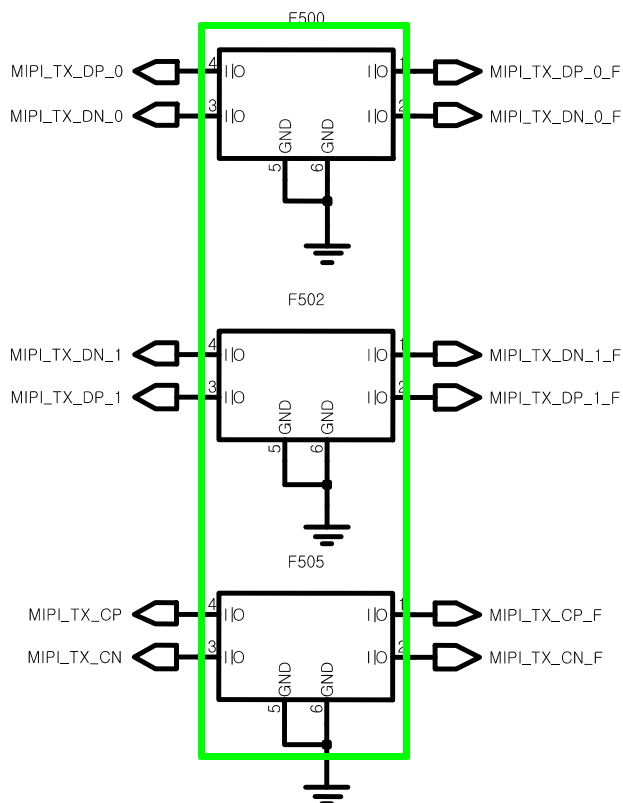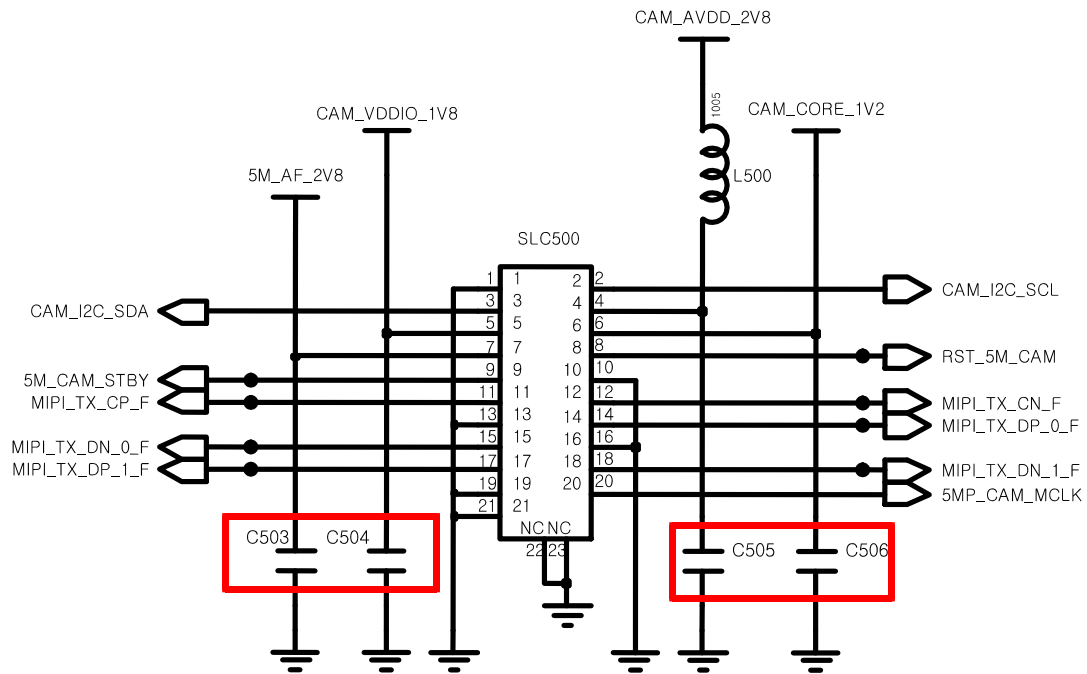


8-3-14.1.3M 摄像头



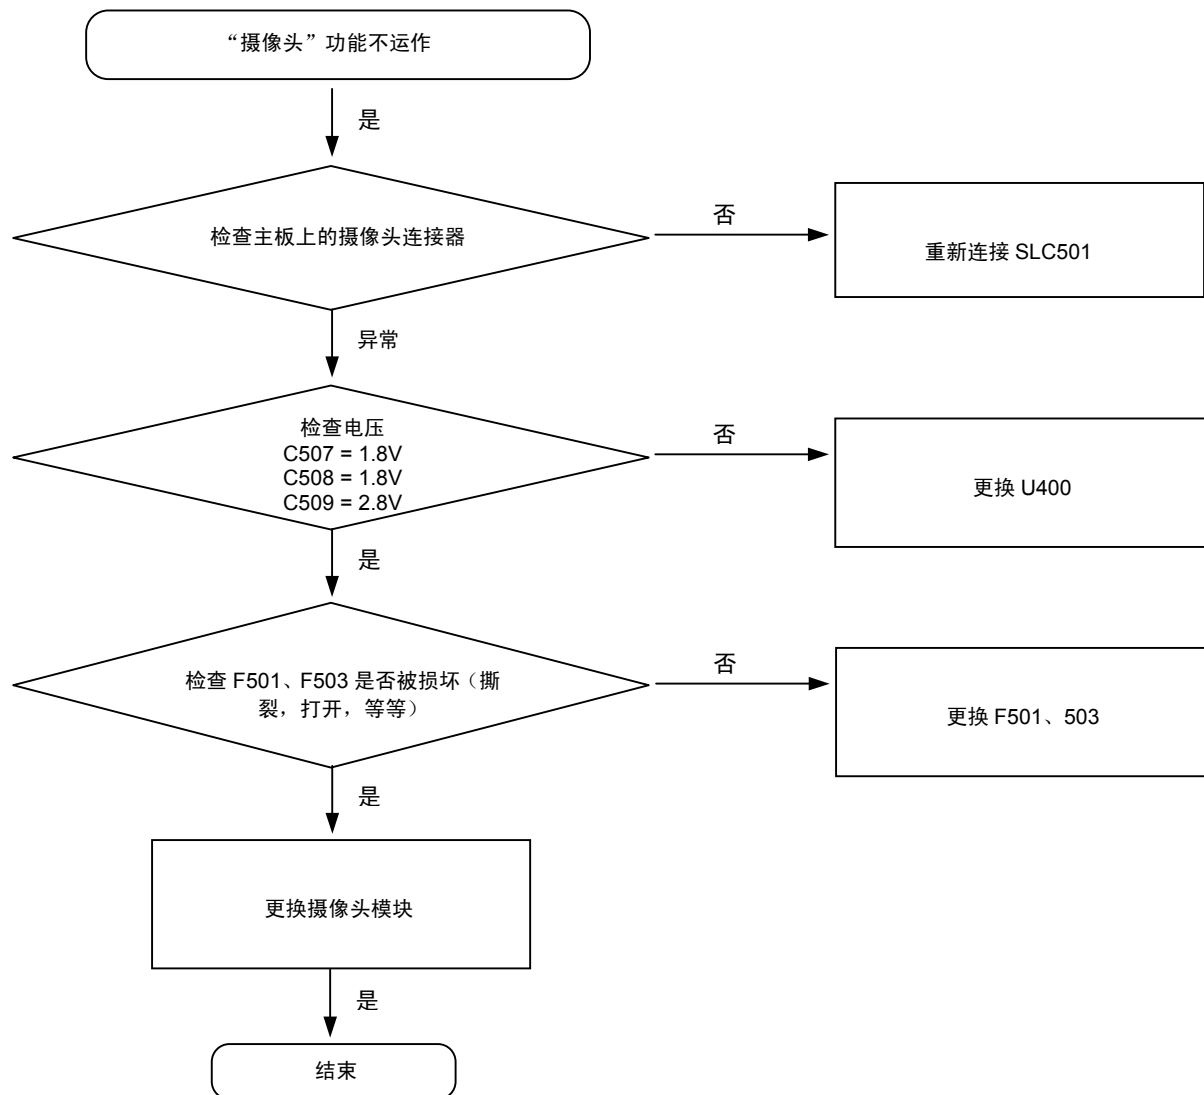


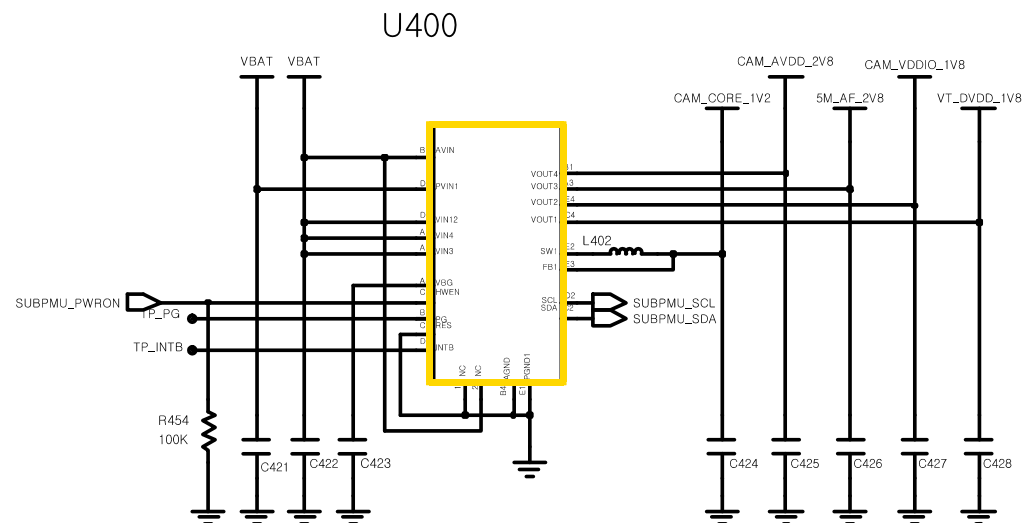

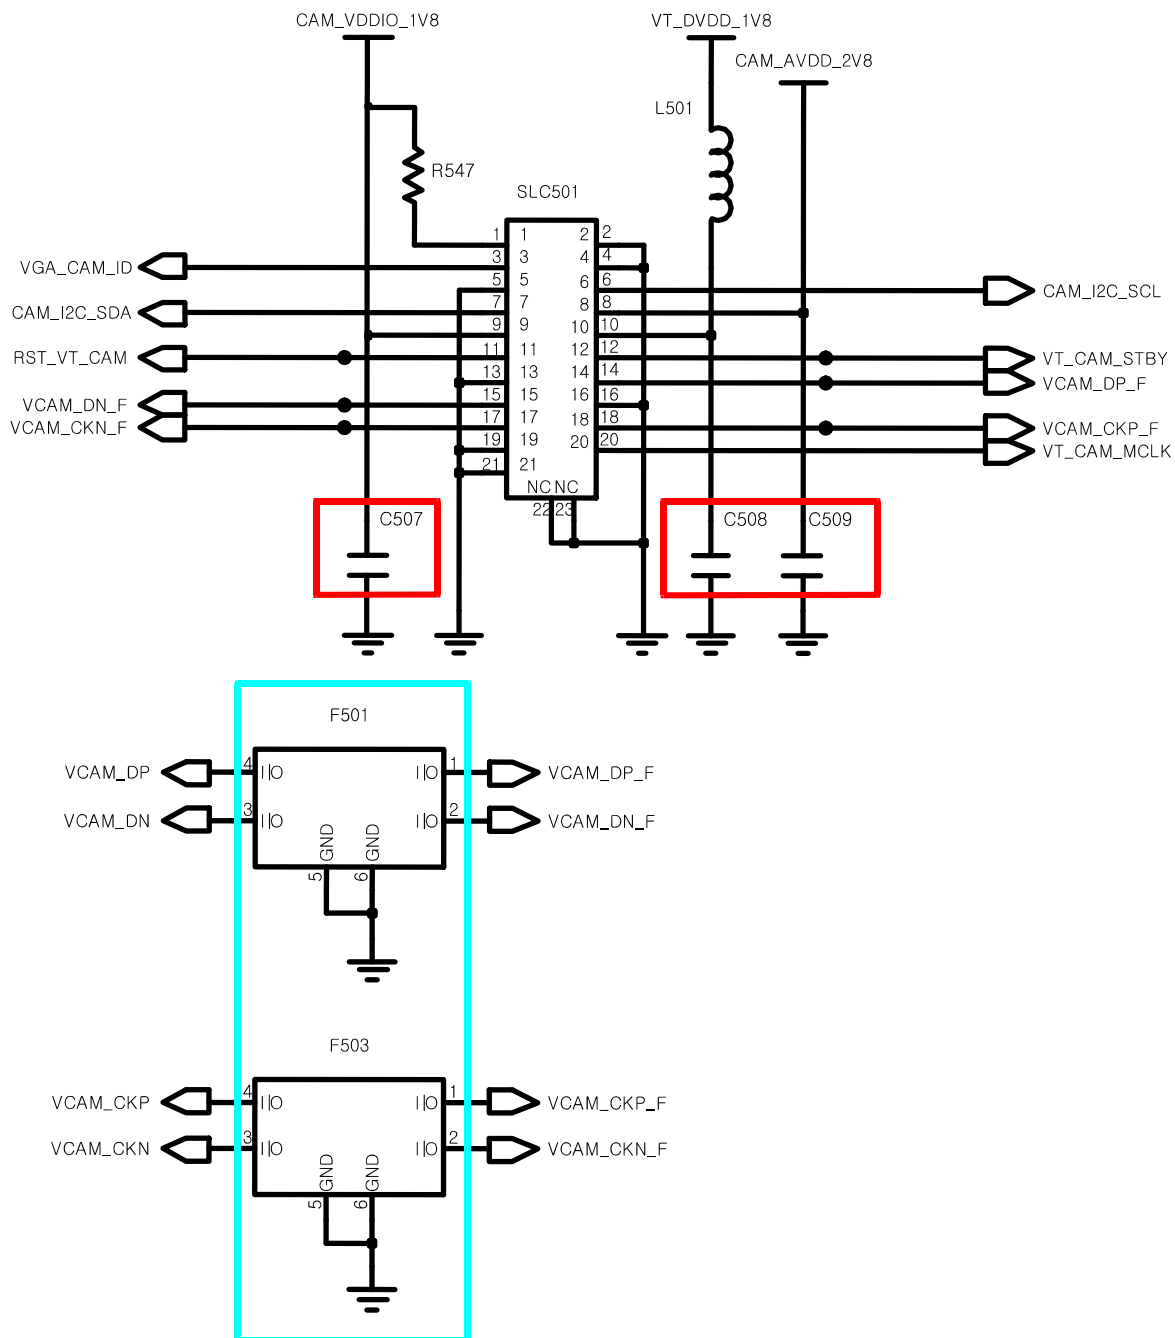





8-3-15.GSM1800 接收器

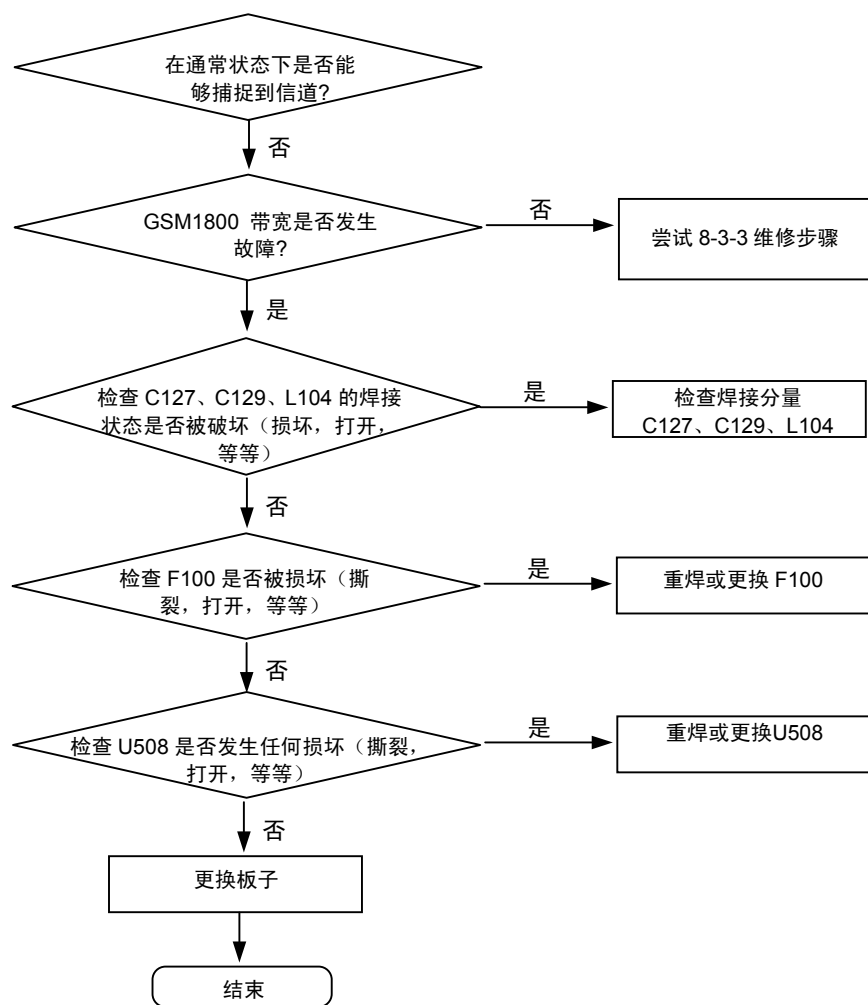

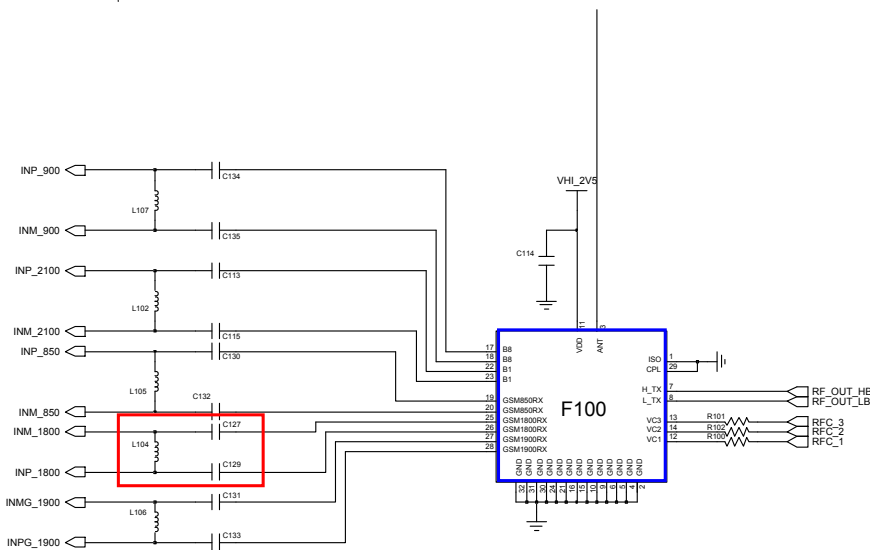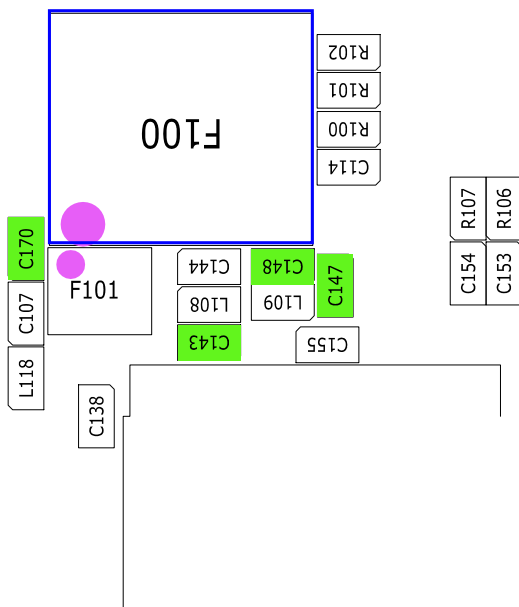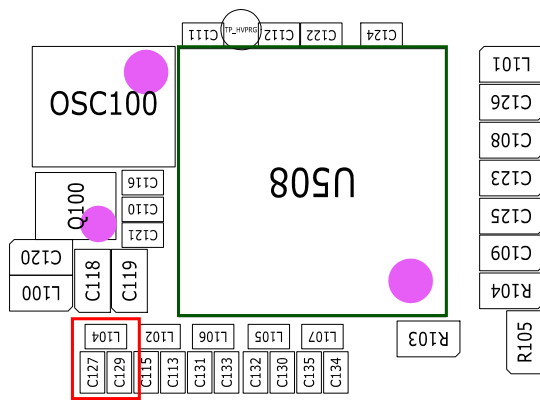



8-3-16.GSM1900 接收器

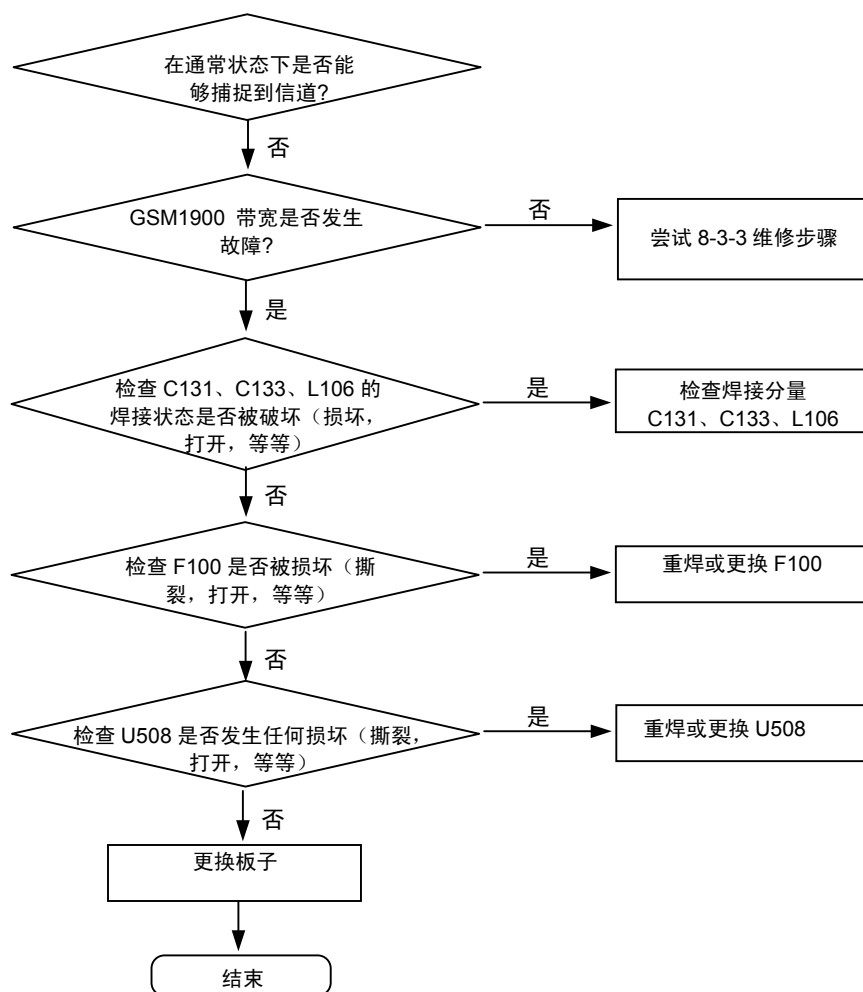

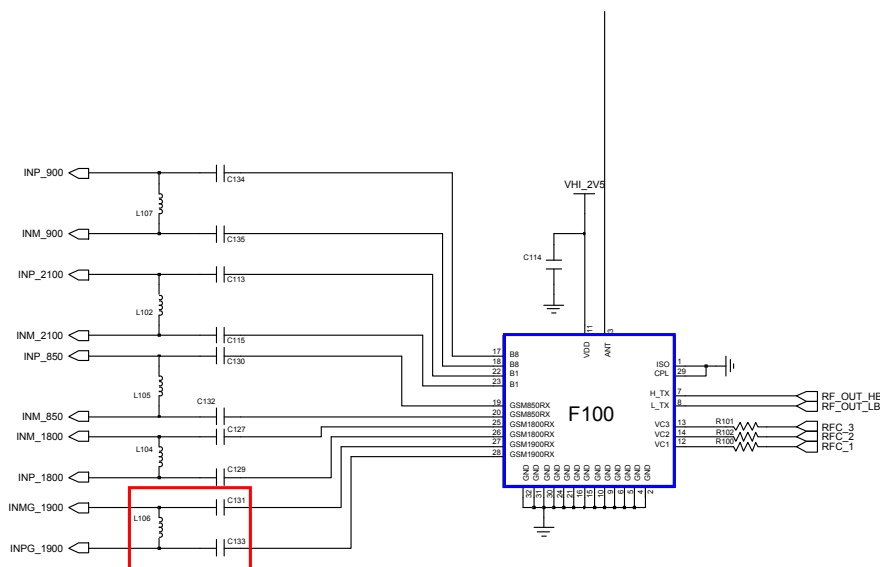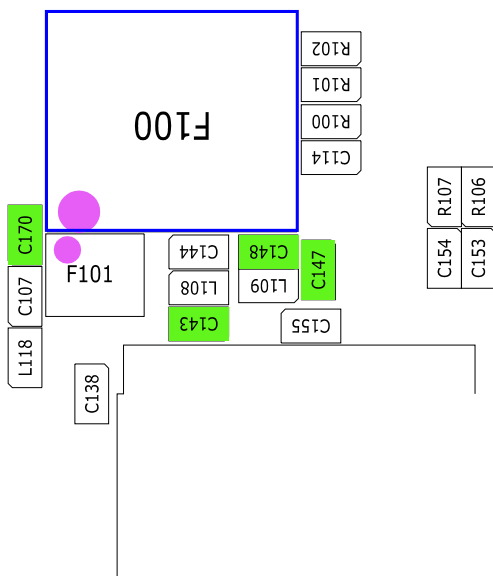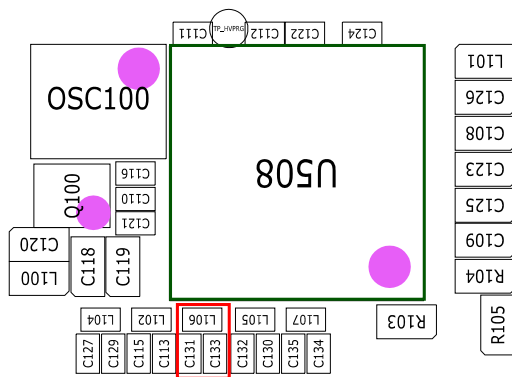





8-3-17.WCDMA Band1 接收器

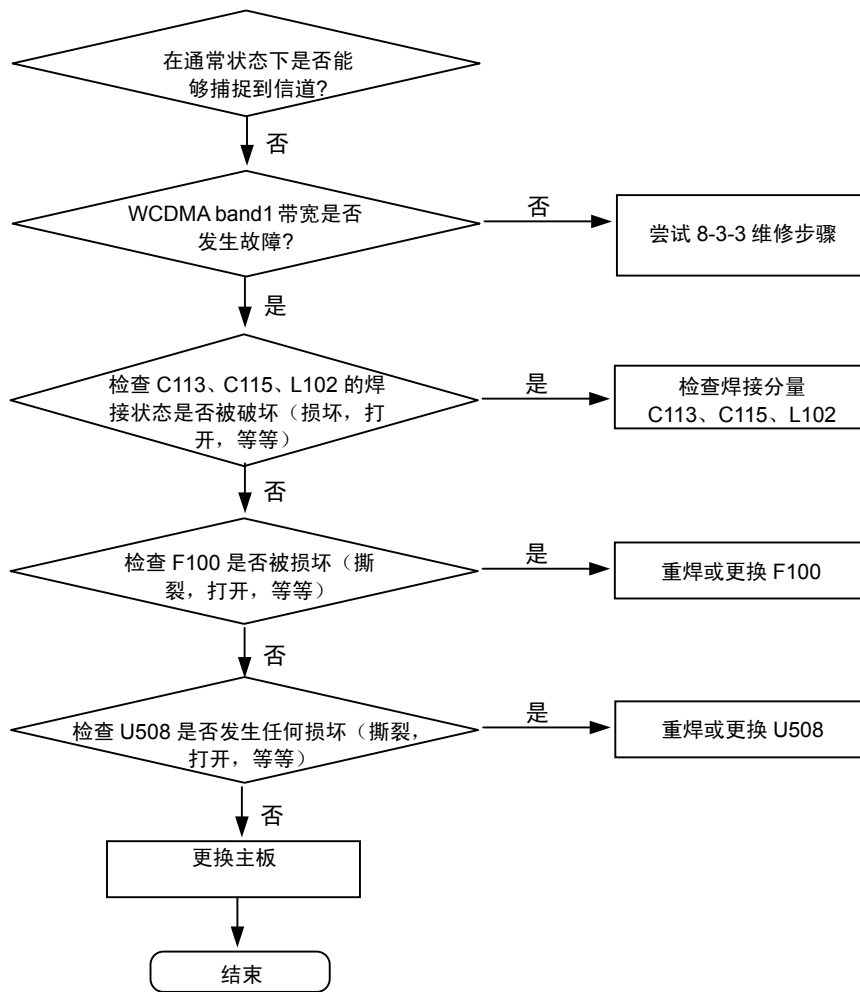

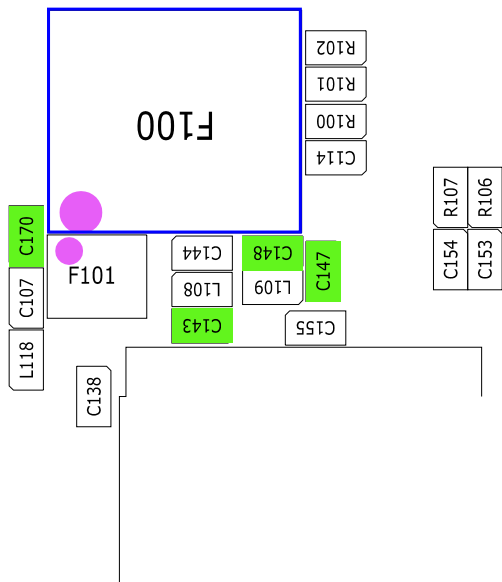





8-3-18.GSM850

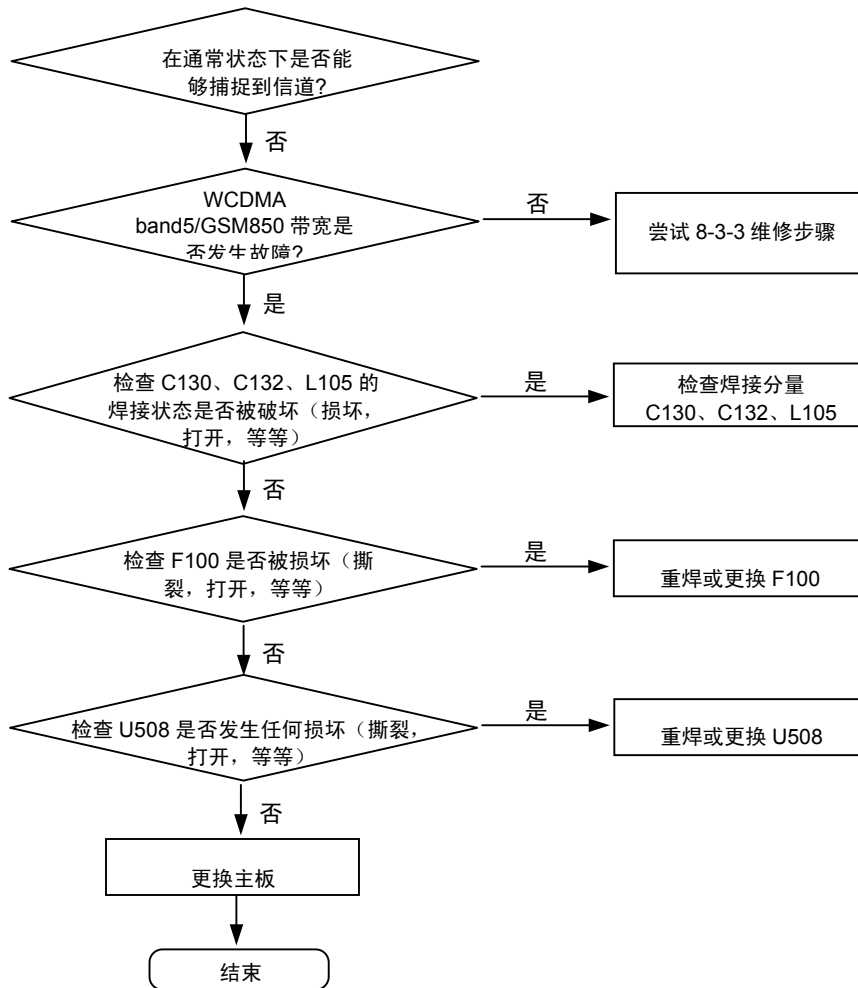

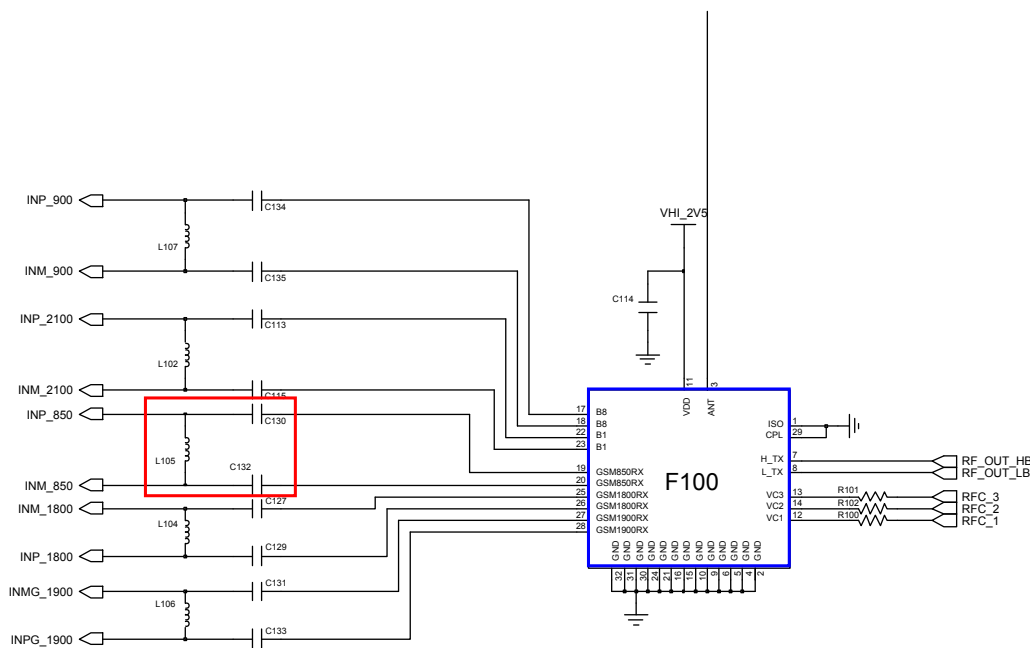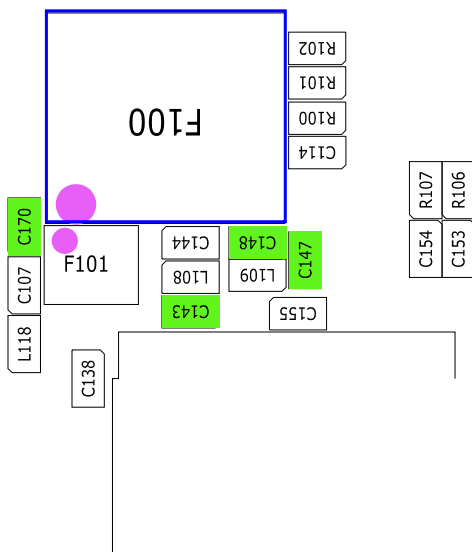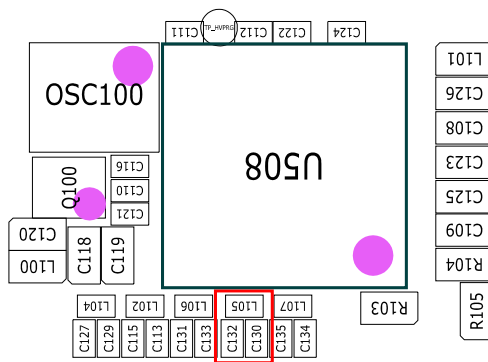



8-3-19.WCDMA Band8 /GSM900 接收器

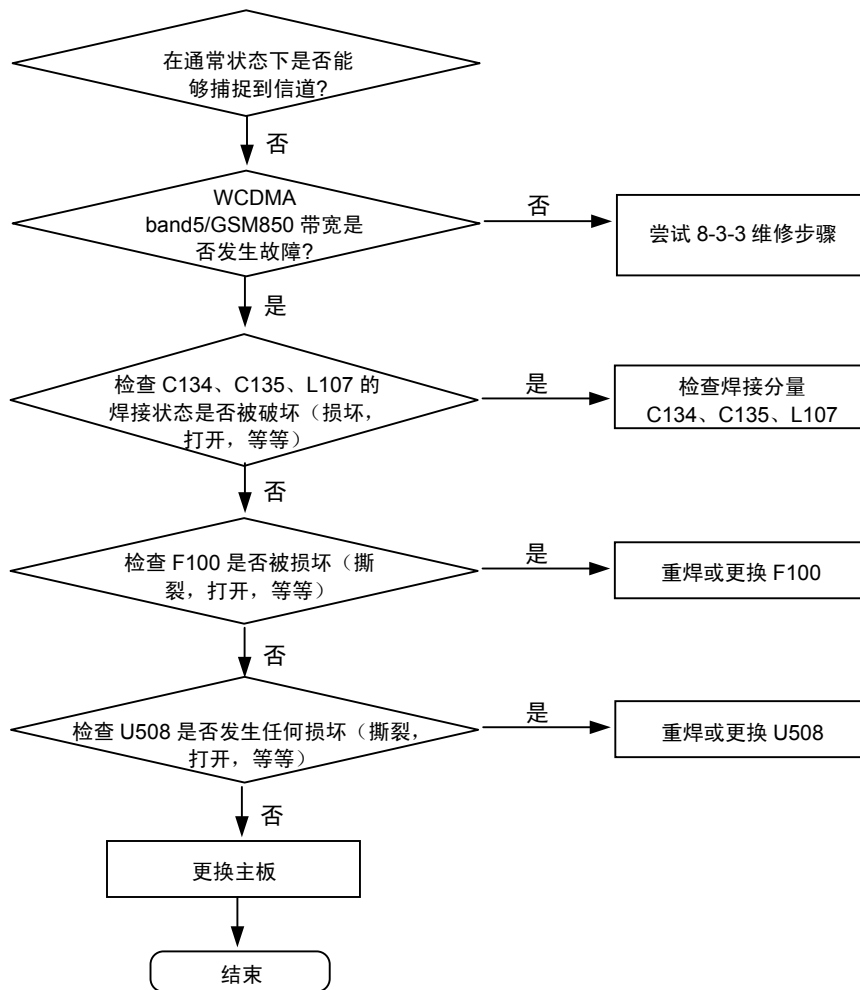

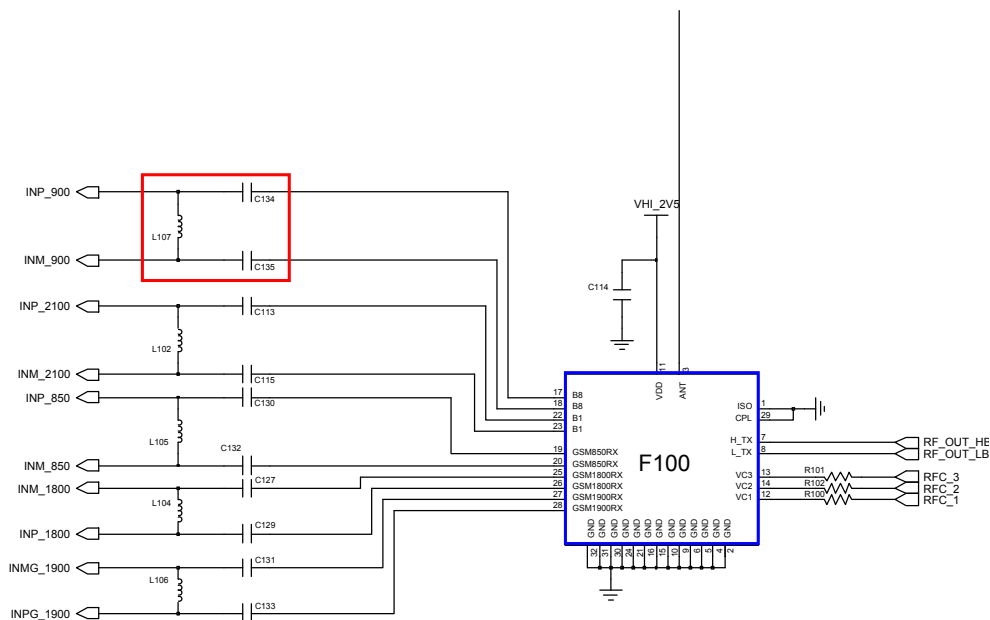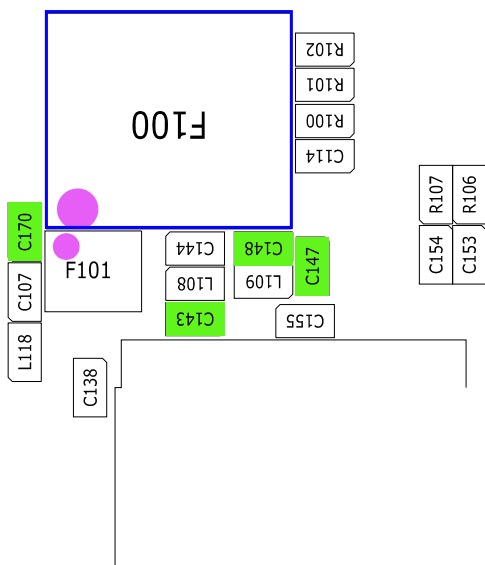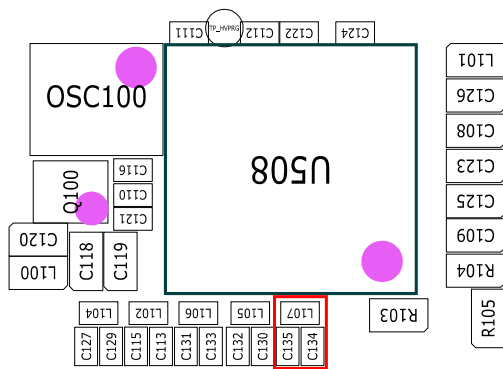

8-3-20.WCDMA BAND8/GSM850/GSM900 发射器

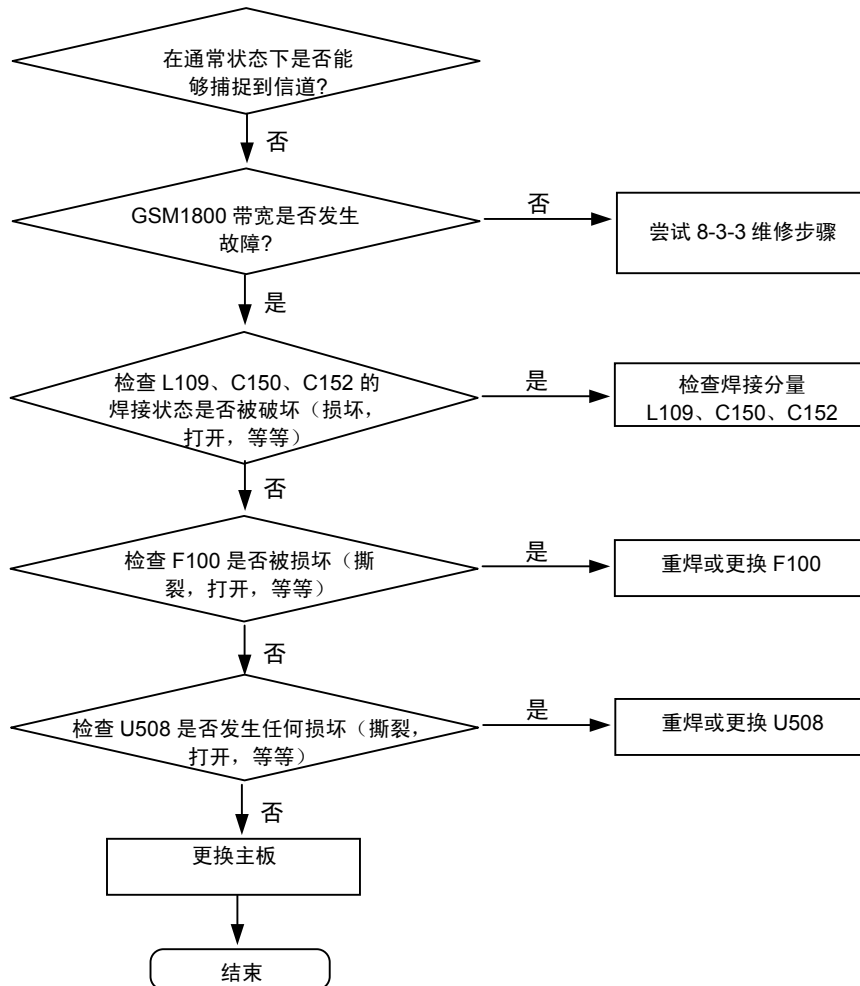

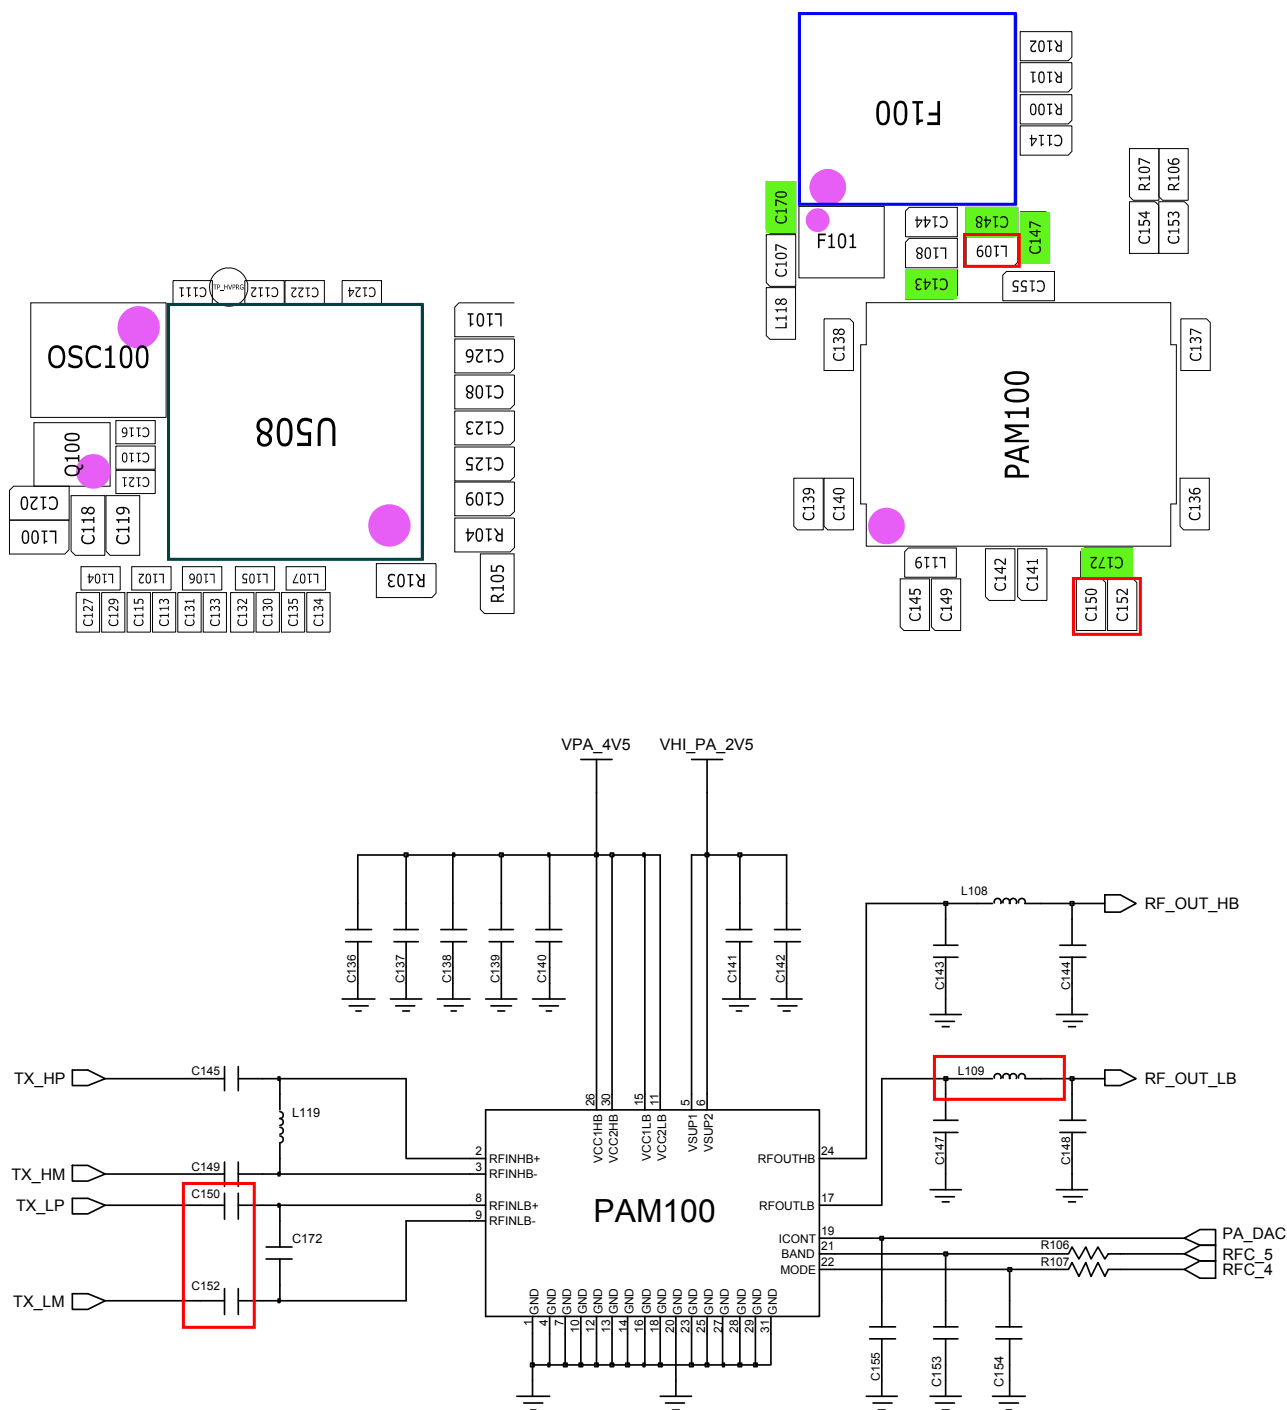

8-3-21.WCDMA BAND1/DCS/PCS 发射器

