


SAMSUNG

Mobile Device
SM-A805F/A8050
Common

SERVICE ***Manual***

Mobile Device

CONTENTS

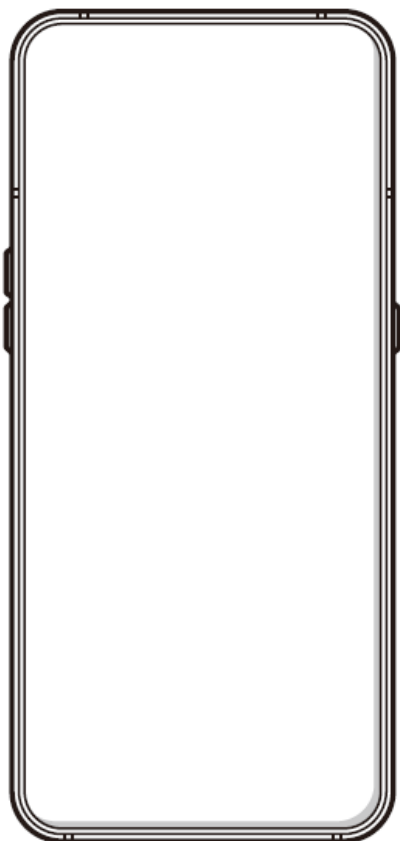

1. Safety Precautions
2. Specification
3. Product Function
4. Exploded View and Parts list
5. MAIN Electrical Parts List
6. Level 1 Repair
7. Level 2 Repair
8. Level 3 Repair
9. Reference Abbreviation

Notice: All functionality, features, specifications, and other product information provided in this document, including but not limited to, benefits, design, pricing, components, performance, availability, and capabilities of the product are subject to change without notice. Samsung reserves the right to alter this document or the product described herein at anytime, without obligation to provide notification of such changes.

2. Specification

2-1. GSM General Specification

Item		GSM 850	EGSM 900	DCS1800	PCS1900
Freq. Band[MHz]		824~849	880~915	1710~1785	1850~1910
Uplink/Downlink		869~894	925~960	1805~1880	1930~1990
ARFCN range		128~251	0~124 & 975~1023	512~885	512~810
Tx/Rx spacing		45MHz	45MHz	95MHz	80MHz
Mod. Bit rate/ Bit Period		270.833kbps 3.692us	270.833kbps 3.692us	270.833kbps 3.692us	270.833kbps 3.692us
Time Slot Period/ Frame Period		576.9us 4.615ms	576.9us 4.615ms	576.9us 4.615ms	576.9us 4.615ms
Modulation	GSM/ EGPRS	GMSK/ 8PSK	GMSK/ 8PSK	GMSK/ 8PSK	GMSK/ 8PSK
MS Power		33dBm~5dBm	33dBm~5dBm	30dBm~0dBm	30dBm~0dBm
Power Class		4(GMSK) E2(8PSK)	4(GMSK) E2(8PSK)	1(GMSK) E2(8PSK)	1(GMSK) E2(8PSK)
Sensitivity		-102dBm	-102dBm	-100dBm	-100dBm
TDMA Mux		8	8	8	8

2. Specification

2-2. GSM Tx Power Class

TX Power control level	GSM850	TX Power control level	EGSM900	TX Power control level	DCS1800	TX Power control level	PCS1900
5	33±2 dBm	5	33±2 dBm	0	30±3 dBm	0	30±3 dBm
6	31±2 dBm	6	31±2 dBm	1	28±3 dBm	1	28±3 dBm
7	29±2 dBm	7	29±2 dBm	2	26±3 dBm	2	26±3 dBm
8	27±2 dBm	8	27±2 dBm	3	24±3 dBm	3	24±3 dBm
9	25±2 dBm	9	25±2 dBm	4	22±3 dBm	4	22±3 dBm
10	23±2 dBm	10	23±2 dBm	5	20±3 dBm	5	20±3 dBm
11	21±2 dBm	11	21±2 dBm	6	18±3 dBm	6	18±3 dBm
12	19±2 dBm	12	19±2 dBm	7	16±3 dBm	7	16±3 dBm
13	17±2 dBm	13	17±2 dBm	8	14±3 dBm	8	14±3 dBm
14	15±2 dBm	14	15±2 dBm	9	12±4 dBm	9	12±4 dBm
15	13±2 dBm	15	13±2 dBm	10	10±4 dBm	10	10±4 dBm
16	11±3 dBm	16	11±3 dBm	11	8±4 dBm	11	8±4 dBm
17	9±3 dBm	17	9±3 dBm	12	6±4 dBm	12	6±4 dBm
18	7±3 dBm	18	7±3 dBm	13	4±4 dBm	13	4±4 dBm
19	5±3 dBm	19	5±3 dBm	14	2±5 dBm	14	2±5 dBm
-	-	-	-	15	0±5 dBm	15	0±5 dBm

2. Specification

2-3. CDMA General Specification [SM-A8050]

Item	CDMA 800(B0)
Freq. Band[MHz] Uplink/Downlink	824 ~ 849 869 ~ 894
ARFCN range	UL: 911~1023 DL: 1~799
Tx/Rx spacing	45MHz
Mod. Bit rate/ Bit Period	3.1Mbps(DL) 1.8Mbps(UL)
Time Slot Period/ Frame Period	20ms(CDMA2000) 26.667ms(1x-EVDO)
Modulation	QPSK 16QAM 64QAM
MS Power (dBm)	26 ~ -50(↓)
Power Class	3(max+30dBm)
Sensitivity	-104dBm(↓)

2. Specification

2-4-1. WCDMA General Specification [SM-A805F]

Item	WCDMA2100(B1)	WCDMA1900(B2)	WCDMA AWS(B4)	WCDMA850(B5)	WCDMA900(B8)
Freq. Band[MHz] Uplink/Downlink	1920~1980 2110~2170	1850~1910 1930~1990	1710~1755 2110~2155	824~849 869~894	880~915 925~960
ARFCN range	UL: 9612~9888 DL: 10562~10838	UL: 9262~9538 DL: 9662~9938	UL: 1312~1513 DL: 1537~1738	UL: 4132~4233 DL: 4357~4458	UL: 2712~2868 DL: 2937~3088
Tx/Rx spacing	190MHz	80MHz	400MHz	45MHz	45MHz
Mod. Bit rate/ Bit Period	42.2Mbps(DL) 5.42Mbps(UL)	42.2Mbps(DL) 5.42Mbps(UL)	42.2Mbps(DL) 5.42Mbps(UL)	42.2Mbps(DL) 5.42Mbps(UL)	42.2Mbps(DL) 5.42Mbps(UL)
Time Slot Period/ Frame Period	WCDMA 10ms/0.667ms HSPA 2ms/0.667ms	WCDMA 10ms/0.667ms HSPA 2ms/0.667ms	WCDMA 10ms/0.667ms HSPA 2ms/0.667ms	WCDMA 10ms/0.667ms HSPA 2ms/0.667ms	WCDMA 10ms/0.667ms HSPA 2ms/0.667ms
Modulation	QPSK 16QAM 64QAM	QPSK 16QAM 64QAM	QPSK 16QAM 64QAM	QPSK 16QAM 64QAM	QPSK 16QAM 64QAM
MS Power (dBm)	25.7 ~ -49(↓)	25.7 ~ -49(↓)	25.7 ~ -49(↓)	25.7 ~ -49(↓)	25.7 ~ -49(↓)
Power Class	3(max+24dBm)	3(max+24dBm)	3(max+24dBm)	3(max+24dBm)	3(max+24dBm)
Sensitivity	-106dBm	-104dBm	-106dBm	-104dBm	-103dBm

2. Specification

2-4-2. WCDMA General Specification [SM-A8050]

Item	WCDMA2100(B1)	WCDMA1900(B2)	WCDMA850(B5)	WCDMA900(B8)
Freq. Band[MHz] Uplink/Downlink	1920~1980 2110~2170	1850~1910 1930~1990	824~849 869~894	880~915 925~960
ARFCN range	UL: 9612~9888 DL: 10562~10838	UL: 9262~9538 DL: 9662~9938	UL: 4132~4233 DL: 4357~4458	UL: 2712~2868 DL: 2937~3088
Tx/Rx spacing	190MHz	80MHz	45MHz	45MHz
Mod. Bit rate/ Bit Period	42.2Mbps(DL) 5.42Mbps(UL)	42.2Mbps(DL) 5.42Mbps(UL)	42.2Mbps(DL) 5.42Mbps(UL)	42.2Mbps(DL) 5.42Mbps(UL)
Time Slot Period/ Frame Period	WCDMA 10ms/0.667ms HSPA 2ms/0.667ms	WCDMA 10ms/0.667ms HSPA 2ms/0.667ms	WCDMA 10ms/0.667ms HSPA 2ms/0.667ms	WCDMA 10ms/0.667ms HSPA 2ms/0.667ms
Modulation	QPSK 16QAM 64QAM	QPSK 16QAM 64QAM	QPSK 16QAM 64QAM	QPSK 16QAM 64QAM
MS Power (dBm)	25.7 ~ -49(↓)	25.7 ~ -49(↓)	25.7 ~ -49(↓)	25.7 ~ -49(↓)
Power Class	3(max+24dBm)	3(max+24dBm)	3(max+24dBm)	3(max+24dBm)
Sensitivity	-106dBm	-104dBm	-104dBm	-103dBm

2. Specification

2-5-1. LTE General Specification [SM-A805F]

Item	LTE Band1	LTE Band2	LTE Band3	LTE Band4	LTE Band5	LTE Band7
Freq. Band[MHz] Uplink/Downlink	1920~1980 2110~2170	1850~1910 1930~1990	1710~1785 1805~1880	1710~1755 2110~2155	824~849 869~894	2500~2570 2620~2690
ARFCN range	UL:18000~18599 DL:0~599	UL:18600~19199 DL:600~1199	UL:19200~19949 DL:1200~1949	UL:19950~20399 DL:1950~2399	UL:20400~20649 DL:2400~2649	UL:20750~21449 DL:2750~3449
Tx/Rx spacing (MHz)	190	80	95	400	45	120
Channel Bandwidth (MHz)	5/10/15/20	1.4/3/5/10/15/20	1.4/3/5/10/15/20	1.4/3/5/10/15/20	1.4/3/5/10	5/10/15/20
Modulation	QPSK,16/64QAM 256QAM(DL only)	QPSK,16/64QAM 256QAM(DL only)	QPSK,16/64QAM 256QAM(DL only)	QPSK,16/64QAM 256QAM(DL only)	QPSK,16/64QAM 256QAM(DL only)	QPSK,16/64QAM 256QAM(DL only)
MS Power (dBm)	25.7~-39(↓)	25.7~-39(↓)	25.7~-39(↓)	25.7~-39(↓)	25.7~-39(↓)	25.7~-39(↓)
Sensitivity(QPSK, BW 10MHz) (dBm)	-96.3	-94.3	-93.3	-96.3	-94.3	-94.3

Item	LTE Band8	LTE Band12	LTE Band13	LTE Band17	LTE Band20	LTE Band26
Freq. Band[MHz] Uplink/Downlink	880~915 925~960	699~716 729~746	777~787 746~756	704~716 734~746	832~862 791~821	814~849 859~894
ARFCN range	UL:21450~21799 DL:3450~3799	UL:23010~23179 DL:5010~5179	UL:23180~23279 DL:5180~5279	UL:23730~23849 DL:5730~5849	UL:24150~24449 DL:6150~6449	UL:26690~27039 DL:8690~9039
Tx/Rx spacing (MHz)	45	30	-31	30	-41	35
Channel Bandwidth (MHz)	1.4/3/5/10	1.4/3/5/10	1.4/3/5/10	5/10	5/10/15/20	1.4/3/5/10
Modulation	QPSK,16/64QAM 256QAM(DL only)	QPSK,16/64QAM 256QAM(DL only)	QPSK,16/64QAM 256QAM(DL only)	QPSK,16/64QAM 256QAM(DL only)	QPSK,16/64QAM 256QAM(DL only)	QPSK,16/64QAM 256QAM(DL only)
MS Power (dBm)	25.7~-39(↓)	25.7~-39(↓)	25.7~-39(↓)	25.7~-39(↓)	25.7~-39(↓)	25.7~-39(↓)
Sensitivity(QPSK, BW 10MHz) (dBm)	-93.3	-93.3	-93.3	-93.3	-93.3	-94.3

2. Specification

Item	LTE Band28	LTE Band38	LTE Band40	LTE Band41	LTE Band66
Freq. Band[MHz] Uplink/Downlink	703~748 758~803	2570~2620	2300~2400	2496~2690	1710~1780 2110~2200
ARFCN range	UL:27210~27659 DL:9210~9659	UL/DL:37750 ~ 38249	UL/DL:38650 ~ 39649	UL/DL:39650 ~ 41589	UL:131972~132671 DL:66436~67335
Tx/Rx spacing (MHz)	55	0	0	0	400
Channel Bandwidth (MHz)	3/5/10/15/20	5/10/15/20	5/10/15/20	5/10/15/20	1.4/3/5/10/15/20
Modulation	QPSK,16/64QAM 256QAM(DL only)	QPSK,16/64QAM 256QAM(DL only)	QPSK,16/64QAM 256QAM(DL only)	QPSK,16/64QAM 256QAM(DL only)	QPSK,16/64QAM 256QAM(DL only)
MS Power (dBm)	25.7~-39(↓)	25.7~-39(↓)	25.7~-39(↓)	25.7~-39(↓)	25.7~-39(↓)
Sensitivity(QPSK, BW 10MHz) (dBm)	-94.8	-96.3	-96.3	-94.3	-95.8

2. Specification


2-5-2. LTE General Specification [SM-A8050]

Item	LTE Band1	LTE Band3	LTE Band4	LTE Band5	LTE Band7	LTE Band8
Freq. Band[MHz] Uplink/Downlink	1920~1980 2110~2170	1710~1785 1805~1880	1710~1755 2110~2155	824~849 869~894	2500~2570 2620~2690	880~915 925~960
ARFCN range	UL:18000~18599 DL:0~599	UL:19200~19949 DL:1200~1949	UL:19950~20399 DL:1950~2399	UL:20400~20649 DL:2400~2649	UL:20750~21449 DL:2750~3449	UL:21450~21799 DL:3450~3799
Tx/Rx spacing (MHz)	190	95	400	45	120	45
Channel Bandwidth (MHz)	5/10/15/20	1.4/3/5/10/15/20	1.4/3/5/10/15/20	1.4/3/5/10	5/10/15/20	1.4/3/5/10
Modulation	QPSK,16/64QAM 256QAM(DL only)	QPSK,16/64QAM 256QAM(DL only)	QPSK,16/64QAM 256QAM(DL only)	QPSK,16/64QAM 256QAM(DL only)	QPSK,16/64QAM 256QAM(DL only)	QPSK,16/64QAM 256QAM(DL only)
MS Power (dBm)	25.7~-39(↓)	25.7~-39(↓)	25.7~-39(↓)	25.7~-39(↓)	25.7~-39(↓)	25.7~-39(↓)
Sensitivity(QPSK, BW 10MHz) (dBm)	-96.3	-93.3	-96.3	-94.3	-94.3	-93.3

Item	LTE Band12	LTE Band20	LTE Band38	LTE Band40	LTE Band41
Freq. Band[MHz] Uplink/Downlink	699~716 729~746	832~862 791~821	2570~2620	2300~2400	2496~2690
ARFCN range	UL:23010~23179 DL:5010~5179	UL:24150~24449 DL:6150~6449	UL/DL:37750 ~ 38249	UL/DL:38650 ~ 39649	UL/DL:39650 ~ 41589
Tx/Rx spacing (MHz)	30	-41	0	0	0
Channel Bandwidth (MHz)	1.4/3/5/10	5/10/15/20	5/10/15/20	5/10/15/20	5/10/15/20
Modulation	QPSK,16/64QAM 256QAM(DL only)	QPSK,16/64QAM 256QAM(DL only)	QPSK,16/64QAM 256QAM(DL only)	QPSK,16/64QAM 256QAM(DL only)	QPSK,16/64QAM 256QAM(DL only)
MS Power (dBm)	25.7~-39(↓)	25.7~-39(↓)	25.7~-39(↓)	25.7~-39(↓)	25.7~-39(↓)
Sensitivity(QPSK, BW 10MHz) (dBm)	-93.3	-93.3	-96.3	-96.3	-94.3

4. Exploded View and Parts List

4-1. Cellular phone Exploded View

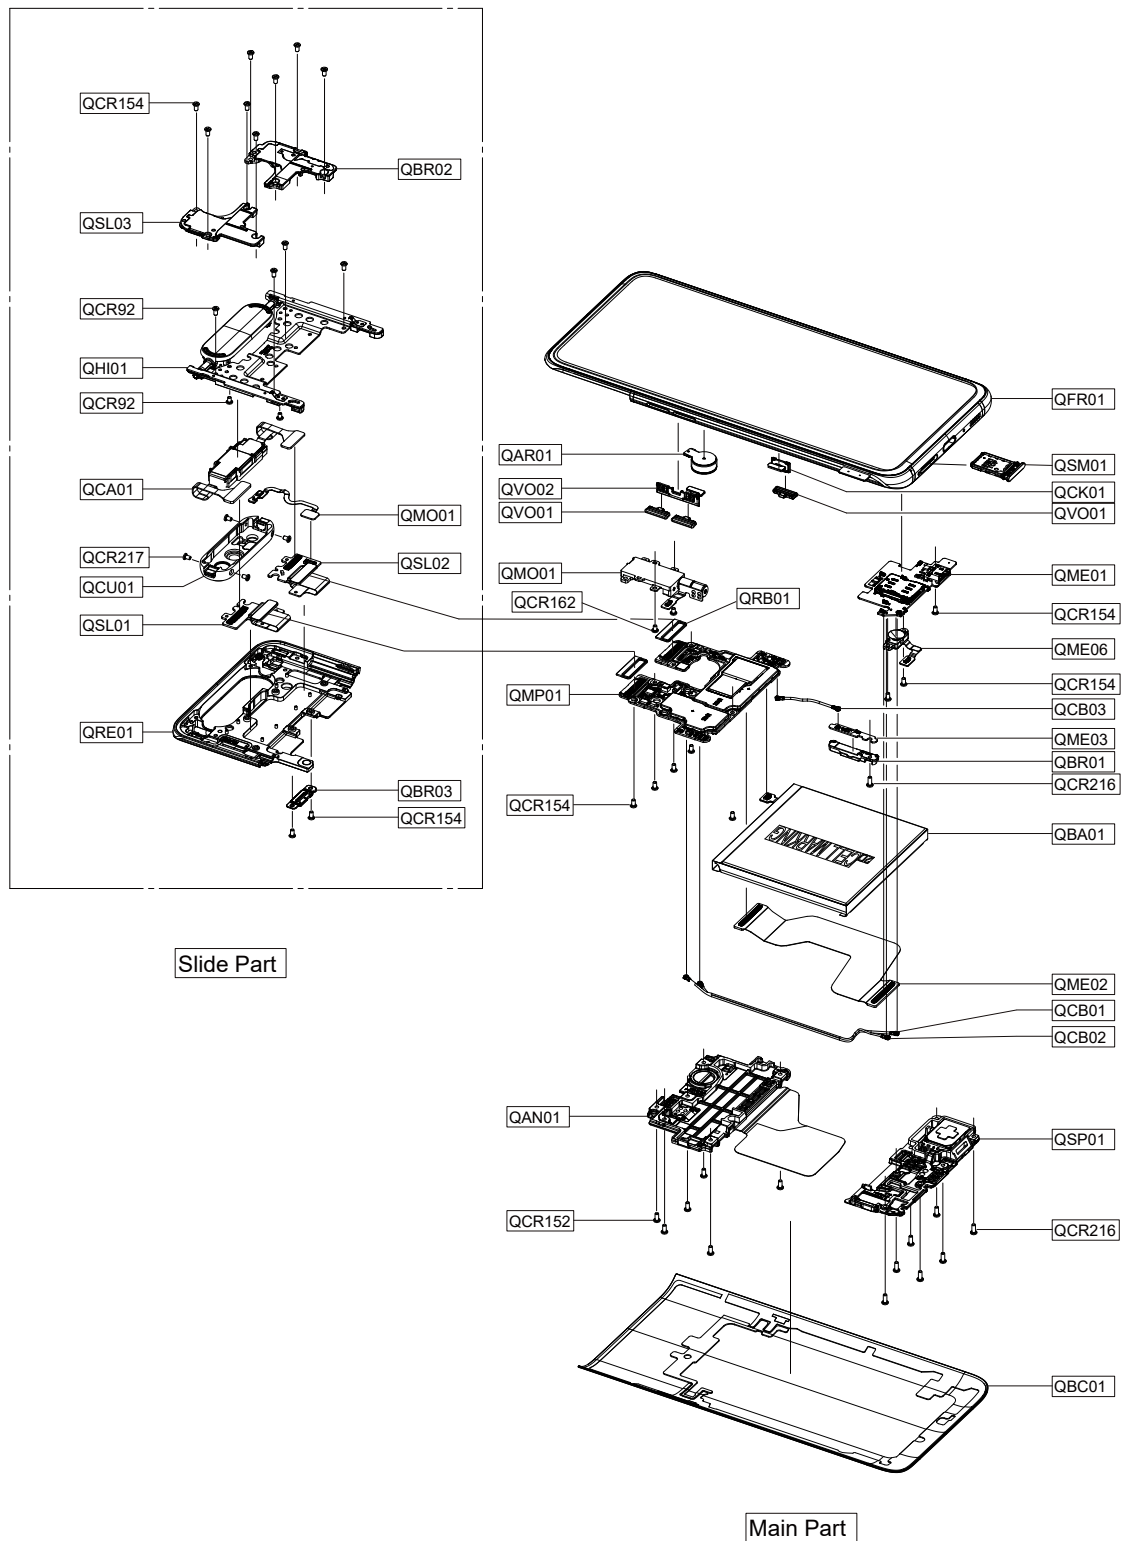

※ SVC REPAIR TAPE
QRT01, QRT02

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

5. MAIN Electrical Parts List

[SM-A805F]

Parts Code	Design LOC	Description
0404-001250	D6000	DIODE-SCHOTTKY
0406-001592	ZD4002	DIODE-TVS
0406-001728	ZD1000,ZD5000	DIODE-TVS
0406-001809	ZD6003,ZD6004	DIODE-TVS
0406-001829	ZD5001	DIODE-TVS
0505-003234	Q5002,TR5001	FET-SILICON
0505-003618	TR4001	FET-SILICON
0801-003639	U4001	IC
1001-001755	U5000	IC
1001-001844	U1005	IC
1001-002046	U2005	IC
1001-002063	U1002	IC
1001-002065	U2000,U3001,U3003	IC
1003-003042	U8000	IC
1009-001074	U3015	IC
1009-001079	U3004,U3014	IC
1108-000662	UME6000	MEMORY
1201-003869	U3008	IC
1201-004029	U1001,U1003	IC
1201-004109	PAM1001	IC
1201-004200	U8431	IC
1201-004209	PAM1000	IC
1201-004229	U8002	IC
1203-007365	U8001	IC
1203-008249	U3000	IC
1203-008322	U7000	IC
1203-008859	U8004	IC
1203-008865	U7004	IC
1203-008867	U3012,U7010	IC
1203-008872	U6004,U7009	IC
1203-008989	U3002	IC
1203-009054	U6006	IC
1203-009220	U7007	IC
1203-009221	U7016	IC
1203-009227	U7002	IC
1203-009240	U2006	IC
1203-009248	U5002	IC

5. MAIN Electrical Parts List

1203-009253	U5007	IC
1203-009254	U5009	IC
1204-003781	U8426	IC
1205-005731	U3017	IC
1205-005833	U2003	IC
1205-006037	U4000	IC
1205-006115	U3010	IC
1205-006119	UCP400	IC
1209-002450	U3007	IC
1209-002513	U3006	IC
1209-002629	U3005	IC
1209-002649	U3011	IC
1404-001724	TH2000,TH3000,TH4000	THERMISTOR
1405-001403	V6002,V6004	VARISTOR
1405-001415	V2000,V2003,VR2002	VARISTOR
1405-001415	VR3000,VR3001	VARISTOR
1405-001416	V6000	VARISTOR
2007-003015	R6002,R6003	R-CHIP
2007-007099	R5011	R-CHIP
2007-007741	R2001,R3001,R4013	R-CHIP
2007-007741	R4032,R4035,R4036	R-CHIP
2007-007741	R4039,R5002,R6009	R-CHIP
2007-007741	R6012,R6015	R-CHIP
2007-008050	R3003,R3008	R-CHIP
2007-008054	R4043	R-CHIP
2007-008056	R1000,R1001	R-CHIP
2007-008263	R4041	R-CHIP
2007-008420	R4005,R5013	R-CHIP
2007-008516	R6004,R6005,R6006	R-CHIP
2007-008531	R4002,R7000,R7001	R-CHIP
2007-008588	R3005,R3006,R4003	R-CHIP
2007-008588	R4004,R4006,R4007	R-CHIP
2007-008588	R4008,R4009,R4010	R-CHIP
2007-008588	R4011,R4014,R4015	R-CHIP
2007-008588	R4016,R4017,R4018	R-CHIP
2007-008588	R4019,R4020,R4021	R-CHIP
2007-008588	R4022,R4023	R-CHIP
2007-008766	R4024,R4025	R-CHIP
2007-008785	R1004	R-CHIP

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

5. MAIN Electrical Parts List

2007-008798	R8000,R8001	R-CHIP
2007-008808	R7002	R-CHIP
2007-009111	R3000,R3004,R5000	R-CHIP
2007-009157	R4045,R5021	R-CHIP
2007-009171	R3007,R6014	R-CHIP
2007-009212	R4033,R4040,R5019	R-CHIP
2007-009212	R5020,R6020,R8014	R-CHIP
2007-009352	R4026,R6007,R8006	R-CHIP
2007-009352	R8007	R-CHIP
2007-009408	R4027,R4028,R6010	R-CHIP
2007-009408	R8004,R8005	R-CHIP
2007-009410	R8012	R-CHIP
2007-009801	R4037,R4038	R-CHIP
2007-009805	R1002,R1003,R2000	R-CHIP
2007-009805	R3002	R-CHIP
2007-009920	R4000,R6000,R6001	R-CHIP
2007-009954	R6008	R-CHIP
2007-009969	R3009,R3010	R-CHIP
2007-010202	R5010,R8015	R-CHIP
2007-010685	R4034	R-CHIP
2007-011043	R4044	R-CHIP
2007-011648	R8002,R8003,R8023	R-CHIP
2007-011648	R8024	R-CHIP
2203-000311	C3097,C3105	C-CERAMIC,CHIP
2203-000386	C3102	C-CERAMIC,CHIP
2203-001153	C3101	C-CERAMIC,CHIP
2203-005682	C2074,C2076,C2078	C-CERAMIC,CHIP
2203-005682	C4069,C4070,C6037	C-CERAMIC,CHIP
2203-005682	C6038,C6039	C-CERAMIC,CHIP
2203-005719	C1108	C-CERAMIC,CHIP
2203-005725	C1020	C-CERAMIC,CHIP
2203-005729	C7003	C-CERAMIC,CHIP
2203-005734	C1017,C1117,C1118	C-CERAMIC,CHIP
2203-005736	C1004,C1005,C1010	C-CERAMIC,CHIP
2203-005736	C1014,C1018,C1025	C-CERAMIC,CHIP
2203-005736	C1027,C1028,C1031	C-CERAMIC,CHIP
2203-005736	C1035,C1054,C1069	C-CERAMIC,CHIP
2203-005736	C1073,C1078,C2003	C-CERAMIC,CHIP
2203-005736	C2027,C2028,C2030	C-CERAMIC,CHIP

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

5. MAIN Electrical Parts List

2203-005736	C2031,C2032,C2035	C-CERAMIC,CHIP
2203-005736	C2047,C2053,C2070	C-CERAMIC,CHIP
2203-005736	C2080,C2081,C2082	C-CERAMIC,CHIP
2203-005736	C3003,C3005,C3009	C-CERAMIC,CHIP
2203-005736	C3025,C3061,C3062	C-CERAMIC,CHIP
2203-005736	C3068,C3069,C3071	C-CERAMIC,CHIP
2203-005736	C3077,C3111	C-CERAMIC,CHIP
2203-005740	C8030	C-CERAMIC,CHIP
2203-005777	C1012,C1032,C1033	C-CERAMIC,CHIP
2203-005777	C1074,C1106,C1112	C-CERAMIC,CHIP
2203-005777	C2004,C3006	C-CERAMIC,CHIP
2203-005789	C1001,C1015,C1022	C-CERAMIC,CHIP
2203-005789	C1034,C1036,C1044	C-CERAMIC,CHIP
2203-005789	C1047,C1050,C1071	C-CERAMIC,CHIP
2203-005789	C1075,C1082,C1084	C-CERAMIC,CHIP
2203-005789	C1115,C1116,C1119	C-CERAMIC,CHIP
2203-005789	C1120,C2001,L3026	C-CERAMIC,CHIP
2203-005792	C1046,C3002	C-CERAMIC,CHIP
2203-005806	C1097	C-CERAMIC,CHIP
2203-006047	C5021,C5063	C-CERAMIC,CHIP
2203-006120	C5120,C5121	C-CERAMIC,CHIP
2203-006305	C1093,C3010,C3012	C-CERAMIC,CHIP
2203-006305	C3076	C-CERAMIC,CHIP
2203-006318	C1045,C1068,C2040	C-CERAMIC,CHIP
2203-006318	C3000	C-CERAMIC,CHIP
2203-006400	C3067,C3098,C3100	C-CERAMIC,CHIP
2203-006400	C5087	C-CERAMIC,CHIP
2203-006410	C1067	C-CERAMIC,CHIP
2203-006426	C8010,C8012	C-CERAMIC,CHIP
2203-006556	C1061,C1062,C1096	C-CERAMIC,CHIP
2203-006611	C1081	C-CERAMIC,CHIP
2203-006648	C8121	C-CERAMIC,CHIP
2203-006665	C3079	C-CERAMIC,CHIP
2203-006674	C1016	C-CERAMIC,CHIP
2203-006839	C3087,C3094,C4067	C-CERAMIC,CHIP
2203-006839	C4080,C5027,C5091	C-CERAMIC,CHIP
2203-006839	C8001,C8006,C8129	C-CERAMIC,CHIP
2203-006846	C1066	C-CERAMIC,CHIP
2203-007143	C5001	C-CERAMIC,CHIP

5. MAIN Electrical Parts List

2203-007194	C3016,C3019	C-CERAMIC,CHIP
2203-007210	C3056,C3084,C4025	C-CERAMIC,CHIP
2203-007210	C4026,C4033,C4034	C-CERAMIC,CHIP
2203-007271	C1098,C1123,C7009	C-CERAMIC,CHIP
2203-007271	C7020	C-CERAMIC,CHIP
2203-007317	C3036,C3038,C3044	C-CERAMIC,CHIP
2203-007317	C5070,C5072,C5073	C-CERAMIC,CHIP
2203-007317	C5074,C5095,C5096	C-CERAMIC,CHIP
2203-007317	C5105,C5109,C5110	C-CERAMIC,CHIP
2203-007317	C5115,C5118,C6003	C-CERAMIC,CHIP
2203-007317	C6008,C7006,C7010	C-CERAMIC,CHIP
2203-007317	C7038,C7039,C7043	C-CERAMIC,CHIP
2203-007317	C8022,C8128	C-CERAMIC,CHIP
2203-007391	C3049,C3051,C3052	C-CERAMIC,CHIP
2203-007391	C3090,C8016	C-CERAMIC,CHIP
2203-007392	C8048,C8130	C-CERAMIC,CHIP
2203-007393	C2005,C2008,C2017	C-CERAMIC,CHIP
2203-007393	C2021,C2026,C2075	C-CERAMIC,CHIP
2203-007393	C3092,C3093,C6012	C-CERAMIC,CHIP
2203-007393	C6014,C6047,C6048	C-CERAMIC,CHIP
2203-007393	C7042,C8013	C-CERAMIC,CHIP
2203-007403	C2029	C-CERAMIC,CHIP
2203-007456	C5039	C-CERAMIC,CHIP
2203-007474	C4046,C5088,C5093	C-CERAMIC,CHIP
2203-007474	C7019	C-CERAMIC,CHIP
2203-007503	C8000	C-CERAMIC,CHIP
2203-007544	C3004,C3011,C3064	C-CERAMIC,CHIP
2203-007621	C1000,C1002,C1038	C-CERAMIC,CHIP
2203-007621	C2006,C2007,C2009	C-CERAMIC,CHIP
2203-007621	C2010,C2011,C2012	C-CERAMIC,CHIP
2203-007621	C2013,C2014,C2015	C-CERAMIC,CHIP
2203-007621	C2016,C2018,C2019	C-CERAMIC,CHIP
2203-007621	C2020,C2022,C2023	C-CERAMIC,CHIP
2203-007621	C2024,C2025,C2054	C-CERAMIC,CHIP
2203-007621	C2058,C3014,C3015	C-CERAMIC,CHIP
2203-007621	C3020,C3065,C3066	C-CERAMIC,CHIP
2203-007621	C3075,C3096,C3103	C-CERAMIC,CHIP
2203-007621	C4016,C4017,C5119	C-CERAMIC,CHIP
2203-007621	C7054	C-CERAMIC,CHIP

5. MAIN Electrical Parts List

2203-007687	C6043	C-CERAMIC,CHIP
2203-007796	C3007,C3008,C3023	C-CERAMIC,CHIP
2203-007796	C3037,C3081,C3082	C-CERAMIC,CHIP
2203-007796	C3083,C4002,C4003	C-CERAMIC,CHIP
2203-007796	C4004,C4005,C4006	C-CERAMIC,CHIP
2203-007796	C4007,C4008,C4009	C-CERAMIC,CHIP
2203-007796	C4010,C4011,C4013	C-CERAMIC,CHIP
2203-007796	C4014,C4015,C4019	C-CERAMIC,CHIP
2203-007796	C4020,C4021,C4023	C-CERAMIC,CHIP
2203-007796	C4024,C4027,C4028	C-CERAMIC,CHIP
2203-007796	C4030,C4031,C4032	C-CERAMIC,CHIP
2203-007796	C4037,C4038,C4039	C-CERAMIC,CHIP
2203-007796	C4040,C4041,C4042	C-CERAMIC,CHIP
2203-007796	C4044,C4045,C4047	C-CERAMIC,CHIP
2203-007796	C4048,C4050,C4052	C-CERAMIC,CHIP
2203-007796	C4053,C4054,C4055	C-CERAMIC,CHIP
2203-007796	C4056,C4061,C4063	C-CERAMIC,CHIP
2203-007796	C4064,C4065,C4066	C-CERAMIC,CHIP
2203-007796	C4068,C4073,C4074	C-CERAMIC,CHIP
2203-007796	C4076,C4077,C4078	C-CERAMIC,CHIP
2203-007796	C4081,C4085,C4086	C-CERAMIC,CHIP
2203-007796	C4087,C4093,C4094	C-CERAMIC,CHIP
2203-007796	C4095,C5049,C5064	C-CERAMIC,CHIP
2203-007796	C5065,C5066,C5067	C-CERAMIC,CHIP
2203-007796	C5068,C5069,C5071	C-CERAMIC,CHIP
2203-007796	C5075,C5084,C5089	C-CERAMIC,CHIP
2203-007796	C5094,C5097,C5098	C-CERAMIC,CHIP
2203-007796	C5099,C5102,C5103	C-CERAMIC,CHIP
2203-007796	C5104,C5106,C5108	C-CERAMIC,CHIP
2203-007796	C5111,C5113,C5117	C-CERAMIC,CHIP
2203-007796	C6000,C6002,C6005	C-CERAMIC,CHIP
2203-007796	C6006,C6007,C6009	C-CERAMIC,CHIP
2203-007796	C6013,C6015,C6016	C-CERAMIC,CHIP
2203-007796	C6020,C6022,C6024	C-CERAMIC,CHIP
2203-007796	C6025,C6028,C6029	C-CERAMIC,CHIP
2203-007796	C6030,C6032,C6035	C-CERAMIC,CHIP
2203-007796	C6036,C7004,C7011	C-CERAMIC,CHIP
2203-007796	C7015,C7021,C7022	C-CERAMIC,CHIP
2203-007796	C7041,C7059,C8015	C-CERAMIC,CHIP

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

5. MAIN Electrical Parts List

2203-007796	C8033,C8034,C8040	C-CERAMIC,CHIP
2203-007796	C8049,C8050,C8052	C-CERAMIC,CHIP
2203-007796	C8053,C8122,C8123	C-CERAMIC,CHIP
2203-007796	C8124	C-CERAMIC,CHIP
2203-008095	C4000	C-CERAMIC,CHIP
2203-008097	C1056,C1060,C1063	C-CERAMIC,CHIP
2203-008097	C5032,C5050,C8018	C-CERAMIC,CHIP
2203-008242	C3053,C3086,C3088	C-CERAMIC,CHIP
2203-008242	C6017,C6018,C7007	C-CERAMIC,CHIP
2203-008242	C7023,C7053	C-CERAMIC,CHIP
2203-008243	C8023	C-CERAMIC,CHIP
2203-008394	C1053	C-CERAMIC,CHIP
2203-008400	C1049,C1104,C2063	C-CERAMIC,CHIP
2203-008400	C3039,C3040,C3041	C-CERAMIC,CHIP
2203-008400	C3043,C3045,C3046	C-CERAMIC,CHIP
2203-008400	C3047,C3054,C3055	C-CERAMIC,CHIP
2203-008400	C3057,C3058,C3059	C-CERAMIC,CHIP
2203-008400	C3060	C-CERAMIC,CHIP
2203-008403	C3001,C3030,C3032	C-CERAMIC,CHIP
2203-008403	C8025,C8029	C-CERAMIC,CHIP
2203-008463	C1003,C1013,C7001	C-CERAMIC,CHIP
2203-008466	C1023,C2046,C2057	C-CERAMIC,CHIP
2203-008572	C5024,C5045	C-CERAMIC,CHIP
2203-008654	C6042	C-CERAMIC,CHIP
2203-008749	C5056	C-CERAMIC,CHIP
2203-008844	C7033	C-CERAMIC,CHIP
2203-008860	C1101,C2059,C3022	C-CERAMIC,CHIP
2203-008860	C3085,C5000,C5017	C-CERAMIC,CHIP
2203-008860	C5022,C5026,C5028	C-CERAMIC,CHIP
2203-008860	C5029,C5030,C5031	C-CERAMIC,CHIP
2203-008860	C5037,C5042,C5046	C-CERAMIC,CHIP
2203-008860	C5047,C5048,C5051	C-CERAMIC,CHIP
2203-008860	C5053,C5076,C5077	C-CERAMIC,CHIP
2203-008860	C5079,C5081,C5090	C-CERAMIC,CHIP
2203-008860	C5092,C6010,C6019	C-CERAMIC,CHIP
2203-008860	C6023,C6027,C6051	C-CERAMIC,CHIP
2203-008860	C7014,C7028,C7035	C-CERAMIC,CHIP
2203-008860	C7058,C8017,C8027	C-CERAMIC,CHIP
2203-008860	C8035	C-CERAMIC,CHIP

5. MAIN Electrical Parts List

2203-008876	C3089,C3091,C6026	C-CERAMIC,CHIP
2203-008876	C6033,C6034,C7018	C-CERAMIC,CHIP
2203-008876	C7026,C7036,C7044	C-CERAMIC,CHIP
2203-008876	C7050,C7051,C7055	C-CERAMIC,CHIP
2203-008876	C7056,C7136,C8042	C-CERAMIC,CHIP
2203-009064	C4018,C4029,C4035	C-CERAMIC,CHIP
2203-009064	C4036,C4079,C4083	C-CERAMIC,CHIP
2203-009064	C4084	C-CERAMIC,CHIP
2203-009167	C3099,C3104	C-CERAMIC,CHIP
2203-009444	C8038	C-CERAMIC,CHIP
2203-009618	C5016,C5018,C5019	C-CERAMIC,CHIP
2203-009618	C5020,C7061,C8004	C-CERAMIC,CHIP
2203-009618	C8011,C8019,C8037	C-CERAMIC,CHIP
2203-009733	C5004,C5008,C5010	C-CERAMIC,CHIP
2203-009733	C5011,C5034,C5035	C-CERAMIC,CHIP
2203-009733	C5038,C5040,C5041	C-CERAMIC,CHIP
2203-009733	C5043,C5044,C5052	C-CERAMIC,CHIP
2203-009733	C5054,C5057,C5060	C-CERAMIC,CHIP
2203-009733	C5061,C5062,C5078	C-CERAMIC,CHIP
2203-009733	C5082,C5086,C7008	C-CERAMIC,CHIP
2203-009733	C7012,C7013,C7016	C-CERAMIC,CHIP
2203-009733	C7017,C7071,C7072	C-CERAMIC,CHIP
2203-009733	C7073,C7074,C7075	C-CERAMIC,CHIP
2203-009733	C7076,C7078,C7079	C-CERAMIC,CHIP
2203-009733	C7080,C7081,C7082	C-CERAMIC,CHIP
2203-009734	C6021	C-CERAMIC,CHIP
2203-009735	C4057,C4058	C-CERAMIC,CHIP
2203-009858	C1064,C2060,C5036	C-CERAMIC,CHIP
2203-009858	C7027,C7062,C7063	C-CERAMIC,CHIP
2203-009858	C7064,C7065,C7066	C-CERAMIC,CHIP
2203-009858	C7067,C7068,C8007	C-CERAMIC,CHIP
2203-009858	C8055	C-CERAMIC,CHIP
2203-009859	C7005,C8020	C-CERAMIC,CHIP
2203-010066	C5025,C6046	C-CERAMIC,CHIP
2203-010085	C4001,C4012,C5080	C-CERAMIC,CHIP
2703-002649	L1032,L1045,L1070	INDUCTOR-SMD
2703-002901	L2008,L3019	INDUCTOR-SMD
2703-002903	L1004,L3018,L3025	INDUCTOR-SMD
2703-002907	L1027,L3027	INDUCTOR-SMD

5. MAIN Electrical Parts List

2703-002951	L1021,L2014,L3032	INDUCTOR-SMD
2703-002953	L1025	INDUCTOR-SMD
2703-002955	L3007	INDUCTOR-SMD
2703-002958	L1020,L1026	INDUCTOR-SMD
2703-002959	L2013,L3036,L8009	INDUCTOR-SMD
2703-002961	L6003	INDUCTOR-SMD
2703-002999	L1029,L2009	INDUCTOR-SMD
2703-004001	L1017,L2000	INDUCTOR-SMD
2703-004012	L1033,L1051,L2016	INDUCTOR-SMD
2703-004013	L1006,L2041,L3010	INDUCTOR-SMD
2703-004013	L3011	INDUCTOR-SMD
2703-004014	L1010,L1016,L1041	INDUCTOR-SMD
2703-004014	L2036,L3006,L3014	INDUCTOR-SMD
2703-004014	L3015,L3017	INDUCTOR-SMD
2703-004018	L1037	INDUCTOR-SMD
2703-004034	L2012,L2033	INDUCTOR-SMD
2703-004037	L2005,L2010,L2021	INDUCTOR-SMD
2703-004038	L1013,L1042,L1077	INDUCTOR-SMD
2703-004038	L2024,L2031,L2032	INDUCTOR-SMD
2703-004038	L2040	INDUCTOR-SMD
2703-004193	L6004,L6005	INDUCTOR-SMD
2703-004286	L1002,L1031,L1036	INDUCTOR-SMD
2703-004286	L1038,L1063,L1065	INDUCTOR-SMD
2703-004286	L1079,L2004,L2020	INDUCTOR-SMD
2703-004286	L2025,L2027,L2028	INDUCTOR-SMD
2703-004287	L1007,L1024,L1039	INDUCTOR-SMD
2703-004287	L2003,L2023,L2026	INDUCTOR-SMD
2703-004288	L1005,L1011,L1028	INDUCTOR-SMD
2703-004288	L1034,L1056,L1078	INDUCTOR-SMD
2703-004288	L2002,L2018,L2037	INDUCTOR-SMD
2703-004288	L3034	INDUCTOR-SMD
2703-004289	L3016	INDUCTOR-SMD
2703-004299	L3012	INDUCTOR-SMD
2703-004302	L1003,L1019,L1055	INDUCTOR-SMD
2703-004302	L3001,L3003,L3013	INDUCTOR-SMD
2703-004302	L6001,L6002	INDUCTOR-SMD
2703-004317	L2034	INDUCTOR-SMD
2703-004328	L1043,L3022,L3033	INDUCTOR-SMD
2703-004362	L2029	INDUCTOR-SMD

5. MAIN Electrical Parts List

2703-004368	L1014,L1018,L1022	INDUCTOR-SMD
2703-004703	L2011	INDUCTOR-SMD
2703-004763	L1080	INDUCTOR-SMD
2703-004853	L2006,L3037	INDUCTOR-SMD
2703-004862	L1030,L1035	INDUCTOR-SMD
2703-005098	L2030	INDUCTOR-SMD
2703-005224	L7009	INDUCTOR-SMD
2703-005295	L2022	INDUCTOR-SMD
2703-005418	L7006	INDUCTOR-SMD
2703-005419	L7007	INDUCTOR-SMD
2703-005445	L2019	INDUCTOR-SMD
2703-005505	L7003,L8002,L8003	INDUCTOR-SMD
2703-005505	L8008	INDUCTOR-SMD
2703-005555	L3042,L3045	INDUCTOR-SMD
2703-005581	L5001,L5002,L5005	INDUCTOR-SMD
2703-005581	L5006,L5007,L5009	INDUCTOR-SMD
2703-005581	L5012,L5013,L5014	INDUCTOR-SMD
2703-005660	L5000,L5003,L5004	INDUCTOR-SMD
2703-005660	L5008,L5010	INDUCTOR-SMD
2703-005738	L5011	INDUCTOR-SMD
2801-005481	OSC5000	CRYSTAL-UNIT
2901-001690	C4059	FILTER-EMI SMD
2903-001576	F3000,F3001	FILTER-CERAMIC
2904-002143	F1012	FILTER-SAW
2904-002257	F2005	FILTER-SAW
2904-002285	F1006	FILTER-SAW
2904-002326	F2006	FILTER-SAW
2904-002339	F2003	FILTER-SAW
2904-002356	F3006,F3007	FILTER-SAW
2904-002381	F3003,F3004	FILTER-SAW
2904-002397	F1005,F2004	FILTER-SAW
2910-000401	F1011	FILTER
2911-000435	U2007	FILTER
2911-000458	U1004	FILTER
3301-002122	L7013,L8000,L8001	CORE-FERRITE BEAD
3301-002223	L7000,L7001	CORE-FERRITE BEAD
3301-002236	L7004,L7011,L7012	CORE-FERRITE BEAD
3301-002236	L7014	CORE-FERRITE BEAD
3301-002237	L1000,L1001	CORE-FERRITE BEAD

5. MAIN Electrical Parts List

3301-002238	L3000,L3031	CORE-FERRITE BEAD
3301-002286	L3043,L3044	CORE-FERRITE BEAD
3301-002312	L7005,L7008,L7010	CORE-FERRITE BEAD
3301-002331	L7002	CORE-FERRITE BEAD
3301-002336	L6000	CORE-FERRITE BEAD
3705-001937	RFS1000,RFS1001	CONNECTOR-COAXIAL
3705-001937	RFS2000	CONNECTOR-COAXIAL
3710-004008	SOC5000	CONNECTOR-SOCKET
3710-004109	HEA8000	CONNECTOR-SOCKET
3710-004285	SOC6000	CONNECTOR-SOCKET
3710-004367	SOC7000,SOC7001	CONNECTOR-SOCKET
3712-001694	ANT2001,ANT2002	CONNECTOR
3712-001694	ANT2003,ANT2004	CONNECTOR
3712-001694	ANT3002,ANT6000	CONNECTOR
3712-001694	ANT6001,ANT6002	CONNECTOR
3712-001694	ANT6003,ANT6007	CONNECTOR
3712-001694	ANT8000,ANT8001	CONNECTOR
3712-001731	ANT2000	CONNECTOR
3712-001749	ANT2005,ANT3000	CONNECTOR
3712-001749	ANT3001,ANT3003	CONNECTOR
3712-001749	ANT3006	CONNECTOR
4709-002226	F1000,F2002	RF-MODULE
4709-002285	F3002,F3008	RF-MODULE
4709-002351	F3005	RF-MODULE
4709-002589	F1004	RF-MODULE
GH63-17218A	SC6001	SC- AP
GH63-17219A	SC6003	SC -RF
GH63-17220A	SC6002	SC- PMIC
GH63-17221A	SC6000	SC -WIFI
rf-A90_AP_TAPE	SC6001SP	AP_TAPE

5. MAIN Electrical Parts List

[SM-A8050]

Part Code	Design LOC	Description
0404-001250	D6000	DIODE-SCHOTTKY
0406-001592	ZD4002	DIODE-TVS
0406-001728	ZD1000,ZD5000	DIODE-TVS
0406-001809	ZD6003,ZD6004	DIODE-TVS
0406-001829	ZD5001	DIODE-TVS
0505-003234	Q5002,TR5001	FET-SILICON
0505-003618	TR4001	FET-SILICON
0801-003639	U4001	IC
1001-001755	U5000	IC
1001-001844	U1005	IC
1001-002046	U2005	IC
1001-002063	U1002	IC
1001-002065	U2000,U3001,U3003	IC
1003-002805	U3013	IC
1003-003042	U8000	IC
1009-001074	U3015	IC
1009-001079	U3004,U3014	IC
1108-000662	UME6000	MEMORY
1201-003869	U3008	IC
1201-004029	U1001,U1003	IC
1201-004109	PAM1001	IC
1201-004200	U8431	IC
1201-004209	PAM1000	IC
1201-004229	U8002	IC
1203-007365	U8001	IC
1203-008249	U3000	IC
1203-008322	U7000	IC
1203-008859	U8004	IC
1203-008865	U7004	IC
1203-008867	U3012,U7010	IC
1203-008872	U6004,U7009	IC
1203-008989	U3002	IC
1203-009054	U6006	IC
1203-009220	U7007	IC
1203-009221	U7016	IC
1203-009227	U7002	IC
1203-009240	U2006	IC

5. MAIN Electrical Parts List

1203-009248	U5002	IC
1203-009253	U5007	IC
1203-009254	U5009	IC
1204-003781	U8426	IC
1205-005731	U3017	IC
1205-005833	U2003	IC
1205-006037	U4000	IC
1205-006115	U3010	IC
1205-006119	UCP400	IC
1209-002450	U3007	IC
1209-002513	U3006	IC
1209-002629	U3005	IC
1209-002649	U3011	IC
1404-001724	TH2000,TH3000,TH4000	THERMISTOR
1405-001403	V6002,V6004	VARISTOR
1405-001415	V2000,V2003,VR2002	VARISTOR
1405-001415	VR3000,VR3001	VARISTOR
1405-001416	V6000	VARISTOR
2007-003015	R6002,R6003	R-CHIP
2007-007099	R5011	R-CHIP
2007-007741	R2001,R3001,R4012	R-CHIP
2007-007741	R4032,R4035,R4036	R-CHIP
2007-007741	R4039,R5002,R6009	R-CHIP
2007-007741	R6012,R6015	R-CHIP
2007-008050	R3003,R3008	R-CHIP
2007-008054	R4043	R-CHIP
2007-008056	R1000,R1001	R-CHIP
2007-008263	R4041	R-CHIP
2007-008420	R4005,R5013	R-CHIP
2007-008516	R6004,R6005,R6006	R-CHIP
2007-008531	R4002,R7000,R7001	R-CHIP
2007-008588	R3005,R3006,R4003	R-CHIP
2007-008588	R4004,R4006,R4007	R-CHIP
2007-008588	R4008,R4009,R4010	R-CHIP
2007-008588	R4011,R4014,R4015	R-CHIP
2007-008588	R4016,R4017,R4018	R-CHIP
2007-008588	R4019,R4020,R4021	R-CHIP
2007-008588	R4022,R4023	R-CHIP
2007-008766	R4024,R4025	R-CHIP

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

5. MAIN Electrical Parts List

2007-008785	R1004	R-CHIP
2007-008798	R8000,R8001	R-CHIP
2007-008808	R7002	R-CHIP
2007-009111	R3000,R3004,R5000	R-CHIP
2007-009157	R4045,R5021	R-CHIP
2007-009171	R3007,R6014	R-CHIP
2007-009212	R4033,R4040,R5019	R-CHIP
2007-009212	R5020,R6020,R8014	R-CHIP
2007-009352	R4026,R6007,R8006	R-CHIP
2007-009352	R8007	R-CHIP
2007-009408	R4027,R4028,R6010	R-CHIP
2007-009408	R8004,R8005	R-CHIP
2007-009410	R8012	R-CHIP
2007-009801	R4037,R4038	R-CHIP
2007-009805	R1002,R1003,R2000	R-CHIP
2007-009805	R3002	R-CHIP
2007-009920	R4000,R6000,R6001	R-CHIP
2007-009954	R6008	R-CHIP
2007-009969	R3009,R3010	R-CHIP
2007-010202	R5010,R8015	R-CHIP
2007-010685	R4034	R-CHIP
2007-011043	R4044	R-CHIP
2007-011648	R8002,R8003,R8023	R-CHIP
2007-011648	R8024	R-CHIP
2203-000311	C3097,C3105	C-CERAMIC,CHIP
2203-000330	C3102	C-CERAMIC,CHIP
2203-001153	C3101	C-CERAMIC,CHIP
2203-005682	C2074,C2076,C2078	C-CERAMIC,CHIP
2203-005682	C4069,C4070,C6037	C-CERAMIC,CHIP
2203-005682	C6038,C6039	C-CERAMIC,CHIP
2203-005719	C1108	C-CERAMIC,CHIP
2203-005725	C1020	C-CERAMIC,CHIP
2203-005729	C7003	C-CERAMIC,CHIP
2203-005734	C1017,C1117,C1118	C-CERAMIC,CHIP
2203-005736	C1004,C1005,C1010	C-CERAMIC,CHIP
2203-005736	C1014,C1018,C1025	C-CERAMIC,CHIP
2203-005736	C1027,C1028,C1031	C-CERAMIC,CHIP
2203-005736	C1035,C1054,C1069	C-CERAMIC,CHIP
2203-005736	C1073,C1078,C2003	C-CERAMIC,CHIP

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

5. MAIN Electrical Parts List

2203-005736	C2027,C2028,C2030	C-CERAMIC,CHIP
2203-005736	C2031,C2032,C2035	C-CERAMIC,CHIP
2203-005736	C2047,C2053,C2070	C-CERAMIC,CHIP
2203-005736	C2080,C2081,C2082	C-CERAMIC,CHIP
2203-005736	C3003,C3005,C3009	C-CERAMIC,CHIP
2203-005736	C3025,C3061,C3062	C-CERAMIC,CHIP
2203-005736	C3068,C3069,C3071	C-CERAMIC,CHIP
2203-005736	C3077,C3111	C-CERAMIC,CHIP
2203-005740	C8030	C-CERAMIC,CHIP
2203-005777	C1012,C1032,C1033	C-CERAMIC,CHIP
2203-005777	C1074,C1106,C1112	C-CERAMIC,CHIP
2203-005777	C2004,C3006	C-CERAMIC,CHIP
2203-005789	C1001,C1015,C1022	C-CERAMIC,CHIP
2203-005789	C1034,C1036,C1044	C-CERAMIC,CHIP
2203-005789	C1047,C1050,C1071	C-CERAMIC,CHIP
2203-005789	C1075,C1082,C1084	C-CERAMIC,CHIP
2203-005789	C1115,C1116,C1119	C-CERAMIC,CHIP
2203-005789	C1120,C2001,L3026	C-CERAMIC,CHIP
2203-005792	C1046,C3002	C-CERAMIC,CHIP
2203-005806	C1097	C-CERAMIC,CHIP
2203-006047	C5021,C5063	C-CERAMIC,CHIP
2203-006120	C5120,C5121	C-CERAMIC,CHIP
2203-006305	C1093,C3010,C3012	C-CERAMIC,CHIP
2203-006305	C3076	C-CERAMIC,CHIP
2203-006318	C1045,C1068,C2040	C-CERAMIC,CHIP
2203-006318	C3000	C-CERAMIC,CHIP
2203-006400	C3067,C3098,C3100	C-CERAMIC,CHIP
2203-006400	C5087	C-CERAMIC,CHIP
2203-006410	C1067	C-CERAMIC,CHIP
2203-006426	C8010,C8012	C-CERAMIC,CHIP
2203-006556	C1061,C1062,C1096	C-CERAMIC,CHIP
2203-006611	C1081	C-CERAMIC,CHIP
2203-006648	C8121	C-CERAMIC,CHIP
2203-006665	C3079	C-CERAMIC,CHIP
2203-006674	C1016	C-CERAMIC,CHIP
2203-006839	C3087,C3094,C3108	C-CERAMIC,CHIP
2203-006839	C4067,C4080,C5027	C-CERAMIC,CHIP
2203-006839	C5091,C8001,C8006	C-CERAMIC,CHIP
2203-006839	C8129	C-CERAMIC,CHIP

5. MAIN Electrical Parts List

2203-006846	C1066	C-CERAMIC,CHIP
2203-007143	C5001	C-CERAMIC,CHIP
2203-007194	C3016,C3019	C-CERAMIC,CHIP
2203-007210	C3056,C3084,C4025	C-CERAMIC,CHIP
2203-007210	C4026,C4033,C4034	C-CERAMIC,CHIP
2203-007271	C1098,C1123,C7009	C-CERAMIC,CHIP
2203-007271	C7020	C-CERAMIC,CHIP
2203-007317	C3036,C3038,C3044	C-CERAMIC,CHIP
2203-007317	C5070,C5072,C5073	C-CERAMIC,CHIP
2203-007317	C5074,C5095,C5096	C-CERAMIC,CHIP
2203-007317	C5105,C5109,C5110	C-CERAMIC,CHIP
2203-007317	C5115,C5118,C6003	C-CERAMIC,CHIP
2203-007317	C6008,C7006,C7010	C-CERAMIC,CHIP
2203-007317	C7038,C7039,C7043	C-CERAMIC,CHIP
2203-007317	C8022,C8128	C-CERAMIC,CHIP
2203-007391	C3049,C3051,C3052	C-CERAMIC,CHIP
2203-007391	C3090,C8016	C-CERAMIC,CHIP
2203-007392	C8048,C8130	C-CERAMIC,CHIP
2203-007393	C2005,C2008,C2017	C-CERAMIC,CHIP
2203-007393	C2021,C2026,C2075	C-CERAMIC,CHIP
2203-007393	C3092,C3093,C6012	C-CERAMIC,CHIP
2203-007393	C6014,C6047,C6048	C-CERAMIC,CHIP
2203-007393	C7042,C8013	C-CERAMIC,CHIP
2203-007403	C2029	C-CERAMIC,CHIP
2203-007456	C5039	C-CERAMIC,CHIP
2203-007474	C4046,C5088,C5093	C-CERAMIC,CHIP
2203-007474	C7019	C-CERAMIC,CHIP
2203-007503	C8000	C-CERAMIC,CHIP
2203-007544	C3004,C3011,C3064	C-CERAMIC,CHIP
2203-007621	C1000,C1002,C1038	C-CERAMIC,CHIP
2203-007621	C2006,C2007,C2009	C-CERAMIC,CHIP
2203-007621	C2010,C2011,C2012	C-CERAMIC,CHIP
2203-007621	C2013,C2014,C2015	C-CERAMIC,CHIP
2203-007621	C2016,C2018,C2019	C-CERAMIC,CHIP
2203-007621	C2020,C2022,C2023	C-CERAMIC,CHIP
2203-007621	C2024,C2025,C2054	C-CERAMIC,CHIP
2203-007621	C2058,C3014,C3015	C-CERAMIC,CHIP
2203-007621	C3020,C3065,C3066	C-CERAMIC,CHIP
2203-007621	C3075,C3096,C3103	C-CERAMIC,CHIP

5. MAIN Electrical Parts List

2203-007621	C4016,C4017,C5119	C-CERAMIC,CHIP
2203-007621	C7054	C-CERAMIC,CHIP
2203-007687	C6043	C-CERAMIC,CHIP
2203-007796	C3007,C3008,C3023	C-CERAMIC,CHIP
2203-007796	C3037,C3081,C3082	C-CERAMIC,CHIP
2203-007796	C3083,C4002,C4003	C-CERAMIC,CHIP
2203-007796	C4004,C4005,C4006	C-CERAMIC,CHIP
2203-007796	C4007,C4008,C4009	C-CERAMIC,CHIP
2203-007796	C4010,C4011,C4013	C-CERAMIC,CHIP
2203-007796	C4014,C4015,C4019	C-CERAMIC,CHIP
2203-007796	C4020,C4021,C4023	C-CERAMIC,CHIP
2203-007796	C4024,C4027,C4028	C-CERAMIC,CHIP
2203-007796	C4030,C4031,C4032	C-CERAMIC,CHIP
2203-007796	C4037,C4038,C4039	C-CERAMIC,CHIP
2203-007796	C4040,C4041,C4042	C-CERAMIC,CHIP
2203-007796	C4044,C4045,C4047	C-CERAMIC,CHIP
2203-007796	C4048,C4050,C4052	C-CERAMIC,CHIP
2203-007796	C4053,C4054,C4055	C-CERAMIC,CHIP
2203-007796	C4056,C4061,C4063	C-CERAMIC,CHIP
2203-007796	C4064,C4065,C4066	C-CERAMIC,CHIP
2203-007796	C4068,C4073,C4074	C-CERAMIC,CHIP
2203-007796	C4076,C4077,C4078	C-CERAMIC,CHIP
2203-007796	C4081,C4085,C4086	C-CERAMIC,CHIP
2203-007796	C4087,C4093,C4094	C-CERAMIC,CHIP
2203-007796	C4095,C5049,C5064	C-CERAMIC,CHIP
2203-007796	C5065,C5066,C5067	C-CERAMIC,CHIP
2203-007796	C5068,C5069,C5071	C-CERAMIC,CHIP
2203-007796	C5075,C5084,C5089	C-CERAMIC,CHIP
2203-007796	C5094,C5097,C5098	C-CERAMIC,CHIP
2203-007796	C5099,C5102,C5103	C-CERAMIC,CHIP
2203-007796	C5104,C5106,C5108	C-CERAMIC,CHIP
2203-007796	C5111,C5113,C5117	C-CERAMIC,CHIP
2203-007796	C6000,C6002,C6005	C-CERAMIC,CHIP
2203-007796	C6006,C6007,C6009	C-CERAMIC,CHIP
2203-007796	C6013,C6015,C6016	C-CERAMIC,CHIP
2203-007796	C6020,C6022,C6024	C-CERAMIC,CHIP
2203-007796	C6025,C6028,C6029	C-CERAMIC,CHIP
2203-007796	C6030,C6032,C6035	C-CERAMIC,CHIP
2203-007796	C6036,C7004,C7011	C-CERAMIC,CHIP

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

5. MAIN Electrical Parts List

2203-007796	C7015,C7021,C7022	C-CERAMIC,CHIP
2203-007796	C7041,C7059,C8015	C-CERAMIC,CHIP
2203-007796	C8033,C8034,C8040	C-CERAMIC,CHIP
2203-007796	C8049,C8050,C8052	C-CERAMIC,CHIP
2203-007796	C8053,C8122,C8123	C-CERAMIC,CHIP
2203-007796	C8124	C-CERAMIC,CHIP
2203-008095	C4000	C-CERAMIC,CHIP
2203-008097	C1056,C1060,C1063	C-CERAMIC,CHIP
2203-008097	C5032,C5050,C8018	C-CERAMIC,CHIP
2203-008242	C3053,C3086,C3088	C-CERAMIC,CHIP
2203-008242	C6017,C6018,C7007	C-CERAMIC,CHIP
2203-008242	C7023,C7053	C-CERAMIC,CHIP
2203-008243	C8023	C-CERAMIC,CHIP
2203-008386	C3080	C-CERAMIC,CHIP
2203-008394	C1053	C-CERAMIC,CHIP
2203-008400	C1049,C1104,C2063	C-CERAMIC,CHIP
2203-008400	C3039,C3040,C3041	C-CERAMIC,CHIP
2203-008400	C3043,C3045,C3046	C-CERAMIC,CHIP
2203-008400	C3047,C3054,C3055	C-CERAMIC,CHIP
2203-008400	C3057,C3058,C3059	C-CERAMIC,CHIP
2203-008400	C3060	C-CERAMIC,CHIP
2203-008403	C3001,C3030,C3032	C-CERAMIC,CHIP
2203-008403	C8025,C8029	C-CERAMIC,CHIP
2203-008463	C1003,C1013,C7001	C-CERAMIC,CHIP
2203-008466	C1023,C2046,C2057	C-CERAMIC,CHIP
2203-008529	C3073	C-CERAMIC,CHIP
2203-008572	C5024,C5045	C-CERAMIC,CHIP
2203-008654	C6042	C-CERAMIC,CHIP
2203-008749	C5056	C-CERAMIC,CHIP
2203-008844	C7033	C-CERAMIC,CHIP
2203-008860	C1101,C2059,C3022	C-CERAMIC,CHIP
2203-008860	C3085,C5000,C5017	C-CERAMIC,CHIP
2203-008860	C5022,C5026,C5028	C-CERAMIC,CHIP
2203-008860	C5029,C5030,C5031	C-CERAMIC,CHIP
2203-008860	C5037,C5042,C5046	C-CERAMIC,CHIP
2203-008860	C5047,C5048,C5051	C-CERAMIC,CHIP
2203-008860	C5053,C5076,C5077	C-CERAMIC,CHIP
2203-008860	C5079,C5081,C5090	C-CERAMIC,CHIP
2203-008860	C5092,C6010,C6019	C-CERAMIC,CHIP

5. MAIN Electrical Parts List

2203-008860	C6023,C6027,C6051	C-CERAMIC,CHIP
2203-008860	C7014,C7028,C7035	C-CERAMIC,CHIP
2203-008860	C7058,C8017,C8027	C-CERAMIC,CHIP
2203-008860	C8035	C-CERAMIC,CHIP
2203-008876	C3089,C3091,C6026	C-CERAMIC,CHIP
2203-008876	C6033,C6034,C7018	C-CERAMIC,CHIP
2203-008876	C7026,C7036,C7044	C-CERAMIC,CHIP
2203-008876	C7050,C7051,C7055	C-CERAMIC,CHIP
2203-008876	C7056,C7136,C8042	C-CERAMIC,CHIP
2203-009064	C4018,C4029,C4035	C-CERAMIC,CHIP
2203-009064	C4036,C4079,C4083	C-CERAMIC,CHIP
2203-009064	C4084	C-CERAMIC,CHIP
2203-009167	C3099,C3104	C-CERAMIC,CHIP
2203-009444	C8038	C-CERAMIC,CHIP
2203-009618	C5016,C5018,C5019	C-CERAMIC,CHIP
2203-009618	C5020,C7061,C8004	C-CERAMIC,CHIP
2203-009618	C8011,C8019,C8037	C-CERAMIC,CHIP
2203-009733	C5004,C5008,C5010	C-CERAMIC,CHIP
2203-009733	C5011,C5034,C5035	C-CERAMIC,CHIP
2203-009733	C5038,C5040,C5041	C-CERAMIC,CHIP
2203-009733	C5043,C5044,C5052	C-CERAMIC,CHIP
2203-009733	C5054,C5057,C5060	C-CERAMIC,CHIP
2203-009733	C5061,C5062,C5078	C-CERAMIC,CHIP
2203-009733	C5082,C5086,C7008	C-CERAMIC,CHIP
2203-009733	C7012,C7013,C7016	C-CERAMIC,CHIP
2203-009733	C7017,C7071,C7072	C-CERAMIC,CHIP
2203-009733	C7073,C7074,C7075	C-CERAMIC,CHIP
2203-009733	C7076,C7078,C7079	C-CERAMIC,CHIP
2203-009733	C7080,C7081,C7082	C-CERAMIC,CHIP
2203-009734	C6021	C-CERAMIC,CHIP
2203-009735	C4057,C4058	C-CERAMIC,CHIP
2203-009858	C1064,C2060,C5036	C-CERAMIC,CHIP
2203-009858	C7027,C7062,C7063	C-CERAMIC,CHIP
2203-009858	C7064,C7065,C7066	C-CERAMIC,CHIP
2203-009858	C7067,C7068,C8007	C-CERAMIC,CHIP
2203-009858	C8055	C-CERAMIC,CHIP
2203-009859	C7005,C8020	C-CERAMIC,CHIP
2203-010066	C5025,C6046	C-CERAMIC,CHIP
2203-010085	C4001,C4012,C5080	C-CERAMIC,CHIP

5. MAIN Electrical Parts List

2409-001400	TA3000	CAPACITOR
2703-002649	L1032,L1045,L1070	INDUCTOR-SMD
2703-002901	L2008,L3019	INDUCTOR-SMD
2703-002903	L1004,L3018,L3025	INDUCTOR-SMD
2703-002907	L1027,L3027	INDUCTOR-SMD
2703-002951	L1021,L2014,L3032	INDUCTOR-SMD
2703-002953	L1025	INDUCTOR-SMD
2703-002955	L3007	INDUCTOR-SMD
2703-002958	L1020,L1026	INDUCTOR-SMD
2703-002959	L2013,L3036,L8009	INDUCTOR-SMD
2703-002961	L6003	INDUCTOR-SMD
2703-002999	L1029,L2009	INDUCTOR-SMD
2703-004001	L1017,L2000	INDUCTOR-SMD
2703-004012	L1033,L1051,L2016	INDUCTOR-SMD
2703-004013	L1006,L2041,L3010	INDUCTOR-SMD
2703-004013	L3011	INDUCTOR-SMD
2703-004014	L1010,L1016,L1041	INDUCTOR-SMD
2703-004014	L2036,L3006,L3014	INDUCTOR-SMD
2703-004014	L3015,L3017	INDUCTOR-SMD
2703-004018	L1037	INDUCTOR-SMD
2703-004034	L2012,L2033	INDUCTOR-SMD
2703-004037	L2005,L2010,L2021	INDUCTOR-SMD
2703-004038	L1013,L1042,L1077	INDUCTOR-SMD
2703-004038	L2024,L2031,L2032	INDUCTOR-SMD
2703-004038	L2040	INDUCTOR-SMD
2703-004193	L6004,L6005	INDUCTOR-SMD
2703-004286	L1002,L1031,L1036	INDUCTOR-SMD
2703-004286	L1038,L1063,L1065	INDUCTOR-SMD
2703-004286	L1079,L2004,L2020	INDUCTOR-SMD
2703-004286	L2025,L2027,L2028	INDUCTOR-SMD
2703-004287	L1007,L1024,L1039	INDUCTOR-SMD
2703-004287	L2003,L2023,L2026	INDUCTOR-SMD
2703-004288	L1005,L1011,L1028	INDUCTOR-SMD
2703-004288	L1034,L1056,L1078	INDUCTOR-SMD
2703-004288	L2002,L2018,L2037	INDUCTOR-SMD
2703-004288	L3034	INDUCTOR-SMD
2703-004289	L3016	INDUCTOR-SMD
2703-004299	L3012	INDUCTOR-SMD
2703-004302	L1003,L1019,L1055	INDUCTOR-SMD

5. MAIN Electrical Parts List

2703-004302	L3001,L3003,L3013	INDUCTOR-SMD
2703-004302	L6001,L6002	INDUCTOR-SMD
2703-004317	L2034	INDUCTOR-SMD
2703-004328	L1043,L3022,L3033	INDUCTOR-SMD
2703-004362	L2029	INDUCTOR-SMD
2703-004368	L1014,L1018,L1022	INDUCTOR-SMD
2703-004703	L2011	INDUCTOR-SMD
2703-004763	L1080	INDUCTOR-SMD
2703-004853	L2006,L3037	INDUCTOR-SMD
2703-004862	L1030,L1035	INDUCTOR-SMD
2703-005098	L2030	INDUCTOR-SMD
2703-005224	L7009	INDUCTOR-SMD
2703-005295	L2022	INDUCTOR-SMD
2703-005418	L7006	INDUCTOR-SMD
2703-005419	L7007	INDUCTOR-SMD
2703-005445	L2019	INDUCTOR-SMD
2703-005505	L7003,L8002,L8003	INDUCTOR-SMD
2703-005505	L8008	INDUCTOR-SMD
2703-005555	L3042,L3045	INDUCTOR-SMD
2703-005581	L5001,L5002,L5005	INDUCTOR-SMD
2703-005581	L5006,L5007,L5009	INDUCTOR-SMD
2703-005581	L5012,L5013,L5014	INDUCTOR-SMD
2703-005660	L5000,L5003,L5004	INDUCTOR-SMD
2703-005660	L5008,L5010	INDUCTOR-SMD
2703-005738	L5011	INDUCTOR-SMD
2801-005481	OSC5000	CRYSTAL-UNIT
2901-001690	C4059	FILTER-EMI SMD
2903-001576	F3000,F3001	FILTER-CERAMIC
2904-002143	F1012	FILTER-SAW
2904-002257	F2005	FILTER-SAW
2904-002285	F1006	FILTER-SAW
2904-002326	F2006	FILTER-SAW
2904-002339	F2003	FILTER-SAW
2904-002356	F3006,F3007	FILTER-SAW
2904-002381	F3003,F3004	FILTER-SAW
2904-002397	F1005,F2004	FILTER-SAW
2910-000401	F1011	FILTER
2911-000435	U2007	FILTER
2911-000458	U1004	FILTER


5. MAIN Electrical Parts List

3301-002122	L7013,L8000,L8001	CORE-FERRITE BEAD
3301-002223	L7000,L7001	CORE-FERRITE BEAD
3301-002236	L7004,L7011,L7012	CORE-FERRITE BEAD
3301-002236	L7014	CORE-FERRITE BEAD
3301-002237	L1000,L1001	CORE-FERRITE BEAD
3301-002238	L3000,L3031	CORE-FERRITE BEAD
3301-002286	L3043,L3044	CORE-FERRITE BEAD
3301-002312	L7005,L7008,L7010	CORE-FERRITE BEAD
3301-002331	L7002	CORE-FERRITE BEAD
3301-002336	L6000	CORE-FERRITE BEAD
3705-001937	RFS1000,RFS1001	CONNECTOR-COAXIAL
3705-001937	RFS2000	CONNECTOR-COAXIAL
3710-004008	SOC5000	CONNECTOR-SOCKET
3710-004109	HEA8000	CONNECTOR-SOCKET
3710-004285	SOC6000	CONNECTOR-SOCKET
3710-004367	SOC7000,SOC7001	CONNECTOR-SOCKET
3712-001694	ANT2001,ANT2002	CONNECTOR
3712-001694	ANT2003,ANT2004	CONNECTOR
3712-001694	ANT3002,ANT6000	CONNECTOR
3712-001694	ANT6001,ANT6002	CONNECTOR
3712-001694	ANT6003,ANT6007	CONNECTOR
3712-001694	ANT8000,ANT8001	CONNECTOR
3712-001731	ANT2000	CONNECTOR
3712-001749	ANT2005,ANT3000	CONNECTOR
3712-001749	ANT3001,ANT3003	CONNECTOR
3712-001749	ANT3004,ANT3005	CONNECTOR
3712-001749	ANT3006	CONNECTOR
4709-002226	F1000,F2002	RF-MODULE
4709-002285	F3002,F3008	RF-MODULE
4709-002351	F3005	RF-MODULE
4709-002589	F1004	RF-MODULE
GH63-17218A	SC6001	SC-AP
GH63-17219A	SC6003	SC-RF
GH63-17220A	SC6002	SC-PMIC
GH63-17221A	SC6000	SC-WIFI
GH02-18822A	SC6001SP	AP_TAPE

Please consult the GSPN website (Samsung Portal) for the most recent version of the product's part list.



7. Level 2 Repair

7-1. Components on the Rear Case

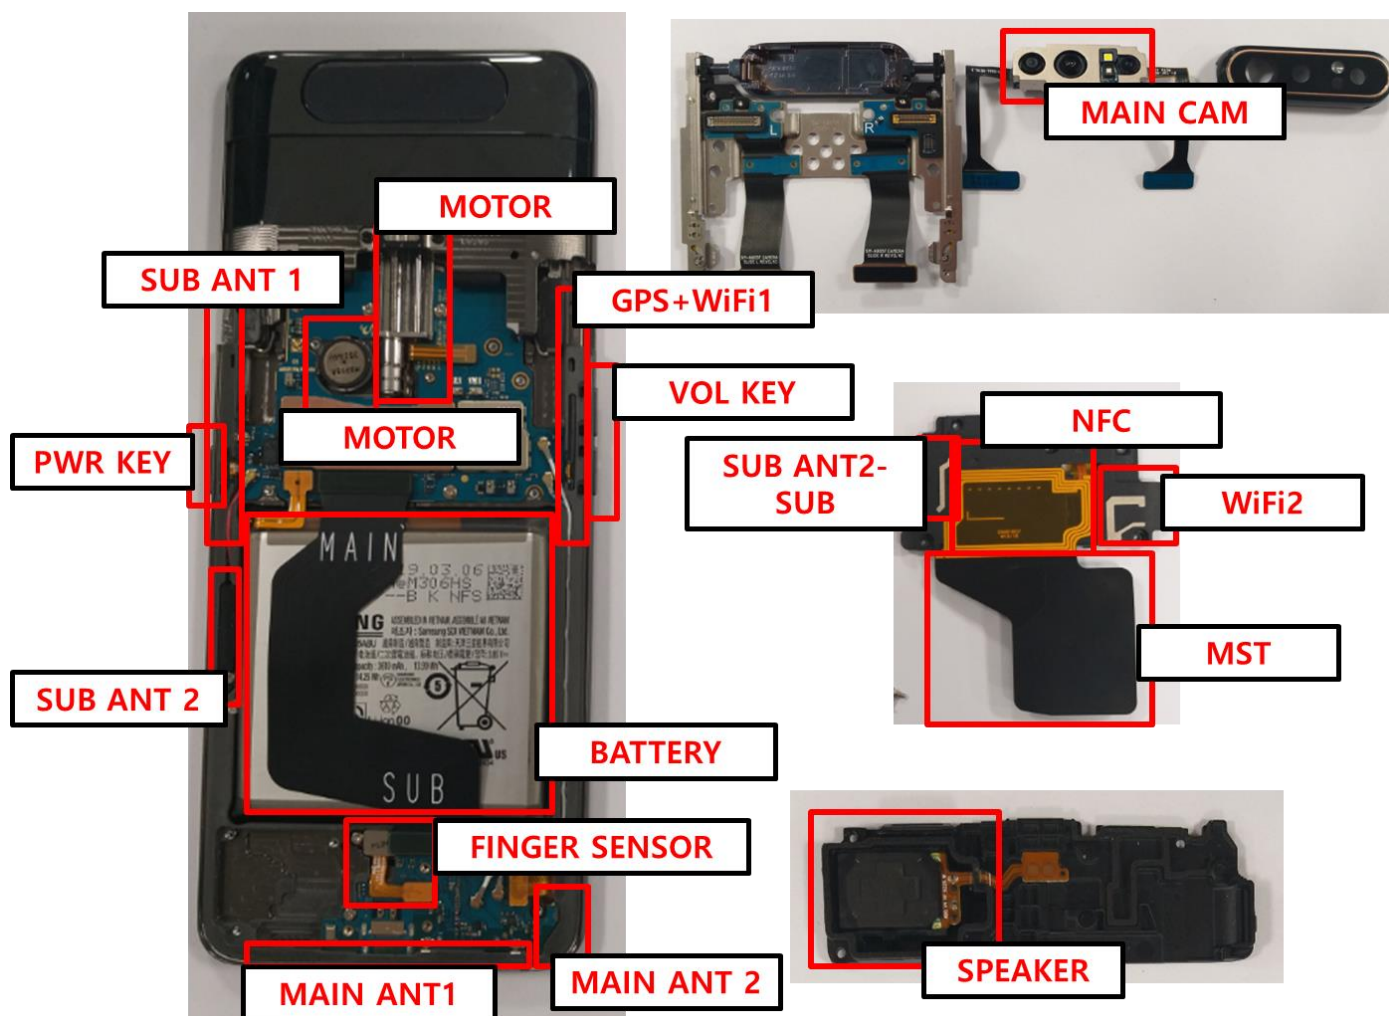


7. Level 2 Repair

7-2. Pre-requisite

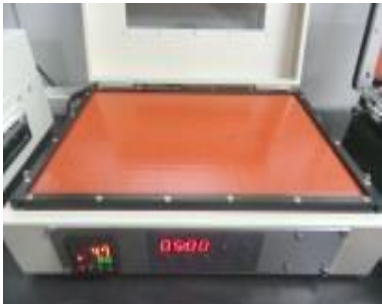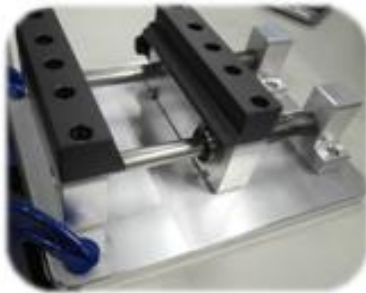	
Tweezers / Disass'y Stick / Screw Driver(X,Y)	Anti-static Gloves
	
Anti-static Mat	Hot Plate
	
A OCTA Disassembly Holder	OCTA Disassembly Upper
	
Ethyl Alcohol	Cotton Swab

7. Level 2 Repair

7-3. Parts which must be changed after repair

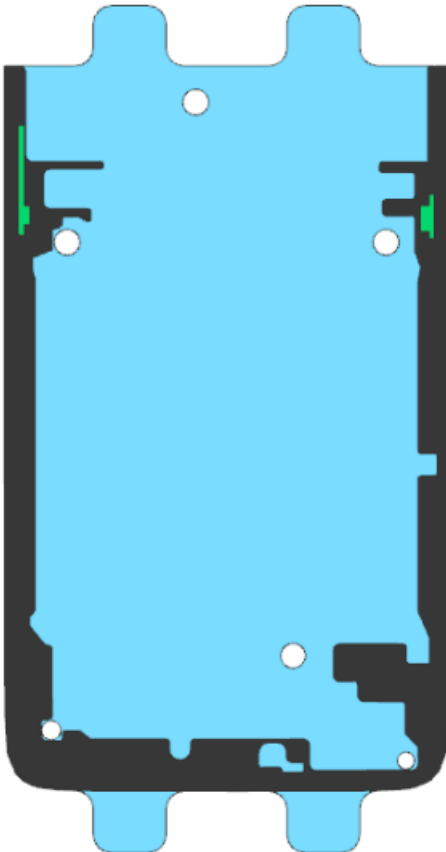BOM Description & part code	Image	Remarks
Back glass Outside tape [GH81-17066A]		It needs all when the Back glass is removed/replaced

7. Level 2 Repair


7-4. Disassembly

1

1. Put the device in the chamber or Hot plate as below heating condition
 - SOC 68%↓: 70 °C/10~20min
 - SOC 68%↑: Discharge until 68%↓※ Please confirm the heating condition released lastly, and follow it.


2. Detach the Back glass using disassembly jig.

※ Below picture shows how to detach Back Glass using service jig, however you can use manufactural jig if possible.

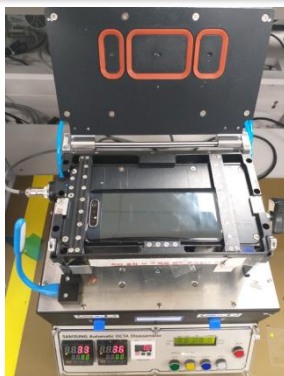

2

- Disassemble SIM Tray from device. Unscrew 13Points.

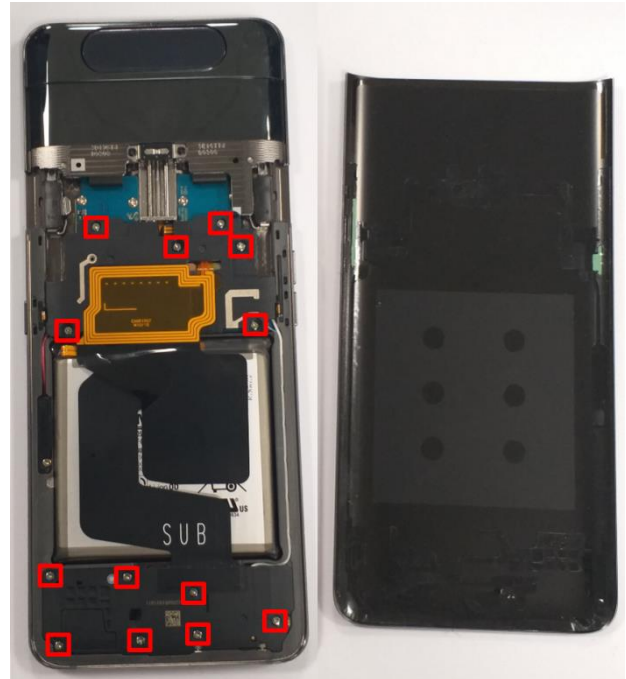

※ Caution

Be careful not to damage set and OCTA.

※ Caution

Be care of scratch and molding damage.

3

- Disassemble the REAR from Front Assy.




※ Caution

Be care of damage to components.

4

1. Unscrew 2 Points from Camera module.
2. Disassemble 2ea materials from Slide part.

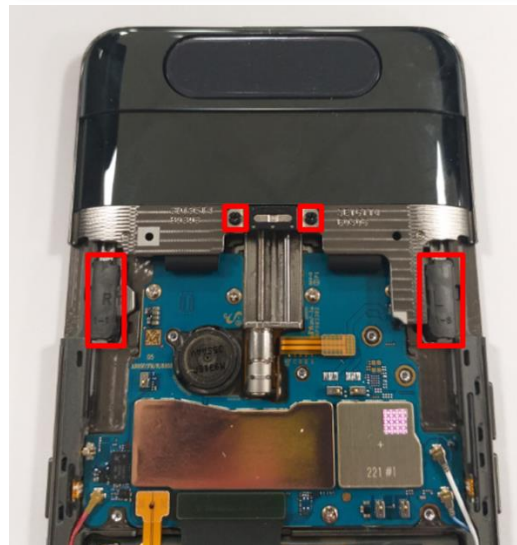


※ Caution

Be care of damage to components.

7. Level 2 Repair

5


1. Unscrew 2 Points from Camera module.
2. Disassemble 2ea material from Camera module.
3. Raise the camera module as high as possible.

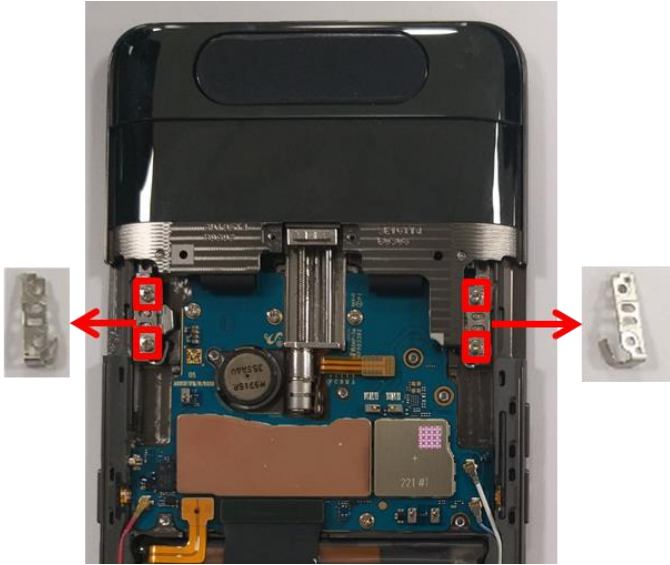

※ Caution
Be care of damage to components.

6


1. Unscrew 5 Points from PBA
2. Disassemble Connector 3ea from PBA.
3. Disassemble Coaxial Cable 3ea from PBA.

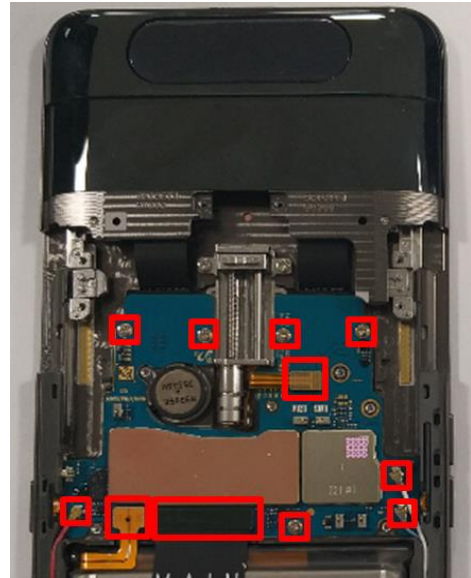

※ Caution
Be careful not to damage the PBA.

7


Detach Geared Motor from Front Ass'y.

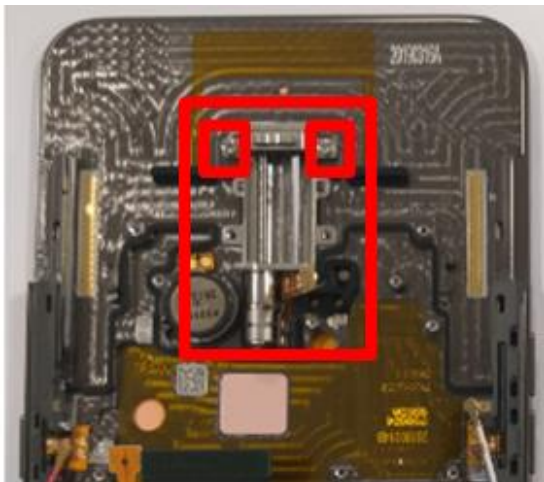

※ Caution
Be careful not to damage the Motor.

8

Detach Geared Motor from Front Ass'y.

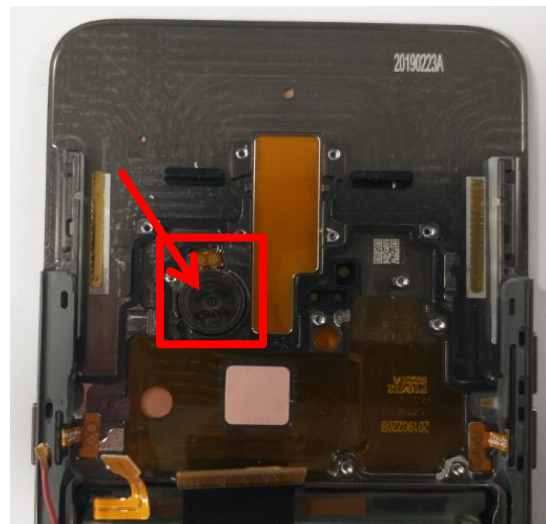


※ Caution
Be careful not to damage the Motor.

7. Level 2 Repair


9

1. Disassemble Connector 3ea from PBA.
2. Disassemble Component from Camera module

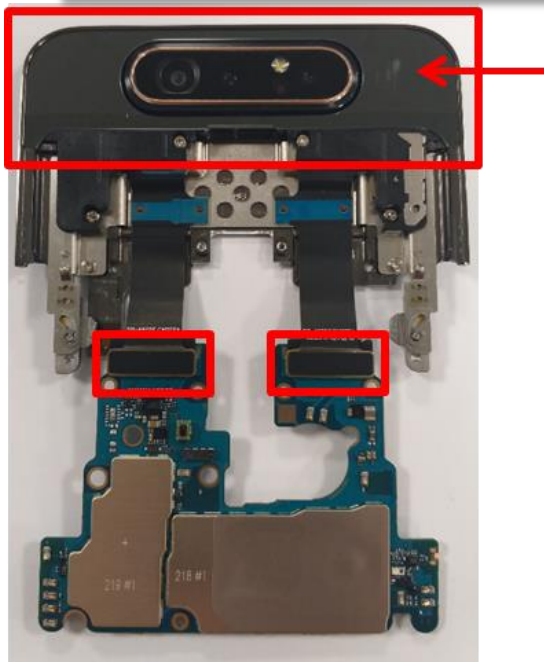

10

- Unscrew 8 Points from Camera module.

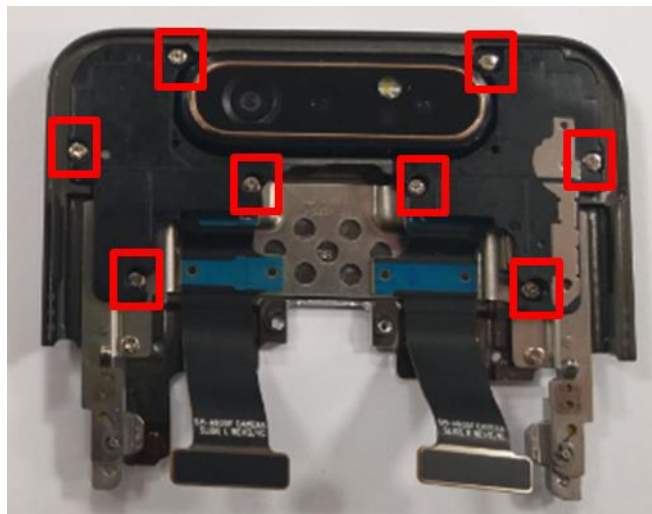

※ Caution


Be careful not to damage the PBA and Camera module.

※ Caution

Be careful not to damage the Camera module.

11

1. Unscrew 4 Points from Camera module.
2. Disassemble Connector 3ea from Camera module.

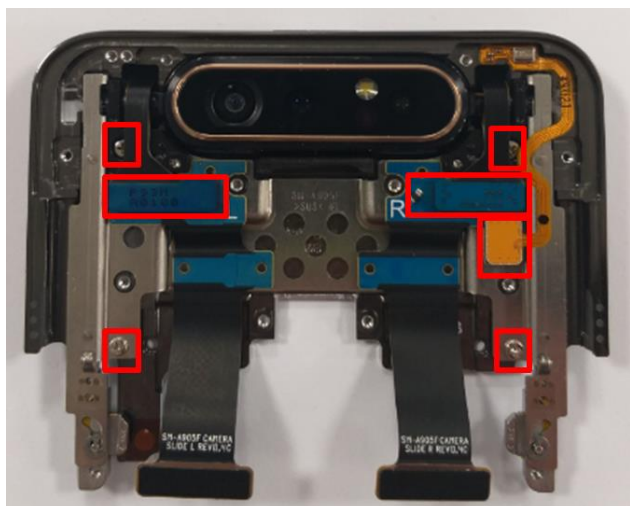


※ Caution

Be careful not to damage the connector

12

- Unscrew 4 Points from Camera module.

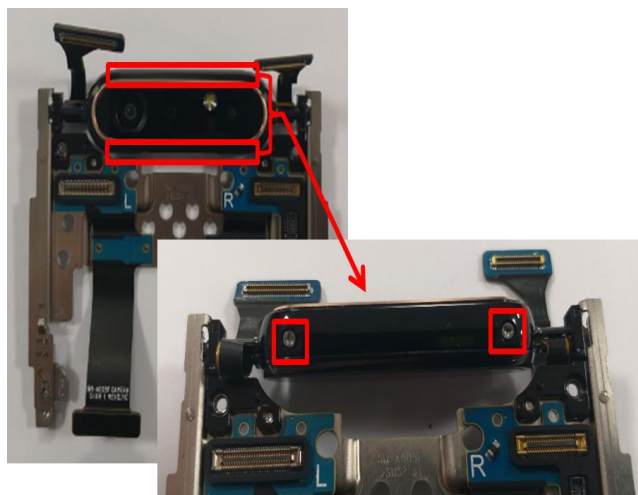

※ Caution

Be careful not to damage surface.

7. Level 2 Repair


13 Detach Camera from the Camera module.	14 1. Unscrew 1 Points from Front Ass'y. 2. Disassemble Connector 3ea from PBA. 3. Disassemble Coaxial Cable 2ea from PBA.
※ Caution Be careful not to damage the Camera	※ Caution Be careful not to damage the Sub PBA and connector
15 1. Unscrew 1 Points from Front Ass'y. 2. Detach Finger sensor from Front Ass'y.	16 Detach SPK from Rear for sub PBA
※ Caution	※ Caution
17 Detach NFC/MST ANT from Rear for Main PBA	
※ Caution Be careful not to damage the ANT for NFC/MST	

7. Level 2 Repair

7-5. Assembly

1

Attach NFC/MST ANT on Rear for Main PBA.

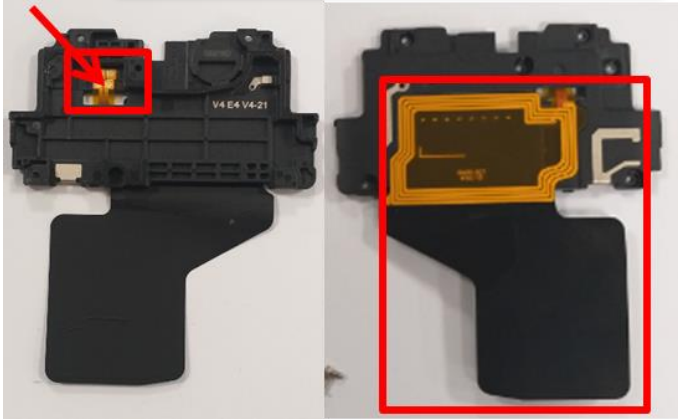

※ Caution

Be careful not to damage the ANT for NFC/MST

2

Attach SPK on Rear for sub PBA.




※ Caution

Be care of SPK damage.

3

Attach Finger sensor on Front Ass'y
Screw insertion 2 Point
* Torque Value : 1.1kgf

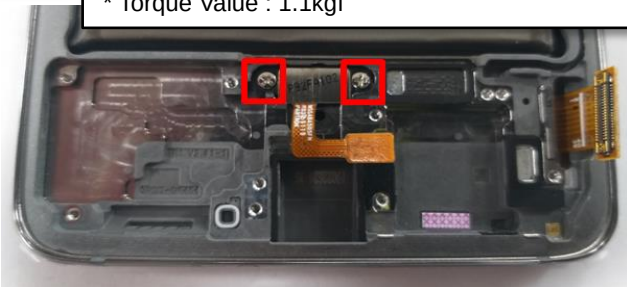


※ Caution

Be care of Finger sensor damage.

4

Attach Sub PBA on Front Ass'y.
Joint FPCB 3ea and fix screw 1ea+ RF Cable 2ea.

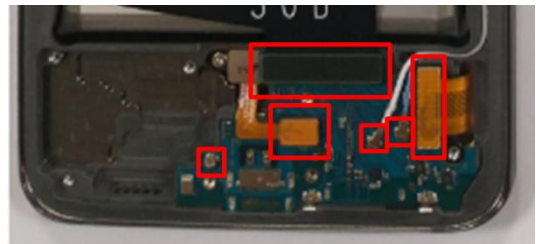


※ Caution

Be care of Sub PBA damage.

5

Attach Main CAM on Camera module.

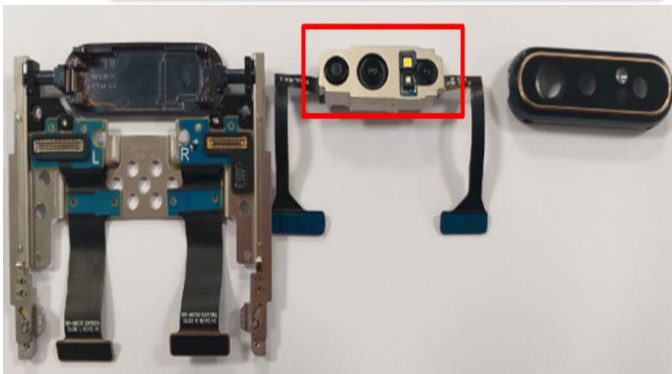


※ Caution

Be care of Camera damage.

6

Screw insertion 4 Point.
* Torque Value : 0.8kgf

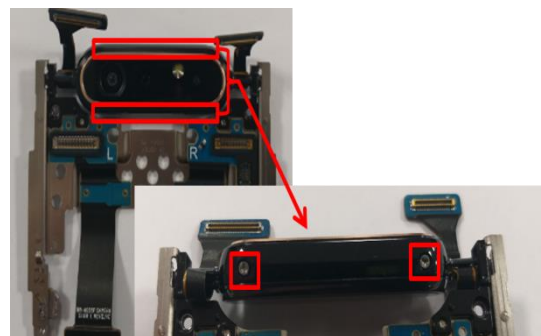


※ Caution

Be care of damage each part

7. Level 2 Repair


7

Joint FPCB 3ea and fix screw 4ea.
* Torque Value : 1.1kgf

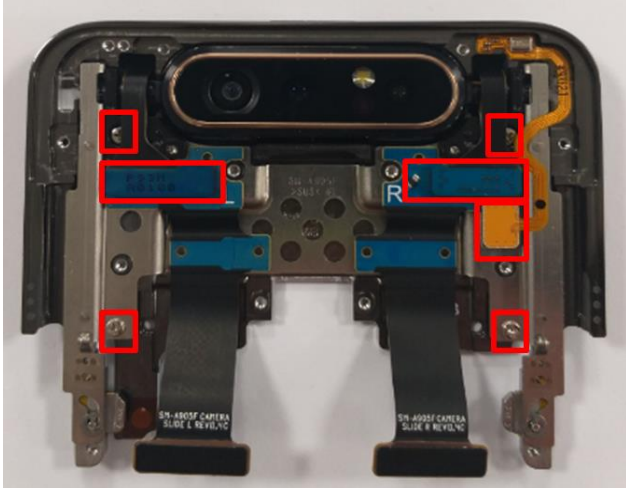

8

Screw insertion 8 Point.
* Torque Value : 1.1kgf

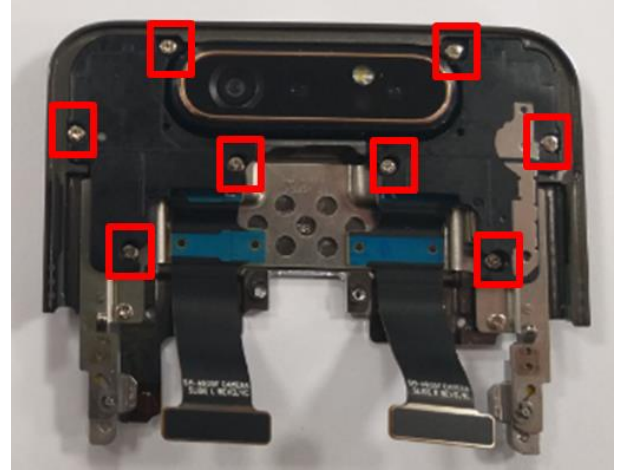


※ Caution

Be care of scratch camera module.

※ Caution


9

Attach component on Camera module.
Joint FPCB 2ea and main PBA.

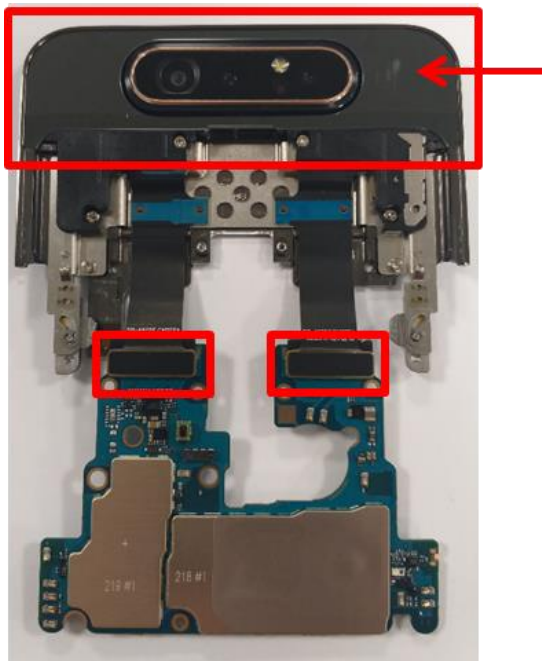

10

Attach Motor on Front Ass'y.

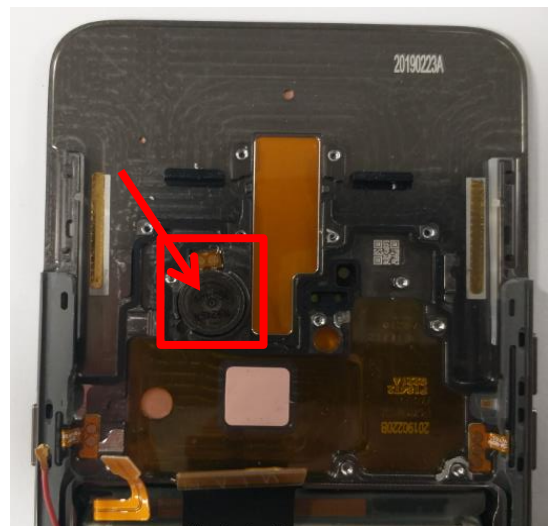

※ Caution

Be careful not to damage the Camera


※ Caution

Be care of motor damage.

7. Level 2 Repair


11

Attach Geared Motor on Front Ass'y.
Screw insertion 2 Point.

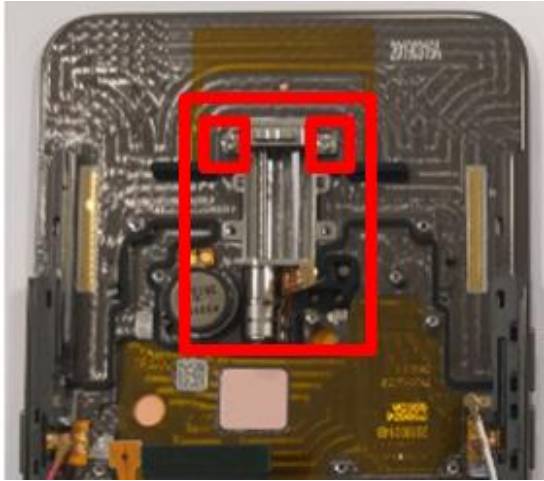

12

Screw insertion 5 Point.
* Torque Value : 1.1kgf
Joint FPCB 3ea and + RF Cable 3ea.

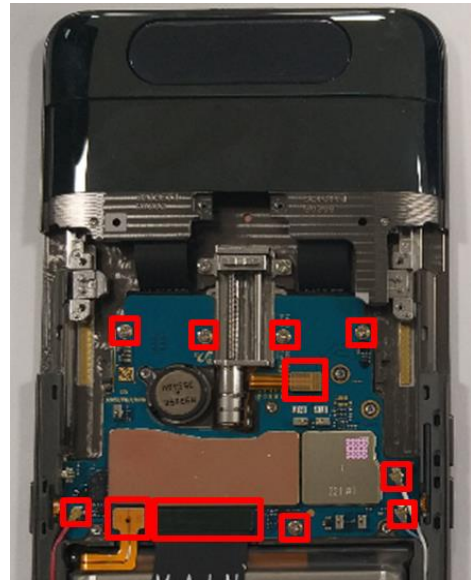

※ Caution


Be care of @@ motor damage.

※ Caution

Be care of main PBA damage.


13

Screw insertion 4 Point with fixed material.

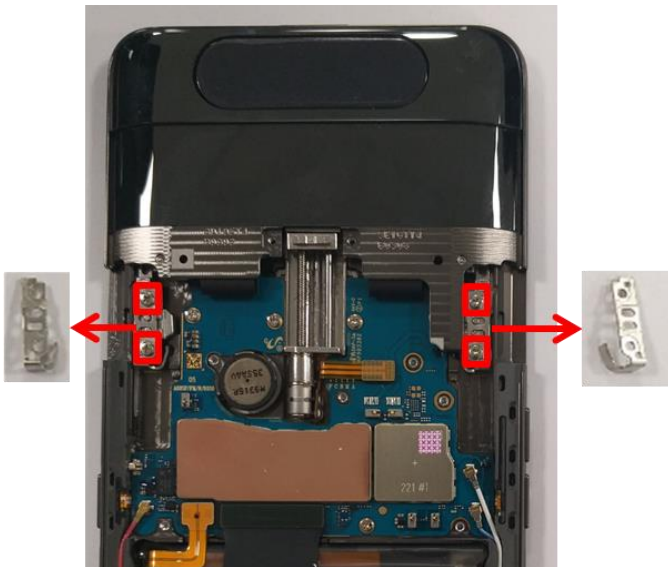

14

1. Screw 2 Points with fixed material for Camera module.
2. Attach 2ea materials from Slide part.


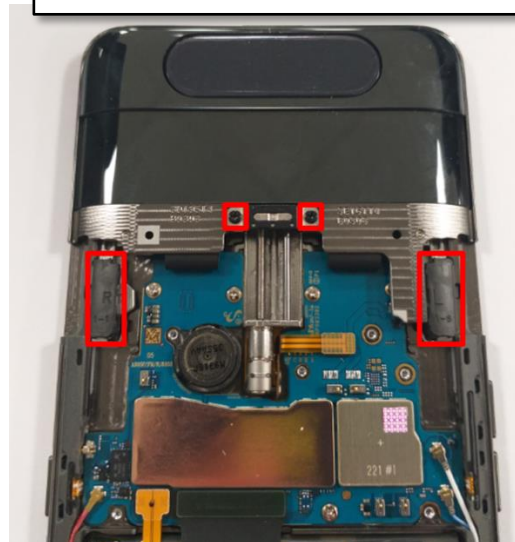


※ Caution

Be careful not to damage the ANT for NFC/MST

※ Caution


7. Level 2 Repair

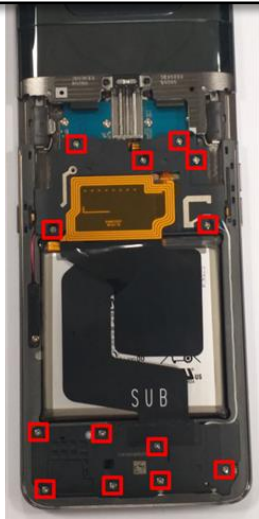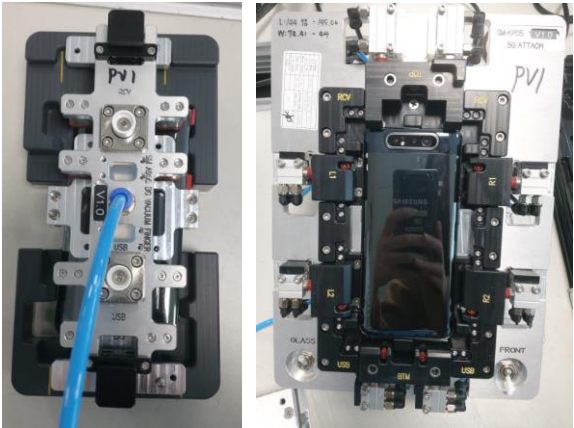15 Attach NFC/MST ANT and Sub rear (SPK). Assemble SIM Tray from device. A photograph showing the internal components of a smartphone. On the left is the main printed circuit board (PCB) with a large battery labeled 'MAIN' and a smaller sub-board labeled 'SUB'. To the right of the main board are the NFC/MST antenna (a yellow rectangular component) and the sub-rear speaker (SPK) assembly, which includes a black plastic housing and a small speaker driver.	16 Screw insertion 6 Point (NFC/MST ANT). * Torque Value : 1.1kgf Screw insertion 7 Point. * Torque Value : 1.3kgf A photograph of the smartphone's internal assembly. The NFC/MST antenna and sub-rear speaker are now attached to the main PCB. Seven red squares are overlaid on the image, indicating the specific locations where screws should be inserted to secure these components.
※ Caution Be care of scratch Rear cover.	※ Caution 1) Be care of main PBA and sub PBA
17 Attach the back glass using back glass press jig. * pressure condition : 6kgf / 12s. Two photographs showing the back glass press jig. The left image is a close-up of the jig's mechanism, which includes a blue pneumatic cylinder and various metal components. The right image shows the entire jig with a smartphone placed inside it, ready for the back glass to be pressed onto the main PCB.	
※ Caution	


8. Level 3 Repair

8-1. Components Layout


MAIN PBA (TOP SIDE)

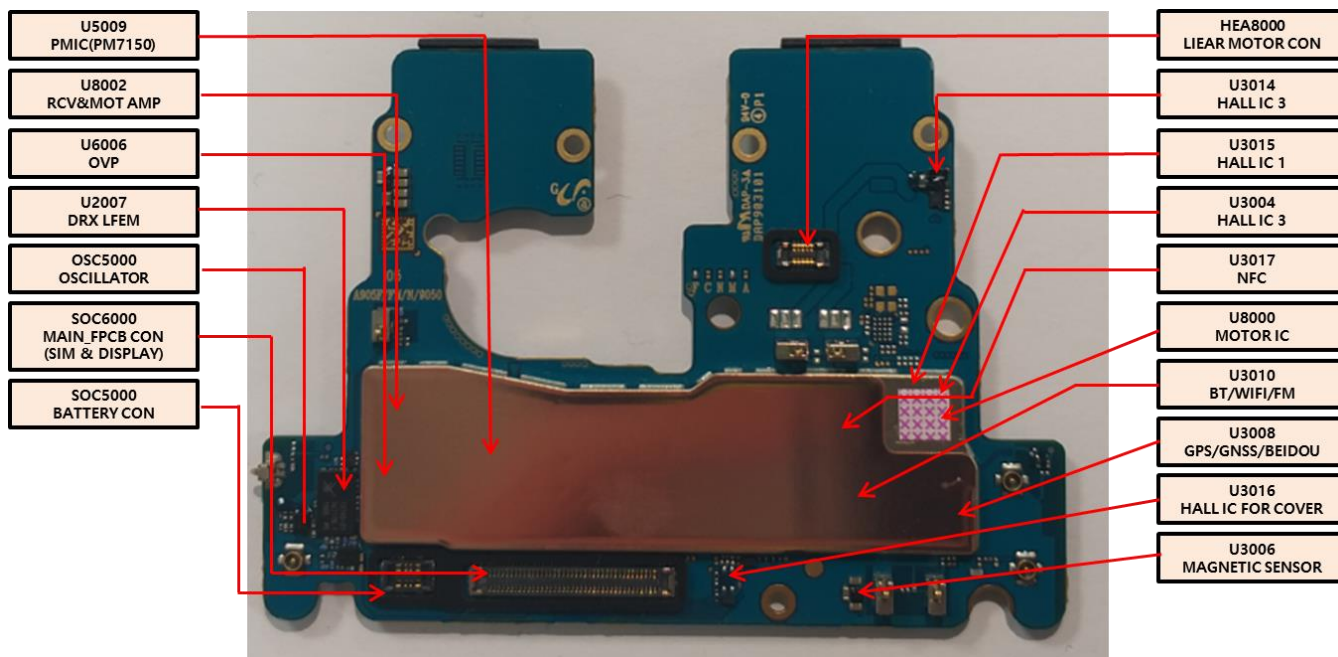


MAIN PBA (BOTTOM SIDE)

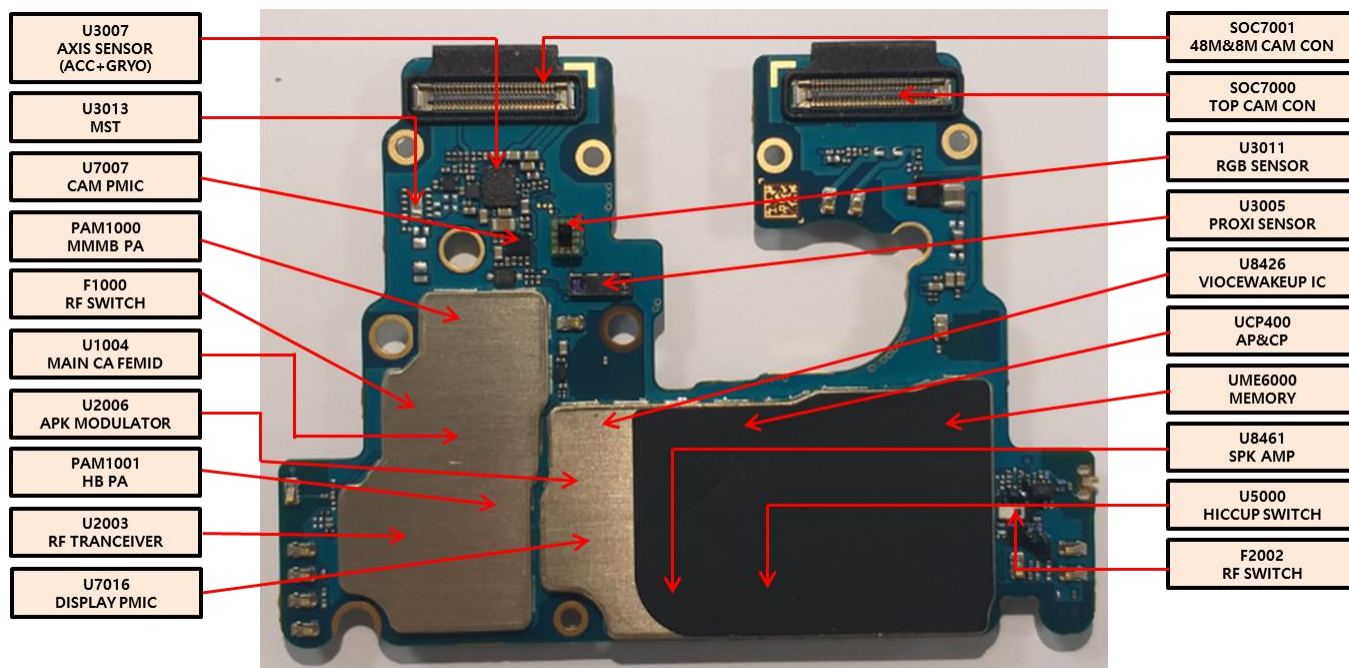


SM-A805F/DS REV0.2 Blockdiagram 2019.03.28

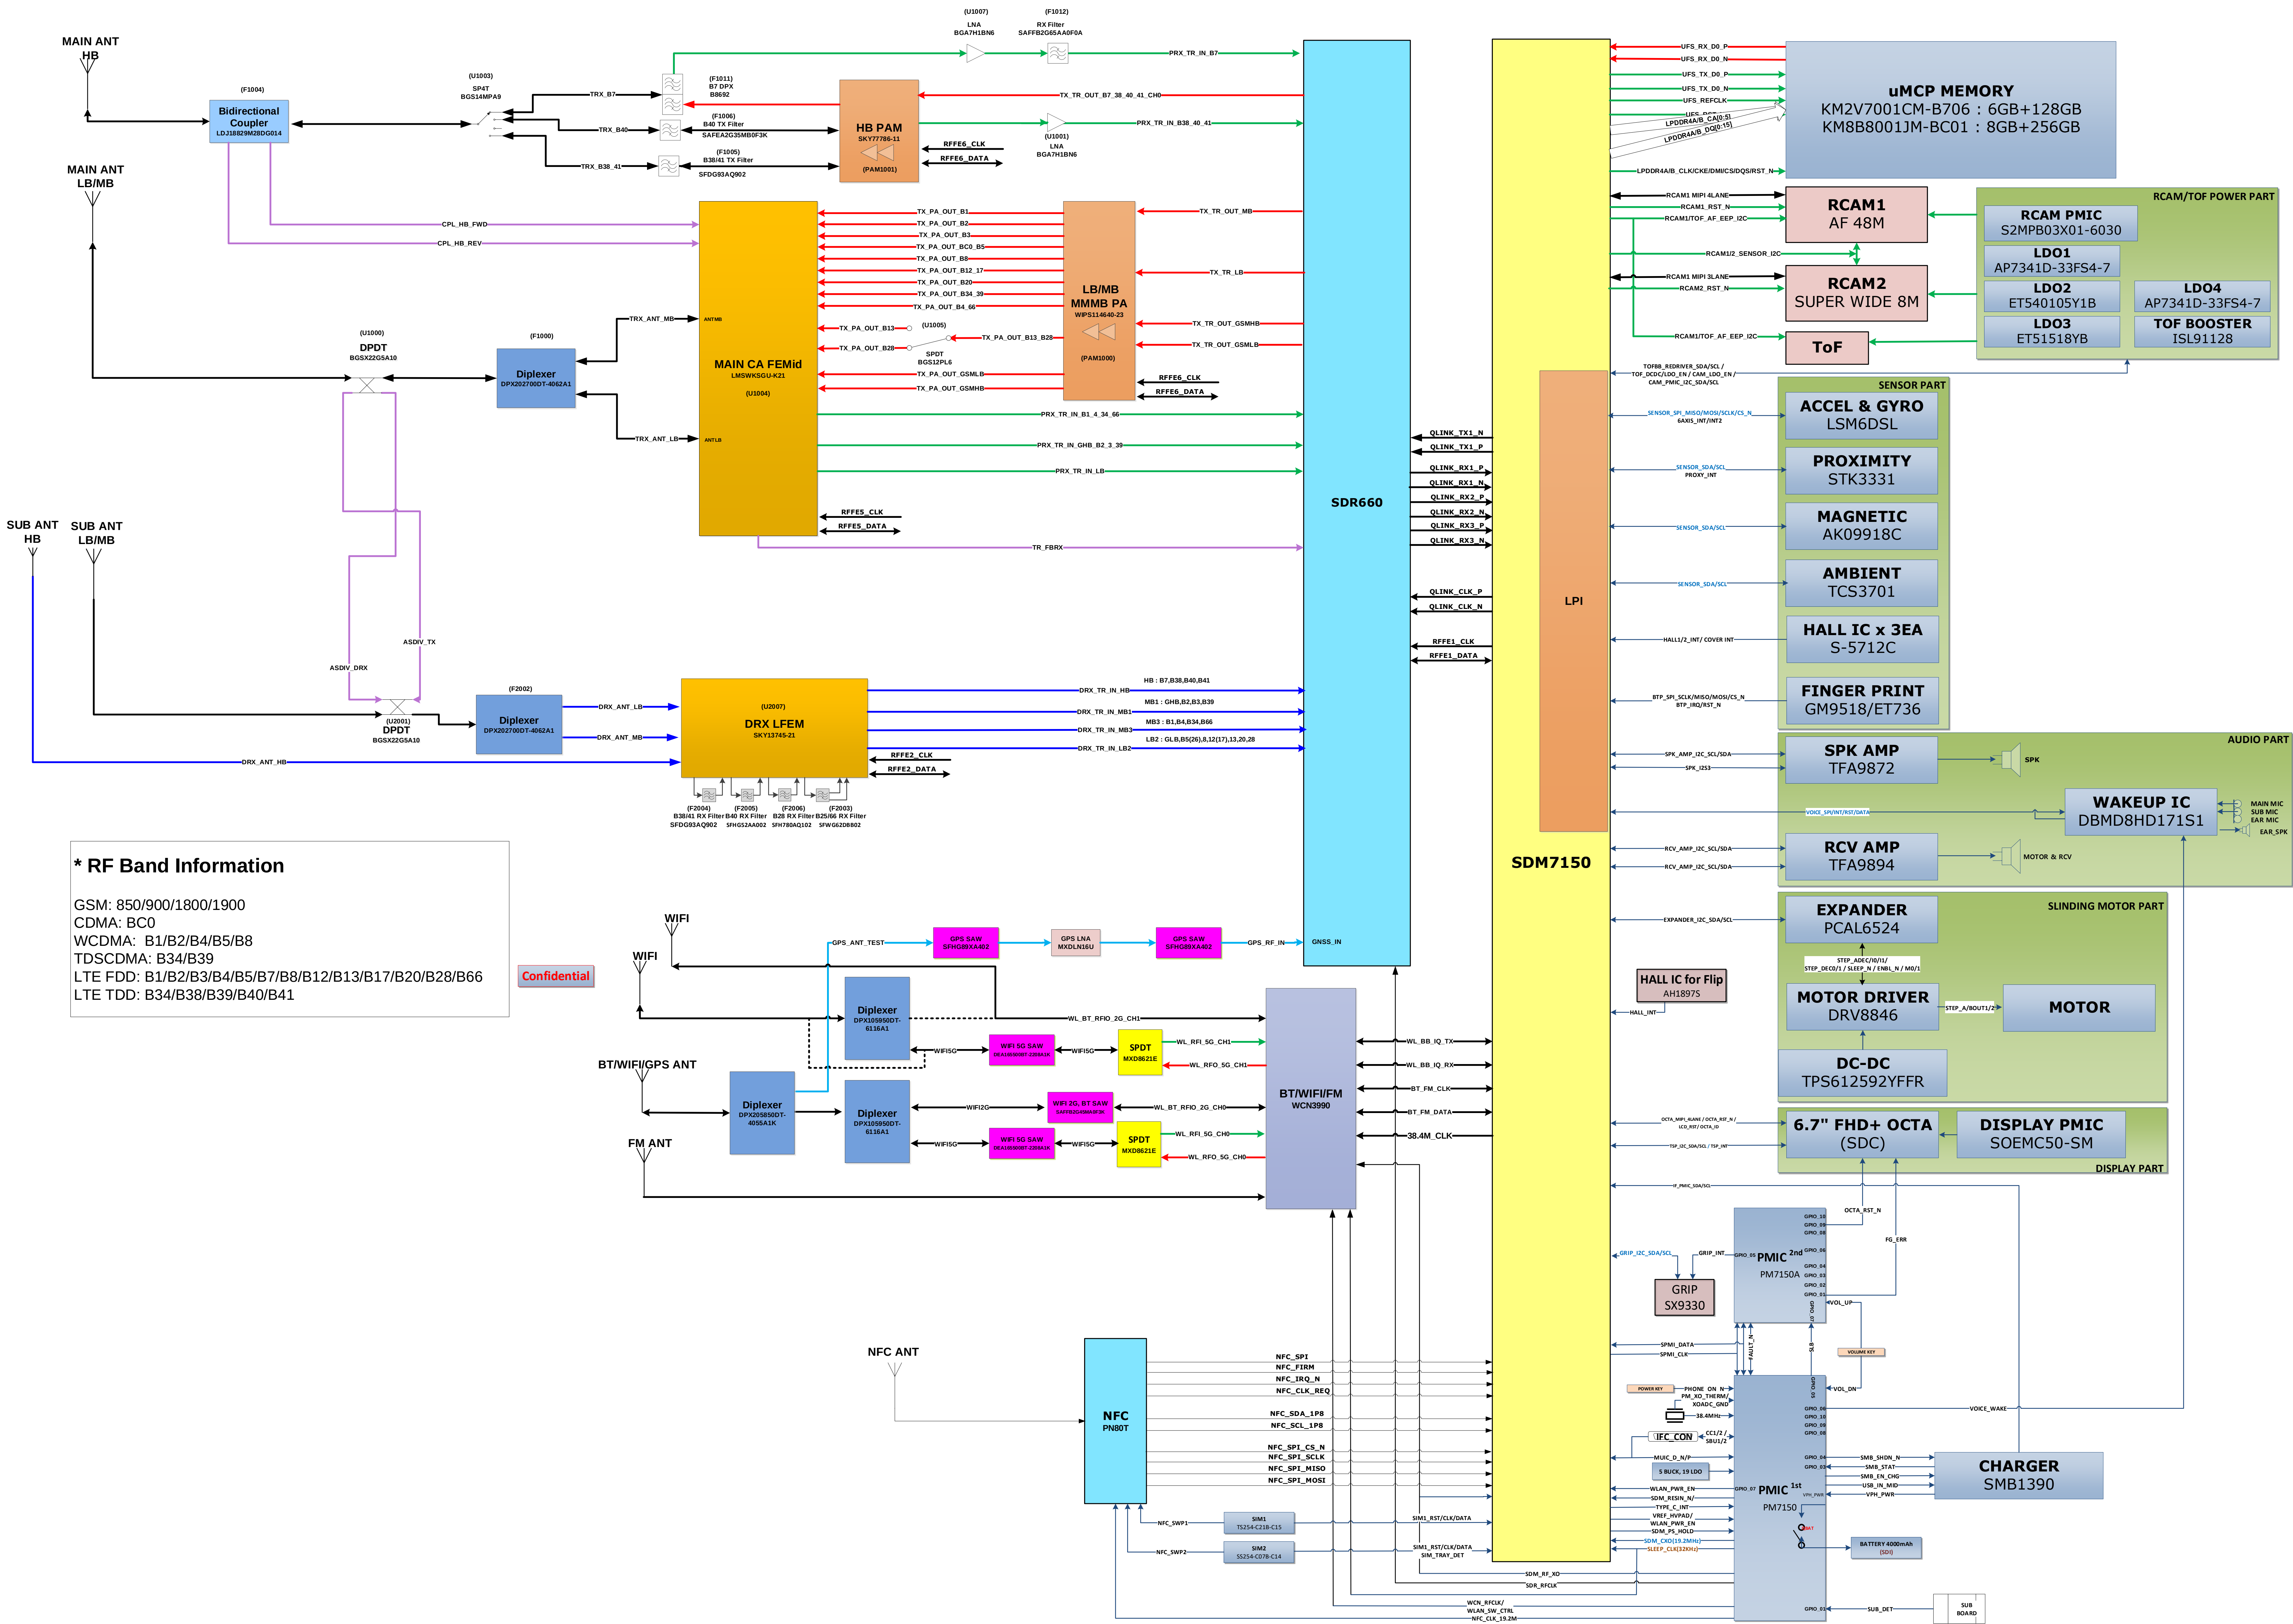


SM-A805F

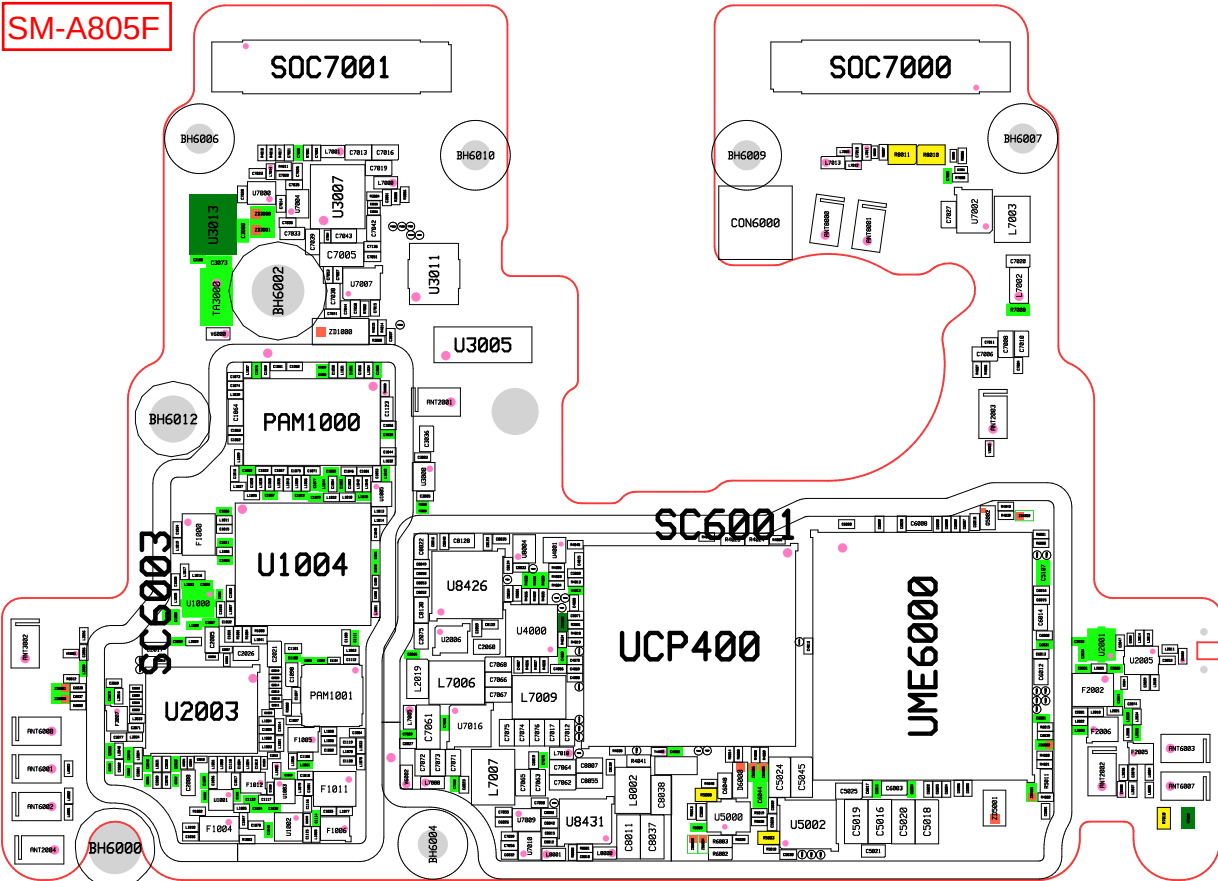


SM-A805F

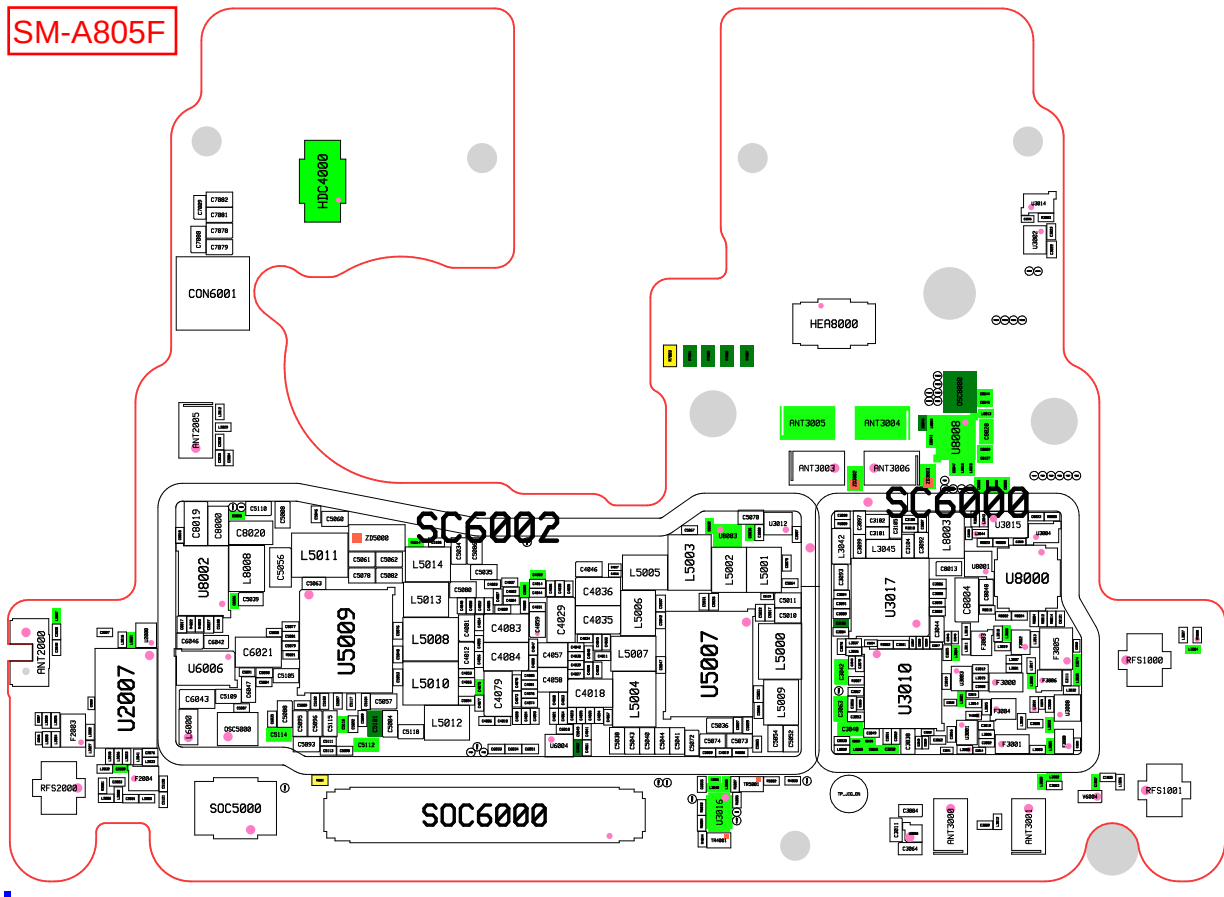

SM-A8050 REV0.2 Block Diagram 19.04.14

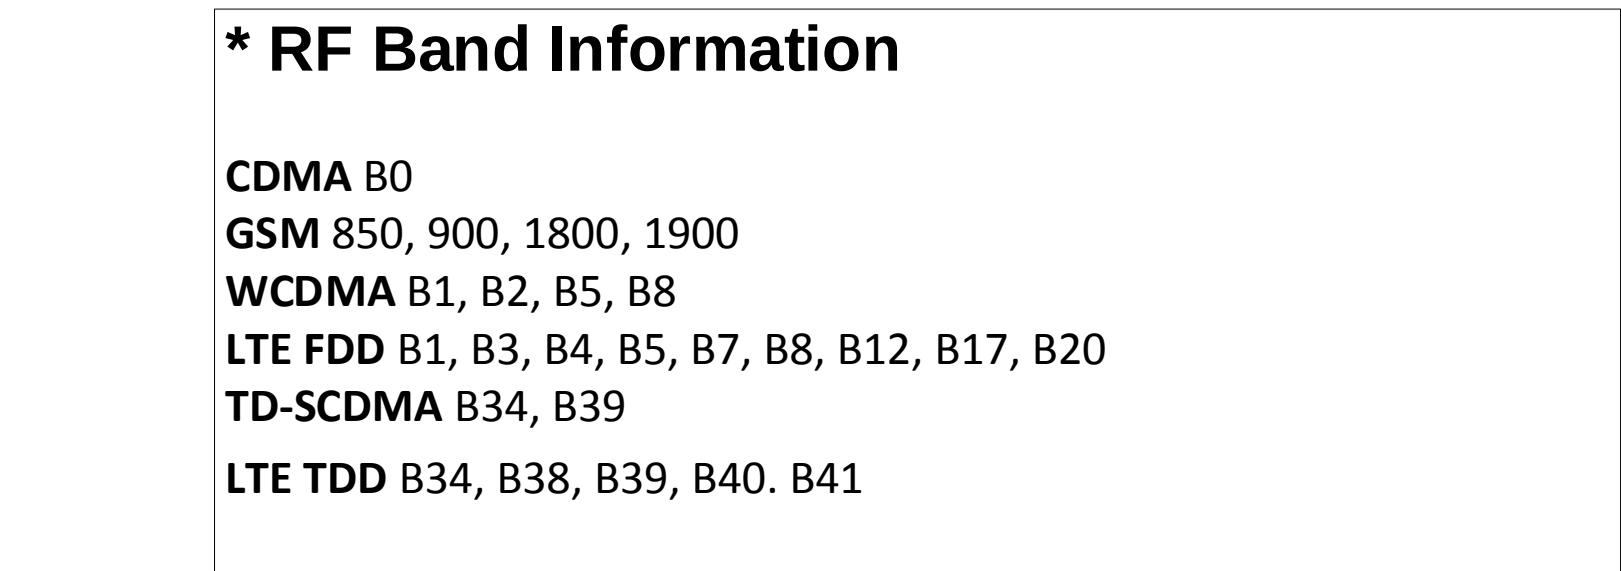

Connectivity Frequency Range (MHz)	
WLAN	2412 – 2462 MHz
	5180 – 5240 MHz
	5260 – 5320 MHz
	5500 – 5720 MHz
	5745 – 5825 MHz
Bluetooth / BLE / ANT+	2402 - 2480 MHz
GNSS	1559 - 1610 MHz
FM Radio	87.5 - 108 MHz
NFC	13.56 MHz
MST	0.555 - 8.330 KHz

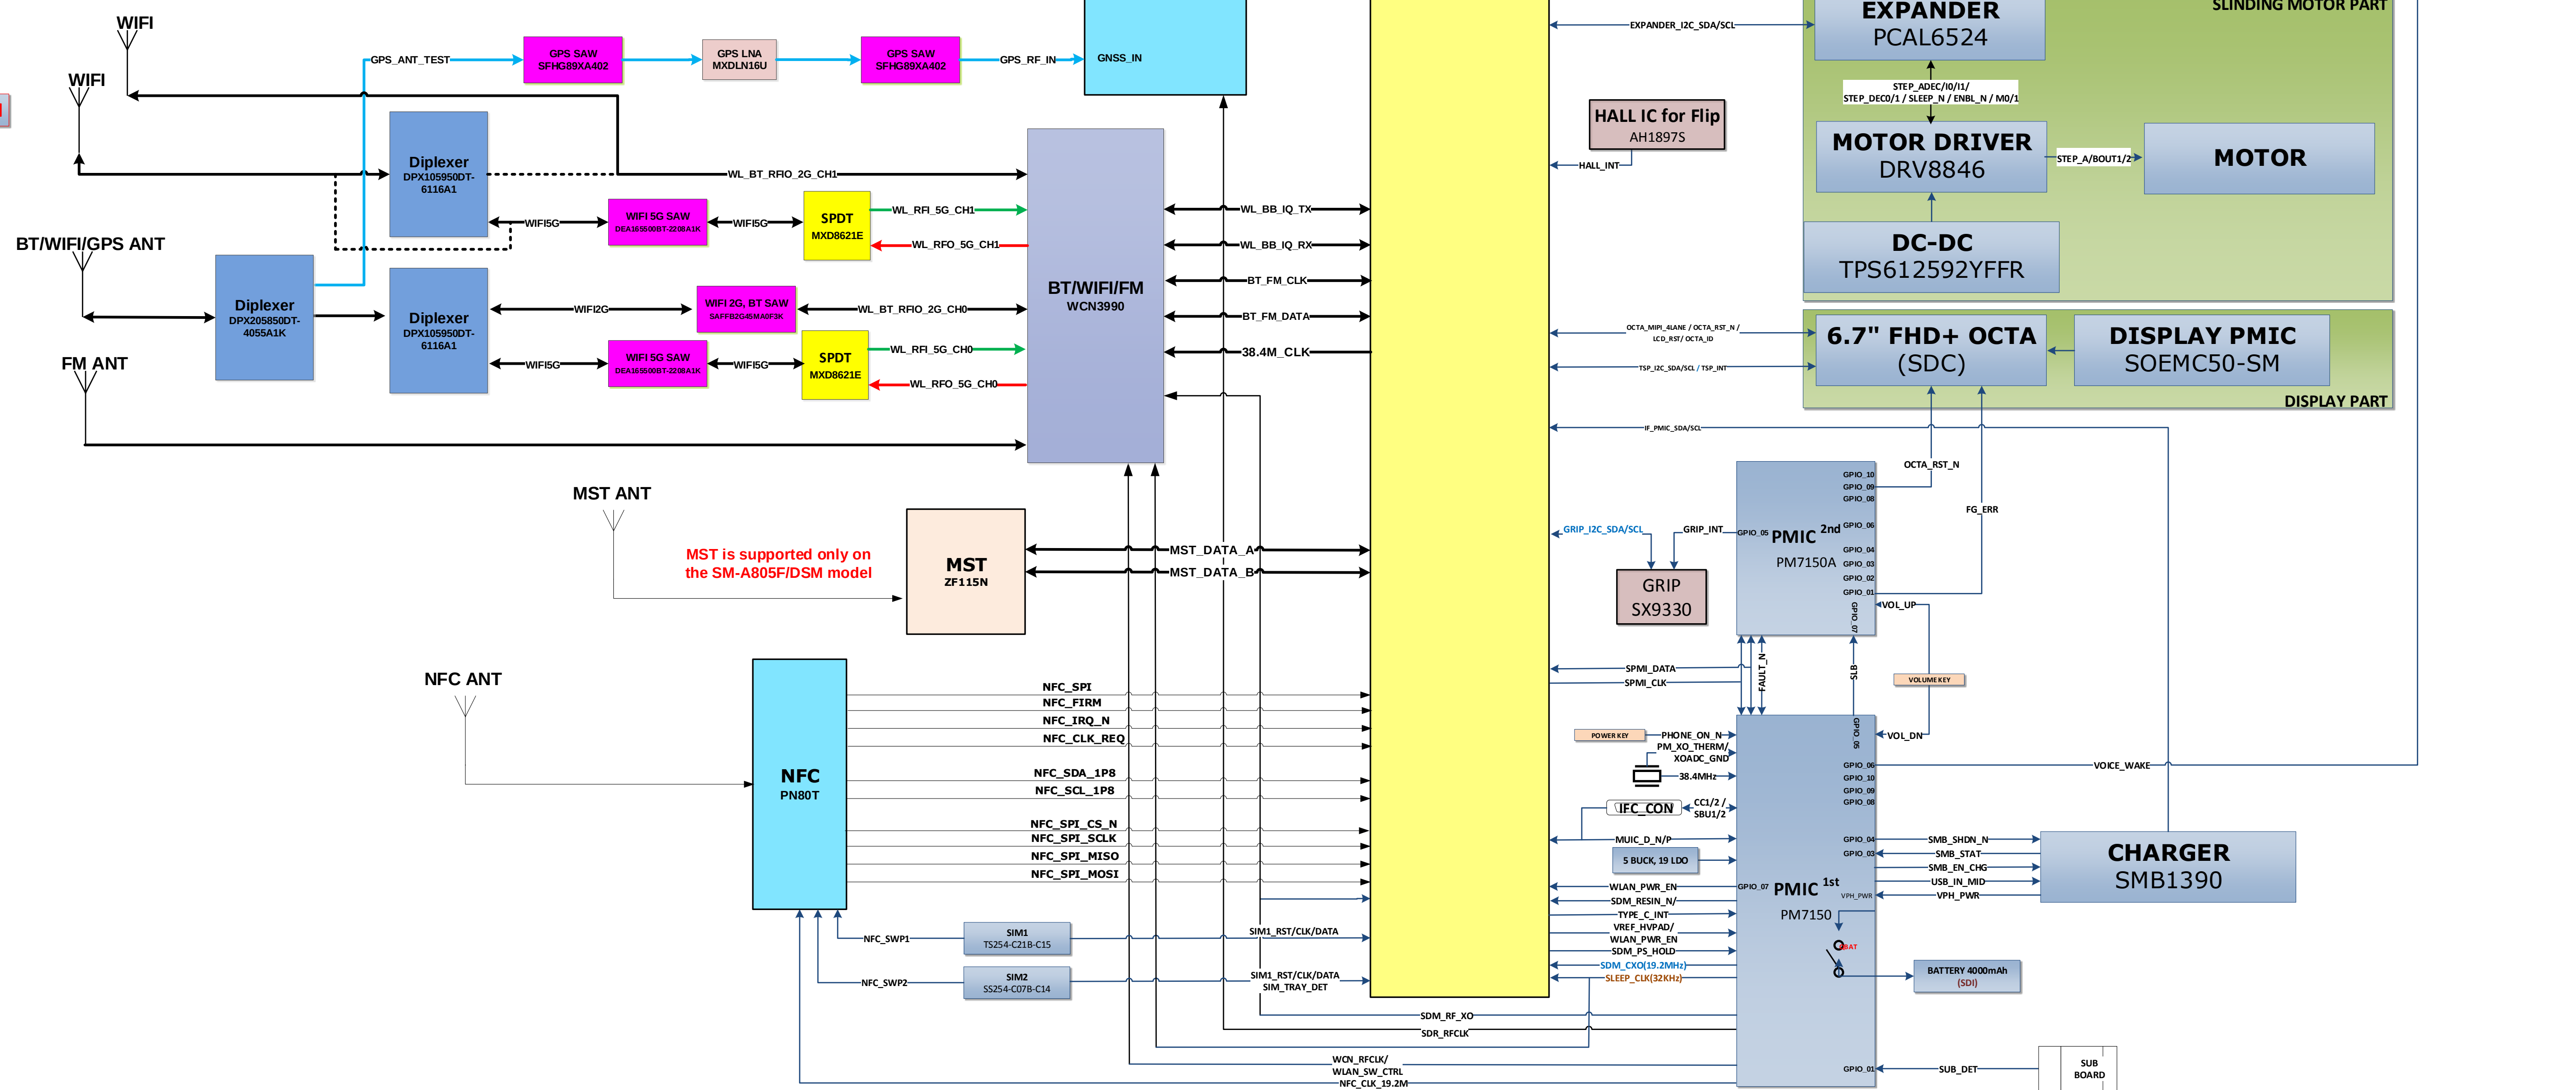

SM-A8050

SOC7001

BH6006

BH6010

SOC7000

BH6009

BH6007

CON5000

U3013

BH6002

U3011

U3005

BH6012

PAM1000

SC6003

U1004

U2003

PAM1001

SC6001

UCP400

UME6000

BH6004

BH6000

U2005

PNT6003

PNT6007

PNT6001

PNT6002

PNT6004

PNT6005

PNT6006

PNT6008

PNT6009

PNT6010

PNT6011

PNT6012

PNT6013

PNT6014

PNT6015

PNT6016

PNT6017

PNT6018

PNT6019

PNT6020

PNT6021

PNT6022

PNT6023

PNT6024

PNT6025

PNT6026

PNT6027

PNT6028

PNT6029

PNT6030

PNT6031

PNT6032

PNT6033

PNT6034

PNT6035

PNT6036

PNT6037

PNT6038

PNT6039

PNT6040

PNT6041

PNT6042

PNT6043

PNT6044

PNT6045

PNT6046

PNT6047

PNT6048

PNT6049

PNT6050

PNT6051

PNT6052

PNT6053

PNT6054

PNT6055

PNT6056

PNT6057

PNT6058

PNT6059

PNT6060

PNT6061

PNT6062

PNT6063

PNT6064

PNT6065

PNT6066

PNT6067

PNT6068

PNT6069

PNT6070

PNT6071

PNT6072

PNT6073

PNT6074

PNT6075

PNT6076

PNT6077

PNT6078

PNT6079

PNT6080

PNT6081

PNT6082

PNT6083

PNT6084

PNT6085

PNT6086

PNT6087

PNT6088

PNT6089

PNT6090

PNT6091

PNT6092

PNT6093

PNT6094

PNT6095

PNT6096

PNT6097

PNT6098

PNT6099

PNT6100

PNT6101

PNT6102

PNT6103

PNT6104

PNT6105

PNT6106

PNT6107

PNT6108

PNT6109

PNT6110

PNT6111

PNT6112

PNT6113

PNT6114

PNT6115

PNT6116

PNT6117

PNT6118

PNT6119

PNT6120

PNT6121

PNT6122

PNT6123

PNT6124

PNT6125

PNT6126

PNT6127

PNT6128

PNT6129

PNT6130

PNT6131

PNT6132

PNT6133

PNT6134

PNT6135

PNT6136

PNT6137

PNT6138

PNT6139

PNT6140

PNT6141

PNT6142

PNT6143

PNT6144

PNT6145

PNT6146

PNT6147

PNT6148

PNT6149

PNT6150

PNT6151

PNT6152

PNT6153

PNT6154

PNT6155

PNT6156

PNT6157

PNT6158

PNT6159

PNT6160

PNT6161

PNT6162

PNT6163

PNT6164

PNT6165

PNT6166

PNT6167

PNT6168

PNT6169

PNT6170

PNT6171

PNT6172

PNT6173

PNT6174

PNT6175

PNT6176

PNT6177

PNT6178

PNT6179

PNT6180

PNT6181

PNT6182

PNT6183

PNT6184

PNT6185

PNT6186

PNT6187

PNT6188

PNT6189

PNT6190

PNT6191

PNT6192

PNT6193

PNT6194

PNT6195

PNT6196

PNT6197

PNT6198

PNT6199

PNT6200

PNT6201

PNT6202

PNT6203

PNT6204

PNT6205

PNT6206

PNT6207

PNT6208

PNT6209

PNT6210

PNT6211

PNT6212

PNT6213

PNT6214

PNT6215

PNT6216

PNT6217

PNT6218

PNT6219

PNT6220

PNT6221

PNT6222

PNT6223

PNT6224

PNT6225

PNT6226

PNT6227

PNT6228

PNT6229

PNT6230

PNT6231

PNT6232

PNT6233

PNT6234

PNT6235

PNT6236

PNT6237

PNT6238

PNT6239

PNT6240

PNT6241

PNT6242

PNT6243

PNT6244

PNT6245

PNT6246

PNT6247

PNT6248

PNT6249

PNT6250

PNT6251

PNT6252

PNT6253

PNT6254

PNT6255

PNT6256

PNT6257

PNT6258

PNT6259

PNT6260

PNT6261

PNT6262

PNT6263

PNT6264

PNT6265

PNT6266

PNT6267

PNT6268

PNT6269

PNT6270

PNT6271

PNT6272

PNT6273

PNT6274

PNT6275

PNT6276

PNT6277

PNT6278

PNT6279

PNT6280

PNT6281

PNT6282

PNT6283


PNT6284

PNT6285

PNT6286


PNT6287

SM-A8050

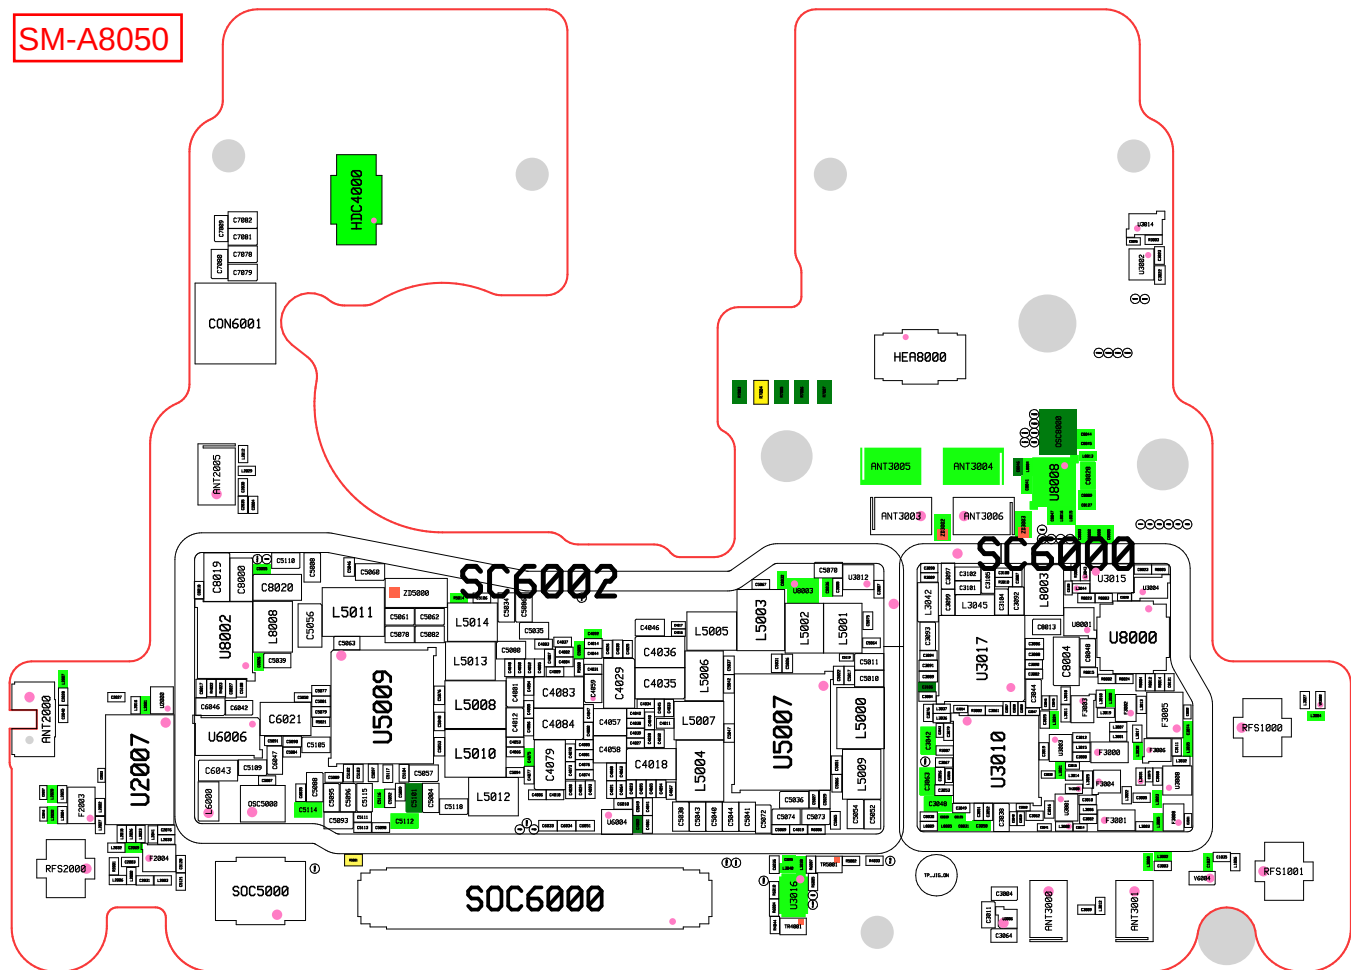

8. Level 3 Repair

8-3. Flow chart of Troubleshooting.

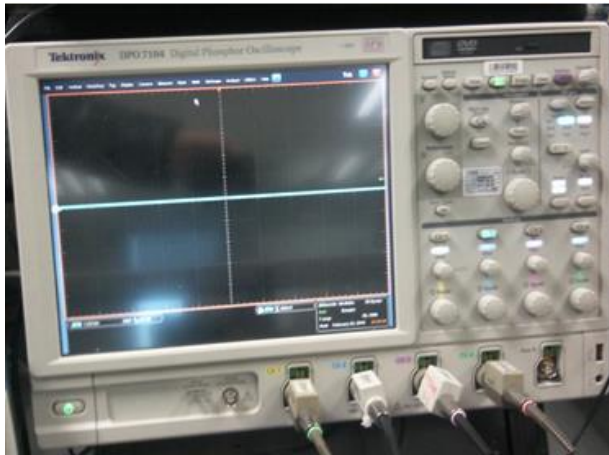

Oscilloscope




Digital Multimeter



Power Supply



+Y driver, ESD Safe Tweezer

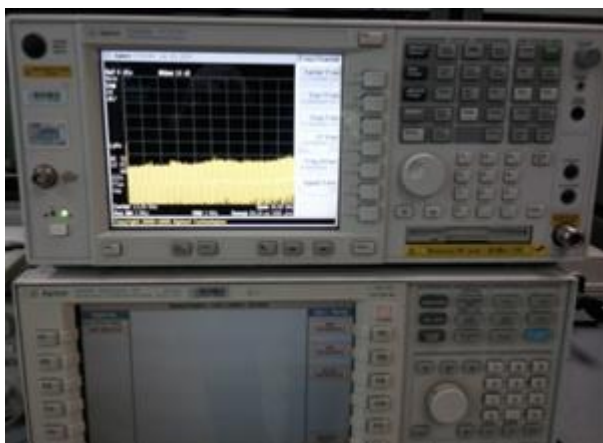


8960 & Spectrum Analyzer



Soldering iron


8. Level 3 Repair

8-4-1. Power On

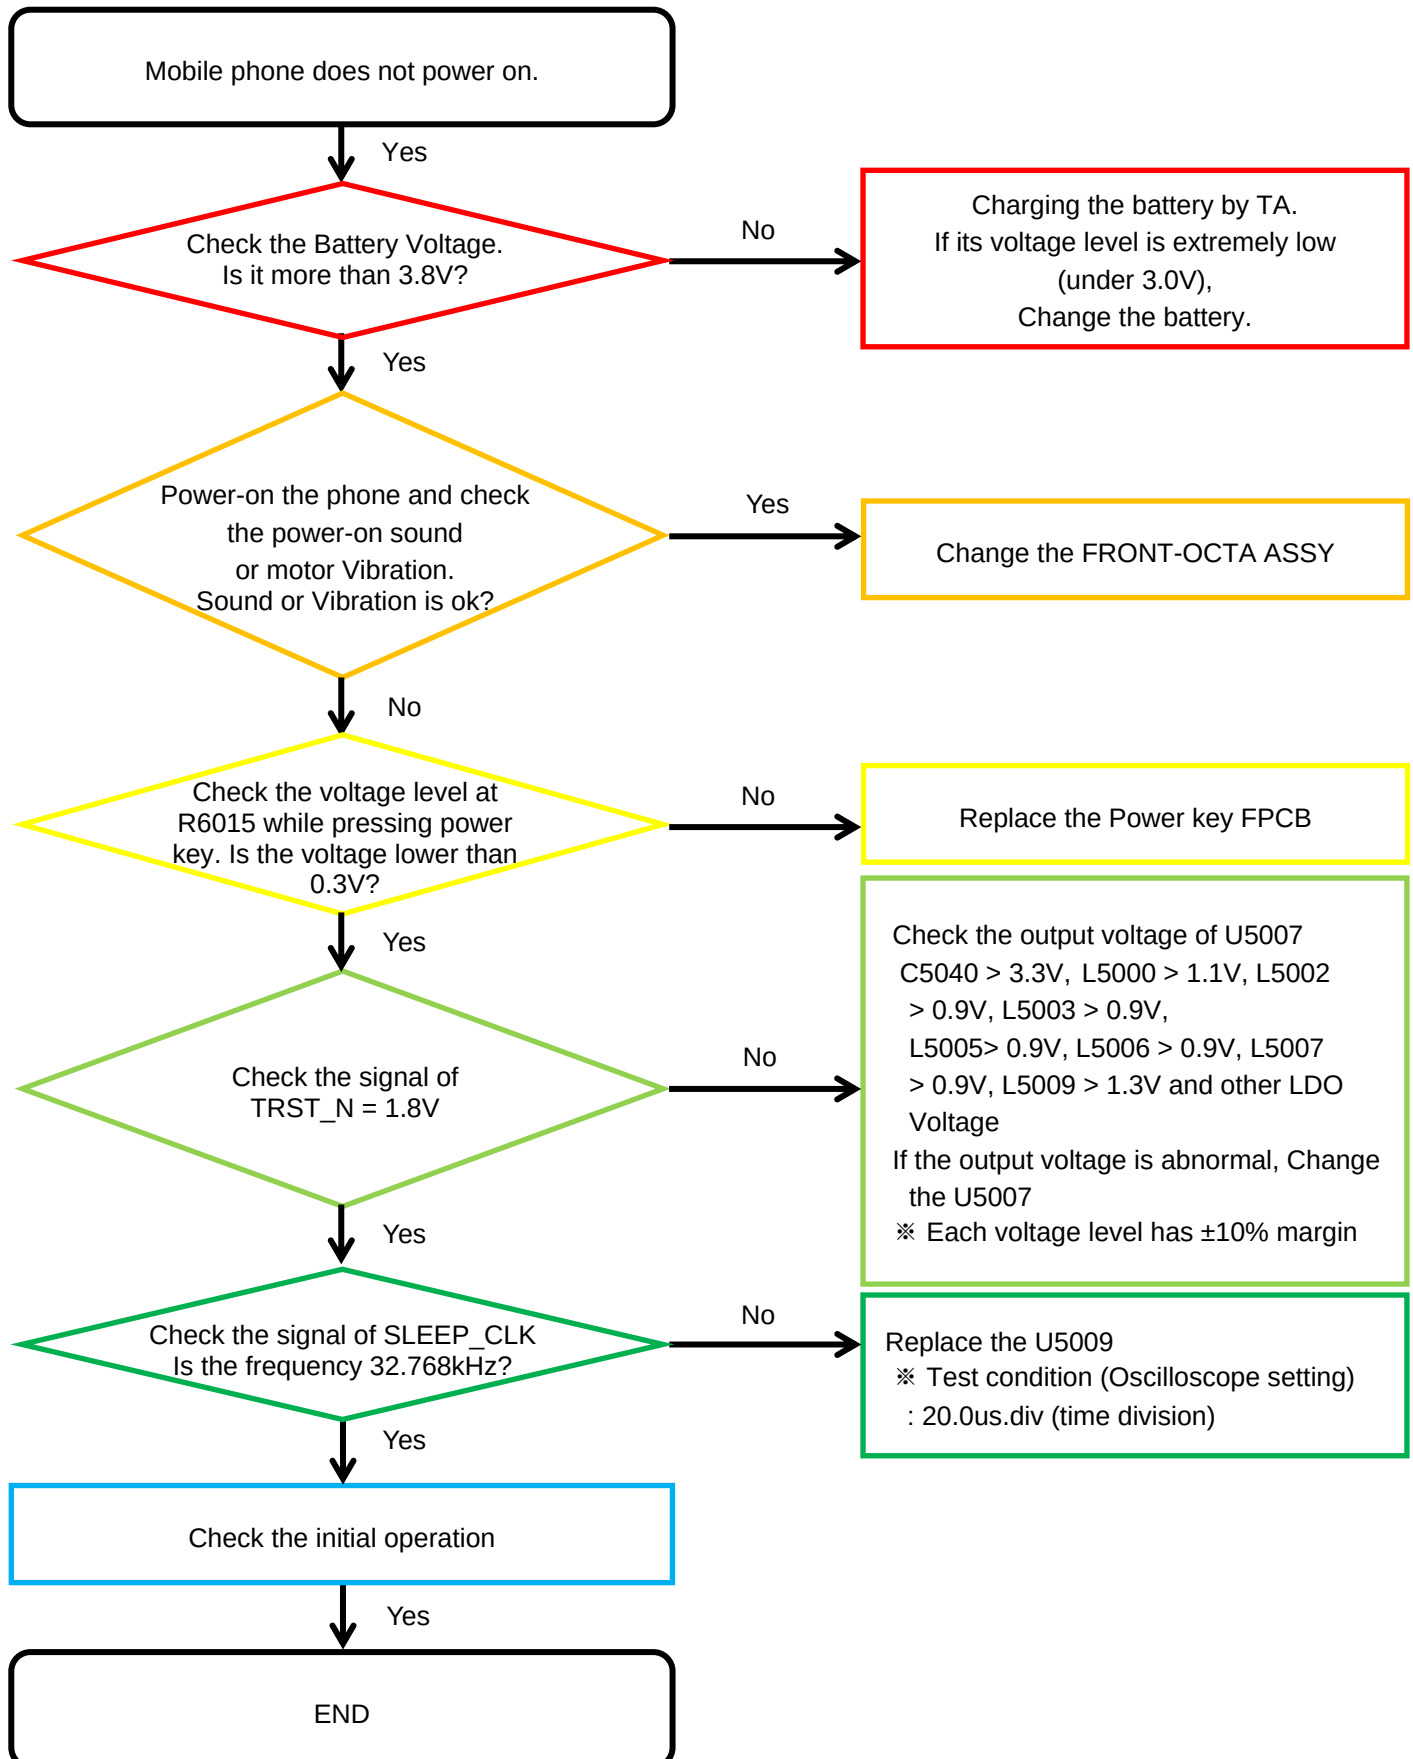


8. Level 3 Repair

8-4-2. Initial

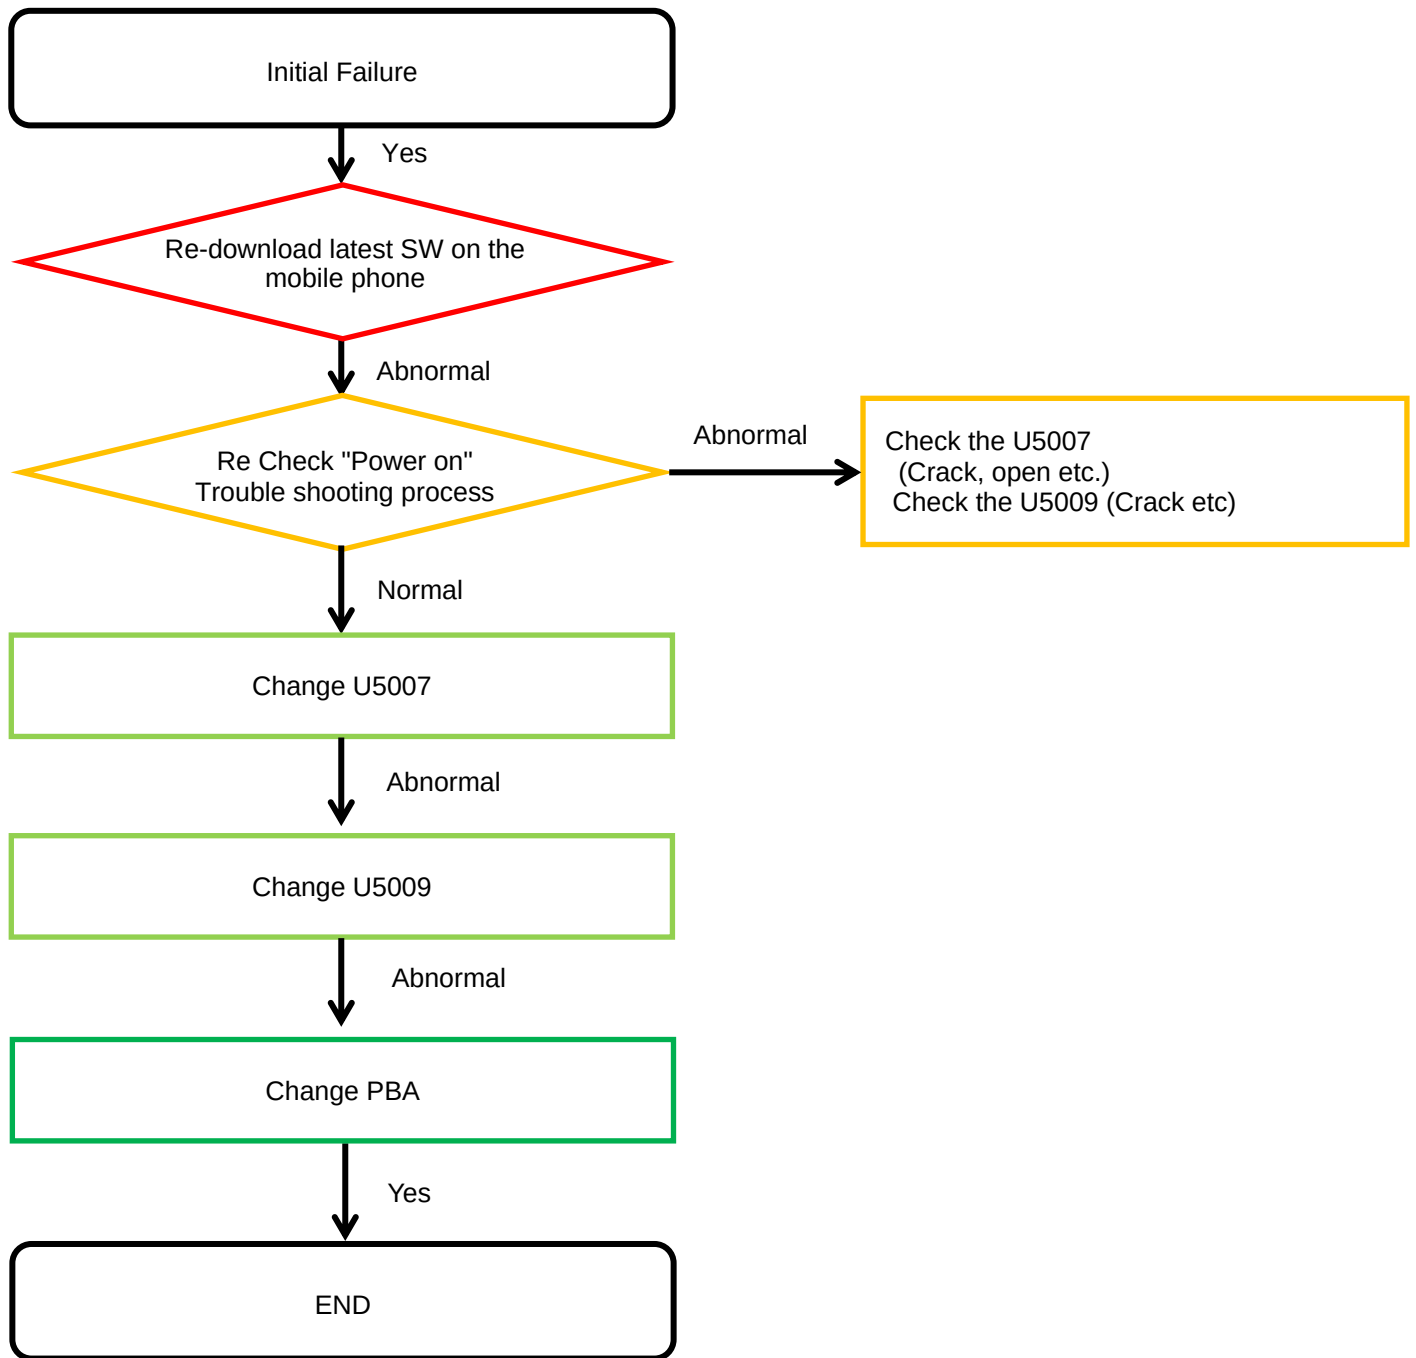


8. Level 3 Repair

8-4-3. No Service

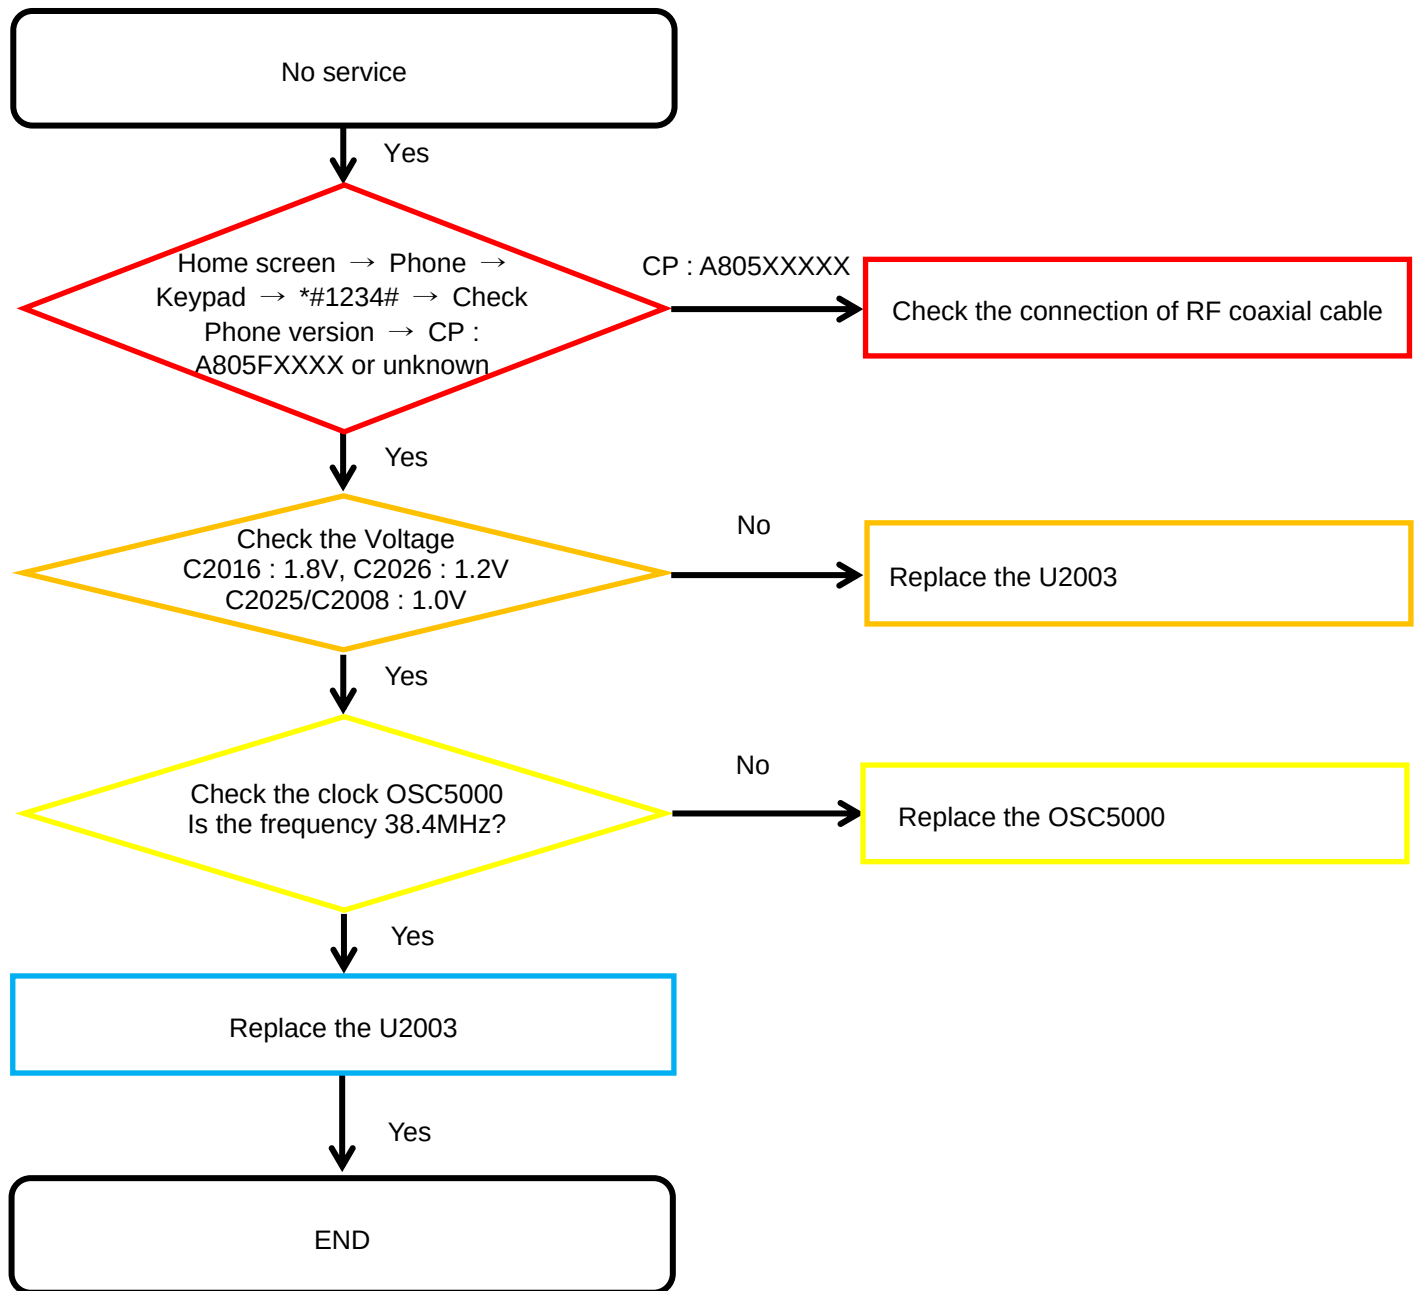


8. Level 3 Repair

8-4-4. SIM Part

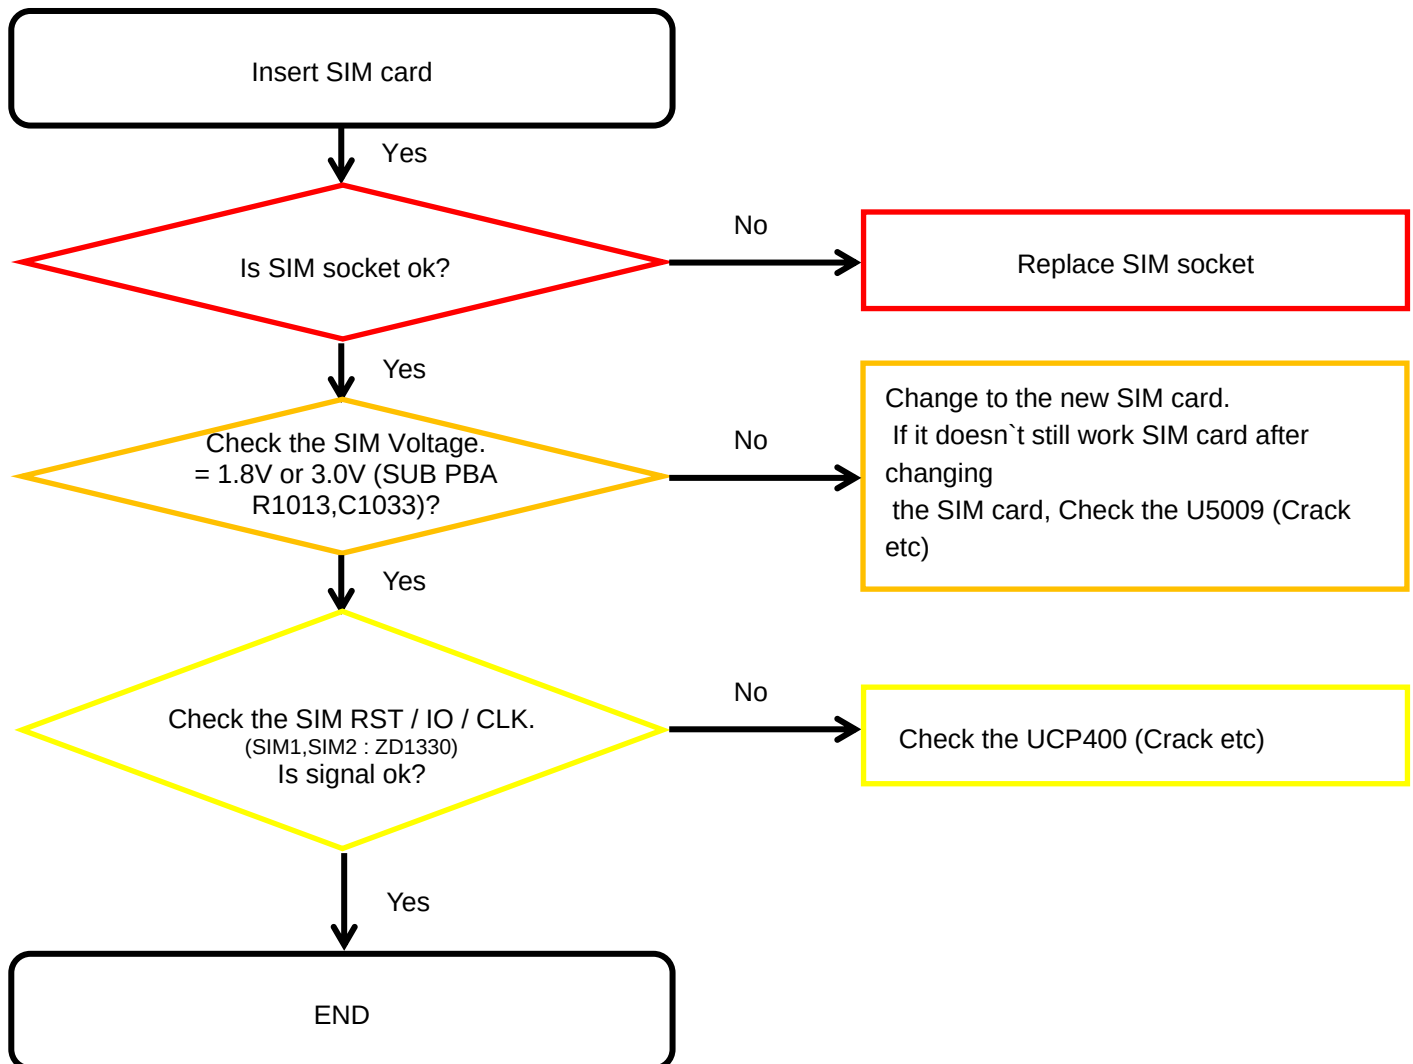


8. Level 3 Repair

8-4-5. Cable Charging Part

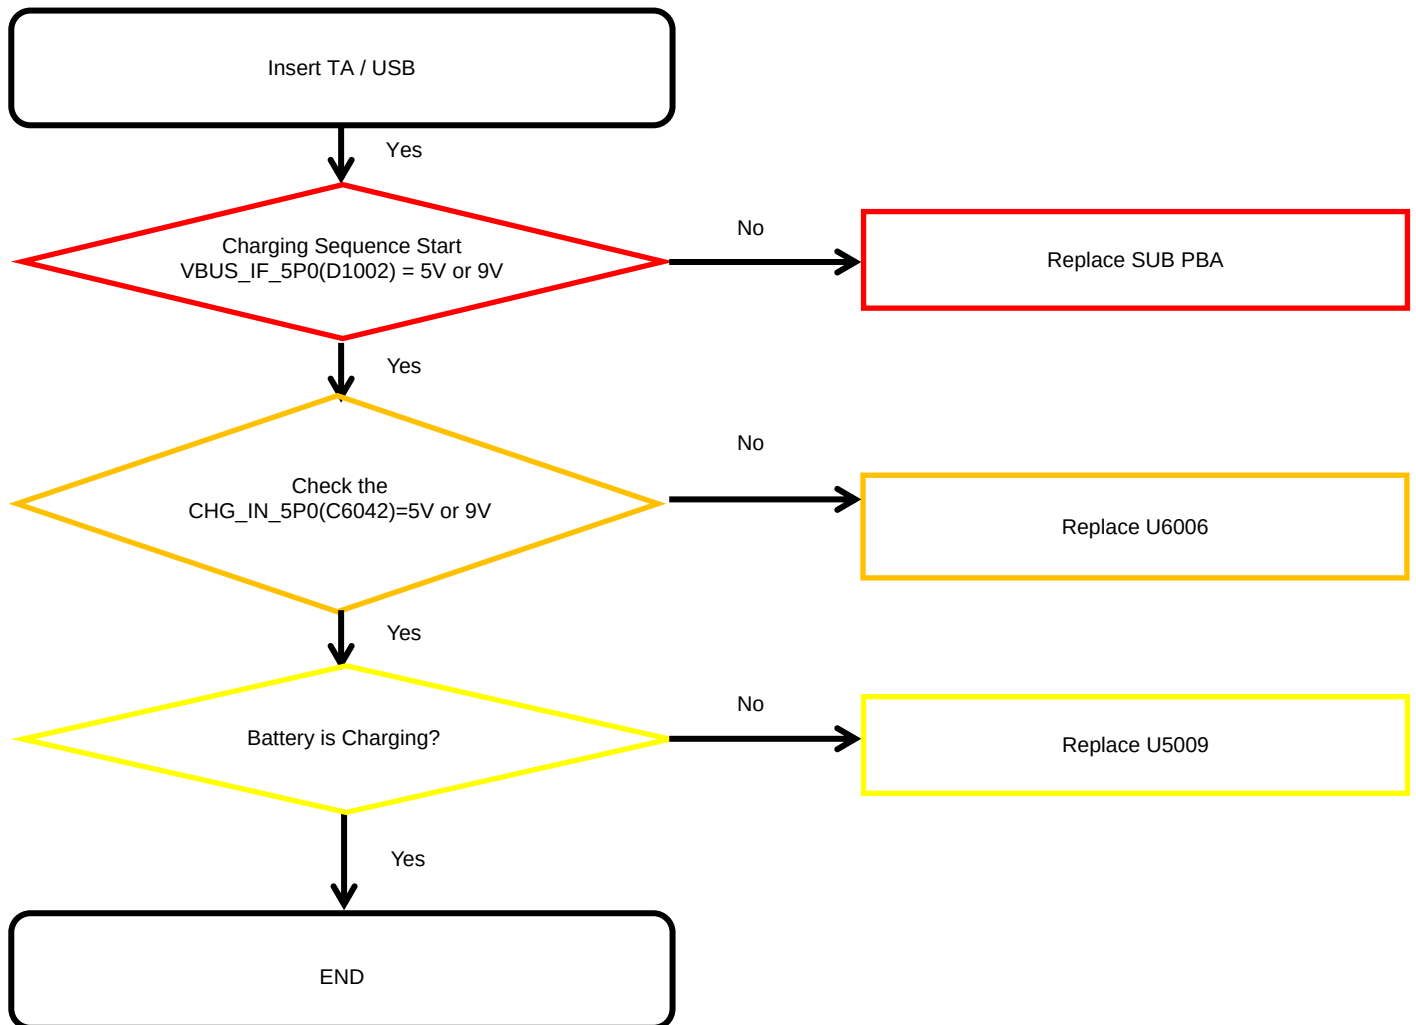


8. Level 3 Repair

8-4-6. OTG

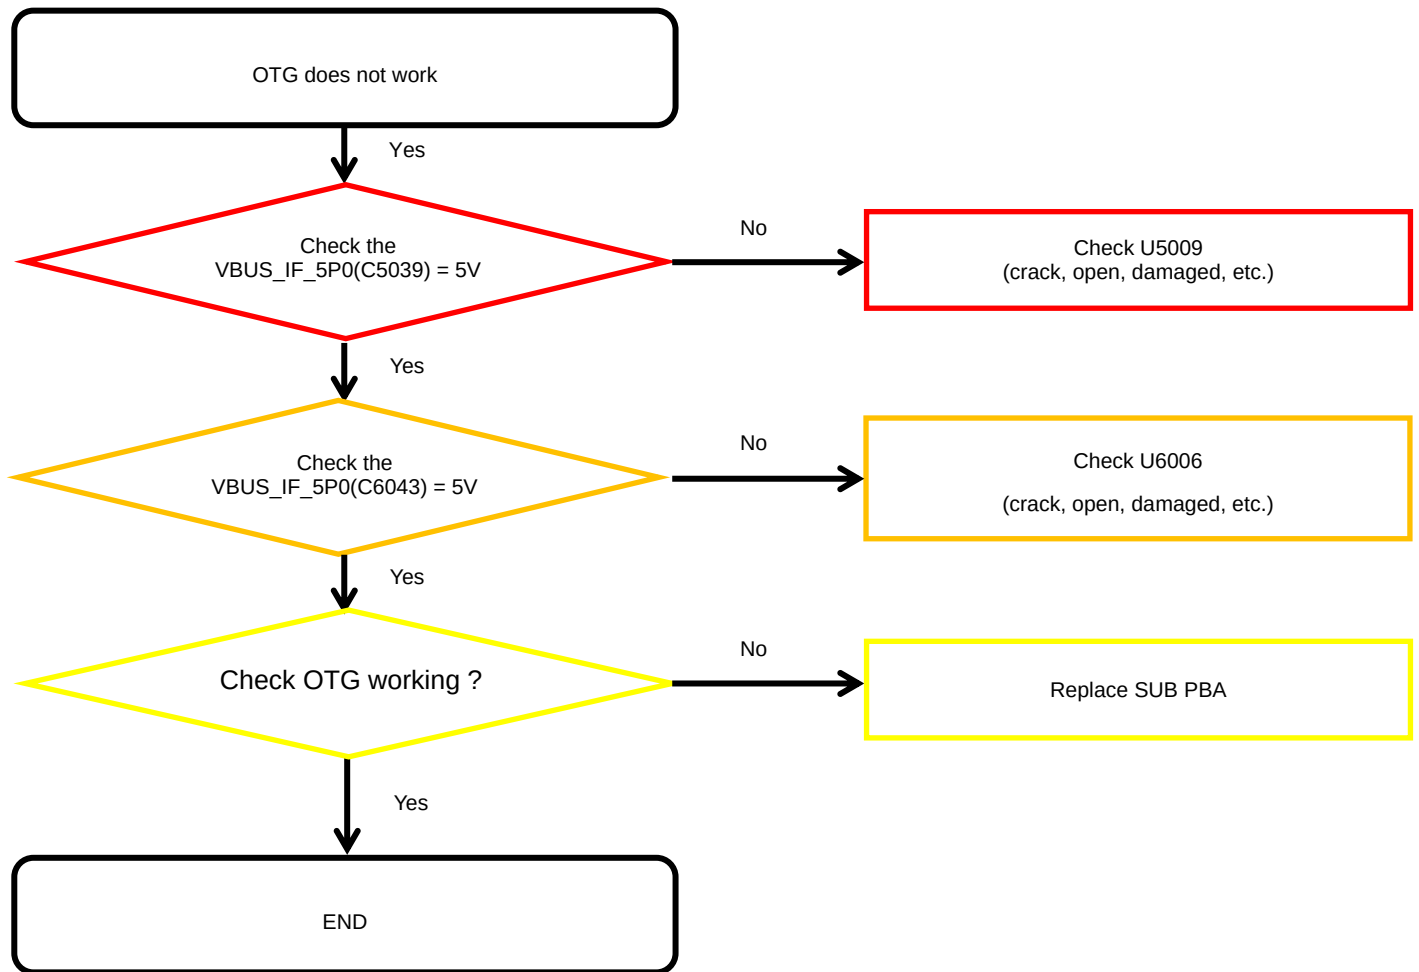


8. Level 3 Repair

8-4-7-1. Magnetic Sensor

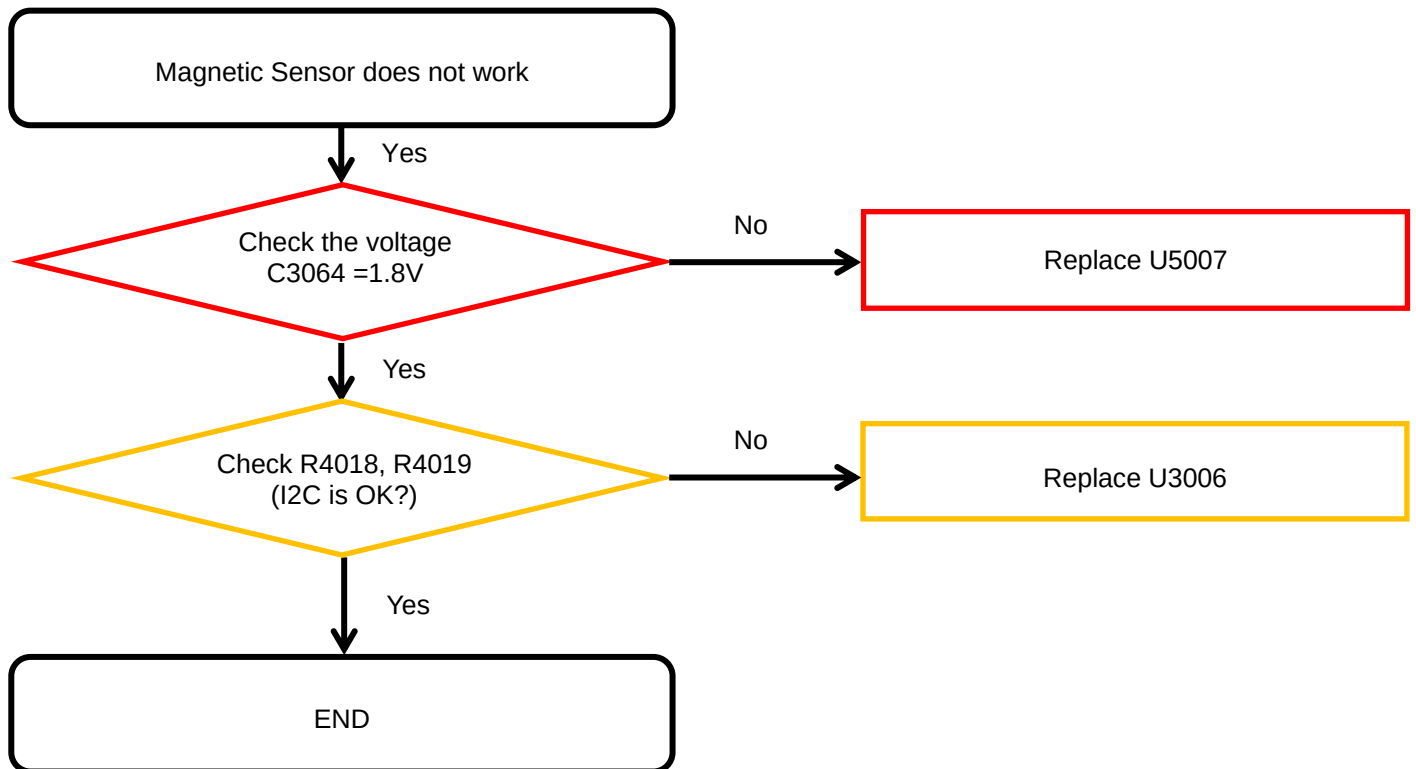


8. Level 3 Repair

8-4-7-2. 6Axis Sensor

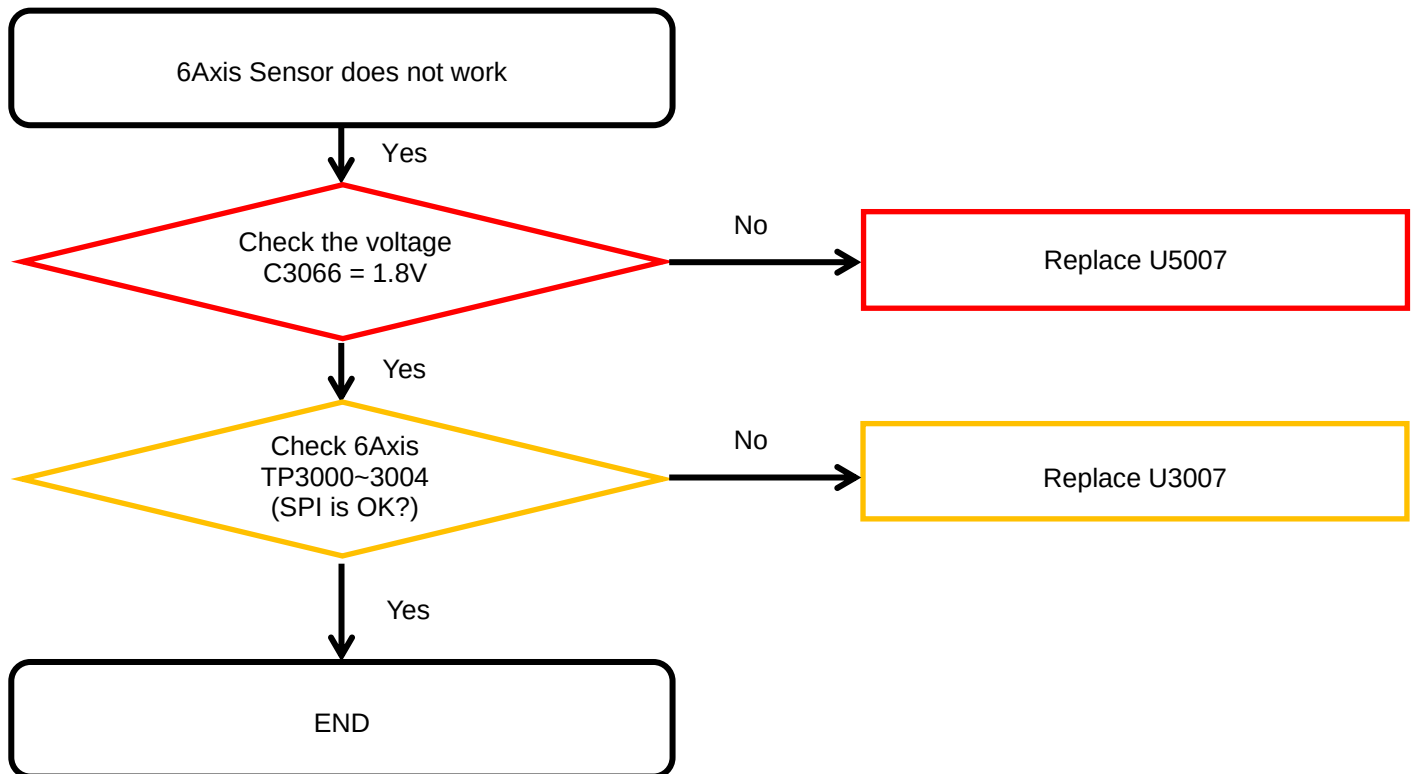


8. Level 3 Repair

8-4-7-3. Proximity

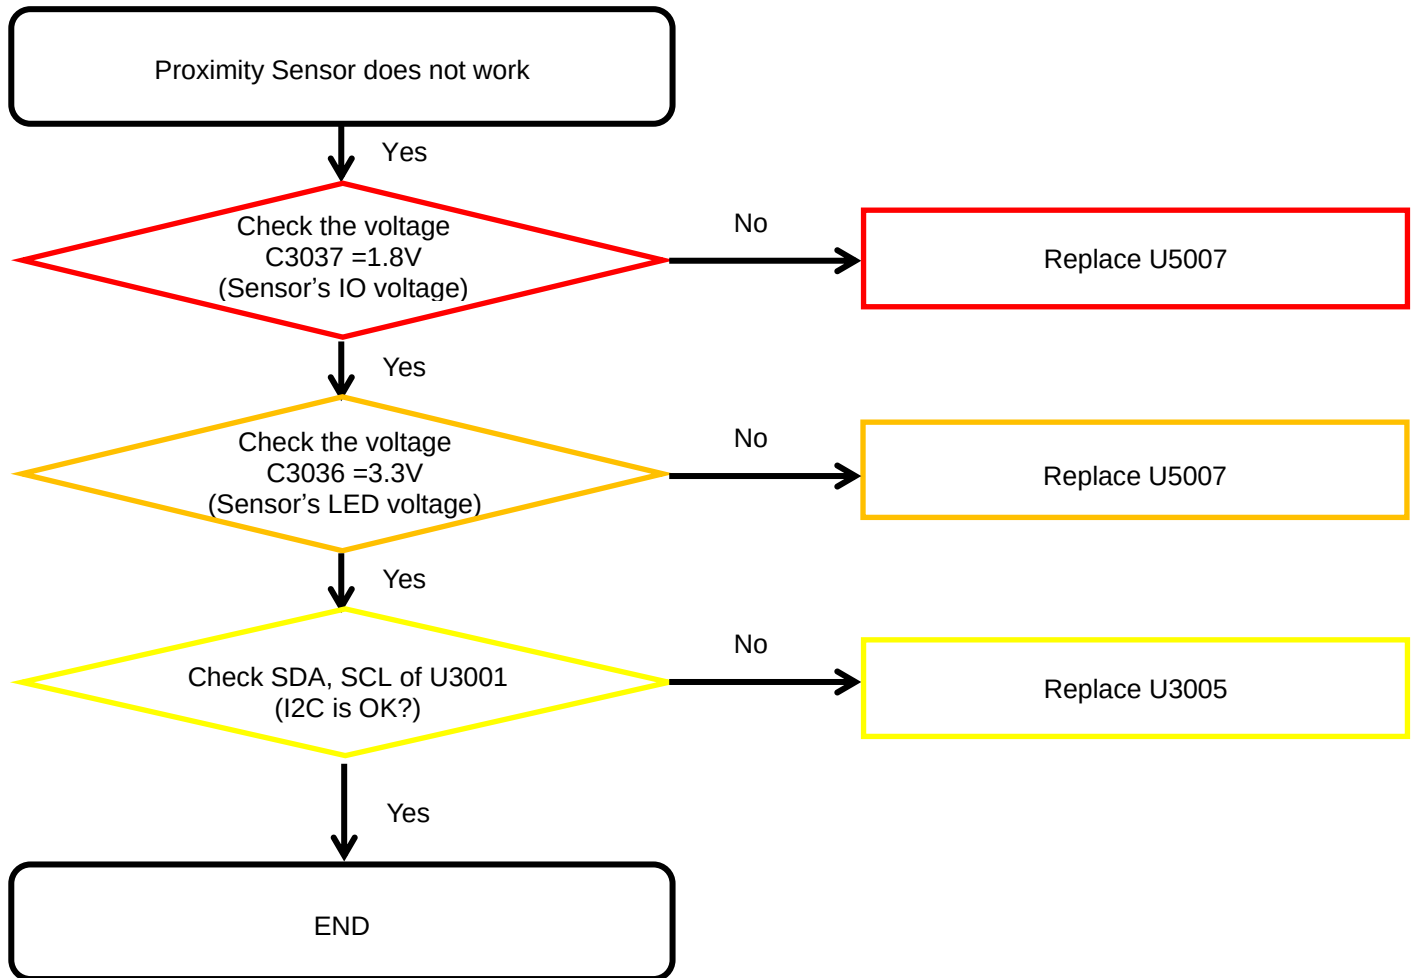


8. Level 3 Repair

8-4-7-4. Hall Sensor

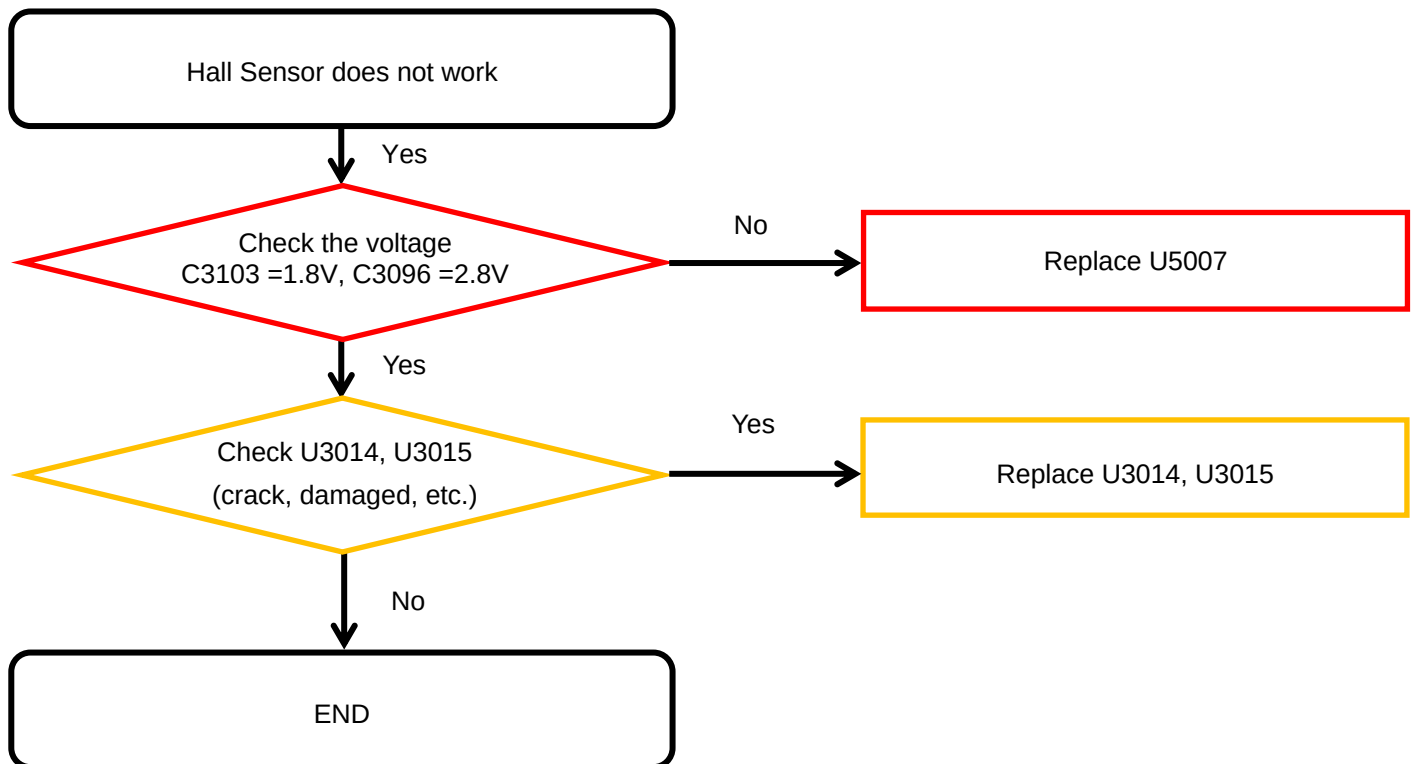


8. Level 3 Repair

8-4-7-5. Fingerprint Sensor

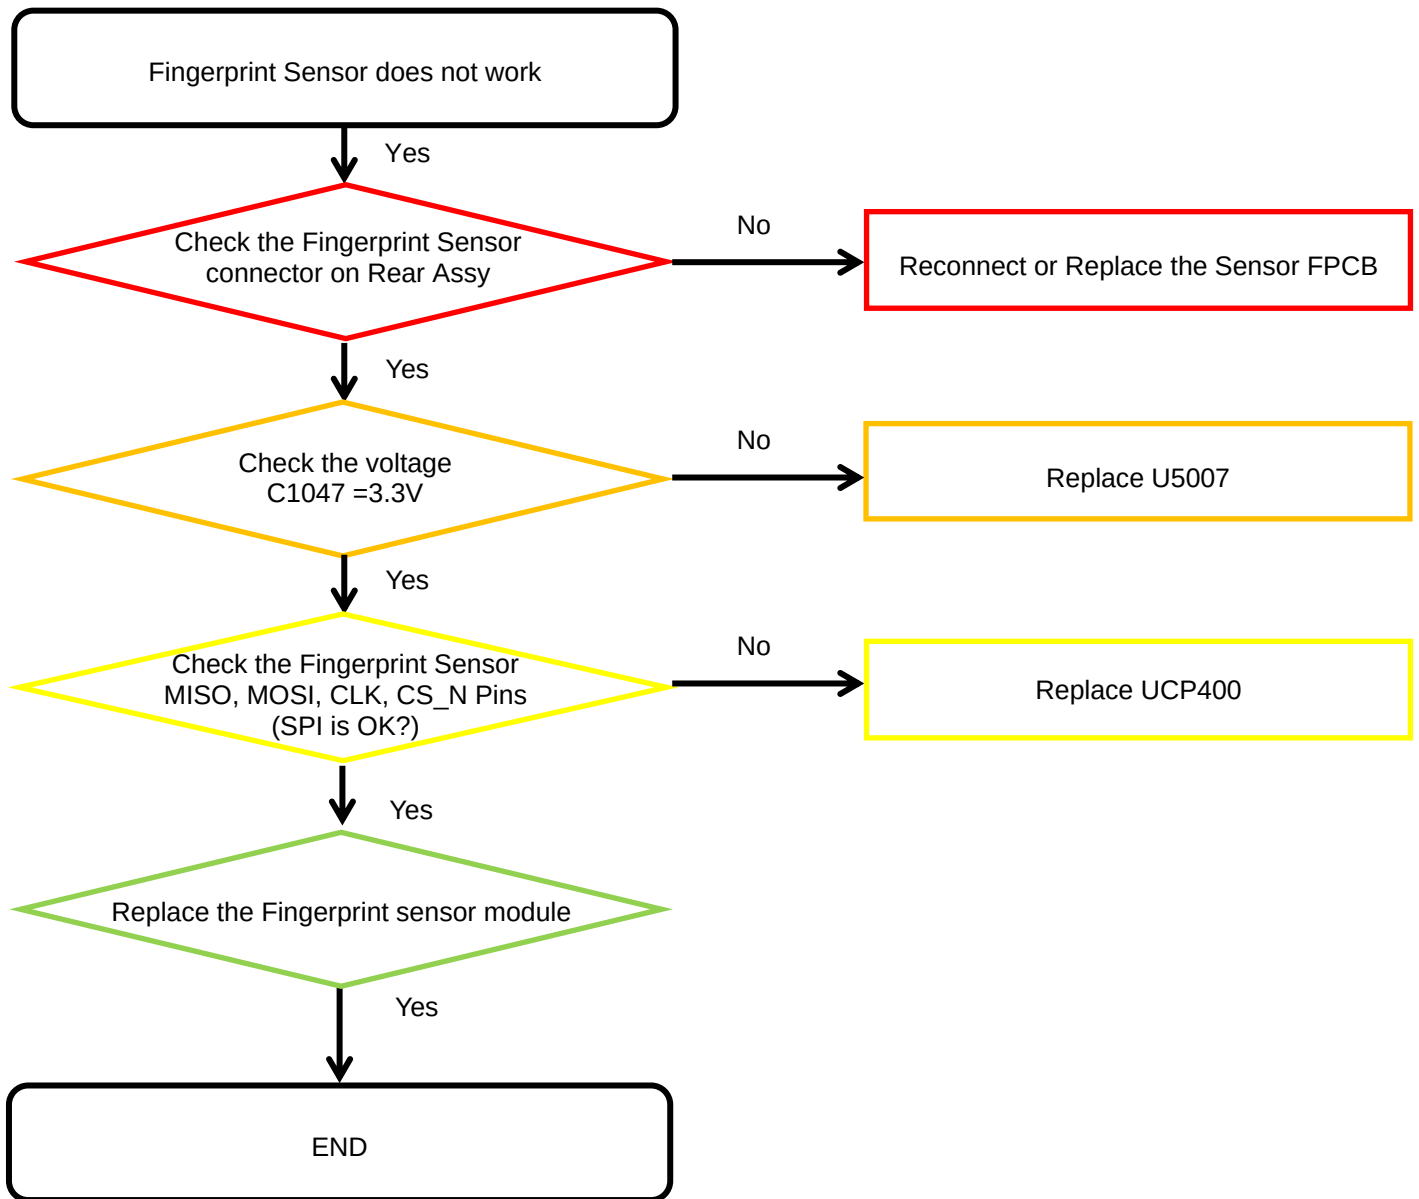


8. Level 3 Repair

8-4-8-1. Microphone Part - Main MIC

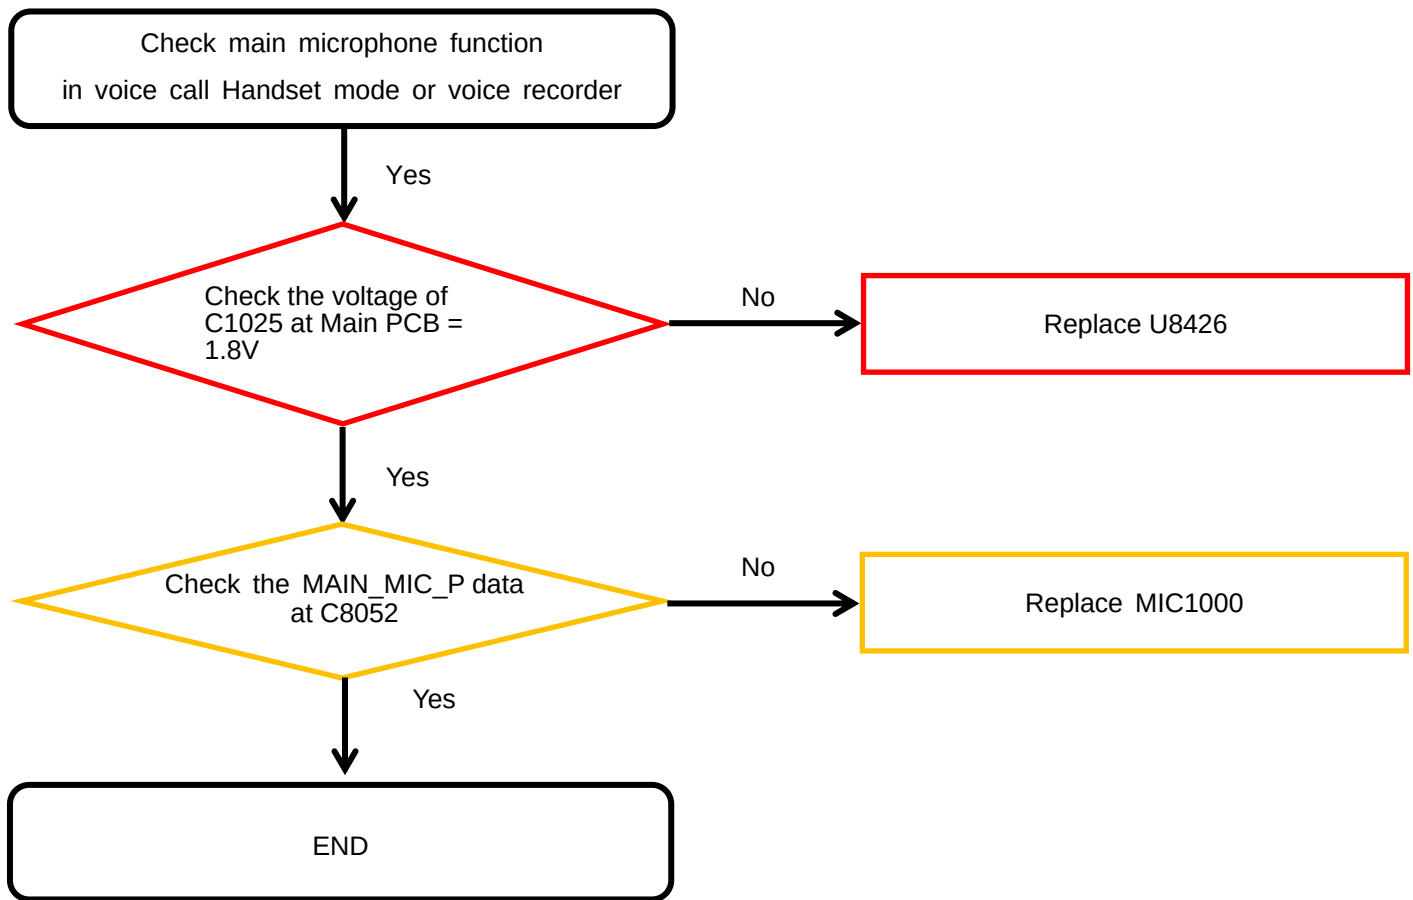


8. Level 3 Repair

8-4-8-2. Microphone Part - Sub(2nd) MIC

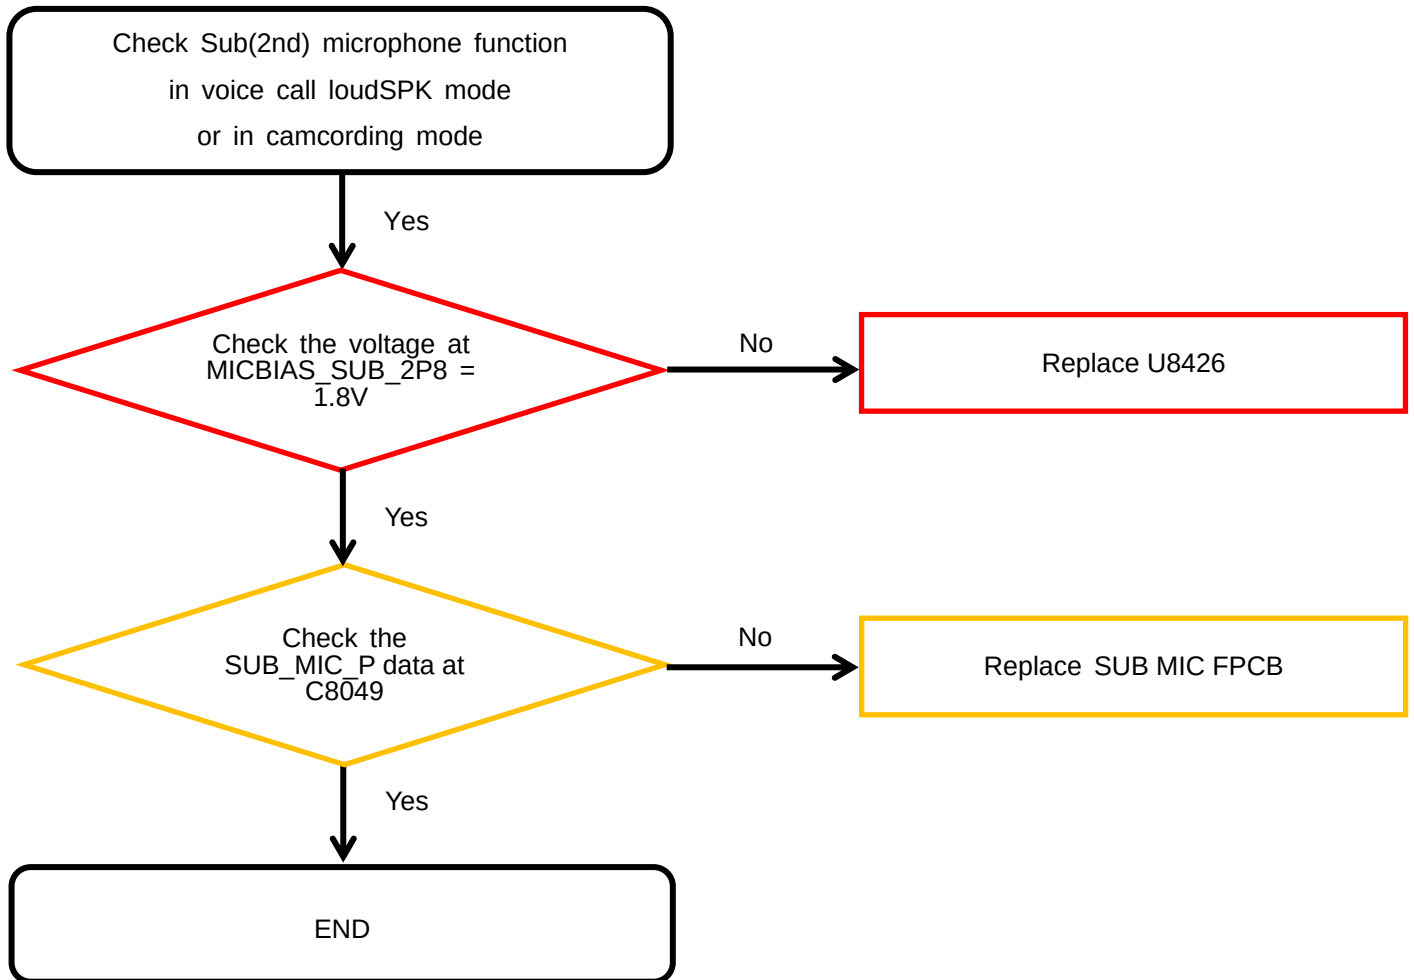


8. Level 3 Repair

8-4-9. Speaker Part

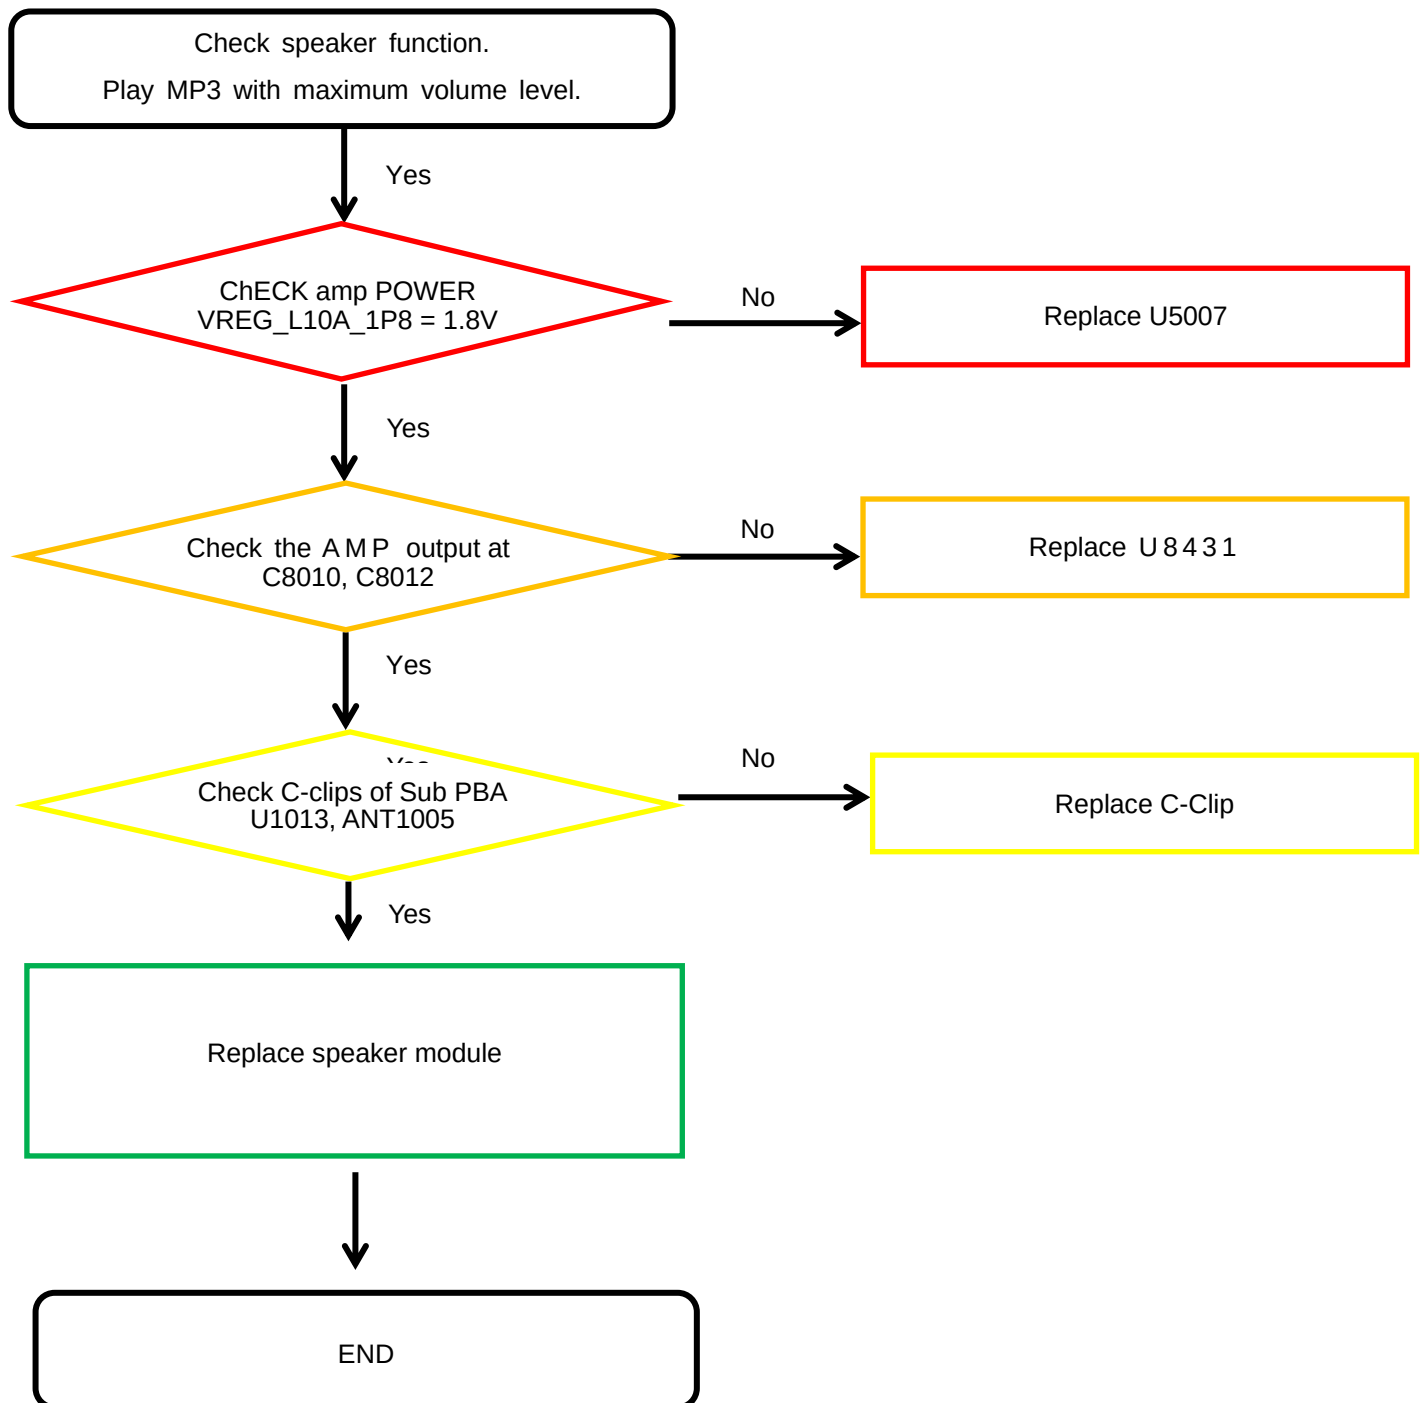


8. Level 3 Repair

8-4-10. Receiver Part / Vibration Motor

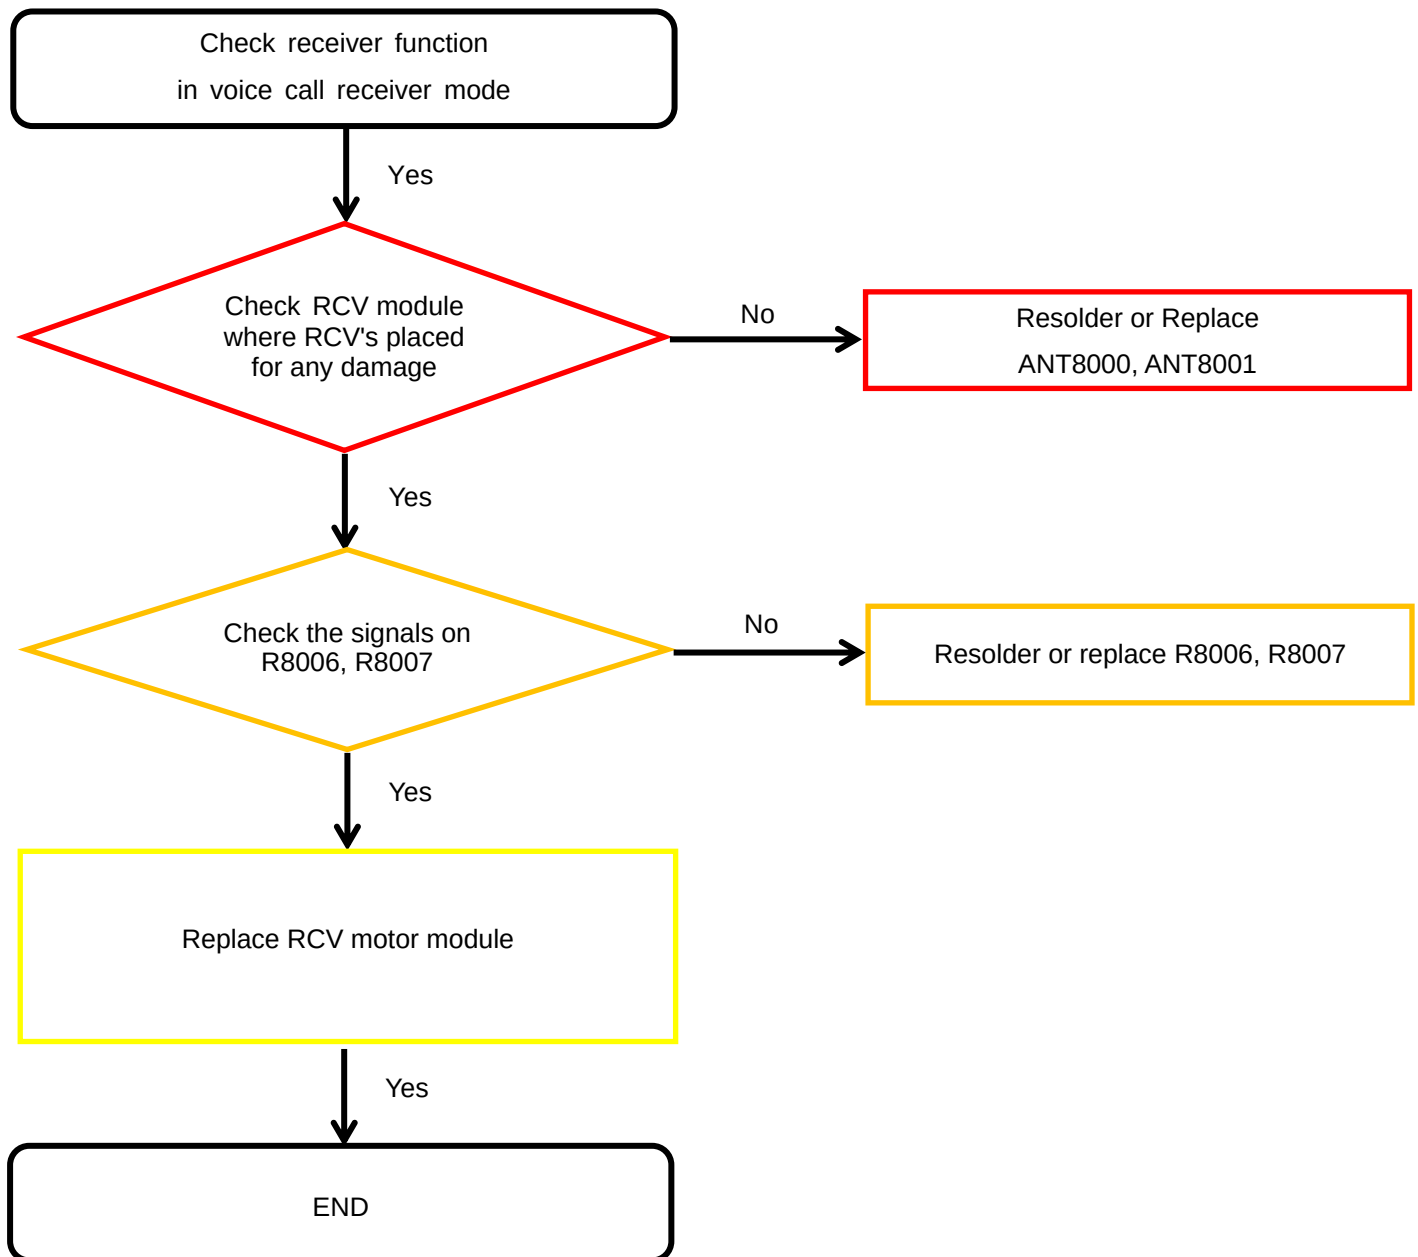


8. Level 3 Repair

8-4-11. BT/WIFI

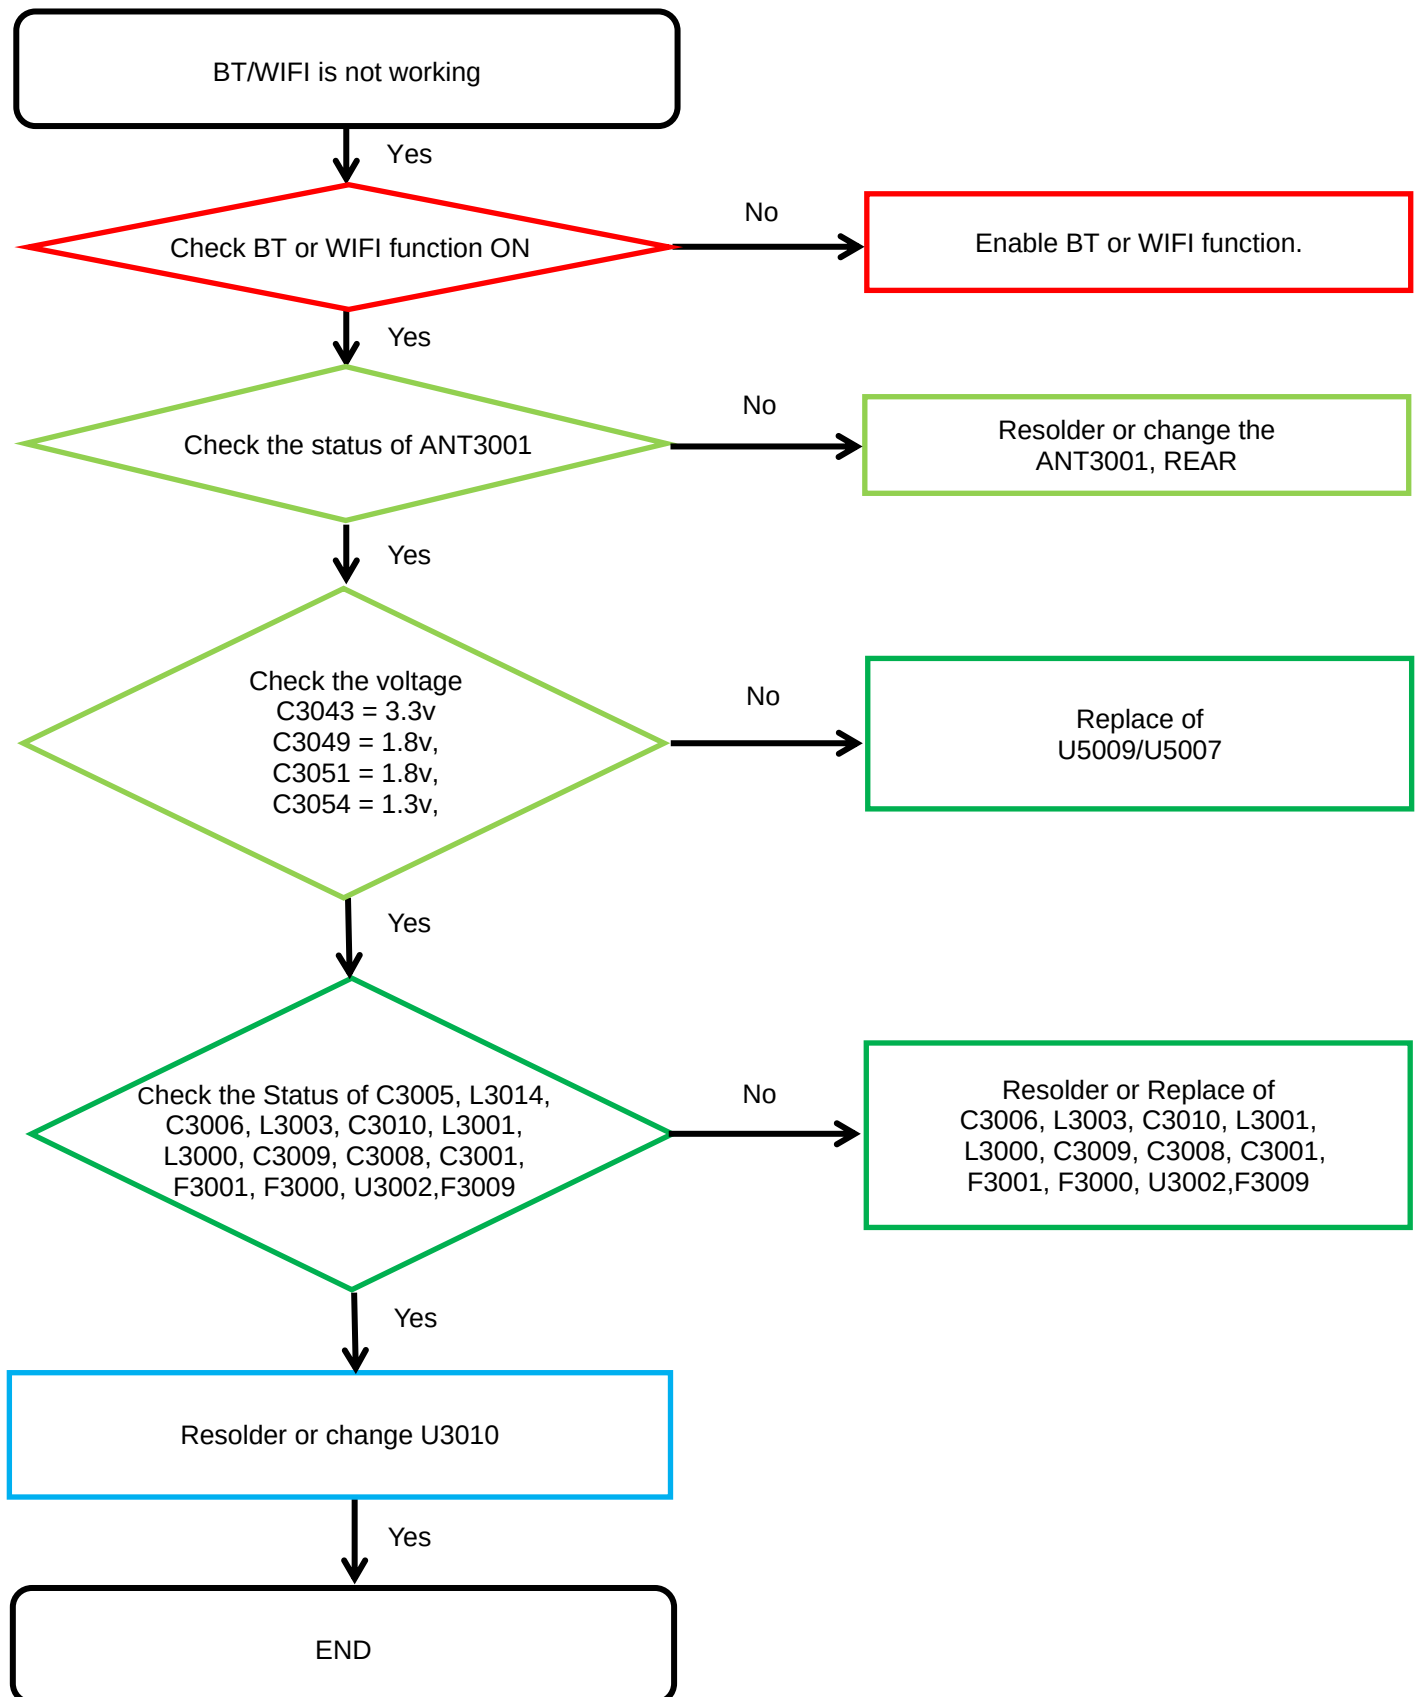


8. Level 3 Repair

8-4-12. GPS

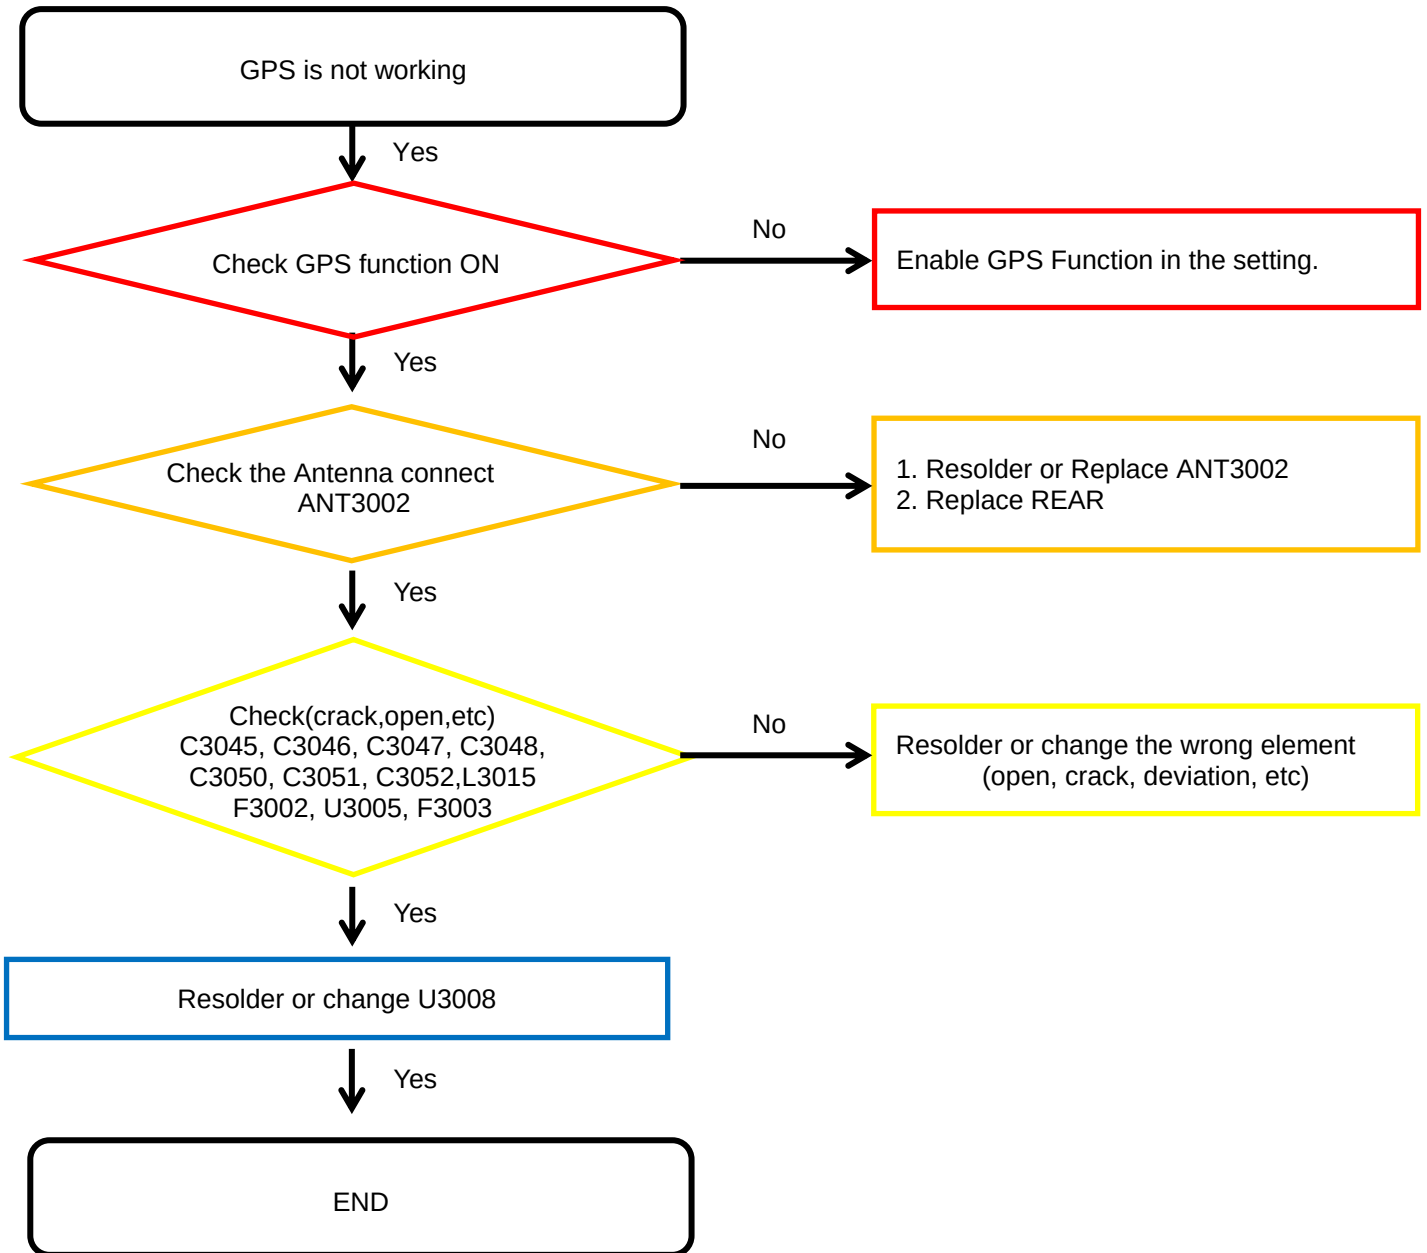


8. Level 3 Repair

8-4-13. NFC

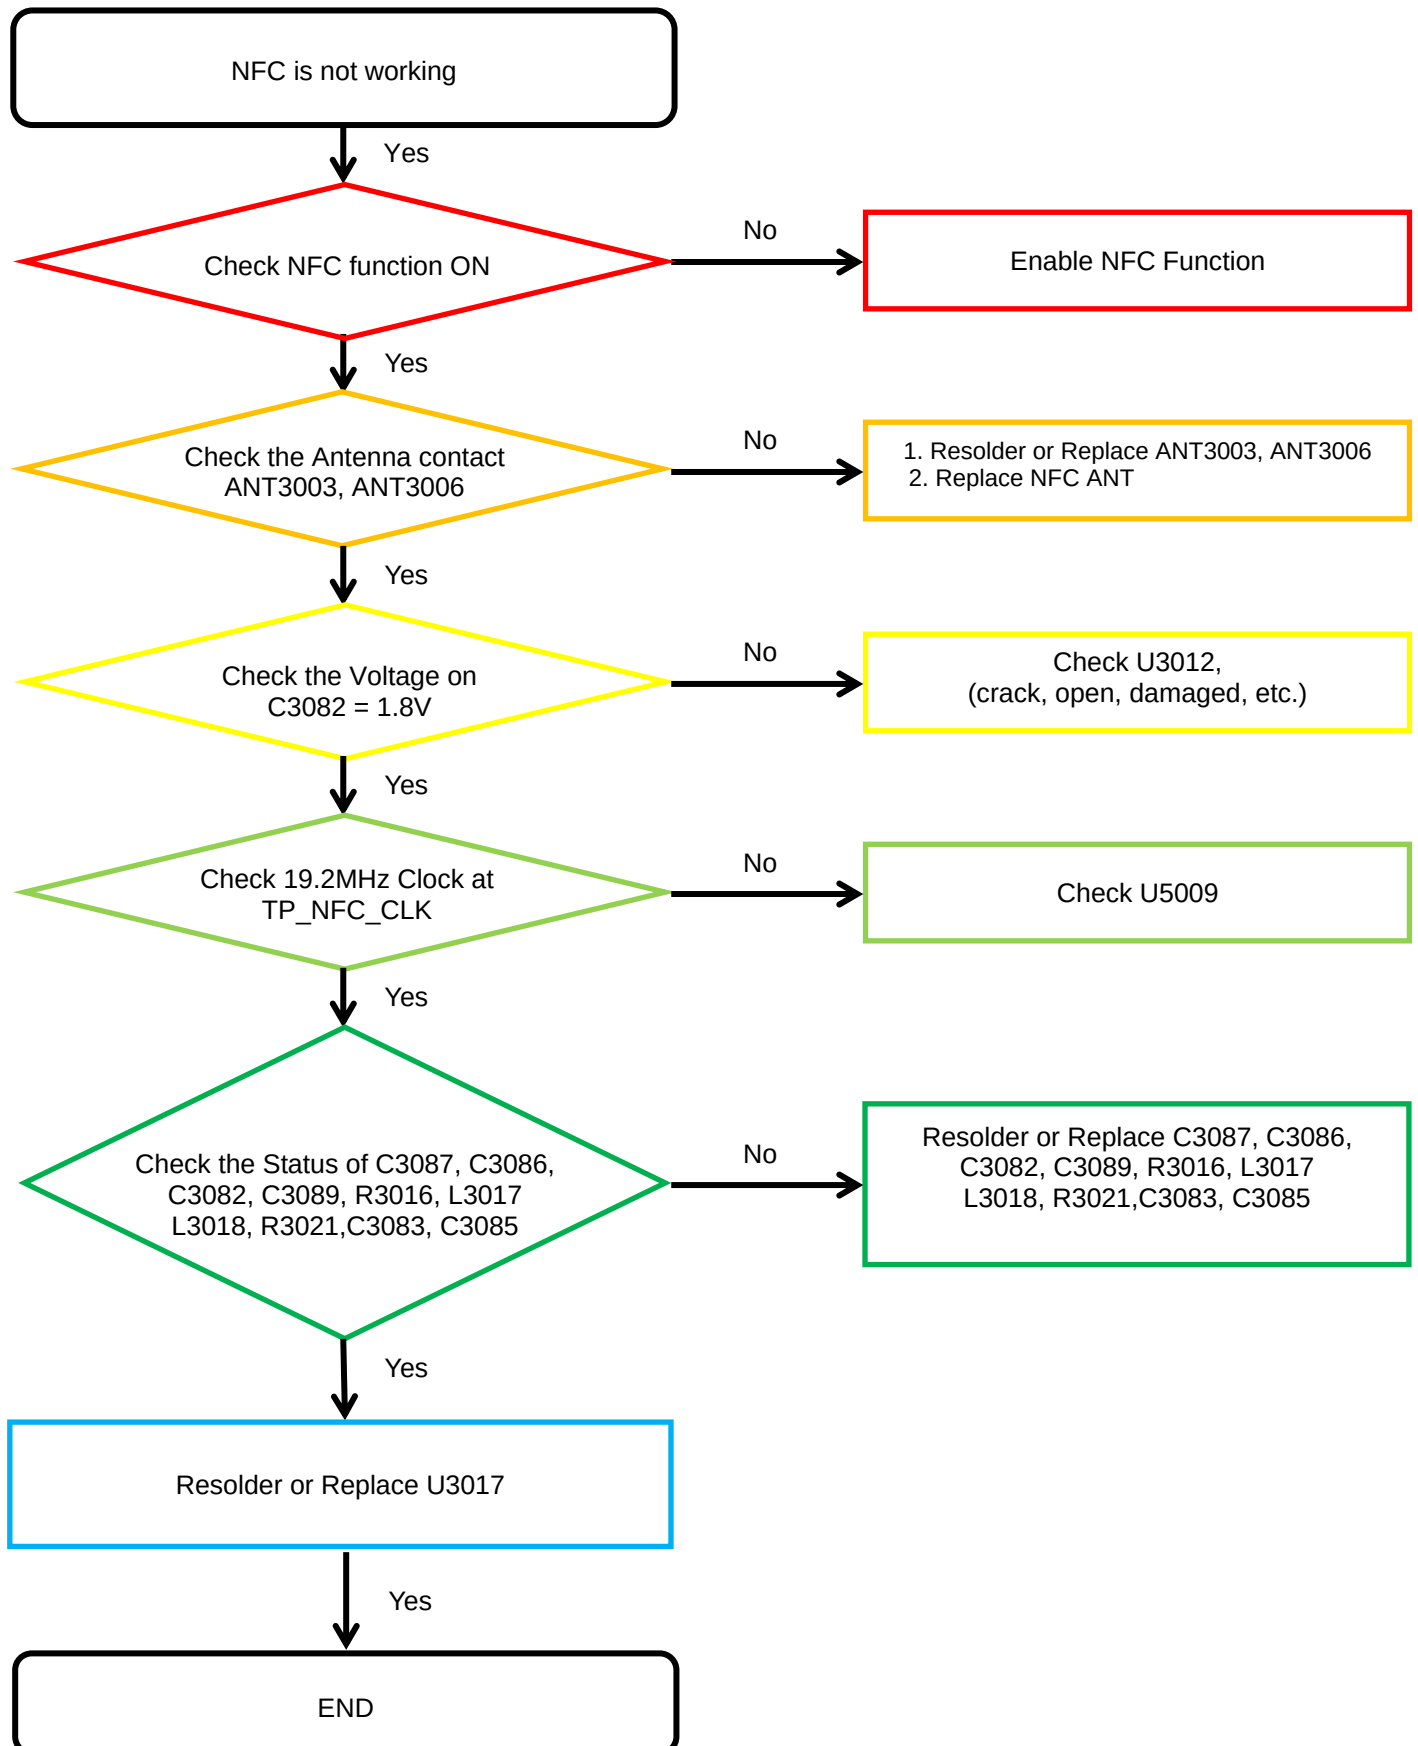


8. Level 3 Repair

8-4-14. FM radio part

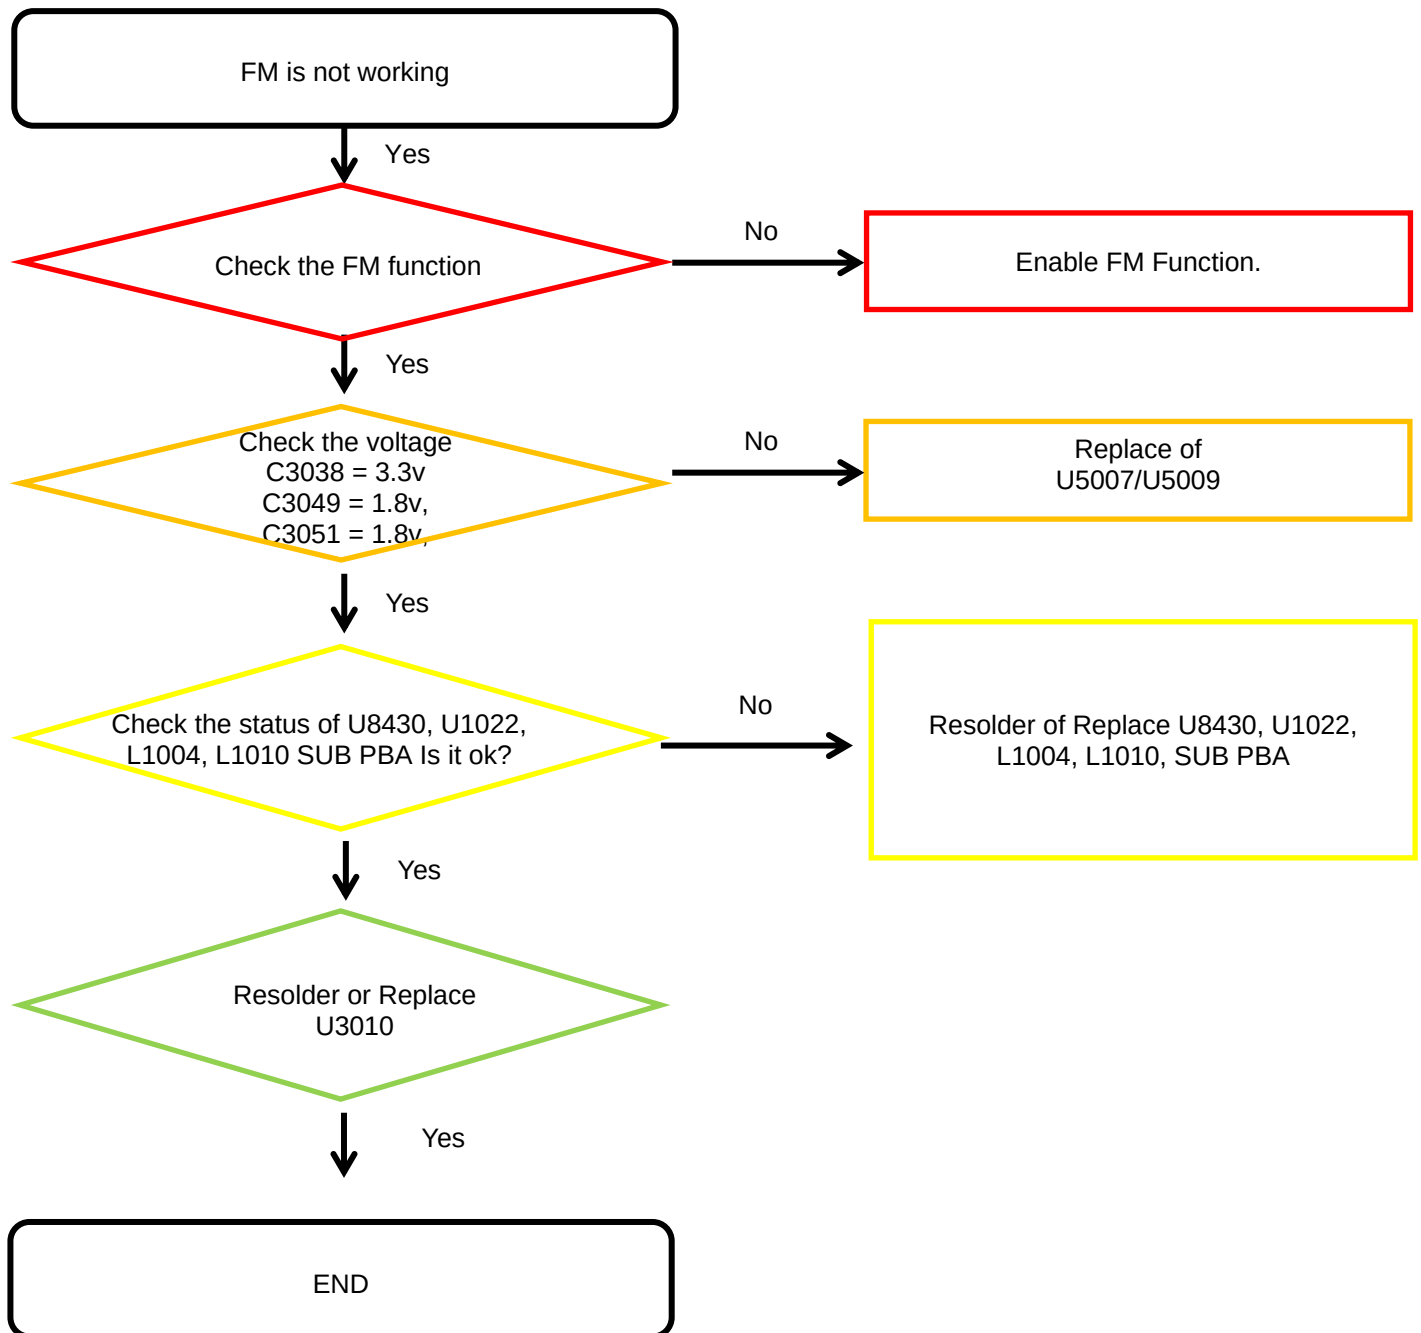


8. Level 3 Repair

8-4-15. Display

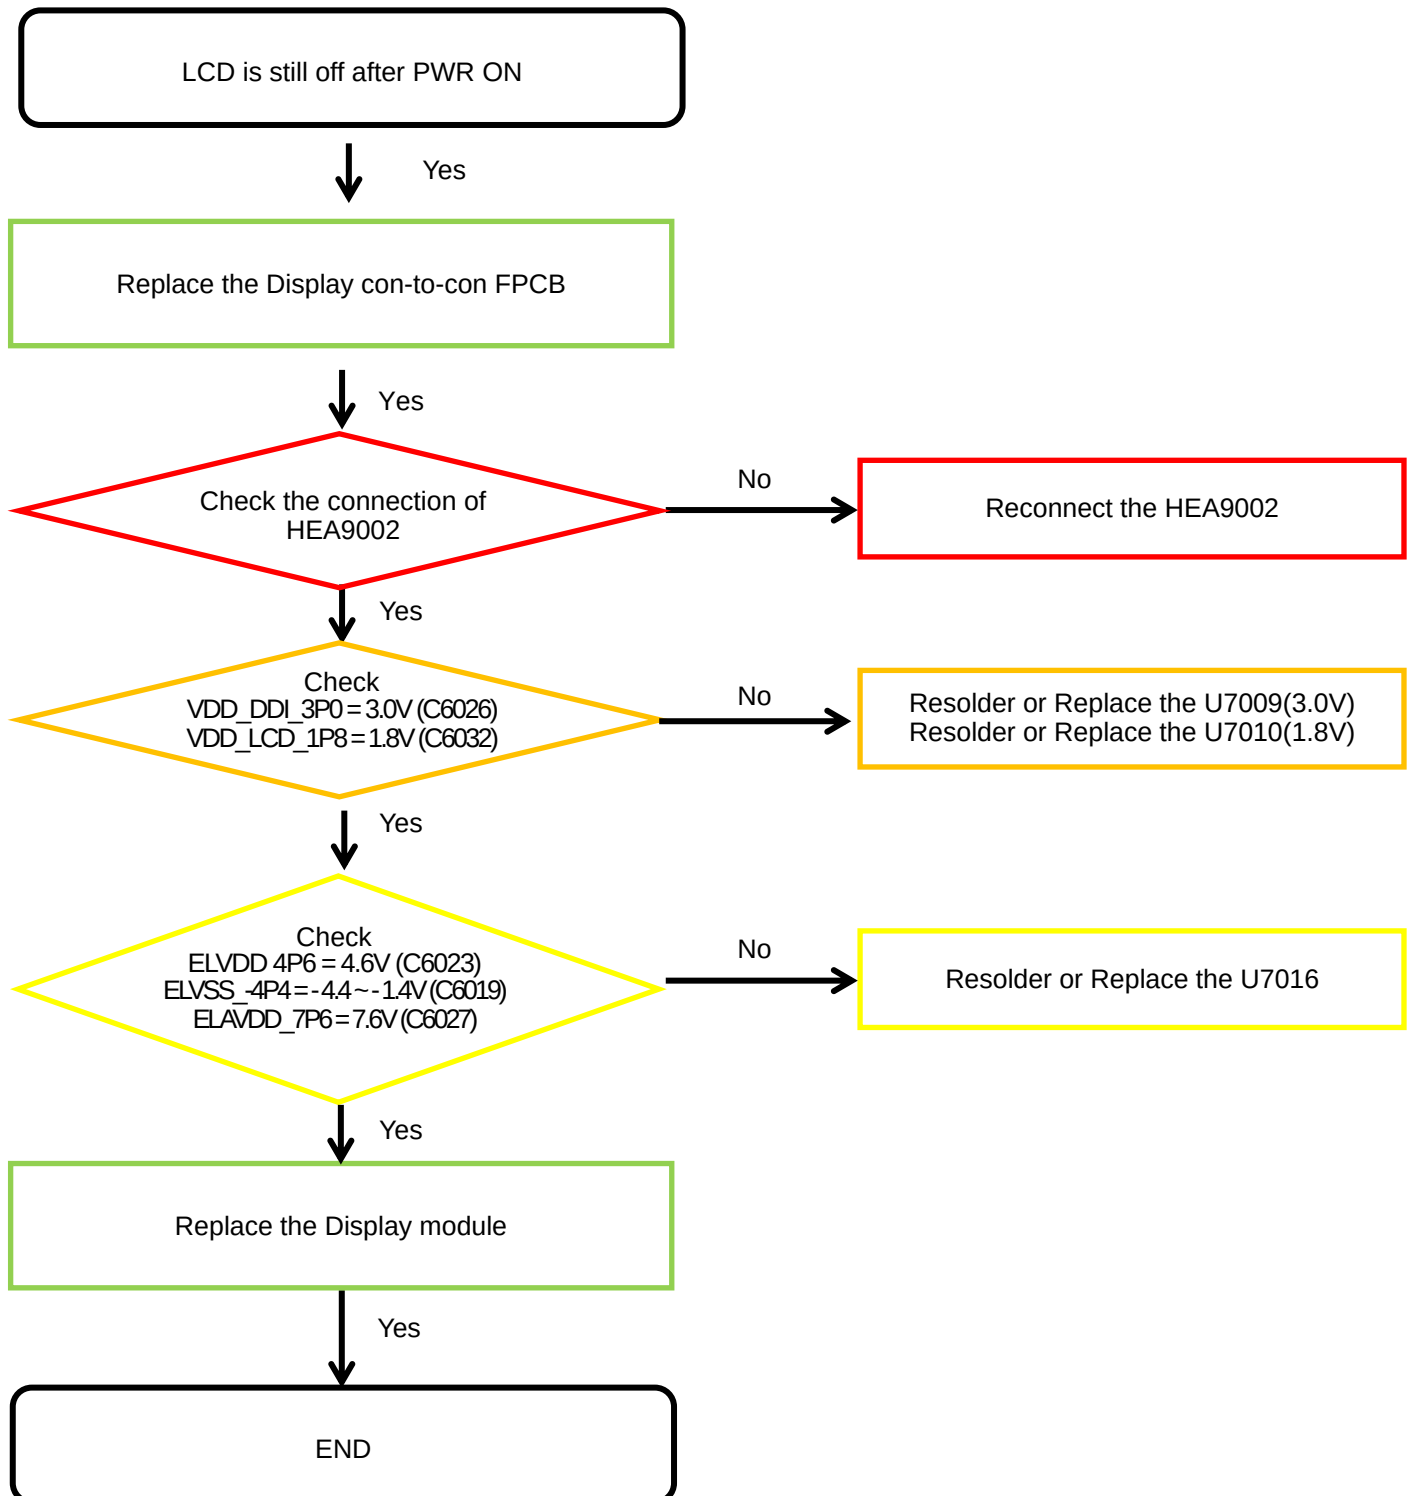


8. Level 3 Repair

8-4-16. Triple Camera

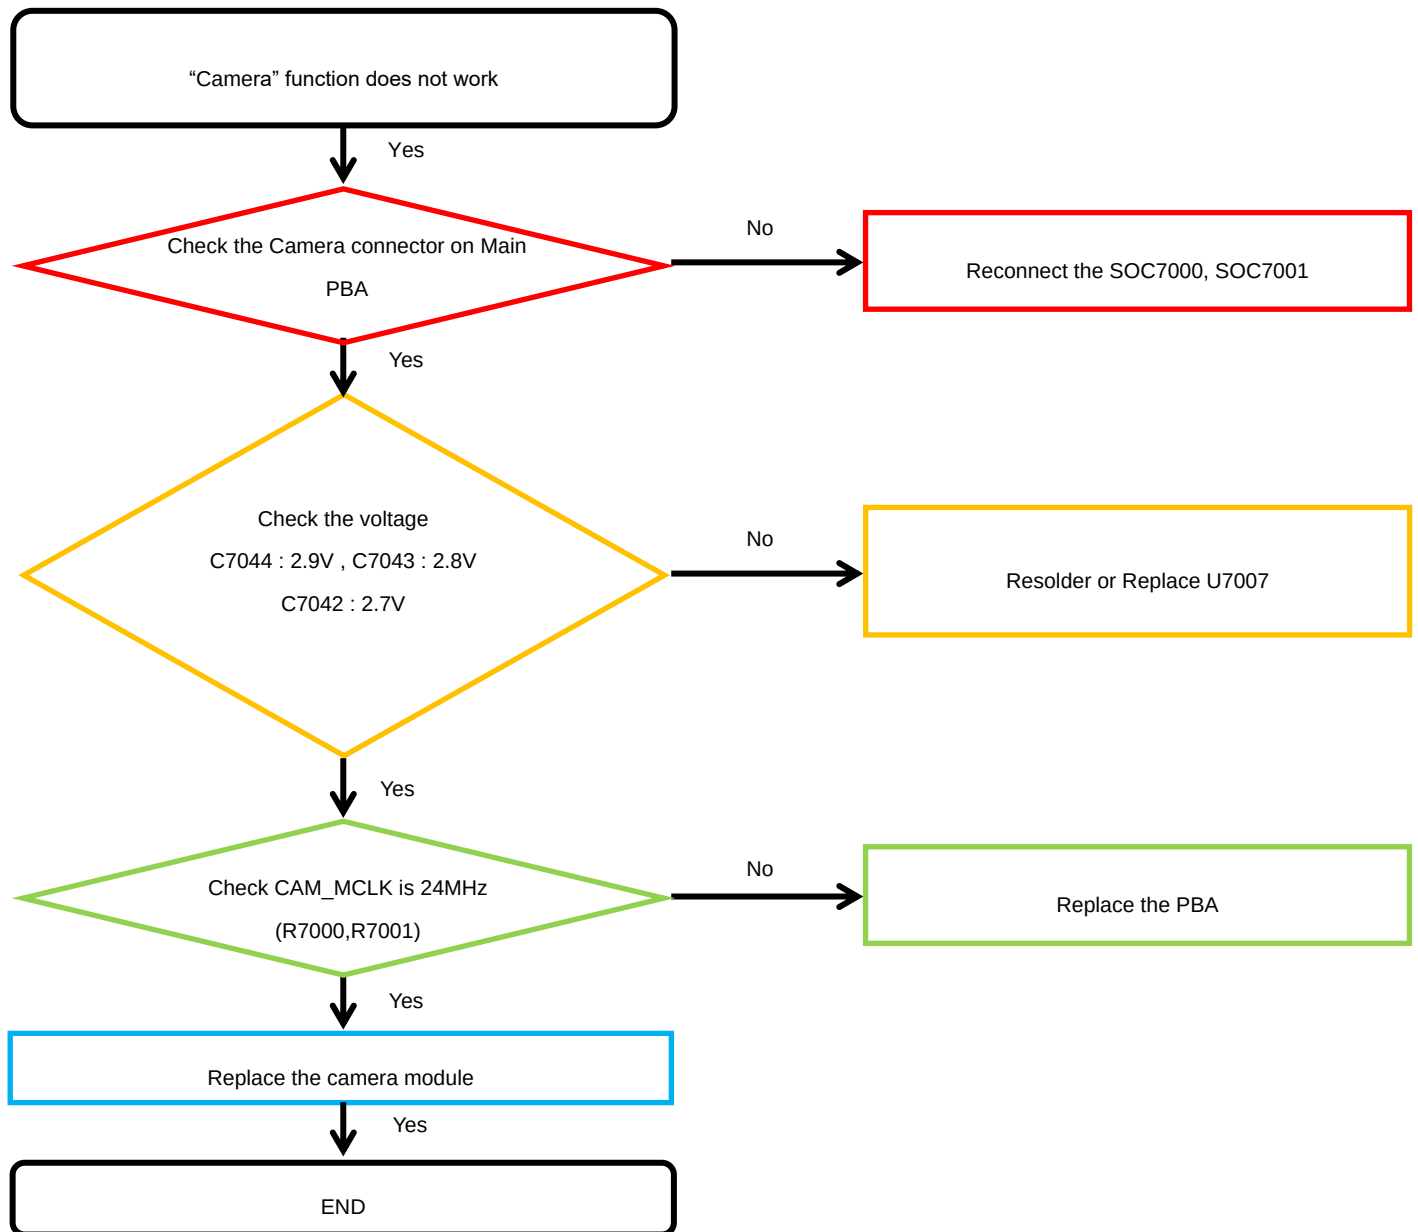


8. Level 3 Repair

8-4-17. TSP

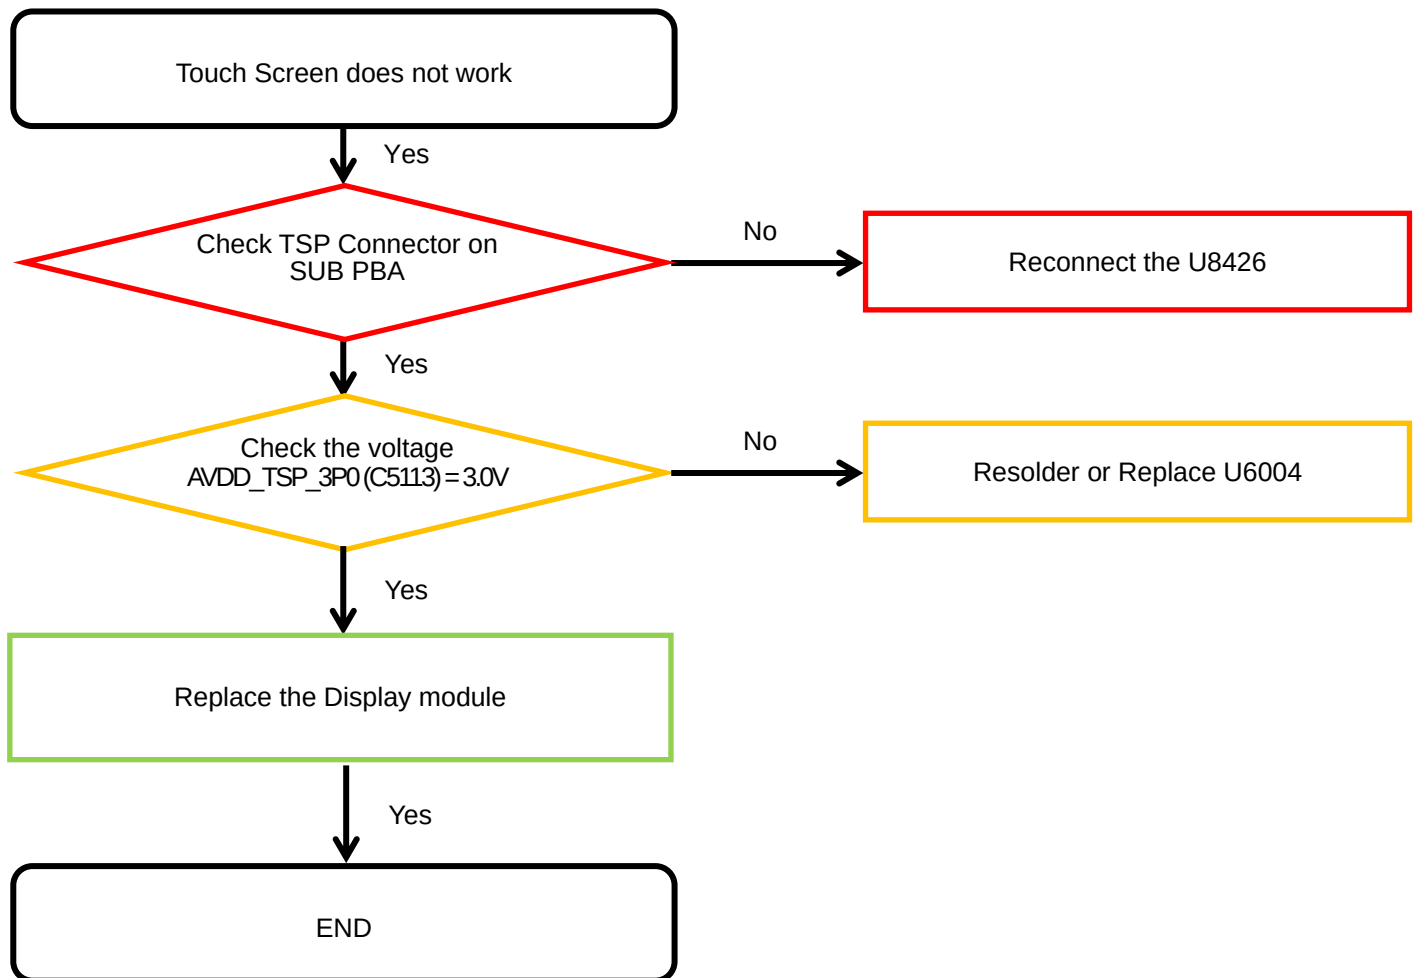


8. Level 3 Repair

8-4-18. Slide motor

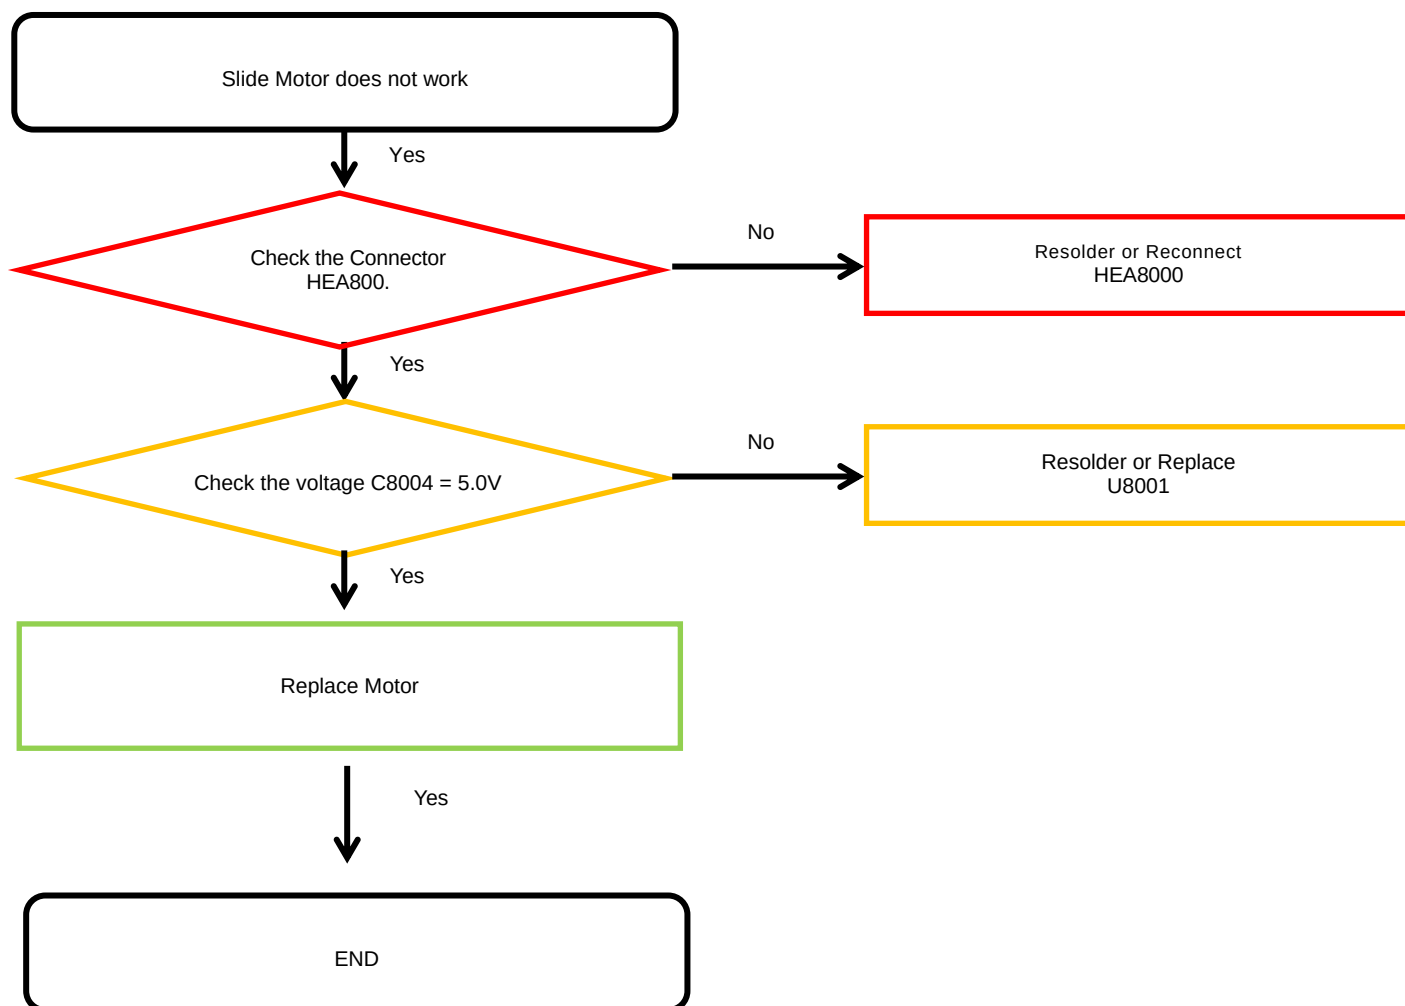


8. Level 3 Repair

8-4-19. GSM 850/900/, WCDMA B5/8, LTE B5/8/12/13/17/20/26/28 PRx

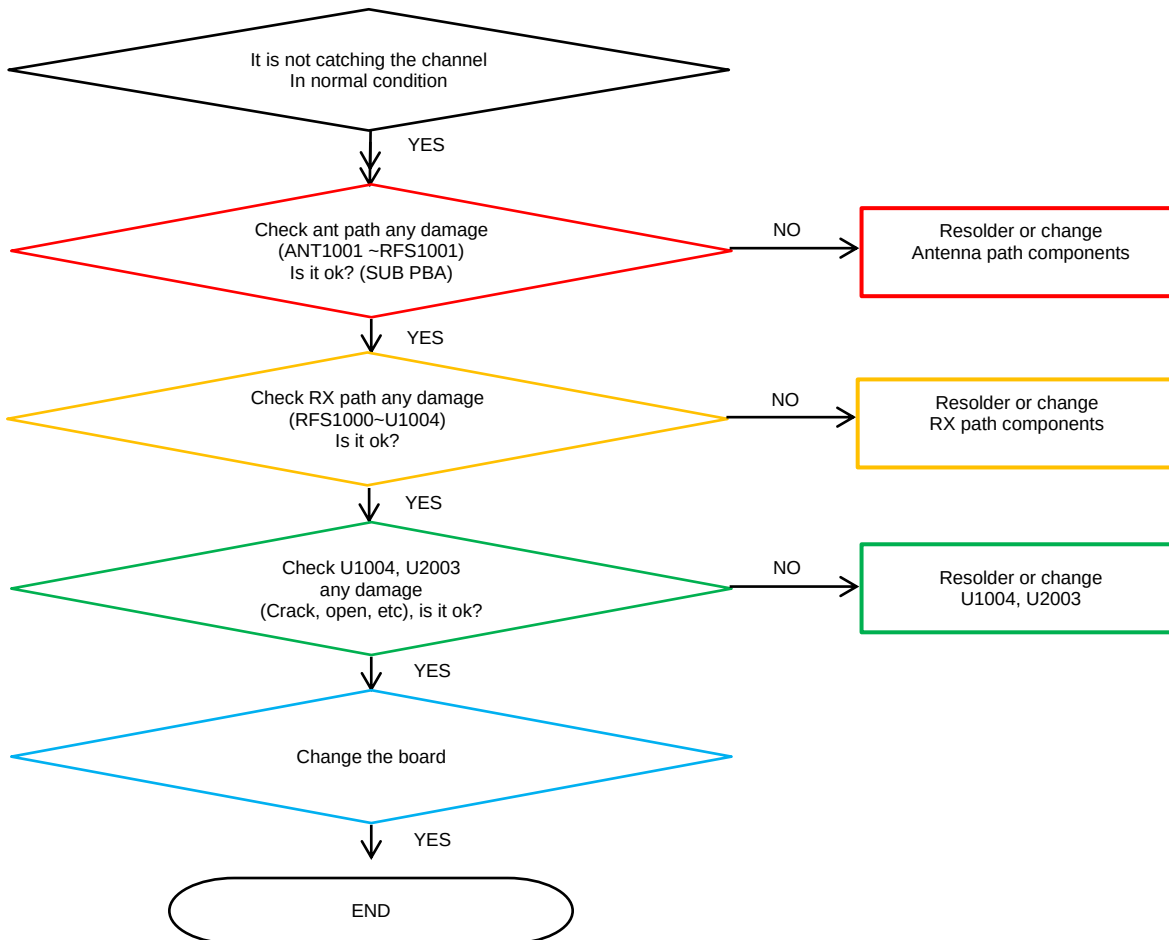


8. Level 3 Repair

8-4-20. LTE B7/38/40/41 PRx

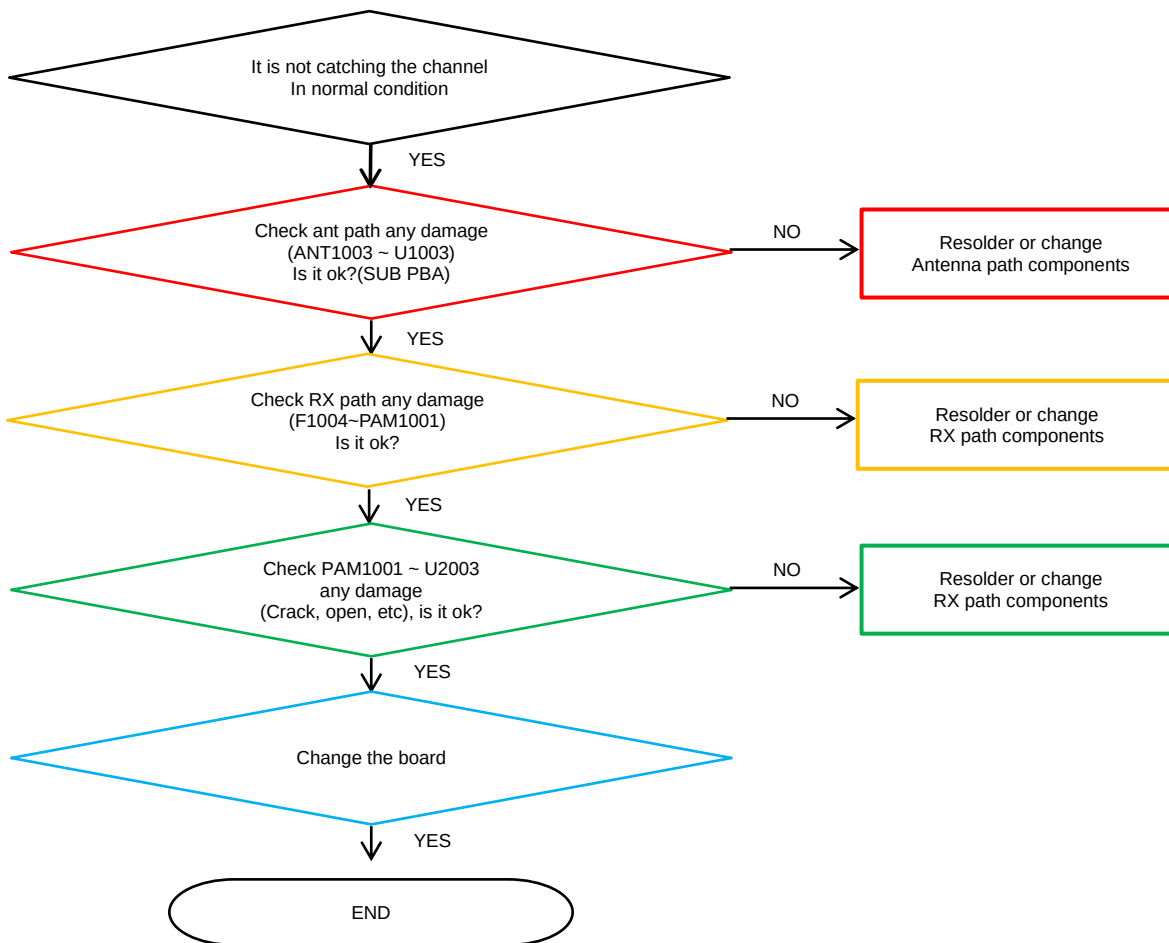


8. Level 3 Repair

8-4-21. GSM DCS/PCS, WCDMA B1/2/4, LTE B1/2/3/4/34/39/66 PRx

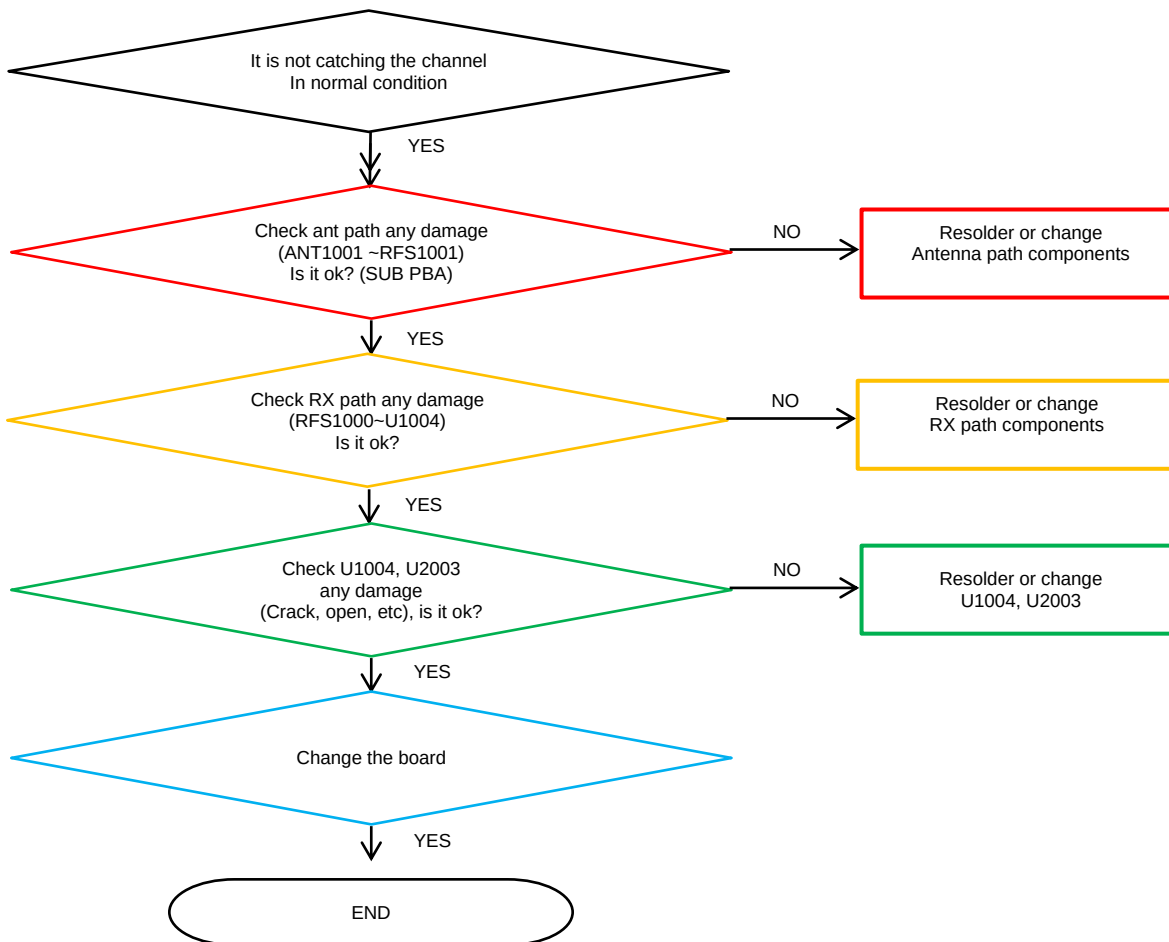


8. Level 3 Repair

8-4-22. GSM 850/900, WCDMA B5/8, LTE B5/8/12/13/17/20/26/28 DRx

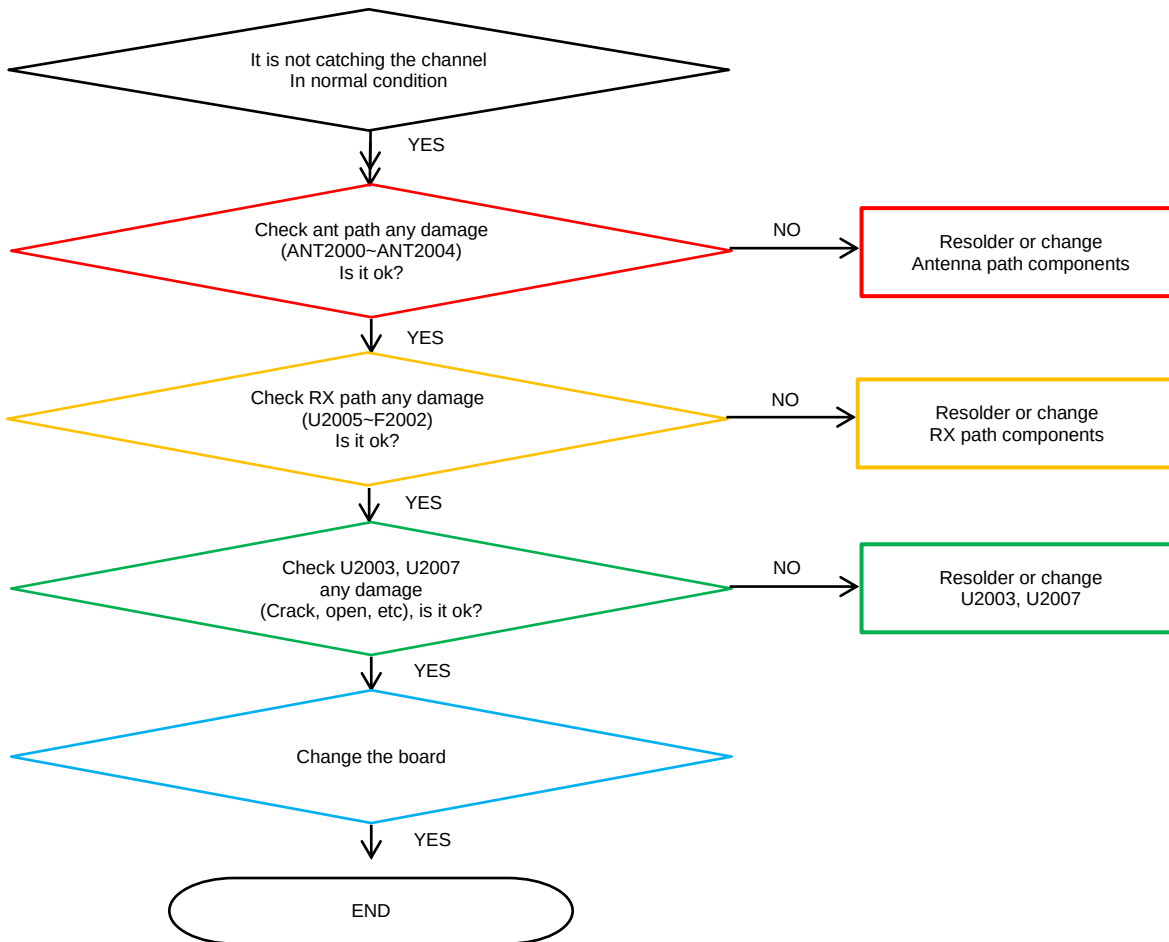


8. Level 3 Repair

8-4-23. LTE B7/38/40/41 DRx

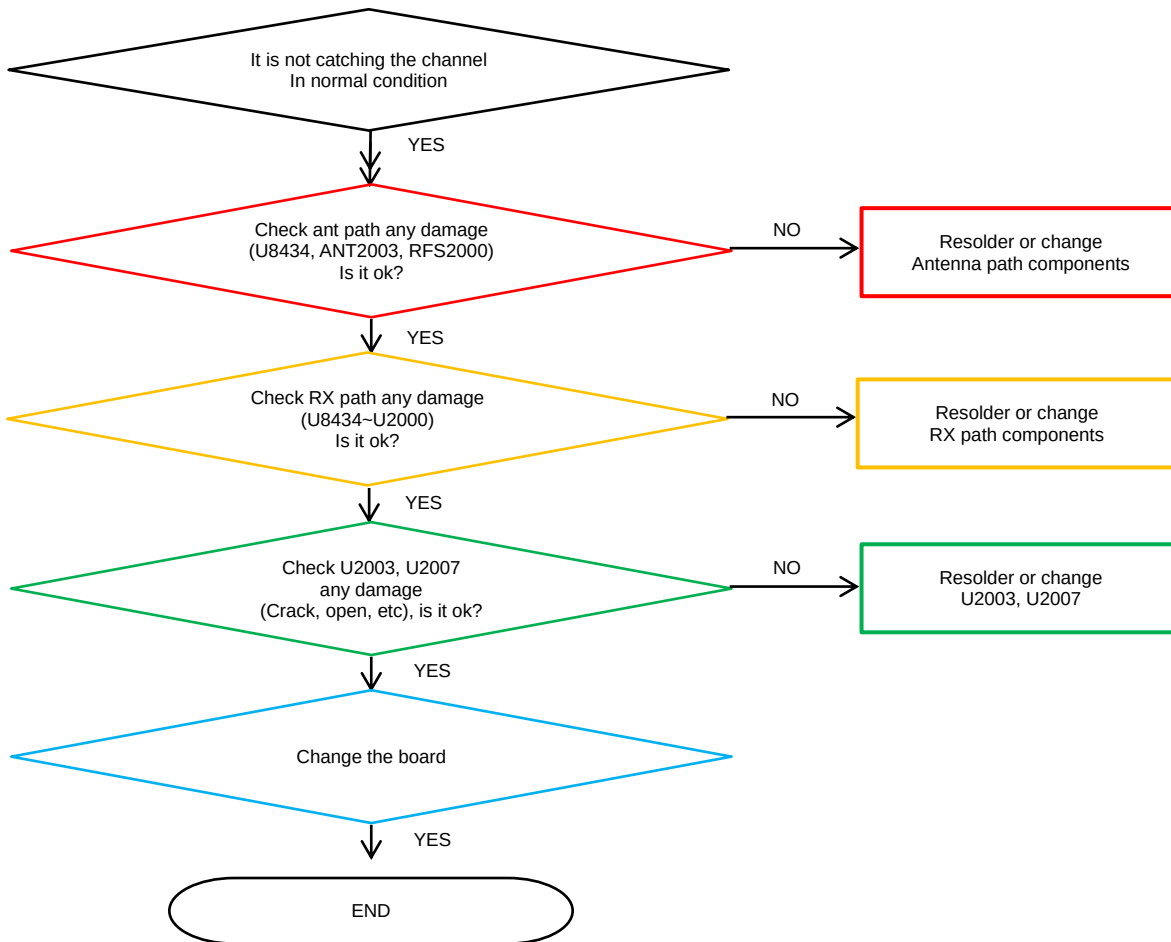


8. Level 3 Repair

8-4-24. GSM DCS/PCS, WCDMA B1/2/4, LTE B1/2/3/4/34/39/66 DRx

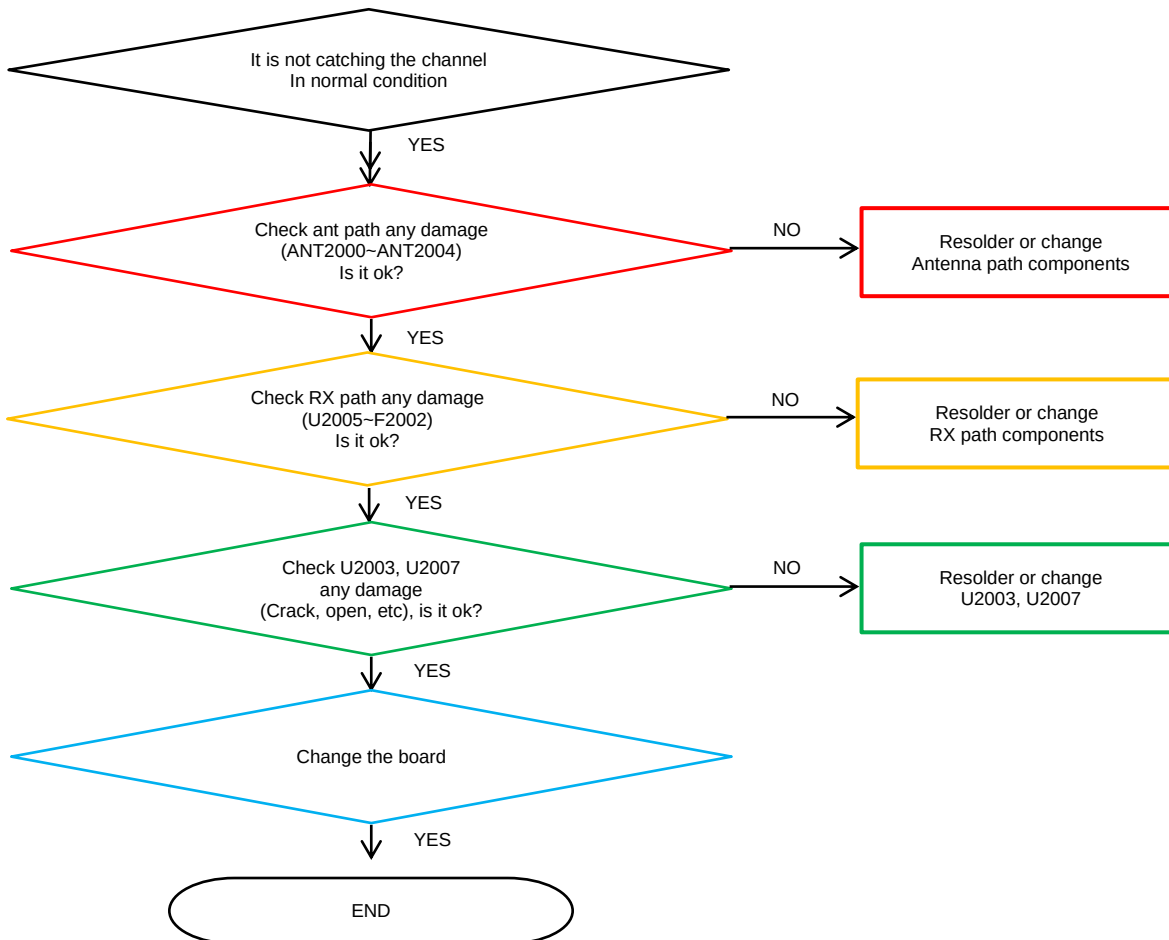


8. Level 3 Repair

8-4-25. GSM 850/900, WCDMA B5/8, LTE B5/8/12/13/17/20/26/28 TX

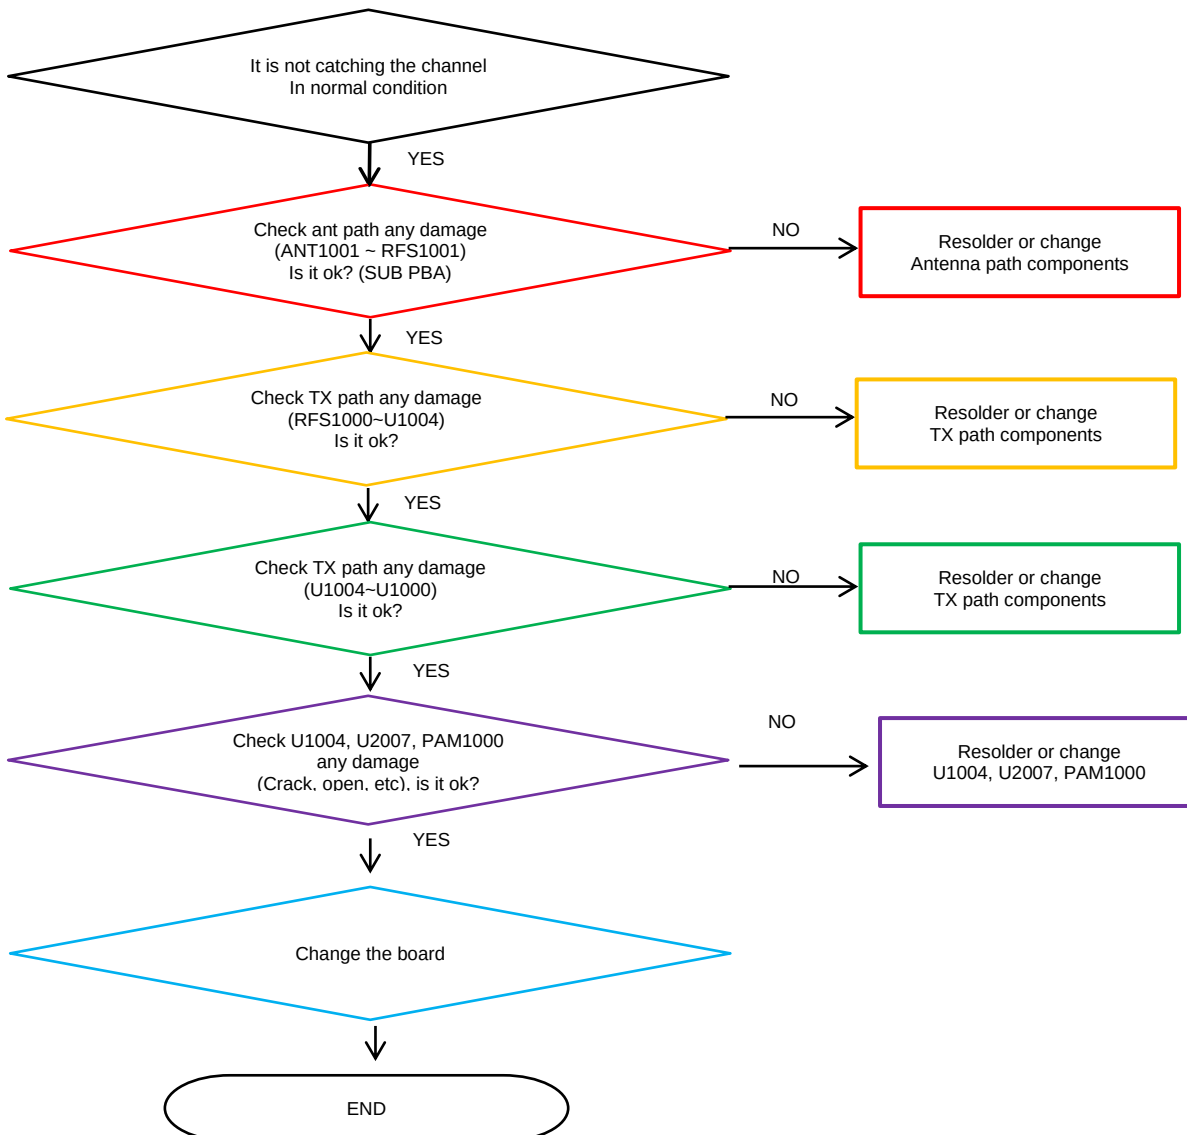


8. Level 3 Repair

8-4-26. LTE B7/38/40/41 Tx

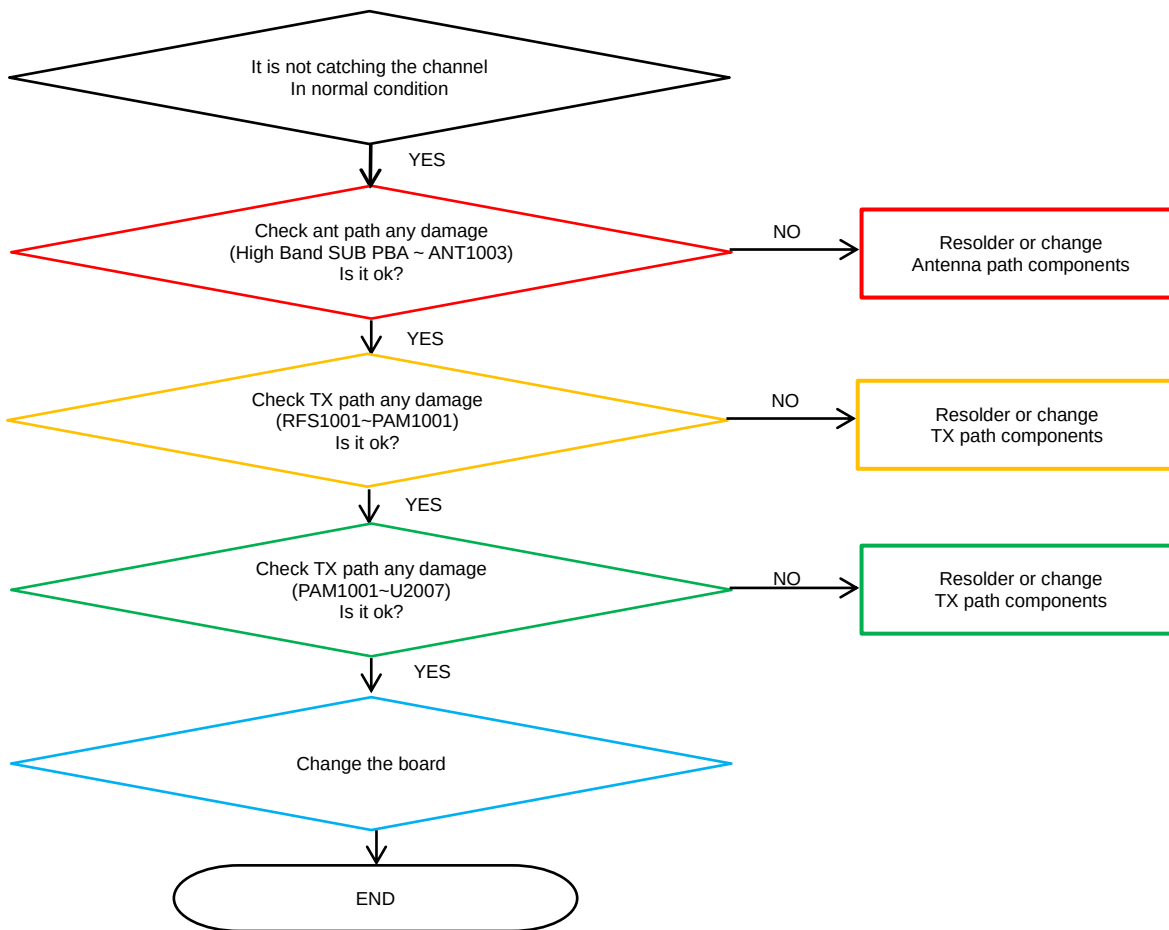

8. Level 3 Repair

8-4-27. GSM DCS/PCS, WCDMA B1/2/4, LTE B1/2/3/4/34/39/66 Tx

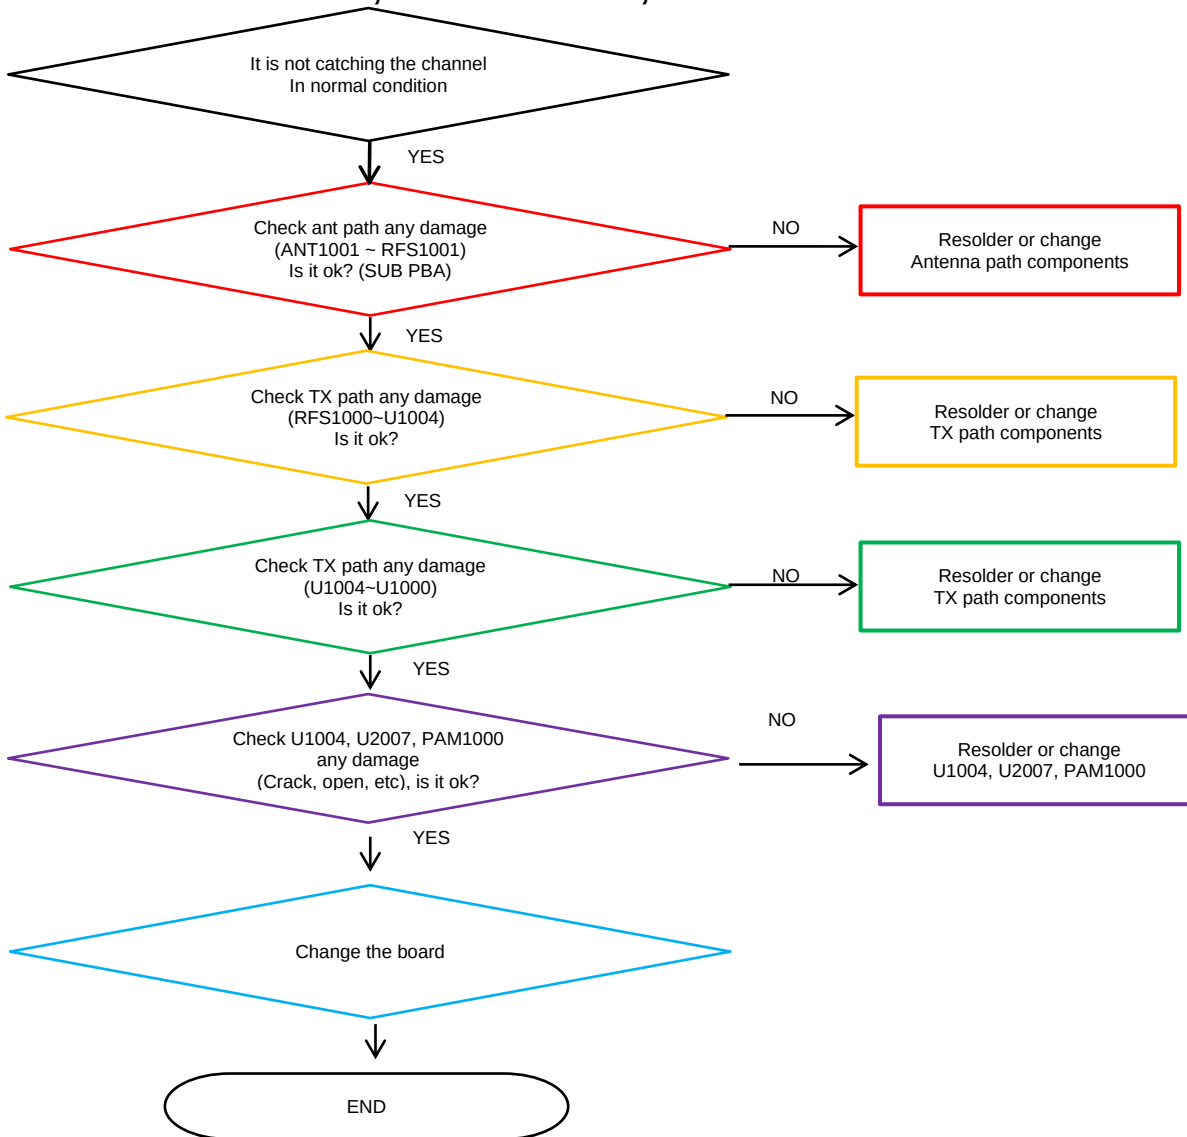

SAMSUNG