


8.3 级维修


8-1. 框图

A8C (SM-A8000) 框图

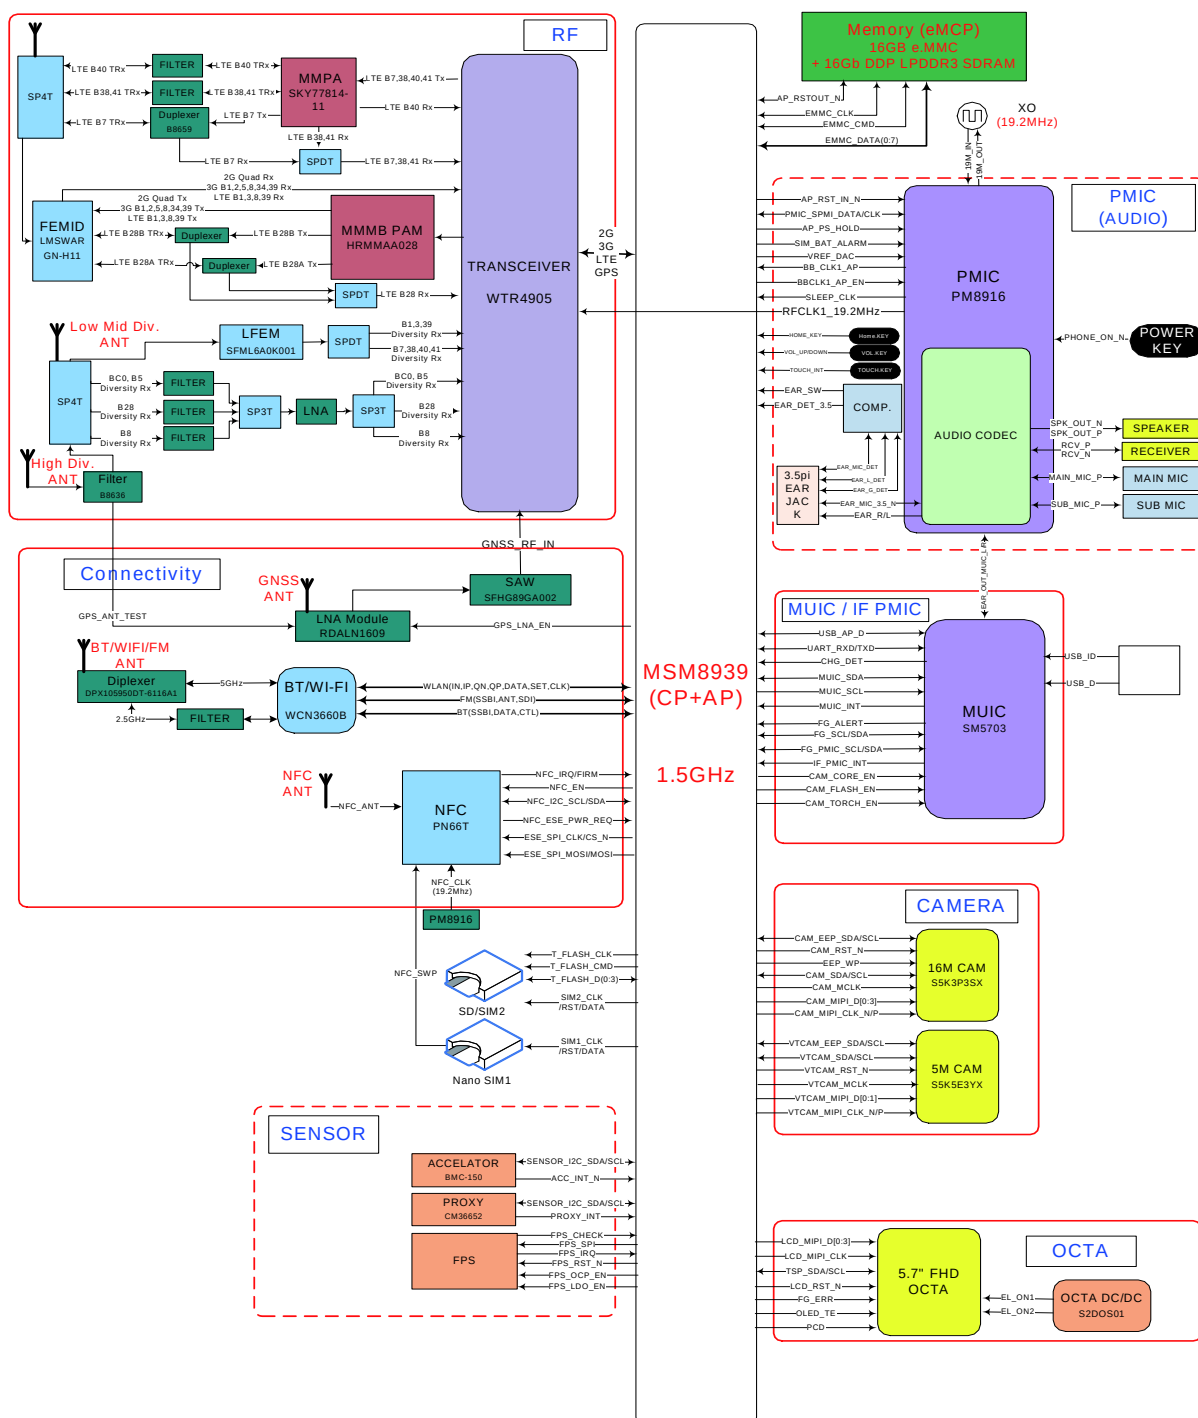


8-2. PCB 图解


8-2-1. 主 PCB 顶部

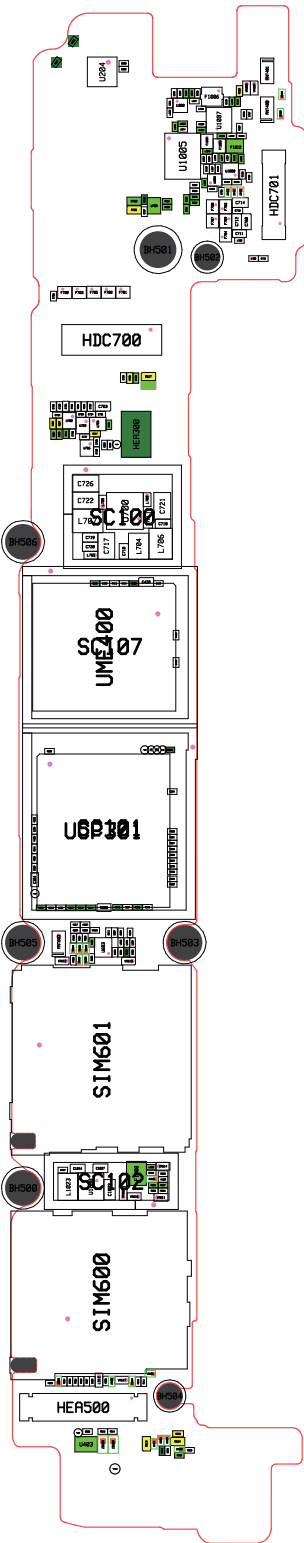

8-2-2. 底部

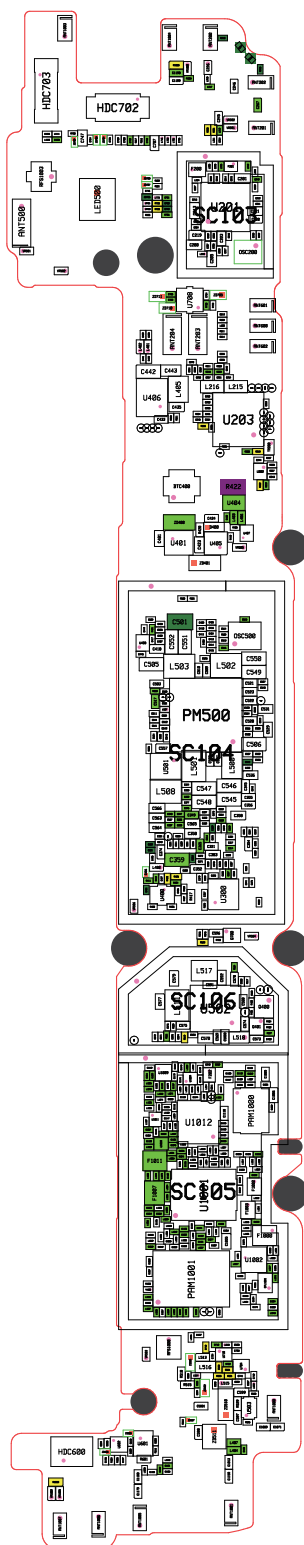

8-2-3. 设备

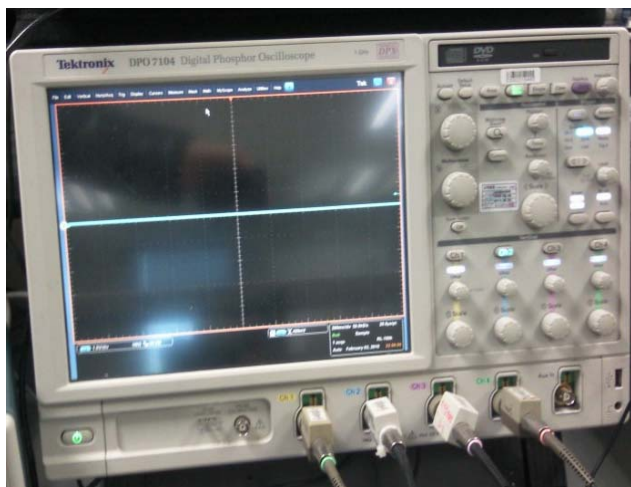

↑示波器




↑数字万用表



↑电源供电器



↑+字螺丝刀, ESD 安全镊子

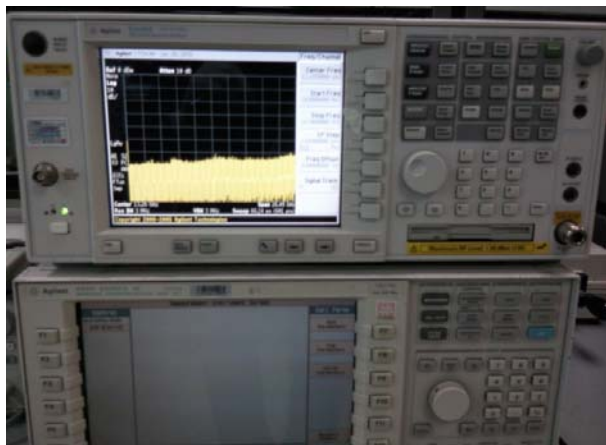


↑8960 和光谱分析器






↑焊接熨斗

8-3. 故障排除流程图


8-3-1. 开机

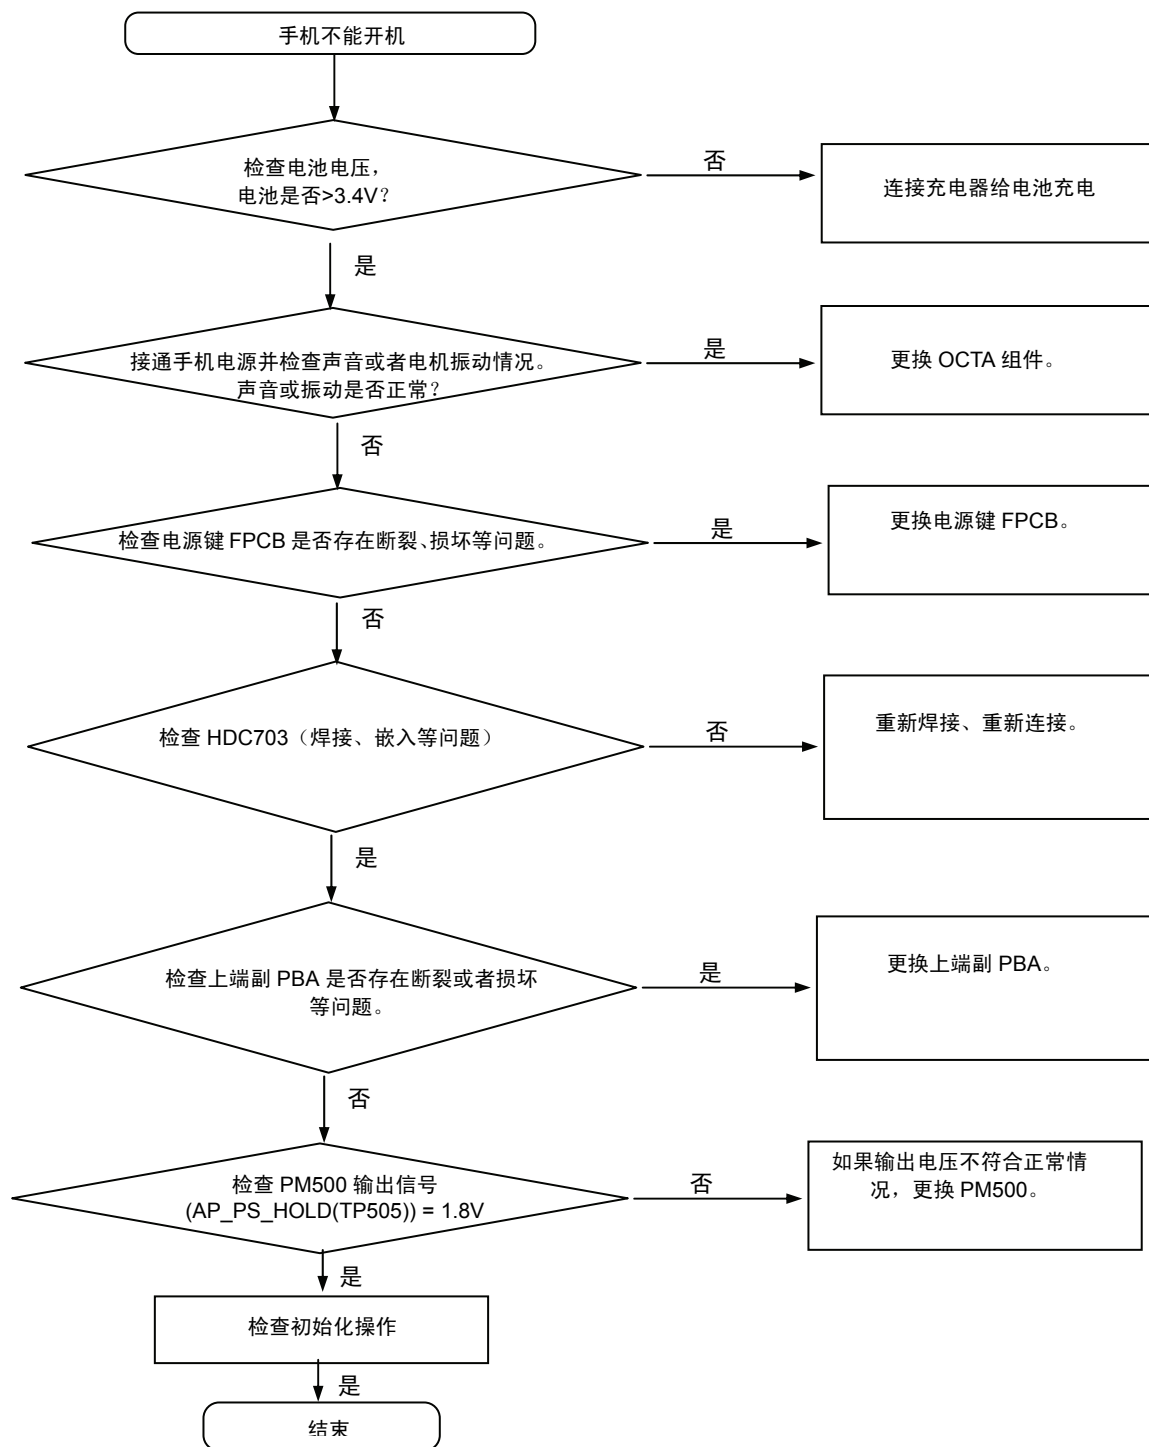


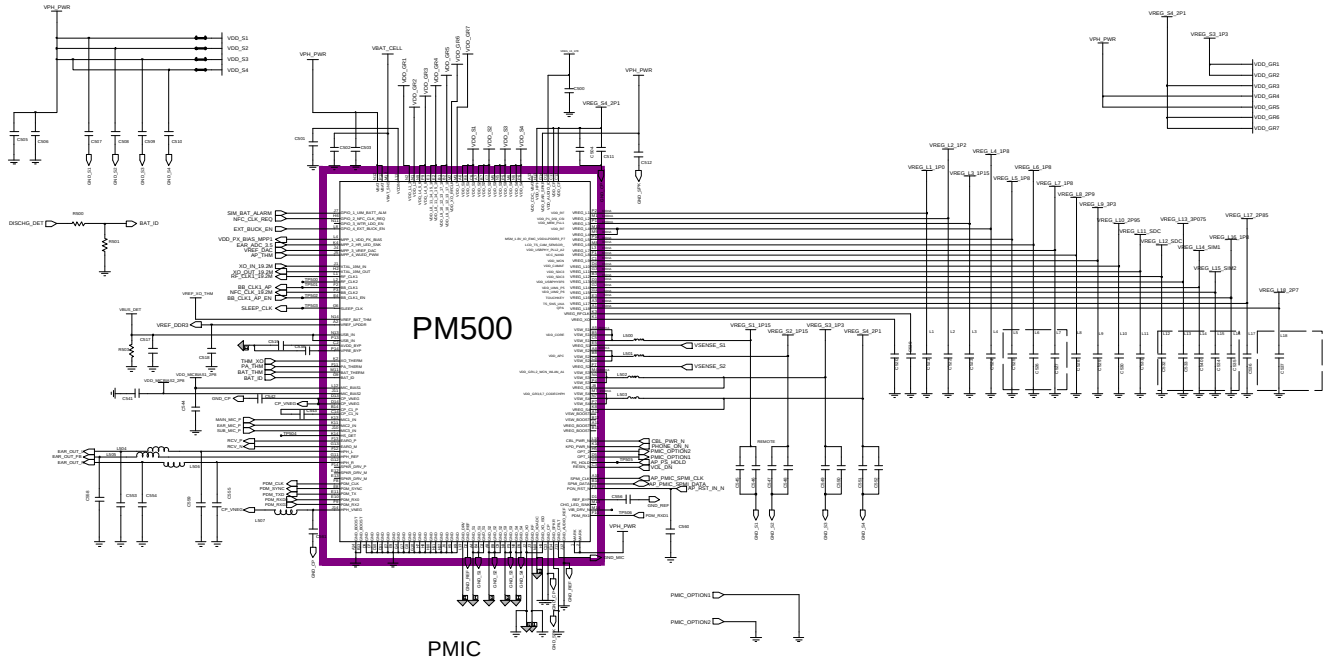

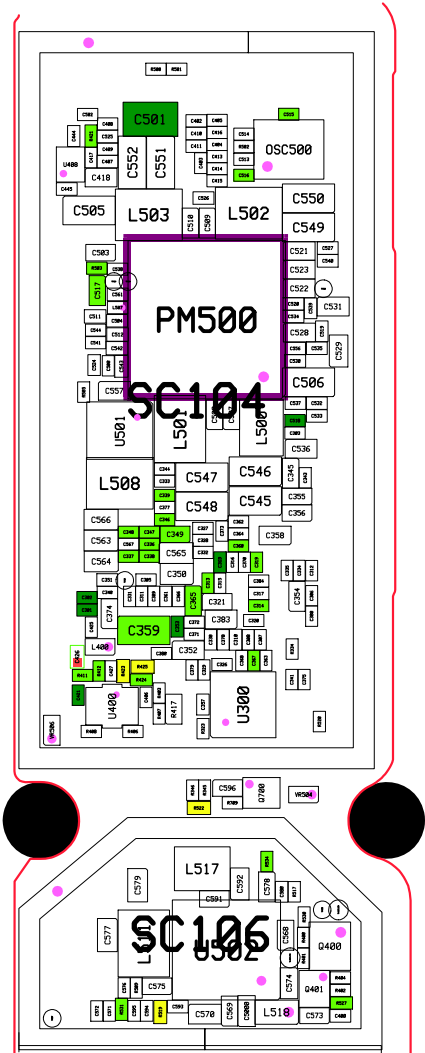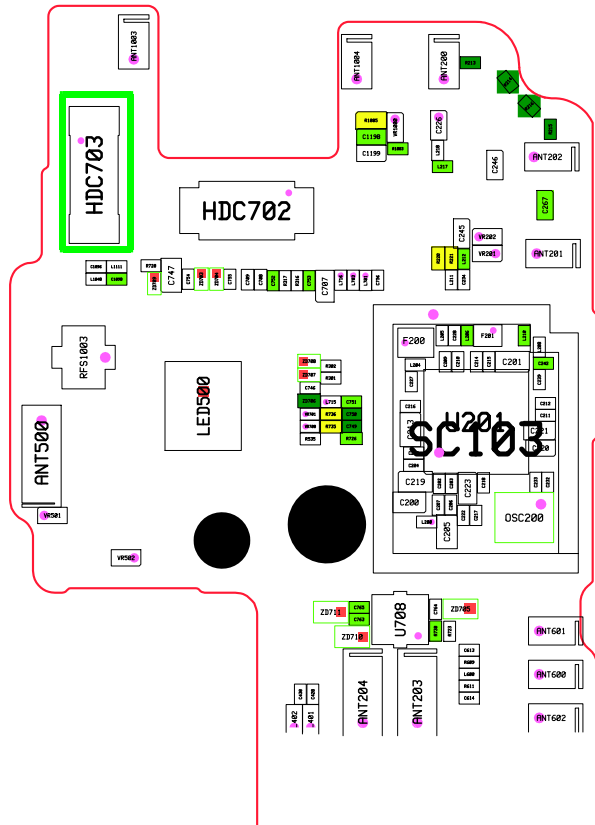


8-3-2 初始化



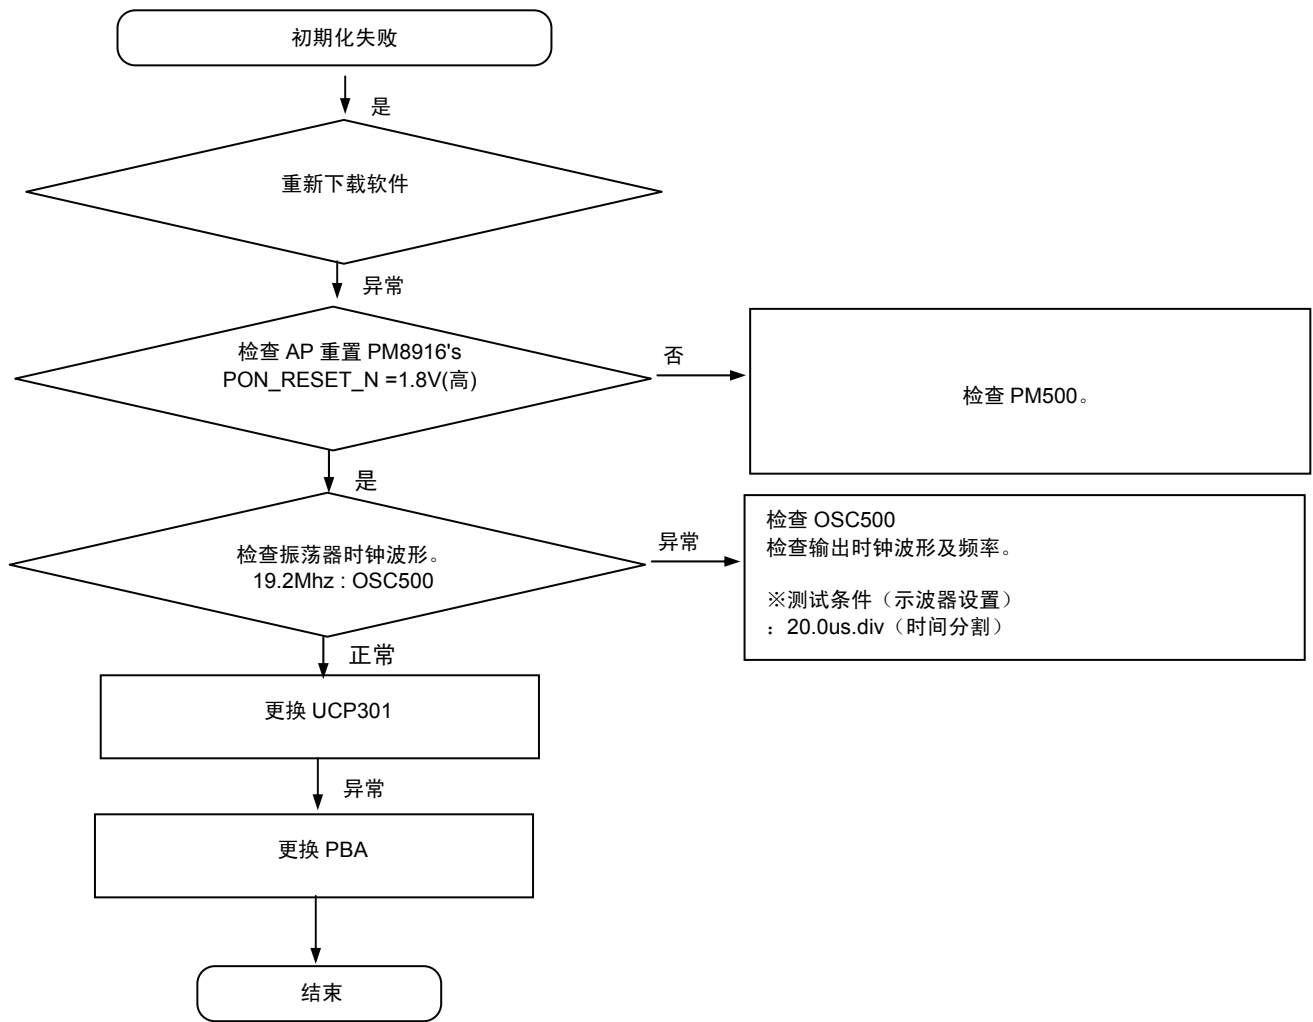


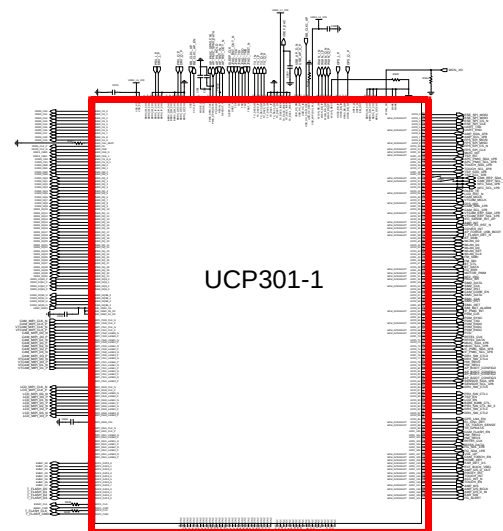







8-3-3. 无服务


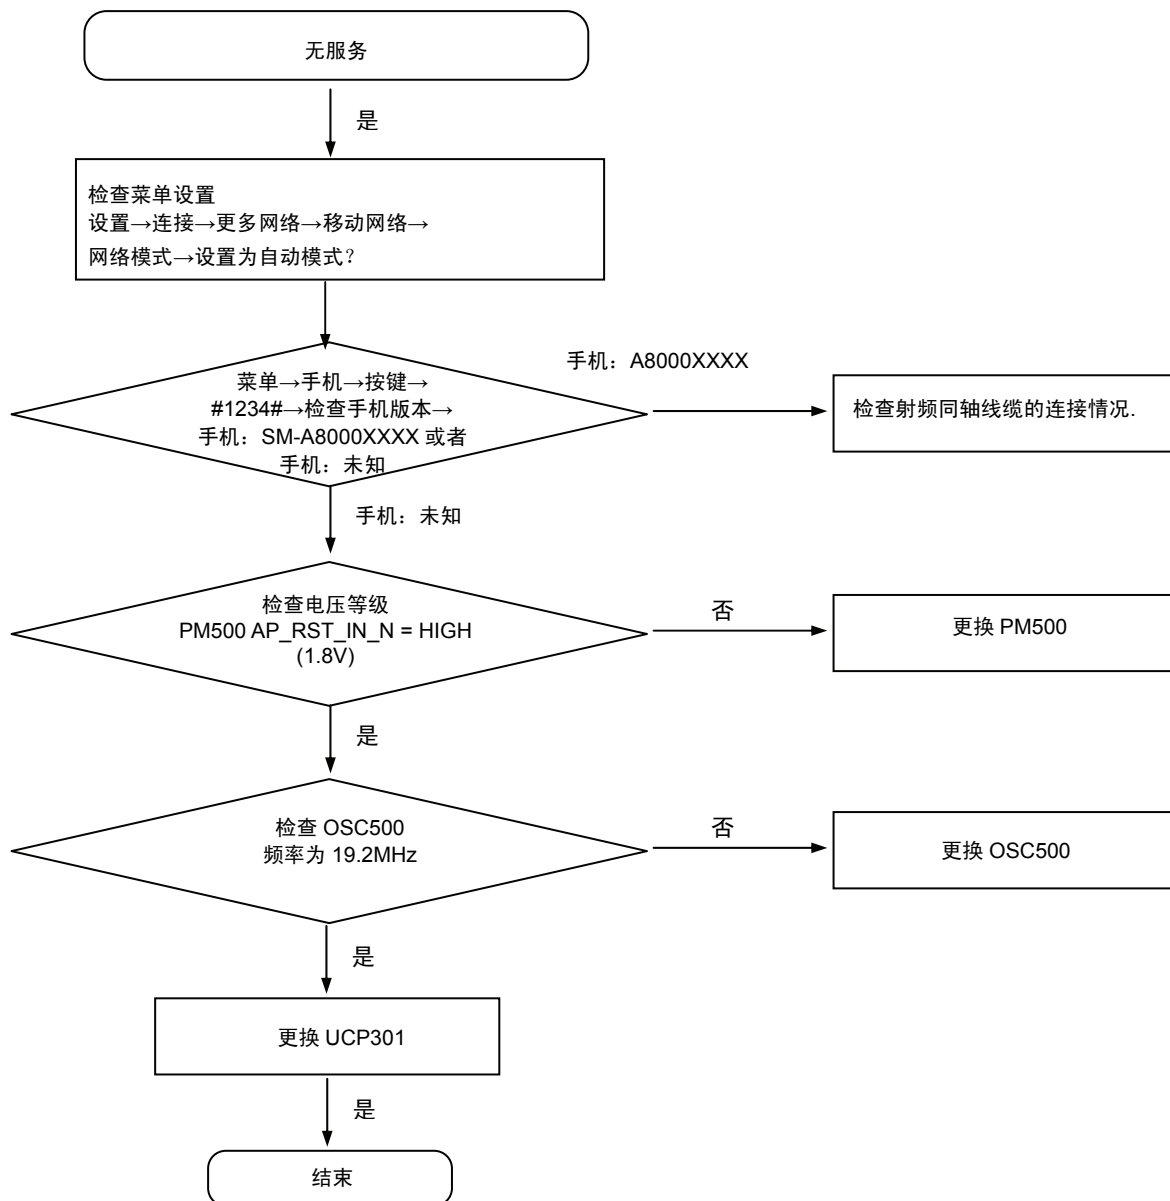


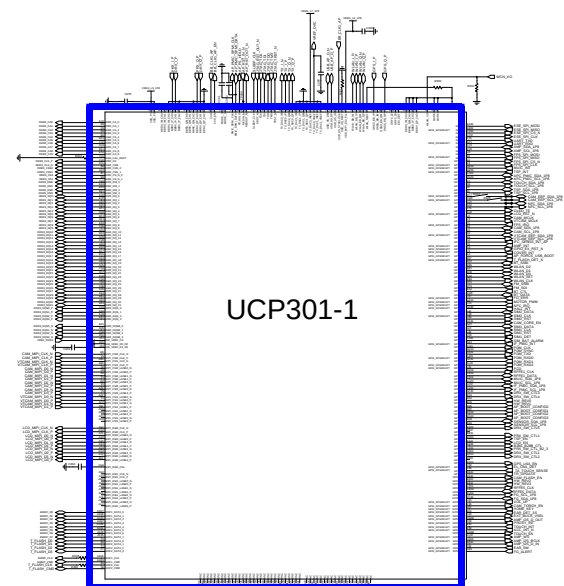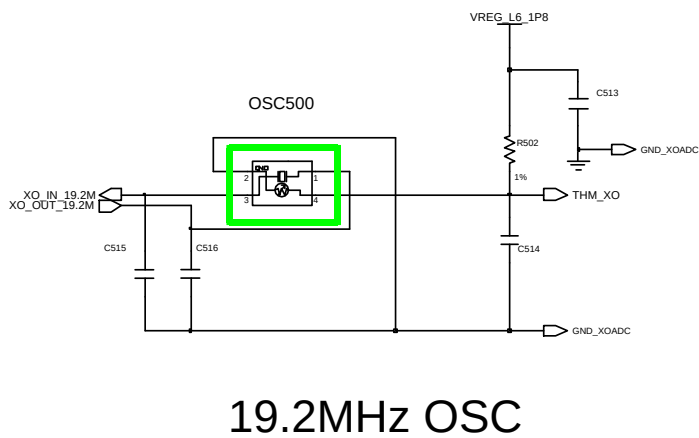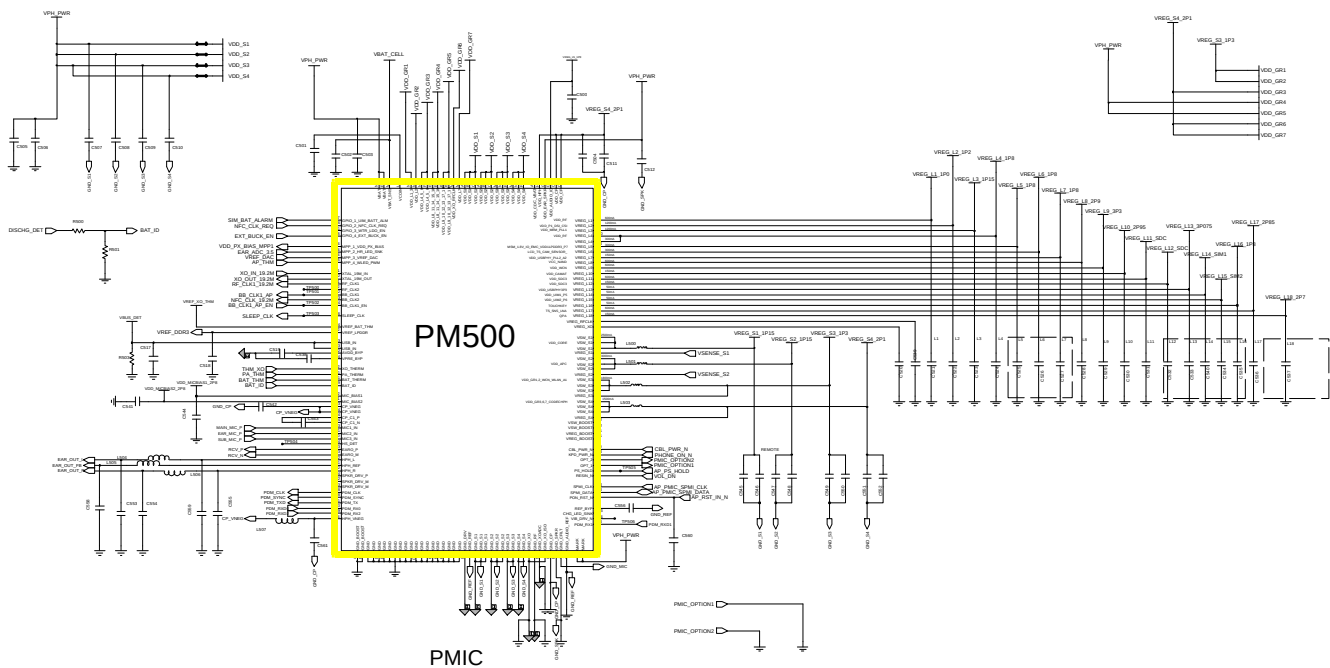


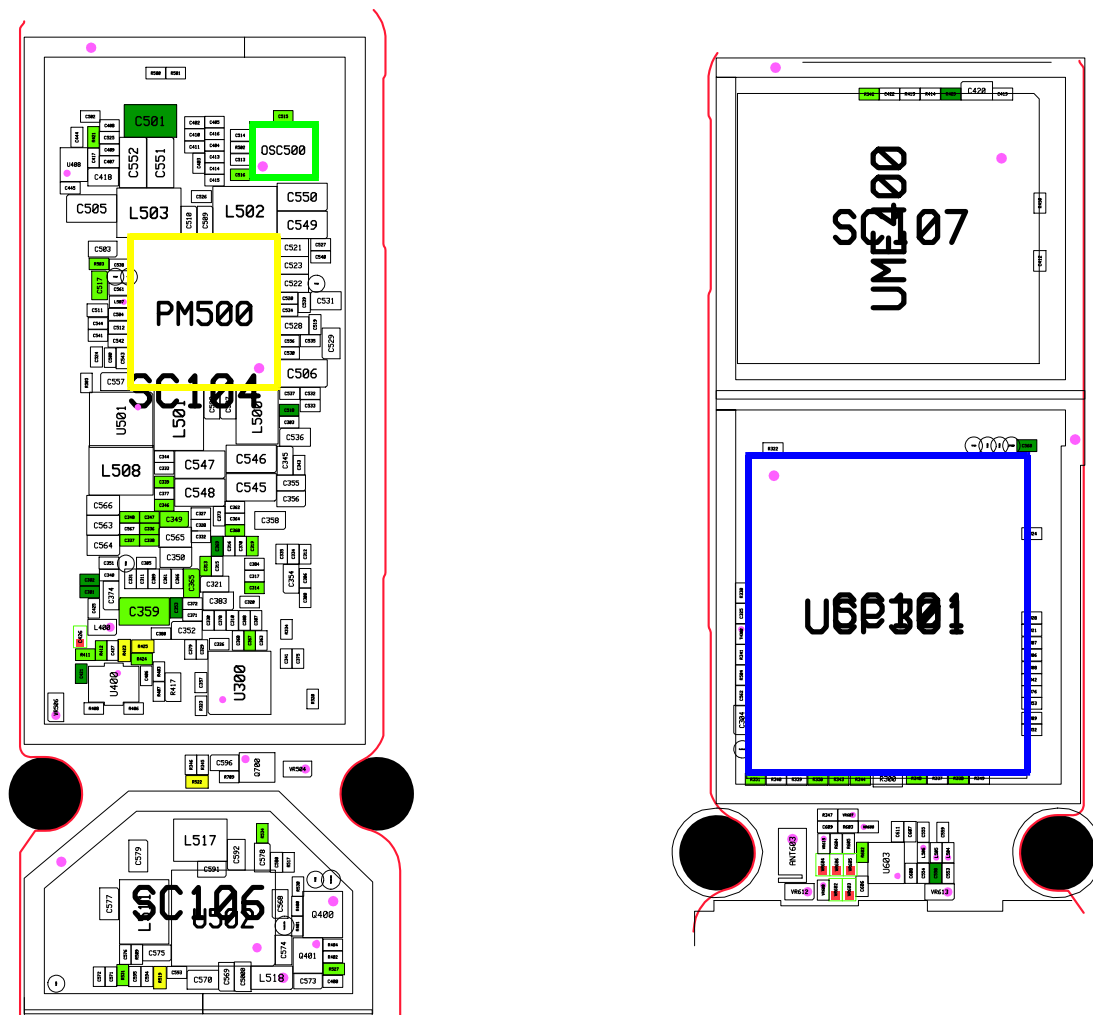


8-3-4. SIM1 部分

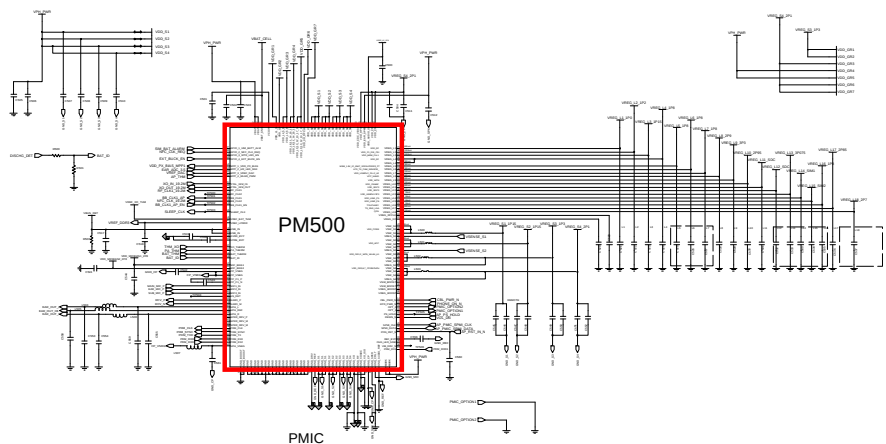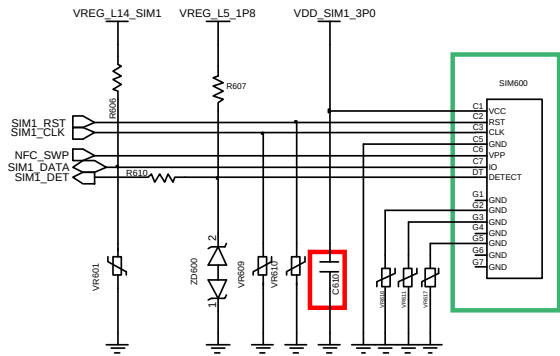
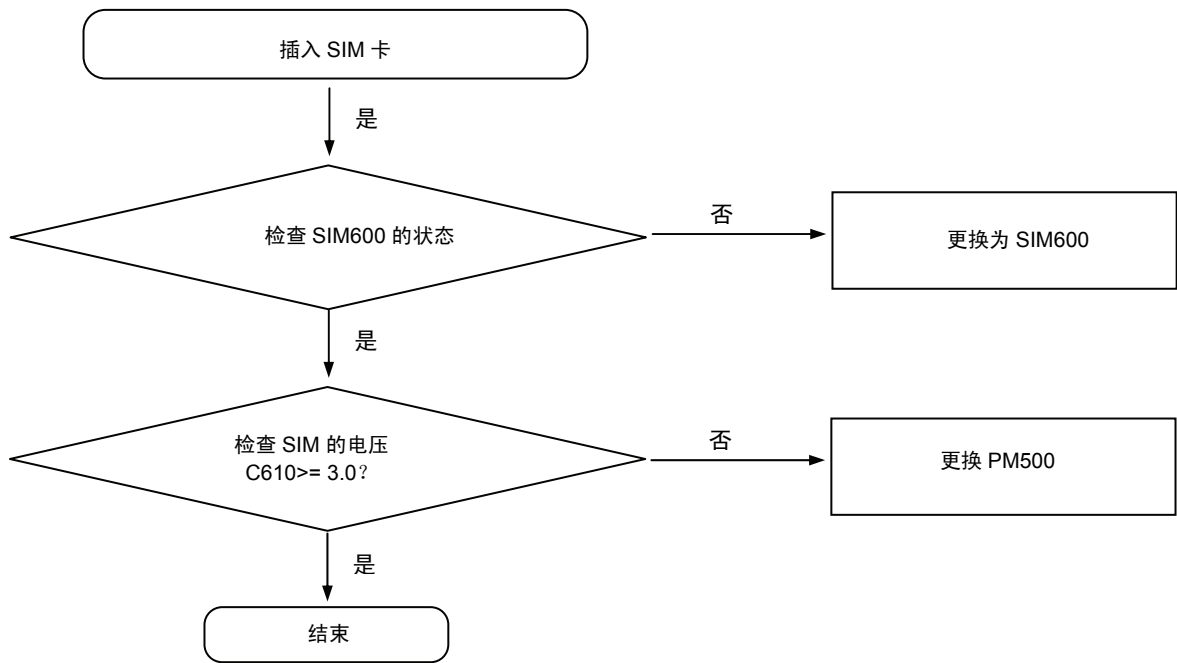


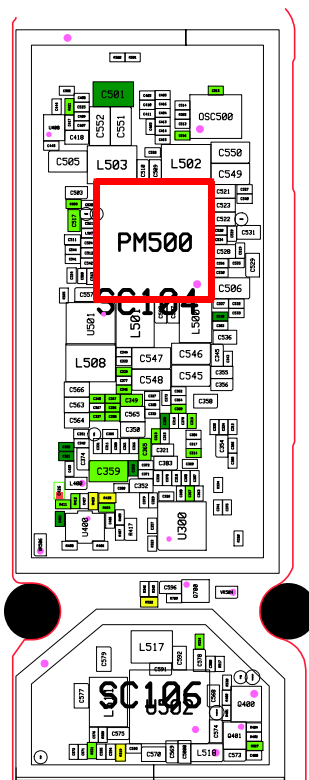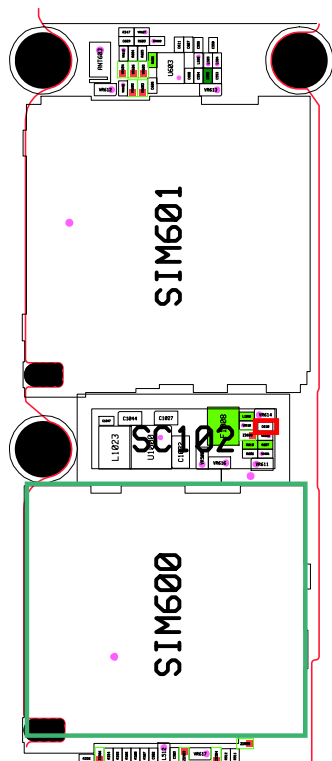


8-3-5. SIM2 /SD 卡槽部分

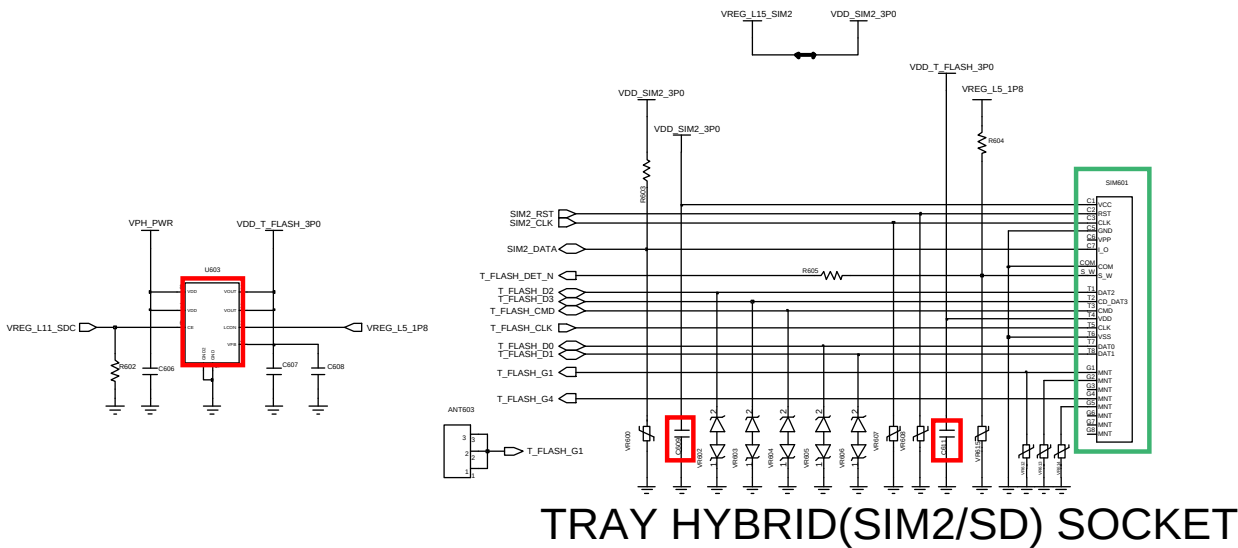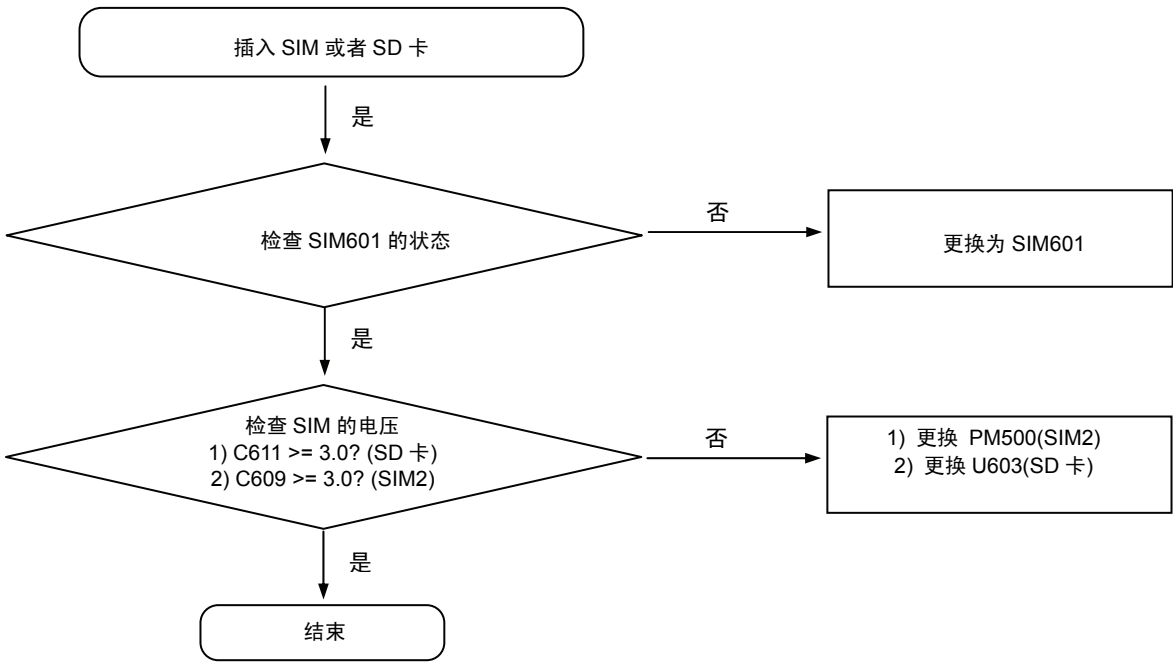





8-3-6. 充电部分

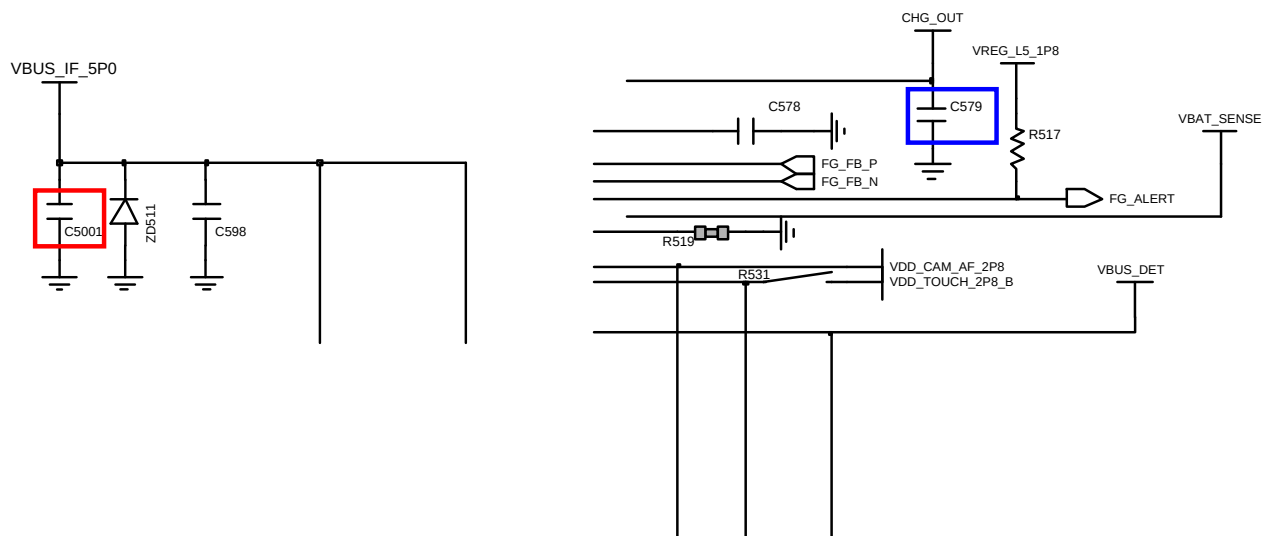
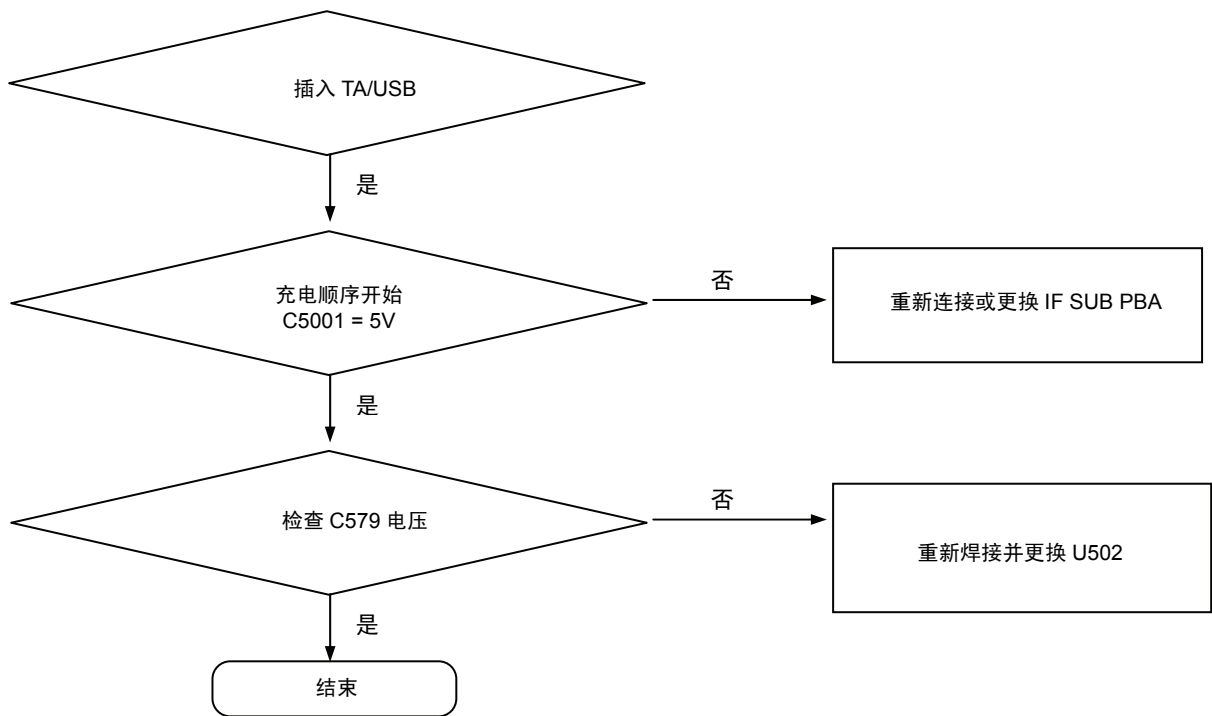




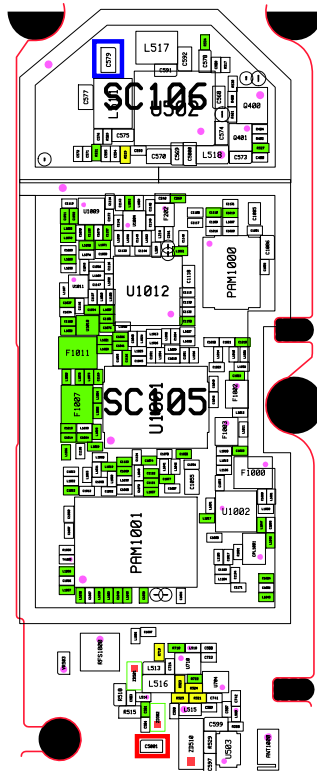


8-3-7. 加速&磁传感器

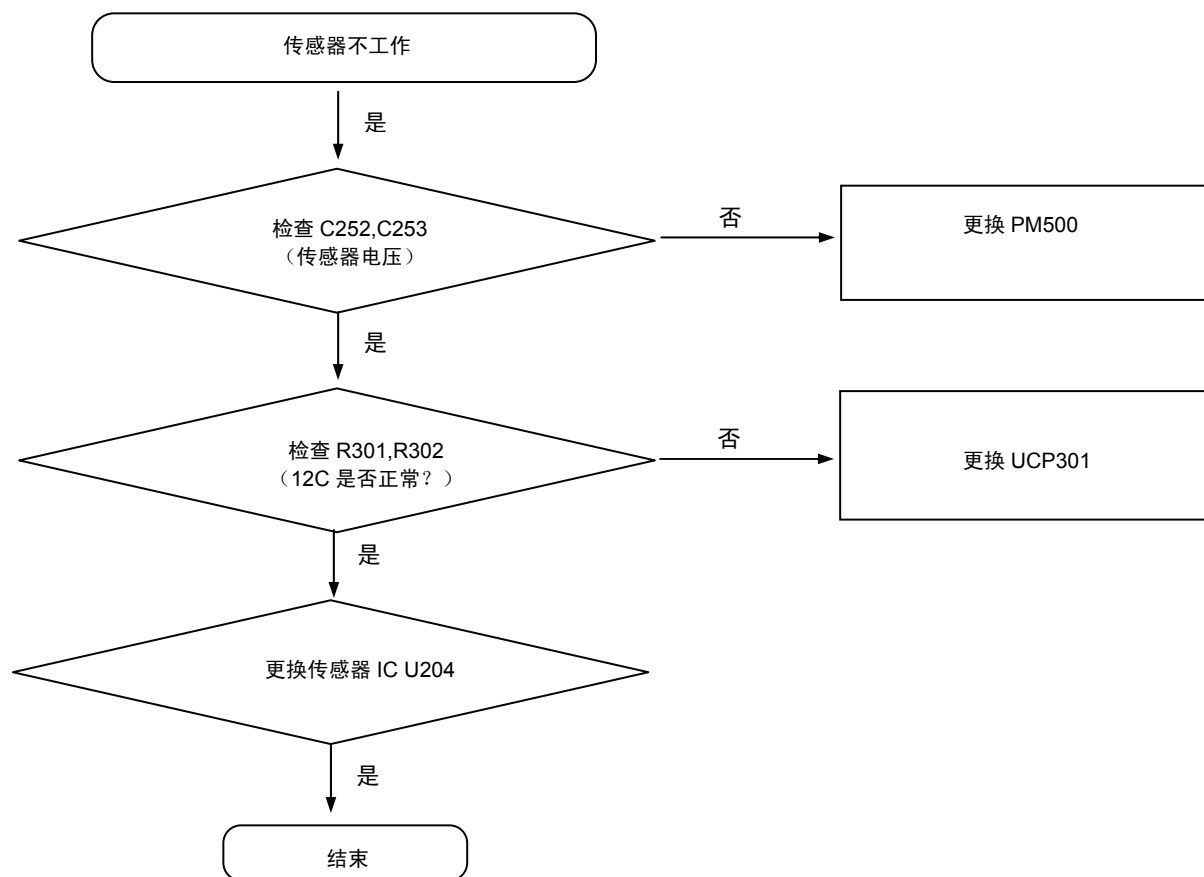



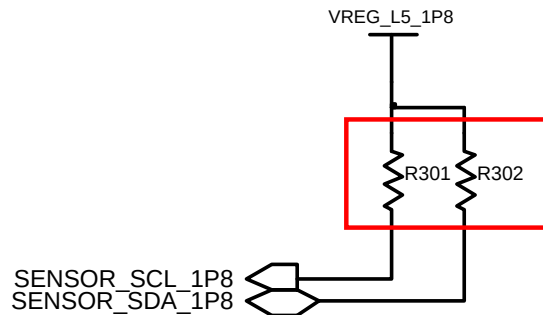
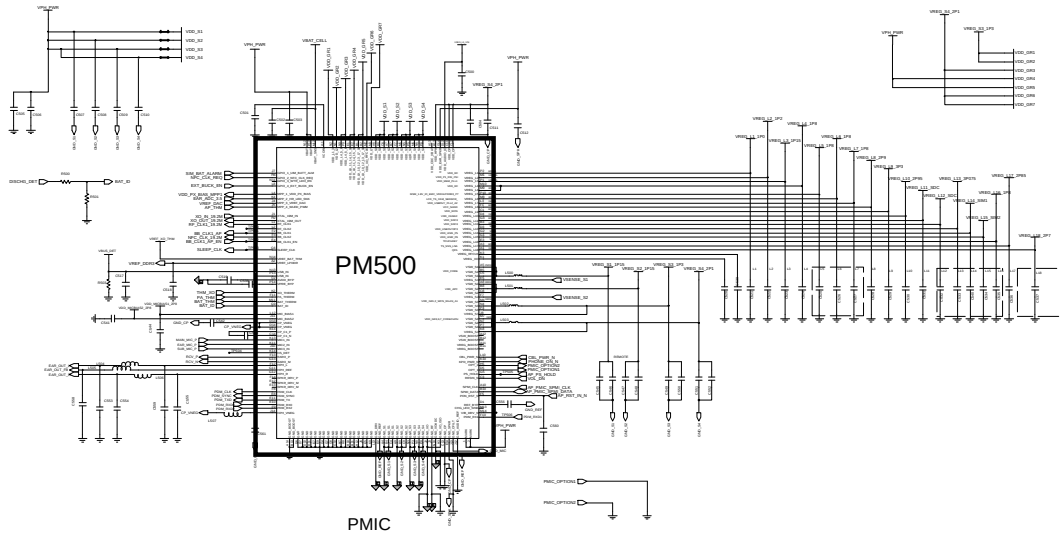
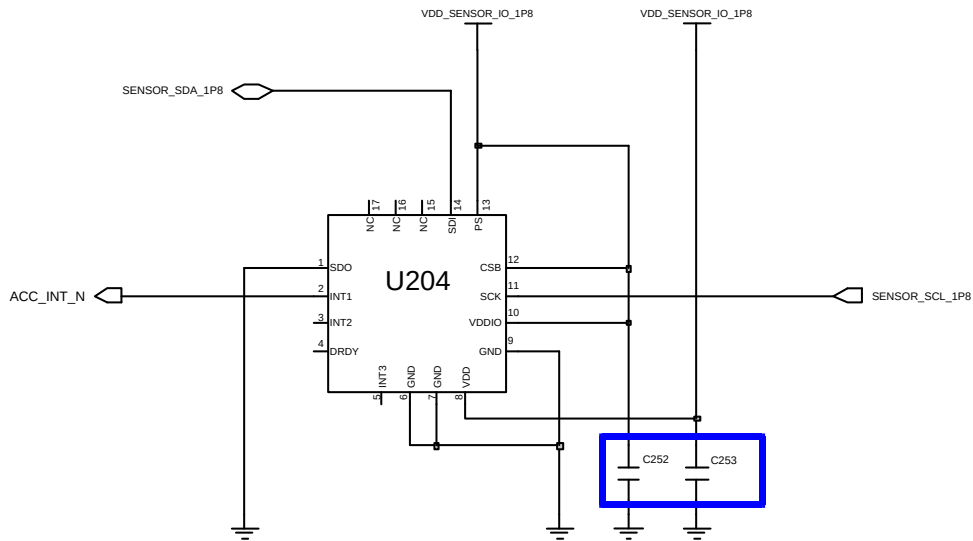


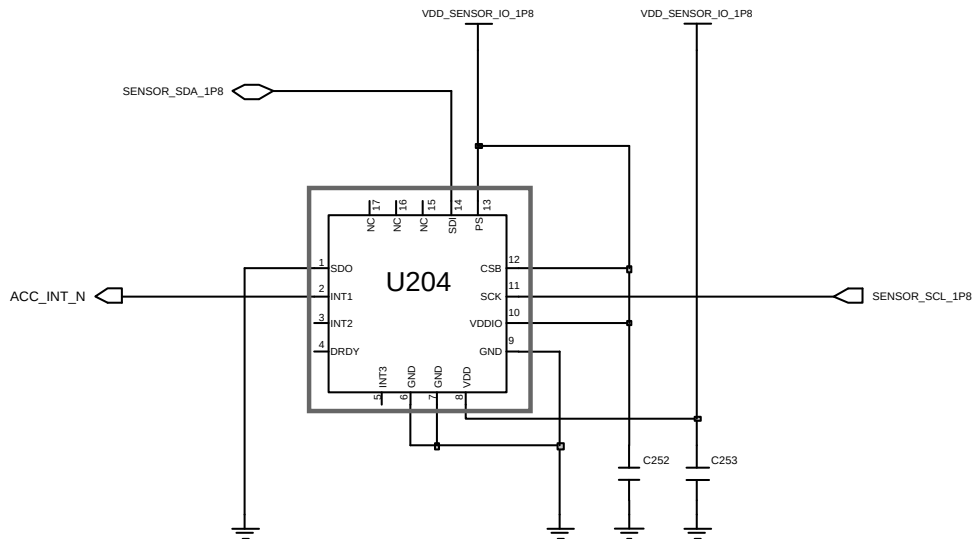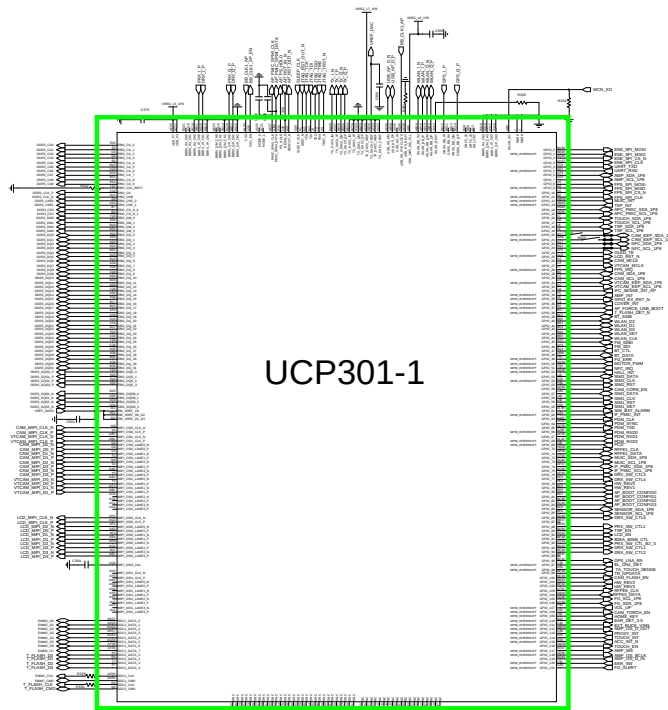

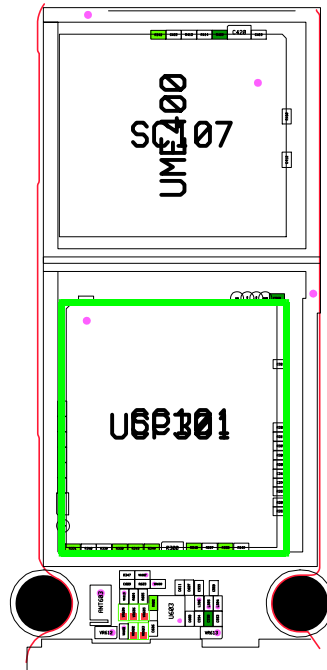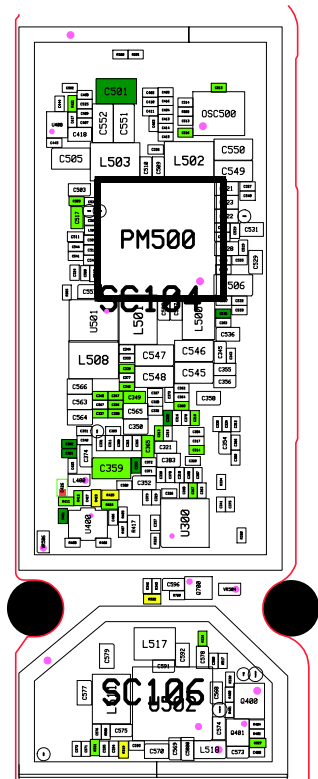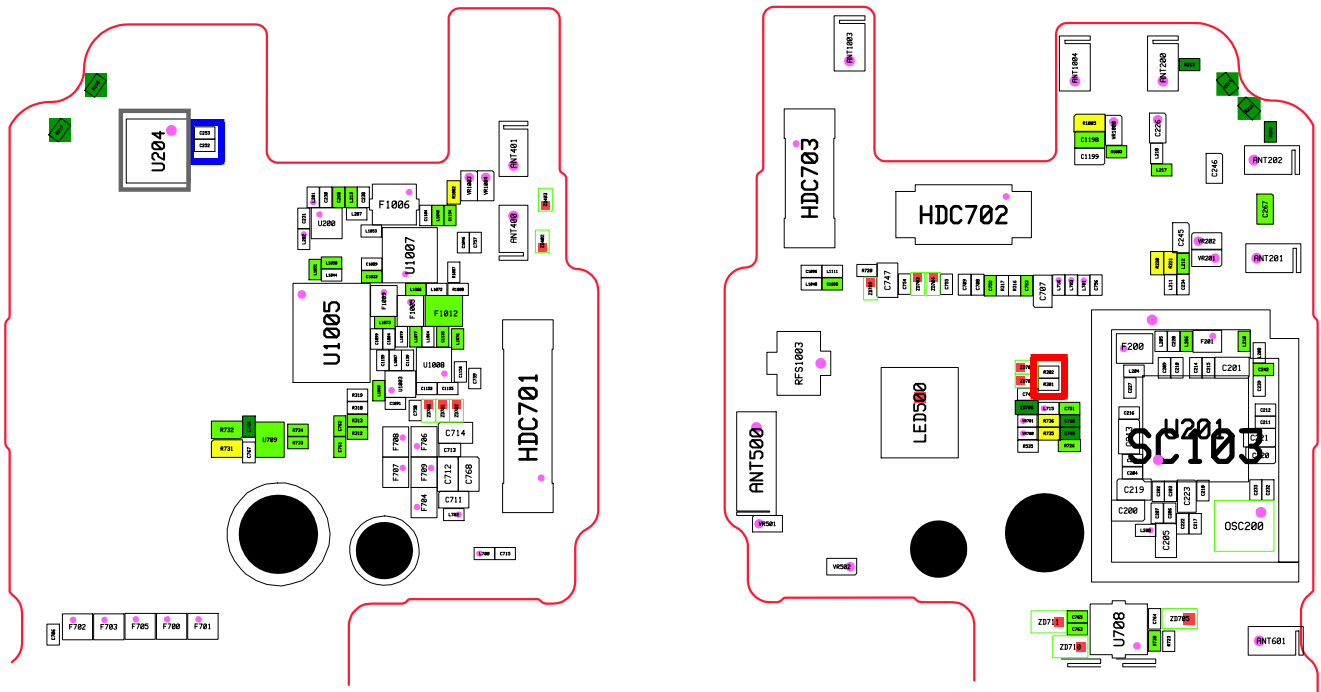



8-3-8. 扬声器部分

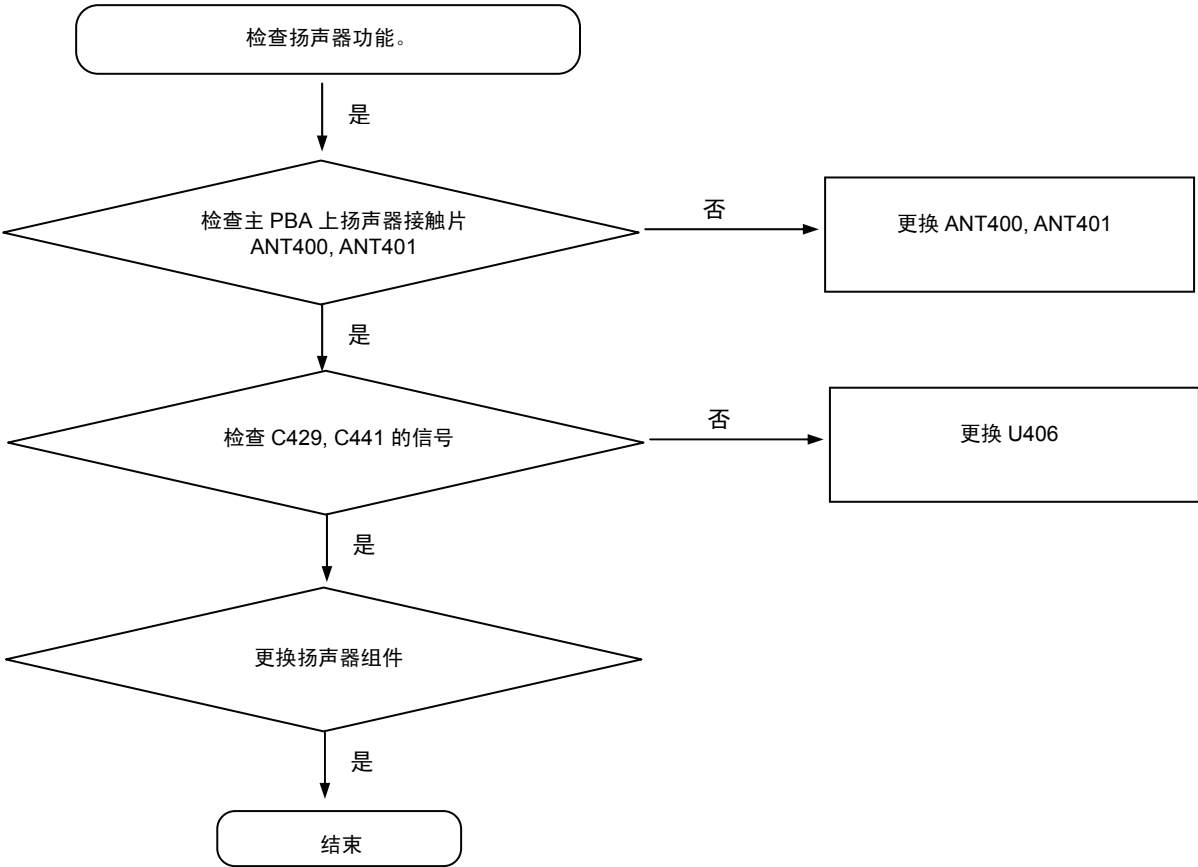

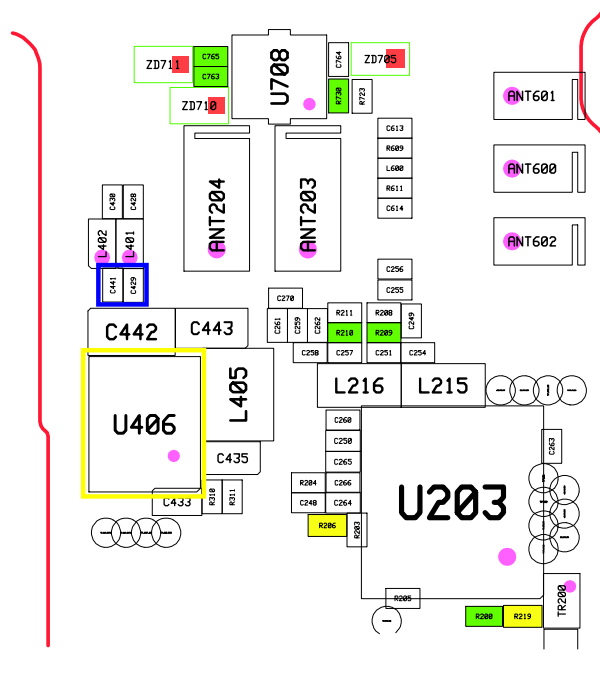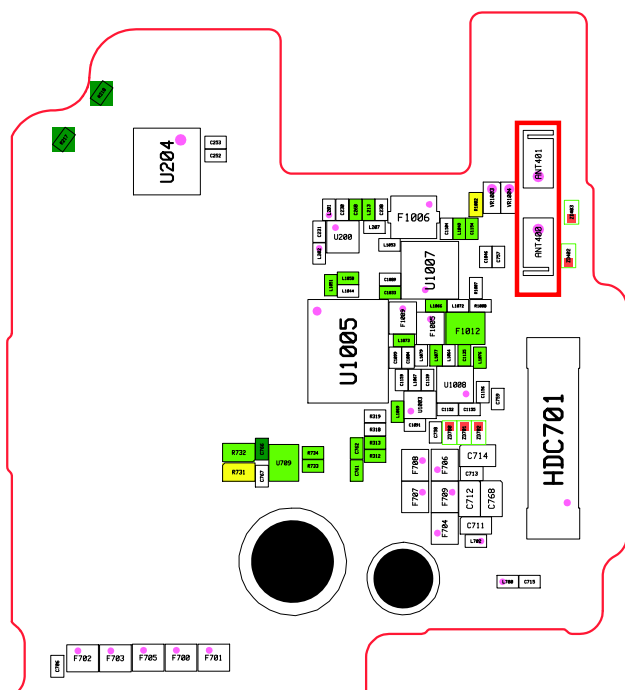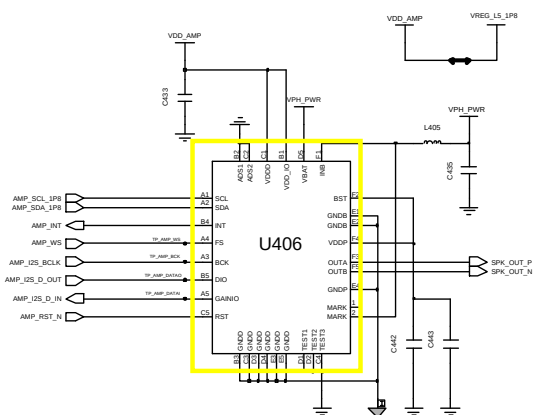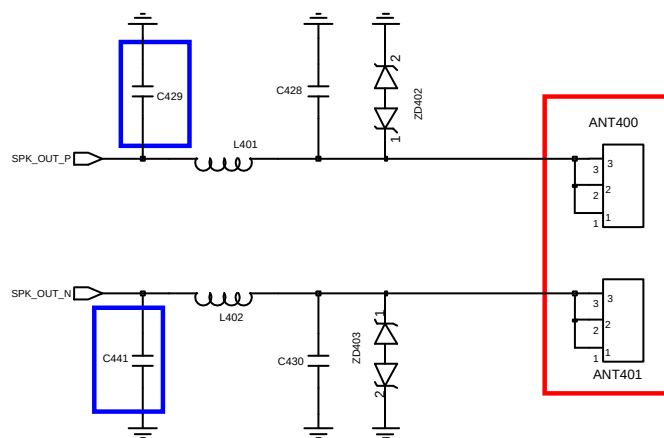



8-3-9. 接收器部分

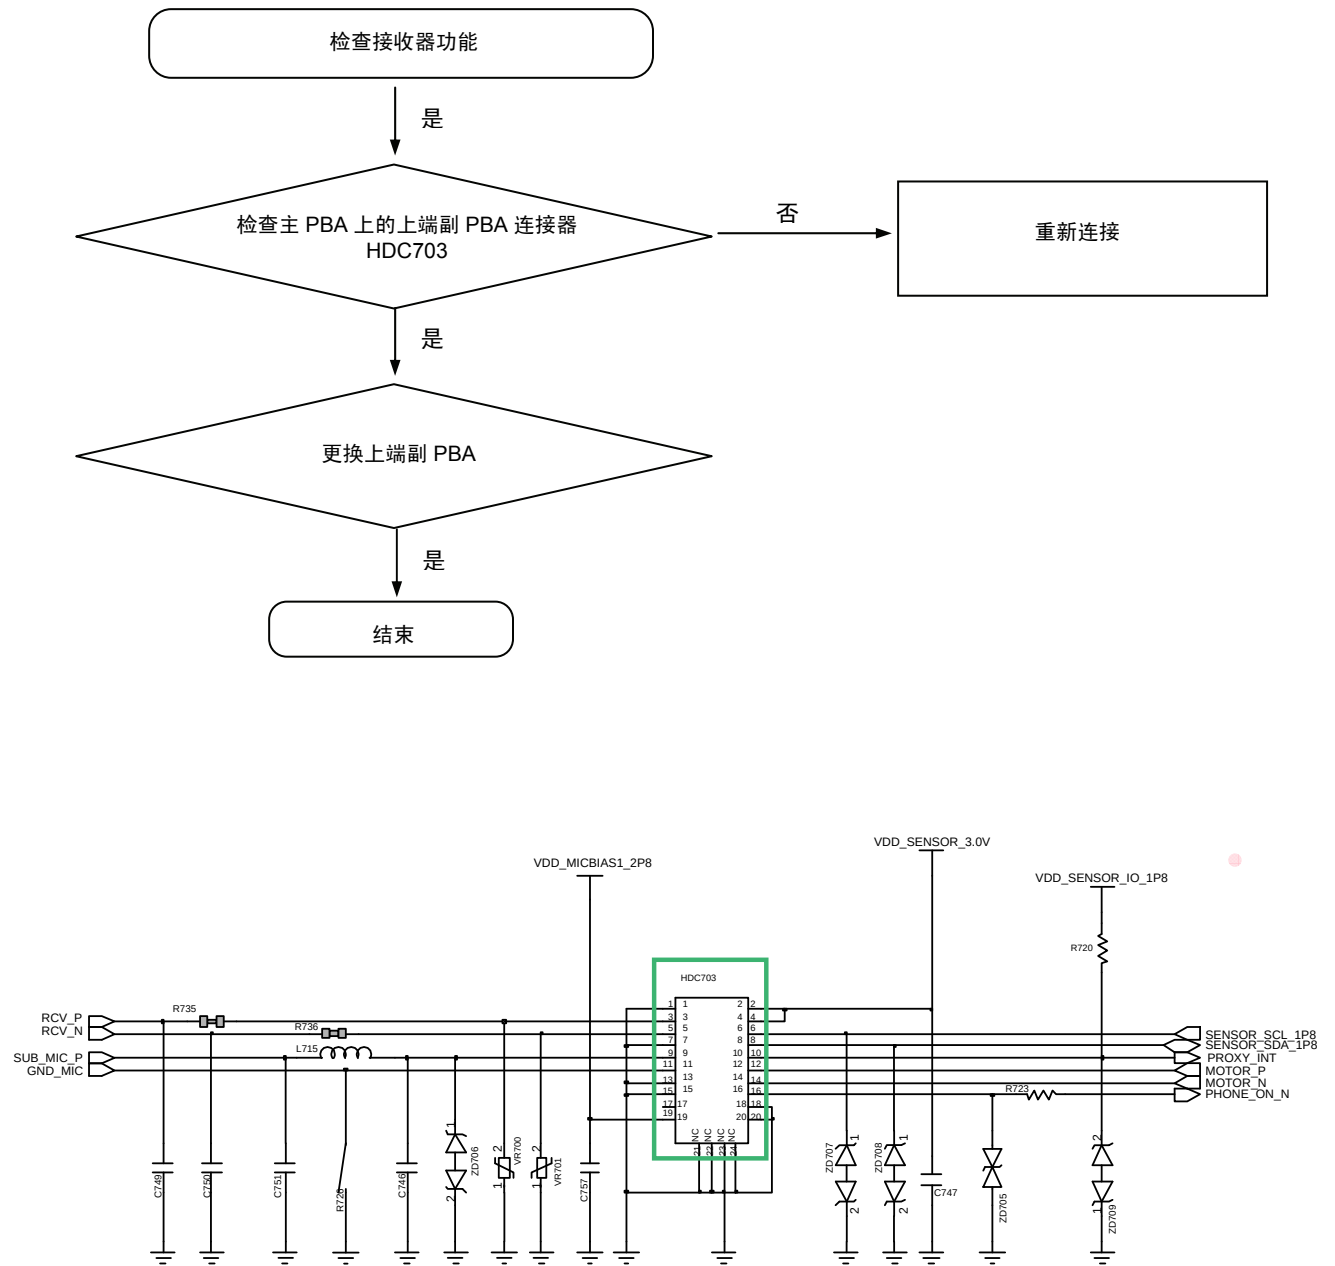

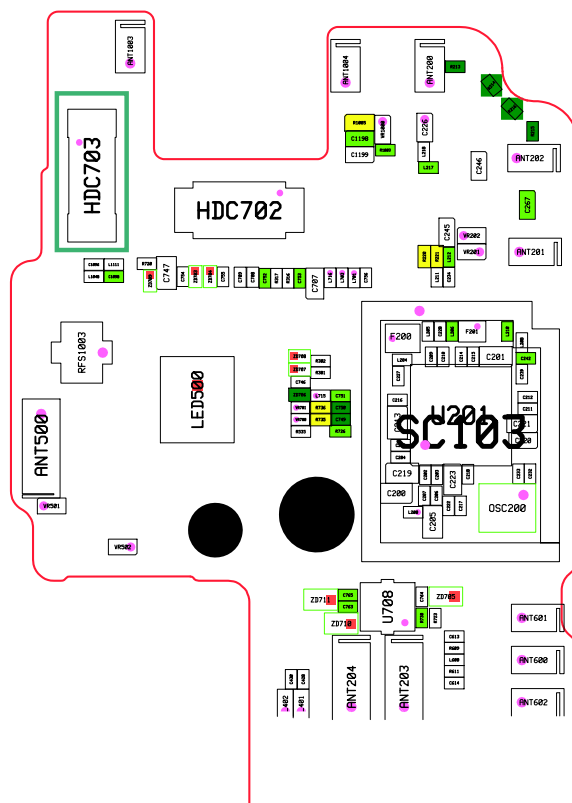



8-3-10. BT 部分

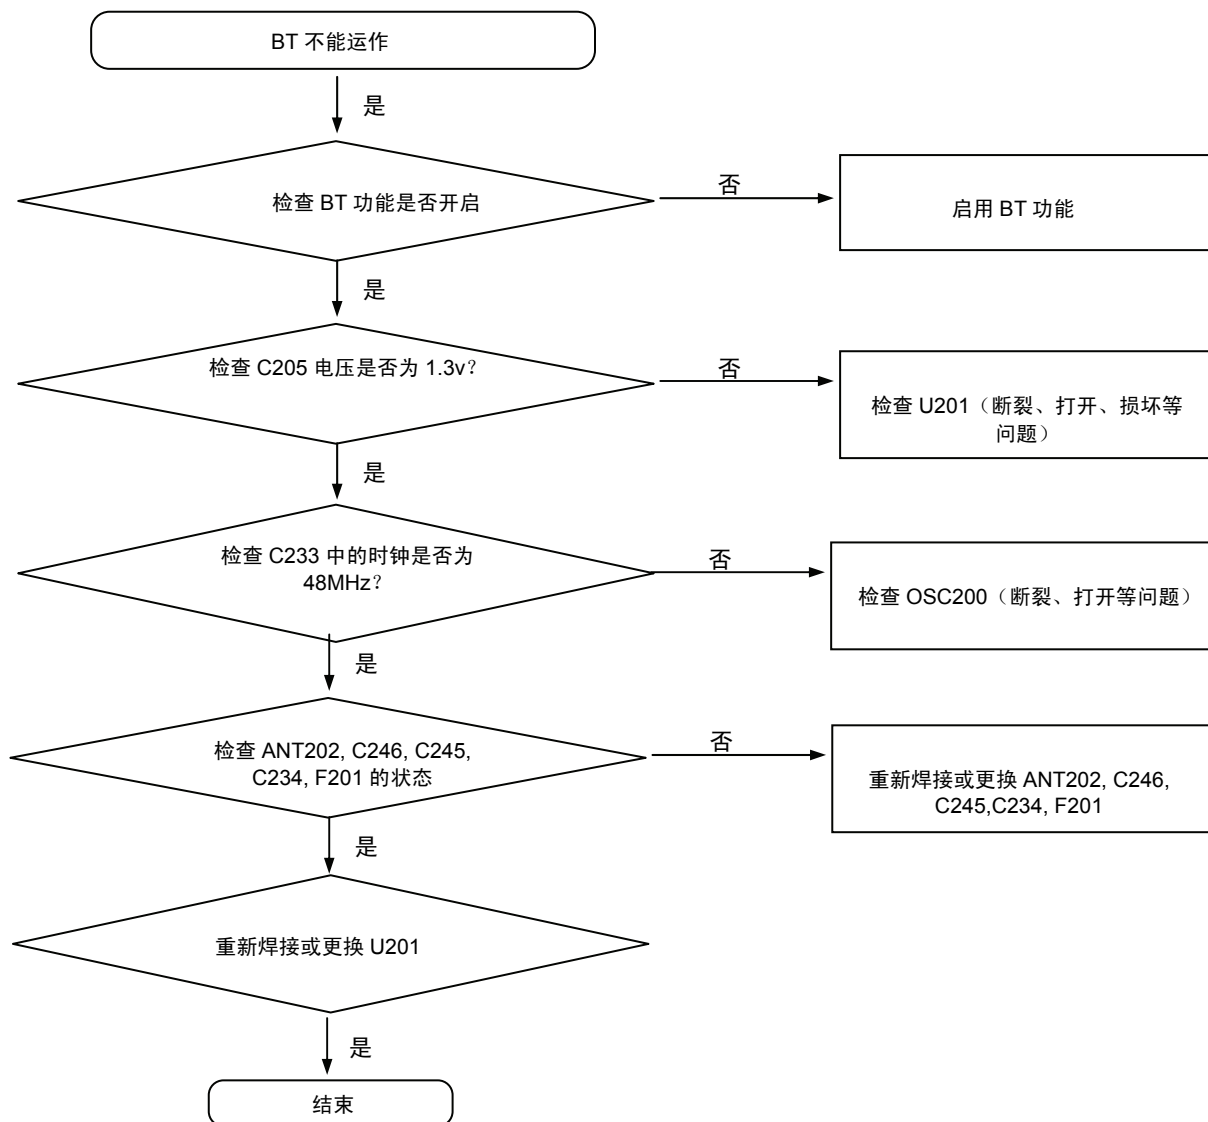

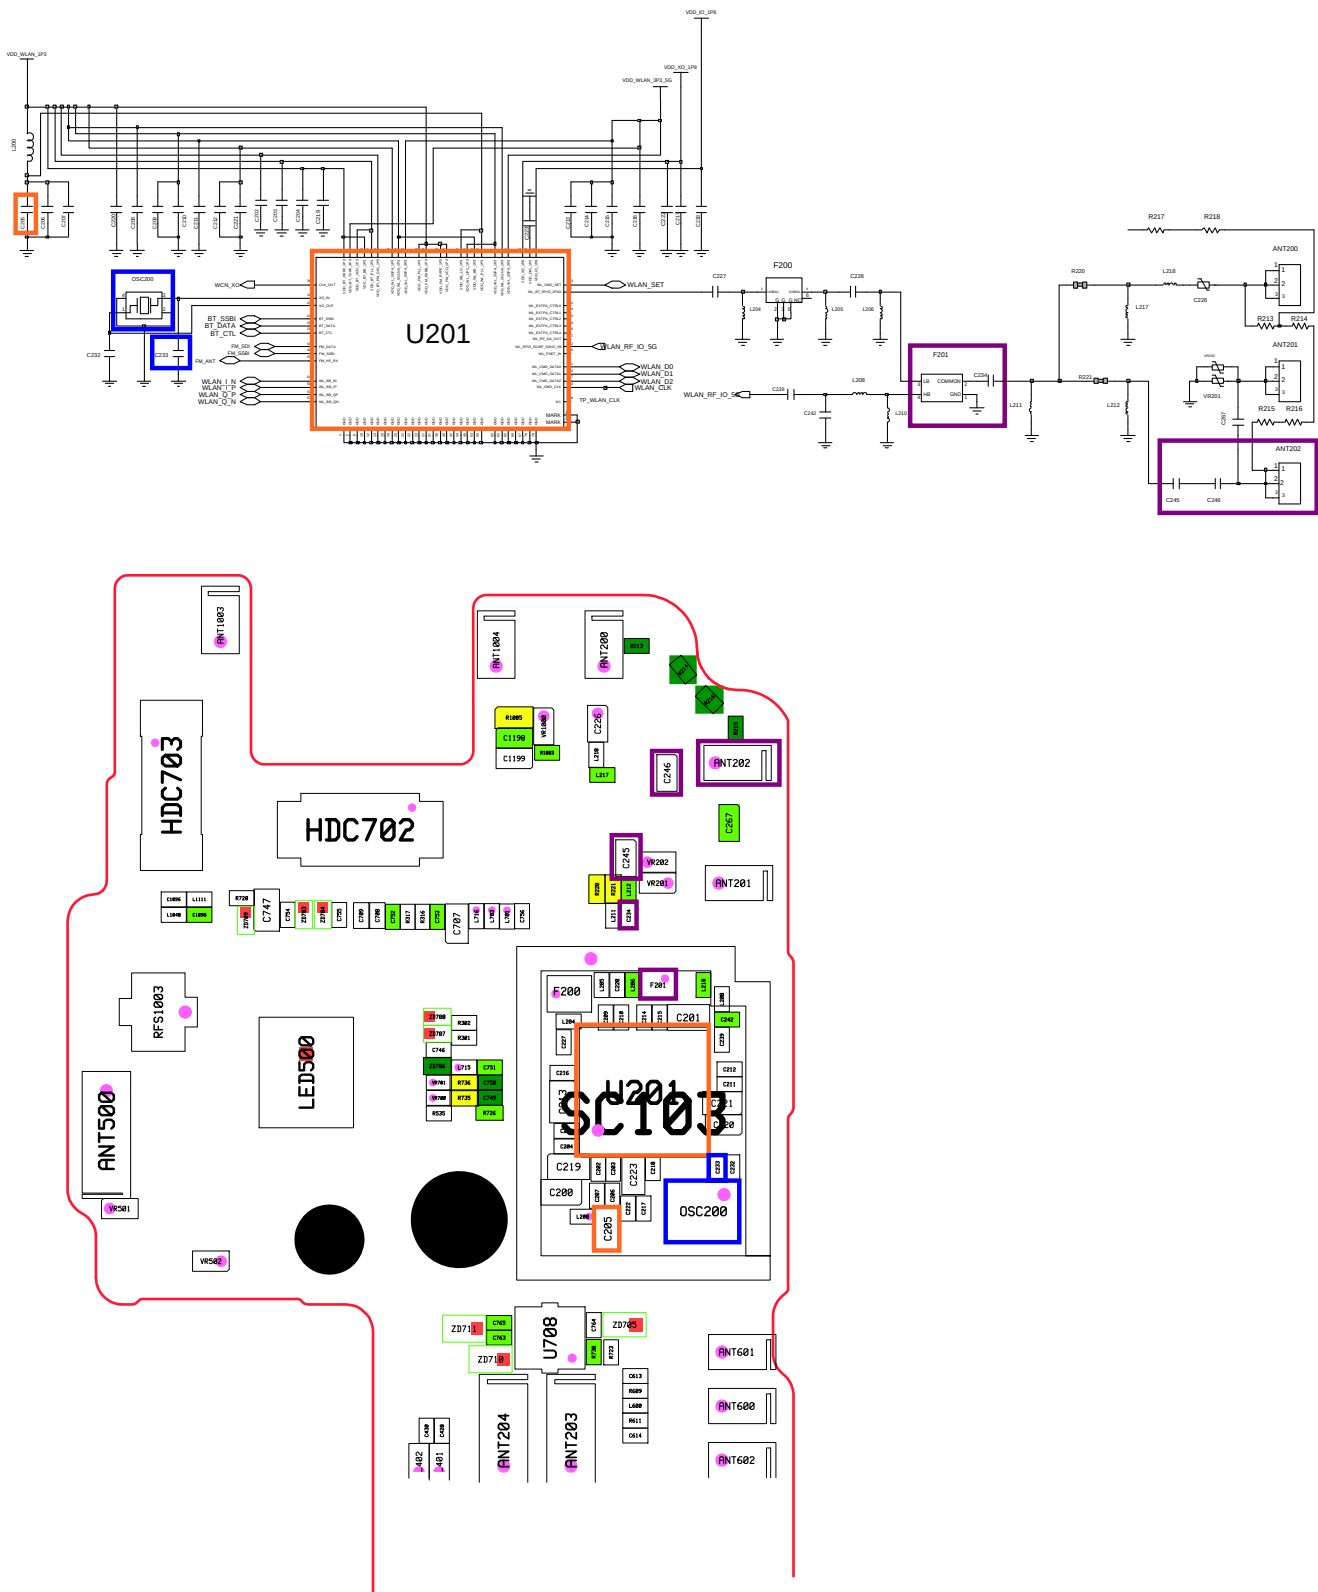



8-3-11. WIFI 部分

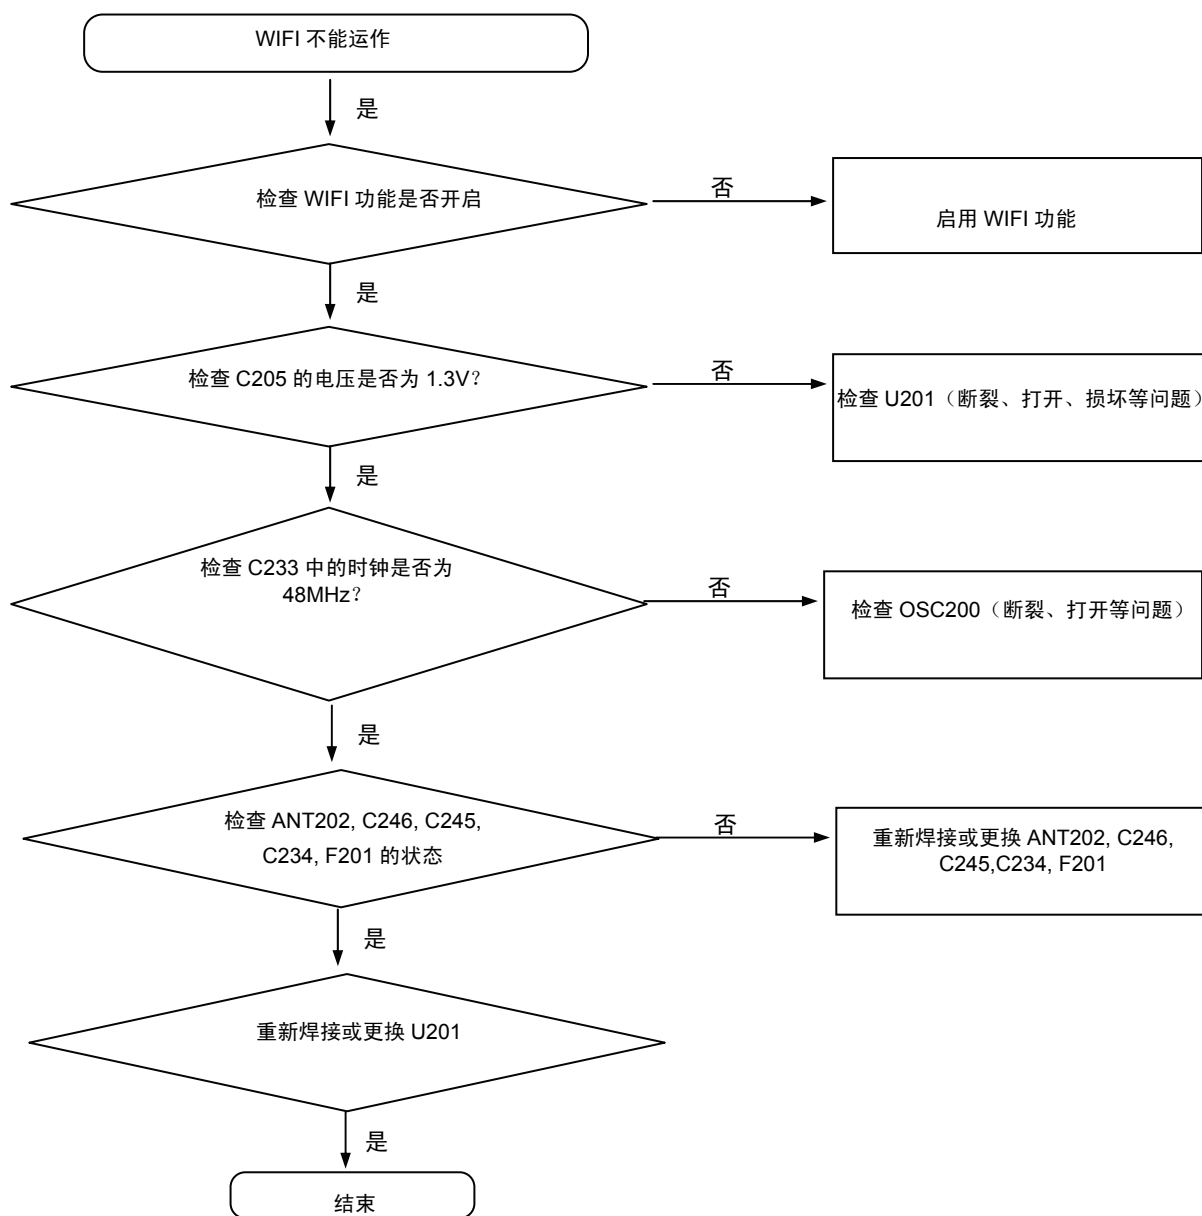

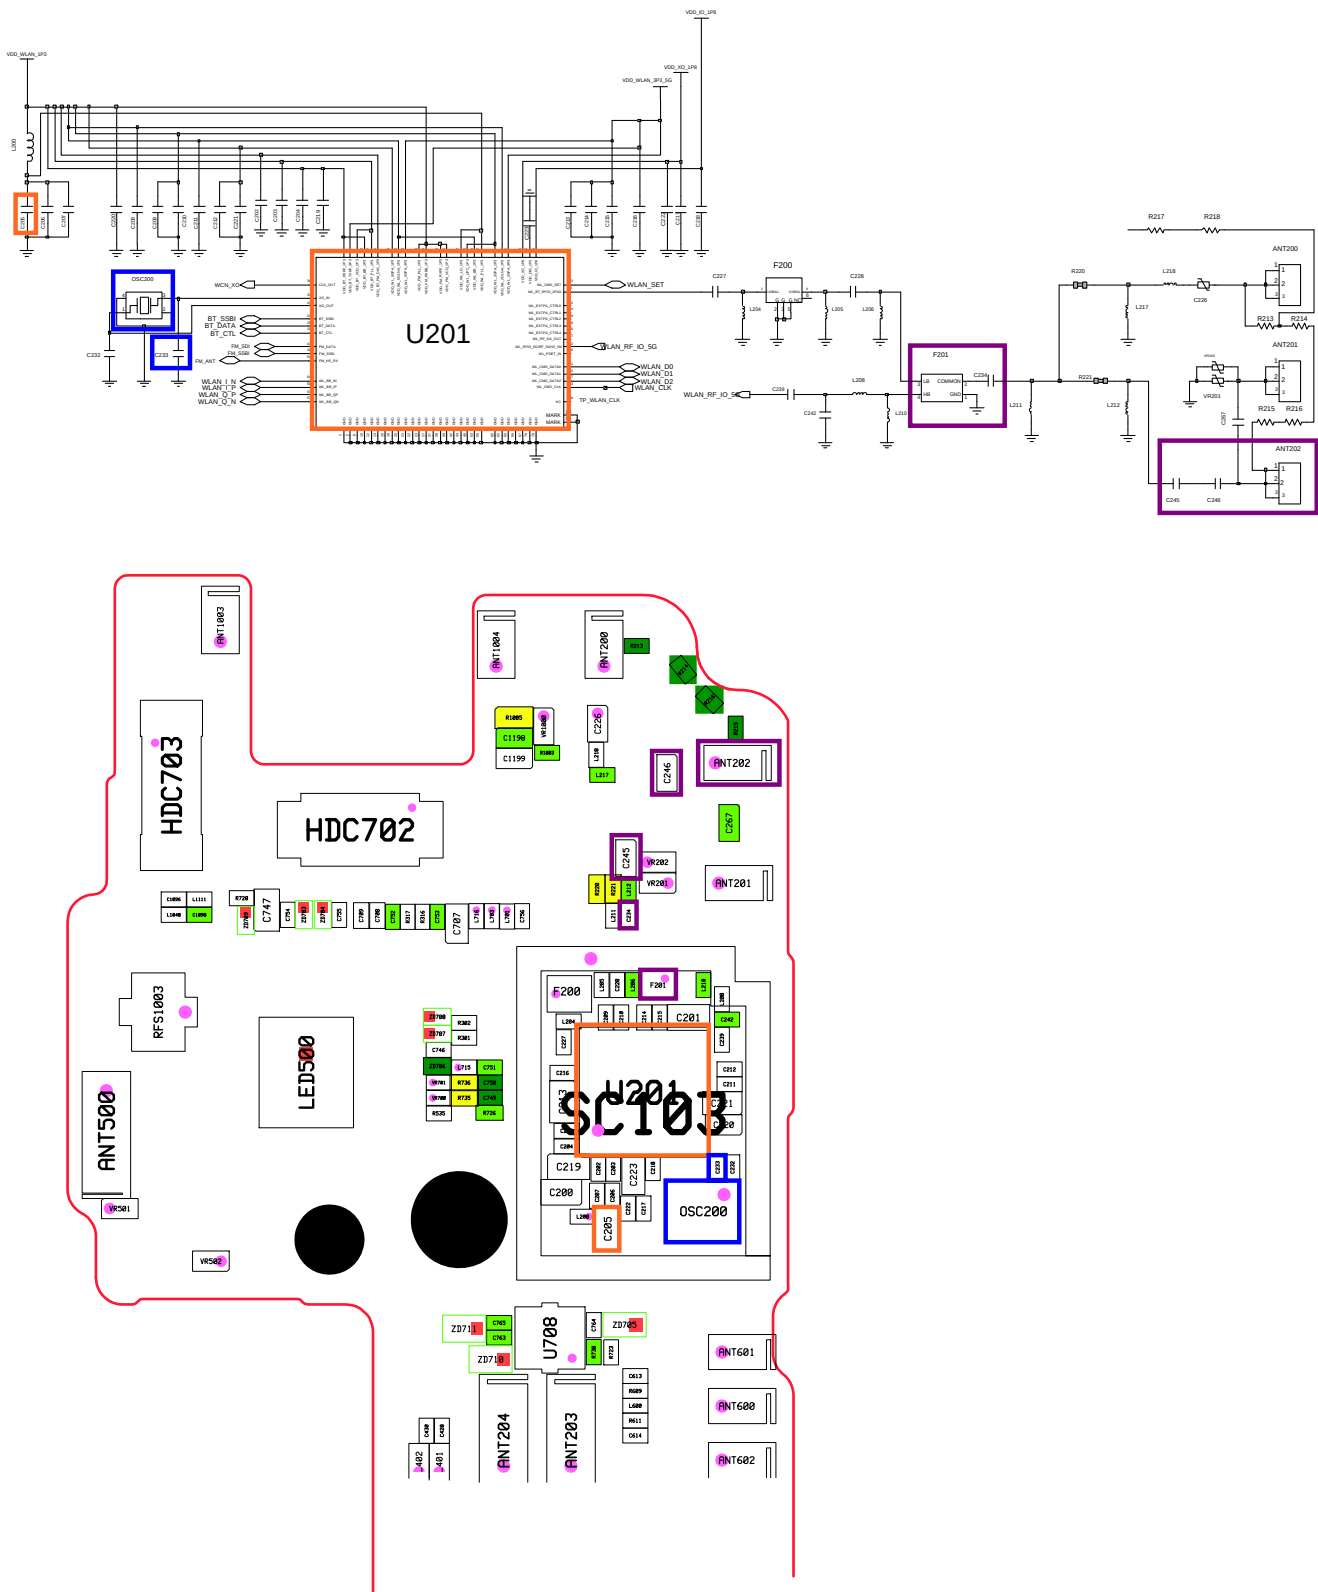




8-3-12. GPS 部分

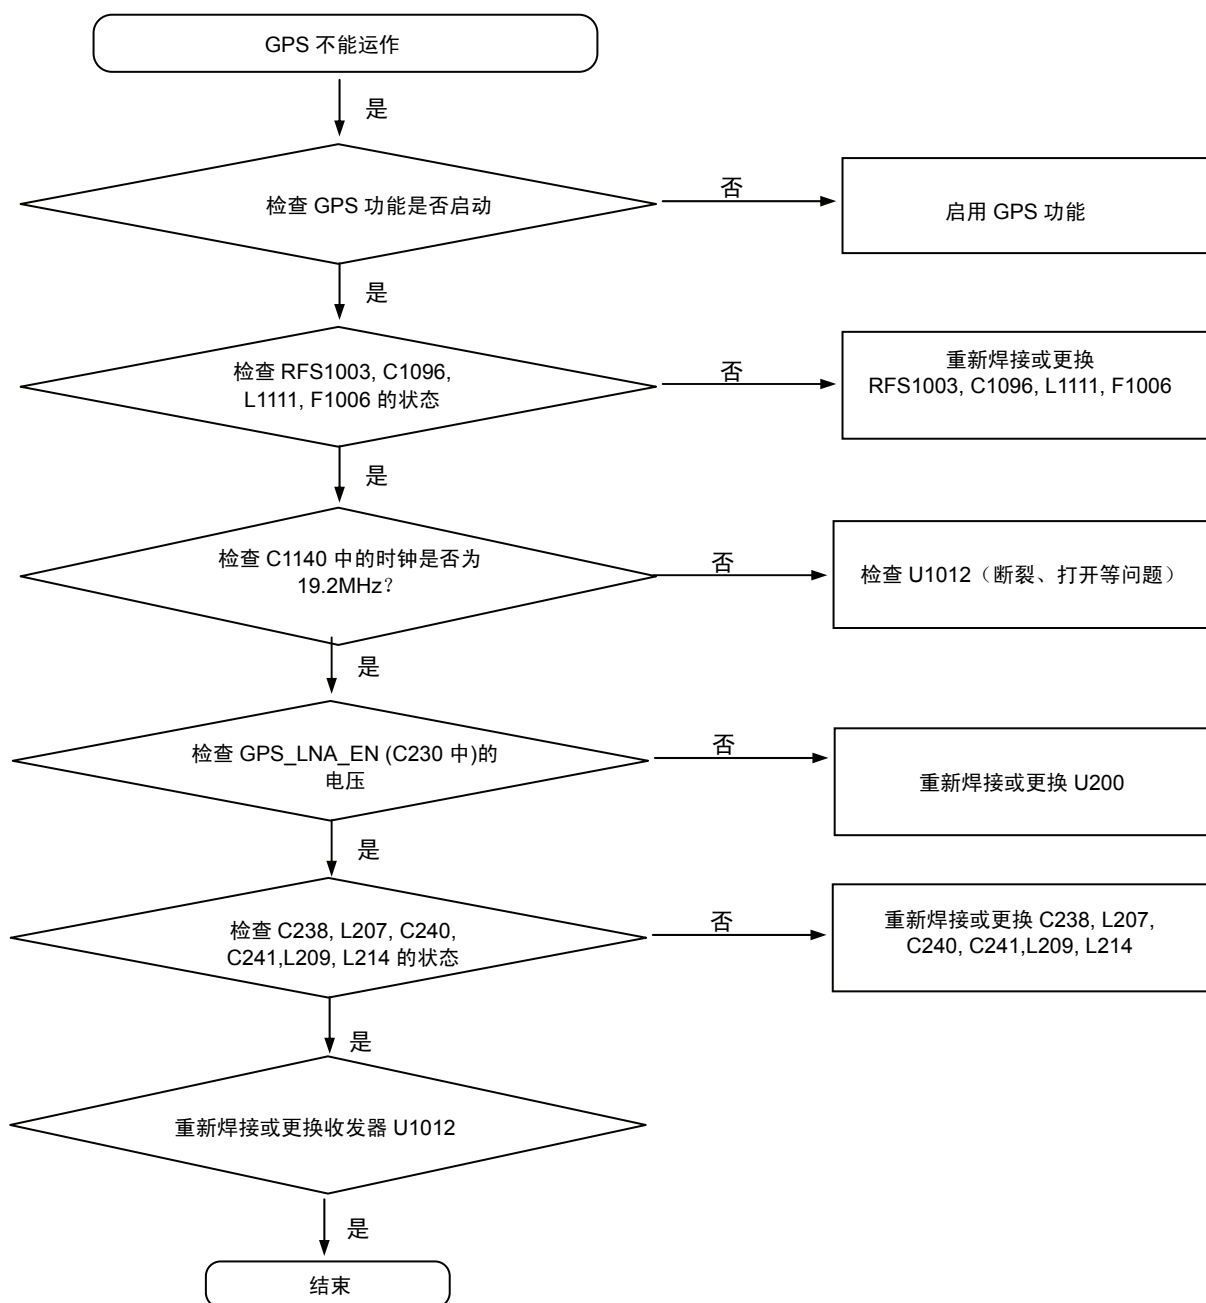

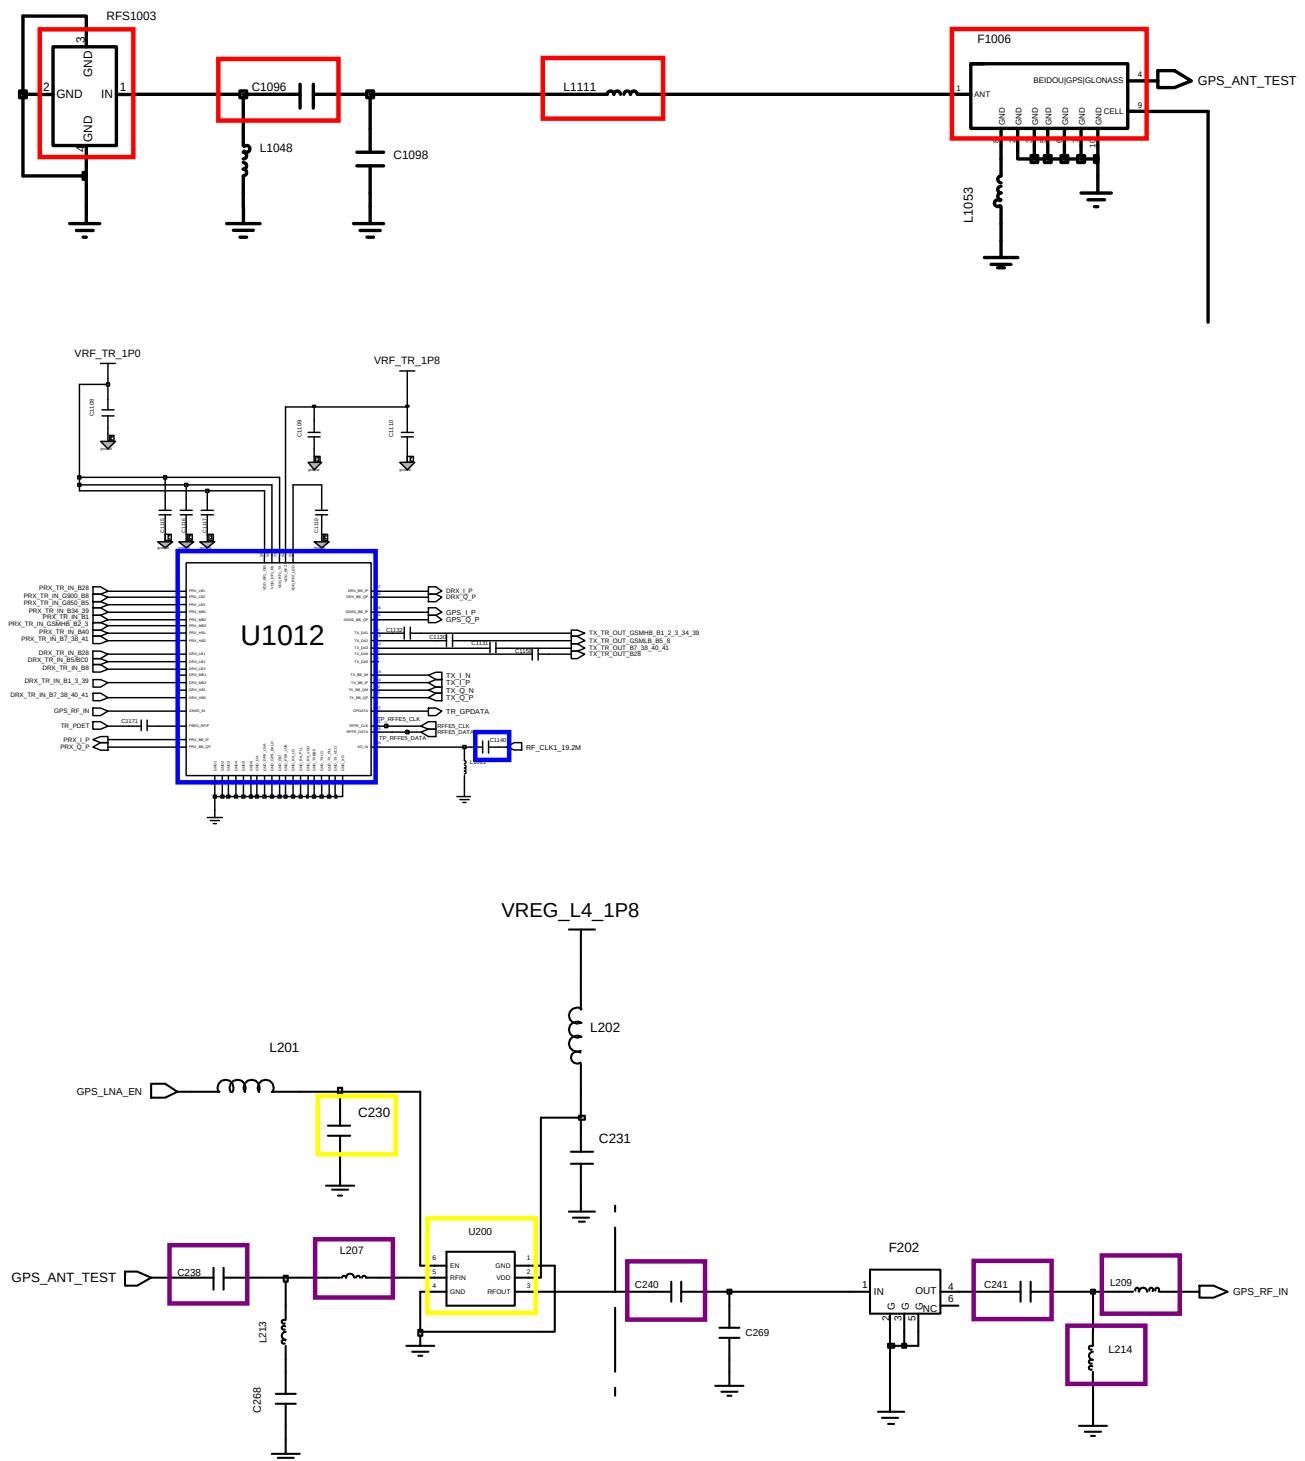




8-3-13. 液晶显示屏

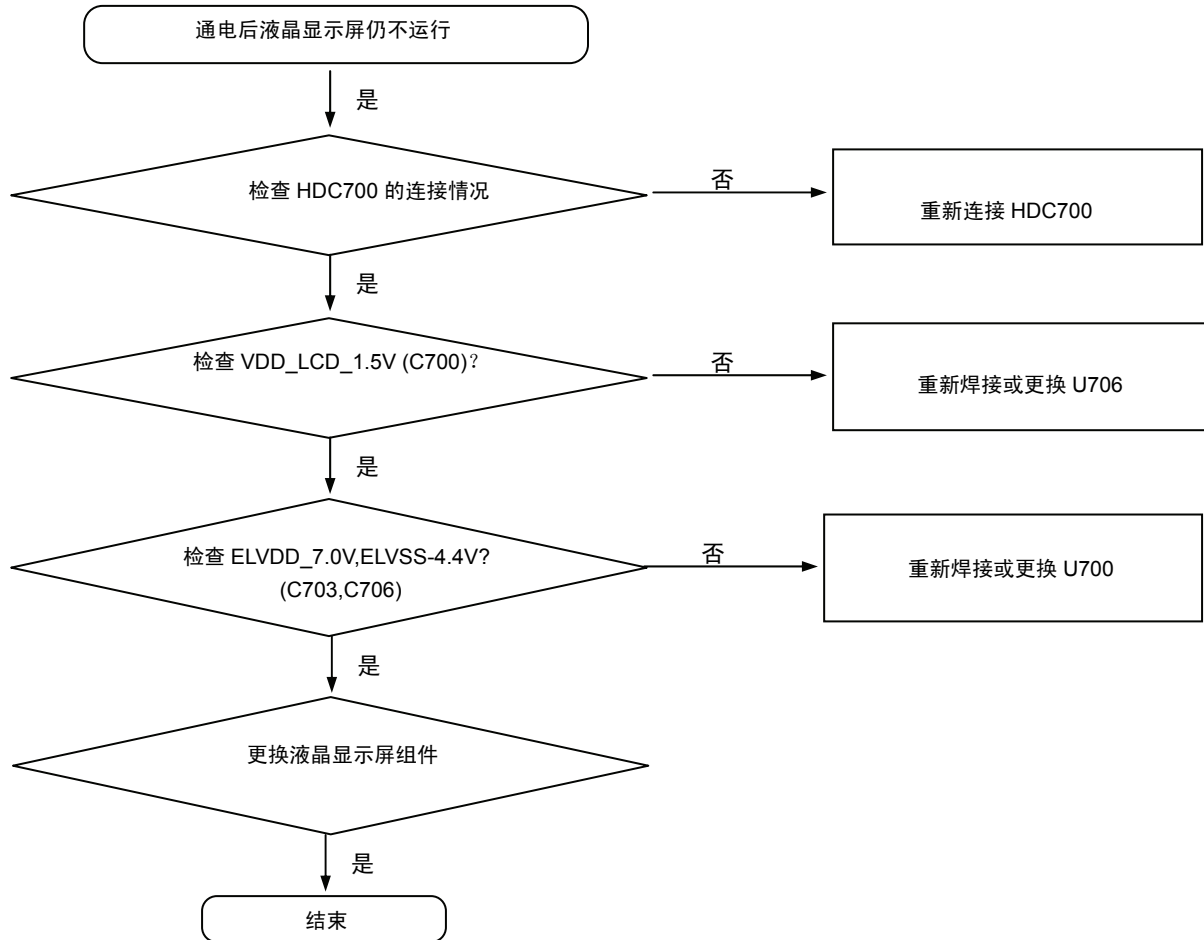


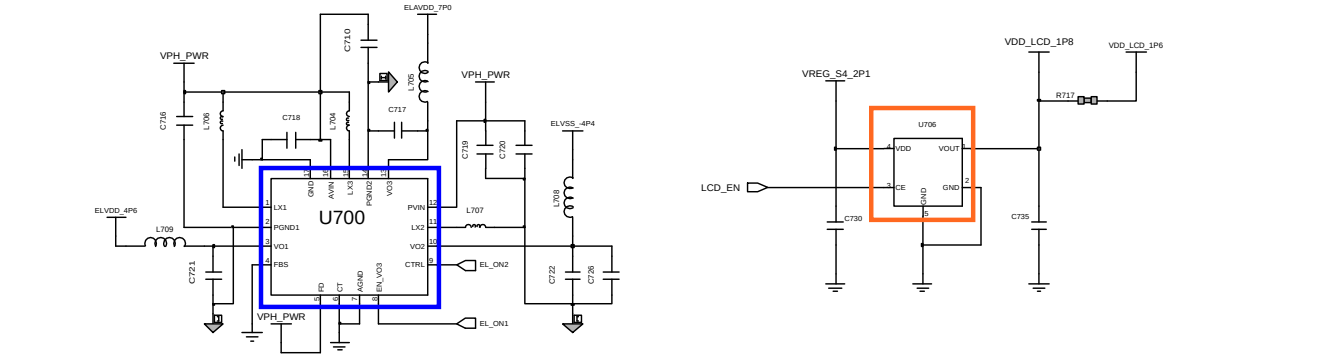


8-3-14. 16M 摄像头

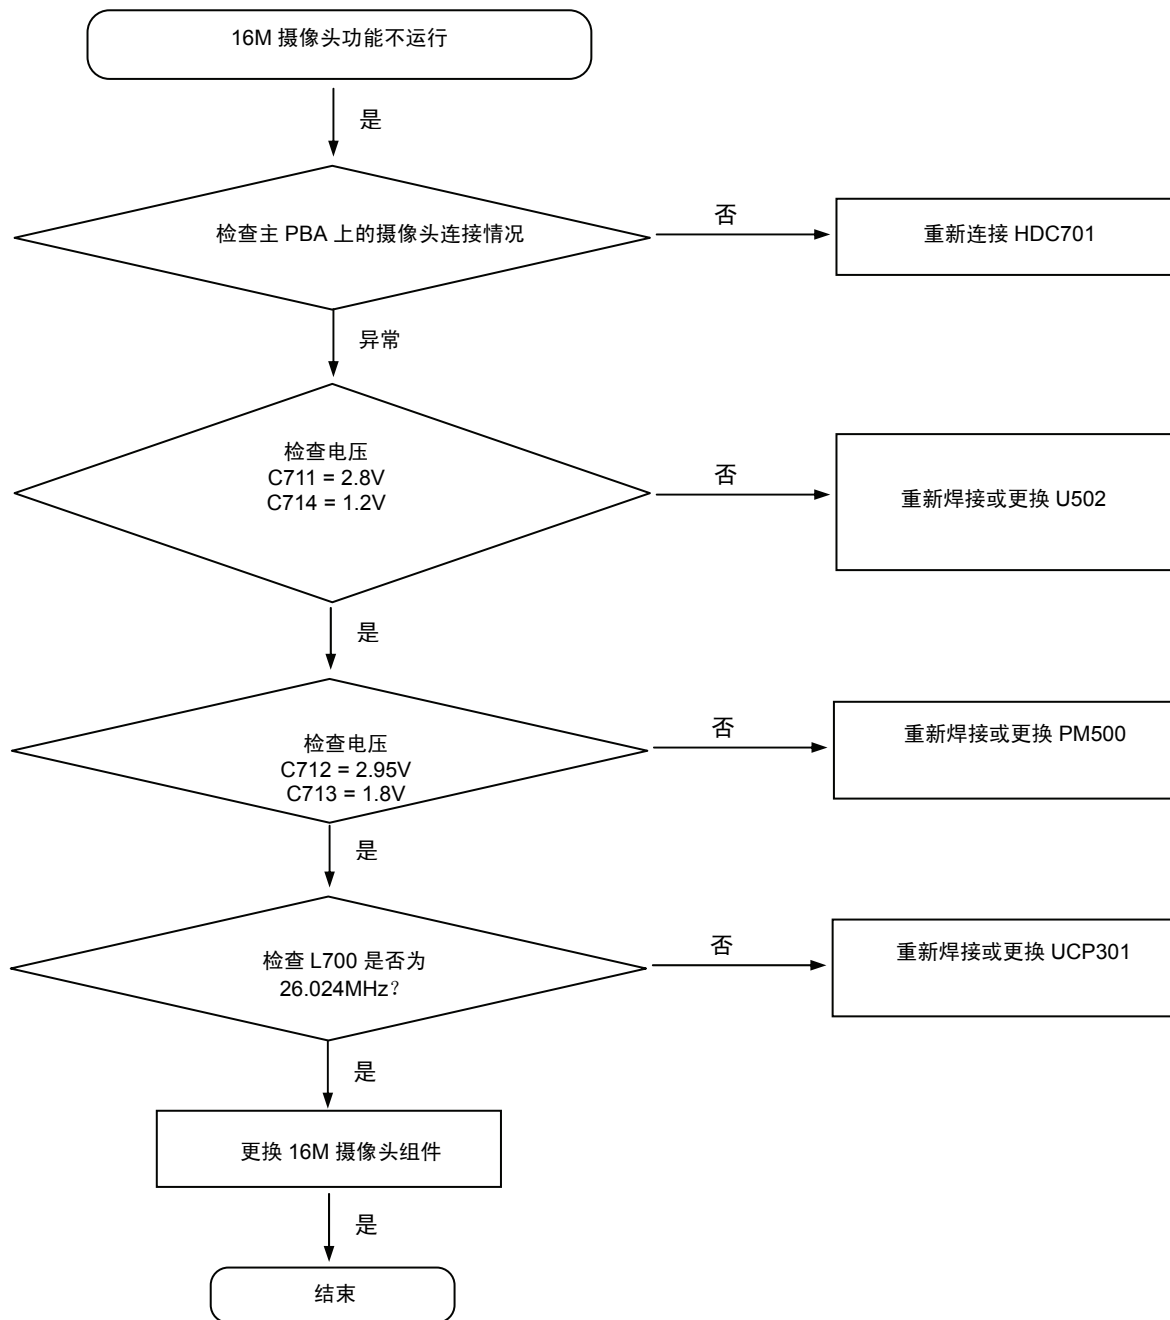


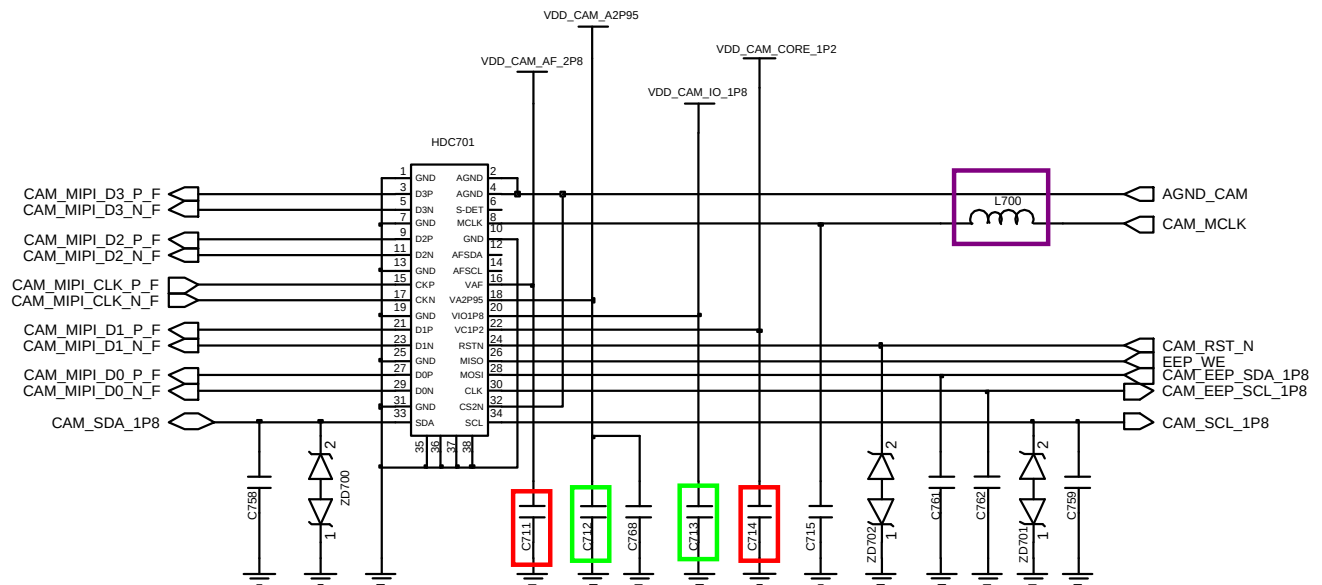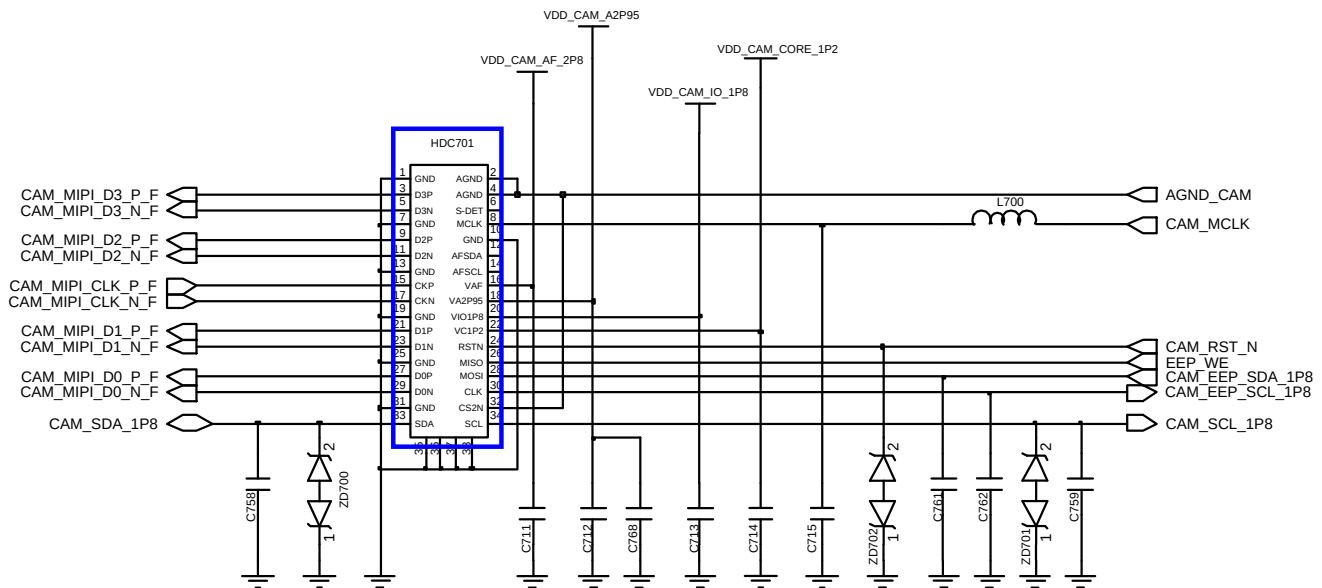


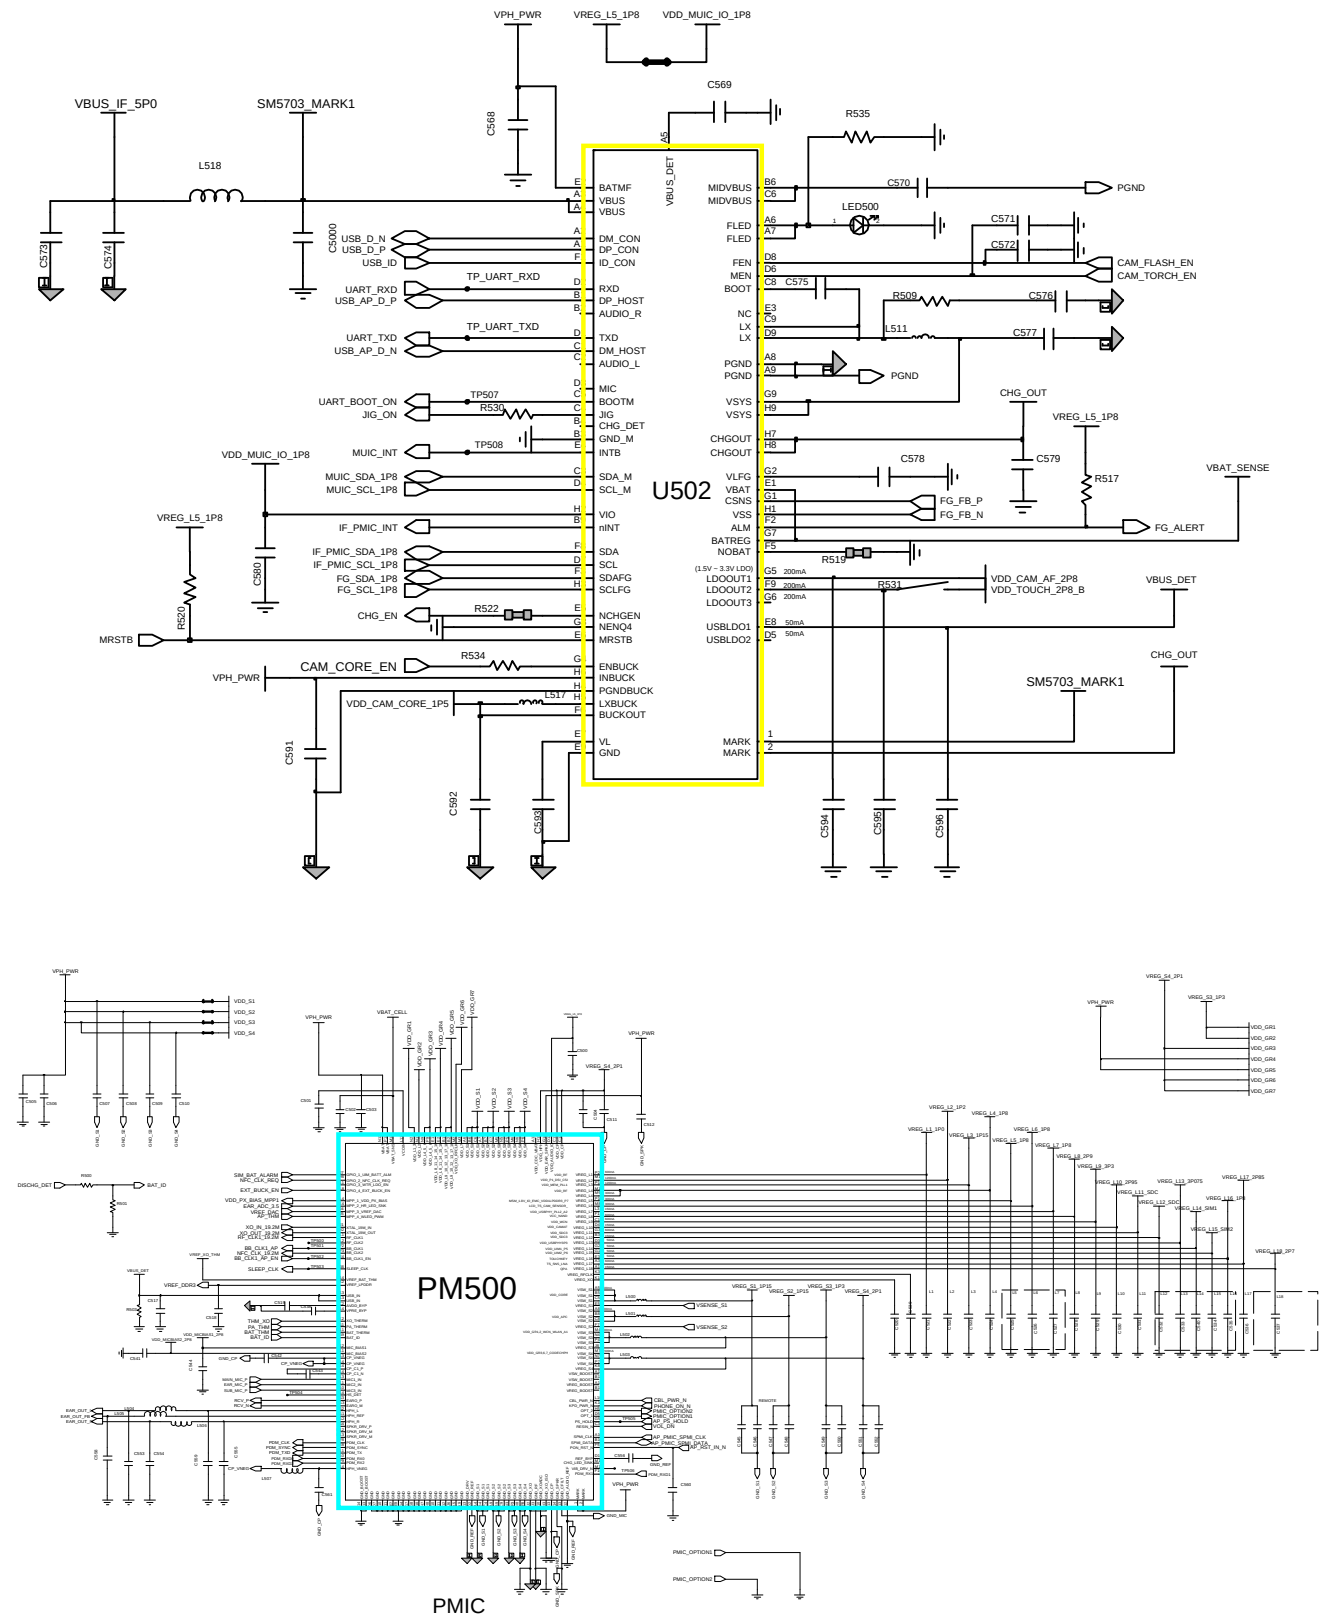


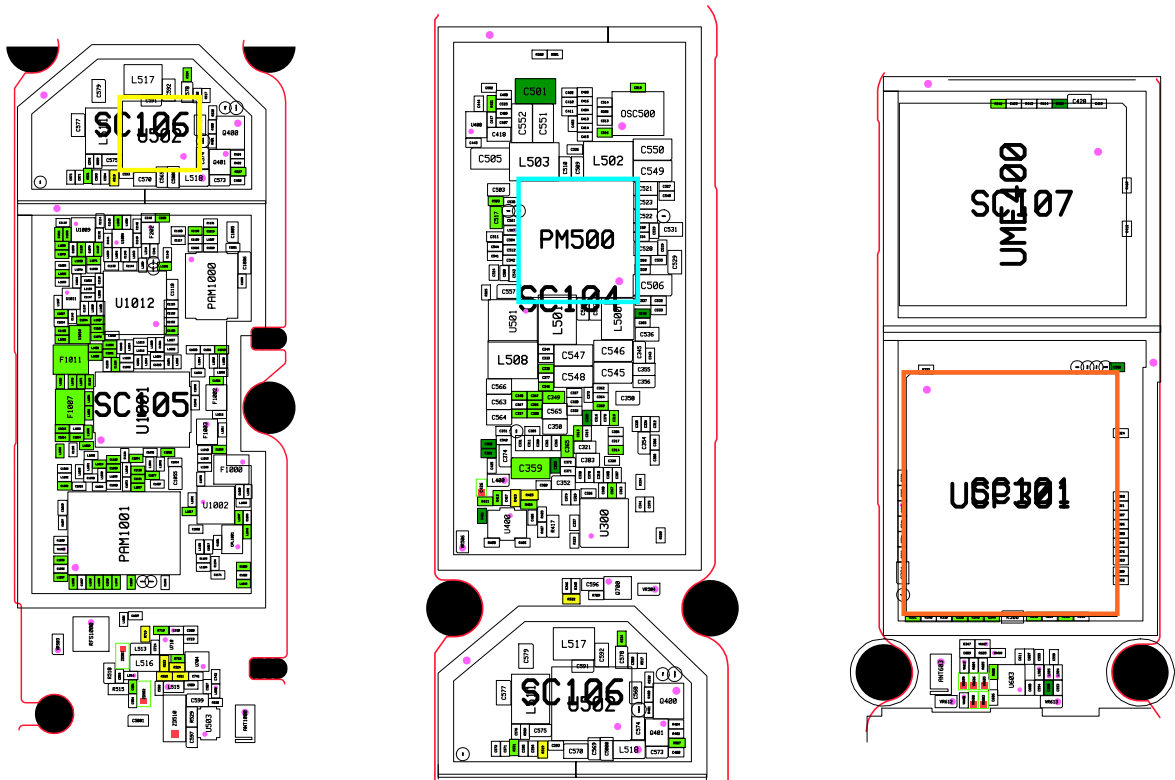





8-3-15. 5M 摄像头

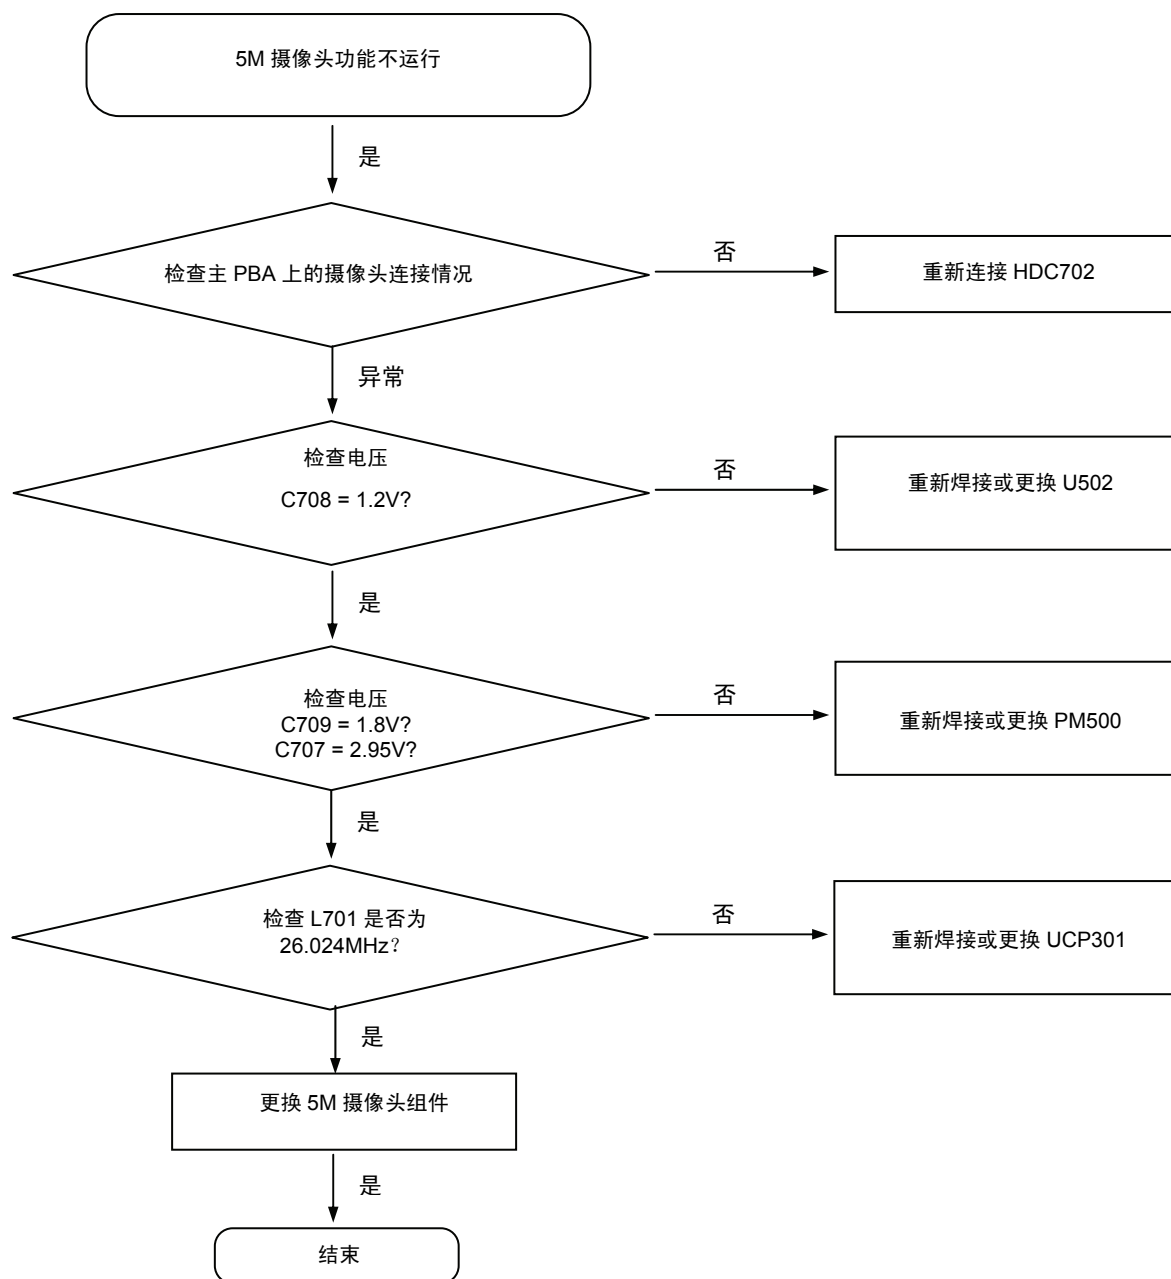

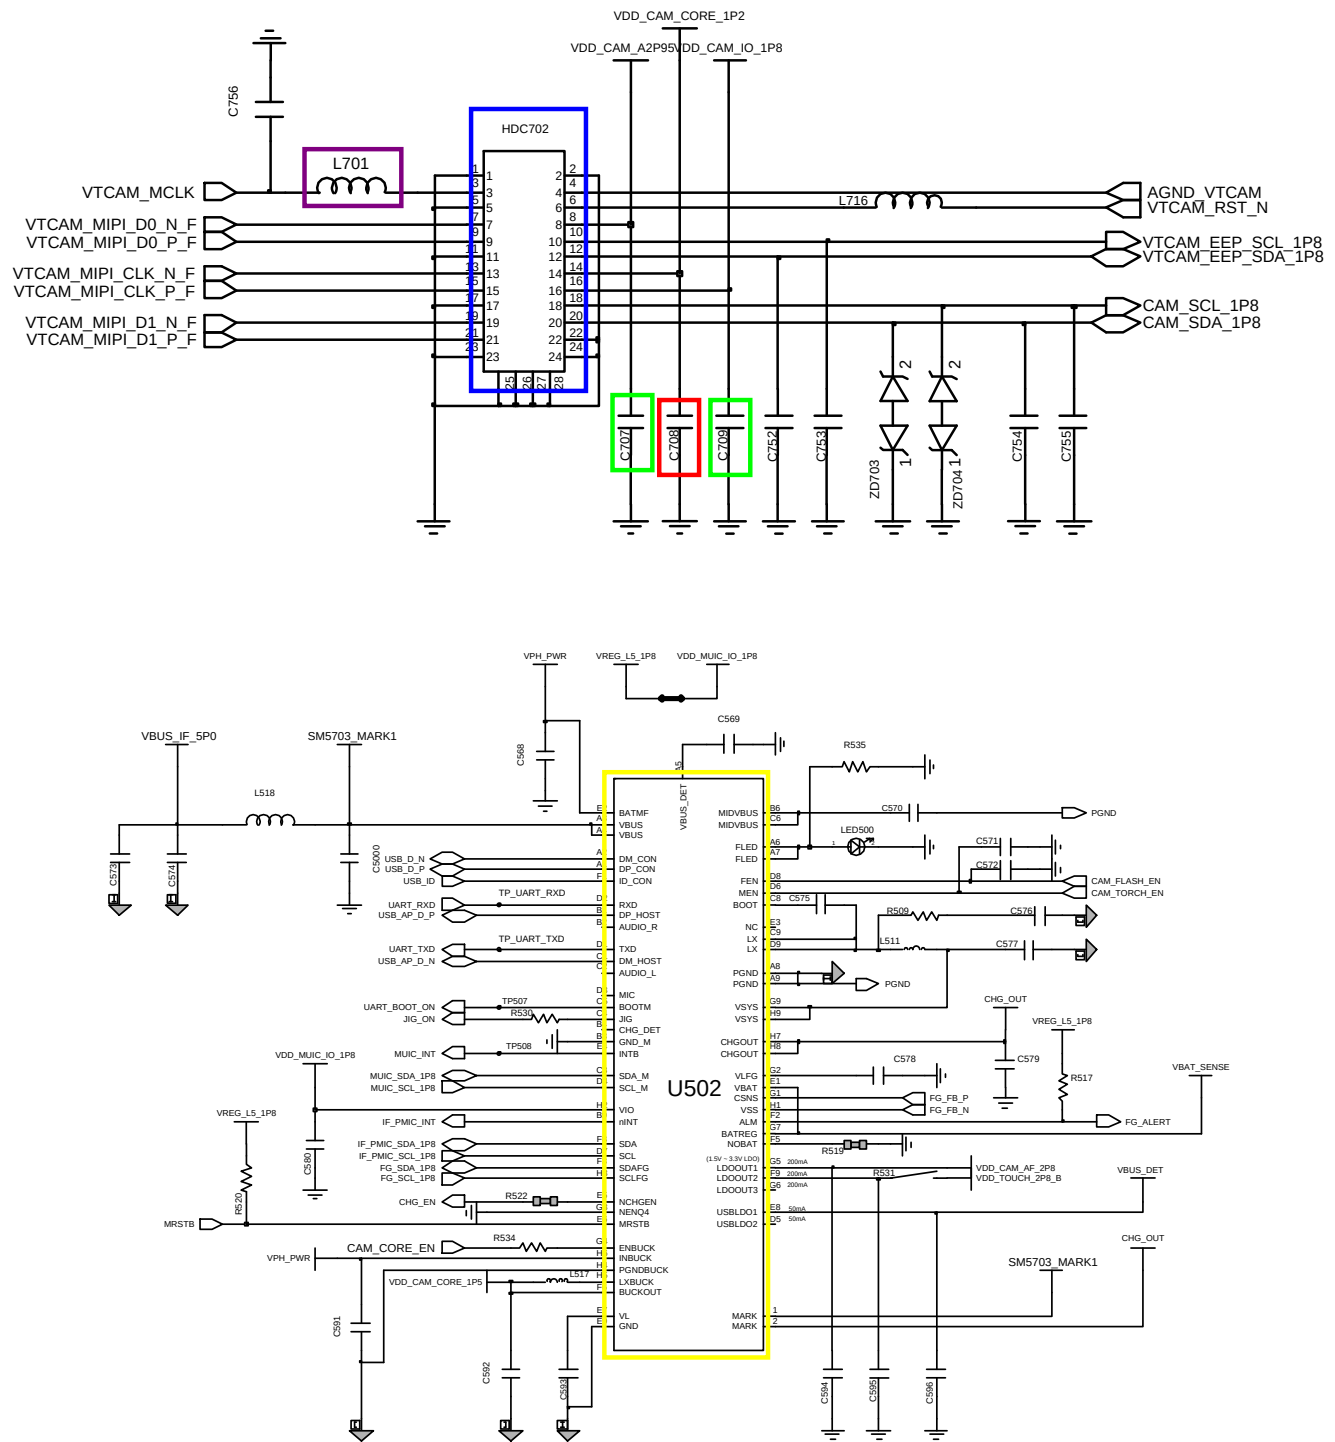




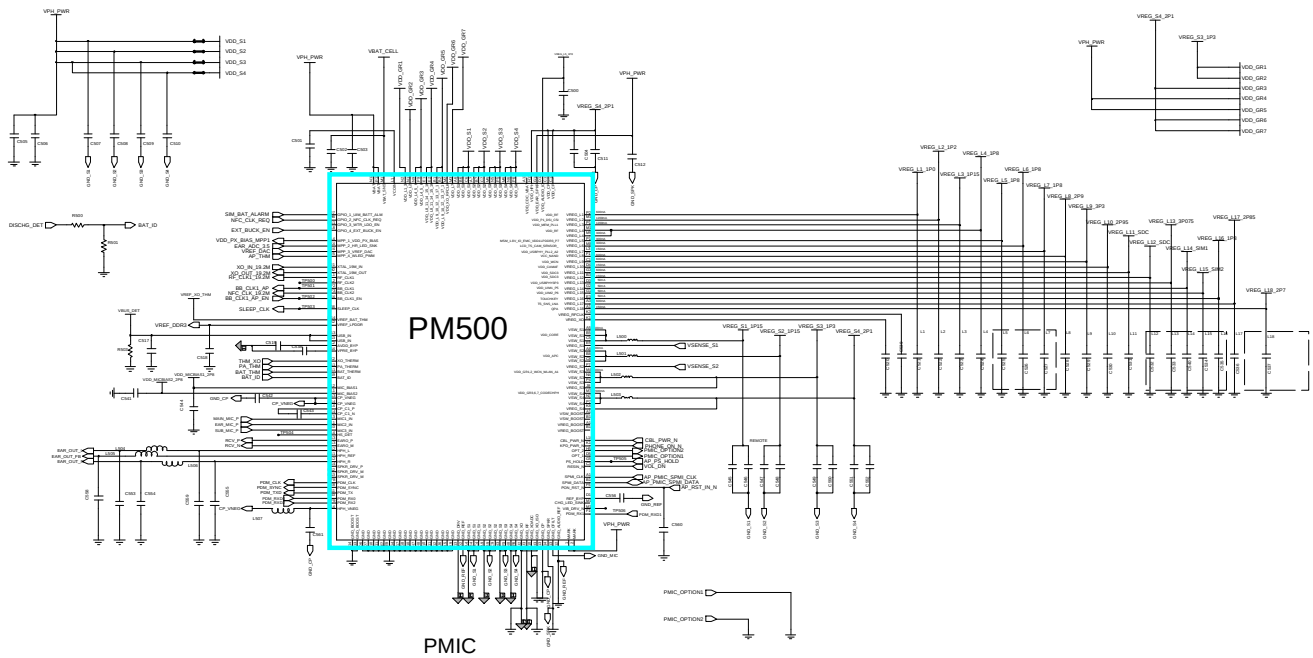



UCP301-1

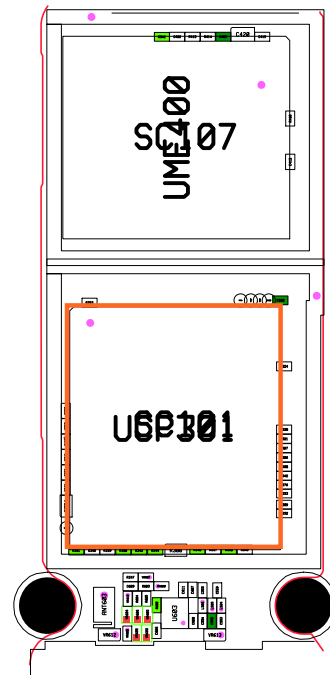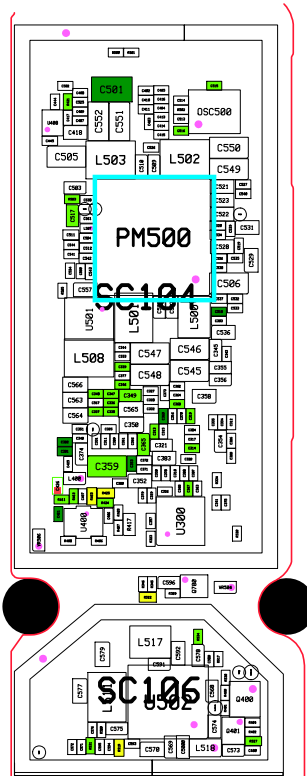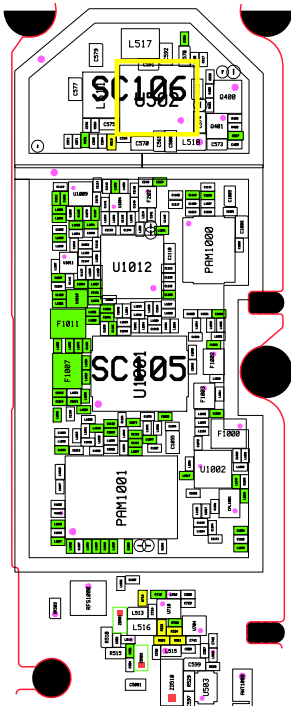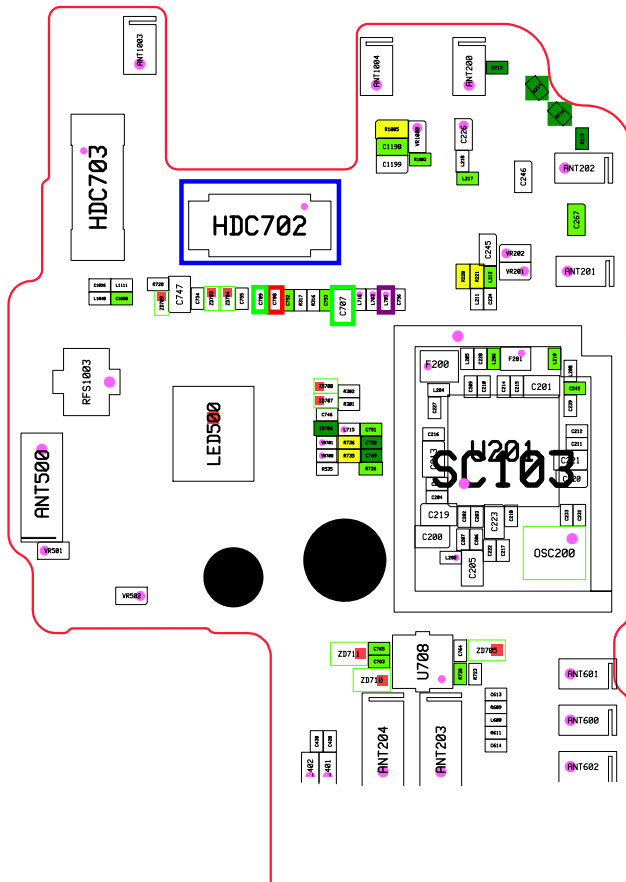



8-3-16. TSP

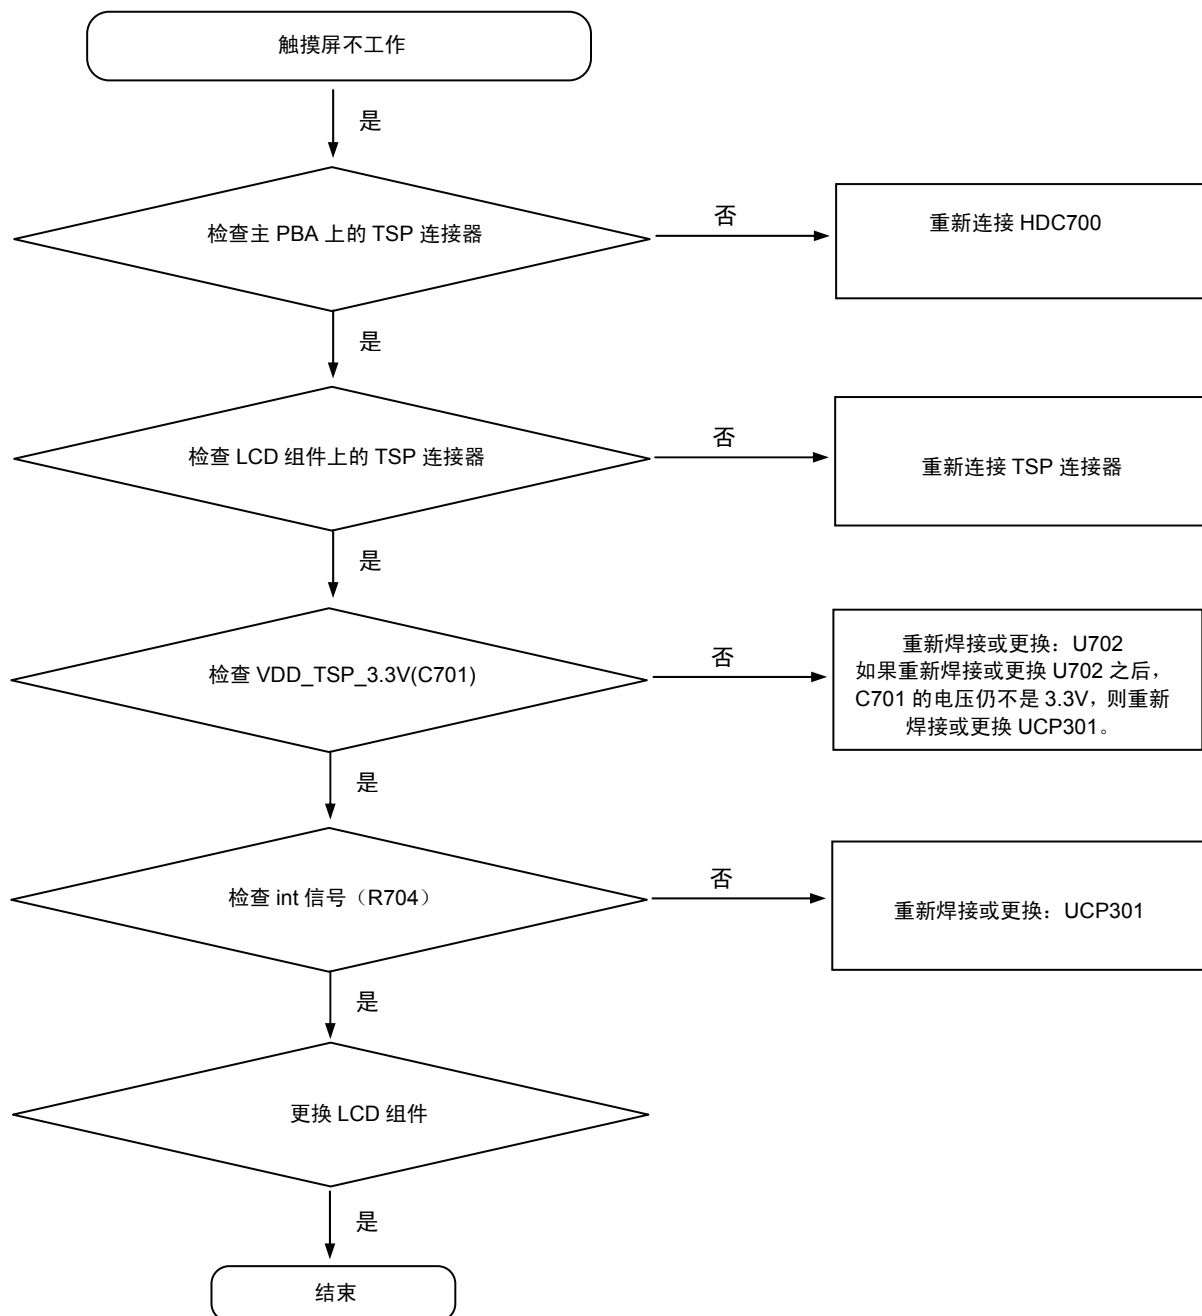


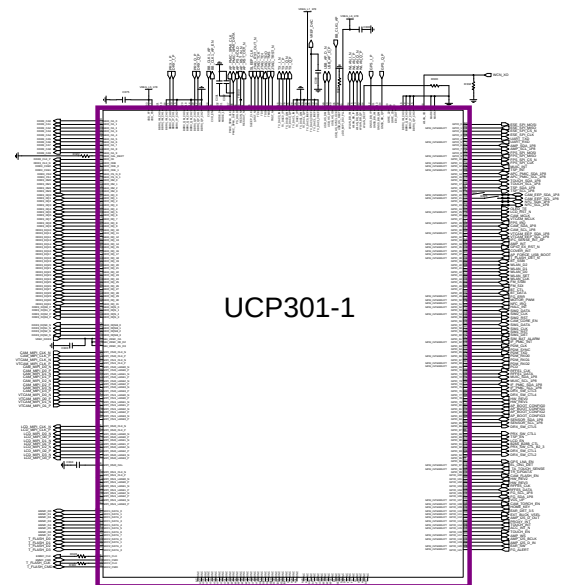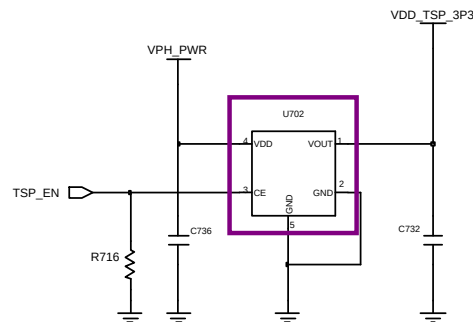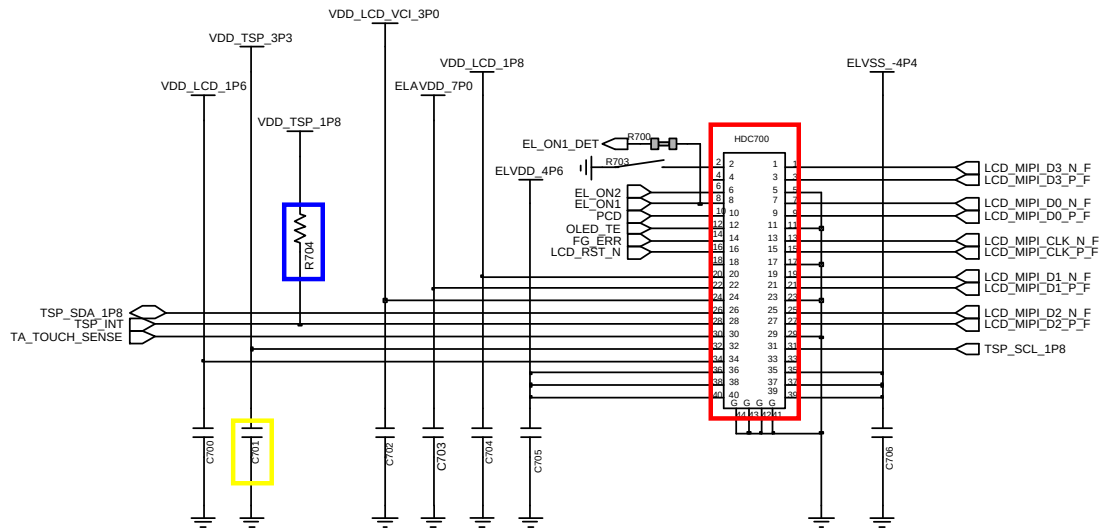

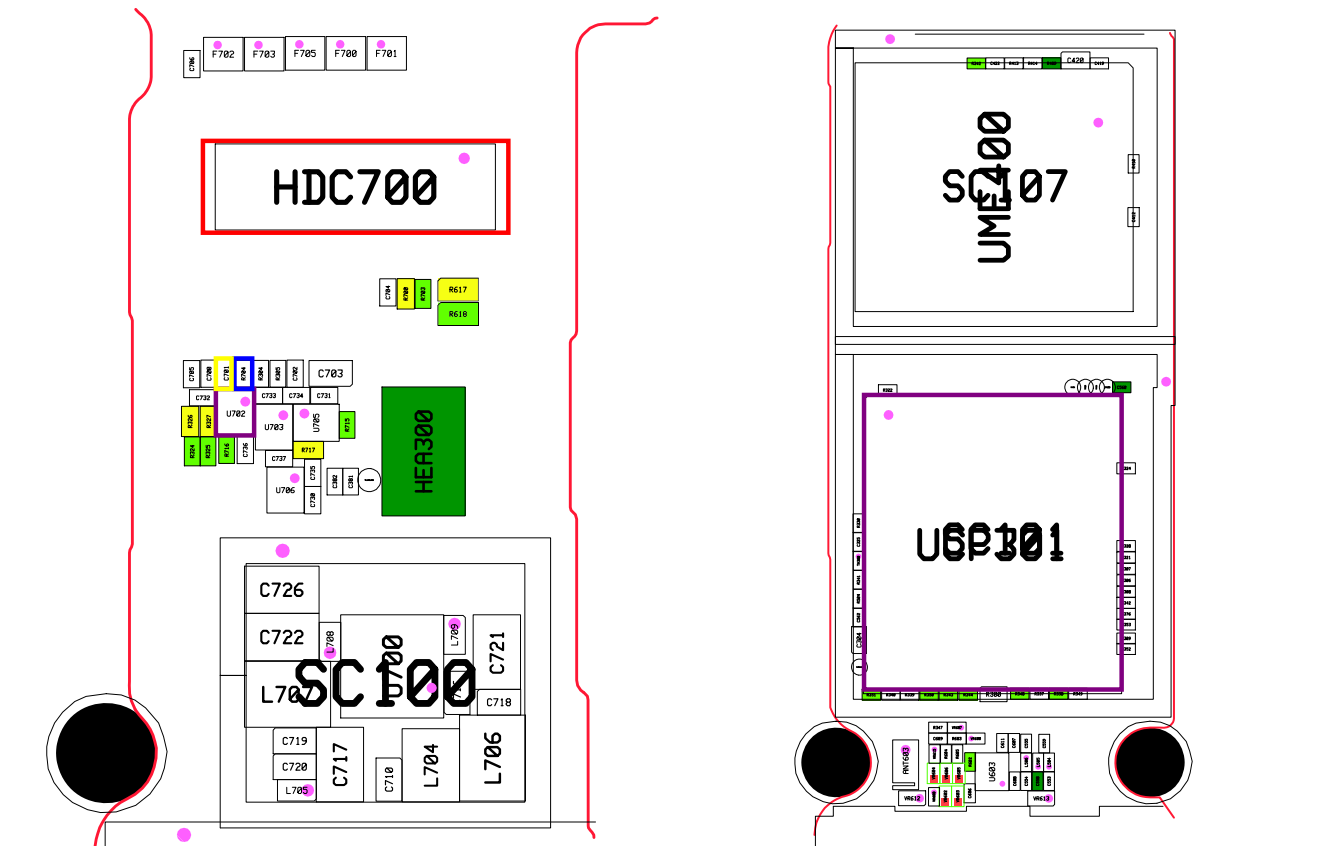



8-3-17. 耳机插孔

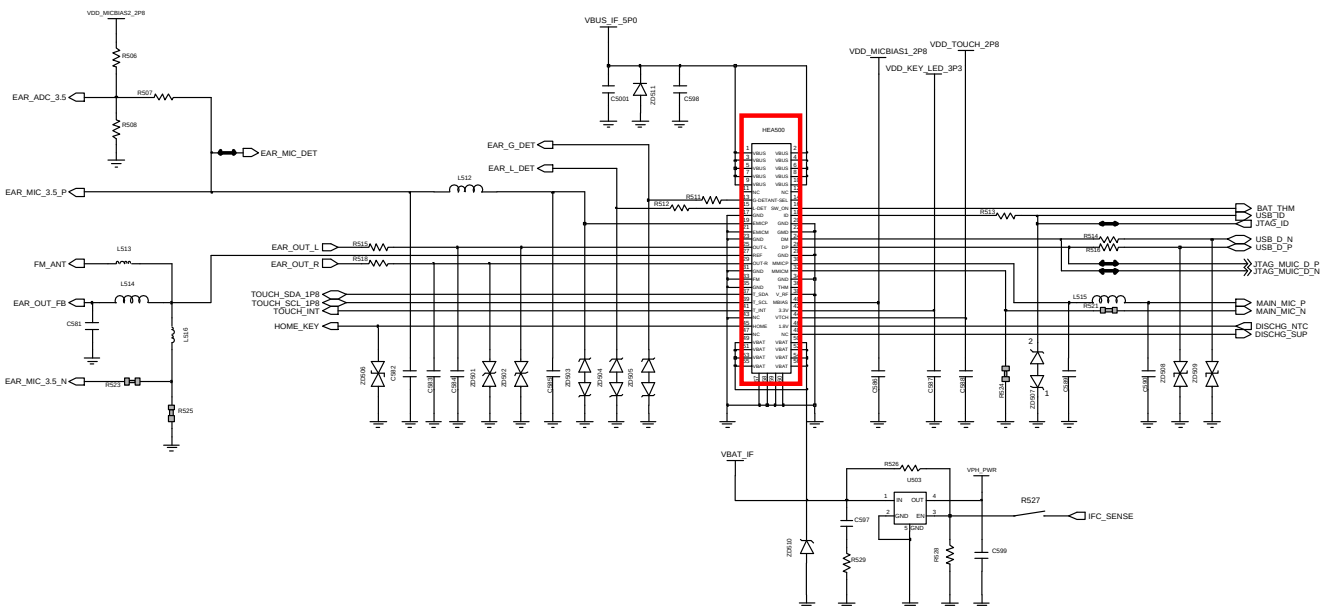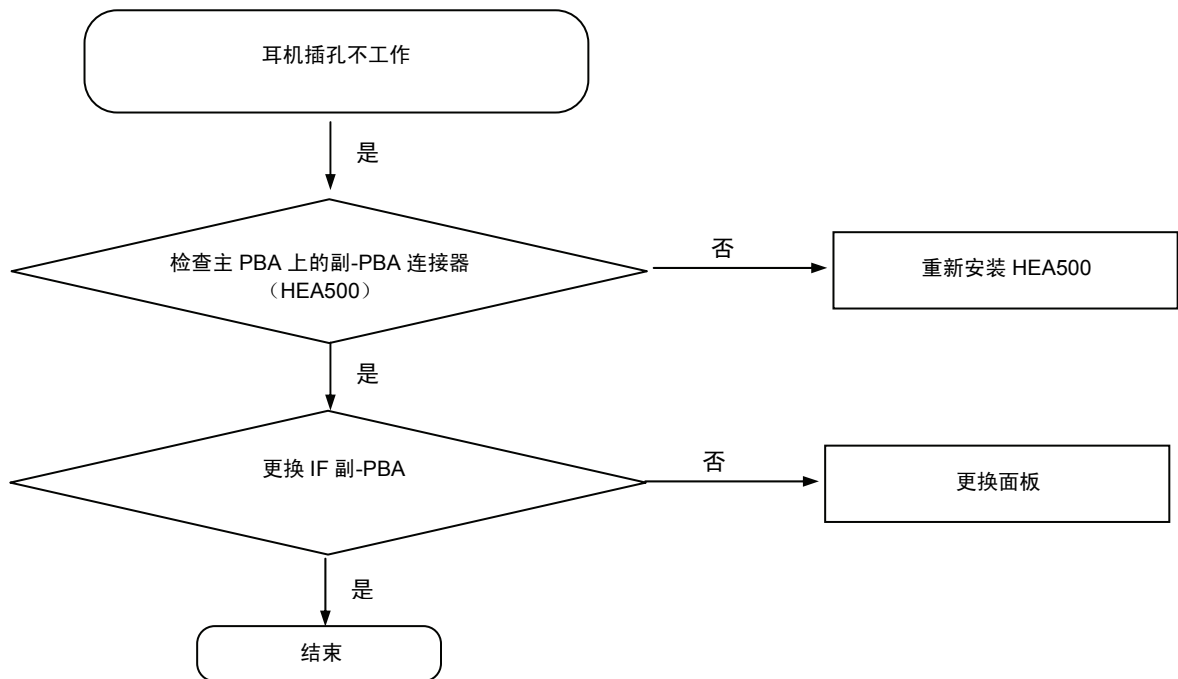

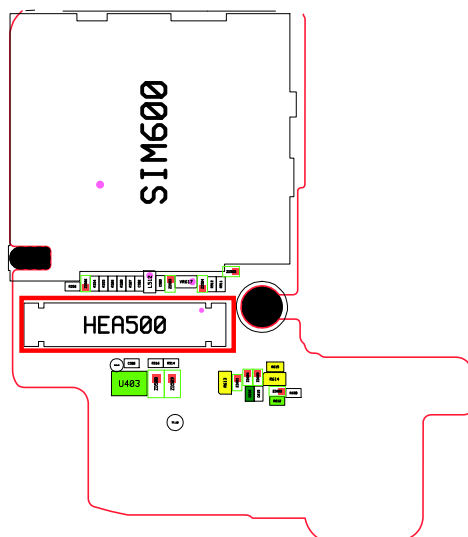



8-3-18. 马达

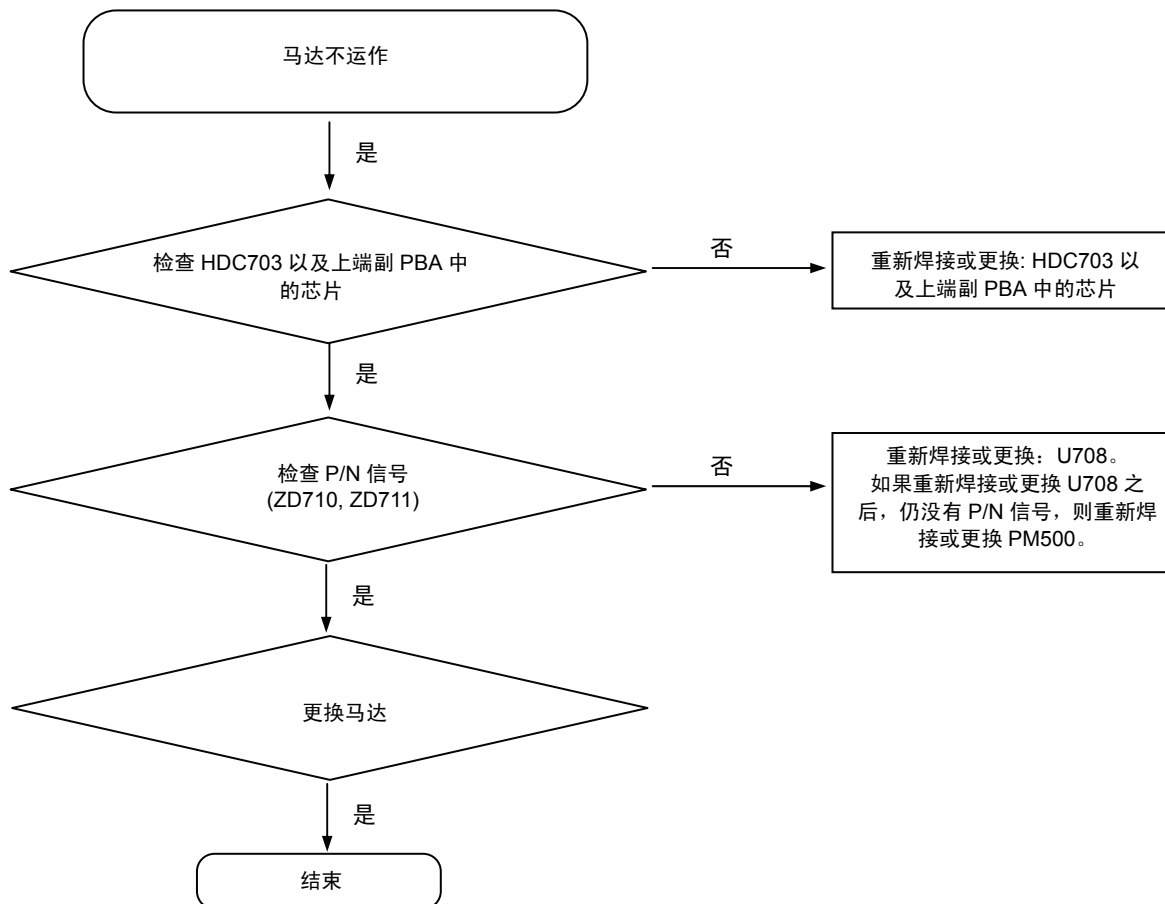

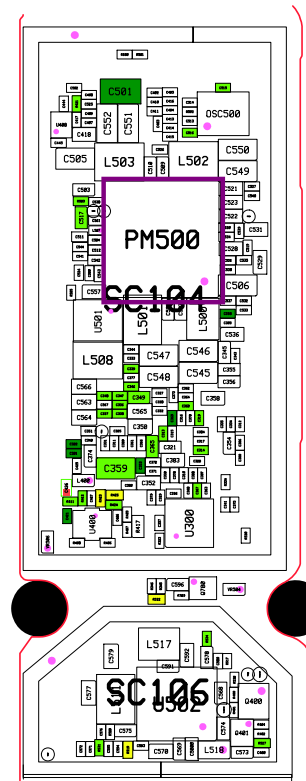



8-3-19. NFC

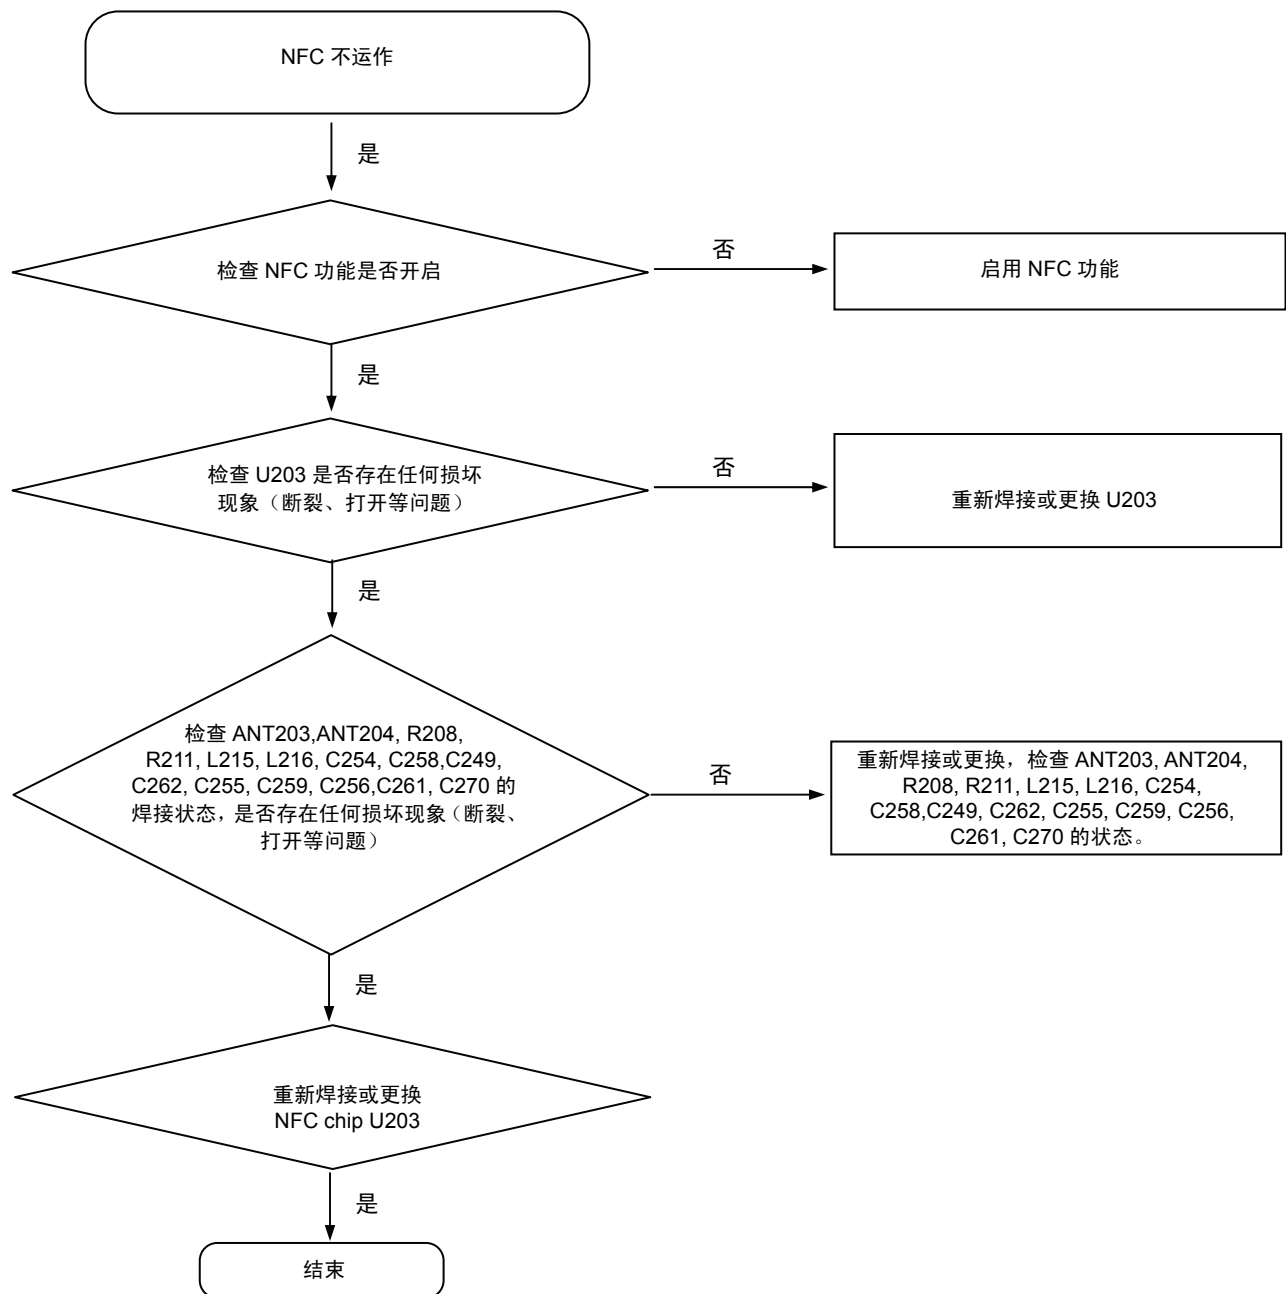


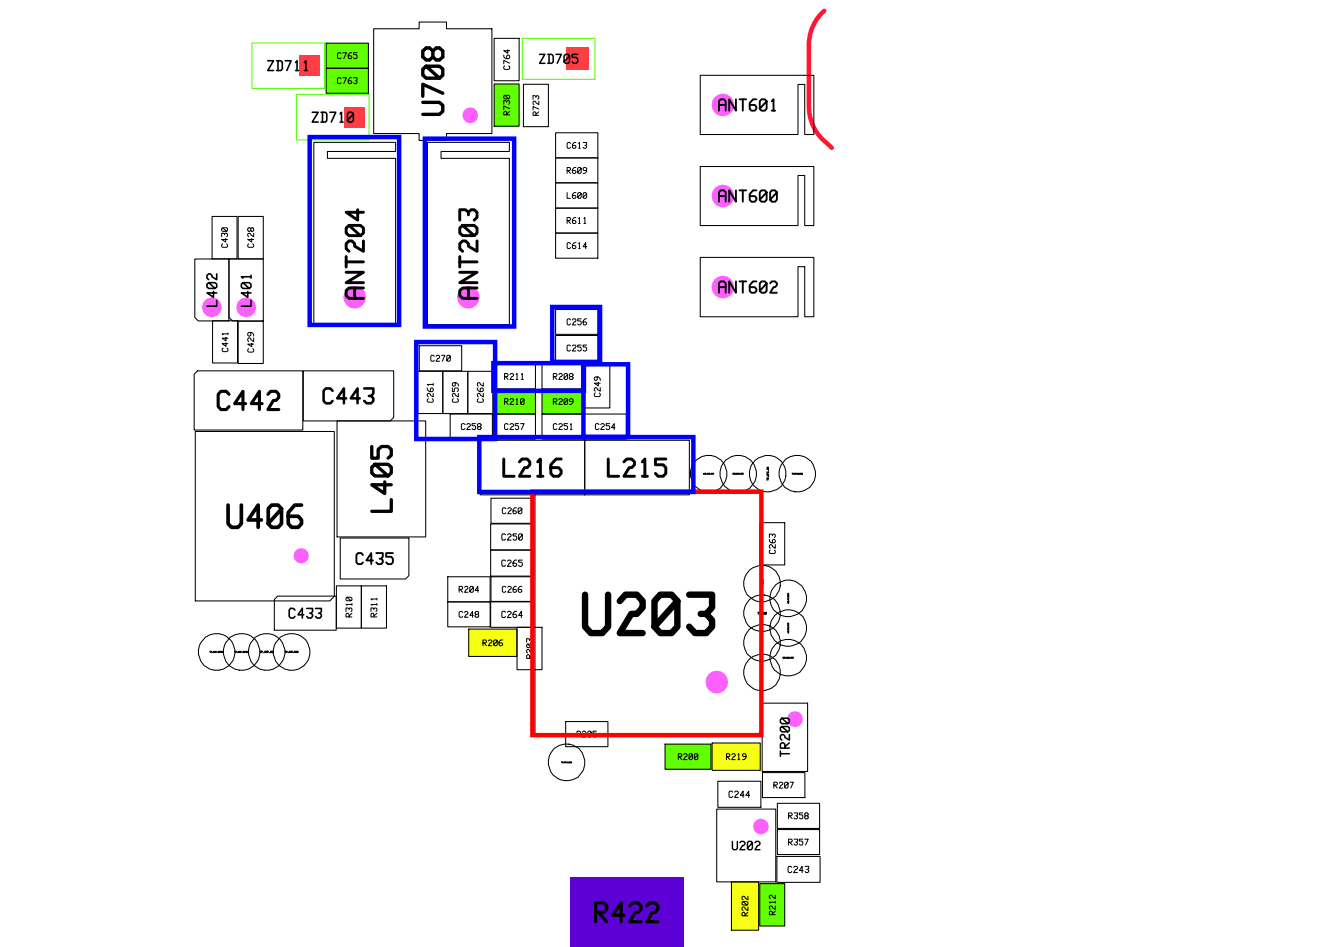


8-3-20. GSM 850,900,1800,1900 / LTE FDD BAND 1,3,7,8 / LTE TDD BAND 38,39,40,41 / TD-SCDMA B34/B39 / CDMA BC0 RX


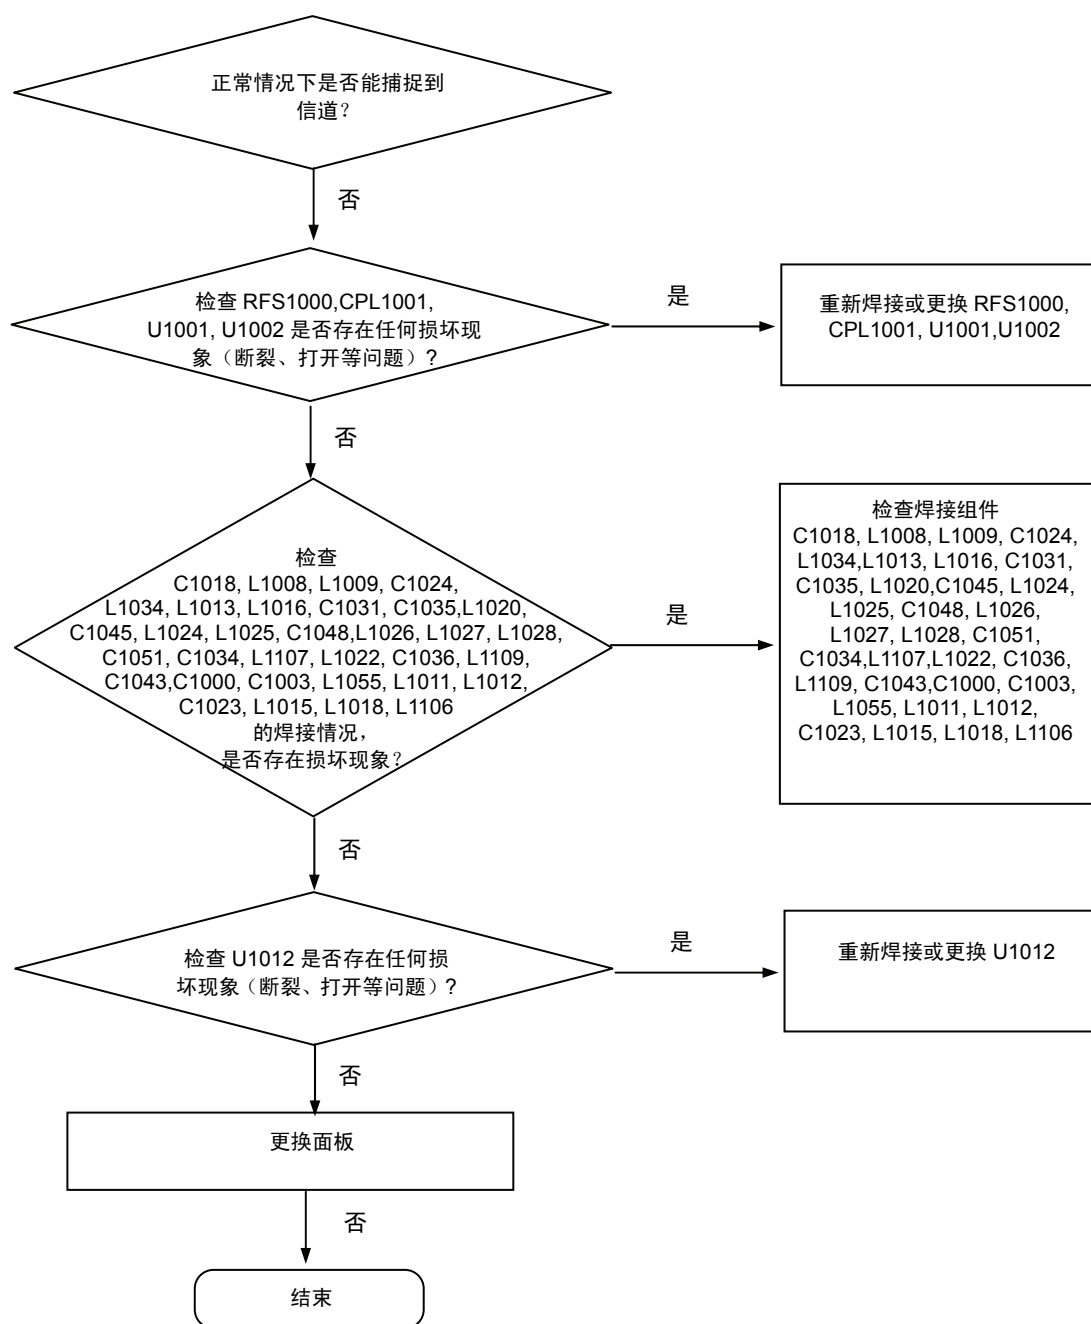


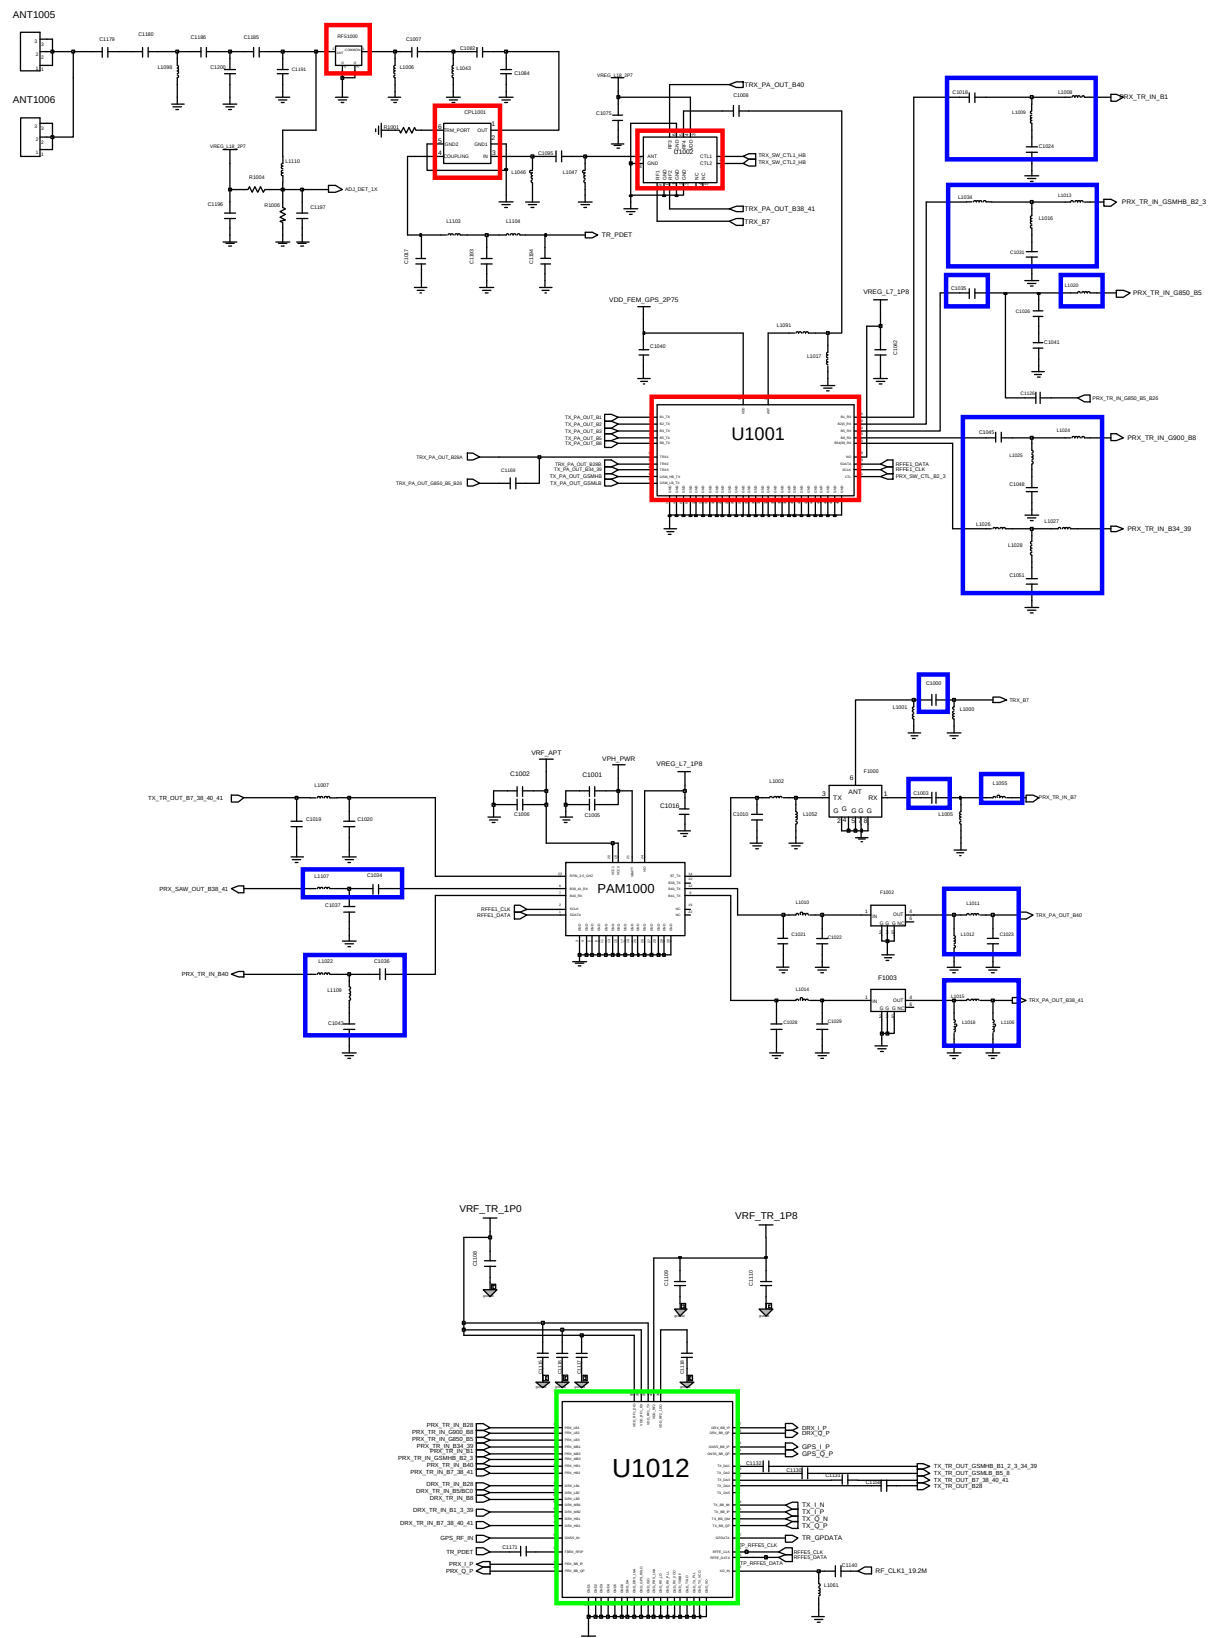


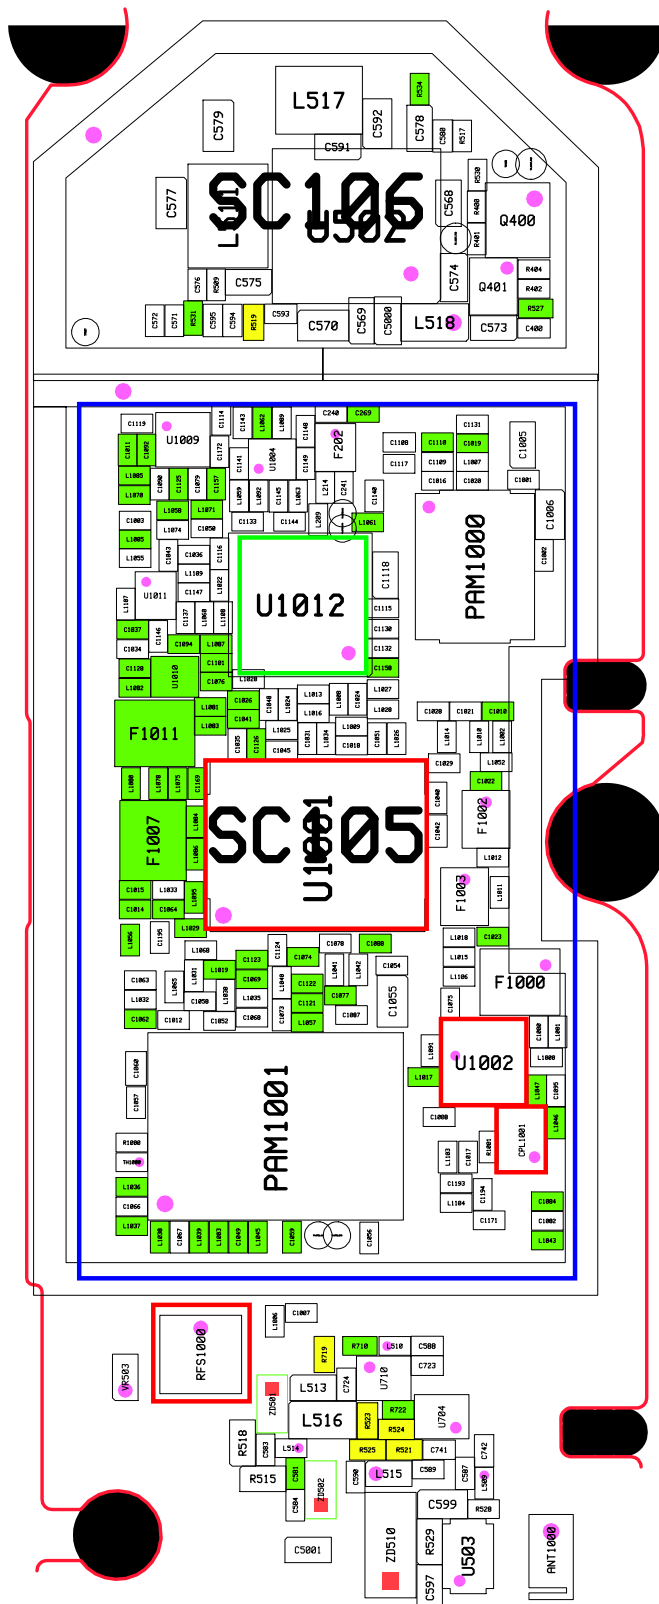



8-3-21. DIVERSITY(LTE1/3/7/8/28/38/39/40/41) RX

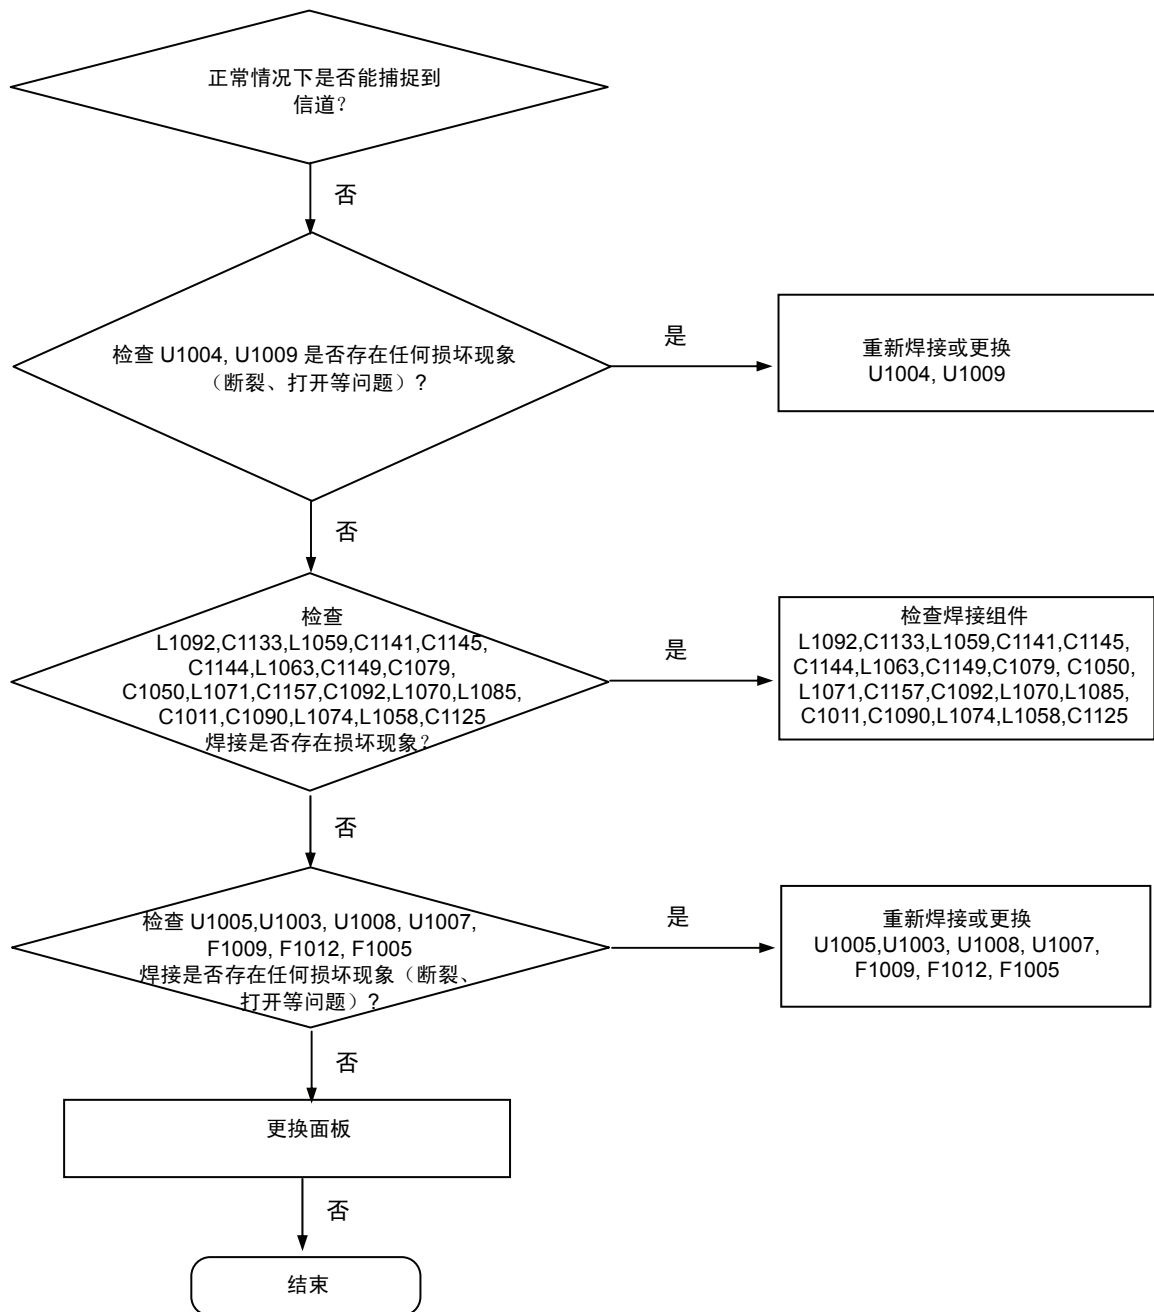

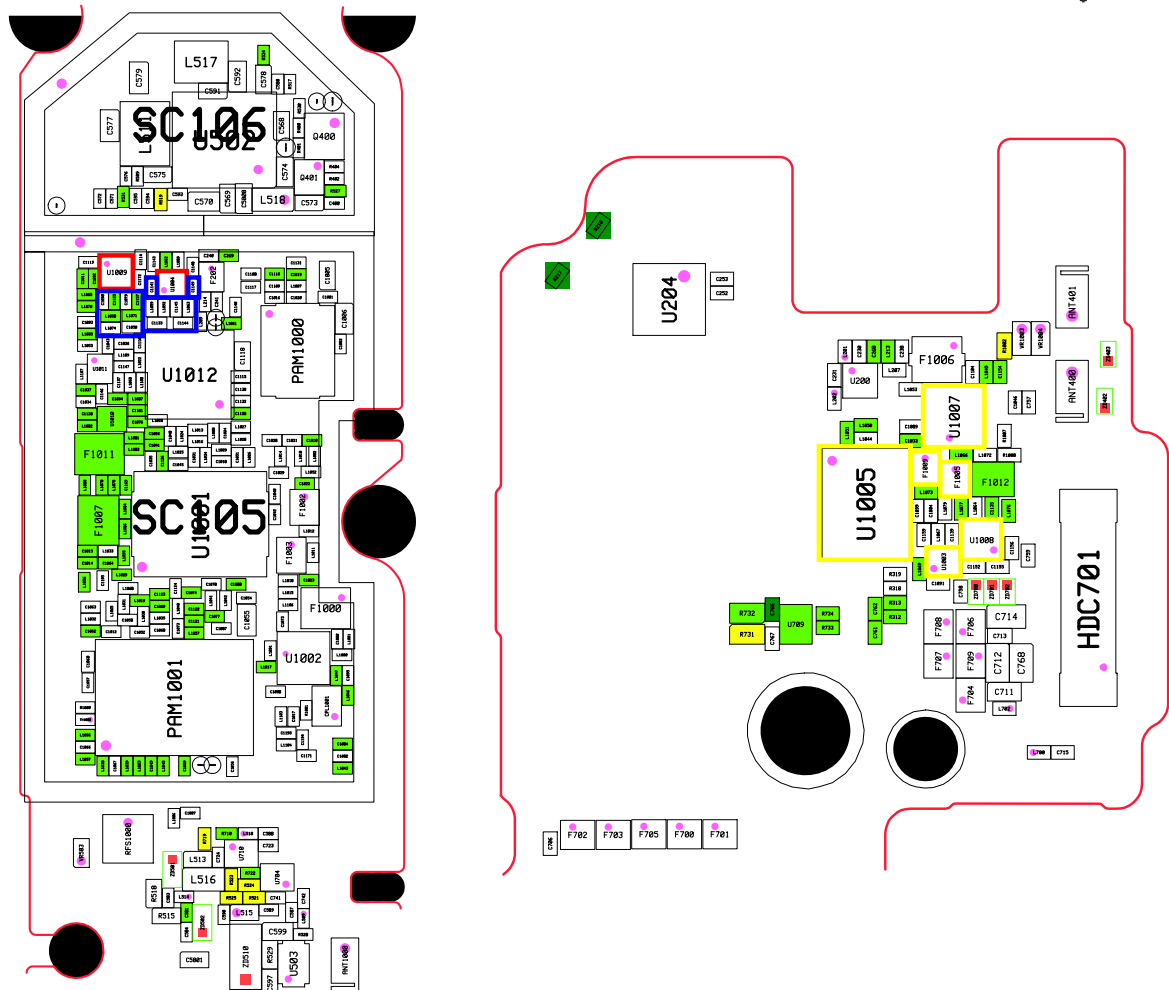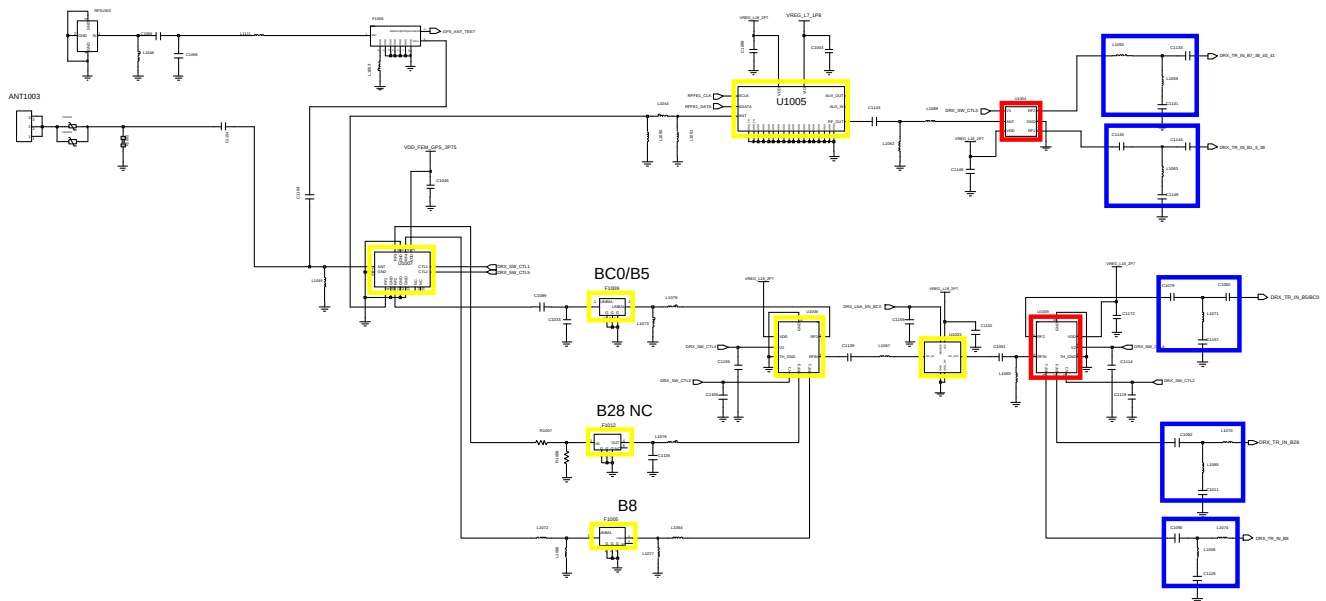


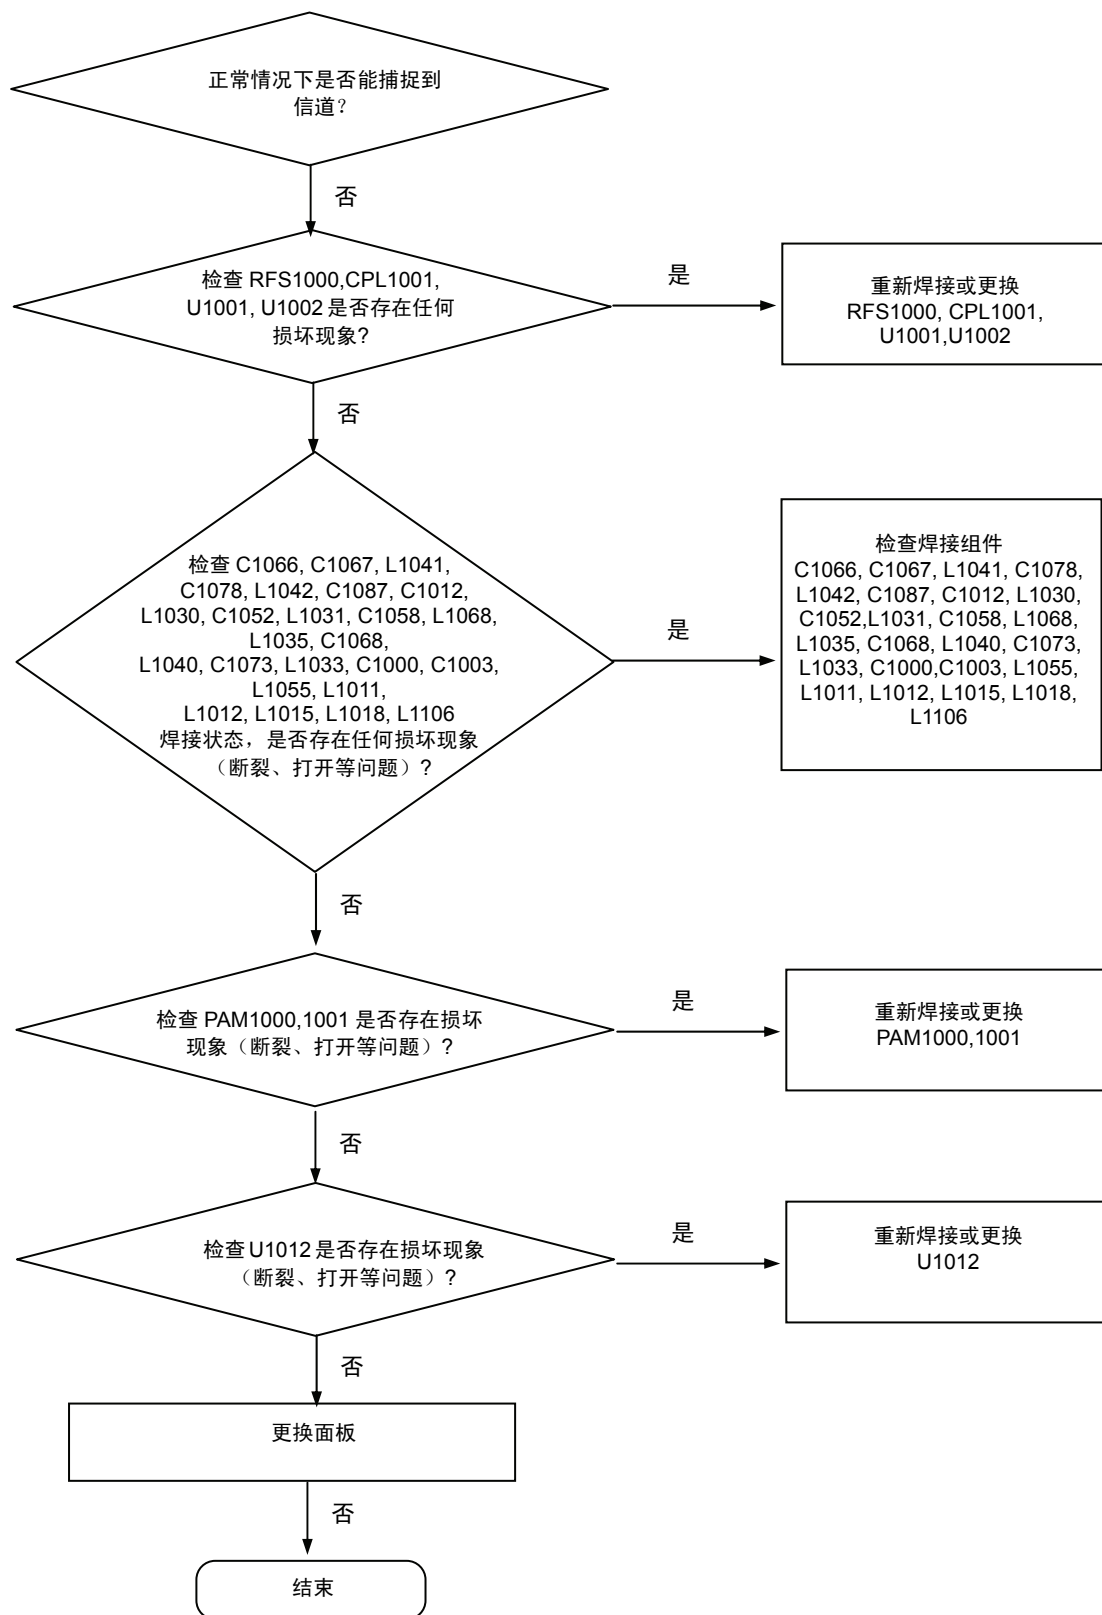
8-3-22. GSM 850,900,1800,1900 / LTE FDD BAND 1,3,7,8 / LTE TDD BAND 38,39,40,41 / TD-SCDMA B34/B39 / CDMA BC0 TX

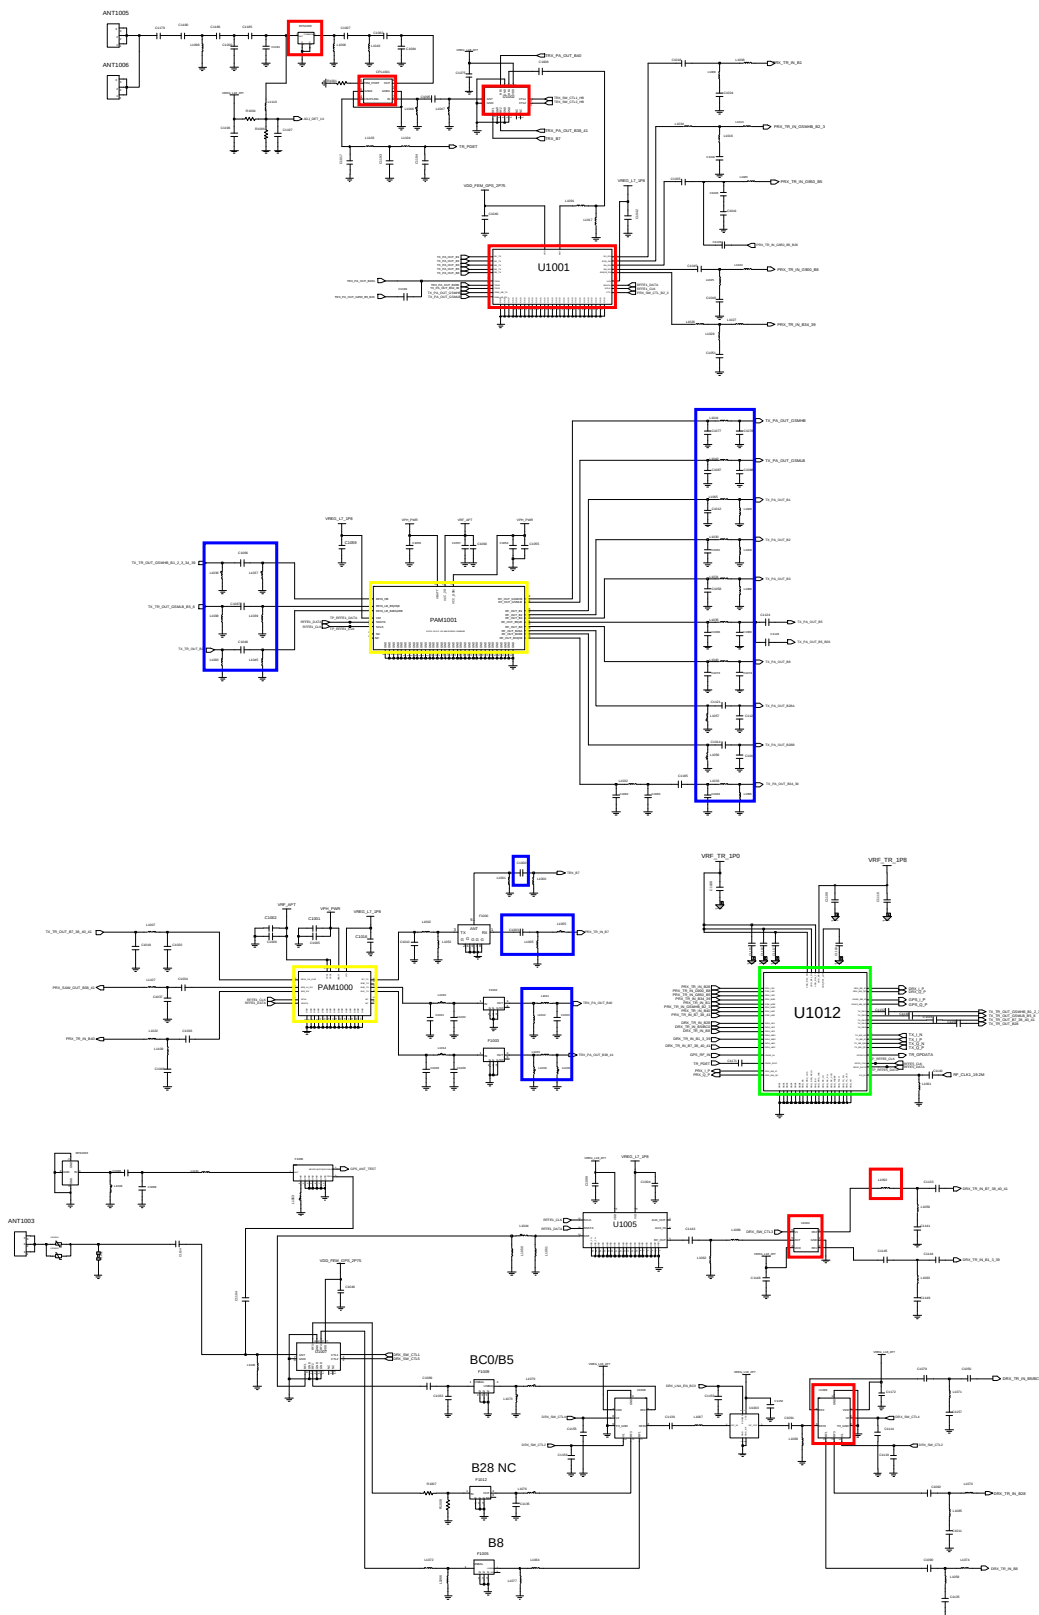


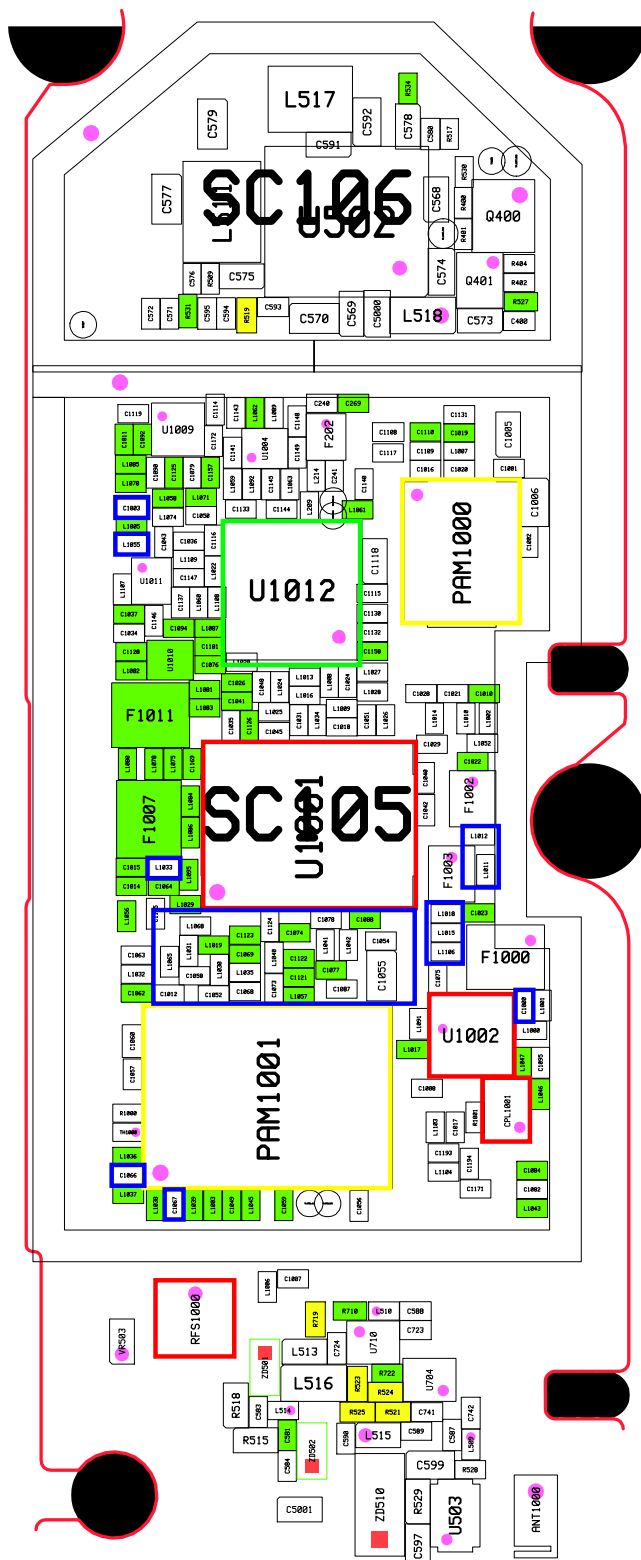

8-3-23. 指纹传感器

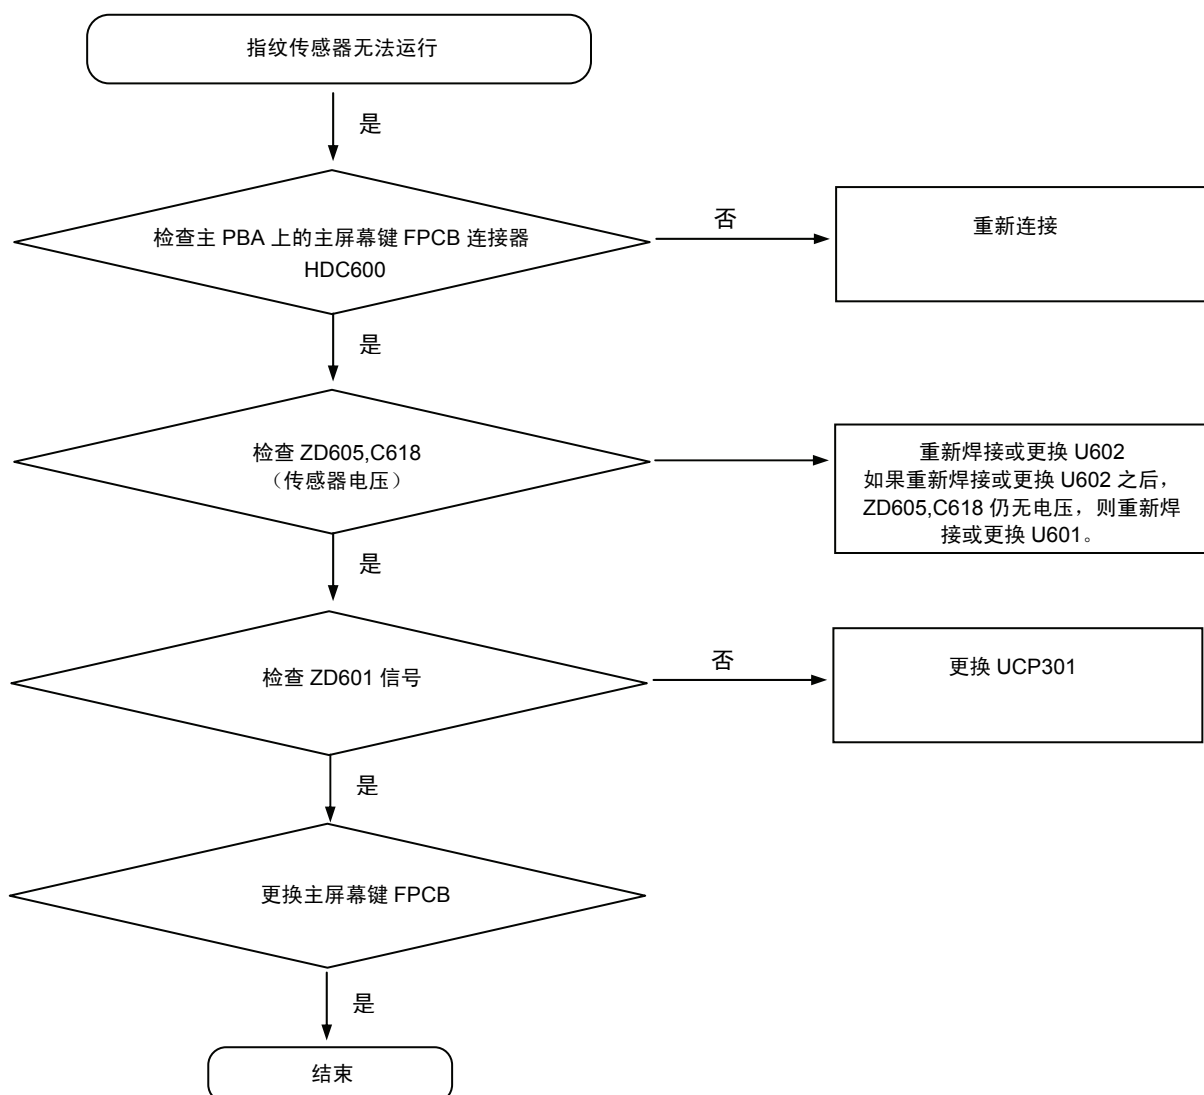

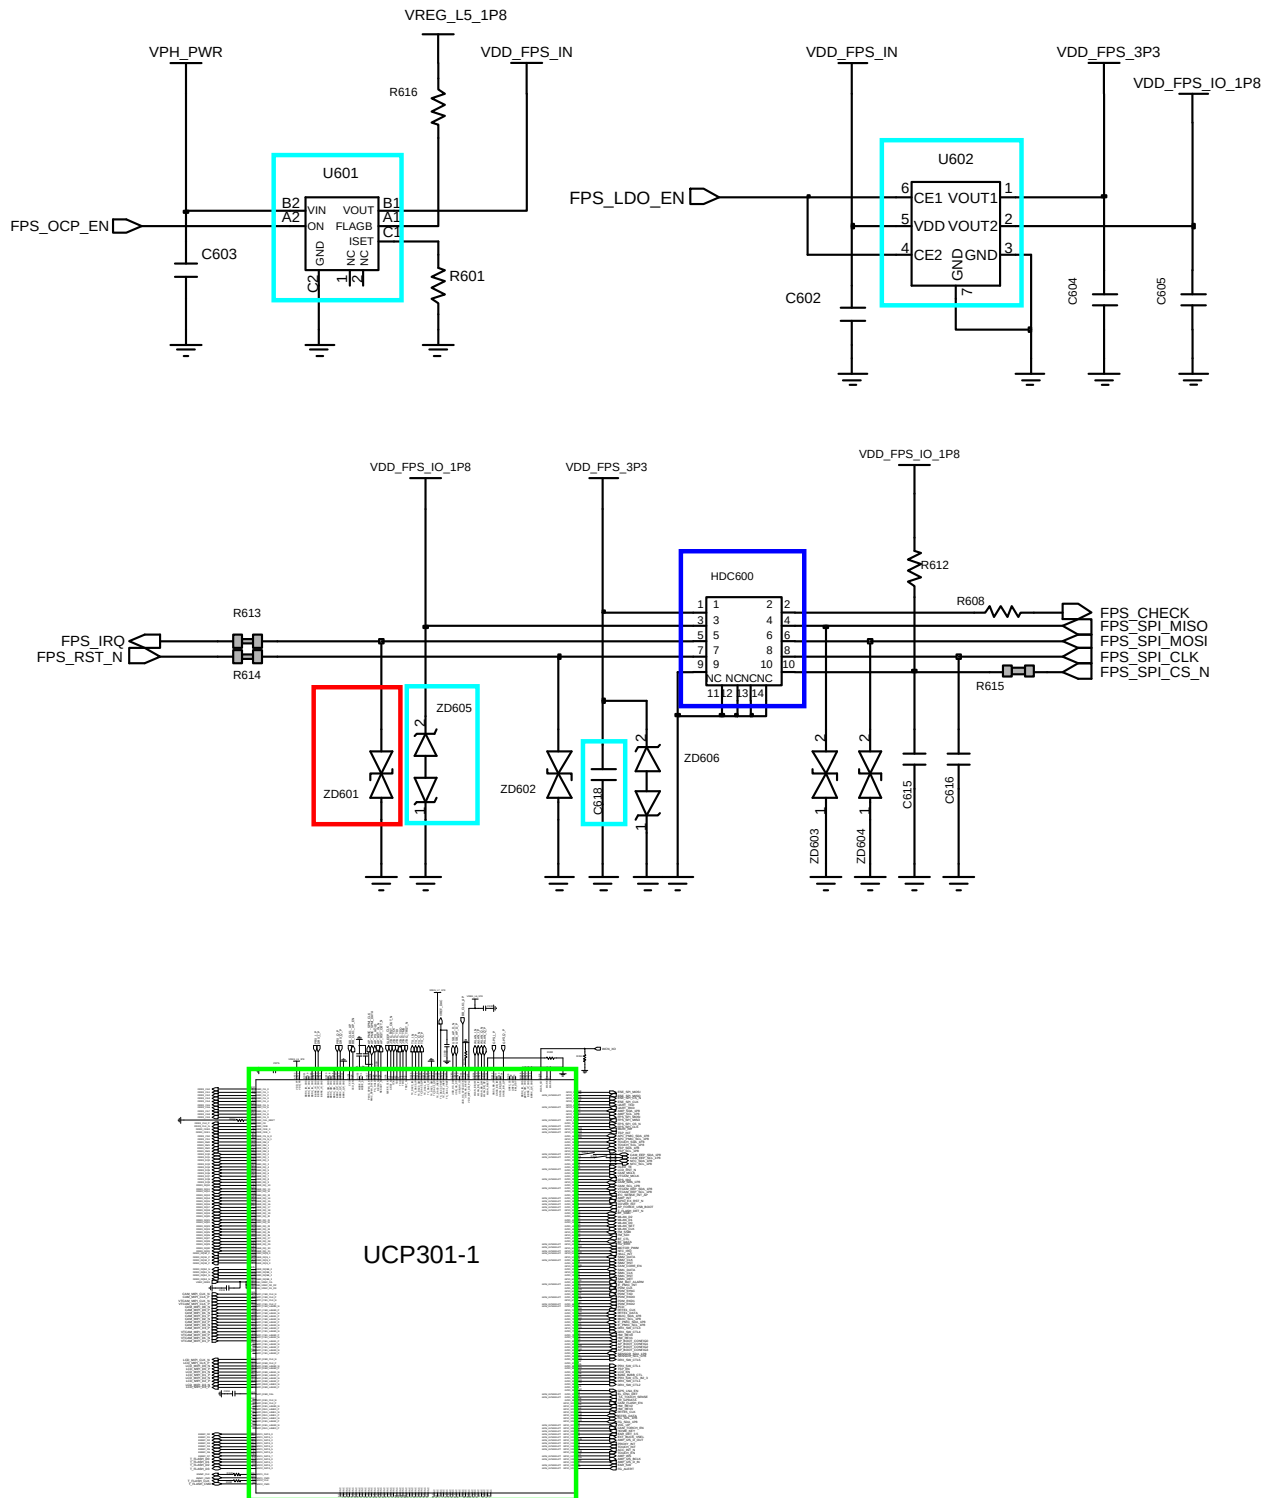

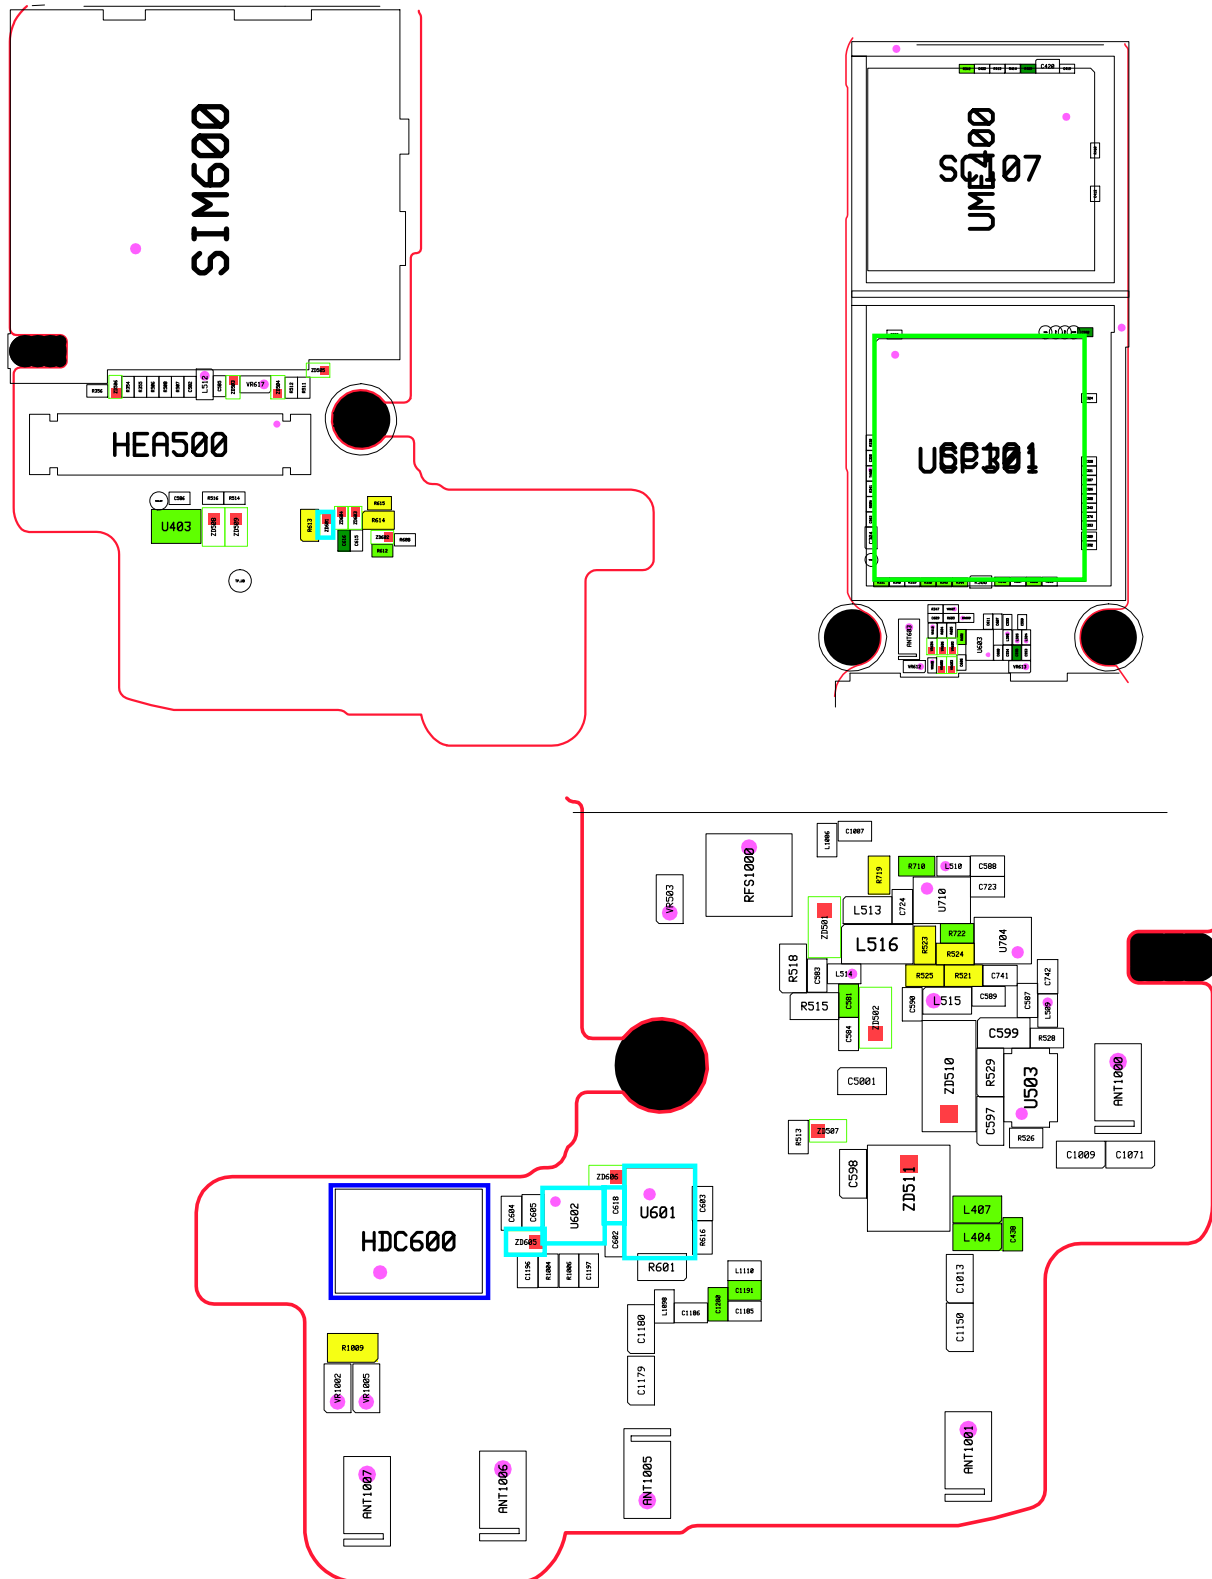

-故障处（顶部视图）

●：故障

	1	2	3	4	5	6	7	8	9	10	11	12	13	14
A														
B														
C	●													●
D	●								●	●	●	●	●	●
E	●	●	●	●	●	●	●	●	●	●	●	●	●	●
F	●					●	●							●
G	●					●	●							●
H	●					●	●							●
I	●					●	●							●
J	●					●	●							●
K	●					●	●							●
L	●					●	●							●
M	●					●	●							●
N	●					●	●							●
P	●					●	●							●
R	●					●	●							●
T	●					●	●							●
U	●					●	●							●
V	●					●	●							●
W	●					●	●							●
Y	●					●	●							●
AA						●	●							
AB						●	●							

UME00

[illegible]

UCP301

	<u>1</u>	<u>2</u>	<u>3</u>	<u>4</u>	<u>5</u>	<u>6</u>	<u>7</u>	<u>8</u>	<u>9</u>	<u>10</u>	<u>11</u>	<u>12</u>	<u>13</u>	<u>14</u>
<u>A</u>	—	—	—	—	—	—	—	—	—	—	—	—	—	—
<u>B</u>	—	—	—	—	—	—	—	—	—	—	—	—	—	—
<u>C</u>	—	—	—	—	—	—	—	—	—	●	—	—	—	—
<u>D</u>	—	—	—	—	—	—	—	●	●	—	—	—	—	—
<u>E</u>	—	—	—	—	—	●	—	—	—	—	—	—	—	—
<u>F</u>	—	—	—	●	—	●	—	—	—	—	—	—	—	—
<u>G</u>	—	—	—	—	—	—	—	—	—	—	—	—	—	—
<u>H</u>	●	—	—	●	—	—	—	—	●	—	—	—	—	●
<u>J</u>	—	—	—	—	—	—	—	—	●	—	—	—	—	—
<u>K</u>	—	—	—	—	—	●	●	—	—	—	—	●	—	—
<u>L</u>	—	—	—	—	●	●	●	—	●	—	—	—	—	—
<u>M</u>	—	—	—	—	—	—	—	—	—	—	—	—	—	●
<u>N</u>	—	—	—	—	—	—	—	—	—	—	—	—	—	—
<u>P</u>	—	—	—	—	—	—	—	—	—	—	●	—	—	—

PM500