



5. PCB Diagram


5-1. Wiring Diagram

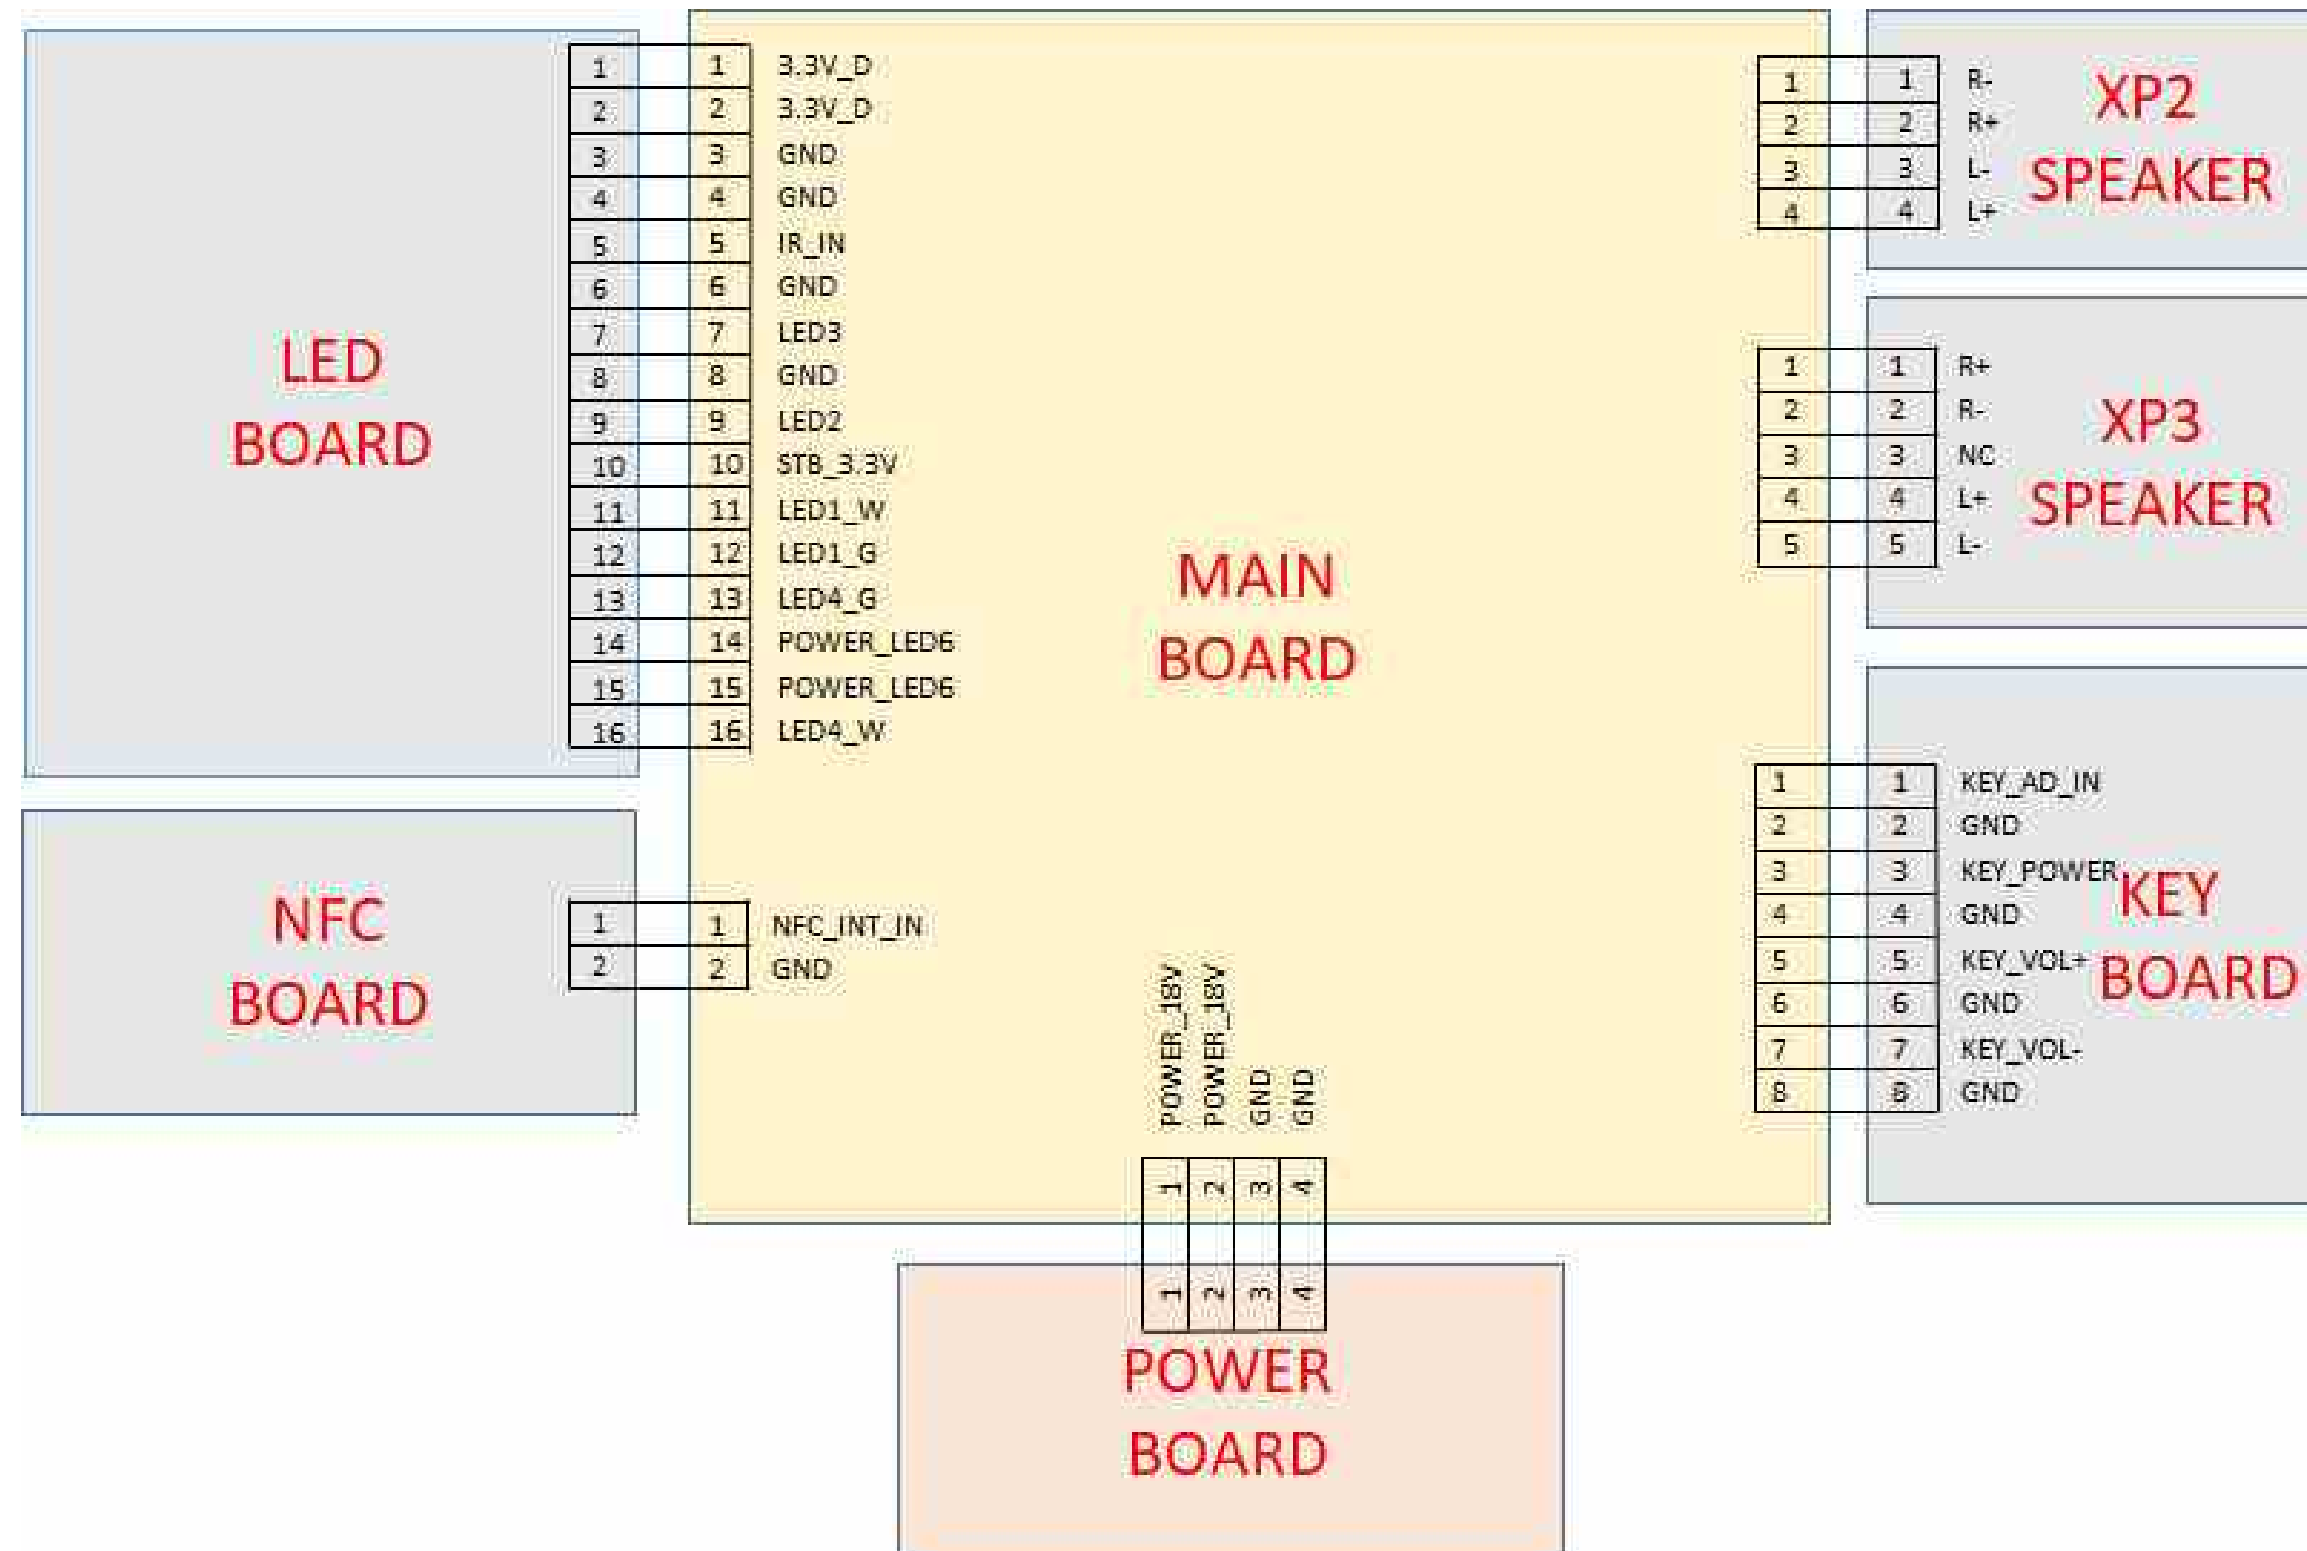

5-2. MAIN PCB Top

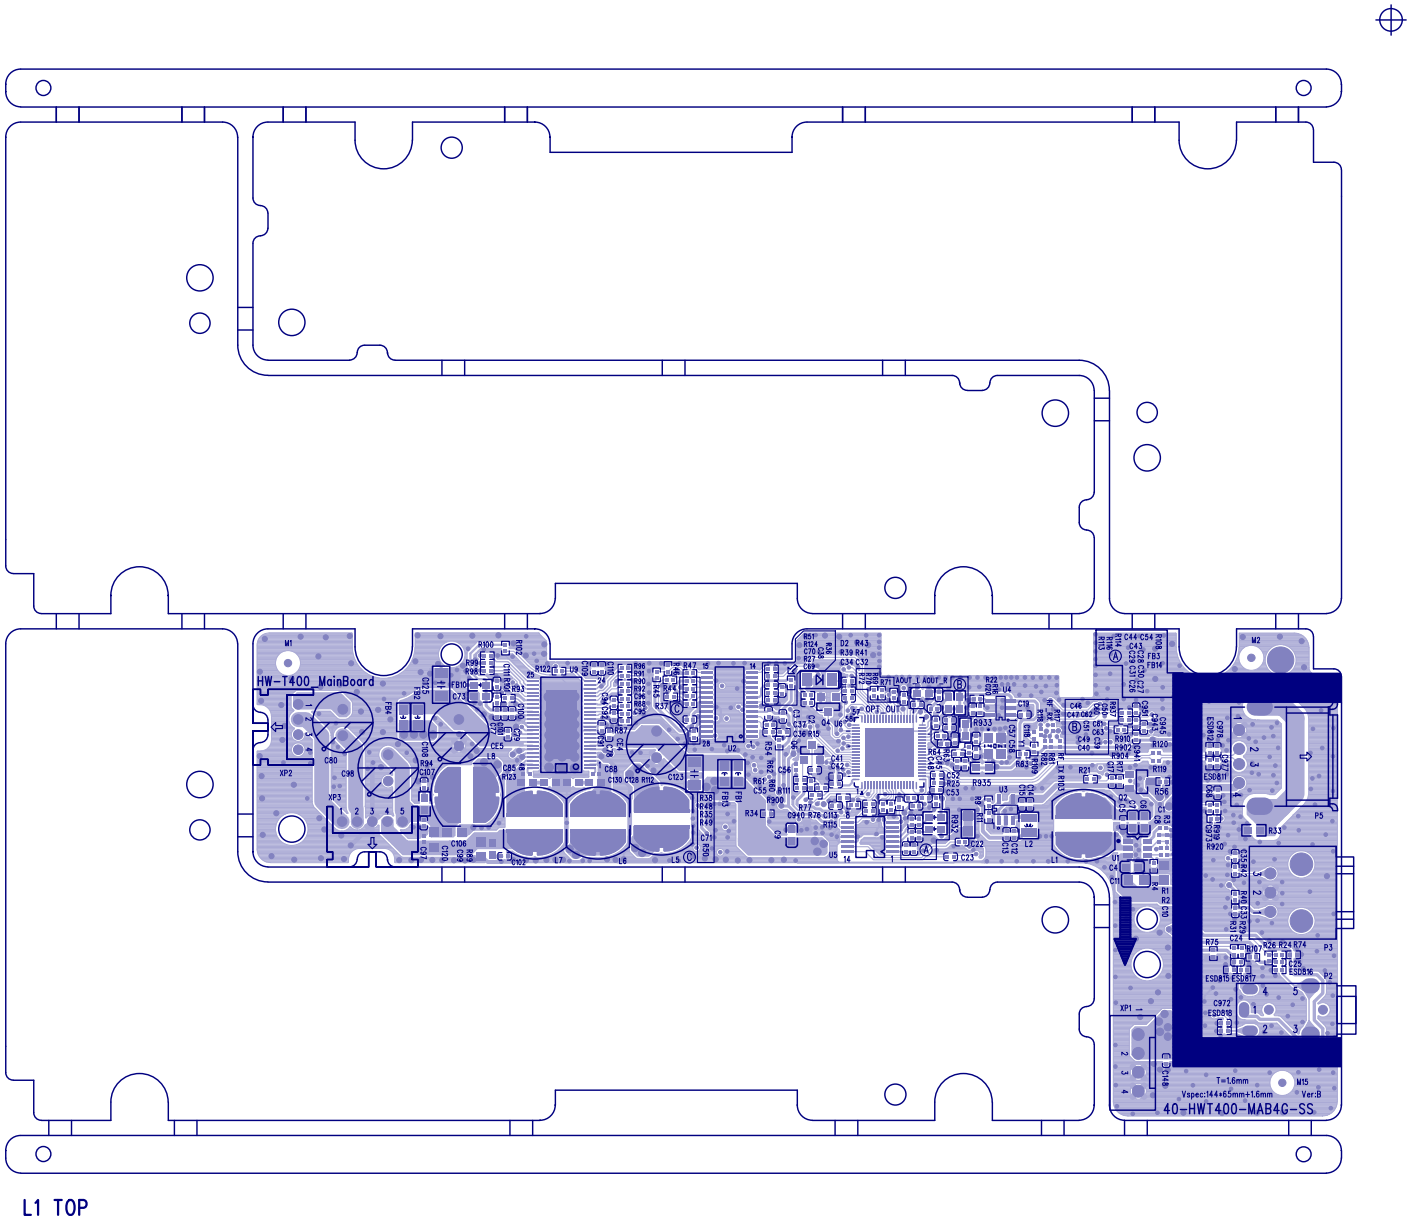

5-3. MAIN PCB Bottom

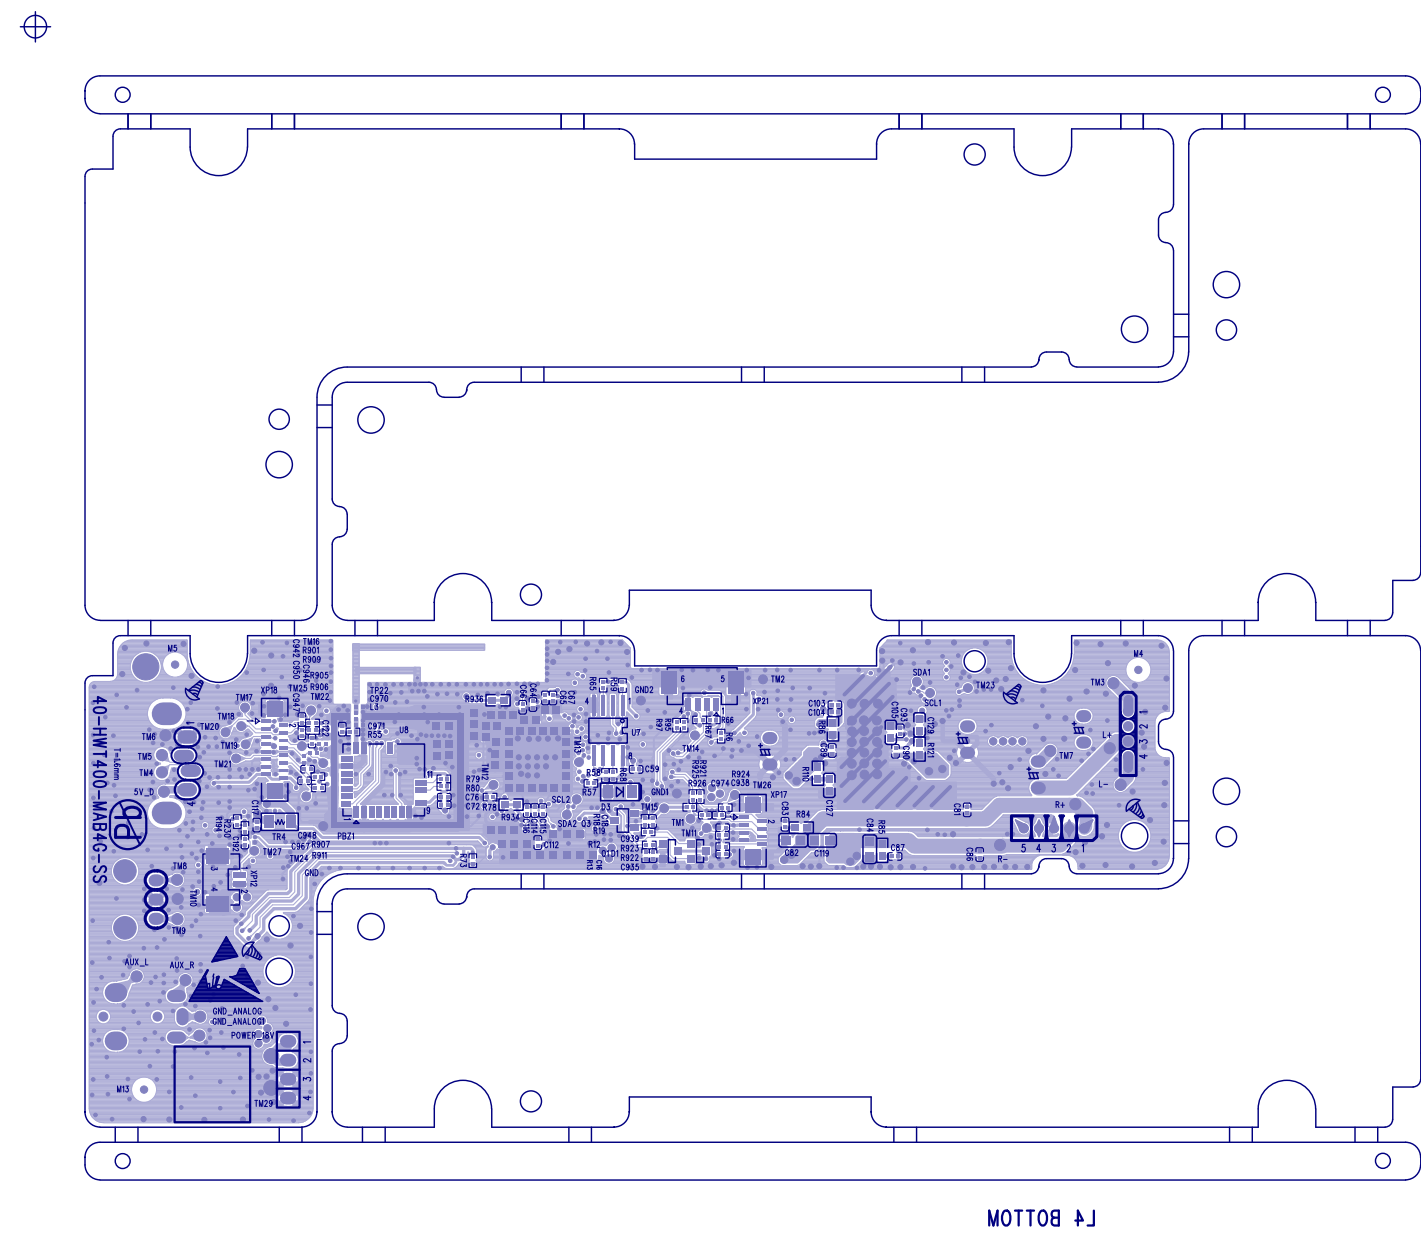

5-3-1. Pin Connection

Main Board sockets:

XP18 , to LED	
1	3.3V_D
2	3.3V_D
3	GND
4	GND
5	IR_IN
6	GND
7	LED3
8	GND
9	LED2
10	STB_3.3V
11	LED1_W
12	LED1_G
13	LED4_G
14	POWER_LED6
15	POWER_LED5
16	LED4_W

XP1,power socket	
1	POWER_18V
2	POWER_18V
3	GND
4	GND

XP17 to KEY	
1	KEY_AD_IN
2	GND
3	KEY_POWER
4	GND
5	KEY_VOL+
6	GND
7	KEY_VOL-
8	GND

XP2 to speaker	
1	R-
2	R+
3	L-
4	L+

XP3 speaker	
1	R+
2	R-
3	NC
4	L+
5	L-

XP21	
1	STB_3.3V
2	UART0_TX
3	UART0_RX
4	GND

KEY Board:

XP20 to Main Board	
1	KEY_AD_IN
2	GND
3	KEY_POWER
4	GND
5	KEY_VOL+
6	GND
7	KEY_VOL-
8	GND





LED Board:

XP19 , to MB	
1	3.3V_D
2	3.3V_D
3	GND
4	GND
5	IR_IN
6	GND
7	LED3
8	GND
9	LED2
10	STB_3.3V
11	LED1_W
12	LED1_G
13	LED4_G
14	POWER_LED6
15	POWER_LED5
16	LED4_W



XP12 To NFC	
1	NFC_INT_IN
2	GND

5-3-2. Test point wave form



TP1: main board 8107S-A Reset

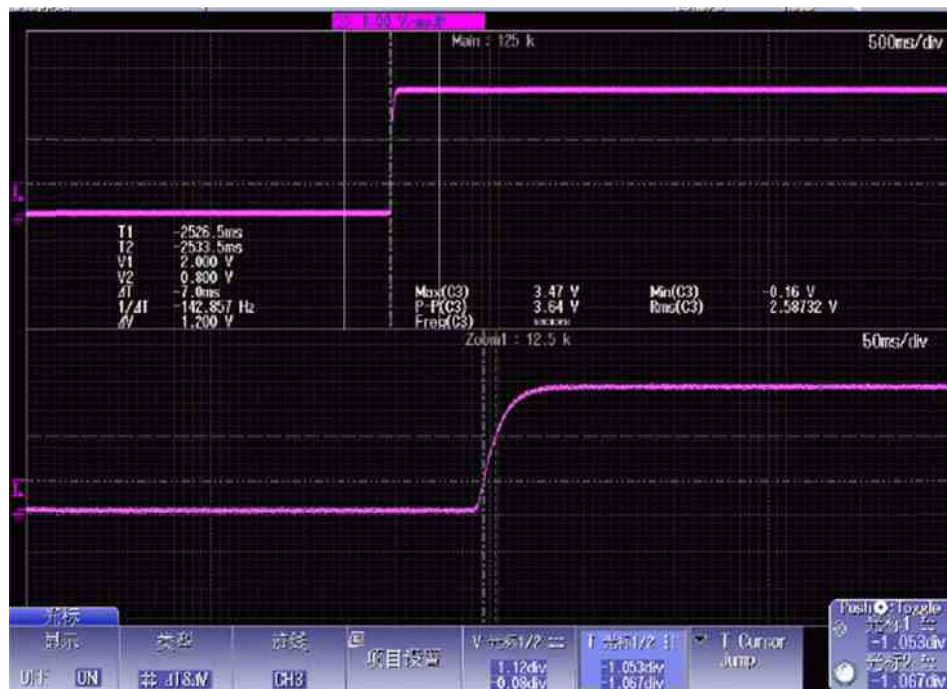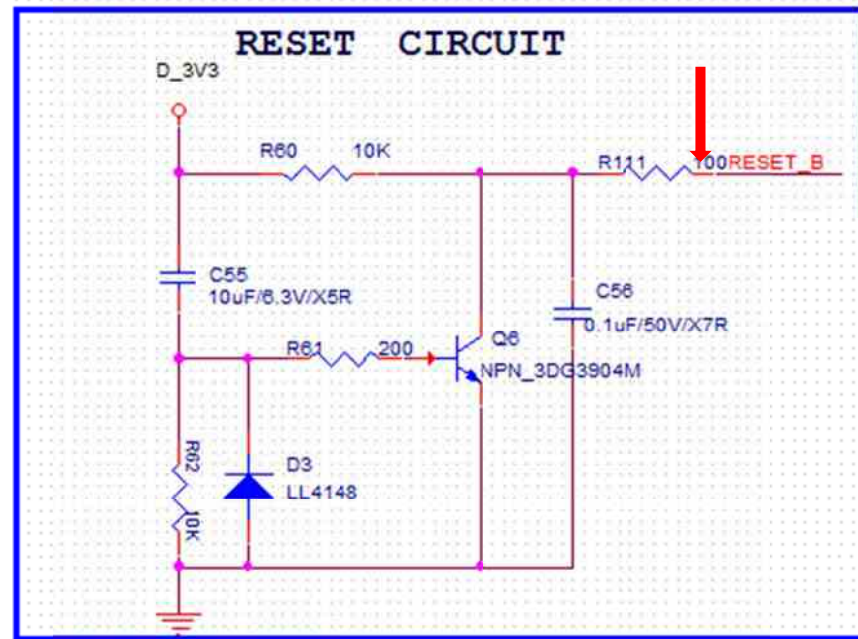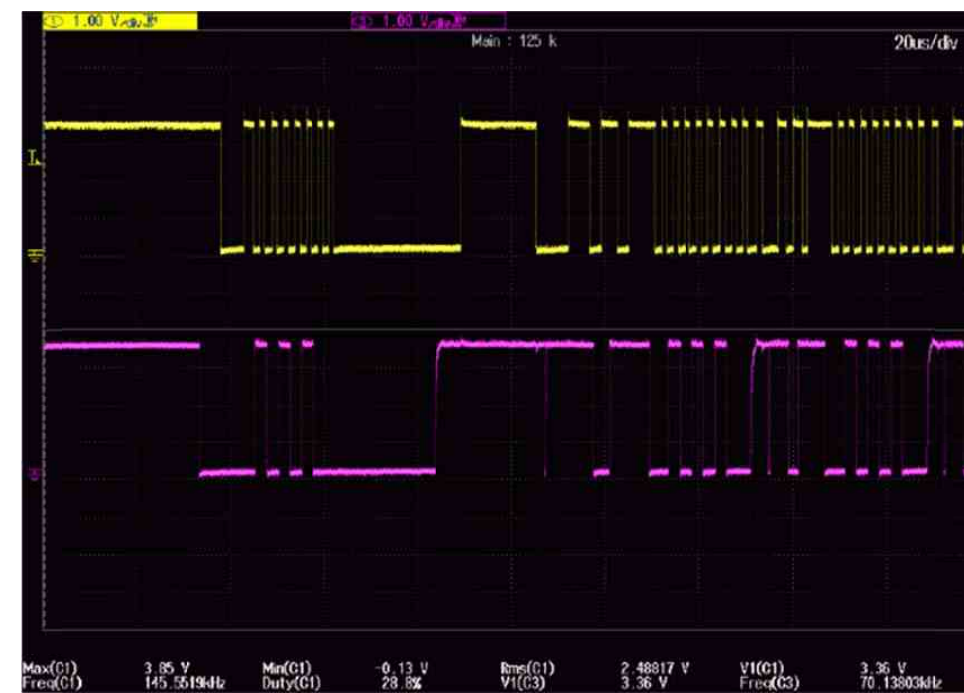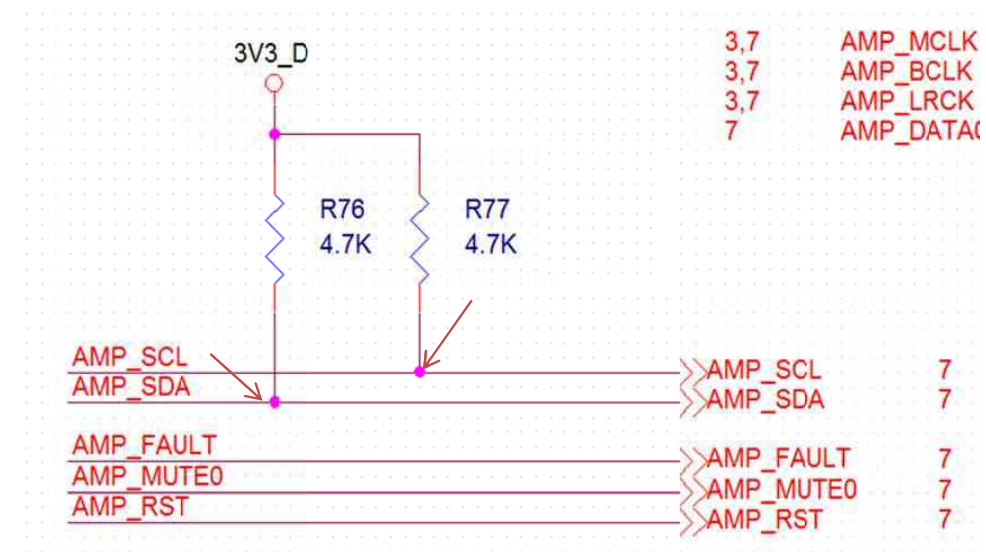TP2: main board I²C :


TP3: AMP module PWM+,PWM-:

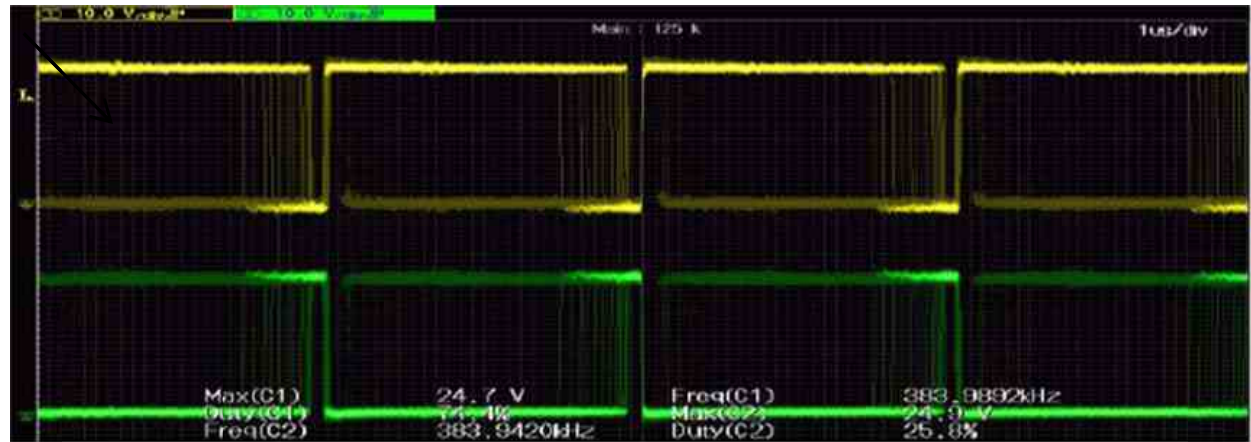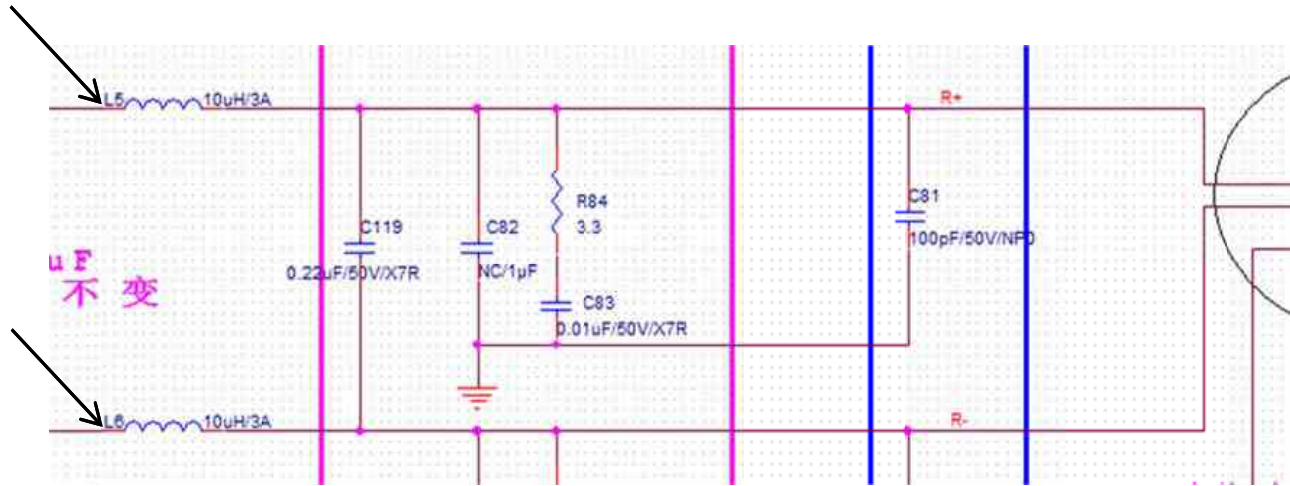


TP4: AMP module L+, L-:

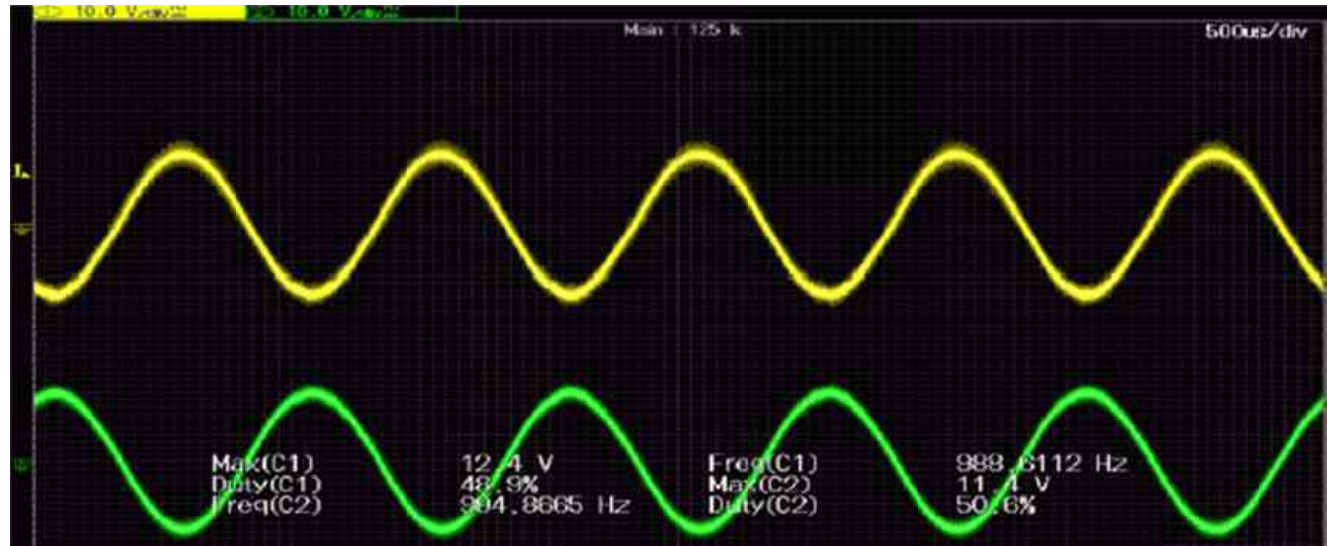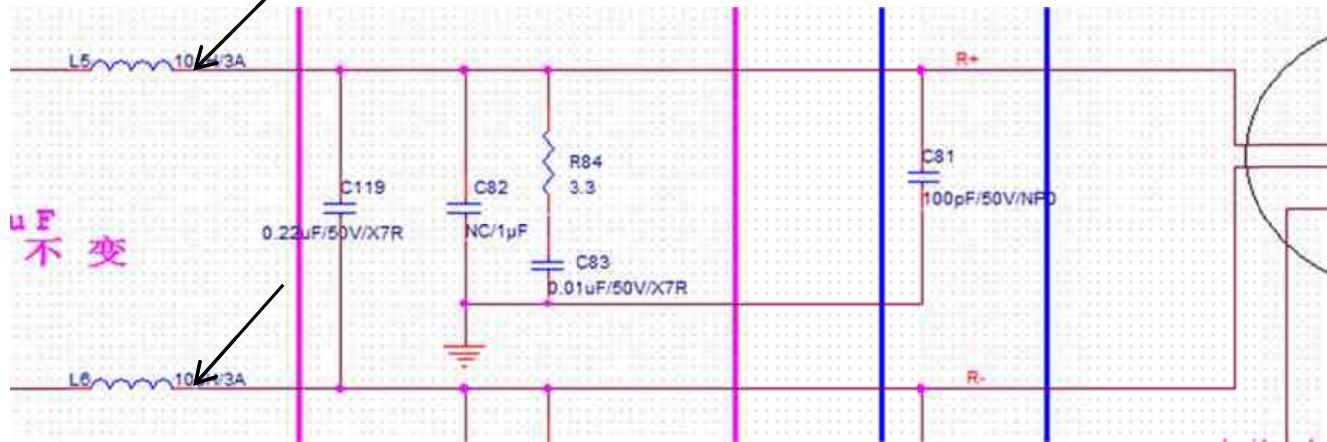


5-4. Power PCB Top

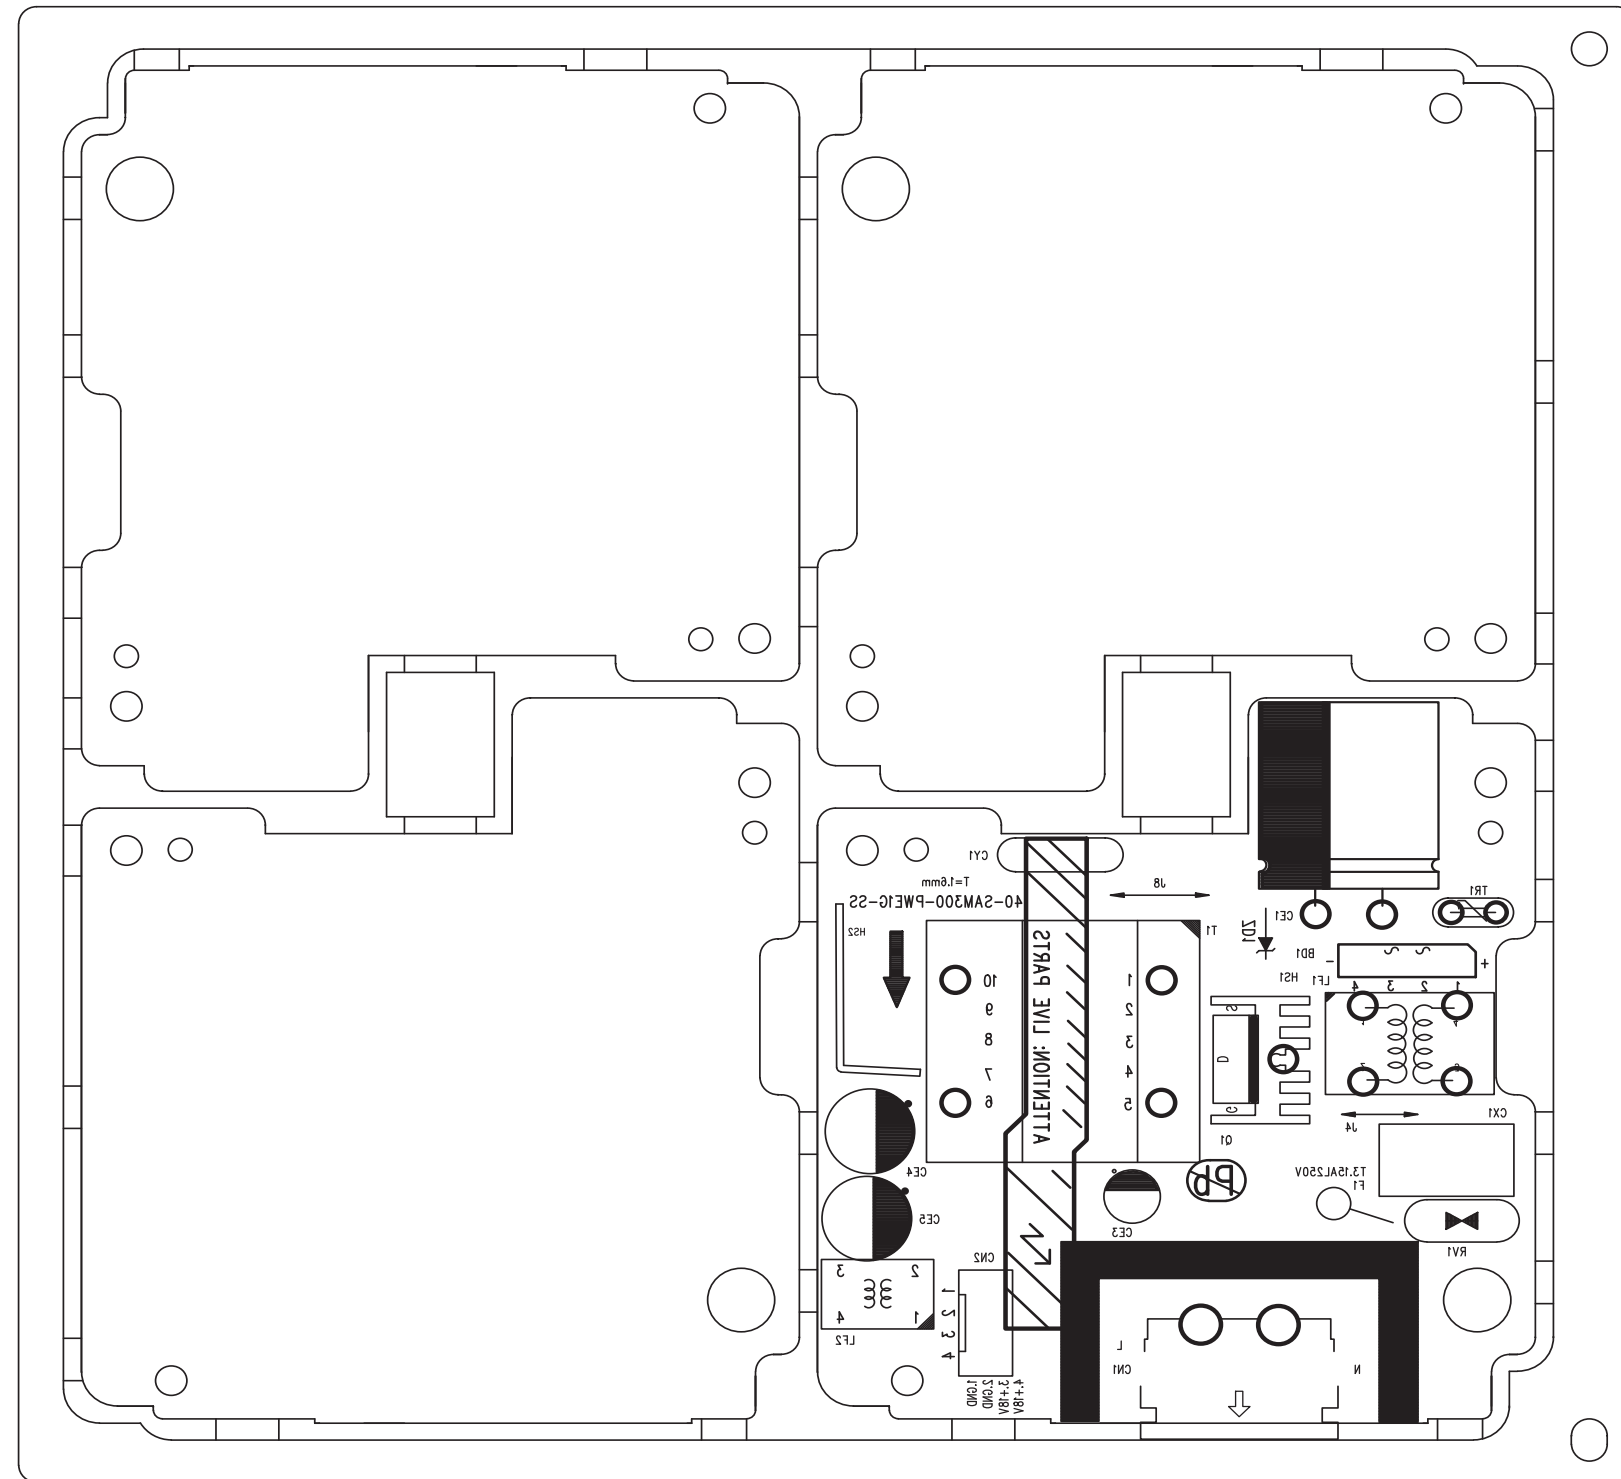


5-5. Power PCB Bottom

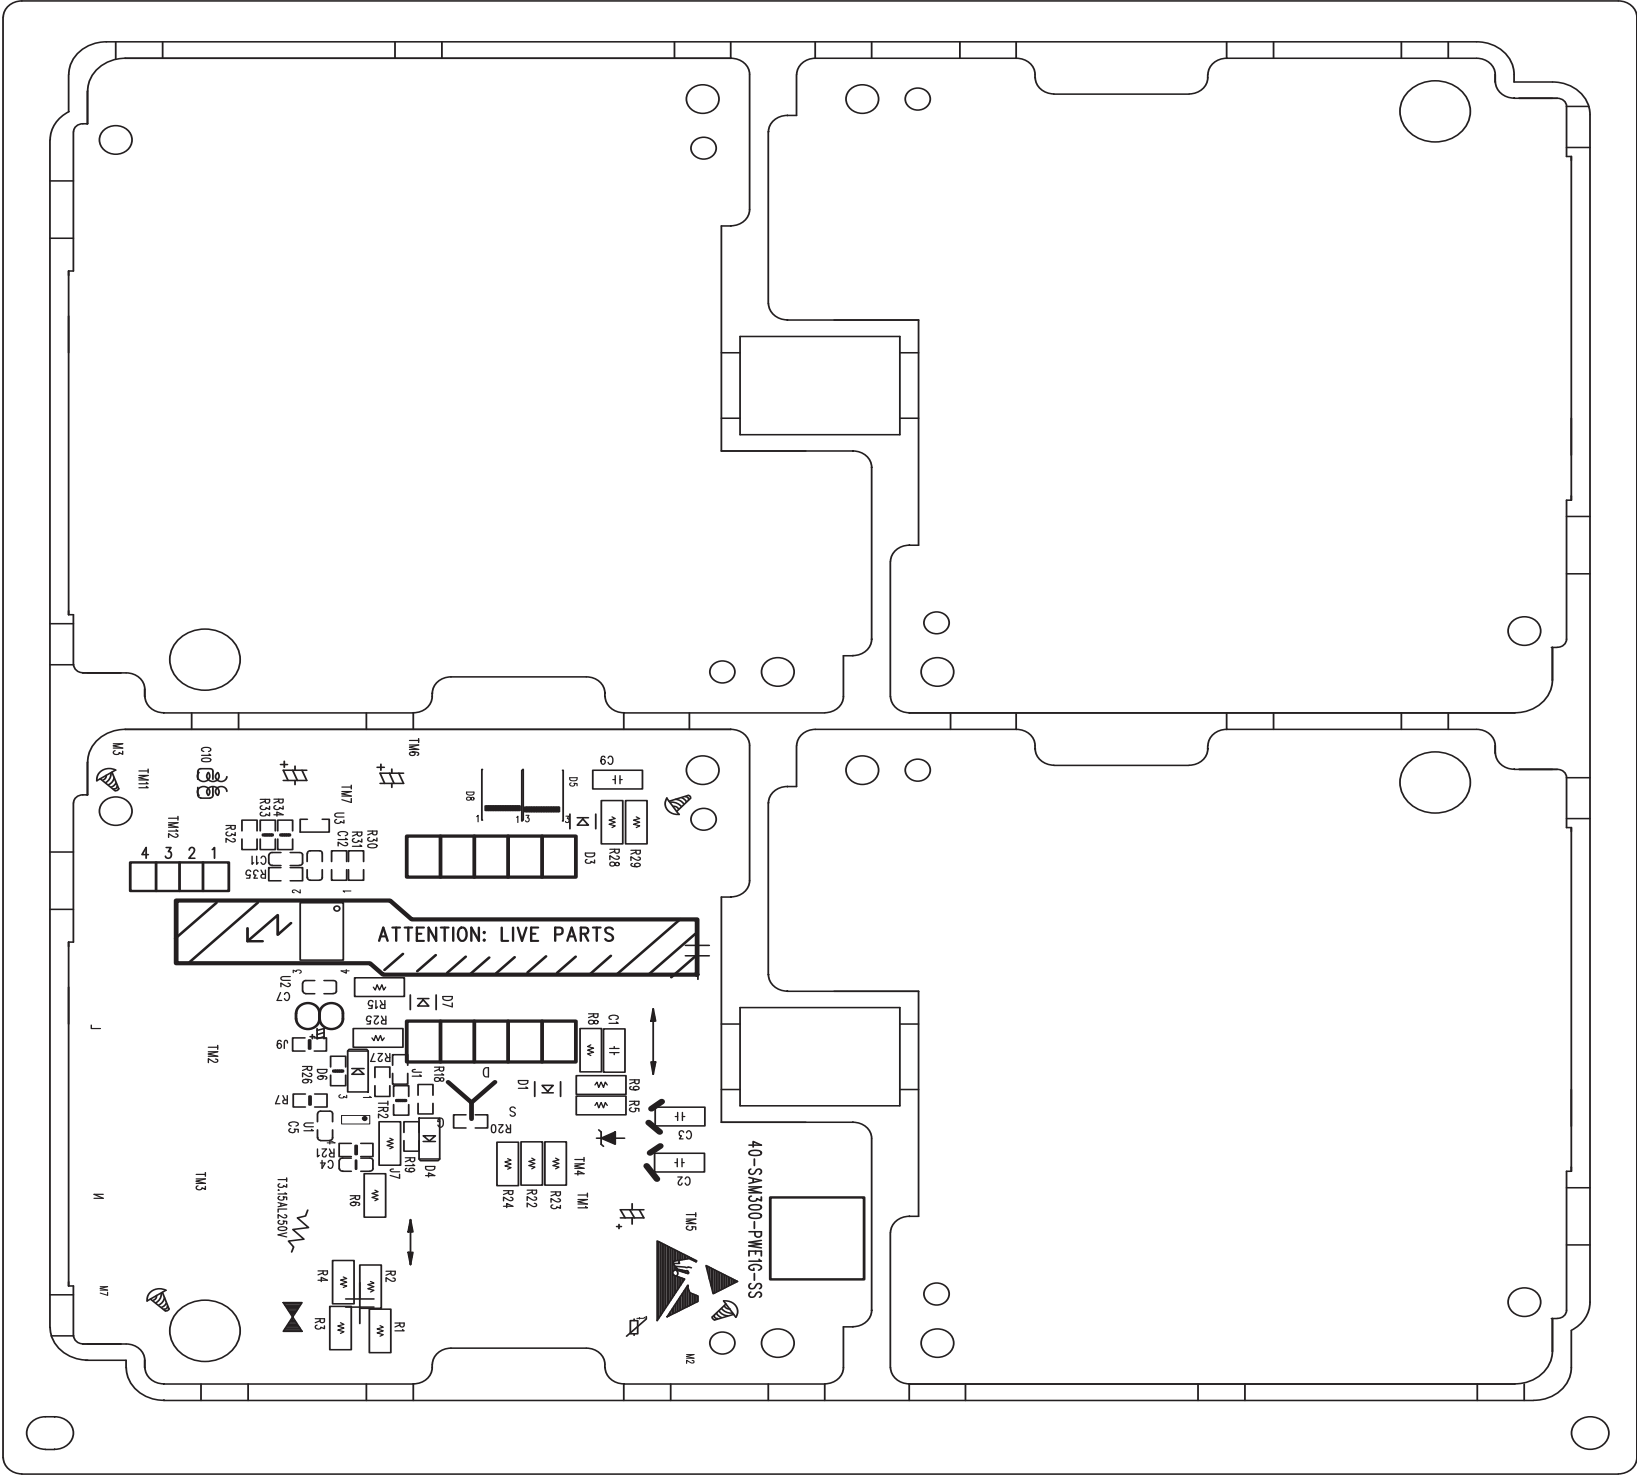

5-6. Lamp PCB + Key PCB Top

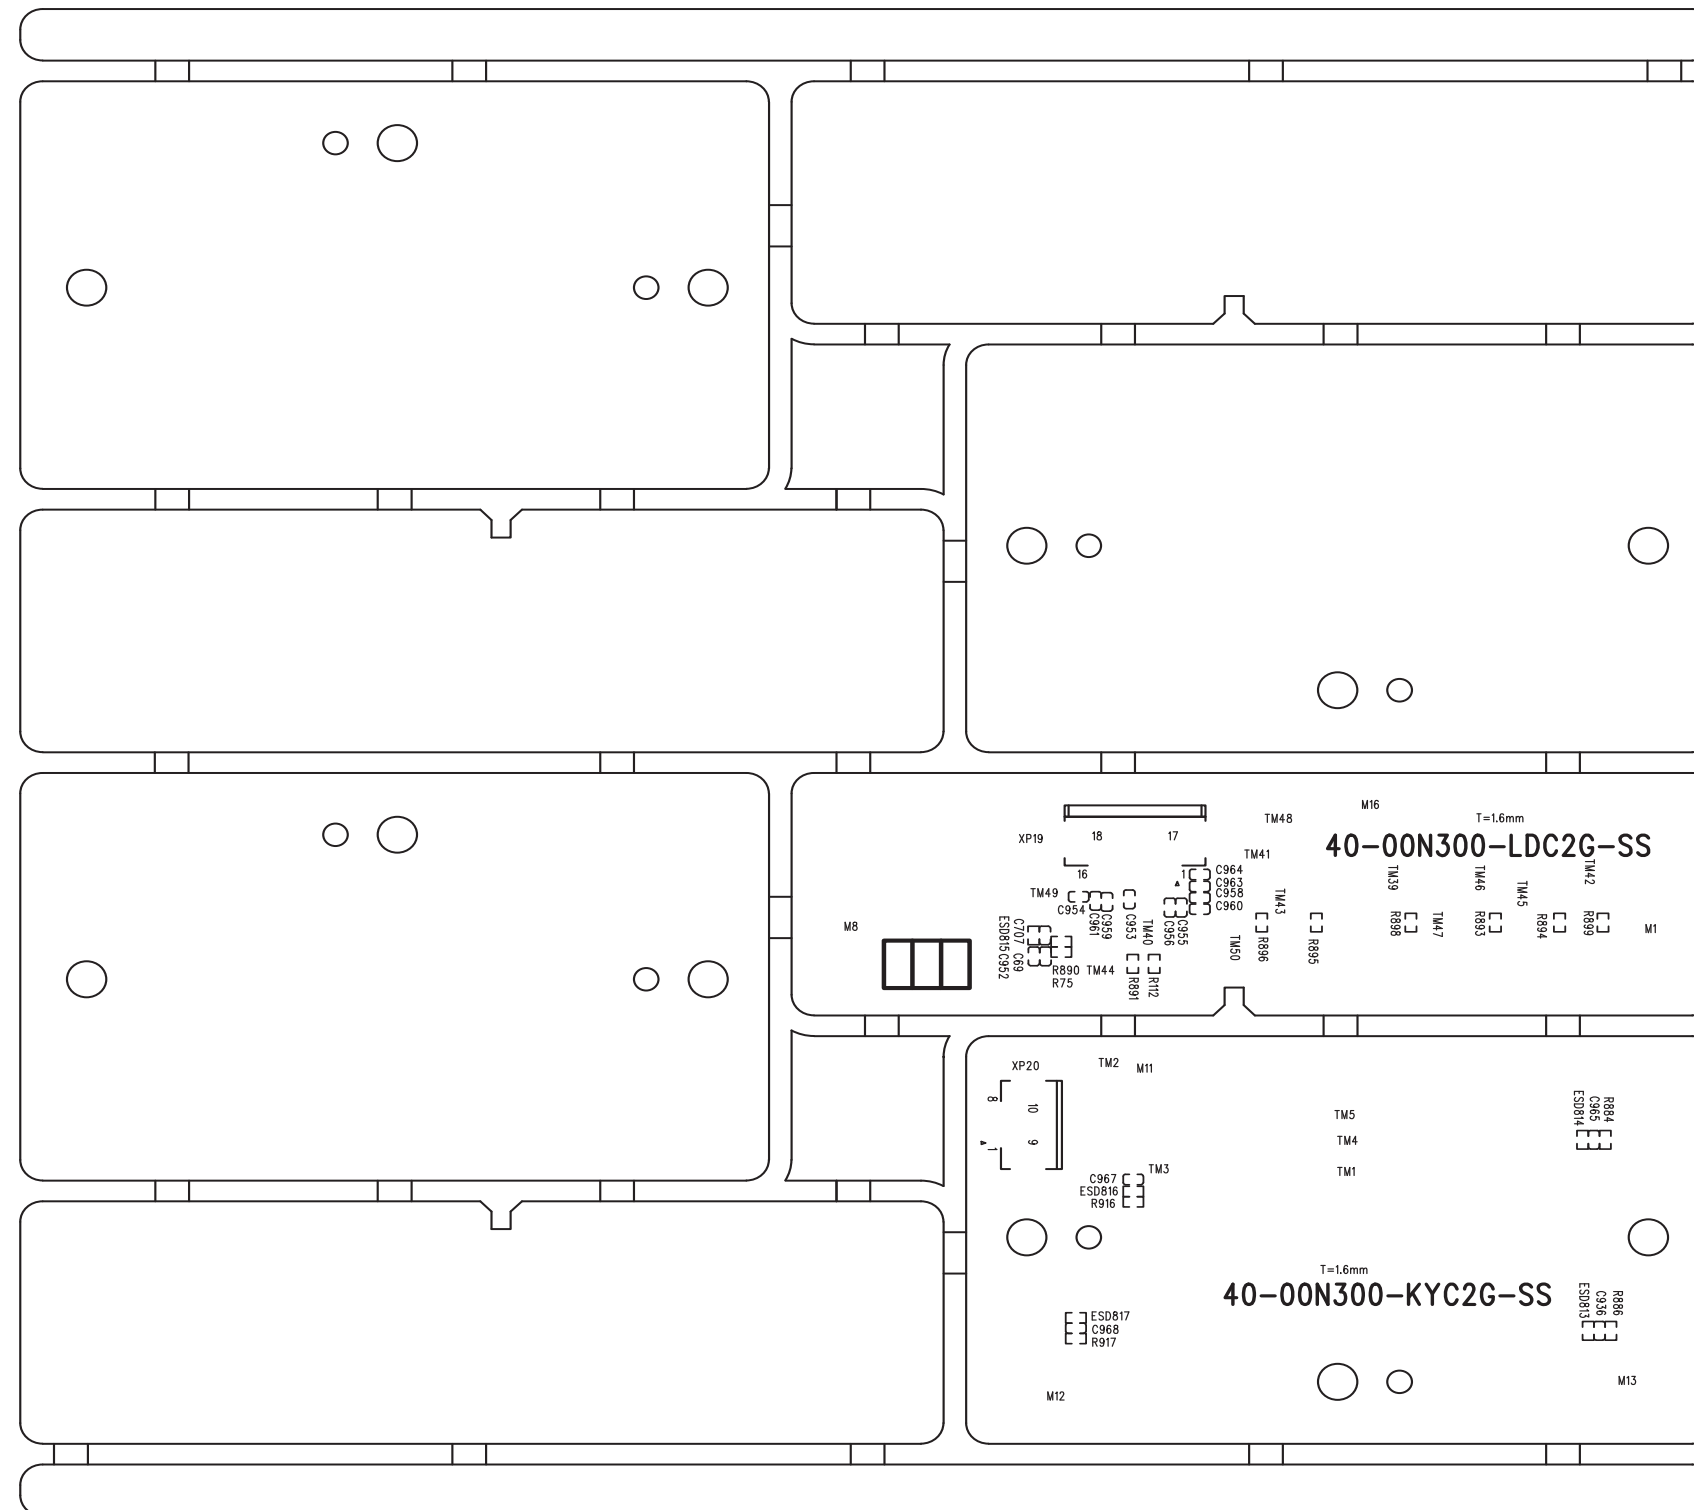

5-7. Lamp PCB + Key PCB Bottom

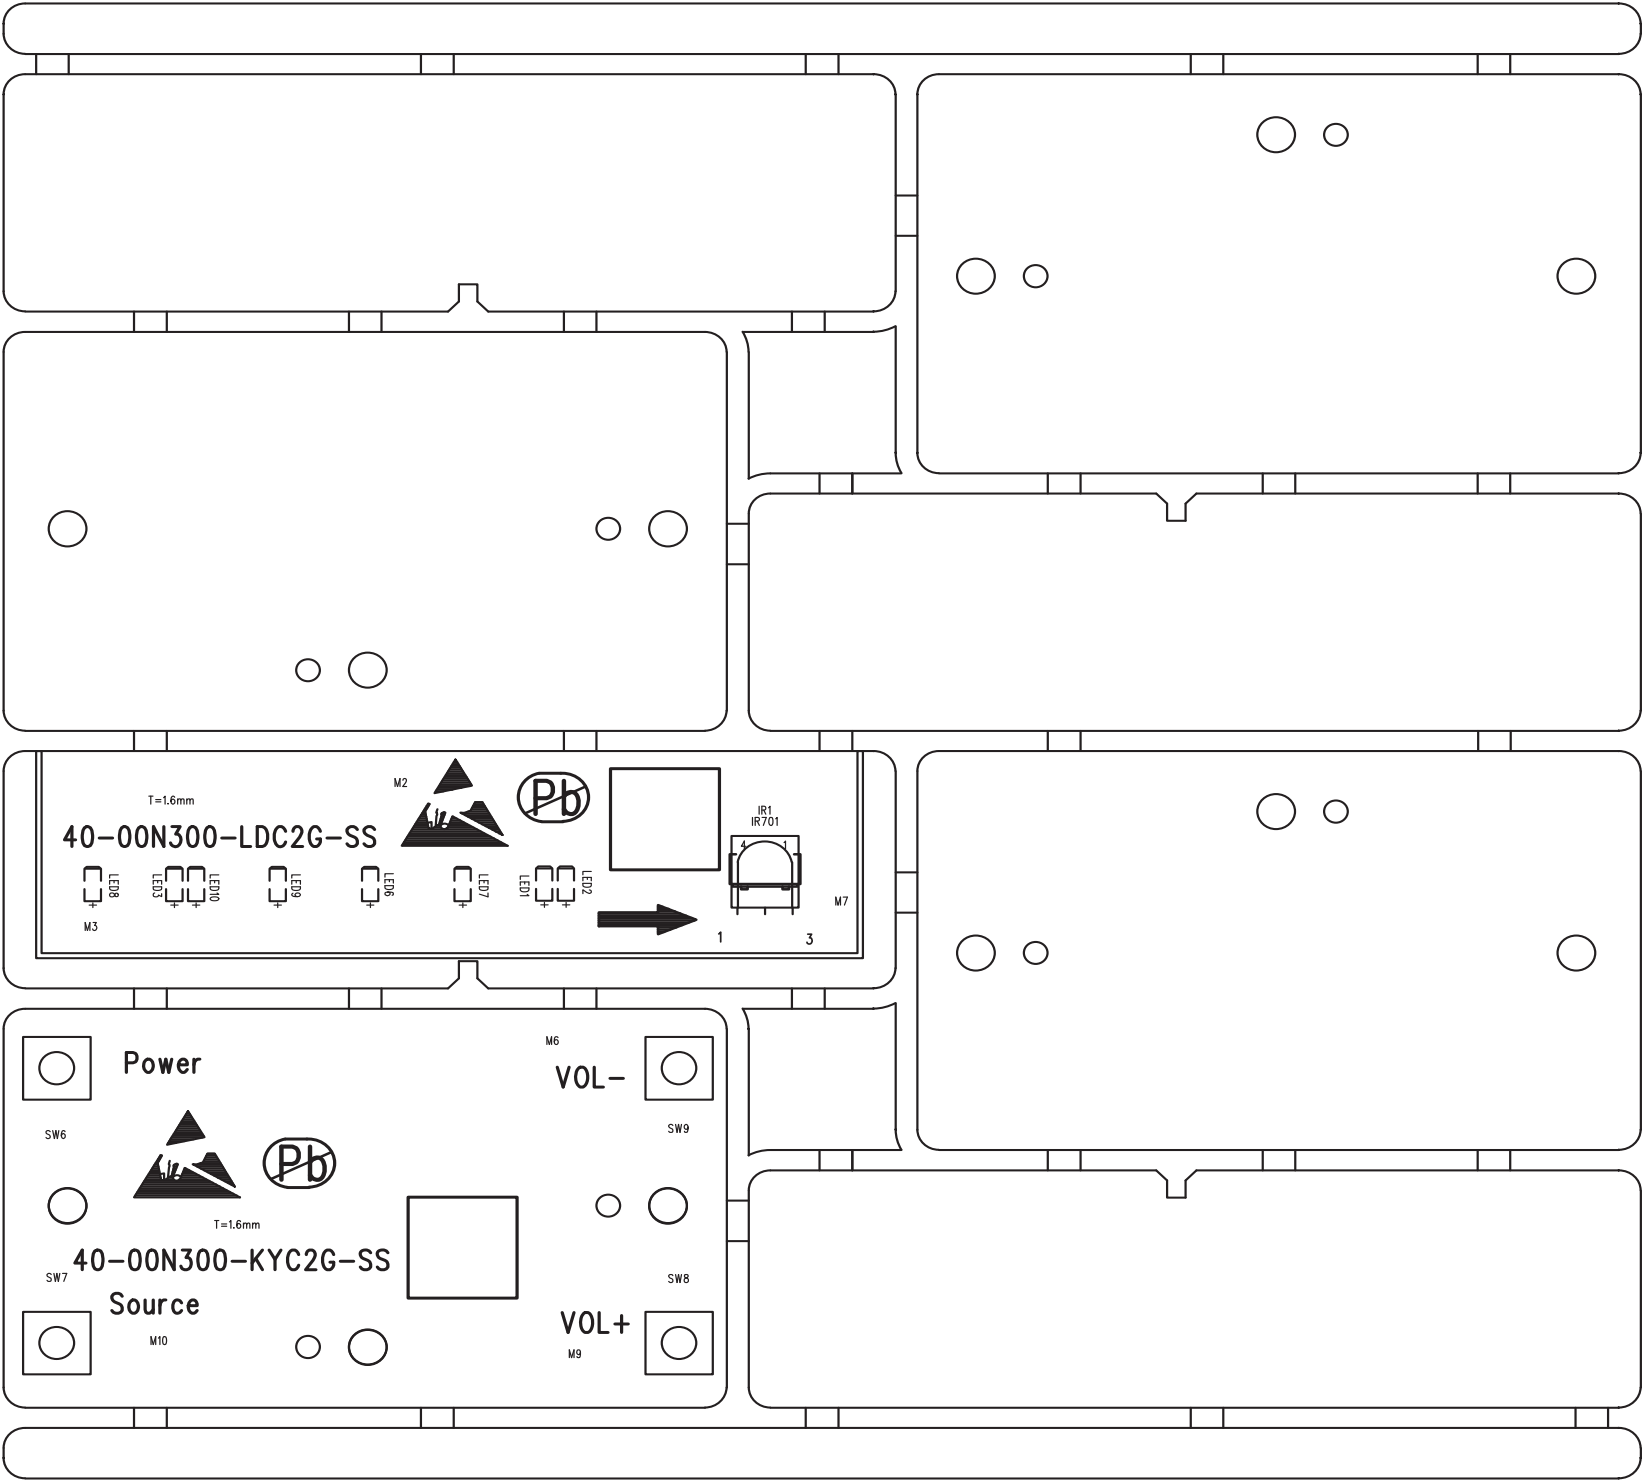

ashakaas